

Register Warranty

In order to make better use of EFEEELINK product,please read the following instructions carefully.To learn more information,please visit efeelink.com.

Register Warranty

Please visit efeelink.com and click on REGISTER in the top right side of the page to register and then input the ID card number in product annex to verify your product authenticity,and activate your product warranty.


Catalogue

- Overview
- Structure Diagram
- Basic Operation
- Single Use
- Maintenance
- Specifications

Overview


- Efee: A beautiful cup? No! He is a masturbation device that can bring men the extraordinary pleasure experience!
- Efee can realize the interaction between the real world and the illusion space by means of a sensing ship inside the cup body ,which can be connected to APP in smartphone via bluetooth. The cup-like exterior is intuitive and can totally protect your privacy.
- Besides, the soft flexible silica interior is safe and environmental , brings a wonderful near-reality sense of gentle surrounded .

Structure Diagram

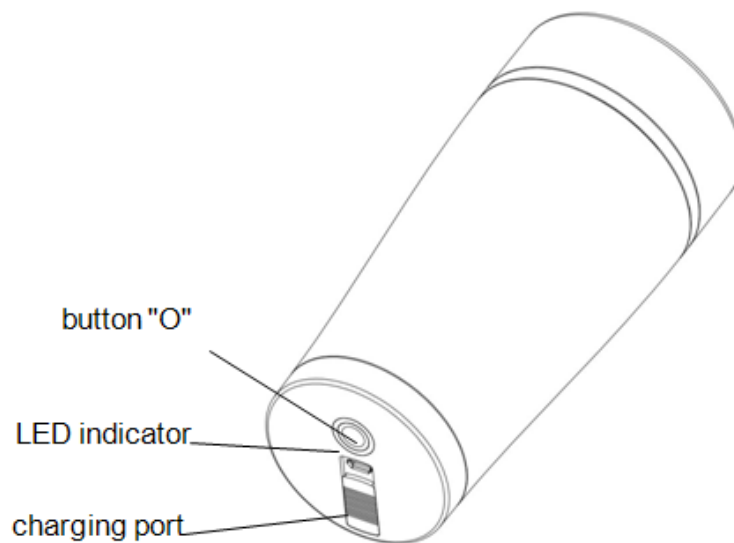

Basic Operation

- Please charge for 2 hours before first using(as shown below)

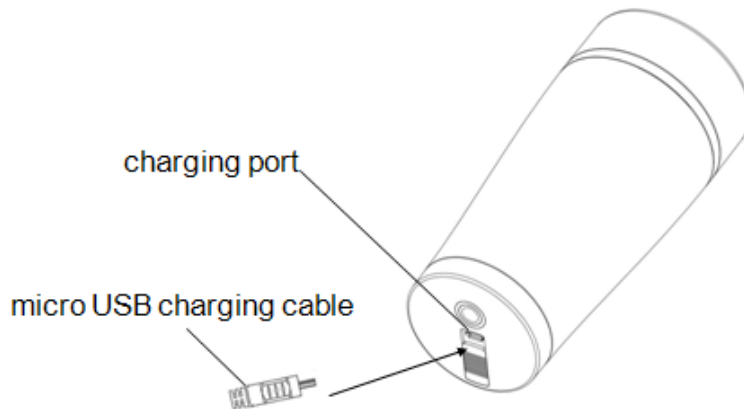

Finished charging: When LED flashes from slow to stable,Efee is fully charged.

Basic Operation

- On:Pressing the " O "button for 2 seconds,LED lights on, Efee turns on
- Off:Pressing the " O "button for 2 seconds,LED lights out, Efee turns off
- LED indication:
 - a: LED is falshing(once a second): Efee is on,then you can use and control it with the button " O ", or you can control it remotely with APP in your smart phone.
 - If Abby is without operation more than 30 seconds, LED is flashing breathing.
 - b: LED is in fast flashing(ten times a second):Efee is in a low power state,and needs to charge.
 - c: LED is in slow flashing(once every 2 seconds),Abby is in a state of charge.
 - d: LED lamp flashes breathing(the light is gradually in cycle from dark to brighten)
 - Amanda is in panel control mode,in this mode, you can control Amand through buttons on control panel.If you want to connect to APP,double-click button "O"on control panel,and activate the APP connection mode.
 - e: LED brights: in state of charging, Efee is full of power. If not, and Efee is in connection to APP, then you can use APP to remote control Efee.
- Note: if Efee is in state of no vibration and no operation, he will automatically turn off 3 minutes later.

Maintenance

- Always clean Efee's soft silica thoroughly before and after each use. We recommend that you use the respected antibacterial soap to clean the soft silica, then rinse with clean hot water and pat dry with a lint-free cloth or towel.
- we recommend that a premium water-based lubricant is the surest option to increase comfort.
- Never use cleaners containing alcohol, petrol or acetone to clean Efee
- Never use massage oils or hand cream as lubricants for the intimate areas.
- Please store Efee in full power after each use.
- Avoid leaving Efee in direct sunlight and never expose it to extreme heat.
- Do not use on swollen or damaged skin.
- Keep Efee out of the reach of children.
- If your EFEELINK appears to function abnormally, turn off and enter into "www.efeelink.com" and find the "custom service" to check out the solution of the problems. If you have any questions about EFEELINK, please E-mail us: service @efeelink.com
- Important: For adult use only!

Specifications

- Material: ABS/ safe silica
- Continuous using time: 3 hours
- Finish: matte
- Stand-by: 30 days
- Height: 157mm
- Diameter: 72mm
- Weight: 300g
- Battery: lithium battery 85mAh/3.7V
- Interface: one button
- Input voltage: 5V
- Charging time: 2 hours
- Note: Use the USB port of the computer, mobile phone charger to charge Amanda. If you choose other chargers, you must pay attention to whether it meets the requirements of output voltage!

Disclaimer

- The user of abnormal use will bear their own risk .Neither EFEELINK nor the retailers assume any responsibility or liability for the use of the product.
- © EFEELINK CO.,LTD. All rights reserved
- Designed and developed by EFEELINK Britain
- Manufactured by EFEELINK China

Website: www.efeelink.com

Support: service@efeelink.com

Important Statements:

This device complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.