





Camera Remote Camfly

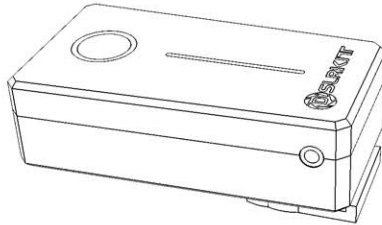

Instruction Manual

We recommend that you take test shots to get accustomed to your device before taking important photographs.

Names of Parts

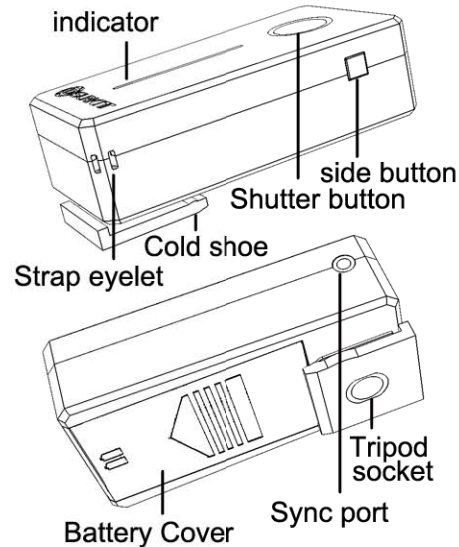

Package Contents

Camfly receiver	1
Shutter connect cable.....	1
Instruction Manual.....	1

How to Use

1. Loading the battery.
2. Connect the camfly receiver to camera via shutter connect cable
3. Download the app from App Store (Search "Camfly" in app store or visit dslrkit.com/camfly/ to get link)
4. Run this app on your device
5. Click the side button on the device to connect and use

Indicator Status

Click side button on the receiver
The indicator will blink, It means the Receiver is waiting for connecting.

When lost connection, the indicator will blink slowly (5 second interval) then you should go back to the effective range to reconnect. this status will last 2 minutes.

If can not reconnect in this period, the receiver enters "sleep" (stand-by) mode. The receiver activates again when you click side button.

The program will keep running under the state of sleep. that means you can turn off your iphone or ipad when program get started.

Timer Program

Delay: It is a prepare time, the shooting program will start after this period.

Cycle: The number of pictures you wanna take, Max to 9999. 0000 is infinitely.

Exposure: Exposure time. normally, the exposure time is controled by camera shutter speed, only effect when camera in Bulb mode.

Interval: Interval time

Focusing: The time for lens focusing. sometime lens focus slowly for example in dark place, 2.5s max.

AF/MF Switcher will decide if the focusing time works.

Time Line

