

## CLIP user manual

Thank you for chasing CLIP.

Now, let TUNAI CLIP make your daily life more convenient:

CLIP is a Bluetooth music receiver designed for music lovers, simply pair your smartphone/tablet with CLIP with Bluetooth, and go wireless. No matter if you are driving or exercising, on a vehicle or walking, outdoor or indoor, in the class or meeting...CLIP brings convenience to you, in a simple way.

### **Important Usage Instructions**

To prevent damage to TUNAI Firefly or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use product will read them.

- TO REDUCE DAMAGE TO HEARING, DO NOT WEAR YOUR HEADPHONE FOR ANY PURPOSE INCLUDING BUT NOT LIMITED TO MUSIC, PHONE CALL, GAMING OR VIDEO WHEN PAIRED FOR THE FIRST TIME. SOME DEVICES MAY SET OUTPUT VOLUME TO MAX WHEN PAIRED FOR THE FIRST TIME.
- TO REDUCE RISK OF FIRE AND DAMAGE TO PRODUCT, USE ONLY ADAPTERS WITH STABLE 5V OUTPUT FOR CHARGING. USE OF ADAPTERS WITHOUT STABLE 5V OUTPUT WILL RESULT WARRANTY TO EXPIRE.
- TO REDUCE RISK OF FIRE AND DAMAGE TO PRODUCT, DO NOT EXPOSE THE PRODUCT UNDER SUNLIGHT FOR LONG HOURS. FAIL TO FOLLOW INSTRUCTION WILL RESULT WARRANTY TO EXPIRE.
- DO NOT DISASSEMBLE THE PRODUCT WITHOUT AUTORIZATION. ANY UNAUTHORIZED DISASSEMBLE OF THE PRODUCT WILL RESULT WARRANTY TO EXPIRE.

### **Product Features**

#### Transform any audiophile into wireless

Designed for music lovers. Plug in the headphone connector into the AUX jack on CLIP, pair with your smartphone and your audiophile turns into Bluetooth

audiophile right away. Never need to pick between sound quality and convenience from wireless again.

#### 1-button access to voice assistant

SiRi™, S-Voice™, Google Now™ or others

No need to take out your phone from pocket or bags again to make phone call or check on weather forecast, traffic, time...etc. CLIP is capable to trigger the voice assistant built in your smartphone. Speak to make your request, and let the voice assistant do the rest. (Services may vary depending on the voice assistant available)

#### Remote recording, recording everything regarding distance

CLIP can be used as remote voice recorder. Voice will be captured by CLIP in wideband (16Khz) quality, and saved in your smartphone via Bluetooth. You can use the voice memo APP from iOS 9 or above, or the download our recorder APP – CLIP from Google Play.

Place CLIP near the voice source where you want to record, and use APP to start, stop and mark the recording.

#### Answering phone calls, 1-button access to microphone mute

When incoming call, CLIP will pause the music instantly and you can press ► to accept the call and press again to end. CLIP will resume music automatically once the call ends. You can mute your microphone during the call by pressing ►I.




#### Concise exterior design with built-in unique cable manager

CLIP come with a unique cable manager for you to wrap and hide the long cables, setting you free from the tangling headphone cables.

#### LED indicator

To make CLIP easier to use, LED and sound has been used to notify all status and changes.

### **1.CLIP at a glance**

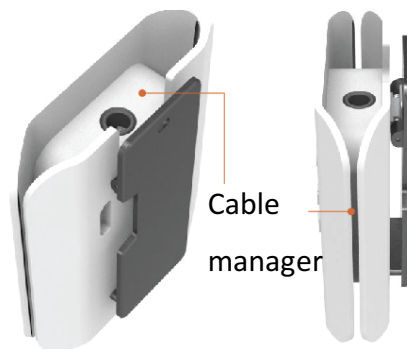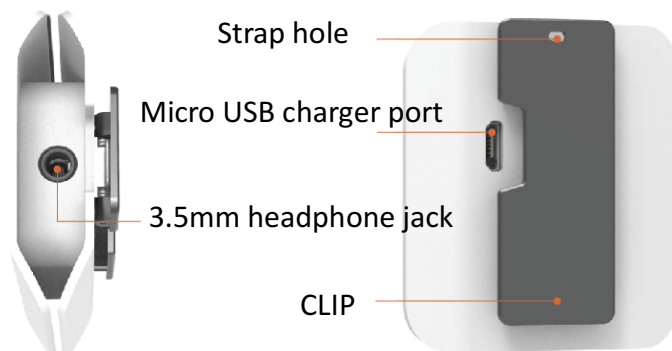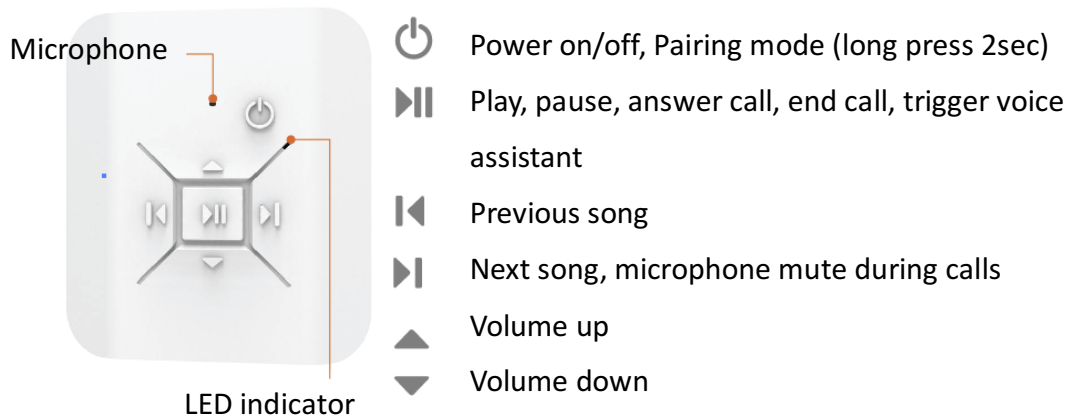

### Organizing cables

Plug-in your headphone into the 3.5mm headphone jack on CLIP, and wrap the headphone cable along the cable manager until you are comfortable with the length.


### **2. Pairing with CLIP**


Reminder: Some smartphones will set the output volume to maximum when paired with a new Bluetooth device. To prevent hearing damage from potential burst sound, do not put your headphone on with music playing when pairing

with CLIP for the first time.

#### iOS and Android systems

STEP 1 : Plug-in your headphone to 3.5mm jack on CLIP.

STEP 2 : Short press  to power on CLIP when it is fully charged. The LED will blink slowly in blue when powered on.


STEP 3 : Long press  for 3 seconds until you hear 2 beep sounds. CLIP will enter the pairing mode, and LED will blink fast.

Goto setting > Bluetooth > Turn on Bluetooth > Start searching for Bluetooth devices, and you will see “TUNAI CLIP”. Click on it and the connection will be established in 5-10 seconds. Once paired successfully, you will hear a beep sound and the LED will blink slowly again in blue.

- ◆ CLIP will memorize 8 last paired devices, and auto reconnect when power on.
- ◆ When CLIP is power on but unpaired with any device, the LED will blink every 3 seconds in blue.


STEP 5 : You can start to use your favorite APP for music now.





#### Shut down CLIP

- ◆ Short press  to turn off CLIP. The LED indicator will go out, and you will hear 4 beep sounds before turning off CLIP.
- ◆ If CLIP is out of range (10meters max, will varies depending on the interference in between), you will hear two beep sounds. When CLIP is back in the range again, you will head three beep sounds. If CLIP is out of range for too long, CLIP will disconnect with your smartphone and will not reconnect automatically.
- ◆ CLIP will shut down automatically is CLIP is not connected with any devices for one minute.

### **3.Music playback**

STEP 1 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP)

STEP 2 : Use the preferred APP for music and press  to start the music.

STEP 3 : Short press  and  to jump into previous / next song. Short press  again to pause or continue the music. Short press  to

turn up the volume, or ▼ to turn down the volume.

#### **4.Phone calls**

STEP 1 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP)

STEP 2 : When incoming calls, CLIP will pass the ringtone to your headphone. Short press ► when you hear ringtones to accept the call. Short press ▲ to turn up the volume, or ▼ to turn down the volume. Short press ► to end the call.

STEP 3 : Music will resume automatically when call ends.

##### Microphone mute during phone call

To mute your microphone during phone call, short press ► and you will hear two beep sounds, notifying you the microphone is muted. (LED will blink in red, and a beep sound will be generated every few seconds to notify that microphone is currently muted.) Press ► again to exit the microphone mute mode. (You will hear two beep sounds, and LED will blink in blue).

#### **5.Triggering voice assistant**

##### iOS

STEP 1 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP)

STEP 2 : Long press ► for 2 seconds until you hear beep sound from Siri™.

STEP 3 : Speak out your request to Siri™. For example, what is the weather today?

STEP 4 : Siri will sleep again once the conversation is over. If you would like to use Siri again, repeat STEP 2.

To learn more about “how to use Siri”, please check Apple's official FAQ link.

<https://support.apple.com/en-us/HT204389>

##### Android

STEP 1 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP)

STEP 2 : Long press ► for 2 seconds until you hear notification sound from Google Now. The notification sound will vary depending on different smartphone. Some Android smartphone requires you to select which voice assistant when use for the first time.


STEP 3 : Speak out your request to Google Now™. For example, what is the

weather today?

To learn more about “how to use Andorid”, please check FAQ at TUNAI’s official website

### Samsung Andorid

STEP 1 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP)

STEP 2 : Long press  for 2 seconds until you hear notification sound from S-Voice™.

STEP 3 : Speak out your request to S-Voice™. For example, what is the weather today?

To learn more about “how to use S-Voice”, please check FAQ at TUNAI’s official website

## **6.Remote recording**

### iOS

STEP 1 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP)

STEP 2 : Place CLIP near the voice source where you to record.

STEP 3 : Open APP – Voice Memo

STEP 4 : Click on the recording source icon located on the upper right hand side, and select TUNAI CLIP as the recording source. Click on the red round button in the bottom to start recording.

Please the red rectangular button to stop recording, and click on “Done” to finish recording.

STEP 5 : You can save, discard or change file name of the recording

### Android


STEP 1 : Download APP – TUNAI CLIP from Google Play.

STEP 2 : Connect CLIP with your smartphone first. (See section 2 to learn how to connect with CLIP).

If you open APP before CLIP is connected, you will see the following displayed on the screen.

STEP 3 : Place CLIP near the voice source where you to record.


STEP 4 : Click on the upper left hand side to select CLIP as the recording source. Click on the red microphone in the middle to start recording.



Click on the  to stop the recording.


### Quick guide to TUNAI CLIP APP on Android

1. Open the “TUNAI CLIP” APP when CLIP is connected to your device.

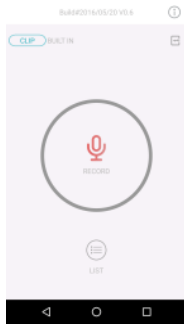2. Click on  to start recording.




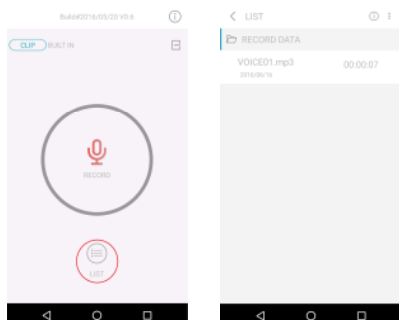
3. When recording, click on  to pause the recording. Click on  to stop the recording.

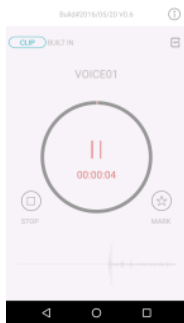


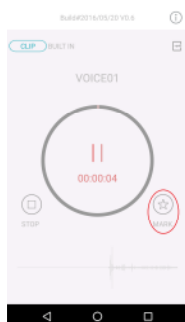
4. When the recording ends, a new window will pop out for you to enter the file name, select folder or discard the recording.



5. Once recording is saved, you can find the recording by clicking on .



6. Marking the highlights: Click on the  during recording to create a marker for the highlights on the recording file. You can place multiple marks on the same recording file.



You will be able to see the marks on the recording, and jump directly to the marked section of the audio file when playing back with TUNAI CLIP APP.

Note: The maximum remoting distance between CLIP and your smartphone will be 10meters. The range varies depending on the interference of the environment you are at.

## 7. Charging

### How to charge?

Use only the included USB charging cable for charging. Plug the micro USB side of the cable into CLIP, and the other side into the USB adapter, power bank or computer to charge.

### How long does it take to charge?

CLIP will be fully charged in 2 hours. The LED will light in red when charging, and LED goes off when fully charged.

CLIP can be used when charging, and LED will light in both red and blue colors.



**Limited Warranty**

CLIP provides one year limited warranty, starting from the day you purchased. The warranty is valid under normal use according to the user manual. Failure to follow user manual, or any abnormal use of the product will result the warranty to expire.

**After Service Information**

E-mail : [tunai@tunai-creative.com](mailto:tunai@tunai-creative.com)

Phone : +886 2 55996128

**Safety Precautions for Battery Use**

- The battery cannot be removed, please do not disassemble.
- There is the danger of explosion if disassemble by unauthorized personnel.
- Recycle or dispose used batteries according to the local regulations.

**Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

**Portable Device****Federal Communication Commission (FCC) Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an

uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance.