

QUICK START GUIDE

VARRAM PET MEAL-E



FCC Warning Statement
FCC Part 15.19
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.20
Any changes or modifications to this document, without the express written approval of the manufacturer may void the user's authority to operate the equipment.


FCC Radiation Exposure Statement
This device complies with the FCC's Radio Frequency (RF) Exposure limits set forth for an uncontrolled environment. This device is designed and tested to be used as a table-top device and should not be co-located or operating in conjunction with any other antenna or transmitter. The maximum SAR for this device when operated with a minimum distance of 20cm between the radiator and your body is 1.6 W/kg.

MEAL-E at a Glance


In the Box



Status Light Indicator



Product Diagram

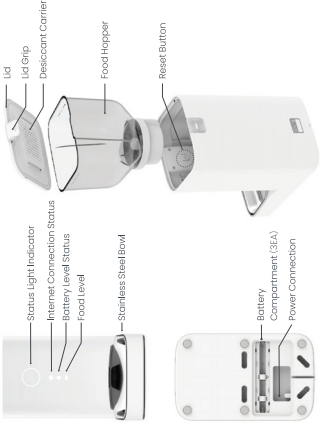

Getting Started

1. Place Meal-E on Flat Surface

Meal-E should be placed on a level surface for best measurement results. It could fall down because of your pets. Please place your Meal-E against the wall.


If you place Meal-E on uneven surface, it may occur measurement error.



2. Connect Power Adapter

Feed Teaching (testing to dispense an accurate amount) Mode should run when the power adapter is connected.

Back-up Power AA Alkaline Batteries (3EA)
*Battery NOT Included
In case of an emergency when adapter cannot supply power, it automatically switches to the back-up power, allowing temporary supply of power.

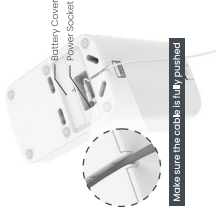

3. Simple Setup Instructions

1) Download the VARRAM app

Android 5.0 or later | iOS 10.0 or later
PC and laptop is not supported



2) Create Account & Set up new Meal-E

Please connect Meal-E via 2.4Ghz only.

If your Wifi is 5GHz only, set it to be compatible with 2.4Ghz mode

2) Initial Setup

My pet information setup > Feed Teaching Mode > Schedule setup

- * Only one pet can be registered per pet feeder.
- * Feed Testing: After fill the food, a process of weighing the food through feed dispensing is required. If you change the food, you have to wait for the feed testing again.
- * When the App notification is active, you can quickly check the amount of food left over and the amount of food consumed.
- * Wifi Connection: Please check YouTube channel to check specific manual guide.

Introduce MealE to your Pet

Sometimes they just need time to get accustomed to new things.

If your pet is using the automatic feeder for the first time, it may take time to adapt to the motion sound and the dispensing method. We recommend to follow below steps to help your pet warm up to Meal-E faster.



In order to adapt to the feed and small of the feeder, feed only when the feeder is not in operation.



During the time with the parents, please feed manually for your pets to adapt the motion sound.


Food Recommendation

- 1. Do NOT use canned, wet or moist pet food.
- 2. Recommended to use the feeder for pets after 3 months of age when they can feed dry food.
- 3. If you are worried about your pet's health when feeding recommended food, please use single brand food for accurate feeding.

Food Hopper Cleaning & Care

Disassembling & Cleaning

- 1) Remove the Food Hopper from the feeder and place it down on the flat surface.
- 2) Disassemble the parts by turning the Food Hopper Cover in the direction and clean it with warm water and soft clothes or brush.

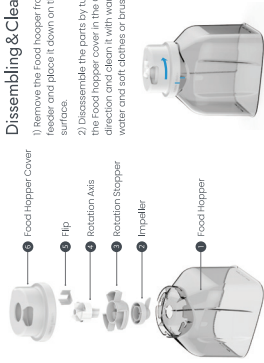

1. When washing with boiling water, the feeder may be deformed or damaged.

2. If part are lost during cleaning, it may not work properly.
3. Boiling water should not be used to wash the Food Hopper, but the other parts are not affected to wear.
4. Highly recommend cleaning it regularly for your pet's health.

Assembling

- 1) Insert Impeller into the Food Hopper
- 2) Insert Rotation Stopper on the Impeller
- 3) Insert Rotation Axis on the Rotation Hopper
- 4) Insert Flip into the Food Hopper Cover
- 5) Fasten the Food Hopper Cover according to the Food Container straight line indicated part
- 6) Turn Food Hopper in the CLOSE direction.
- 7) Put Food Hopper into the Meal-E and turn Impeller to assemble the Food Hopper to completely seated in the body.

Do the part thoroughly and install them.

If water enters the product, it may cause malfunction.

Stain-less Bowl Cleaning

1. Disassemble the stainless-steel bowl from Meal-E.
2. Clean by hand-washing using warm and soft clothes or brushes.
3. Dry completely before assembling.

It is recommended to clean food hopper and stainless-steel bowl regularly for the health of your pet. If you do not clean the stainless-steel bowl, foreign substances may enter and cause product failure.



Warning

- The feeder must be installed or used by adults.
- Do NOT use when the feeder makes an unusual sound, smoke, and burning smell.
- Use in places exposed to dust, heat, direct sunlight, or water may cause problems.
- If pet feeder parts other than a stainless-steel bowl and food tank is washed with water, it may cause malfunction.
- If an object is placed on a stainless-steel bowl or subjected to an impact, it may cause the scale to malfunction.
- Using other bowls which are not provided is prohibited.
- When drying the feeder parts may be hot, or pets may swallow, so please be careful.
- Do NOT disassemble or repair the unit other than as instructed in this User Guide.
- Do NOT use the feeder for pets other than dogs and cats. If you use the product for other pets, we inform you that it is irrelevant to us.
- Do NOT allow pets to chew on or swallow any parts.

Specifications

Product name	VARRAM PET Meal-E	Materials	ABS/ SUS304
Model name	VFPD2001	Wireless Frequency	2.4GHz b/g/n
Net Weight	5.3 lbs	Capacity	1g/l
Size	7.57x12.6x13.05 in	Power supply	DC 5V 2A
Battery	AA Alkaline Batteries(3EA) NOT Included		

Warranty

We provide a 1-year warranty for this appliance. Please email our support team at info@varram-usa.com if you have any questions and attach your order number in your email. We'll back to you as quick as possible.

Customer Service

Email	info@varram-usa.com	Made in Korea	
Phone	1 (855) 209-2045	VARRAM SYSTEM CO., LTD	

facebook

varramus

instagram

varram_us