

COSBEAUTY JAPAN Co., Ltd. Katsuta building 6F , 1-3-39, Mita, Minato-ku, Tokyo, 108-0073, Japan

Headquarter in China: Shen Zhen CosBeauty Co., Ltd. Address: 21F, NO.2388, Hou Hai Road, NanShan, Shenzhen, China. Tel: (86)755 8627 1293 | Fax: (86)755 8629 0505 Customer service: 400 9600 630 Website: www.cos-beauty.com CB-S002

Smart Hydrogen water Mist Spray Instruction Manual

Contents

Packing List	2
Product Components	3
Safety Precautions	4
User Manual	5
Charging	10
Maintenance	11
FAOs	11
Specs	12
Disclaimer	13
Warranty	13

Packing List


 ${\it CosBeauty\, ai Moist\, Smart\, Hydrogen\, water\, Mist\, Spray\, Device\, x1}$

Convertor bottle x1


Pouch×1

Adapter×1

Power cord×1

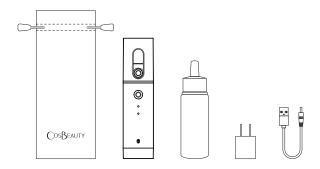

Product Components

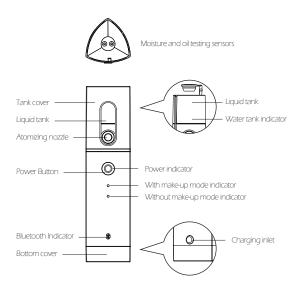

Safety Precautions

Please read this safety precautions carefully and follow the instruction manual to operate. It is to ensure the operation of product is correct and safe, to prevent users or other people from personal injuries or property damage, please make sure to follow it.

- Please do not use the device under any instruction other than instruction manual, otherwise it may cause breakdown or accident.
- People who suffers from physical, sensory and mental illness, or under treatment for skin disease are forbidden to use the device without supervise from specialized person or guidance from responsible person like dermatologists.
- Please do not wrap the cord around the power connector.
- Please do not damage the power cord, do not bend, twist, stretch, squeeze, heat, tie, clamp or process it, so as not to cause fire, electric shock and other dangers.
 - Long-time use or incorrect use of charging device may result in power cord breakage. Therefore, if there is following situations, please do not continue to use the equipment: 1. Power cord is twisted and unable to restore; 2. Power cord or power connector is broken, out of shape, cracked.
 - · Do not place the device in fire.
 - Do not expose the device into water or wash it.
 - Do not use it on infants or children, keep it beyond children's reach.


- The device is only for personal use, please do not disassemble, repair, transform the device.
- Please do not put oily or sticky cosmetic liquid into the tank or the atomizing nozzle will be blocked easily.
- Please pull out the adapter plug from socket while not charging.
- Please do not use or store the device or adapter in the environment with high humidity such as bathroom.
- Do not toss or throw the device, it may cause damage.
- Please do not touch the device with pointed or high temperature devices.
- Please stop using the device immediately if any damage shown.
- If the charger or adapter falls into water, please do not touch it, and disconnect the socket immediately to avoid electric shock.
- If there is any questions, please consult CosBeauty service site or call CosBeauty customer service: 400 9600 630

User Manual

Preparation

Attention

- Rotate the tank cover at clockwise direction to the end and pull upward to take out the cover.
- Pull out the plug of the tank and add mineral water, pure water or astringent toner into the tank

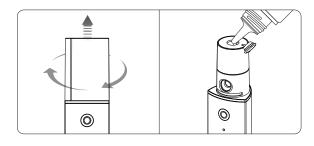

- · Close the plug of the tank and rotate it at anticlockwise direction to the end.
- $\,\cdot\,$ Before using smart working mode, please download CosBeauty official APP: CosBeauty



Supported system :




How to use:

There are two spraying modes: traditional mode and smart mode

Traditional mode


- Rotate the tank anti-clockwise to the end and the indicator light will be on which means the device is powered on.
- Place the device to skin at 10cm distance and press the power button for one time, the mode is with make-up spraying, press the power button twice, the device will be changed to without make-up spraying mode. Press the power button for three times, the spraying mode will be off.

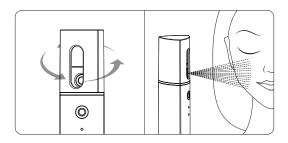


Rotate the tank clockwise to the end and the indicator light will be off which means the device is shut down.

Smart mode

- Take off the bottom cover, rotate the tank clockwise to the end and turn on bluetooth on your phone, click[CosBeauty aiMoist Smart Hydrogen water Mist Spray], the APP will be connected to the device.
- Choose testing skin area on the APP interface and use equal pressure to touch your skin with the two metal sensors. The moisture needed for your skin will be calculated automatically by the APP.

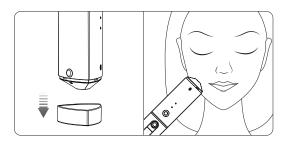

Put the bottom cover on and press the power button, the tank indicator will be on and the aiMoist Smart Hydrogen water Mist Spray will set the spray volume of the calculated data by APP.

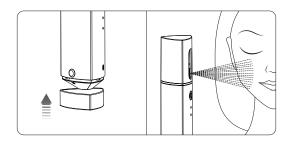

- Place the device to skin at 10cm distance and start spraying, the device will turn off automatically when your face get the preset volume water.
- Rotate the tank clockwise to the end and the indicator light will be off which means the device is turn off.

Skincare Products can be used together

- Mineral water, purified water or non-thick toner can be added into the tank, and please do not put oily or sticky cosmetic liquid into the tank.
- It is suggested by CosBeauty that any oily materials like essential oil should not be added into the tank because it might lead to no function or block the atomizing nozzle.

Charging

Battery specs


800mA Li-ion, recharging time 150mins, working time 150mins, stand by 15 days.

Battery power indicator

Low battery: Indicator light blinking High battery: Indicator light on

Charging methods

- Connect power cord and adapter (5V/1A)with device to charge. During charging, indicator light will blink and when fully charged, the indicator light will be on.
- Please charge the device only under dry and safe environment.
- · Please use the original power adapter ONLY.
- · Do not use the original adapter on any other products.
- ${}^{\textstyle \star}$ Please do not expose the power cord or adapter into any liquid.
- · Please do not touch or plug out the power cord with wet hands.
- · Please do not twist power cord onto the device when charging.
- Please cut down the power immediately if the power cord is broken in case it may cause fire.
- · Please do not use broken adapter and power cord.

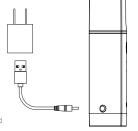

Maintenance

- · It is suggested to clean the tank once in a week
- Please do not add oily or sticky cosmetic liquid or essence oil into the tank.
 [Please do not add any cosmetic liquid which contains thickener like carbomer, xanthan gum or coconut oil into the tank. If you are not sure, please consult CosBeauty Service Site or customer service line.]
- When the device is not used for a long time, please keep the tank dry and put the device in cool dry place.
- The device it not totally waterproof, please do not use the device with wet hands or wash it with water.
- Please make sure that the two metal sensors are dry and clean before testing to ensure testing accuracy.

FAQs

Why bluetooth can not be connected?

- Please make sure the bluetooth of your phone is opened and CosBeauty APP is running.
- Please take away the bottom cover of the device and make sure the bluetooth indicator light is on.

There is no spraying function

- · Please make sure the device has enough power and there is liquid in the tank.
- Please make sure the atomizing nozzle has been rotated to the right direction just above the power button.
- Please clean the tank completely if you have added sticky or oily liquid into the tank, the atomizing nozzle might have been blocked.

Specs

Dimension	136mmX34.40mmX34.60mm
Battery	Li-ion Battery 3.7V 800mAh
Working time	150mins
Charging time	150mins
Standby time	15days
Power	1W
Input voltage	100V-240V 0.2A
Frequency	50Hz/60Hz
Output voltage	DC 5V/1A
Available color	Pink,Red,Fushia
Main material	ABS+ aluminium alloy
Support	iOS 7.0 and above, Android 4.3 and above

Disclaimer

CosBeauty reserves the final explanation of CosBeauty aiMoist Smart Hydrogen water Mist Spray, any third party applies device related information without Cos Beauty's authorization is not allowed, we will take legal action. In any case, CosBeauty Technology Co, Ltd is not responsible for any consequences caused by improper use of consumers.

$CosBeauty^*$

Warranty card

Name :	(Mr./Ms.
Tel:	
Address:	
Purchase date :	
Serial no.:	
Model no.:	
Purchase store :	
Retailer tel.:	
After-sale service hot - line: 400 9600 630	
Signature	

Warranty Coverage

1.Warranty period:

12 months beginning on the date of purchasing.

- For the duration of the Warranty Period, CosBeauty warrants the Product against defects in materials and workmanship arising from Normal Use of the Product.
- 3.During the warranty period, if any of the followings occurs, certain maintenance costs will be charged:
- · Product damage due to fire, flood, abnormal voltage or other natural disasters.
- The malfunction and damage caused by incorrect use, the unauthorized repairs and alteration.
- Not able to present warranty card and purchase receipt.
- · The user information on warranty card is not recorded clearly or correctly.
- Product malfunction caused by the fall and improper transportation after purchase.
- Product damage caused by disassembling and repairing by user without being checked by maintenance staff from authorized store
- The warranty card is missing product model no., serial no., purchase date or retailer information, or texts have been changed.
- 4.Whether or not during the warranty period, if any of the followings occurs, no maintenance provided:
- · Purchase for business instead of individual consumption, it is not covered by warranty terms.
- Color fading, wearing, consuming under proper use is not covered by warranty terms.
- If product model no. and serial no. filled in warranty card is not consistent with official product model no. and serial no., it is not covered by warranty terms.

5. Notice:

- This warranty card is limited valid in the mainland of the People's Republic of China(not valid in Hong Kong, Macao, Taiwan).
- This warranty card cannot be reissued in any case, please keep it properly and present it when repairing.
- \cdot If you have any question regarding after-sale service, please contact us or the retailer.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \bullet Consult the dealer or an experienced radio/TV technician for help.