

happiest baby
snoo+
smart sleeper™



USER GUIDE

IMPORTANT: READ CAREFULLY...KEEP FOR FUTURE USE.



MEET SNOO

The other new member of your family!

Congratulations!

Thank you so much for choosing SNOO Smart Sleeper® to help your baby—and you—during these amazing first 6 months!

Designed by celebrated pediatrician Dr. Harvey Karp, SNOO is a totally new type of bed that will help your baby be rested, healthy, and happy.

What's SNOO's secret?

- It's the only bed that perfectly mimics the non-stop gentle rocking and rumbling sound that your baby loved in the womb. (It helps soothe babies like driving in the car all night...but, without ever leaving your bed!)
- It detects your baby's cries and automatically responds with gradually increasing white noise and tiny jiggles, often calming fussing...in under a minute.
- It's very, very safe. It offers you extra peace of mind by keeping your baby safely on the back—all night long.* (Stomach sleeping is associated with a higher risk of infant sleep death.)

**When used as directed.*

SNOO AND YOUR BABY

The first 6 months.

Whenever you need a break—to fix a meal, take a shower, care for other kids, or get much needed rest—SNOO will be your faithful assistant, ready to help 24/7 ...month after month!

Within the first week, SNOO will help your baby*:

- Fall asleep faster.
- Sleep more at night.
- Cry less—and calm more quickly.

But, that's just the start of SNOO's benefits!

By 2-3 months, SNOO:

- Adds 1-2+ hours to your baby's sleep.
- Helps reduce dangerous rolling to the stomach.
- Gives your baby all the comfort of swaddling—without the risks.
- Helps your baby sleep through growth spurts, colds, teething, and sleep regressions. (Without SNOO, these can abruptly make a baby's sleep pattern fall apart).

By 3-6 months, SNOO perfects your baby's sleep:

- Automatically sleep trains your baby—rarely a need for “cry it out!”
- SNOO's special weaning feature makes graduating to a crib a breeze.


**Infants over 6-weeks of age may take 3-7 days to adjust and show improved sleep.*






PUTTING SNOO TOGETHER

It's a snap!

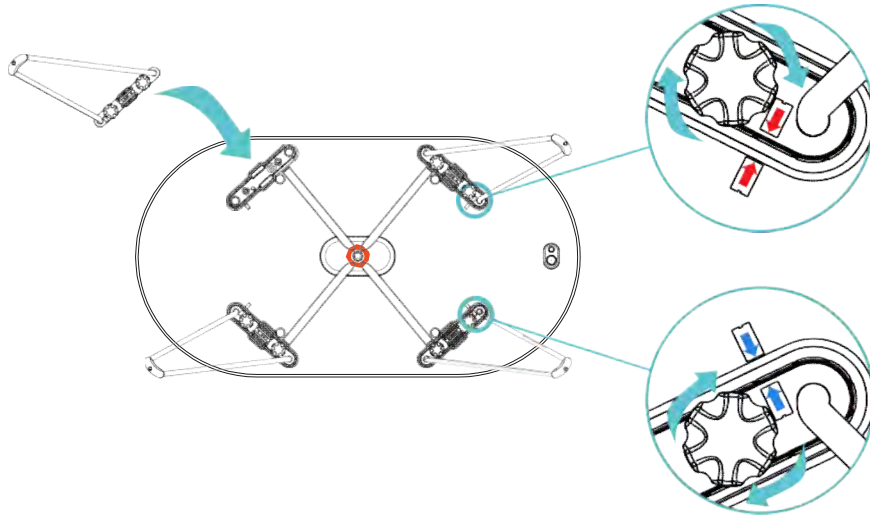

- Open the box and place your SNOO upside down on a clean floor.
- Snap each leg into the base. (Line up each red and blue arrow on the legs with a matching colored arrow on the base.)
- Screw each knob in—all the way. (No need to over-tighten.)

Note: To detach the legs, unscrew each knob all the way, pinch the two grey clips and pull out each leg.

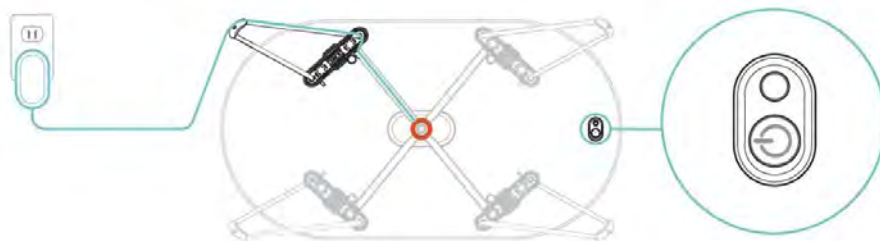

 Power Button - Turns SNOO on/of.

 Wi-Fi Button - Turns Wi-Fi on/of.

- Insert the thin electrical supply jack into the red circle on the bottom of SNOO.
- Flip SNOO onto its feet and plug it in.
- Attach the soft cable guide on a leg near your wall socket. Place the thin cable into the guide.



- SNOO's Activity button will flash a white light. When it stays constantly white...SNOO is ready!

Contents of SNOO box



Includes: 1-SNOO; 1-Mattress; 1-Water-Resistant Cover; 1-Organic Cotton Sheet; 3-Organic Cotton SNOO Sacks (S in SNOO; M, L in boxes); 4-Legs; 1-Cable Guide; 1-Power Supply.

Please read all instructions before using.

- SNOO is recommended for use until around 6 months or when infants can push up on hands and knees, whichever comes first.
- SNOO is not a replacement for responsible, attentive care or medical assistance.
- In SNOO, always place your baby on the back, in a Happiest Baby approved SNOO Sack, that is properly attached to the safety clips. (See page 26, "PREVENT SUFFOCATION HAZARD")
- Never place anything under the SNOO mattress to raise the baby's head. (See page 26, "PREVENT STRANGULATION HAZARD")



THE SNOO APP

Download the App today!

Our App makes SNOO perfect for your unique baby!

Here are parents' favorite App features:

Motion Limiter – [Great for the 1st month!](#)

Your SNOO comes preset on Motion Limiter. This lets SNOO respond to cries with all 4 levels of sound, but blocks the 2 most jiggly levels of motion. Fussy babies may calm best with this setting turned **off**.

Level Lock – [Very helpful for babies who wake too often.](#)

Some babies sleep better when SNOO stays all night on a slower—or a faster—level (Locking on level 1 or 2 gives a little extra jiggly motion...like driving your baby in your car...all night long!)

Starting Level Motion – [Extra soothing for fussier babies.](#)

Like locking, this allows motion-loving babies to have level 1 or 2 rocking, all night. But unlike locking, it lets SNOO respond to cries. This even helps babies sleep through colds and teething.

Responsiveness – [Makes SNOO more—or less—sensitive to your baby's sounds.](#)

This setting lets SNOO react faster to soft cries or slower to loud breathing and nighttime grunts.

SNOO Log – [Automatically tracks and reports your baby's progress.](#)

A daily update of your baby's sleep. Shows sleep as it improves over weeks/months. Fun to share!

Stickies – [Interesting sleep tips.](#)

Regular insights to help you help your baby have the best sleep possible.

Weaning – [It's a snap to transition your baby from SNOO to the crib.](#)

At 5-6 months, turn this setting on to give your sleeping baby soothing sound—but no motion—all night. The motion only comes back on when your baby cries.

ALMOST READY

Becoming a master swaddler!

Swaddling may look a little odd to us, but it reminds babies of the cuddling they loved inside the womb. Wrapping will help your baby cry less and sleep longer. The SNOO Sack is the safest, easiest swaddle! It secures to little clips to keep your baby safely on the back all naps/all night.

Ready to swaddle? Here's how:



- Unzip the sack and spread open the inner bands.
- Lay baby on the back, on top of the sack. *Note: Place the shoulders about 2" higher than the top of the sack.*
- Straighten the arms...pull the inner bands around and attach them very snugly. (The bottom edge of the bands should cover the wrists.)
- Bring the sack's leg flap up between the baby's legs and Velcro it to the inner band.
- Pull the top edge of the sack up and over the shoulders and zip the sack completely closed... top and bottom. *Note: The top of the zipper should be positioned well below the chin.*





USING SNOO

Let the fun begin!


Plug SNOO into the electric outlet. The Activity button's white light will blink for several seconds and then turn a steady white.

Now that your bed and App are set up and your baby is snug, we suggest giving a nice feeding—and a good burping—to prepare your baby to SNOO-ze!

Place your baby in SNOO:

- Lay your swaddled baby into your SNOO—on the back—feet at the end near the Activity button.
- Slide each elastic loop—at the end of the safety wings—all the way onto the safety clips (located on the right and left side of the bed).

*Note: For safety, **NEVER** put your baby in SNOO unless swaddled in SNOO Sack with the zipper fully closed and wings attached to safety clips.*

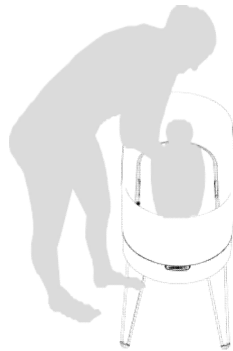

Note: You can put your baby down awake or asleep. SNOO naturally helps babies learn to fall asleep.

happiest baby

Turn SNOO on

Push the Activity button. The white light will turn blue and SNOO will start gently rocking and shushing.

Note: If the bed does not start—and the activity button is flashing white—check that you slipped both elastic wing loops fully onto the safety clips.

Let SNOO work

SNOO will gently rock and shush your baby for all naps and all nights. And, it will automatically respond to your baby's cries—moving through increasing levels of white noise and motion—to find the perfect rhythms to soothe the fussing.

As the bed responds, each level is shown by a new SNOO Activity button color:

Blue > Purple > Green > Yellow > Pink.

Blue is like gently rocking your baby in your arms.

Purple is like driving around your neighborhood.

Green is like taking a fast hike with your baby in a sling.

Yellow is like quickly bouncing on a yoga ball.

Pink is like a jiggly subway ride or driving with your baby on a bumpy road.

Once your child is calmed, SNOO will slowly return to the gentle blue baseline level.

If your baby's cries don't stop within a minute, don't worry, just stop the bed for a feeding or cuddle. (If crying lasts 2-3 minutes, SNOO automatically stops and the Activity button turns red.)

Note: If the Activity button is blinking white, please check that the loops of the swaddle wings are fully attached.

How SNOO reacts to your baby's crying



Turn SNOO off

To stop SNOO, just push the Activity button once or slip a swaddle wing loop of the safety clip.

Have a question? Visit our website to chat with our sleep helpers...available 7 days/week!

SNOO is there to help...
whenever you need
a hand!







DR. KARP'S TIPS

Great advice for great SNOO-zing!

Dr. Karp worked with hundreds of families to find the best sound and motion to quickly calm fussing and boost sleep. Through this research, he developed many helpful tips.

Here are just a few:

Babies can be put down in SNOO asleep...or awake.

It's fine to lay your baby down awake or asleep. SNOO's gentle rhythms are a reminder of the soothing sensations your baby loved in the womb and they actually help babies learn to self-soothe.

Use SNOO for nights and naps.

The more often you use SNOO, the faster your baby will associate its very specific sound and rocking with bedtime...and the sooner they will become a great sleeper!

SNOO mimics the calming rhythms we use when we cradle babies in our arms.

To quickly soothe your baby's fussing, just boost SNOO's level. (Simply press and hold the Activity button for 5 seconds to go to the next level...or use the App). *Note: SNOO doesn't calm babies who are hungry, bored, or uncomfortable.*

Feeding...helps babies sleep better at night.

Offering a few more daytime ounces can boost nighttime sleep an extra hour or more. Consider waking and feeding your baby from naps lasting more than 1.5-2 hours. Some parents find it helps to offer 2-3 feeds in the early evening...and a final meal—a dream feed—between 11pm and 1am.

Swaddling snugly—arms down—is key for great sleep!

Arms-down swaddling helps most babies sleep better...even those who seem to dislike it. Swaddling before a feed and placing your satisfied baby into SNOO, then locking it on level 1 or 2 can help your baby be more accepting of being wrapped. If all else fails, unsnap the arm holes and try releasing one or both of your baby's arms.

If SNOO doesn't calm crying, pick your baby up.

SNOO responds quickly, often calming fussing within 60 seconds. However, there's no need to wait for SNOO to time out. If the upset lasts more than a minute it means your baby needs...you!

Don't worry about vomiting or acid reflux in SNOO.

Spitting up (acid reflux) is common, but babies naturally turn the head when it happens...so there's very little concern. However, if your doctor recommends elevation of the head, our SNOO Leg Lifters may be helpful.

Embrace the jiggle!

It can look odd to see your baby jiggling on SNOO's top levels, but many babies love bouncing on exercise balls and bumpy car rides. Jiggling is often the magical step that calms crying. However, if your baby doesn't like motion, just lock SNOO on one of the lower levels.

By 3-4 months, babies become more alert...and this can undermine sleep.

If your baby's sleep suddenly falls apart because of teething or a 3- or 4-month sleep regression, locking SNOO on level 1 or 2 all night—for several weeks—can help your baby tune out distractions and restart great sleep.

After weaning from SNOO...continue white noise for at least 1-2 years.

Sound makes transitioning to the crib much easier...and helps babies continue to be good sleepers.

Your baby is unique! It's easy to customize SNOO so it's perfect for your baby.

Contact our sleep specialists for help at customercare@happiestbaby.com.



SNOO ACCESSORIES

SNOO Sack

Our unique *5-second swaddle* is made with 100% organic cotton and breathable mesh. Small (5-12 lb), Medium (12-18 lb), Large (18-25 lb).

SNOO Sheet

Ultra-soft, 100% organic cotton is gentle on your baby's skin....and good for the planet.

Low Legs

Perfect for parents with a platform bed. These are 7" shorter than standard legs.

Leg Lifters

If your doctor recommends elevating your baby's head—to make breathing easier during a cold or for symptoms of acid reflux—these lifters allow you to put your SNOO on a very mild incline.

Shoo

This graceful netting lets in the breeze but shuts out mosquitos, spiders, flies... even cats!

Sleepea

The wingless version of our SNOO Sack. Rated #1 by the NY Times, for when you're out and about.

SNOObear

Our cuddly white noise teddy bear that lets you bring the SNOO sounds with you...wherever you go.

You can find all our SNOO accessories at happiestbaby.com

CARING FOR SNOO

Cleaning SNOO

For safety reasons, the SNOO mesh is not removable. However, you can easily spot clean SNOO using a soft cloth with warm water and mild soap. At one end of the bed, there is a zipper to allow you access to clean between the inner and outer mesh walls.

Note: Never use bleach or abrasive cleaners.

Cleaning the mattress

The mattress has a water-resistant cover to prevent stains and contamination. You can gently clean the mattress cover with a soft cloth with warm water and mild soap. Then, air dry—thoroughly—before using the mattress again.

Cleaning SNOO Sacks and sheets

Machine wash with similar colored items in warm or cold water. Never use hot water or chlorine bleach. Tumble dry on a low heat setting, making sure to dry the sack completely.

Note: To avoid damaging other items in the load, always attach the Velcro wings to each other or zip the sack completely closed before putting the SNOO Sack into the washer or dryer.

⚠ WARNING

FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH. READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE PRODUCT. ADULT ASSEMBLY REQUIRED. DO NOT USE THIS DEVICE IF IT IS DAMAGED OR BROKEN.

PREVENT FALL HAZARDS ⚠

- To help prevent falls, **DO NOT USE** this product if the infant can push up on hands and knees or has reached 6 months of age, whichever comes first.
- Maximum weight: 25 lb (11.3kg)

PREVENT STRANGULATION HAZARDS ⚠

- When using the SNOO Sack, **ALWAYS** have the zipper fully closed—at top and bottom—and make sure the soft protective zipper hood is in place.
- **ALWAYS** keep SNOO on a flat, even surface.
- **NEVER** place anything under the SNOO legs or mattress to elevate the baby's head, other than products authorized by Happiest Baby.
- Strings can cause strangulation. Do not place SNOO's protective cloth bag or other items with a string in SNOO.
- Keep the power adapter cord out of reach of infants and children.
- **DO NOT** suspend strings or unapproved mobiles over SNOO or attach strings to toys.
- **DO NOT** place SNOO near a window or patio door where cords from blinds or drapes can strangle an infant.

PREVENTSUFFOCATION HAZARDS ⚠

- To reduce the risk of SIDS, infants should only be placed on the back to sleep, unless otherwise advised by their physician.
- Infants have suffocated:
 - In gaps between extra padding and side of a bassinet / cradle, and
 - On soft bedding.
- ONLY place your baby in SNOO in a Happiest Baby approved SNOO Sack, that is fully closed—at top and bottom—and properly attached to the safety clips—and make sure the soft protective zipper hood is in place.
- Use only the mattress pad provided by Happiest Baby. NEVER add a pillow, comforter or another mattress for padding.
- NEVER place additional objects in SNOO Smart Sleeper, such as blankets, toys or other materials.
- ALWAYS ensure the mattress pad is positioned correctly. Do not create any pockets between the mattress pad and mesh sides.
- SNOO reduces rolling when used as directed. We recommend you ALWAYS secure the swaddle's wings to the bed's safety clips—whether SNOO is on or off.
- If a sheet is used with the mattress pad, use only the one provided by Happiest Baby, or an authorized Happiest Baby partner.
- NEVER use plastic bags or other plastic film as a mattress cover.
- Discard all plastic packaging materials immediately after opening.
- SNOO is only designed and is approved for use with one baby at a time.

PREVENT INJURY HAZARDS

- Never place more than one infant in SNOO Smart Sleeper at a time.
- Never carry SNOO with an infant in it.
- Young children should not be allowed to play unsupervised in the vicinity of SNOO.
- SNOO reduces accidental falling when used as directed. We recommend you ALWAYS secure the swaddle's wings to the bed's safety clips—whether SNOO is on or off.
- Always remove the baby from SNOO before adjusting height.
- Always ensure that SNOO legs are securely inserted and screwed into the base before use.
- SNOO should be placed on a horizontal floor.
- Keep away from open fires and other sources of strong heat, such as electric heaters, gas fires, etc.
- Do not place anything in SNOO to elevate the mattress. The American Academy of Pediatrics warns that excessive elevation can result in an infant sliding into a position that might make breathing difficult.
- All assembly fittings should always be tightened properly and care should be taken that no screws are loose, because a child could trap parts of the body or clothing (e.g. straps, necklaces, ribbons for babies' pacifiers, etc.), which would pose a risk of strangulation.
- Do not use body of bassinet without its frame.
- ONLY use the mattress that comes with SNOO.

CAUTION

- SNOO IS NOT A SUBSTITUTE FOR RESPONSIBLE ADULT SUPERVISION.
- IMMEDIATELY CONTACT YOUR PHYSICIAN IF YOUR BABY IS UNUSUALLY FUSSY OR NOT RESPONDING NORMALLY.
- Read and follow instructions before assembly and use.
- Before using, inspect SNOO for damaged hardware, loose or missing components, or sharp edges.
- NEVER use SNOO if any parts are missing or broken. Request replacement parts and instructional literature via happiestbaby.com if needed. (DO NOT substitute parts.)
- Notify your doctor if your baby develops any skin irritation from the SNOO Sack.
- Stop using SNOO when the child can sit, get on hands and knees, kneel, or pull his or her body up while in SNOO.
- For indoor use only.
- This product is not a toy. Do not allow children to play with it.
- Do not pour water or liquids onto SNOO.
- Only use the power adapter provided. Use of other power adapters may permanently damage the bed.
- Keep this user's guide for future reference.



Dear Friends,

Thank you for choosing SNOO!

Almost every object in our lives has been improved in recent decades, except baby beds.

Amazingly, cribs and bassinets haven't changed in over 1,000 years! They're just silent, boring little "boxes." Yet, before birth, babies enjoy 24/7 cuddling, shushing, and rocking. No wonder quiet rooms and still beds actually cause babies to sleep...less!

Babies may be tiny, but tiny stretches of sleep sometimes cause huge problems. Frequent baby waking leads to the #1 parent stress: exhaustion! And, that can cause breastfeeding failure, marital stress, depression, car accidents, and trouble losing weight. Even worse, tired parents often accidentally fall asleep with their babies on sofas and in adult beds, which is a leading cause of infant sleep death.

Modern parents need help, yet few have family nearby or a nanny's support. Yet, in the past, new moms had the help of 3-4 "nannies" (their mom, grandmas, sisters, etc.).

SNOO is your 24/7 helper! An extra pair of hands to soothe your baby whenever you shower, fix a meal, or get some sleep...to help you be a happier, healthier parent. Bottom line: Babies deserve safer, better sleep...and so do tired parents.

SNOO's gentle rhythms boost sleep as it keeps babies safely on the back...all night long.

I hope SNOO becomes a valued member of your family! SNOO will also help you understand what your baby is trying to tell you. If it soothes the crying fast—keep your head on the pillow—your baby just needed a bit of rocking. But, if fussing continues, your baby needs YOU...for some milk or just a snuggle. It's that easy!

Enjoy these very special days...they may seem long, but they will pass faster than you can believe!



Dr. Harvey Karp
Founder, Happiest Baby

happiest  baby

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

The distance between user and products should be no less than 20cm.

IC STATEMENT

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



Enjoy SNOO!
The other new member of your family.

Follow us:



/TheHappiestBaby



@happiest_baby



@happiestbaby



/TheHappiestBaby



When baby sleeps...everyone sleeps!

Designed in California.
Manufactured in China.

Happiest Baby, Inc.

For support please visit: www.happiestbaby.com

or contact us at: customercare@happiestbaby.com

3115 S La Cienega Blvd., Los Angeles, CA 90016 USA

1-855-424-6323

Happiest Baby® and SNOO® names and logo designs are registered or pending trademarks in the United States and other jurisdictions owned by Happiest Baby, Inc. Other trademarks and trade names are those of their respective owners.

101286 V2.5



TERMS AND CONDITIONS

MODEL NUMBER - #SPHUB01

PRODUCT DESCRIPTION - Smart sleeper with Power Hub

END USER LICENSE

By using the software ("Product Software") that is embedded on the Happiest Baby, Inc. product ("Product"), you agree to the terms of this End User License Agreement ("EULA") between you and Happiest Baby, Inc. ("HBI", "we", "us", "our"). IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MAY NOT USE THE PRODUCT SOFTWARE AND YOU MAY CHOOSE TO PROMPTLY RETURN THE PRODUCT FOR A REFUND OF THE PRODUCT PURCHASE PRICE BY CONTACTING HBI AT THE ADDRESS BELOW. Your use of (a) the website located at www.happiestbaby.com and our sub-domains (each, a "Site"), (b) services through the Site (and any updates thereto) ("Site Services"), and (c) certain software that may be downloaded to your mobile device (and any updates thereto) ("App") is governed by the Terms of Service. Your purchase of the Product (excluding the Product Software) is governed by the HBI limited warranty, the terms of which are provided with the Product. This EULA does not govern your use of the Site, Services, or App, or your purchase of the Product (excluding the Product Software).

This EULA governs your access and use of the Product Software. This EULA gives you specific legal rights, and you may also have other legal rights in addition, which vary from jurisdiction to jurisdiction. The disclaimers, exclusions, and limitations of liability under this EULA will not apply to the extent prohibited by applicable law. Some jurisdictions do not allow the exclusion of implied warranties or the exclusion or limitation of incidental or consequential damages or other rights, so those provisions of this EULA may not apply to you.

THIS IS A LEGAL AGREEMENT. BY ACCESSING AND USING THE PRODUCT SOFTWARE, YOU ARE ACCEPTING AND AGREEING TO THIS EULA ON BEHALF OF YOURSELF OR THE ENTITY YOU REPRESENT IN CONNECTION WITH THE ACCESS. YOU REPRESENT AND WARRANT THAT YOU HAVE THE RIGHT, AUTHORITY, AND CAPACITY TO ACCEPT AND AGREE TO THIS EULA ON BEHALF OF YOURSELF OR THE ENTITY YOU REPRESENT. YOU REPRESENT THAT YOU ARE OF SUFFICIENT LEGAL AGE IN YOUR JURISDICTION OR RESIDENCE TO USE OR ACCESS THE PRODUCT SOFTWARE AND TO ENTER INTO THIS EULA. IF YOU DO NOT AGREE WITH ANY OF THE PROVISIONS OF THESE TERMS, YOU SHOULD CEASE ACCESSING OR USING THE PRODUCT SOFTWARE.

AS DESCRIBED BELOW, YOU ARE CONSENTING TO AUTOMATIC SOFTWARE UPDATE OF THE PRODUCT SOFTWARE. IF YOU DO NOT AGREE, YOU SHOULD NOT USE THE PRODUCT SOFTWARE. AS DESCRIBED BELOW, SECTION 9 DESCRIBES IMPORTANT LIMITATIONS OF THE PRODUCT SOFTWARE AND RELATED SERVICES, ESPECIALLY IN CONNECTION WITH LIFE SAFETY AND CRITICAL USES. PLEASE READ THESE DISCLOSURES CAREFULLY, AS YOU ARE ACKNOWLEDGING THEM AND ACCEPTING THEM.

1. License. Subject to the terms of this EULA, HBI grants to you a limited and nonexclusive license (without the right to sublicense) to execute one (1) copy of the Product Software, in executable object code

form only, solely on the Product that you own or control and solely for use in conjunction with the Product for your personal, non-commercial purposes.

2. **Restrictions.** You agree not to, and you will not permit others to, (a) license, sell, rent, lease, assign, distribute, transmit, host, outsource, disclose or otherwise commercially exploit the Product Software or make the Product Software available to any third party, (b) copy or use the Product Software for any purpose other than as permitted in Section 1, (c) use any portion of the Product Software on any device or computer other than the Product that you own or control, (d) remove or alter any trademark, logo, copyright or other proprietary notices, legends, symbols or labels in the Product Software, or (e) modify, make derivative works of, disassemble, reverse compile or reverse engineer any part of the Product Software (except to the extent applicable laws specifically prohibit such restriction for interoperability purposes, in which case you agree to first contact HBI and provide HBI an opportunity to create such changes as are needed for interoperability purposes). You may not release the results of any performance or functional evaluation of any of the Product Software to any third party without prior written approval of HBI for each such release.
3. **Automatic Software Updates.** HBI may from time to time develop patches, bug fixes, updates, upgrades and other modifications to improve the performance of the Product Software and related services ("Updates"). These may be automatically installed without providing any additional notice or receiving any additional consent. You consent to this automatic update. If you do not want such Updates, your remedy is to stop using the Product. If you do not cease using the Product, you will receive Updates automatically. You acknowledge that you may be required to install Updates to use the Product and the Product Software and you agree to promptly install any Updates HBI provides. Your continued use of the Product is your agreement to this EULA.
4. **Ownership.** The Product Software and all worldwide copyrights, trade secrets, and other intellectual property rights therein are the exclusive property of HBI and its licensors. HBI and its licensors reserve all rights in and to the Product Software not expressly granted to you in this EULA. The Product Software (and all copies thereof) is licensed to you, not sold, under this EULA. There are no implied licenses in this EULA. All suggestions or feedback provided by you to HBI with respect to the Product Software shall be HBI's property. HBI may use, copy, modify, publish, or redistribute the submission and its contents for any purpose and in any way without any compensation to you. You also agree that HBI does not waive any rights to use similar or related ideas previously known to HBI, developed by its employees, or obtained from other sources.
5. **Open Source.** Certain items of software included with the Product Software are subject to "open source" or "free software" licenses ("Open Source Software"). Some of the Open Source Software is owned by third parties. The Open Source Software is not subject to the terms and conditions of this EULA. Instead, each item of Open Source Software is licensed under the terms of the end user license that accompanies such Open Source Software. Nothing in this EULA limits your rights under, or grants you rights that supersede, the terms and conditions of any applicable end user license for the Open Source Software. If required by any license for particular Open Source Software, HBI makes such Open Source Software, and HBI's modifications to that Open Source Software, available by written request to HBI at the email or mailing address listed below.

6. Term and Termination. This EULA and the license granted hereunder are effective on the date you first use the Product Software or Product and shall continue for as long as you own the Product, unless this EULA is terminated under this section. HBI may terminate this EULA at any time if you fail to comply with any term(s) hereof. You may terminate this EULA effective immediately upon written notice to HBI. Upon termination of this EULA, the license granted hereunder will terminate and you must stop all use of the Product Software, but the terms of Sections 2 through 18 (inclusive) will remain in effect, after any such termination.
7. Warranty Disclaimer. NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HBI PROVIDES THE PRODUCT SOFTWARE "AS-IS" AND DISCLAIMS ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. HBI DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT SOFTWARE. HBI MAKES NO WARRANTY THAT THE PRODUCT SOFTWARE WILL BE UNINTERRUPTED, FREE OF VIRUSES OR OTHER HARMFUL CODE, TIMELY, SECURE, OR ERROR-FREE. YOU USE ALL PRODUCT INFORMATION (AS DEFINED BELOW), THE PRODUCT SOFTWARE, AND THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND HBI DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES, INCLUDING TO YOUR HVAC SYSTEM, PLUMBING, HOME, PRODUCT, OTHER PERIPHERALS CONNECTED TO THE PRODUCT, COMPUTER, MOBILE DEVICE, AND ALL OTHER ITEMS AND PETS IN YOUR HOME, RESULTING FROM YOUR USE OF THE PRODUCT INFORMATION, PRODUCT SOFTWARE, OR PRODUCT.
8. Limitation of Liability. Nothing in this EULA and in particular within this "Limitation of Liability" clause shall attempt to exclude liability that cannot be excluded under applicable law.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN ADDITION TO THE ABOVE WARRANTY DISCLAIMERS, IN NO EVENT WILL (A) HBI BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, OR INCIDENTAL DAMAGES, INCLUDING ANY DAMAGES FOR LOST DATA OR LOST PROFITS, ARISING FROM OR RELATING TO THE PRODUCTS OR PRODUCT SOFTWARE, EVEN IF HBI KNEW OR SHOULD HAVE KNOWN OF THE POSSIBILITY OF SUCH DAMAGES, AND (B) HBI' TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCTS AND PRODUCT SOFTWARE, WHETHER IN CONTRACT OR TORT OR OTHERWISE, EXCEED THE FEES ACTUALLY PAID BY YOU TO HBI OR HBI'S AUTHORIZED RESELLER FOR THE PRODUCT AT ISSUE IN THE PRIOR 12 MONTHS (IF ANY). THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. HBI DISCLAIMS ALL LIABILITY OF ANY KIND OF HBI' LICENSORS AND SUPPLIERS.

9. Limitations of Product Software. YOU ACKNOWLEDGE THAT THE PRODUCTS AND PRODUCT SOFTWARE ARE NOT A MEDICAL DEVICE OR AN EMERGENCY NOTIFICATION SYSTEM. HBI makes no warranty or representation that the use of the Products or Product Software (with or without any third-party product or service) constitutes medical treatment. You understand and acknowledge that HBI's Products or Product Software will not dispatch emergency authorities in the event of an emergency. Furthermore, HBI's Customer Care and Support contacts cannot be considered a medical resource. If you have an emergency or a medical concern, it is your responsibility to seek medical assistance.

The Product Software provides you information ("Product Information") regarding your baby. All Product Information is provided "as is" and "as available". We cannot guarantee that it is correct or up to date. In cases where it is critical, accessing Product Information through the Product Software is not a substitute for direct access of the information in the home.

10. Confidentiality. "Confidential Information" shall mean the Product Software and all other information disclosed to you that HBI characterizes as confidential at the time of its disclosure either in writing or orally, except for information which you can demonstrate: (a) is previously rightfully known to you without restriction on disclosure; (b) is or becomes, from no act or failure to act on your part, generally known in the relevant industry or public domain; (c) is disclosed to you by a third party as a matter of right and without restriction on disclosure; or (d) is independently developed by you without access to the Confidential Information. You shall use your best efforts to preserve and protect the confidentiality of the Confidential Information at all times, both during the term hereof and for a period of at least 3 years after termination of this EULA, provided, however, that any source code you receive shall be held in confidence in perpetuity. You shall not disclose, disseminate or otherwise publish or communicate Confidential Information to any person, firm, corporation or other third party without the prior written consent of HBI. You shall not use any Confidential Information other than in the course of the activities permitted hereunder. You shall notify HBI in writing immediately upon discovery of any unauthorized use or disclosure of Confidential Information or any other breach of this EULA, and will cooperate with HBI in every reasonable way to regain possession of Confidential Information and prevent any further unauthorized use. If you are legally compelled to disclose any of the Confidential Information, then, prior to such disclosure, you will (i) immediately notify HBI prior to such disclosure to allow HBI an opportunity to contest the disclosure, (ii) assert the privileged and confidential nature of the Confidential Information, and (iii) cooperate fully with HBI in protecting against any such disclosure and/or obtaining a protective order narrowing the scope of such disclosure and/or use of the Confidential Information. In the event such protection is not obtained, you shall disclose the Confidential Information only to the extent necessary to comply with the applicable legal requirements.
11. For U.S. Government End Users. The Product Software is a "commercial item," as that term is defined at 48 C.F.R. 2.101 (OCT 1995), and more specifically is "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212 (SEPT 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4 (JUNE 1995), the Product Software is provided to U.S. Government End Users only as a commercial end item and with only those rights as are granted to all other customers pursuant to the terms and conditions herein.
12. Export Compliance. The Product Software and related technology are subject to U.S. export control laws and may be subject to export or import regulations in other countries. You agree to strictly comply with all such laws and regulations and acknowledge that you have the responsibility to obtain authorization to export, re-export, or import the Product Software and related technology, as may be required. You will indemnify and hold HBI harmless from any and all claims, losses, liabilities, damages, fines, penalties, costs and expenses (including attorney's fees) arising from or relating to any breach by you of your obligations under this section.
13. Governing Law; Venue. The courts in some countries will not apply California law to some types of disputes. If you reside in one of those countries, then where California law is excluded from applying, your

country's laws will apply to such disputes related to these terms. Otherwise, you agree that this EULA, and any claim, dispute, action, cause of action, issue, or request for relief relating to this EULA, will be governed by the laws of California, without giving effect to any conflicts of laws principles that require the application of the laws of a different jurisdiction. Any action or proceeding relating to this EULA must be brought in a federal or state court located in Los Angeles County, California and each party irrevocably submits to the jurisdiction and venue of any such court in any such claim or dispute, except that HBI may seek injunctive relief in any court having jurisdiction to protect its intellectual property or Confidential Information.

14. Assignment. Neither the rights nor the obligations arising under this EULA are assignable by you, and any such attempted assignment shall be void and without effect.
15. Notices. Any notice to you may be provided by email to the address that you registered with HBI.
16. Severability. If any provision of this EULA is unenforceable, such provision will be changed and interpreted to accomplish the objectives of such provision to the greatest extent possible under applicable law and the remaining provisions will continue in full force and effect.
17. Waiver. All waivers by HBI will be effective only if in writing. Any waiver or failure by HBI to enforce any provision of this EULA on one occasion will not be deemed a waiver of any other provision or of such provision on any other occasion.
18. General. The Product Software is deemed irrevocably accepted upon your use of the Product Software or Product. HBI will have no responsibility to provide maintenance or support services with respect to the Product Software. The parties are independent contractors. You acknowledge that the Product Software contains valuable trade secrets and proprietary information of HBI, that any actual or threatened breach of Section 2 (Restrictions) of this EULA will constitute immediate, irreparable harm to HBI for which monetary damages would be an inadequate remedy, and that injunctive relief is an appropriate remedy for such breach.
19. The headings of Sections of this EULA are for convenience and are not to be used in interpreting this EULA. Except as otherwise provided in this section, no amendment to this EULA will be valid unless it is in writing hand-signed by the parties.
20. Questions or Additional Information. If you have any questions regarding this EULA, please visit us at www.happiestbaby.com/customer-care.

LIMITED WARRANTY

By using the Happiest Baby Snoo Smart Sleeper (the "Product") you agree to be bound by the terms of this Limited Warranty set forth below and provided by Happiest Baby®, Inc. ("HBI", "us", "we", "our").

This Limited Warranty gives you specific legal rights. You may also have other or additional legal rights under the laws of your state, province or jurisdiction. The disclaimers, exclusions, and limitations of liability under this Limited Warranty will not apply to the extent prohibited by applicable law. For a full description of your legal rights you should refer to the laws applicable in your jurisdiction.

1. *Limited Warranty Rights Apply only to the Original Purchaser. Subject to the additional terms and conditions set forth below, only an original purchaser in the United States of the Product from us or from one of our authorized resellers or distributors has rights under this Limited Warranty.*
2. *Limited Warranty. HBI warrants the Product against defects in materials and workmanship under normal use for a period of twelve (12) months from the date of purchase ("Warranty Period"). If a Product is returned to us during the Warranty Period as provided below, and we determine that the Product is defective, HBI will at its sole discretion (i) repair the Product, (ii) replace the Product or any defective components or parts with a new or refurbished similar product, component or part. If the Warranty Period has expired or is otherwise not applicable as per the Scope and Limitation on Warranty (below), we will return the Product to you at your expense. More information about this warranty can be found at www.happiestbaby.com/customercare*
3. *Warranty Service Process. Please review the online help resources at www.happiestbaby.com/customercare prior to seeking service under this Limited Warranty. To obtain warranty service or to return a product to us, you must first obtain a Return Merchandise Authorization (RMA) number from a customer care representative at HBI. We may attempt to troubleshoot a warranty-related problem prior to issuing a RMA number. We may ask for additional information upon request. Issued RMA numbers are valid for fourteen days from issuance. Once a RMA number is obtained, your product must be shipped freight prepaid at your expense either in its original packaging or packaging affording an equal degree of protection, to the HBI authorized distribution facility identified by our customer care representative. Along with the Product, you must also send proof of purchase and all accessories. Failure to return any of the accessories may result in a delay of refund payment or service and/or result in a reduction of your refund, a credit to HBI or an invoice for the missing accessories.*
4. *Replacement Parts; HBI's Determination of Product Status. In performing service under this Limited Warranty, we may furnish replacement parts on an exchange basis in which event replaced parts will become the property of HBI. Replacement parts provided by us will be new or refurbished and of comparable quality to the replaced part. Replacement parts may also be a different part that contains compatible features and functions. You agree to reimburse us for the shipping/handling, inspection, testing and repair of returned equipment determined by us not to be defective or which falls under one of the warranty exclusions described below. In all cases, our determination as to whether or not the equipment is defective and covered by warranty will be final. You will pay all shipping and handling charges related to shipping back to you any product that we determine not to be defective and is shipped back to you. Any replacement Product or part thereof will be warranted hereunder for a period of twelve (12) months from the date of purchase. We reserve the right to change the method by which we may provide warranty service to you, and the eligibility of your Product to receive a particular method of service.*
5. *Scope of and Limitation of Warranty. Our warranty obligations related to the Product under this Limited Warranty are limited to the repair or replacement of defective Products or parts thereof as described in the Limited Warranty section above. This warranty does not cover customer training and education, installation, set up or adjustment, signal or reception problems.*

6. The Product is not a Medical Device. The Snoo Smart Sleeper is not medical device. HBI makes no warranty or representation that the use of the Product (with or without any third-party product or service) constitutes medical treatment. You understand and acknowledge that HBI's Products or its associated Services will not dispatch emergency authorities in the event of an emergency. Furthermore, HBI's Customer Care contacts cannot be considered a medical resource. If you have an emergency or a medical concern, it is your responsibility to seek medical assistance.
7. Exclusions from Limited Warranty. This Limited Warranty does not cover damage to the Product (i) due to acts of God, other forces beyond our reasonable control, such as internet or power outages, power surges, fires, earthquakes, floods or other events of "force majeure," accident, misuse, abuse, negligence, commercial use or modification of, or to any part of your product; or (ii) caused by any third party product, service or system, use of the Product for purposes other than for which the Product was designed or intended, use in improper temperature, humidity or other environmental conditions, or use of the Product in violation of written instructions provided by HBI (which may be provided at the time of purchase or on its website at <http://www.happiestbaby.com/customer-care>). In addition to the above, this warranty also excludes:
- Defects due to normal wear and tear or aging, including soft goods;
 - Damage due to improper repair, operation or maintenance or connections to improper voltage supply or, to the extent allowed by law, attempted repair by anyone other than a facility authorized by HBI to service your HBI product.
 - Use of the Product for purposes other than for which the Product was designed or intended
 - Misuse of product contrary to instructions provided by HBI (which may be provided at the time of purchase or on its website at <http://www.happiestbaby.com/customer-care>).
 - Specific wireless signal or reception problems, internet connectivity issues of your router, or your smart-phone.
8. Disclaimer of Warranties. TO THE FULLEST EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. HBI DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE FULLEST EXTENT PERMITTED BY LAW.
9. Limitation of Damages. IN ADDITION TO THE ABOVE WARRANTY DISCLAIMERS AND EXCLUSIONS, TO THE FULLEST EXTENT PERMITTED BY LAW, IN NO EVENT SHALL HBI, ITS EMPLOYEES, AGENTS, OFFICERS, DIRECTORS OR SUPPLIERS BE RESPONSIBLE OR LIABLE IN CONTRACT, WARRANTY, TORT OR OTHERWISE FOR ANY INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, EXEMPLARY OR CONSEQUENTIAL DAMAGES, INCLUDING LOST PROFITS, GOODWILL, BUSINESS INTERRUPTION OR ANY OTHER LOSSES (OTHER THAN THE COST OF THE PRODUCT OR ITS REPLACEMENT) THAT ARISE DIRECTLY OR INDIRECTLY OUT OF YOUR PURCHASE OR USE OF THE PRODUCT, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. TO THE FULLEST EXTENT PERMITTED BY LAW, HBI'S AGGREGATE CUMULATIVE LIABILITY HEREUNDER SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT THAT CAUSED SUCH DAMAGE. CERTAIN STATES (COUNTRIES AND PROVINCES) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CERTAIN CATEGORIES OF DAMAGES, SO THE EXCLUSIONS SET FORTH ABOVE MAY NOT APPLY TO YOU AND YOU MAY HAVE ADDITIONAL RIGHTS.

THE LIMITATIONS AND EXCLUSIONS OF LIABILITY IN THIS SECTION ARE NOT APPLICABLE TO RESIDENTS OF NEW JERSEY. WITH RESPECT TO RESIDENTS OF NEW JERSEY, HBI IS NOT LIABLE FOR ANY DAMAGES ARISING OUT OF THE USE OF THE PRODUCT.

ING FROM OR RELATING TO THE PRODUCTS UNLESS SUCH DAMAGES ARE THE RESULT OF OUR NEGLIGENT, RECKLESS OR INTENTIONAL ACTS OR OMISSIONS; AND TO THE FULLEST EXTENT PERMITTED BY LAW WE ARE NOT LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

COMPLIANCE NOTICE

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC and IC Radiation Exposure Statement:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION: Changes or modifications to this unit not expressly approved by Happiest Baby could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This Class B digital apparatus complies with Canadian ICES-003.

EU COMPLIANCE STATEMENT

Complies with the European EMC directive.

BP8188EUS WLAN 11b/g/n USB MODULE product from W&W TECHNOLOGY CO., LTD HK. complies with FCC and CE and has lower power consumption, high linearity output power, accords with IEEE802.11B/G/N. The output power 802.11b/g/n < 20dBm. The FW version is 1.02.

WARNING

- Do not use this bassinet if you cannot exactly follow the instructions that come with it.
- Do not use this bassinet for a child who can roll over or who has reached 25 lbs. (11.3kg.).
- Do not place any cord, strap or similar item in or near this bassinet that could become wrapped around a child's neck.
- Do not place this bassinet near a window or patio door where a child could reach the cord of a blind or curtain and be strangled.
- Check this bassinet regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage. Do not substitute parts. Contact the manufacturer if replacement parts or additional instructions are needed.
- Children can suffocate on soft bedding. Do not place pillows, comforters or soft mattresses in this bassinet.

IC STATEMENT

- This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device. The distance between user and products should be no less than 20cm.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SPECIFICATIONS

Power	INPUT: 100-240V MAX OUTPUT: 5V DC. 4A
Wireless	BT+ WIFI(2.4G+5.8G)
System Requirements	Wireless connection with internet access iPhone or Android with the latest official OS SNOO App Free SNOO account
Language	English
Countries Supported	United States, Canada, and Europe
Environment	Dimensions: 32" (H) x 20" (W) x 36" (L) with legs Weight: 38 lbs. Operating Temperature: 50° to 95° F (10° to 35° C) Storage Temperature: -13° to 113° F (-25° to 45° C) Operating Humidity: 0% to 90% noncondensing
Certification	FCC IC CPSC (ASTM F2194-16e1) CE

