

## What's in the Box

The most versatile noodle you'll ever use (besides your brain).







- b) In-line Controller
- c) Wireless Remote Control
- d) (3) Magnet Sliders (built-in)
- e) (3) Quick Straps
- f) Lantern/Carry Bag

# Powering your Luminoodle

### Plug into any USB port

Plug it into any USB port. Use your computer, TV, a portable power bank, or the optional Lithium 3400 battery.



Note: Your Luminoodle will turn on automatically when you connect it to a power source.

# Information and Use Instructions

#### 15 Colors

 Cool White
 Pink
 Spring

 Pure White
 Magenta
 Cyan

 Warm White
 Orange
 Turquoise


 Yellow
 Yellow-green
 Blue

 Red
 Green
 Violet

### 4 Light Modes

Mode 1: Solid Color Mode Mode 2: Strobe-One Color Mode 3: Strobe-all colors Mode 4: Crossfade

#### 3-Button In-line Controller

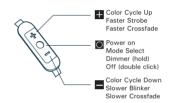

#### Instructions

General		
Power on	Press circle once*	
Power off	Double-click circle	
Change mode	Press circle once*	

Mode 1: Solid Color Mode	
Change color	Up/Down**
Change brightness	Hold circle***

# Mode 2: Strobe-One Color Speed up strobe Press up Slow down strobe Press down

Return to mode 1

Change brightness Hold circle \*\*\*

Change color

Mode 3: Strobe-All Colors		
Speed up strobe	Press up	
Slow down strobe	Press down	
Change brightness	Hold circle * * *	

Mode 4: Crossfade-All Colors		
Speed up fade	Press up	
Slow down fade	Press down	
Change brightness	Not Available	

- \* Turns device on when off, changes mode when on.
- \*\* Only change colors in mode 1.
- \*\*\* Light will dim from 100% to 0% over 2 seconds, flash, and then return to 100% over 2 seconds. Releasing button sets brightness level.

#### Wireless Remote



#### GENERAL

<b>(3)</b>	Turns Luminoodle on or off
0 • • •	Shortcut to primary colors

#### D-PAD

+/-	Cycles through colors	
o/ <del>:</del> ÿ-	+/-10% Brightness Adjust	
MODE	Toggles through modes	

#### SPEED

/ —	Adjusts	strobe/fade	speed
-----	---------	-------------	-------



# Accessories and Tips for Hanging

#### **Magnet Sliders**



- Pre-installed, movable
- 5lb each (15lb total) weight limit (which is plenty)
- Apply Luminoodle directly to any magnetic surface for quick, ambient light

#### Quick Straps



 Creates magnetic surface where there is no metal

removal and replacement.

Use with magnet sliders
 Strap them where you use or under the your Luminoodle most for easy

#### **Utility Loop**



 Nifty loop fixed to the end of the Luminoodle, perfect for nails and twigs, or run the other end through it to create a hoop you can wear around!

#### Lantern Bag



 Use the included bag to store your Luminoodle when you're not using it, or plug it in inside the bag for a more traditional lantern-style light source.

### Cautions

• Please read and follow all Luminoodle instructions before use. Please not that this product requires a USB (5V.1,2A min) power source

- Do not expose the Luminoodle USB port to water.
- The Luminoodle may represent a possible shock or fire hazard if improperly used in any way.
- . Do not modify or disassemble your Luminoodle.
- . Do not expose the Luminoodle to fire.
- . Do not drop, throw, or kick the Luminoodle.
- Luminoodle is not a toy and is intended for use by or under the supervision of adults.
- CHOKING HAZARD: The Luminoodle contains small magents. Swallowed magnets can stick together across instestines causing serious infections and death. Seek immediate medical attention if magnet(s) are swallowed or inhaled.
- If you have epilepsy or have had seizures or other unusual reactions to flashing lights or patterns, consult a doctor before using Luminoodle.
- In the event that the Luminoodle is damaged or ceases to function properly, stop use immediately and contact Power Pratical.

# 1 Year Limited Warranty

This Product comes with a *limited 1 year warranty* to the original purchaser for manufacturing flaws, and is conditioned upon proper use by the purchaser. Should this product not function properly under normal use, contact Power Practical for return process information. Power Practical alone will determine if the problem is due to a manufacturing flaw. If so, Power Practical will repair or replace the unit at their discretion and return it to you, free of charge (international shipping charges may apply).

Repair or replacement shall be the purchaser's sole remedy under this warranty. Power Practical reserves the right to replace any discontinued product with a new product of comparable value.

This warranty does not cover any damage or malfunction arising from misuse, improper maintenance, negligence, normal wear and tear, or accident. This warranty applies only to the original purchasers and proof of purchase is required.

EXCEPT AS PROVIDED HEREIN, THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Power Practical SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation or exclusion of implied warranties, so the above exclusions or limitations may not apply to you.

### FCC ID:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Support**

This manual provides you with all the information you need to use the Luminoodle Color. For more information on our other portable products or if you require additional support, please visit powerpractical.com

POWER PRACTICAL INC. 244 W. 300 N. Suite 210 Salt Lake City, UT 84103 1.801.335.5064 www.powerpractical.com

©2016 Power Practical Inc. is a trademark of Power Practical Inc.