

SMART ABDO™ App Manual

Download Instructions:

Apple: Head to App Store. Search for EAA ABDO. Download.

Android: Head to Google Play Store. Search for EAA ABDO. Download.

LOGIN:

Login using your user name and password



Username:

Password:

Remember Me:



Login

← The app will not let you stay logged in if it is closed. However by selecting the “Remember Me” button it will allow you to keep your username populated.

I. SMART ABDO APP Features

Home Screen / Map Page

The default screen once logged in will be the map with the ABDO's Location. This can be reached from any menu by tapping the selected ABDO's name at the top of the screen.

Main Menu (Pull Out Menu 1)

- Devices 1
- Event History 2
- Find My ABDO 3
- Silence Alarm 4
- Unlock Keypad 5
- Unlock Device 6
- Settings 7

Pull Out Menu 2

- Battery Status
- About My ABDO
- Help

Selected ABDO: MYABDO1

MYABDO1
Battery Percentage: 83%

Disarm

Main Menu List

1. Devices
2. Event History
3. Find My ABDO
4. Silence Alarm
5. Unlock Keypad
6. Unlock Device
7. Settings

For Assistance with your
ABDO, or using this App,
please contact EAA Corp
at:


(321) 639-4842

or by visiting our website
at:

www.EAACORP.com

1. Devices

View devices associated with your account on this Menu. From here you can view Device Name, On/Off status, Battery Life, and the ABDO's Current Status (Locked/Unlocked). The app currently supports up to 7 devices at one time.

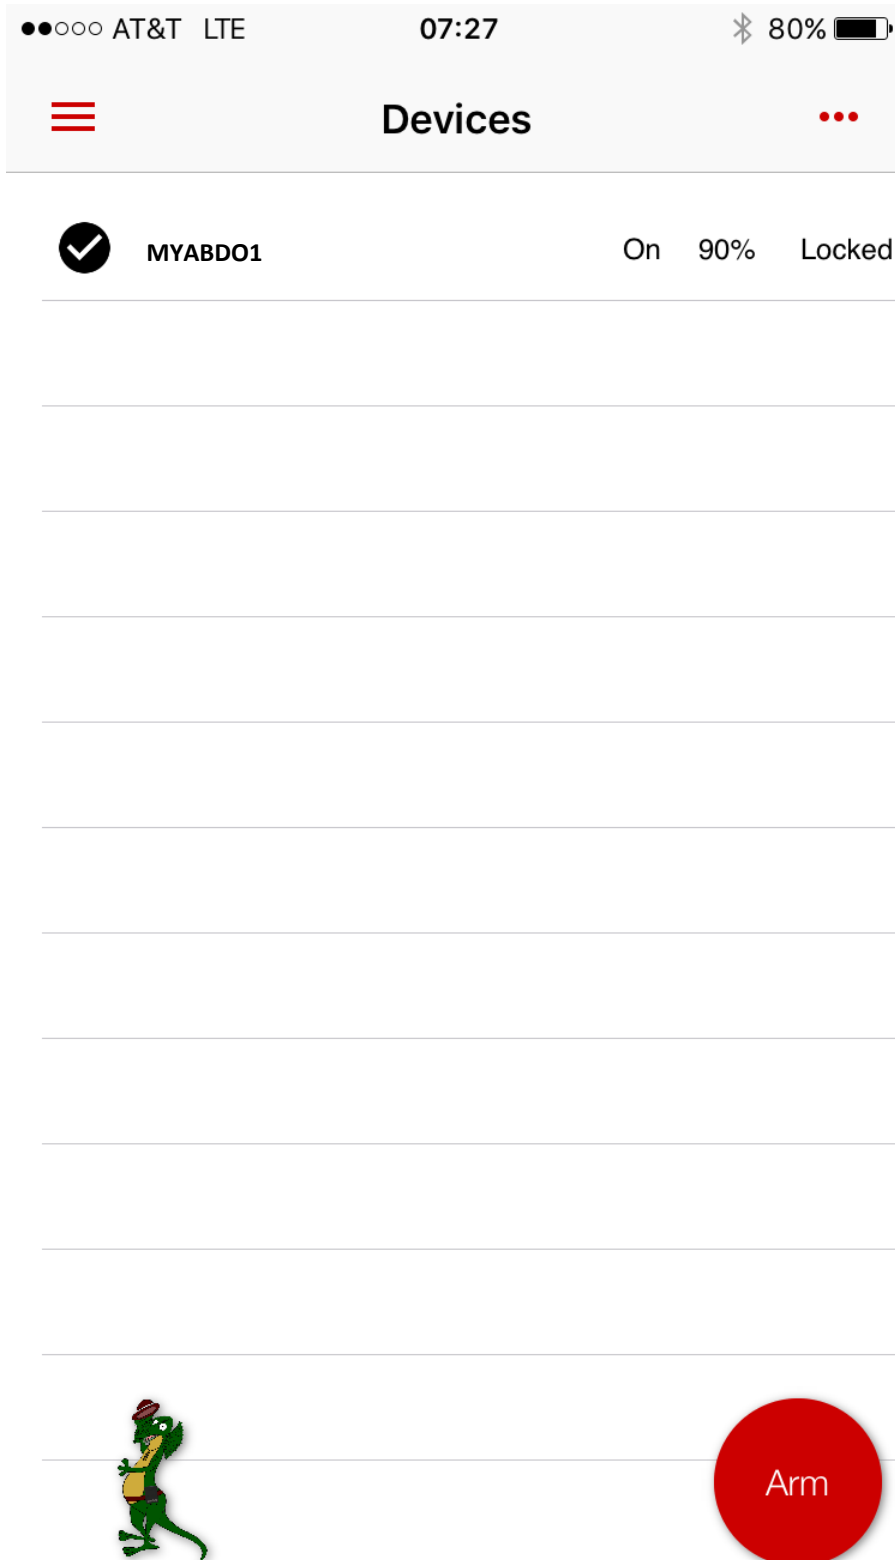

2. Event History

From this menu you can see a recorded list of the activities of a selected ABOD™ Smart Device. On this list, ABDO™ records specific events such as when ABDO™ is accessed or locked, but it can also show when unauthorized access happens or even if ABDO™ has been compromised.

 Event History  Selected ABDO: MYABDO1		
Filter		
<u>Date/Time</u>	<u>State</u>	<u>Battery</u>
9/12/16 10:19	Opened	80%
9/12/16 10:19	Unlocked	80%
9/12/16 10:18	Locked	80%
9/12/16 10:13	Locked	80%
9/12/16 10:06	Locked	81%
9/12/16 10:06	Alert Movement	81%
9/12/16 10:06	Immobile	81%
9/12/16 10:04	Locked	81%

Use the Filter Menu to customize the information displayed in this list.

 **Event History Settings** 

Filter Events By:

Open Events ☒

Low Battery ☒

Remote Unlock ☒

Tamper Events ☒

Fast Access Mode ☒


From:

To:


OK

 Done 

3. Find My ABDO / Home Screen (continued)

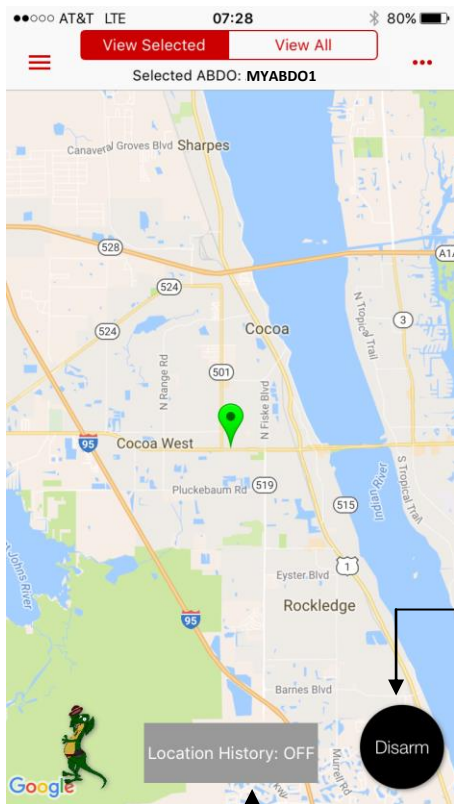

Location history view can be toggled on and off from the Home screen to display movement or updates based on the settings in the **Event History Settings**.

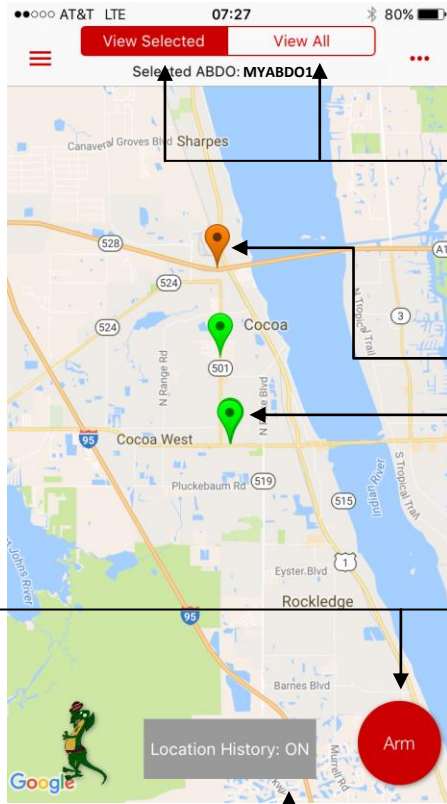

If multiple Smart ABDO™ devices are registered to your account you can keep track of 1 or all by selecting one of these options.

Map Pin Indicators display in 3 colors during History Mode:

- Green - Activities less than 15 min old
- Yellow - Activities more than 15 min old
- Orange - Activities more than 45 min old

Arm and Disarm Your ABDO™ Device from this main screen.

Enter Your PIN For Device
MYABDO1

1

2

3

4

Ok

Cancel

4. Silence Alarm

Use this menu to silence your Smart ABDO™ Device when alarms are set to sound

Enter Your PIN For Device
MYABDO1

1

2

3

4


Ok

Cancel



5. Unlock Keypad

When 3 failed attempts at access to Smart ABDO™ occur the device automatically locks down disabling the keypad on the device itself. Clicking the “Unlock Keypad” option and inputting the device’s correct passcode will allow you to unlock the keypad for continued use of the device.

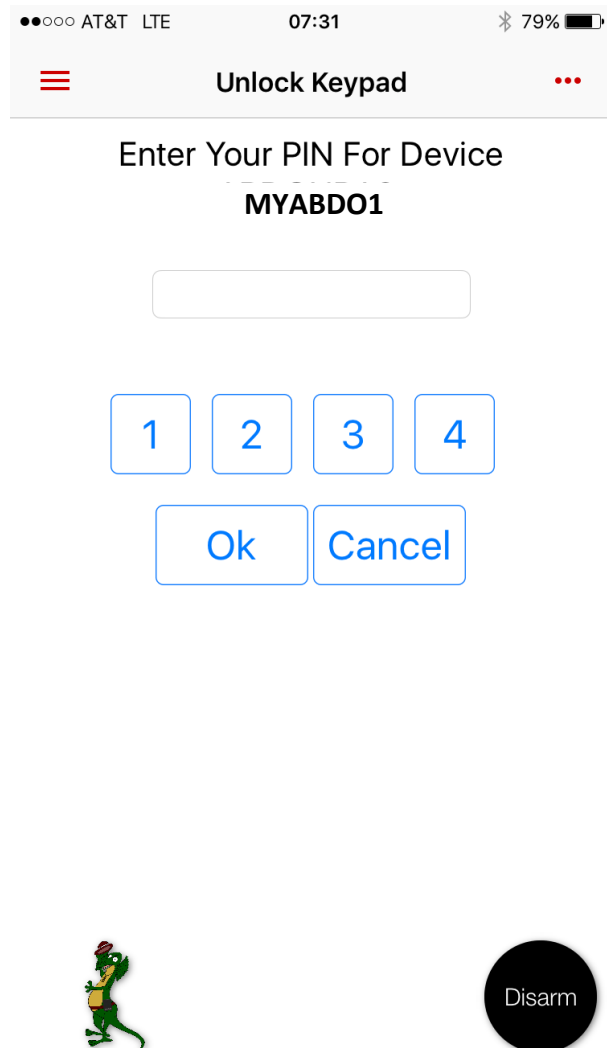

●●○○ AT&T LTE 07:31 79%

☰ Unlock Keypad ☰

Enter Your PIN For Device
MYABDO1


1 2 3 4

Ok Cancel

 Disarm

6. Unlock Device Menus

This menu functions the same as the keypad on the device allowing access to the device. A warning screen will appear confirming that the user is about to unlock their device. By inputting the device’s correct passcode on this screen you can then unlock the Smart ABDO™ device.

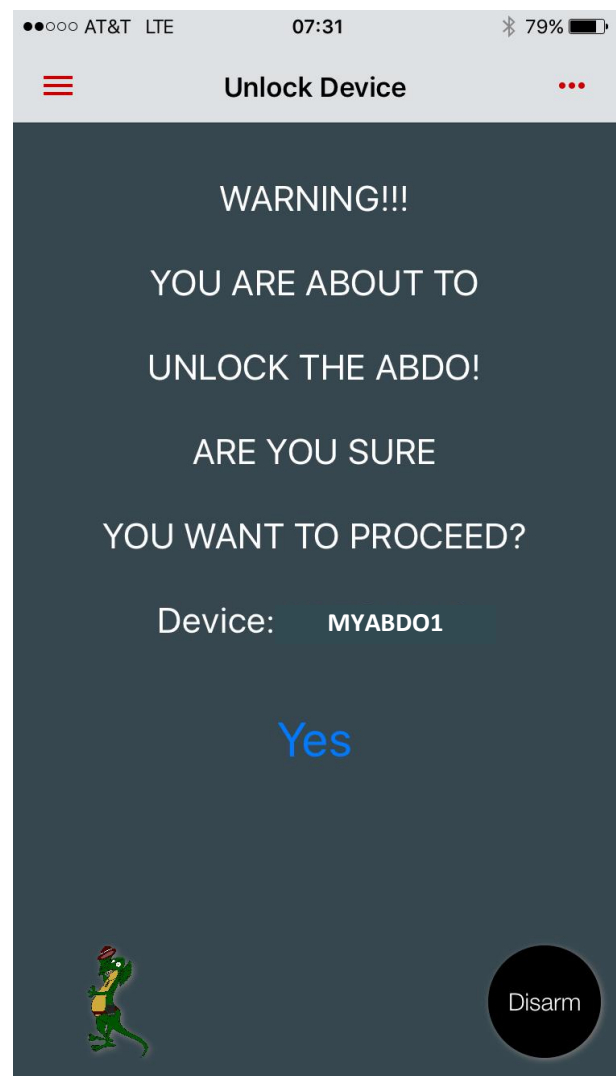

●●○○ AT&T LTE 07:31 79%

☰ Unlock Device ☰

WARNING!!!

YOU ARE ABOUT TO
UNLOCK THE ABDO!
ARE YOU SURE
YOU WANT TO PROCEED?

Device: MYABDO1

Yes

 Disarm

7. Settings

From this menu you can customize a series of different settings on the Smart ABDO™ device.



Settings



Selected ABDO: MYABDO1



Alarm Settings

A



GPS Settings

B



WiFi Settings

C



SMS Settings

D



Change PIN/Label

E

A. ALARM SETTINGS - From this menu you can customize the alarms and types of sounds the Smart ABDO™ makes during when in use.

Alarm Settings

Selected ABDO: MYABDO1

Cancel

Tamper Time Threshold
(Seconds)

30

Audible Alarms

☒

PIN Code Entry Alert

☒

Key Push Beeps

☒

Battery Alarm

☒

Done

1

5

10

30

60

90

120

Set the Tamper Time Threshold to allow ABDO™ to lock faster or slower when unauthorized access and movement occurs.

B. GPS Settings - On the GPS sub-menu you can enable **OR** disable GPS tracking. Here you can also change how Smart ABDO communicates with you. This can be done by changing between **Event Tracking** or **Interval Tracking**. When set to **Event Tracking Mode** the Smart ABDO™ device will only send updates, on its **map** when a change happens. **Event Tracking Mode**, allows for extended battery life. When set to **Interval Tracking Mode** the Smart ABDO™ device will only send updates, recorded in its **Event History Log** and **map** on a set timed interval.

GPS Settings

Selected ABDO: MYABDO1

Cancel

GPS Enabled:



Event Tracking

Interval Tracking

Time Interval:

5 Minute

Apply

GPS Settings

Selected ABDO: MYABDO1

Cancel

GPS Enabled:



Event Tracking

Interval Tracking

Time Interval:

10 Minute

Done

1 Minute

5 Minute

10 Minute

30 Minute

60 Minute

C. WI-FI Settings - In the WI-FI Sub-Menu you can disable OR Enable WI-FI and Connect your Smart ABDO device to a WI-FI network. If a WI-FI network is hidden, the signal can often be located by typing the network name or partial network name into the SSID* field and then pressing the scan button.

Wifi Settings

Selected ABDO: MYABDO1

Cancel

WiFi Enabled

☐

DHCP Enabled

☒

SSID*

Enter SSID

Press to Scan:

Scan

SSID Scan

Passphrase*

Passphrase

*ABDO Supports WPA/WPA2 Personal WiFi Security Only

Enter if DHCP Enabled is OFF:

IP Address

0.0.0.0

Subnet Mask

255.255.2...

Gateway

0.0.0.0

DNS

0.0.0.0

Apply

●●○○ AT&T LTE 07:49 76%

Wifi Settings

Selected ABDO: MYABDO1

Cancel

WiFi Enabled

☒

DHCP Enabled

☒

SSID*

NEIGHBOR...

Press to Scan:

Scan

HOOD_WIFI

Passphrase*

Passphrase

*ABDO Supports WPA/WPA2 Personal WiFi Security Only

Enter if DHCP Enabled is OFF:

IP Address

0.0.0.0

Subnet Mask

255.255.2...

Done

Out of Service

BHN_Offline

NEIGHBORHOOD_WIFI

NEIGHBORHOOD_WIFI

D. SMS Settings - From this sub-menu you can Enable OR Disable SMS and text messaging alerts. As well as, change the specified phone number to receive updates from the Smart ABDO™ Device.

SMS Settings

Selected ABDO: MYABDO1

Cancel

SMS Enabled

☒

SMS Phone Number

1234567

✕

Apply

"1234567"

1	2	3	4	5	6	7	8	9	0
-	/	:	;	(	)	\$	&	@	"
#+=	.	,	?	!	'	✕			
ABC	🌐	🎤	space			return			

E. Change Pin / Label - From this sub-menu you can re-name your individual devices as well as change the access pin combination. See the diagram on **Smart ABDO™ Device Features** for layout of physical access buttons on the device.

Pin and Label Settings

[Cancel](#)

Change Device Name:

Current Device Name:

MYABDO1

New ABDO Name:

New Name Here

Change Name

Change Device PIN:

Old PIN:


New PIN:

Change PIN

II. Smart ABDO™ Device Features

1. Indicator Lights

Smart ABDO™ is equipped with 3 indicator lights and a button to monitor the device's: Battery life, Lock Status, and WI-FI / GSM connection.

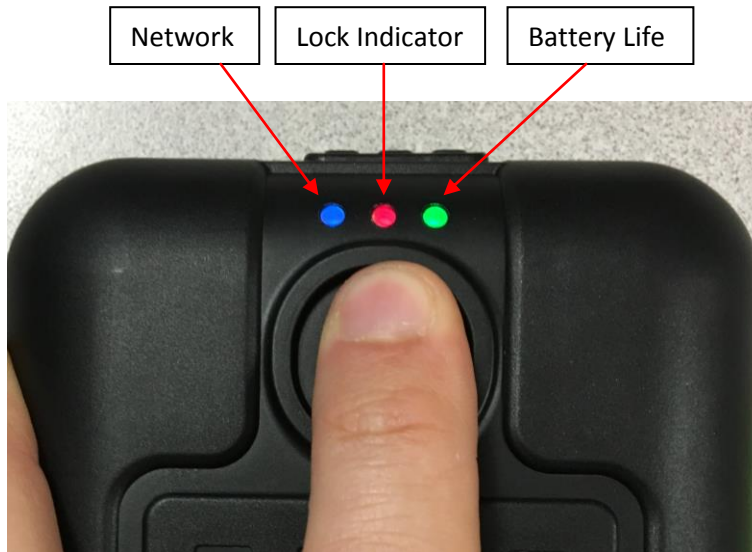

Indicator Color Meanings:

Network Indicator

- **Blue** - WI-FI Connected
- **Green** - GSM Connected
- **Red** - No Network Connection
- **Pink** - Airplane Mode

Lock Indicator

- **Green** - Locked
- **Green blink** - Armed
- **Red** - Unlocked or **Fast Access Mode**

Battery Life Indicator

- **Green** - Battery has more than 20% or Charging
- **Red** - Battery is less than 20% life left

2. Physical Access Buttons and Locking from Smart ABDO™ Device.

A. Lock Buttons



-

Lock Buttons on the Smart ABDO™ Device correspond in an ascending numerical pattern. The very top row of square shapes on the device are the access buttons. Moving from left to right in numerical order from 1-4 they

B. Armed Mode



- It is possible to **arm** Smart ABDO™ both in the app and on the device itself. On the Device itself, Hold the #3 button down until you hear an audible beep come from the device. The ABDO Device is now armed; it will remain locked but will sound an alarm and send a text message alert to the specified phone if it is disturbed while armed.

(ALERT!) Your Abdo (MYABDO1) has moved! Last Location: <http://tinyurl.com/jfhelsp>

- To arm in the app simply click anywhere you see **red “Arm” button** appear in the bottom right corner, you will be prompted to put in your **PIN** Code, once complete the ABDO Device will Lock and Enter **Arm Mode**.



C. Fast Access Mode

- **Fast Access Mode** is a state in which your ABDO™ Device will be unlocked and can be placed either on a belt or in a location not to be disturbed unless it is needed. **Fast Access Mode** is activated by putting in the PIN code while the ANDO™ is at rest. This is ideal for concealed carry allowing for a fast hip draw of your side arm or for home defense.

- While in Fast Access Mode if the device is taken off of the belt or disturbed (when off of the belt) a warning alarm will sound for a few seconds giving you time to put in your **PIN**. If the **PIN** is not entered in, the Device will sound an alarm and send a message to the specified phone stating the device had been compromise.

< Messages 313-131 Details

(ALERT!) Your Abdo (MYABDO1) was compromised! Last Location: <http://tinyurl.com/jlw2cot>

D. Battery & Charging

- Smart ABDO™ Allows you to monitor the battery life for your device in the APP. From the homepage this can be found in Pull-Out Menu 2 (on the right hand side of the Map / Home page). Once there Select the Battery Status option for a live update on the Device's remaining battery life. You can also see the battery status at a specific point in time from the Event History page.
- The Smart ABDO will emit a sound and send a notification when the remaining battery life drops below both 20%, 10%, and lastly at 5%.

(ALERT!) Your Abdo (MYABDO1) battery is LOW, less than 20% battery life remaining. Please recharge as soon as possible.

Yesterday 23:30


(ALERT!) Your Abdo (MYABDO1) battery is VERY LOW, less than 10% battery life remaining. Please recharge as soon as possible.



Text Message

Send

- At 5% the device will remind to either lock or unlock via the app or device before the battery runs out.

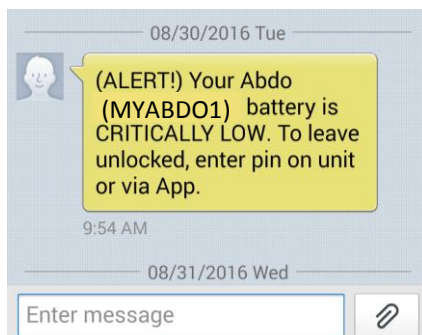

- Smart ABDO™'s battery can be charged using any standard usb to usb mini cable.

E. Network Capabilities

- Smart ABDO™ is both WI-FI and GSM capable. It uses these signals to communicate and display location updates which are viewable in **Google Maps®**.

F. Airplane Mode

- When traveling you can store Smart ABDO™ in a checked bag and turn on **Airplane Mode** to cut off wireless connectivity to make it safe for flight. The **Airplane Mode Switch** is located inside the safe on the front panel. Once it is activated the front LED indicator panel will light up pink for the Network Indicator.



G. Troubleshooting (Last Resort Method)

- If there appears to be a malfunction with the Smart ABDO™ Concealed Carry Safe you may try to troubleshoot by resetting the device. Please keep in mind this should be used as a last resort. There is a **Hard Reset Button** located on the bottom to the device accessible by a pin or small paper clip. Press and hold for a few seconds until device produces an audible beep.



Hard Reset Button

SMART ABDO™



WARNINGS AND INSTRUCTION MANUAL FOR SMART ABDO™ PORTABLE SAFE

**IMPORTANT!
READ THESE WARNINGS AND INSTRUCTIONS
BEFORE USING!!**

Make a copy of this manual, proof of purchase/sales record for safekeeping in a secure safe or fireproof container. Such proof is necessary if the ABDO™ is damaged, stolen or sent in for warranty repair.

ABDO™ is Patent Pending and ABDO™ is a Trademark of European American Armory Corp

INDEX

Pages 2,3.....	WARNINGS
Pages 3,4.....	ABDO™ WORDS
Page 5.....	ABDO™ FIT AND TESTING
Pages 5-8.....	WARRANTY AND FIGURES

TECHNICAL SPECIFICATIONS

Length: 6.5" , Width: 4.25" , Depth: 1.25" , Weight: 8.8 oz

© Copyright 2015

ABDO™ WARNINGS AND INSTRUCTION MANUAL
PLEASE READ THESE INSTRUCTIONS

FOR YOUR SAFETY AND THE SAFETY OF OTHERS, this owner's manual contains important warnings, instructions and safety procedures which must be understood **BEFORE** using the ABDO™. Read the **ENTIRE MANUAL** and if you do not understand any part of it or the operation of your ABDO™, stop and seek professional instruction. You can get a copy of this manual from European American Armory Corp. upon request. Record the serial number of your ABDO™ (NOT REQUIRED FOR BASIC ABDO™):

Seller and Purchase Date

Description

**FOLLOWING THESE SAFETY RULES CAN SAVE YOUR
LIFE OR THE LIFE OF SOMEONE ELSE**

Before handling any firearm, make sure you know the safety procedures and most importantly, keep the firearm pointed in a safe direction.

Before handling a firearm, read, understand and follow the instructions in the firearm manual. Always keep the manual with the firearm. If you lend, give or sell the firearm, be sure the manual goes with it. If there is anything you do not understand, seek advice from someone qualified in safe handling of firearms. You must **ALWAYS** obey the following warnings, instructions and safety procedures:

1. Always keep the muzzle pointed in a safe direction.
2. Firearms should be unloaded and secured when not actually in use.
3. Don't rely on your firearm's safety.
4. Be sure of your target and what's beyond it.
5. Use only proper ammunition matching the precise caliber of your specific firearm.
6. If your firearm fails to fire when the trigger is pulled, handle with care.
7. Always wear ear and eye protection when shooting.
8. Be sure the barrel is clear of obstructions before shooting.
9. Don't alter or modify your firearm and have it serviced regularly.
10. Learn the mechanical and handling characteristics of your firearm.
11. Shoot sober!

LEAD WARNING: The ABDO™ does not contain any lead; however, it can hold a firearm that may have been exposed to lead or lead compounds known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who discharge a firearm, stand near someone who discharges a firearm or clean firearms are hereby warned of the dangers presented by lead and lead compounds and should take protective health measures. Avoid exposure to lead while handling a firearm and wash your hands after contact. Proper air ventilation is absolutely necessary when shooting indoors.

Get competent firearms instruction in safe handling before using your firearm or ABDO™. Please ask your dealer for names of qualified instructors near you. All guns are extremely dangerous if carelessly handled or used. Remember that the firearm user is the primary "safety" and that reliance on any mechanical safety device should never replace safe handling procedures.

A Firearm **WILL FIRE** if a cartridge is in the chamber and the trigger is pulled while the safety is disengaged.

NEVER assume any gun is unloaded. Before handling, check to make sure the chamber is empty.

Test your gun's operation and safeties only at a shooting range while the firearm is pointed in a safe direction. Be careful with **ALL** ammunition. Even "blank" cartridges are deadly at close range due to the muzzle blast. Make sure your ammunition is new and in good clean condition. Do **NOT** oil or grease ammunition as this may damage the cartridge primer. Do **NOT** tamper with or alter the standard factory ammunition. Never drop your gun. If you do drop it, unload it and check it for proper function before using it again. Do **NOT** alter or modify your gun. Don't try to change your gun's trigger pull, because it may affect sear engagement and thereby cause accidental firing.

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Teach children: 1. NOT to touch guns, bullets, cartridges, shells, flares or any explosive device and **2.** That if they discover such a dangerous item or weapon, they must immediately report its location to their parents, school teacher or police.

Remember a firearm has the capability of taking your life or the life of someone else. Be careful with your firearm - an accident is almost always the result of not following basic safety rules.

Never place a loaded handgun in the ABDO™ without first testing in an unloaded condition. (double check to make sure the chamber is empty) Your handgun rests on the barrel pin for quick access.

DO NOT ALTER YOUR ABDO™ PORTABLE SAFE TO ACCEPT A PRODUCT IT WAS NOT DESIGNED TO CARRY, INCLUDING ANY SAFETY DEVICE INCORPORATED IN ANY ABDO™ PRODUCT TO ACCOMMODATE HANDGUNS OR OTHER EQUIPMENT FOR WHICH THE ABDO™ PRODUCT WAS NOT DESIGNED OR INTENDED.

CARRY "CONDITION" OF FIREARM

Carrying any handgun with a live cartridge in the chamber immediately in front of the firing pin may cause an accidental discharge. **NEVER CARRY A FIREARM IN YOUR ABDO™ WITH A ROUND / CARTRIDGE IN THE CHAMBER, UNLESS YOU HAVE ADJUSTED THE BARREL PIN SO THAT THE PISTOL RESTS ON THE END OF THE BARREL NOT ON THE PIN. SEE ADJUSTING BARREL PIN FOR CONDITION 1 (ROUND IN CHAMBER) IN THIS MANUAL!!!!**

It is the user's responsibility to exercise extreme caution when handling or carrying any handgun and to assume at all times that the gun is loaded. Do not attempt to cock a handgun while it is in the ABDO™.

For information on how to safely carry your particular handgun, please refer to your handgun manufacturer's safety and instruction manual. Always make sure your firearm has been properly fitted to the ABDO™ before use. **SEE FITTING YOUR FIREARM TO ABDO™ SECTION BELOW.**

ALWAYS FOLLOW STATE, FEDERAL AND LOCAL LAWS REGARDING FIREARMS STORAGE AND CARRY AND USE AND OWNERSHIP.

Carrying a firearm is a serious responsibility that requires constant awareness. It is your responsibility to exercise extreme caution during any situation where another individual may attempt to take away your handgun. Law enforcement officers in particular should be familiar with the departmental tactical and procedural guidelines regarding the use and carrying of firearms in close proximity to potentially dangerous individuals

Warnings, Safety and Consumer Information... Read Immediately

GUNS ARE DANGEROUS. YOU ARE RESPONSIBLE FOR GUN SAFETY AND GUN RETENTION. Guns can cause **SERIOUS INJURY OR DEATH.** Keep guns out of reach of children and anyone that should not have access to one. **LOCK UP** all guns when you are not using them. **DO NOT** depend on your holster to keep your gun from an unauthorized person.

NEVER handle any gun unless you have passed an appropriate, accredited firearm safety course, and know how to safely handle the gun. Make sure you have the right holster for your gun. Be extra careful when you put a gun into your holster, and when you remove a gun from your holster.

Keep any gun pointed in a safe direction regardless of whether you think it is unloaded.

ABDO™ WORDS: ABDO™ FIREARM STORAGE ... **BEFORE YOU PUT YOUR FIREARM IN THE ABDO™,** make sure it is the right model and size for your firearm. If you use the wrong ABDO™, you may cause the gun to fire accidentally, or you may not be able to draw the gun from the ABDO™.

USE AN UNLOADED GUN to check your ABDO™ for proper fit and function. Do not put a **LOADED** gun in the ABDO™ until you know the ABDO™ **DOES NOT INTERFERE** with: (a) safety features; (b) control buttons or levers; (c) sights; (d) magazine release button; (e) cylinder latch; (f) trigger, etc. If the ABDO™ interferes with any of these, **YOU HAVE THE WRONG ABDO™!**

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

DO NOT TRY TO STRETCH, BEND, OR MODIFY any ABDO™ product. DO NOT put oil or water on the product to make the firearm fit in your ABDO™. Call EAA Corp Customer Service for help if you believe there is a problem with your ABDO™.

ABDO™ FIT ... EAA CORP tries to provide accurate ABDO™ sizing information. However, gun makers sometimes make changes to their guns, often without changing the gun model number. Also, anyone can make a typing mistake or similar error. Therefore, EAA CORP disclaims ANY responsibility or liability for, or consequences resulting from fit" or sizing information, or any such errors or changes. If you use a ABDO™ PORTABLE SAFE, you alone are solely and exclusively responsible to make sure your gun and your ABDO™ work properly together, and you must use an actual unloaded gun and ABDO™ to do this. If you are not sure your ABDO™ is working properly, call EAA CORP Customer Service for help.

MODIFICATIONS ... ABDO™ PORTABLE SAFES are for use WITH STANDARD FACTORY MODEL GUNS ONLY. Any modification to your firearm may make your gun unsafe to shoot, carry, holster, or draw. DO NOT put your gun in the ABDO™ if it has unsafe modifications, or if it is worn, broken, or customized.

Before using your ABDO™, BE SURE that you are totally familiar with the safe way to remove and return your handgun to the ABDO™. You are responsible to check the product for proper fit and function before each use and as often as necessary during use. Any manufactured product will wear out in time, or could become damaged or have a defect. Should any ABDO™ become worn, ill-fitting, or defective, **CEASE USE IMMEDIATELY.**

Be very careful when using your ABDO™ with your firearm. KEEP YOUR FINGERS AND CLOTHING, AND OTHER OBJECTS OUT OF THE ABDO™ AND OUT OF THE TRIGGER GUARD AS YOU HOLSTER AND DRAW YOUR GUN FROM THE ABDO™, or you might accidentally fire the gun. NEVER put your trigger finger on the trigger when you holster or draw your gun. NEVER try to cock a handgun while it is in the ABDO™, as you may accidentally fire the gun or damage the gun or yourself or the ABDO™.

If you have an auto pistol, make sure you do not accidentally push back the slide when putting the firearm into the ABDO™. Always place your thumb on the back of the slide or hammer to hold the slide and hammer forward when you put your pistol into the ABDO™.

Make sure that you do not accidentally cock the gun when you put your firearm in the ABDO™. Make sure you have not accidentally moved the safety or magazine release button when putting your firearm into the ABDO™.

Before you wear or carry the ABDO™, MAKE SURE that nothing will affect your draw. Be sure there is no dirt or other foreign material in the ABDO™. Be sure that all aspects and parts of the ABDO™ and hardware are working properly BEFORE you put your firearm into the ABDO™.

Practice putting your firearm in and out of the ABDO™ while under stress, NEVER PRACTICE WITH A LOADED GUN. Be sure you can prevent accidental loss of your gun or ABDO™ during physical activity. Be sure you can keep someone else from removing the ABDO™ from your possession. It is YOUR responsibility to make sure you can properly use your ABDO™.

MORE ABDO™ WORDS:

IMPORTANT BASIC SAFETY PRECAUTIONS ... NEVER carry ANY gun (a) with a round under the hammer; (b) with a round in line with the firing pin; (c) "cocked and locked"; or (d) in a ready-to-fire condition, UNLESS the maker of your gun states that you can safely carry it this way and you are specifically trained and certified to safely carry it this way in your holster. Carrying a gun in any of these conditions INCREASES THE RISK OF ACCIDENTAL DISCHARGE. Refer to the gun maker's instructions and where appropriate, instructions from your police training officer, range master, or law enforcement agency. NEVER carry ANY gun with the hammer or firing pin in the rearward or full-cock position and the safety lever or button in the "off" or "fire" position.

If your gun is equipped with a safety switch, ALWAYS move the safety lever or button to the "safe" position BEFORE YOU put the firearm into your ABDO™. Do not move it to the "fire" position until you have drawn the gun clear of the ABDO™ and have pointed it in a safe direction.

ALWAYS FOLLOW STATE, FEDERAL AND LOCAL LAWS REGARDING FIREARMS STORAGE AND CARRY AND USE AND OWNERSHIP.

EAA CORP. makes no representations and disclaims any responsibility, expressed or implied, with respect to the manner or consequences of product use. The implied warranties of merchantability and fitness for a particular purpose and all other warranties, expressed or implied, are excluded and shall not apply to the product sold. Determination of fitness or suitability of any product for a specific use is the responsibility of the user. User assumes all responsibility to use these products in a safe manner in accordance with manufacturer's instructions. All instructions and warnings should be read and understood by the user before product use.

How to Fit Your Pistol to Your ABDO™.

- 1) Make sure the firearm is unloaded (FIG: 8)
- 2) Adjust barrel pin so firearm fits inside ABDO™.... Note: Barrel pin screw hole is off center to allow for adjustment Right or Left or Up or Down. See Figures: (FIG 18) Proper Barrel Pin Fit, (FIG 9) Improper Barrel Pin Fit, (FIG 5) Barrel Pin Hole Out of center for adjustment, (FIG 20) Barrel Pin Assembly Screw installation
- 3) What you want is the lid of the ABDO™ to close with full function of latch and free movement of the firearm. Many firearms will fit in the ABDO™, with adjustment. If you have any questions see online Video on ABDO™ adjustment. (FIG 19) Pistol proper alignment and Right Hand Placement, (FIG 14) Pistol proper alignment and Left Hand Placement, (FIG 12) ABDO™ Latched / locked (**Make Sure Latch is always fully locked when you have a firearm inside the ABDO™**), (FIG 13) ABDO™ Latch – Unlocked
- 4) Keep ABDO™ Key Locked except during use.
- 5) Your ABDO™ is designed to allow the firearm to rest on the barrel pin. As Shipped, the barrel pin is designed to prevent you from keeping a round in the chamber while carrying the firearm inside your ABDO™. **Do Not Alter or Modify Barrel Pin of your ABDO™**

UNLESS YOU FOLLOW BELOW INSTRUCTIONS.....

- 6) A Small Piece of foam rubber is included with your ABDO™ and may be placed under the pistol to help move the pistol when ABDO™ is opened as well as eliminate pistol rattle while moving, Note: Make sure latch works properly when foam is in place. Move Foam to best position for your pistol.

Testing Your ABDO™ **Make Sure Firearm is unloaded – (FIG 8)**

- 1) Once you have fit your firearm to the ABDO™. Check ABDO™ function, so as to assure that the latch opens properly and locks properly.(FIG 19) Pistol proper alignment and Right Hand Placement, (FIG 14) Pistol proper alignment and Left Hand Placement, (FIG 12) ABDO™ Latch Locked (**Make Sure Latch is always fully locked when you have a firearm inside the ABDO™**), (FIG 13) ABDO™ Latch Unlocked
- 2) Practice using the ABDO™ in front of a mirror and then with a professional firearms instructor before using the ABDO™ in everyday use. (See FIG 1a to 9a)
WARNING: Remember The ABDO™ looks like a cell phone, keep it away from children or unwanted or untrained users, Always keep the ABDO™ key locked when not in use.
- 3) **Go to www.theabdo.com for additional instructions on Smart ABDO™.**

WARRANTY

This European American Armory Corp. ABDO™ is warranted to the original retail customer for 90 days from date of purchase against defects in material and workmanship. All parts and labor or replacement **at our option** are covered. **Transportation to and from our repair facilities**, government fees, damage caused by failure to perform normal maintenance, sales outside the United States, damage due to any unauthorized repair, modification, misuse, abuse, or alteration of the product is not covered by this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to 90 days from date of original retail purchase. Consequential or incidental damages and/or expenses, or any other expenses are not covered by this warranty.

To obtain warranty performance, send your ABDO™ with proof of retail purchase, Freight prepaid **European American Armory Corp. /1426 King Street / Cocoa, FL 32922**

WARNING

Children are attracted to and can operate firearms that can cause severe injuries or death. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

ADVERTENCIA

A los niños les atraen las armas de fuego y los pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte. Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente. Le pueden dar una multa o enviarlo a la cárcel.

ADJUSTING BARREL PIN FOR CONDITION 1 (ROUND IN CHAMBER), DO NOT DO THIS MODIFICATION WITHOUT PROPER TRAINING AND LICENSING IF REQUIRED ON CARRYING A FIREARM IN CONDITION 1, AS YOU RISK INJURY OR DEATH OF YOU OR SOMEONE ELSE: SHORTEN BARREL PIN TO 1.75" (1 ¾") OVERALL BY CUTTING PIN WITH A HACKSAW. LENGTH OF PIN IS MEASURED FROM BASE WHERE SCREW CONNECTS PIN TO YOUR ABDO™. DEBURR AND ROUND CUT END OF BARREL PIN WITH SAND PAPER OR FILE. MAKE SURE FIREARM RESTS ON BARREL END, NOT ON PIN WITH ROUND IN CHAMBER. SEE IMAGES BELOW:

Image 1



Image 2



Image 3



Image 4



Figures 1, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 18, 19, 20

FIG. 1



FIG. 5



FIG. 8



FIG. 9



FIG. 12



FIG. 13



FIG. 14



FIG. 18




FIG. 19



FIG. 20



Figures 1a - 9a

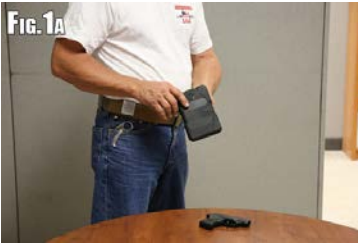

ABDOSMART380

Contains FCC ID: 2AIKAW41503716

Contains FCC ID: 2AIKAC41503716

Contains IC: 21560-W66603716

Contains IC: 21560-C66603716

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this device not expressly approved by EAA Corp. could void the users authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help

This equipment complies with radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.