

MAINTENANCE

1. Do not use abrasive cleaning solvents to clean the headset.
2. Do not allow the headset to touch with any sharp objects as this will cause scratching and damage.
3. Please keep the headset away from high-temperature, dust and humidity.

ADDITIONAL STATEMENTS

1. The headset is compliant with the specified bluetooth version. It does not guarantee compatibility of all functions on every bluetooth enabled device. Please check your device's user manual for compatibility and functionality.
2. The headset will beep when operates successfully but this maybe too low to hear.
3. Manufacturer reserves the right of final explanation of all the above statements.

Fozento

Bluetooth Headset

FT1

www.fozento.com

TECHNICAL SPECIFICATIONS

BLUETOOTH VERSION:	Bluetooth 4.2
PLAYBACK TIME:	5-6 hours
CHARGING TIME:	1.5 hours
BATTERY:	3.7V/80mAh
WIRELESS DISTANCE:	10 meters/360*
Frequency response	2.402~2.480GHZ
SPEAKER DIAMETER	8mm


*The time mentioned above may vary due to user operation mode and device settings.

WARNING

This product contains magnetic material. Contact your physician if you have questions on whether this might affect the operation of your implantable medical device

PACKAGE INCLUSIONS

- 1X FozentoFt1 Headset
- 3X Silicon Earbud Tips
- 1X Charging Cable
- 1X Carrying Pouch
- 1X Manual

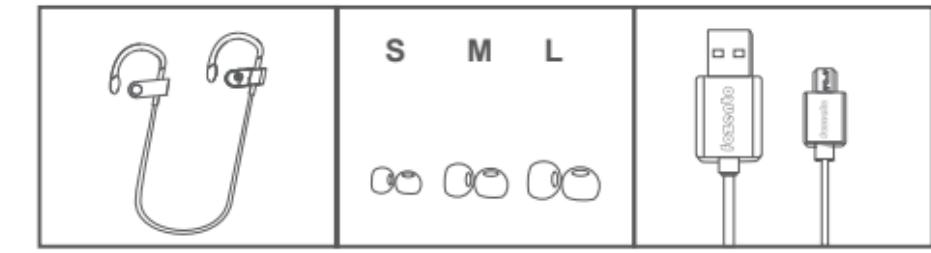

MUSIC CONTROL

Press and hold the volume +or - repeatedly to switch the next or previous track.

TAKING / REJECTING CALLS

Answering:

Press the Multifunction button to take a call.

Rejecting:

Press and hold the Multifunction button to reject a call.

Redialing:

Double click the Multifunction button to redial a latest number in your call logs.

Bluetooth headset should be used with compatible devices which support bluetooth technology. Headset allows you to make calls and enjoy the music streaming at any time freely. Please read this user manual carefully before using headset, also read your device's user manual regarding the bluetooth function. Pay attention to important safety and maintenance information.

Please keep the headset away from children.

AUTOMATIC RECONNECTION


Once the headset and the pairing device have been paired together, they will automatically be reconnected if they are within distance of each other and the pairing device's Bluetooth function is turned on.

CHARGING

For first time use, charge the battery until it is full. To charge, open the headset's USB jack and plug the charging cable into the charging port. Red light means it is charging, blue light means the battery has been fully charged.

Overview

- (1) Volume + / next track;
- (2) Volume - / previous track;
- (3) flexible ear hook;
- (4) led indicator;
- (5) multifunction button;
- (6) USB input port;
- (7) Microphone.

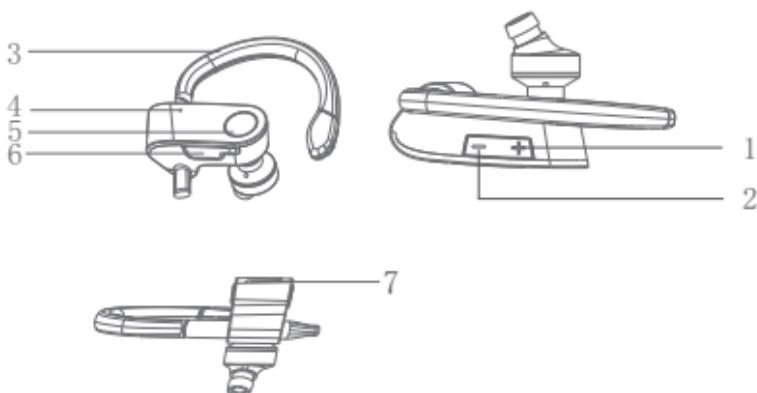

TURNING ON

Press and hold the Multifunction button of the headset for about 3 seconds, then the blue light will flash

PAIRING

Place the headset and the pairing device within 3 feet of each other.

Press and hold the Multifunction button for 5 seconds.

The red and blue light will flash, signaling that it is in pairing mode.

Activate your pairing device's Bluetooth feature. Search for "FozentoFt1", and select it to connect.

If a password is requested, key in "0000".

VOLUME CONTROL

Press the volume + or - repeatedly to adjust the volume.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: **2ALPG-FT1**