



IMMOTOR


IMMOTOR GO Quick Start Guide

Immotor MKT / CN Team 2017.3

IMMOTOR GO

Quick Start Guide——Download APP, get your ID linked with your GO

- 1 Download Immotor APP , get your ID linked with your GO through bluetooth , and you can use your phone unlock your GO.

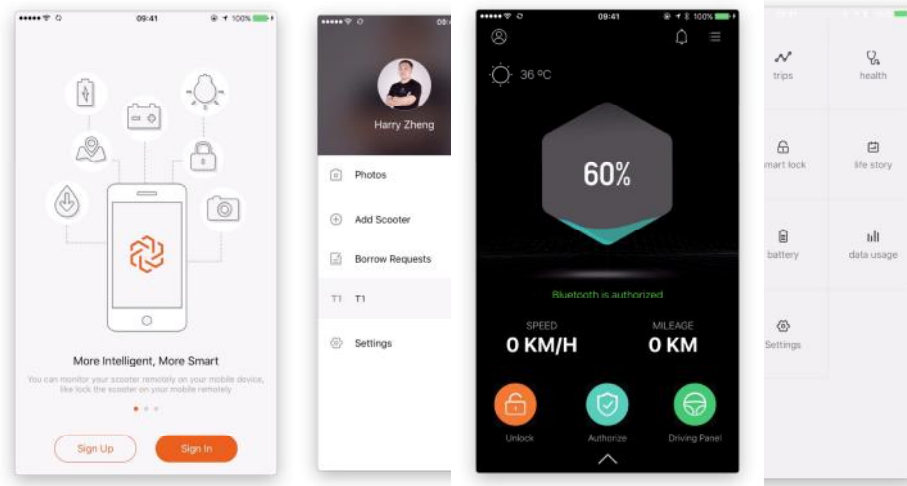

- Step 1 Scan QR code , download Immotor APP
- Step 2 Register your ID and connect it to the GO
- Step 3 Use your phone unlock your GO

* Please find the detail instruction on www.immotor.com




IMMOTOR GO

Quick Start Guide——Unfold your IMMOTOR GO 1/2

- 2 Unfold your IMMOTOR GO

*Refer to the video instruction on www.immotor.com

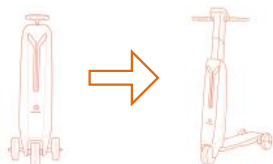

Step 1



- Pull up the portable lever
Put your finger into the back hole to push up the portable lever

Step 2



- Put down the pedal
Pull the button on the tail of the pedal, kick back the rear wheels
Put down the pedal, buckle the pedal.




IMMOTOR GO

Quick Start Guide——Unfold your IMMOTOR GO 2/2

- 2 Unfold your IMMOTOR GO

*Refer to the video instruction on www.immotor.com

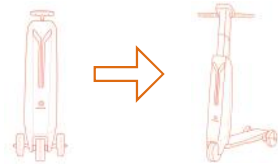

Step 3



- Pull up the main part
Press the internal button under the portable lever to pull up the main part



Step 4



- Turn up the handles
Press the button to turn the handles up

IMMOTOR GO


Quick Start Guide——Electricity checking and preparaiton

- 3 Open the battery compartment , put in your super batteries, check the electricity

Super Battery



Charger

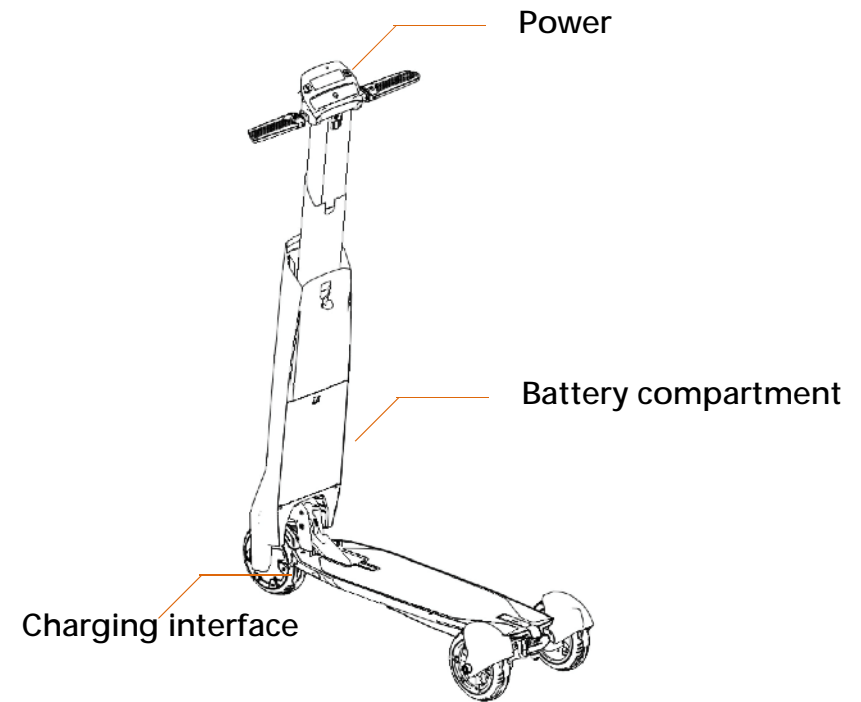

IMMOTOR GO

Quick Start Guide——Riding and Screen information

- 4 Power on your Immotor GO , start riding

3) USB Port

4) Brake

5) Speed mode / Photo action
(Long pull / Shortpull)

6) Horn



2) Accelerator

1) Power Button

8) Cruise control

7) Light (2 brightness grade)

10) GPS Signal 9) Missed call 8) Unread message 7) Cruise control 6) Headlight 5) Error

12) Time

13) Battery status

14) Remaining range


15) Speedmeter

1) Lock / unlock

2) Speed mode

3) Odometers


4) Mileage

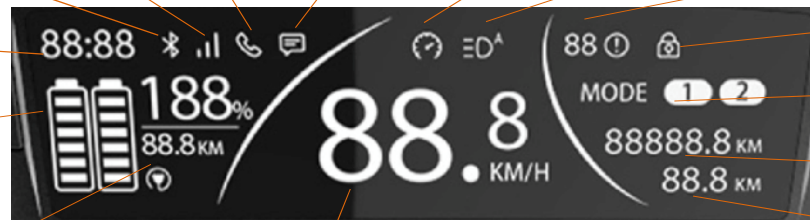

IMMOTOR GO

Quick Start Guide——Fold your IMMOTOR GO 1/2

- 5 Fold your IMMOTOR GO

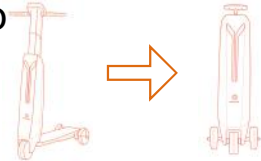


Step 1



- Fold the handles
Press the button to turn the handle down

Step 2

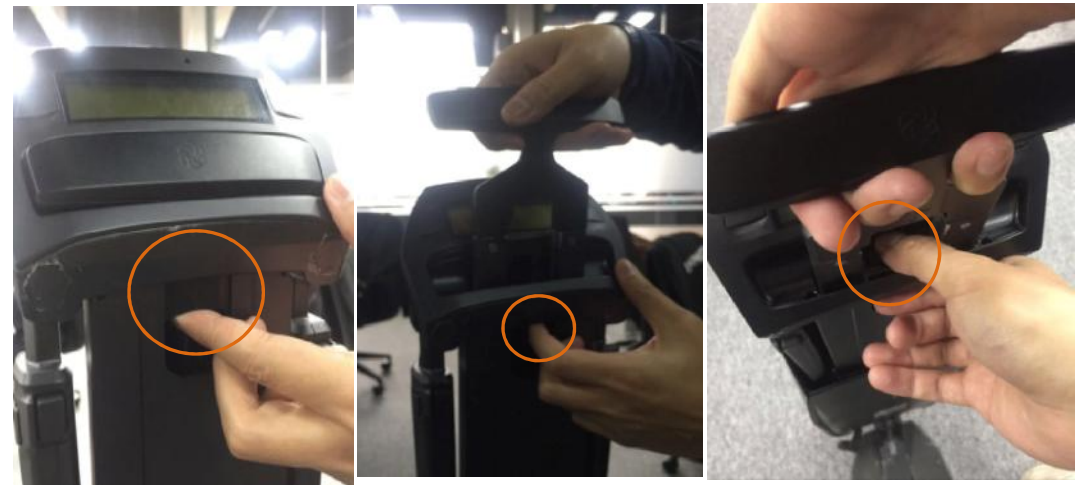


- Fold the main part
Put your finger into the back hole and push up the portable lever
Press the button below the portable lever and pull down the main part



IMMOTOR GO

Quick Start Guide——Fold your IMMOTOR GO 2/2

- 5 Fold your IMMOTOR GO

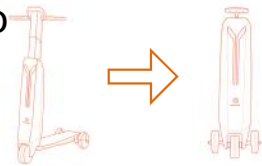

Step 3



- Fold the pedal
Step down the button below the main part, put down the main part to the pedal
Buckle the pedal, and fastening the main part

Step 4



- Fold the rear wheels
Lift up the main part and pedal
Kick back the rear wheels, pull the buckle, fasten the rear wheels, completely fold the GO



IMMOTOR GO

Product information & Support

Spec

·Item	·Specification
·Motor	·Direct Drive Gearless Hub , 350W , 48V
·Wheel	·Front wheel-6.5 in airless tire , Rear-6 in airless tire
·Suspension	·Dual rear and dual front wheel independent heavy duty springs
·Load	·300 lbs / 150KG
·Body Composition	·Aluminum alloy , High Impact Plastic , Carbon Fiber
·Display	·LCD Daybrite
·Head/Brake Light	·Hi-brite LED
·Super Battery	·Lithium Ion with smart power and battery management system
·Bluetooth	·BT2.1+EDR/BLE4.1
·Data/GPS	·GSM / WCDMA3G / Sim808
·Speed	·Max speed 25KM/h , Minimum speed 1KM/h
·Hill Climbing	·Up to 35% (20 degree slope)
·Ride range	·Up to 30KM/2 batteries , 15KM/1battery
·Recharge time	·2-3hours

Support

·Please read the "Immotor GO User Manual" carefully before using it. You can download the file from support.immotor.com/cn/manuals

· Visit www.immotor.com/cn/FAQ for technical support of Immotor GO

· Find more information via the APP "Immotor GO Help" menu , or call USA: *** - **** - ***

Comply with local legal provisions

The intelligent personal vehicle Immotor GO can be used as a smart personal transportation, but can not replace the existing means of transport, please do not ride on the public transport road Immotor GO intelligent personal vehicle. In some countries and regions, such vehicles are prohibited in the public transport on the road under the specific circumstances, please check the local information, and you can also get these information from IMMOTOR authorized dealer or after-sales department.

Some features are not for all versions, and are not applicable to all areas.

TM and IMMOTOR.LLC reserves all the rights.

Designed by IMMOTOR in California. Printed in China.



IMMOTOR GO

Warranty

Product warranty period

- Immotor GO provide free repair, replacement and return services for the products that meet the warranty conditions (only available in ***).
 - The number of the warranty card must be the same as the serial number. The warranty date of the product is based on the date of purchase receipt recording and the date of activation of the product. Otherwise the date of manufacture as the warranty start date.
 - Customers can choose to repair, replace or return goods within 15 days from the date of sale. (Non-product performance failure or defect reasons returned by the customer bear the return shipping fee)
 - IMMOTOR provide free repair service of main part and accessories for the performance problems within the warranty period. IMMOTOR is not guaranteed for normal wear and tear and is not guaranteed for damage caused by accident or abuse.
- You can obtain the full terms at www.immotor.com/cn/legal/warranty.

During the warranty period, you can not get free service under the following conditions, please note:

- The cumulative mileage of the vehicle records exceeds 2000KM.
- Any damage caused by the wrong way of installation or use.
- The product serial number is deleted or changed.
- The product serial number on the product warranty card does not match the body.
- The product is disassembled or repaired by an unauthorized store or person.
- Normal nature ware and tear.
- Overload, improper use (up and down stairs, extreme sports, etc.) caused damage.
- Fire, liquid immersion, freezing, earthquakes and other non-normal storage conditions or force majeure caused damage.
- Other non-product design, technology, manufacturing, quality and other problems caused damage.

* The right of this Warranty content is owned by IMMOTOR.LLC. All rights reserved

Parts	Warranty period	Remarks
Immotor GO	1 Year	Including handles, pedal.(Except tires)
Super battery	1 Year	Except improper use.
Tires	3 Months	(Within 2000 KM) Except damages on purpose.
Phone holder	3 Months	Except damages on purpose.



IMMOTOR GO

Warranty Card

Product name	
Trademark	
Serial number	
Origin	
User name	
Address	
Mail code	
Phone number	
Sales store	
Address	
Receipt number	
Sales date	
Service Centre	
Address	
Mail code	
Phone number	

Serial number

After-sale service record

Service date	Fault / Reason / Result	Replaced Part	Repair date	Service center name / signature

Tag



IMMOTOR Seller seal



IMMOTOR GO

Product information & Size

Product information

·Immotor GO (1)

UPC :

Package Content :

·Super Battery (2)

·AC Charger (1)

·Instruction (1)

·Phone holder (1)

·Protective Sleeve (1)

Size

·Packaged Size : 31.5in * 15.7in * 11.8in

·Product Size : Stand-by- 9.4in * 12.4in * 31.5in

Auto-pilot – 18in * 19.3in * 45in

Ride – 31.9in * 19.3in * 46.4in

·Weight (Packaged) : 17kg



IMMOTOR GO

Quality inspection and Certification

Product quality inspection :



Chinese mainland product quality inspection certification :



Certified by North America:



Certified by Europe:



International General Certification :



Wintest





IMMOTOR



THANK YOU

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.