
Microphone array Power button Volume button Microphone array Home/ SIM card Voice slot secretary Translation Al camera key button Lanyard

Model: PH01 FCC ID: 2ARVJ-PH01

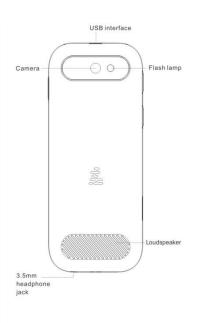

When using the machine for the first time

Power on, Power off and standby

- · Power on : Press and hold the "Power button" until
- Shutdown: Press and hold the "Power button" and then tap the "Close" button on the screen.
- · Standby: Tap the "Power button" while it is in use. the screen is closed, and it enters the standby state.
- · Wake-up: Tap the "Power button" in the standby state, the screen lights up, and it enters the use state.

Connect Network

This device supports three network connection methods and can be used as needed.

- · Wifi · Connect to a wireless hotspot through "Settings - Wifi" in the menu
- We recommends that you use Wifi to connect to the Internet. Wifi traffic is preferred when using Wifi, which can save your 4G traffic.
- · Built-in 4G network : The device has a built-in 4G mobile network that can be purchased in menu global Internet access" and can be used directly or share
- · Expanding 4G network: Inserting a SIM card will switch to an extended 4G network. The flow tariff is based on the tariff stand-ard shown by the network
- When the extended 4G network and the built-in 4G net-work coexist, the extended 4G network is preferentially used.

Voice translation

- Three ways to enter the voice translation function: 1. Default to enter voice translation function after
- 2. The voice translation function can be accessed through the "Voice Translation" in the menu.

3. Press and hold the "translate button" of the machine body for 2 seconds to enter the voice translation function.

Select a language

- · Select your language : Click "Language button" at the bottom of the screen. A list of languages will pop up. Click the language you want
- · Select the language of the destination country: Click the "Language button" at the top of the screen, A list of languages will pop up. Click to select the language of the destination countrby.

Translation

- · Translate your language to the language of the destination country: Press and hold the "DOWN TRANSLATION KEY" to speak your own language .
- · Translate the language of the destination country to your language: Press and hold the "UP TRANSLATION KEY" to speak the language of the destination country

Al Photo translation

Two ways to enter the "photo translation" function: 1. You can access the photo translation function by using the "Photo Translation" in menu

2 Press and hold the "Al camera button" on the camera to enter the photo translation function

Select a language

- · Select the language to photograph: Click "Language button" at the top left of the screen A list of languages will pop up. Click the language you want to select.
- · Select language to be translated: Click the "Language button" at the top right of the screen. A list of languages will pop up. Click the language you want to select.

Translation

Align the text to be translated, click on the "Shutter button" on the screen to take a photo, and automatically translate the content identified in the photo after taking

HOME/voice secretary switch

· Short press is the HOME key, long press for more than 2 seconds is the voice secretary function.

Other functions

For more surprises and other questions, please pay attention to the "JoneR Translator" public number andinteract with customer service

Use careful with the earnhone maybe excessive sound pressure from earphones and headphones can cause hearing loss.

- The device complies with RF specifications when it is used at 5mm distance from your body.
- Risk of explosion if battery is replaced by an incorrect type, dispose of used batteries according to the instructions.
- The product shall only be connected to a USB interface of version USB2.0 EUT Temperature:-10 ℃ ~+40 ℃.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.

Hereby, Beijing Babel Technology Co.,Ltd.
Declares that this Feature phone is in compliance with the essential requirements and other relevant provisions of directive 2014/SPEU and without limitation of use in Europe.

The declaration of conformity may be consult at:

rer: sel Technology Co.,Ltd. toom 409,Block C I-M-WAY,45Cheng fu Rd.,Haidian District,Beijing,China Road 1st, Nanshan District SZ GD. China

Specifications

Appearance

Appearance	Body Size	137.7*56.7*11.1mm
Appearance	Body weight	124g
Main chip	Processor	MTK6739
	Frequency	4 core 1.5GHz
Storage	ROM	32GB
Storage	RAM	3GB
Screen	Screen Size	3.1 inches
	Screen resolution	800*480, 300PPI, Retina screen
	Touch screen	Multi-Touch
Battery	Battery capacity	2000mAh
	Charging current	4.35V/2A
Camera	Camera Resolution	13 Megapixels
Guinora	Flash light	Yes
Network	Network Support	4G mobile network, Wifi, Bluetooth
	Extended SIM Card	Nano-SIM
	Microphones	4Mic array
Others	Loudspeakers	High-fidelity speaker
	Data Interface	Micro USB Type-B

Environmental protection

Names and contents of harmful substances in products

Name	Harmful Substance					
of the	Lead	HG	Cadmium	Hexavalent chromium	Polybrominated biphenyls(PBB)	PBDE
Hosts	×	٧	√	V	V	V
battery	×	٧	√	V	√	V
Cables	×	V	V	V	V	V

This form is based on the provisions of SJ/T 11364.

- √: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.
- The content of the hazardous substance in at least one of the homogeneous materials of the component exceeds the requirements specified in GB/T 26572, and there is currently no mature alternative in the industry, which meets the EU RoHS directive environmental require-



Disclaimer

Please read the product manual carefully before use (for detailed product specification, please visit the website Babel technology http://www.aibabel.com to view or download)

- · This product is not responsible for the translation result
- · Do not put the product in a hot, humid, or flammable gas environment.
- · This product is not waterproof . Do not put the product into water or receive water.
- · Children under 14 years old , please use under adult supervision.

Warranty regulations

- 1. The warranty period for the product is one year. 2. During the warranty period, If you follow the instructions for normal use, you will get free maintenance service When the machine fails (The machine fault identification is determined by the company's aftersales service personnel)
- 3. During the warranty period, the following conditions are not covered by the free warranty:
- 1). The guarantee and valid purchase certificate cannot be provided.
- 2). Malfunction and damage caused by incorrect use and improper repair.
- 3). Failure or damage caused by shipping, handling, or dropping after purchase.
- 4). Failure and damage caused by other unavoidable external factors.
- 5). Damage caused by voltage due to use of a power source other than that specified.
- 4. Do only the above guarantees, and do not make any other explicit or implicit guarantees (including implied guarantees of marketability, rationality and adaptability to a particular application, etc.), whether in contract or in civil negligence. At the top, or in other respects, the company is not responsible for any special, incidental or indirect damages.
- 5. This guarantee is valid only in mainland China.

Certification Warranty Card

product model:	
Product SN:	
IMEI:	
Network license :	

Product name: JoneR Translator

Name :		
Telephone number :		
Address:		
Warranty content :		
After sales :		
Customer signature	:	
	Satisfied	☐ Not satisfied
Warranty content :		
After sales :		
Customer signature	:	
	Satisfied	Not satisfied

Others:

Satisfied	■ Not satisfied		

Get more information

Know more about JoneR Translator, you can:

- · Visit "Beijing Babel Technology" official website: http://www.aibabel.com
- · Subscribe "JoneR Translator" Wechat official account



There you can get:

- · Product Manual
- Common Questions and Answers
- Other value-added services

In the course of using, if you meet any problems, please call: 400-996-6525

This device complies with Part 15 of the FCC Rules. Operation is subject to the foll (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation, changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to opera

Changes or modifications to this unit not expressly approved by the party of could void the user's authority to operate the equipment.

NOTE: The equipment can be been tested and control of the Control