

Function of Remote Control

Appearance and technique of product:

Appearance:



Technique:

color of upper cover:-

color of lower cover:-

technique of upper cover:-

technique of lower cover:-

color of Logo:no logo

Details/Specifications:

Technical parameters:	
material:	-
modulation:	GFSK
frequency range:	2402-2480MHz
working current:	<65mA
sleep current:	<8uA
working temperature:	-10°C - +40°C
quantity of button:	19
quantity of LED front:	/
color of LED front:	red
color of paring LED back:	/
backlight:	yes
color of backlight:	gray
child lock:	/
move and light(sensor):	/
back cover print:	/
steel plate:	/
weight of steel plate:	/
weight of remote w/o batt:	
quantity of battery:	3
type of battery	AAA LR03 1.5V
Version:	
no.& version of hardware:	R6.210.00.787-BB
no.& version of software:	SWR621000787_V101-D2_REMOTE.hex
Test instruction and report:	
test instruction:	see 《Test Instruction 》
test report:	

Function:



Buttons and LEDs	Key value	Specification
KEY1:	anti_snore	Press and release shortly, the base moves to Anti-Snore Position.
KEY2:	lounge	Press and release shortly, the base moves to Lounge Position.
KEY3:	zg	Press and release shortly, the base moves to Zero Gravity Position.
KEY4:	foot up	Push and hold for up, stop immediately when released.
KEY5:	foot down	Push and hold for down, stop immediately when released.
KEY6:	flat	Press and release shortly, the base moves to Flat Position
KEY7:	head down	Push and hold for down, stop immediately when released.
KEY8:	head up	Push and hold for up, stop immediately when released.
KEY9:	lumbar up	Push and hold for up, stop immediately when release.
KEY10:	lumbar down	Push and hold for down, stop immediately when release.
KEY11:	wave1	Press and release shortly,change to massage wave1 mode.
KEY12:	wave2	Press and release shortly,change to massage wave2 mode.
KEY13:	wave3	Press and release shortly,change to massage wave3 mode.
KEY14:	massage foot up	Press and release shortly, increase massage foot intensity level.
KEY15:	massage foot down	Press and release shortly, decrease massage foot intensity level.
KEY16:	stop	Press and release shortly, the base will stop massage.
KEY17:	massage head down	Press and release shortly, decrease massage head intensity level.
KEY18:	massage head up	Press and release shortly, increase massage head intensity level.
KEY19:	ubl	Switch the color of the RGB lamp, click the cycle to switch, and press 2.5s to close it directly(Fit CB.34.33 series control box);

PAIR:	flat + stop	1.AC power cycle, LED turns into blue stay in 20s.; 2.Press and hold "Flat" + "Stop" button for 4 sec, backlight of remote flashes and begins pairing; 3.*If succeeds, the LED turns from blue to green within 20s, the backlight of remote stops flashing; *If fails, the LED turns from blue to green exceeds 20s, the backlight of remote still flashes, then you need to repeat steps 1-3;
SET ZG:	flat + zg	Press and hold on for 5s, customize the current position to the ZG position.
SET LOUNGE:	flat + lounge	Press and hold on for 5s, customize the current position to the lounge position.
MEMORY RESET:	lounge + zg	Press and hold on for 2.5s, lounge position and ZeroGravity position will be restored to the factory presets.
LED1:		When the pair code, set or restore the memory position, corresponding flashing; Other functions light up after pressing the button;

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

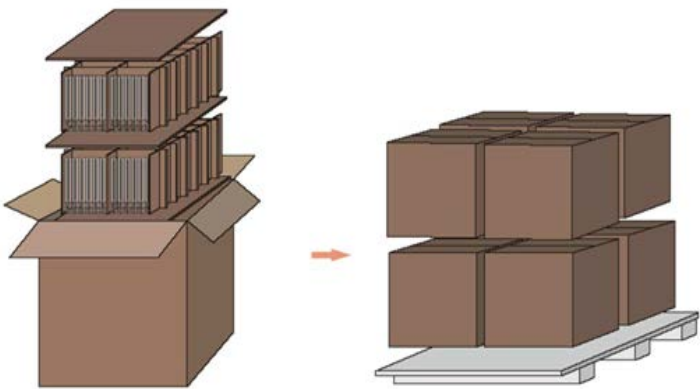
ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

Packaging:

Material and picture of package:

bubble bag	
box	

Label:	Certification: 1.FCC: 2.IC:
---------------	--

Change record:

Date	remark
2020/2/1	the first version, Jarek;
2020/4/10	Second edition, updated with UBL and pairing descriptions,jarek;
2020/4/14	Adjust key function description(flat,ubl,pair,memory reset),jarek;

Made by:

Checked by:

Confirmed by:

