

Appendix A2: Occupied channel bandwidth

Test Result

TestMode	Antenna	Frequency[MHz]	OCB [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5180	16.783	5171.4885	5188.2717	---	---
11A	Ant2	5180	16.583	5171.6883	5188.2717	---	---
11A	Ant1	5200	16.743	5191.5285	5208.2717	---	---
11A	Ant2	5200	17.063	5191.4885	5208.5514	---	---
11A	Ant1	5240	16.743	5231.4486	5248.1918	---	---
11A	Ant2	5240	16.903	5231.5684	5248.4715	---	---
11A	Ant1	5745	16.863	5736.4486	5753.3117	---	---
11A	Ant2	5745	16.623	5736.6084	5753.2318	---	---
11A	Ant1	5785	16.983	5776.5285	5793.5115	---	---
11A	Ant2	5785	16.703	5776.5285	5793.2318	---	---
11A	Ant1	5825	16.863	5816.4086	5833.2717	---	---
11A	Ant2	5825	16.983	5816.5684	5833.5514	---	---
11N20MIMO	Ant1	5180	17.942	5171.0490	5188.9910	---	---
11N20MIMO	Ant2	5180	17.702	5171.0490	5188.7512	---	---
11N20MIMO	Ant1	5200	17.822	5191.0490	5208.8711	---	---
11N20MIMO	Ant2	5200	17.742	5191.0490	5208.7912	---	---
11N20MIMO	Ant1	5240	17.702	5231.0490	5248.7512	---	---
11N20MIMO	Ant2	5240	17.822	5231.0090	5248.8312	---	---
11N20MIMO	Ant1	5745	17.742	5736.0889	5753.8312	---	---
11N20MIMO	Ant2	5745	17.782	5736.0090	5753.7912	---	---
11N20MIMO	Ant1	5785	17.822	5776.0090	5793.8312	---	---
11N20MIMO	Ant2	5785	17.782	5775.9690	5793.7512	---	---
11N20MIMO	Ant1	5825	17.702	5816.0889	5833.7912	---	---
11N20MIMO	Ant2	5825	17.862	5816.0090	5833.8711	---	---
11N40MIMO	Ant1	5190	36.204	5171.7782	5207.9820	---	---
11N40MIMO	Ant2	5190	36.204	5171.9381	5208.1419	---	---
11N40MIMO	Ant1	5230	35.964	5211.9381	5247.9021	---	---
11N40MIMO	Ant2	5230	36.044	5212.0180	5248.0619	---	---
11N40MIMO	Ant1	5755	35.884	5736.9381	5772.8222	---	---
11N40MIMO	Ant2	5755	35.884	5736.9381	5772.8222	---	---
11N40MIMO	Ant1	5795	36.204	5776.9381	5813.1419	---	---
11N40MIMO	Ant2	5795	35.884	5776.9381	5812.8222	---	---
11AC20MIMO	Ant1	5180	17.822	5171.0090	5188.8312	---	---
11AC20MIMO	Ant2	5180	17.702	5171.0490	5188.7512	---	---
11AC20MIMO	Ant1	5200	17.902	5190.9291	5208.8312	---	---
11AC20MIMO	Ant2	5200	17.742	5191.0490	5208.7912	---	---
11AC20MIMO	Ant1	5240	17.862	5230.9291	5248.7912	---	---
11AC20MIMO	Ant2	5240	17.782	5231.0889	5248.8711	---	---
11AC20MIMO	Ant1	5745	17.702	5736.0490	5753.7512	---	---
11AC20MIMO	Ant2	5745	17.862	5735.9690	5753.8312	---	---
11AC20MIMO	Ant1	5785	17.742	5776.0090	5793.7512	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel:(86)0755-26066440 Email:service@anbotek.com



Hotline
400-003-0500

www.anbotek.com



11AC20MIMO	Ant2	5785	17.742	5776.0090	5793.7512	---	---
11AC20MIMO	Ant1	5825	17.822	5816.0889	5833.9111	---	---
11AC20MIMO	Ant2	5825	17.662	5816.0889	5833.7512	---	---
11AC40MIMO	Ant1	5190	36.364	5171.7782	5208.1419	---	---
11AC40MIMO	Ant2	5190	35.884	5171.9381	5207.8222	---	---
11AC40MIMO	Ant1	5230	36.044	5211.9381	5247.9820	---	---
11AC40MIMO	Ant2	5230	36.124	5211.7782	5247.9021	---	---
11AC40MIMO	Ant1	5755	35.964	5736.9381	5772.9021	---	---
11AC40MIMO	Ant2	5755	36.124	5737.0180	5773.1419	---	---
11AC40MIMO	Ant1	5795	35.884	5776.9381	5812.8222	---	---
11AC40MIMO	Ant2	5795	36.124	5776.9381	5813.0619	---	---
11AC80MIMO	Ant1	5210	76.244	5171.7982	5248.0420	---	---
11AC80MIMO	Ant2	5210	75.764	5171.9580	5247.7223	---	---
11AC80MIMO	Ant1	5775	75.924	5736.7982	5812.7223	---	---
11AC80MIMO	Ant2	5775	75.764	5736.9580	5812.7223	---	---
11AX20MIMO	Ant1	5180	18.821	5170.5694	5189.3906	---	---
11AX20MIMO	Ant2	5180	18.781	5170.6094	5189.3906	---	---
11AX20MIMO	Ant1	5200	18.861	5190.4895	5209.3506	---	---
11AX20MIMO	Ant2	5200	18.861	5190.5295	5209.3906	---	---
11AX20MIMO	Ant1	5240	18.701	5230.5694	5249.2707	---	---
11AX20MIMO	Ant2	5240	18.901	5230.4895	5249.3906	---	---
11AX20MIMO	Ant1	5745	18.861	5735.4496	5754.3107	---	---
11AX20MIMO	Ant2	5745	18.941	5735.4096	5754.3506	---	---
11AX20MIMO	Ant1	5785	18.821	5775.5295	5794.3506	---	---
11AX20MIMO	Ant2	5785	18.821	5775.4895	5794.3107	---	---
11AX20MIMO	Ant1	5825	18.901	5815.4895	5834.3906	---	---
11AX20MIMO	Ant2	5825	18.781	5815.4895	5834.2707	---	---
11AX40MIMO	Ant1	5190	37.642	5171.1389	5208.7812	---	---
11AX40MIMO	Ant2	5190	37.642	5171.0589	5208.7013	---	---
11AX40MIMO	Ant1	5230	37.562	5211.1389	5248.7013	---	---
11AX40MIMO	Ant2	5230	37.562	5211.1389	5248.7013	---	---
11AX40MIMO	Ant1	5755	37.483	5736.1389	5773.6214	---	---
11AX40MIMO	Ant2	5755	37.403	5736.2987	5773.7013	---	---
11AX40MIMO	Ant1	5795	37.722	5776.0589	5813.7812	---	---
11AX40MIMO	Ant2	5795	37.483	5776.1389	5813.6214	---	---
11AX80MIMO	Ant1	5210	77.682	5170.9990	5248.6813	---	---
11AX80MIMO	Ant2	5210	77.522	5171.1588	5248.6813	---	---
11AX80MIMO	Ant1	5775	77.682	5736.1588	5813.8412	---	---
11AX80MIMO	Ant2	5775	77.842	5736.1588	5814.0010	---	---

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel:(86)0755-26066440 Email:service@anbotek.com



Hotline
400-003-0500
www.anbotek.com



Test Graphs

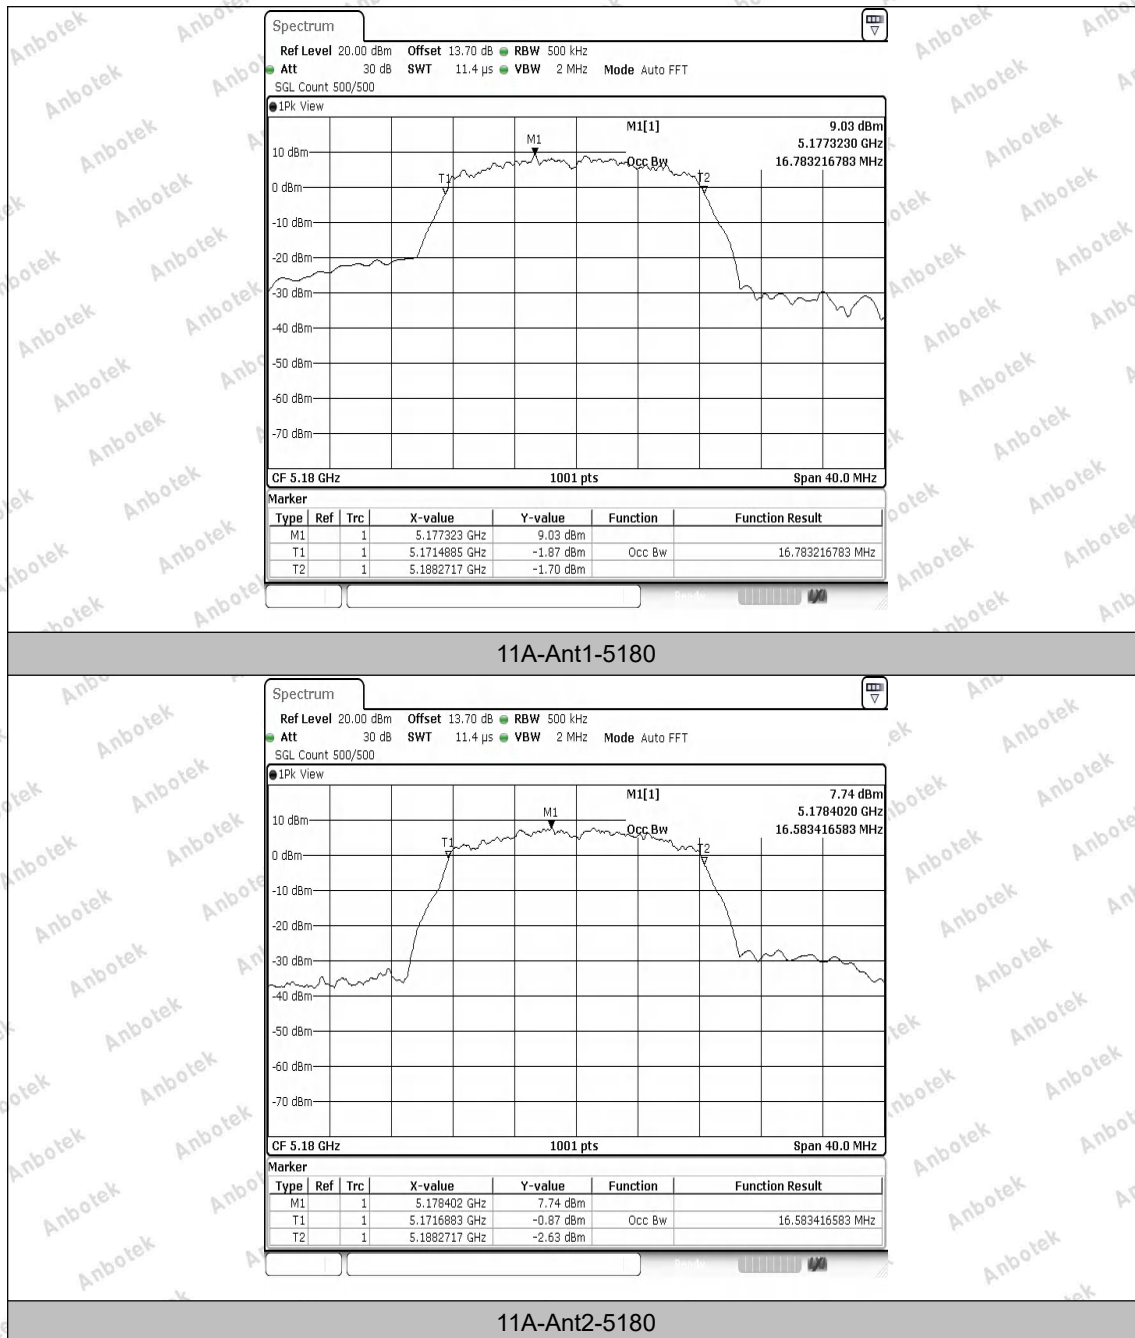


Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahqcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com





Hotline
400-003-0500
www.anbotek.com



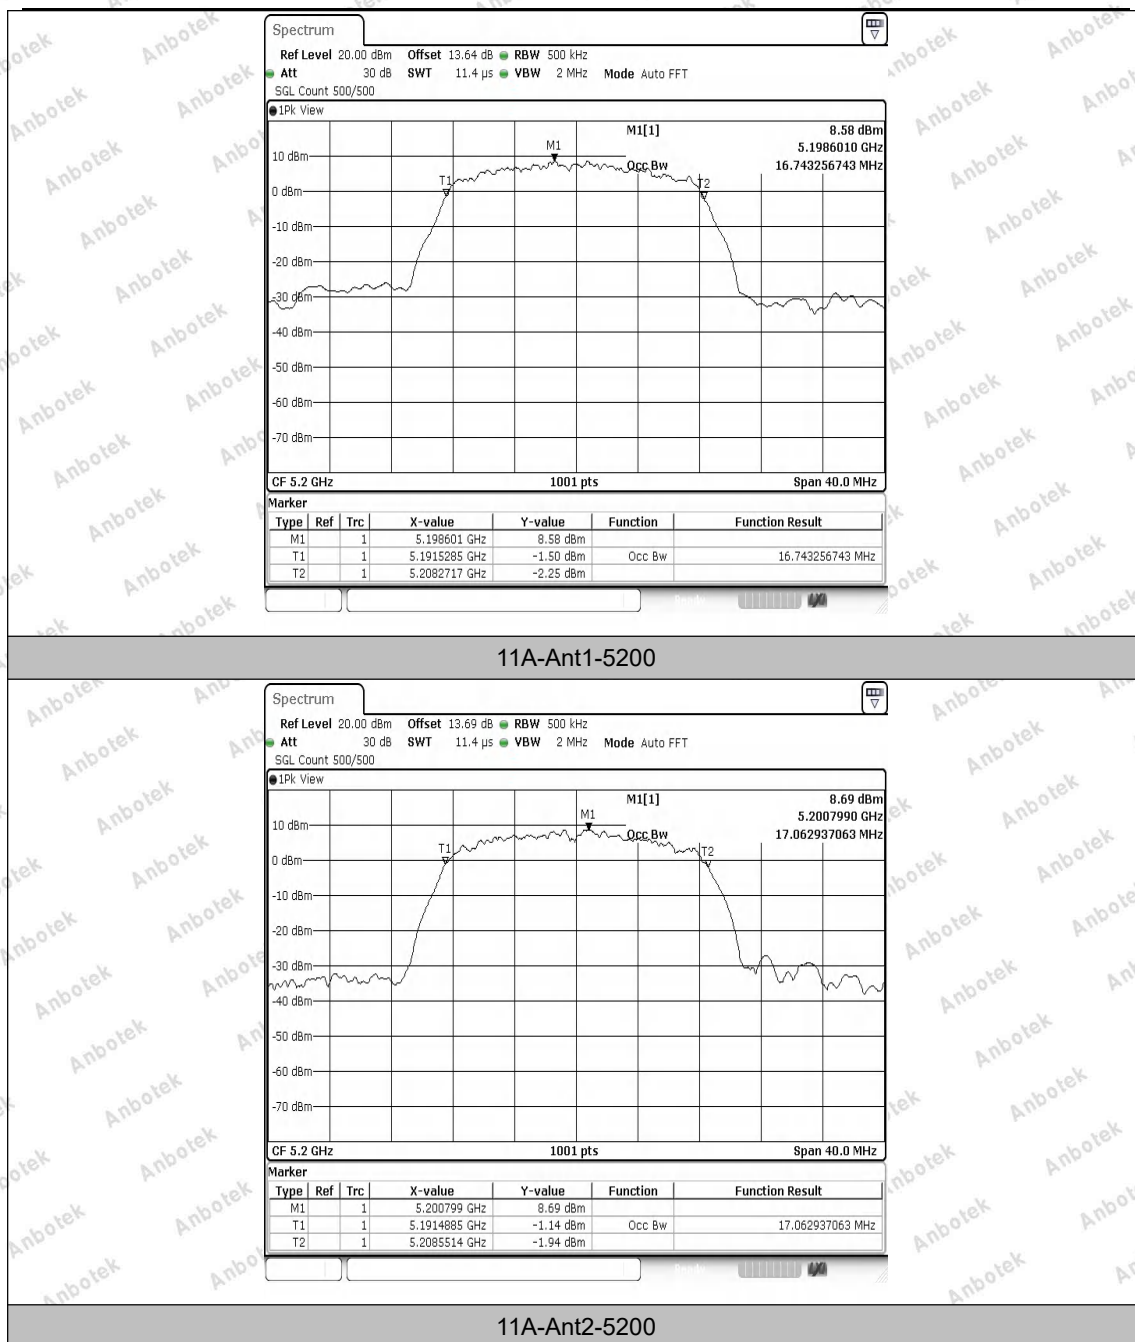


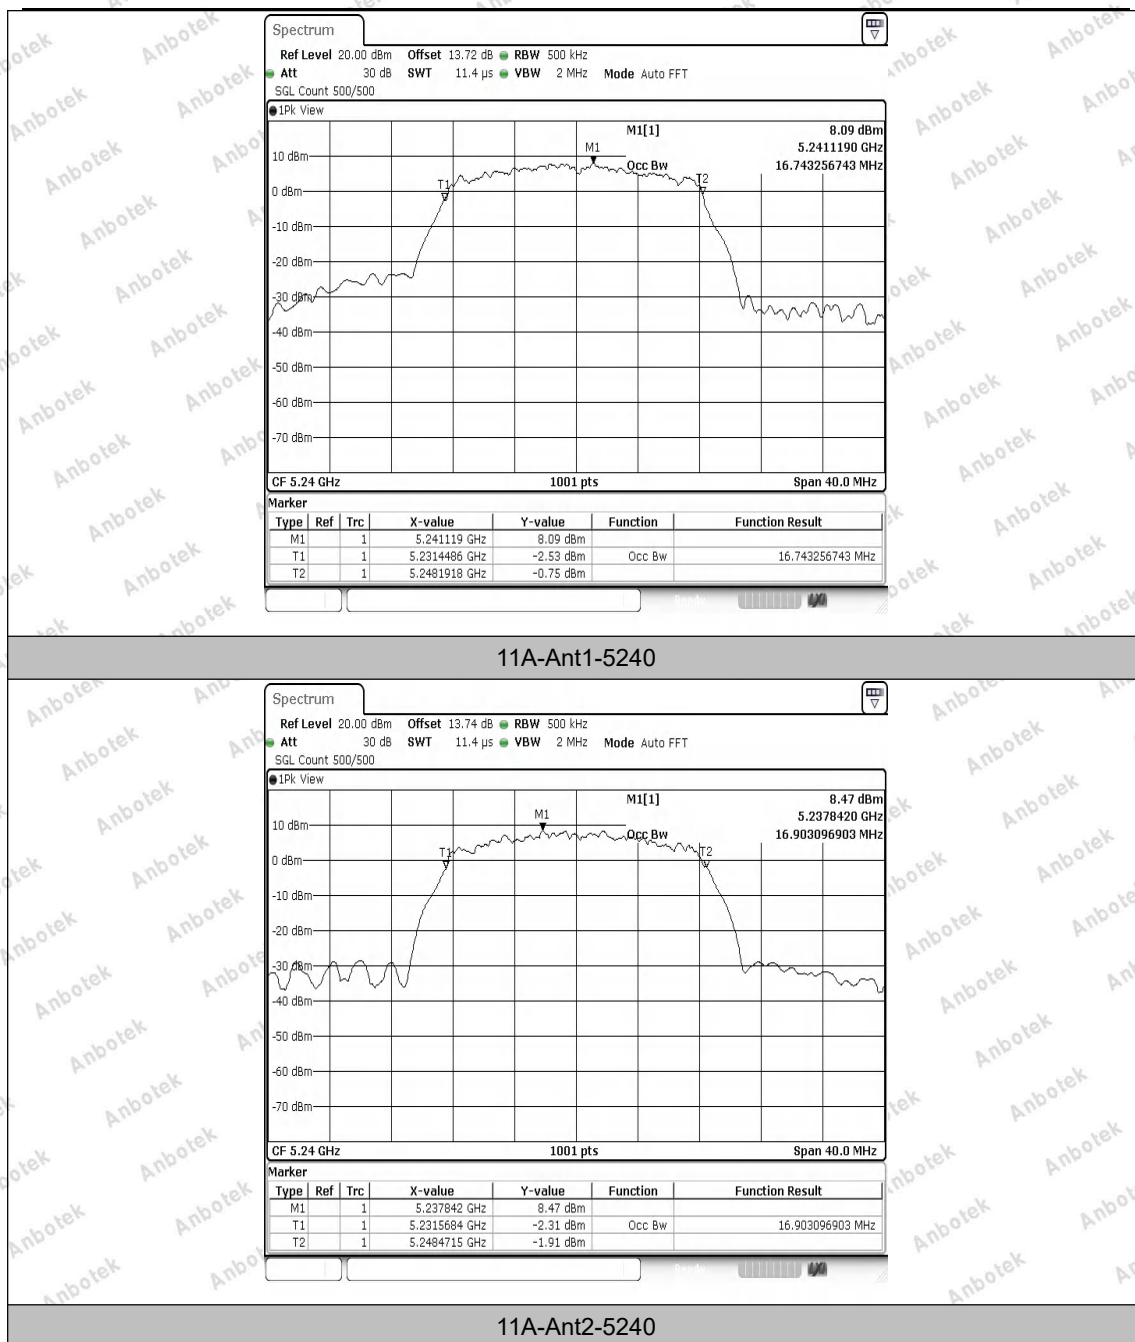

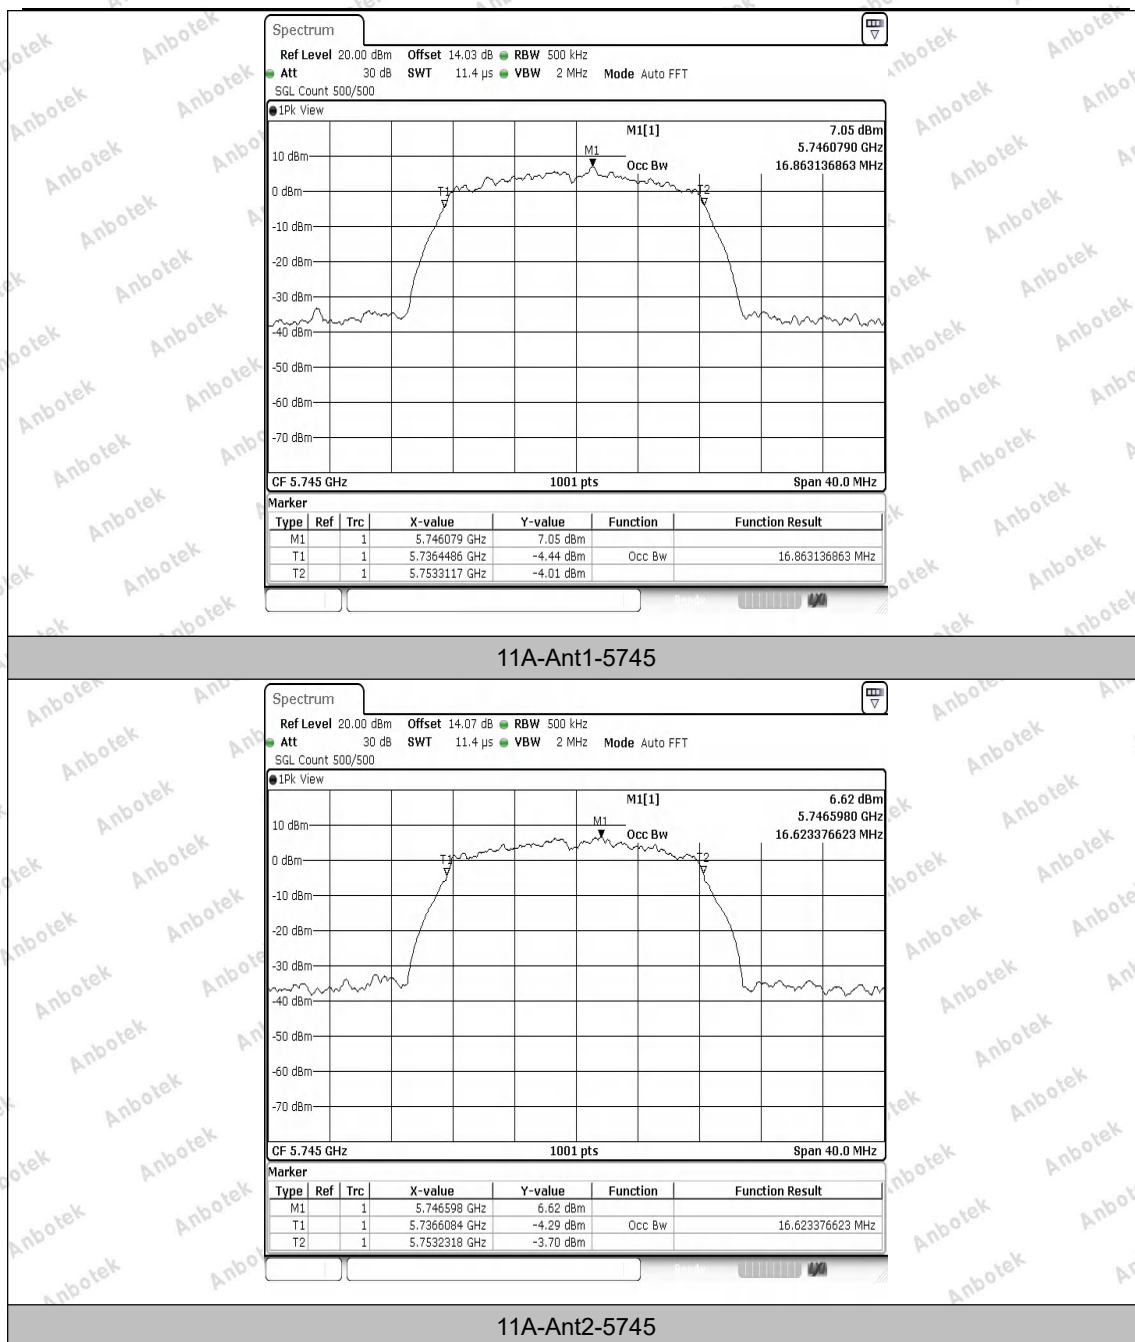

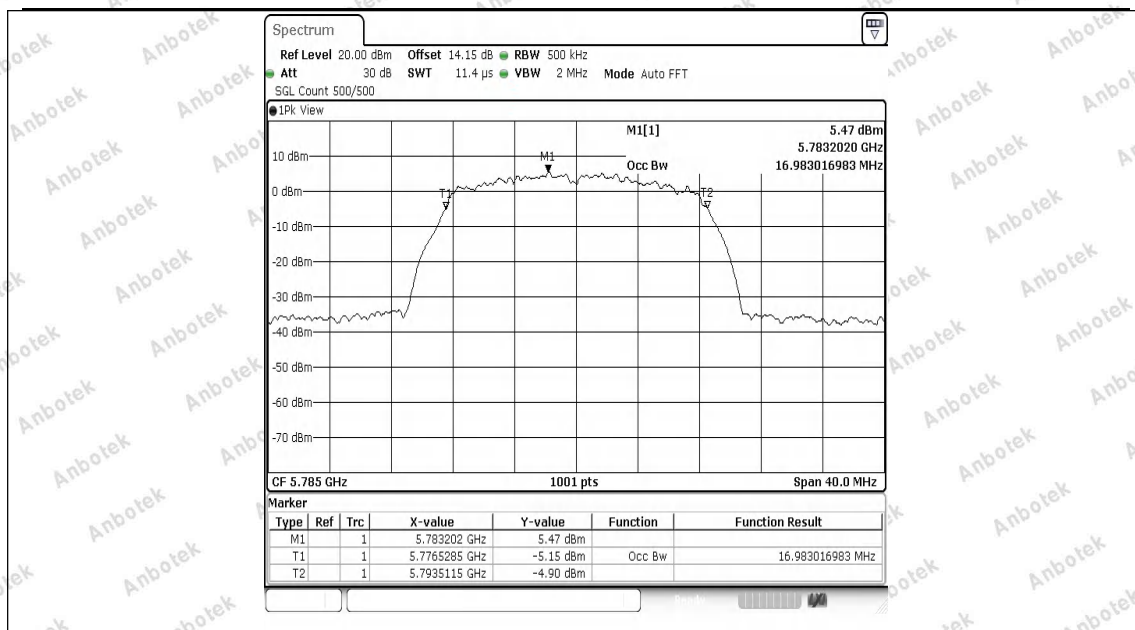


11A-Ant1-5785

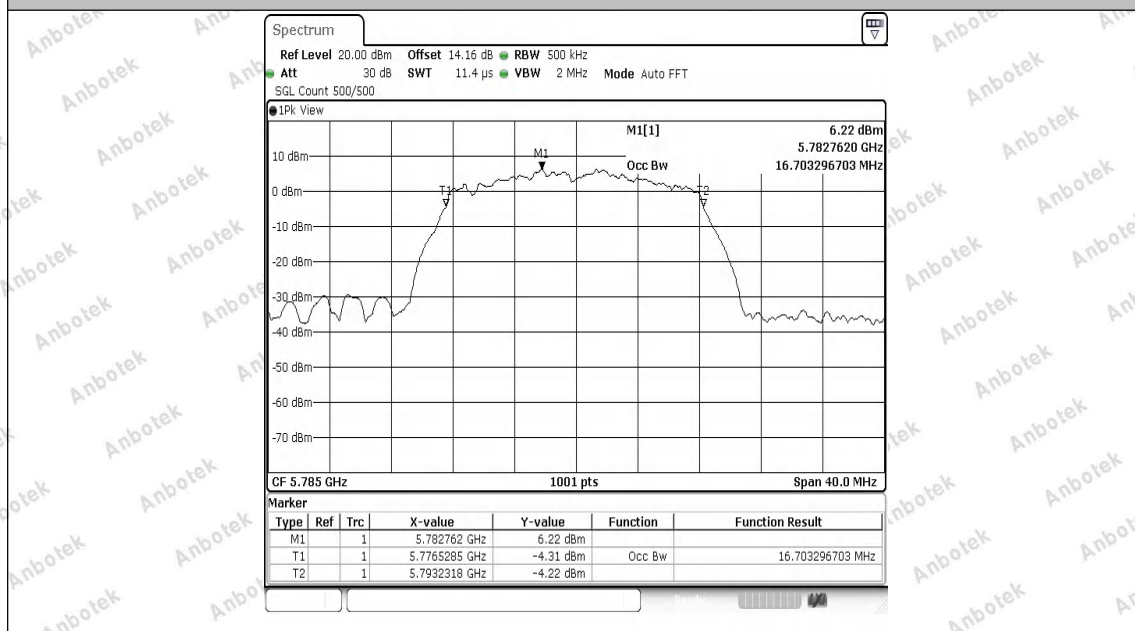


11A-Ant2-5785



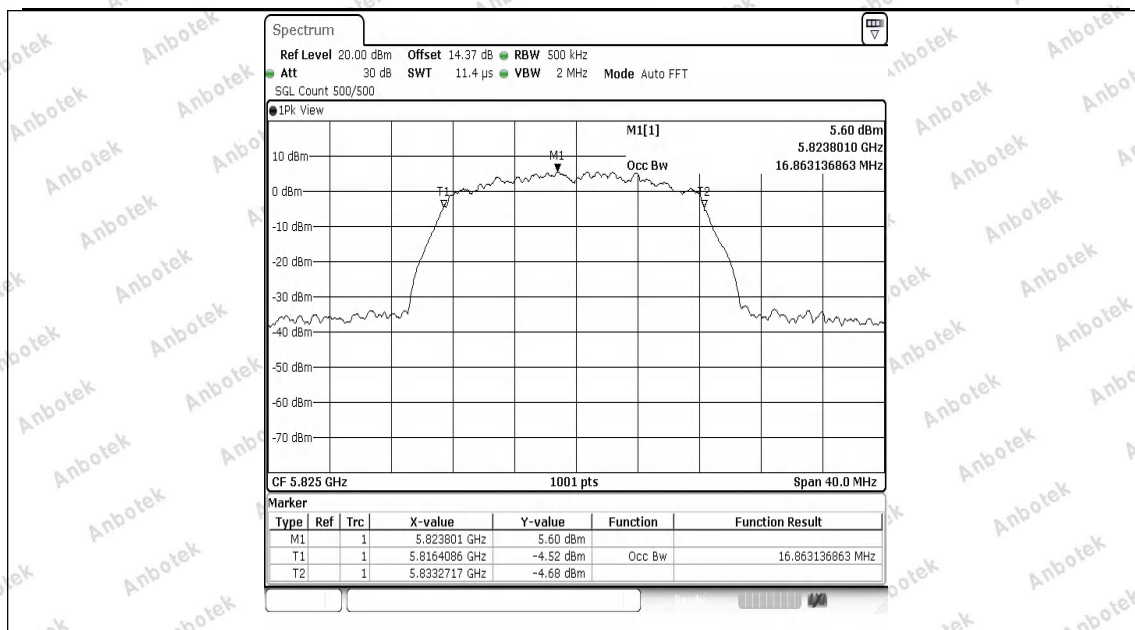



11A-Ant1-5825

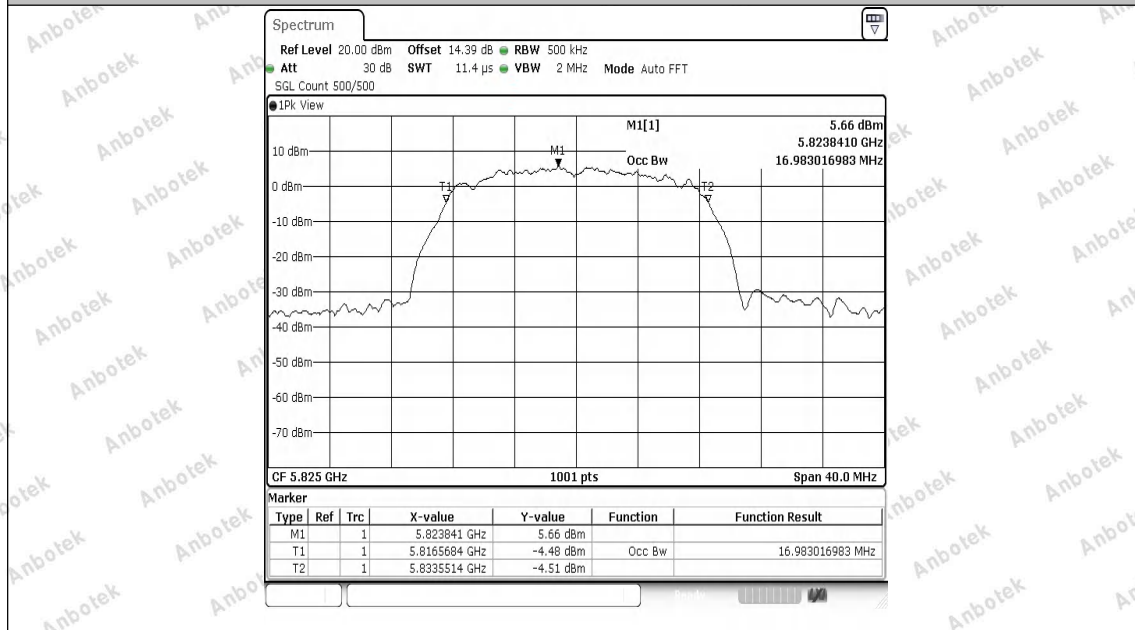

11A-Ant2-5825



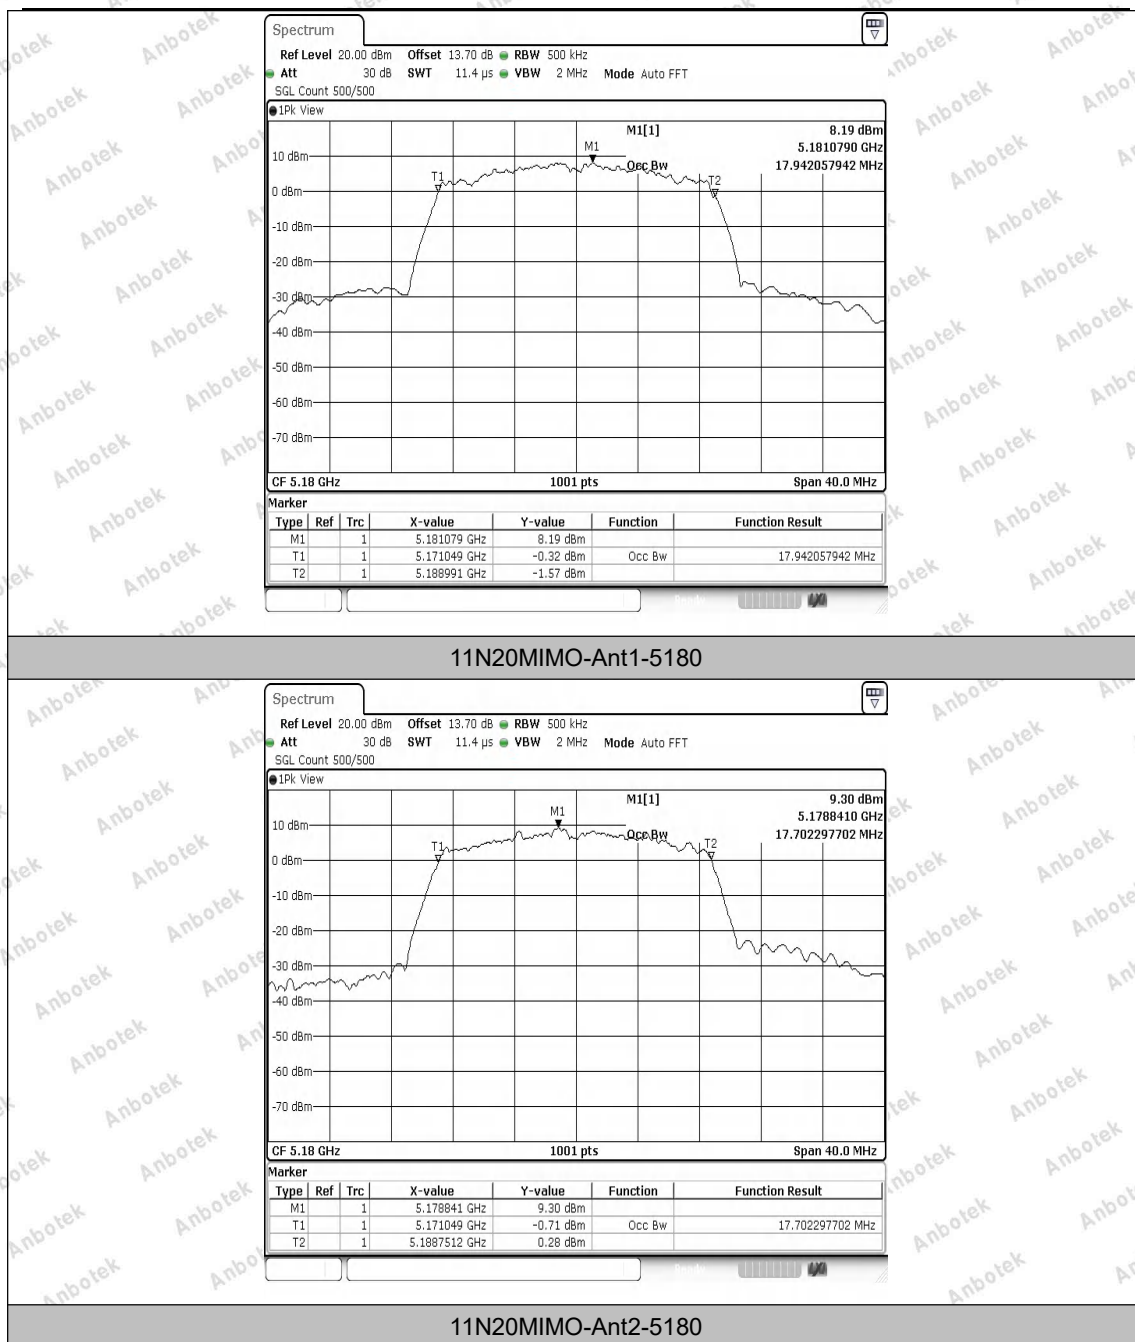

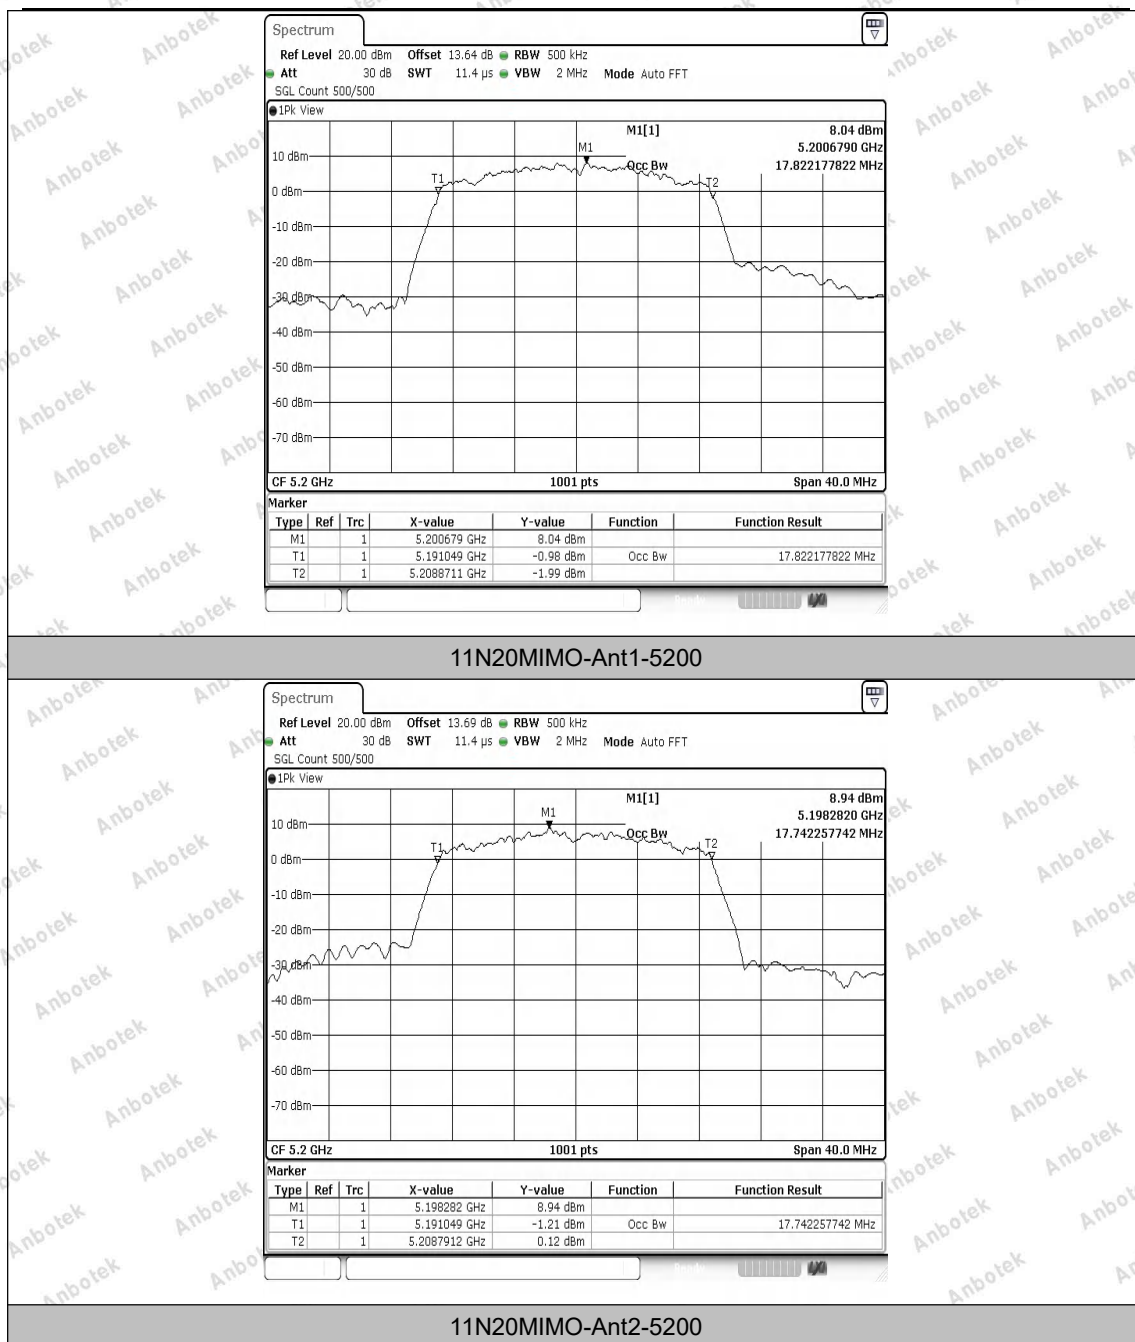


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com



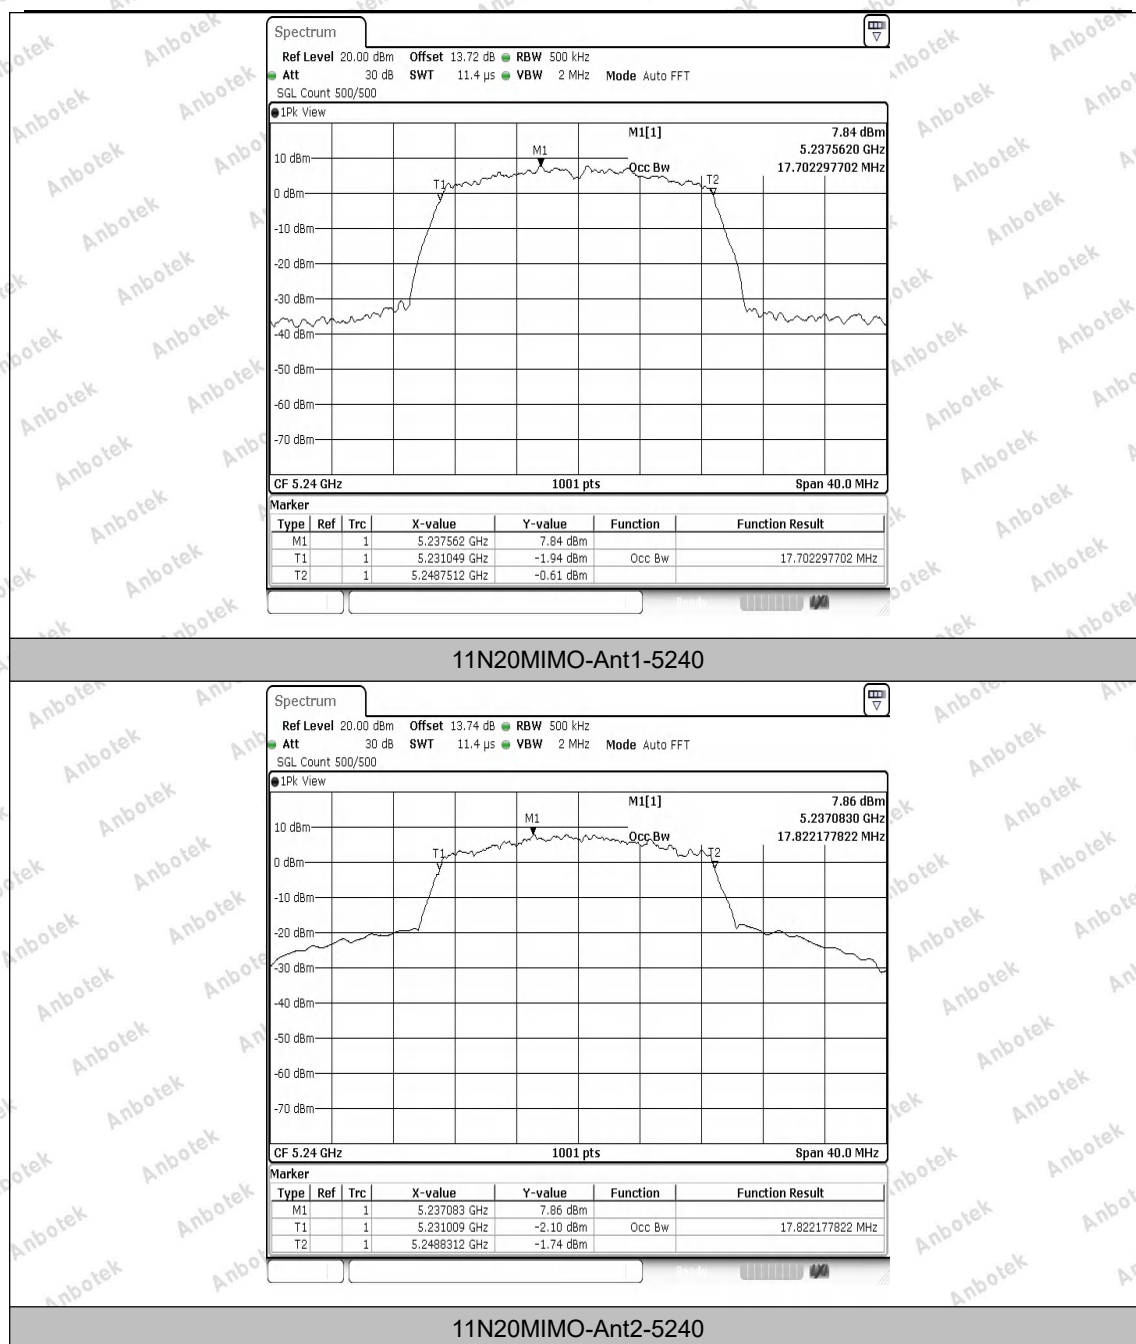


Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com





Hotline
400-003-0500
www.anbotek.com




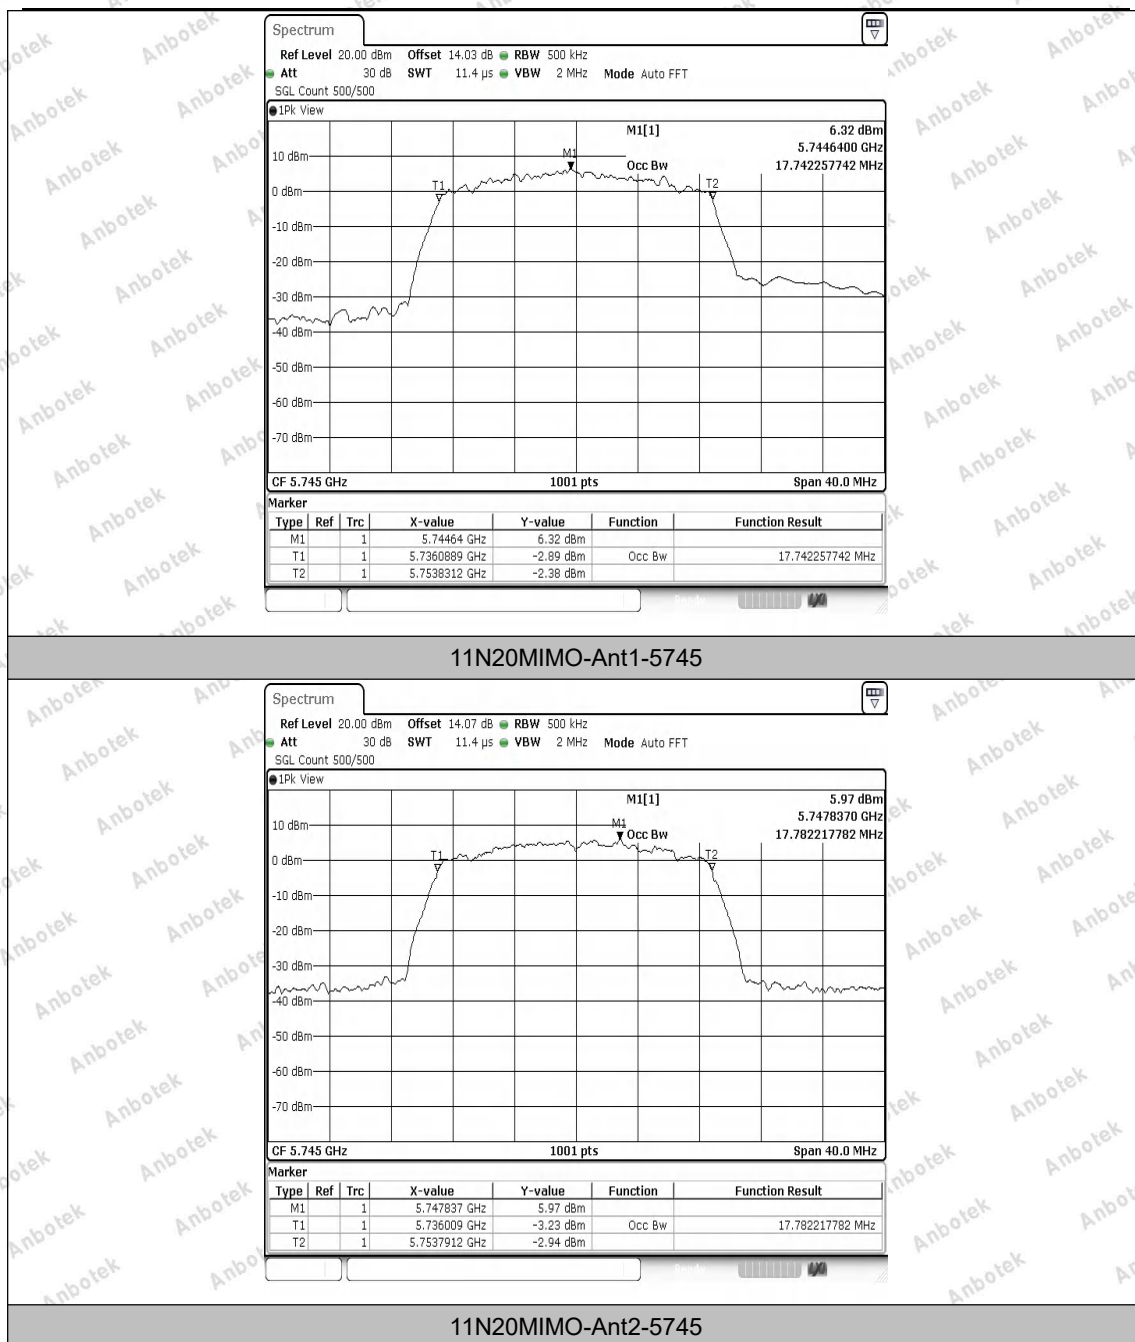


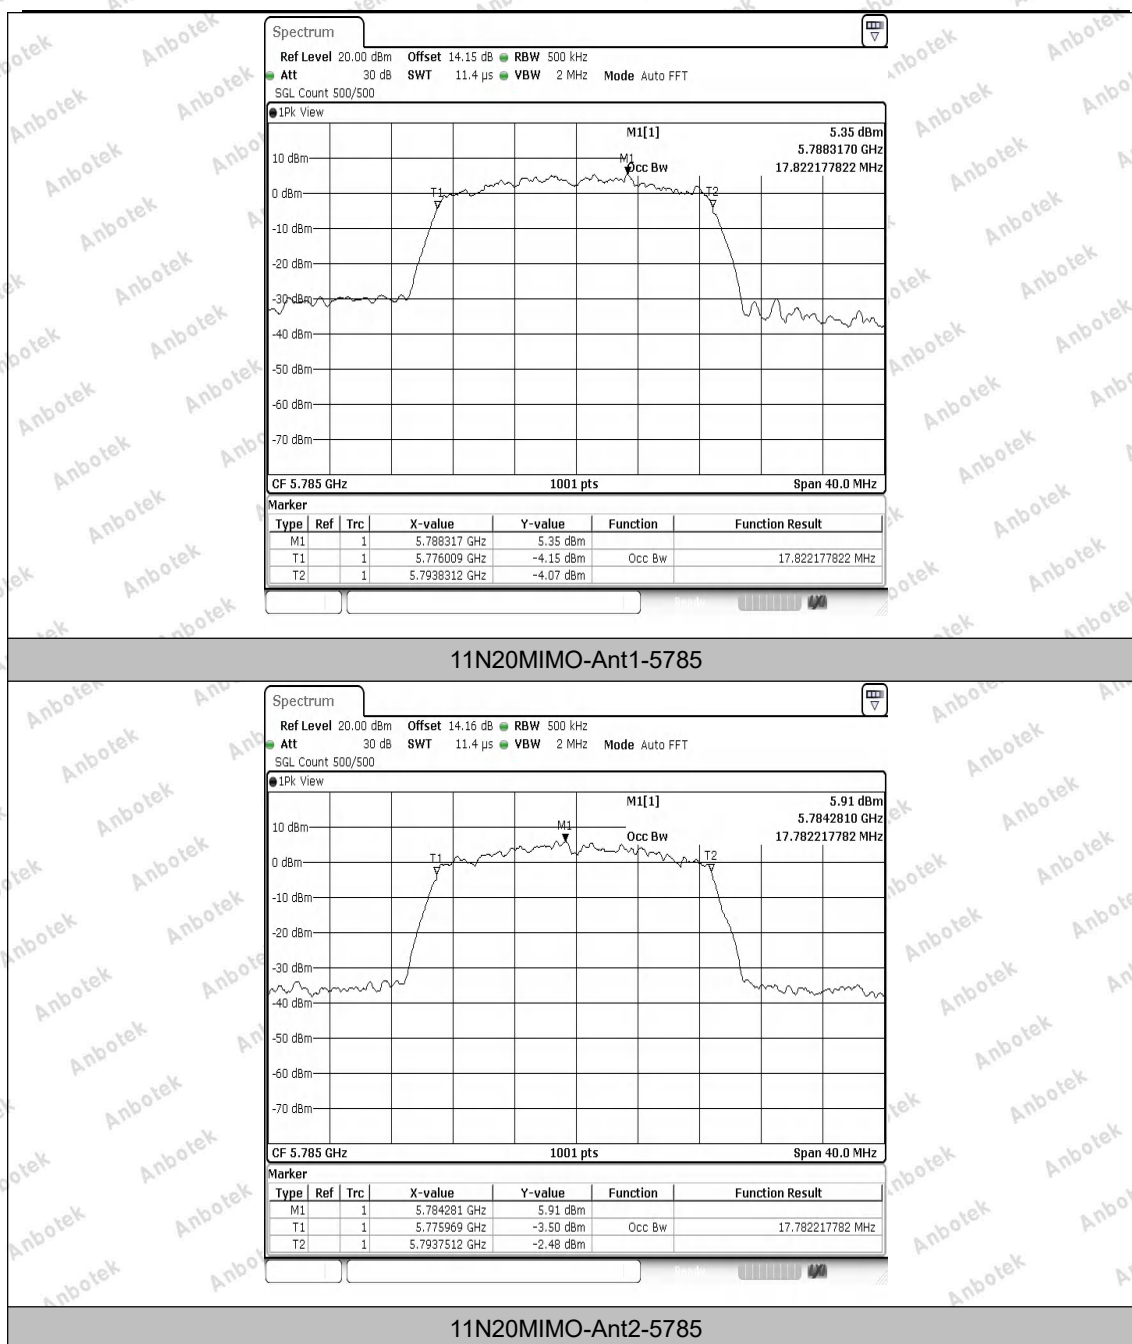

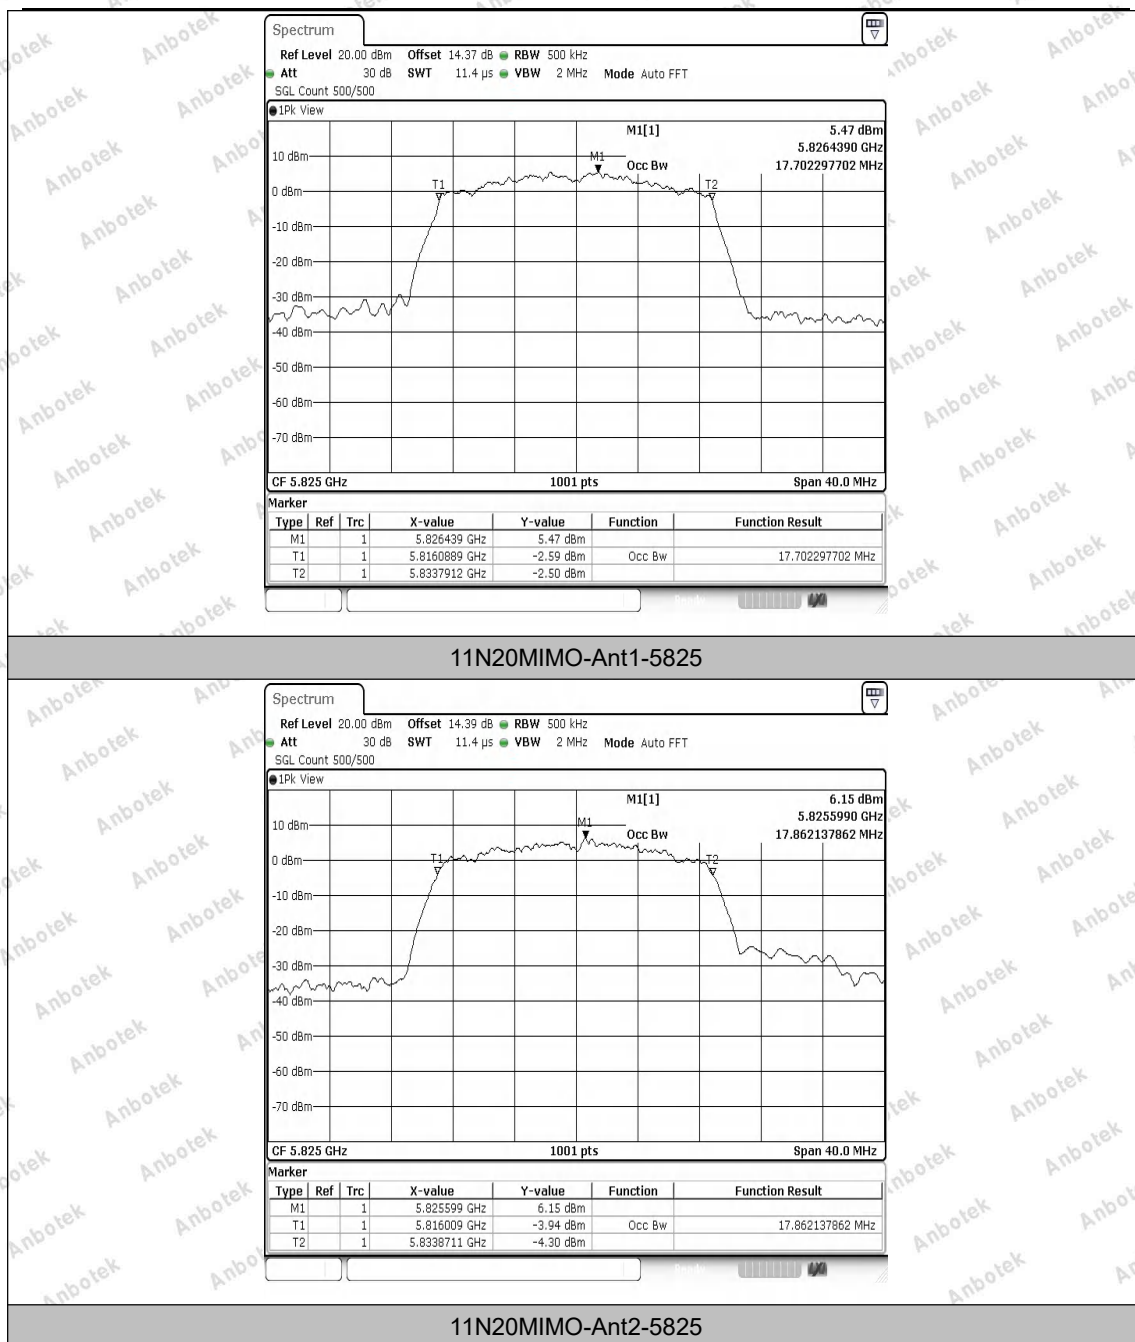

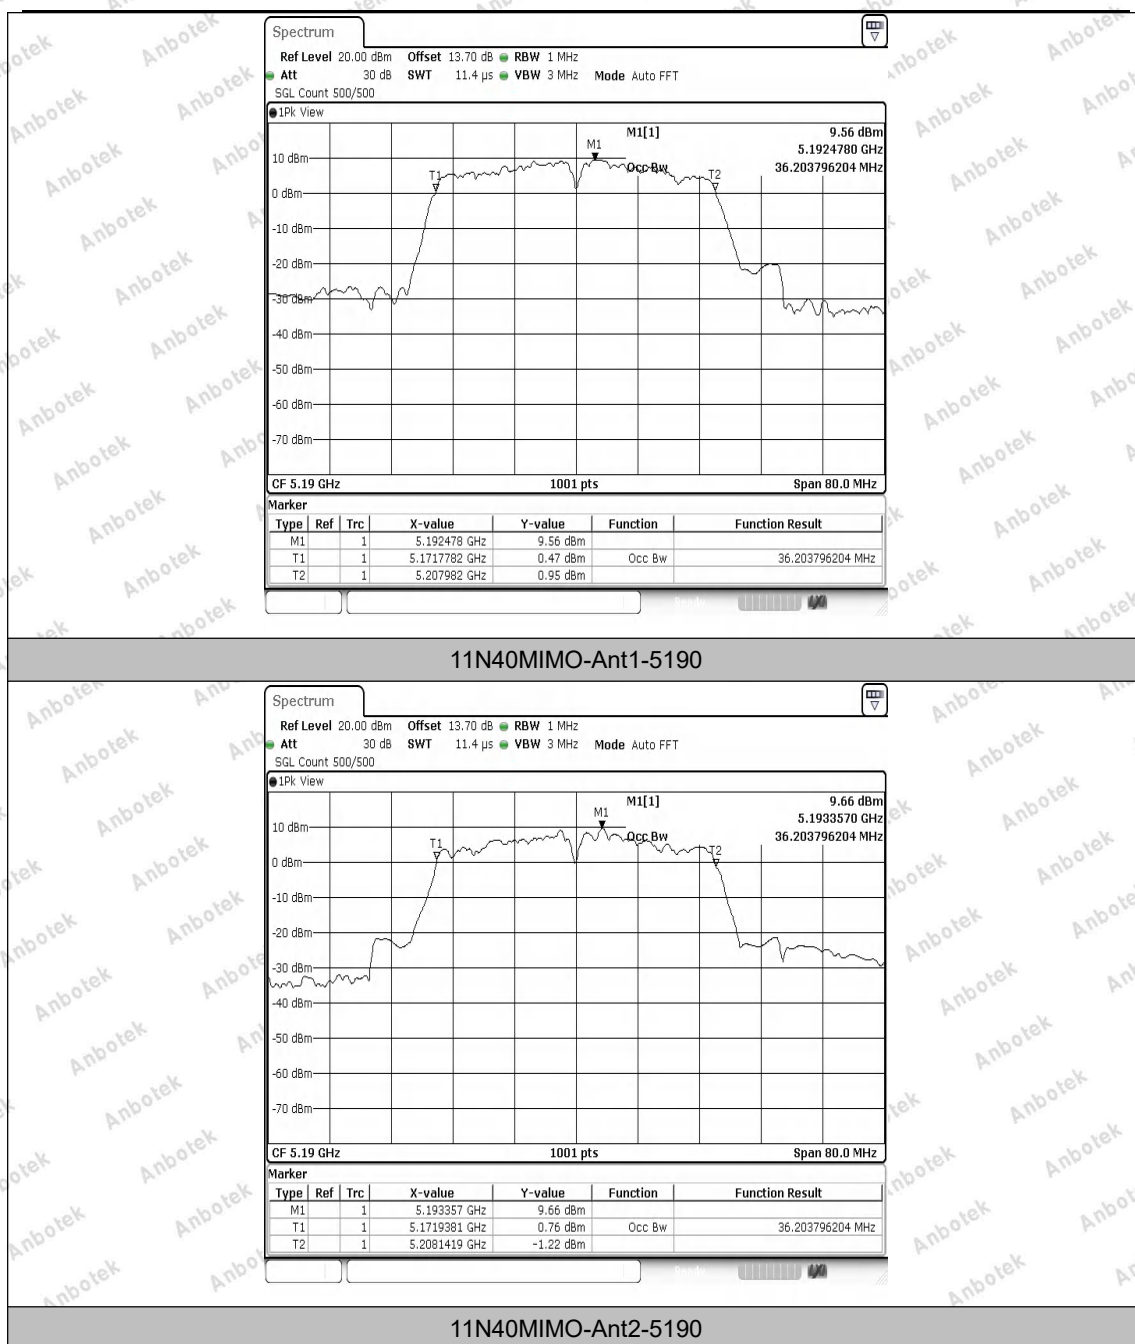

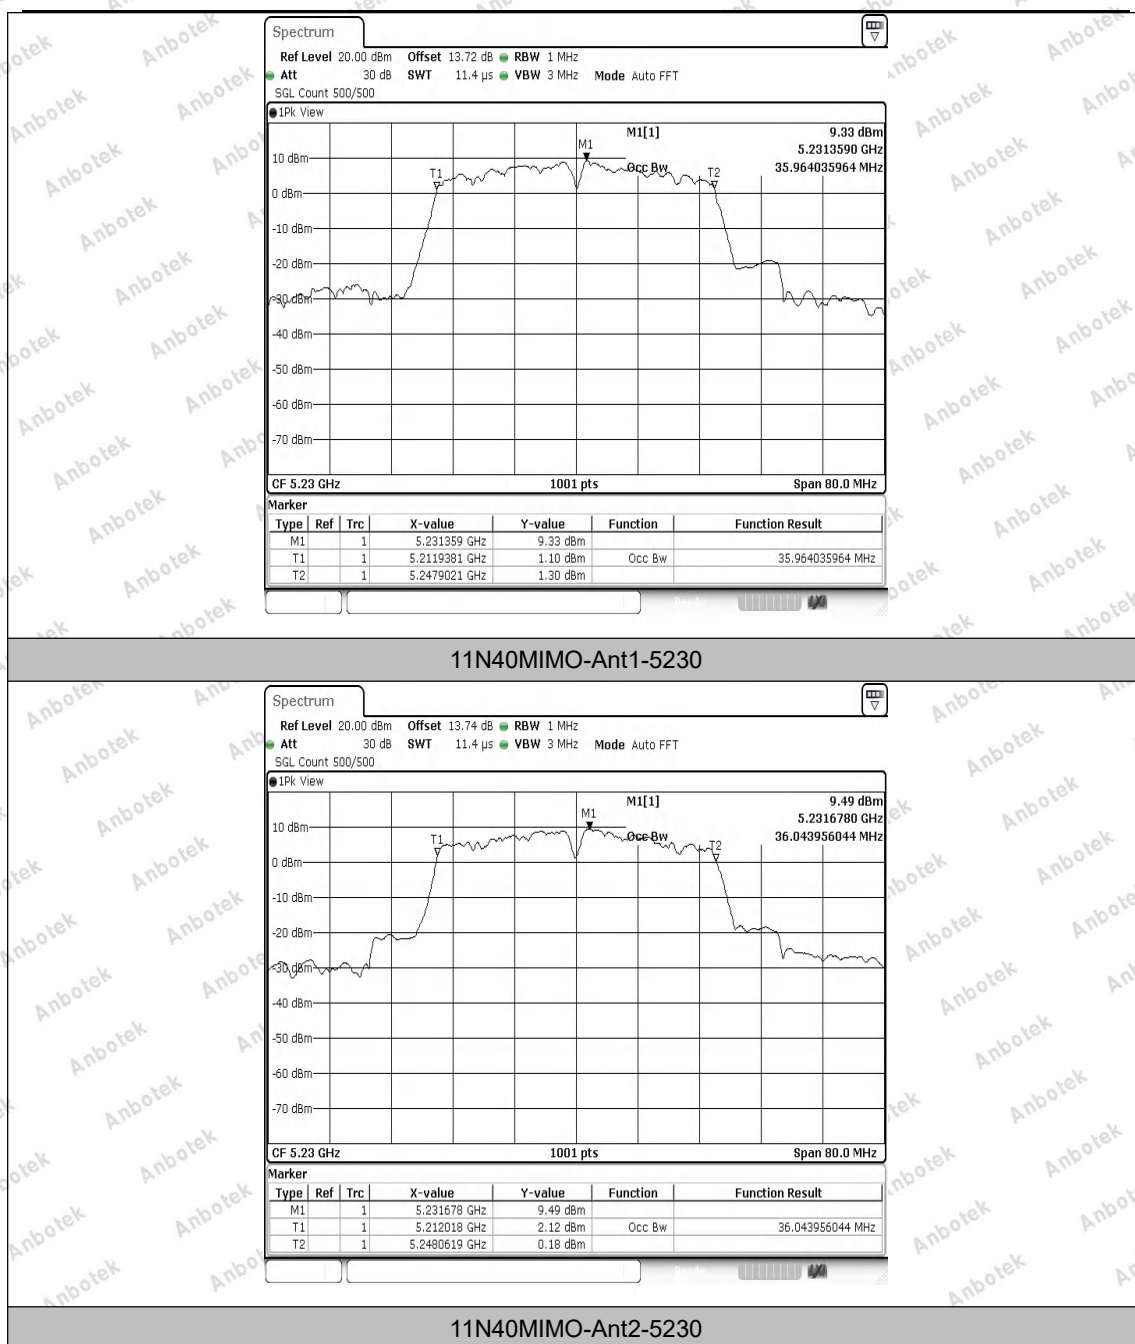

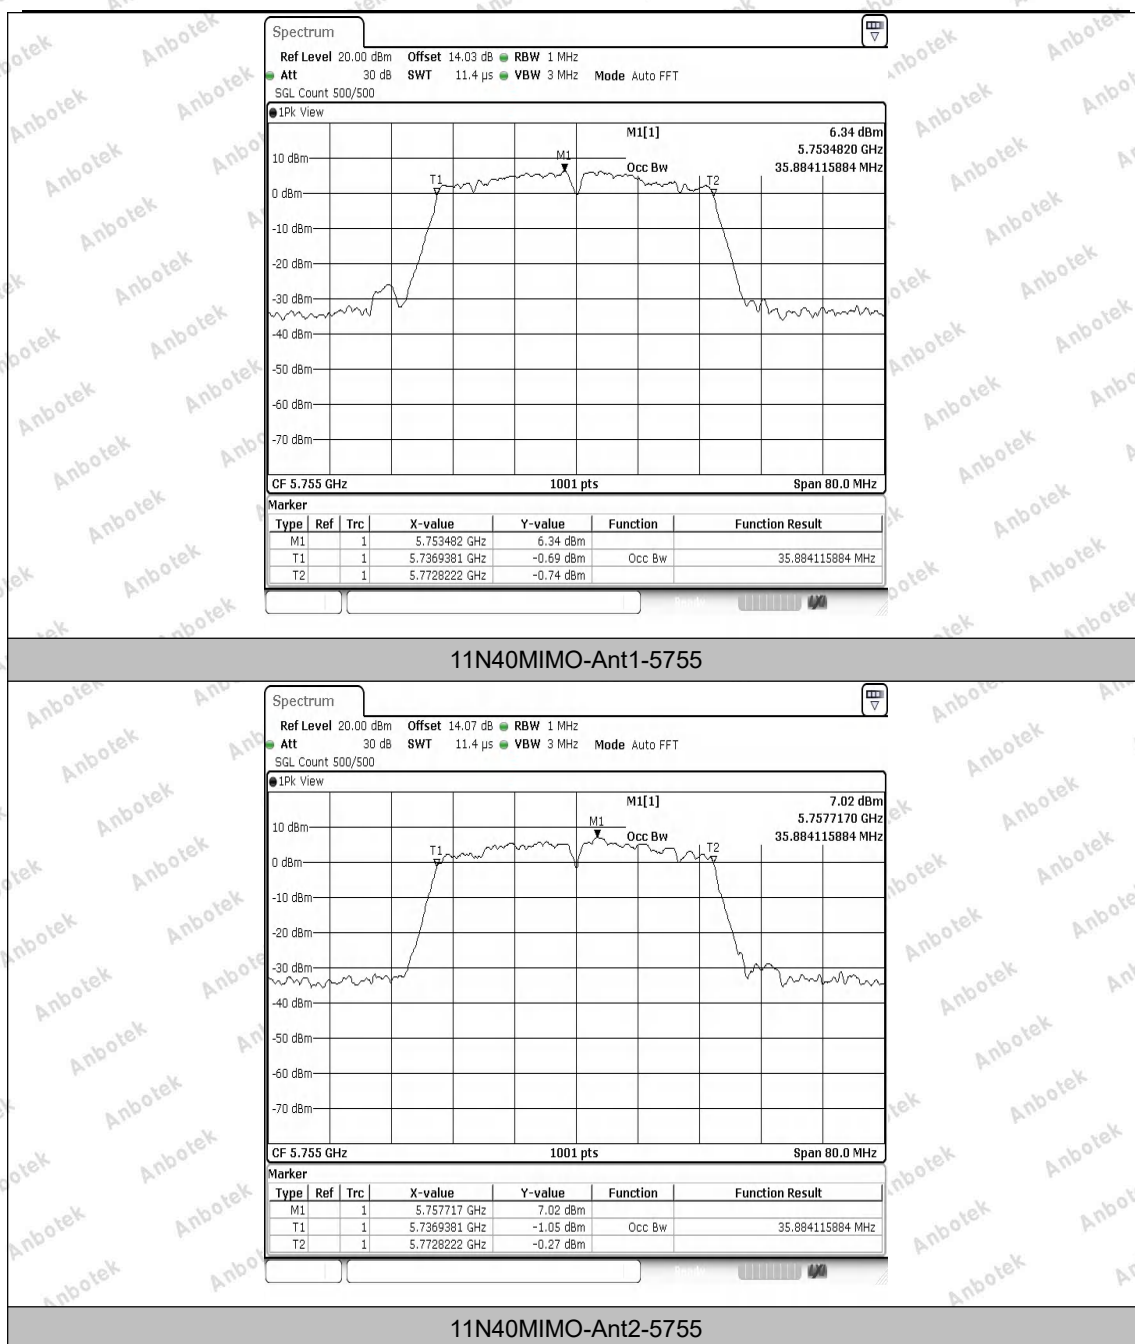

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com



