



INSTRUCTIONS

Remote controller interface and description

1.After turning on, the massage chair will automatically back. In the process of backside, click the " ⊗ " button. The massage chair will stop back and enter the "Automatic page" from the current perspective.

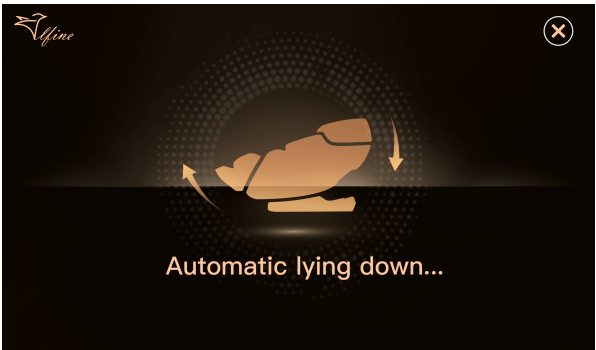

2.Setting

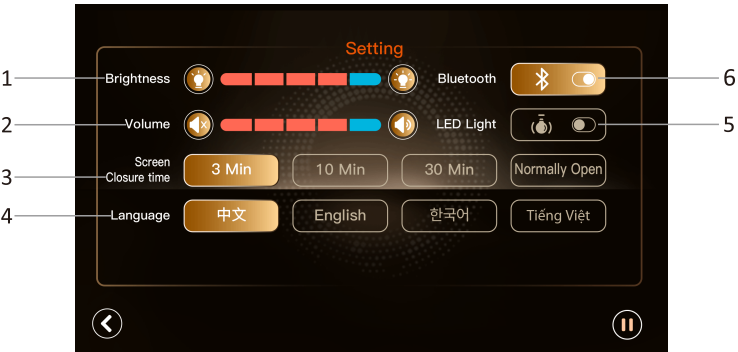

1.Screen brightness adjustment area

2.Sound adjustment area


3.Screen closure time selection

4.Languages selection

5.LED light: on/off

6.Bluetooth: on/off


CHAIR INSTALLATION

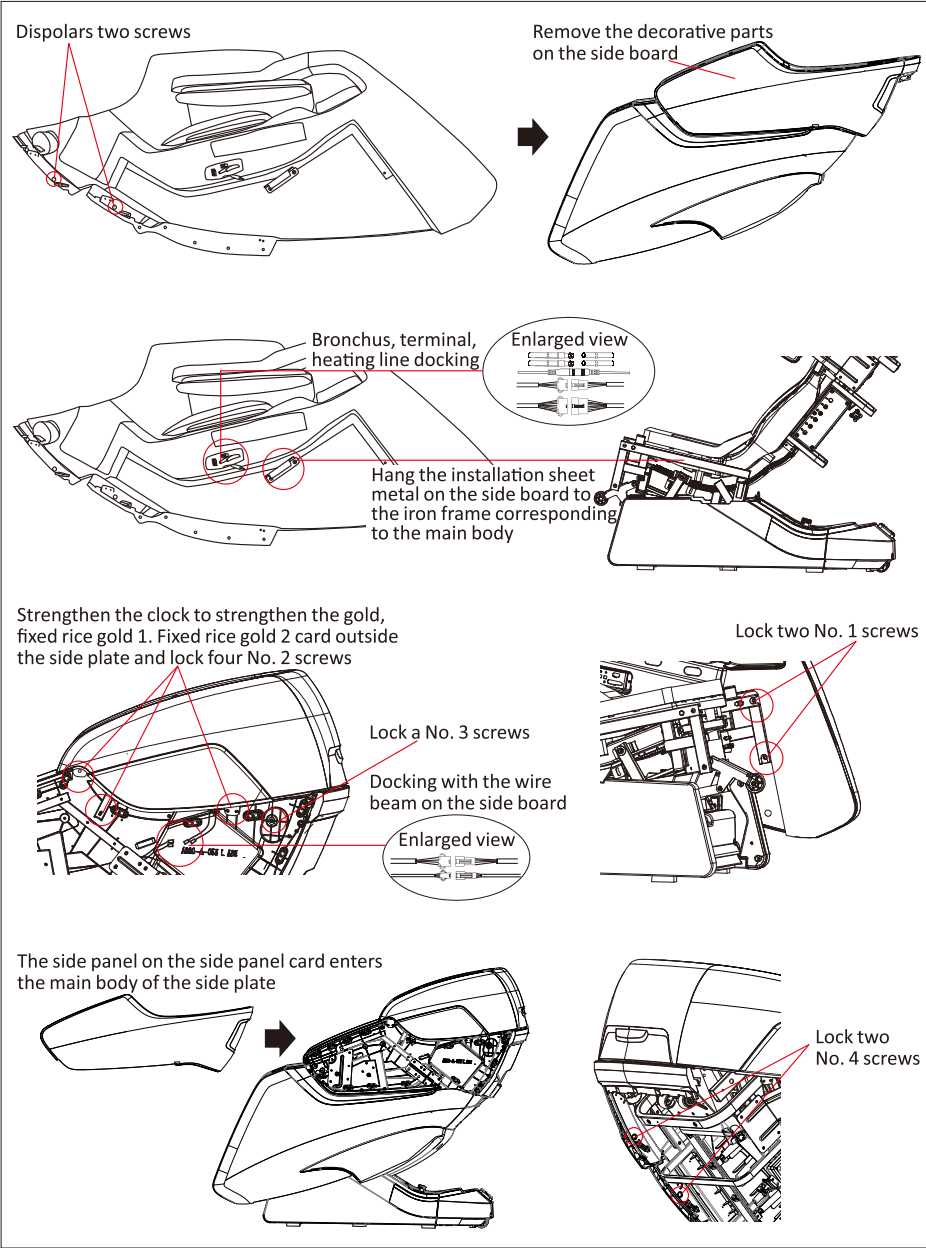

CHAIR INSTALLATION



3. Install the back cover

- (1) Put the rear lids into the main plastic parts and the four screws that are unscrewed before the specified position are locked.

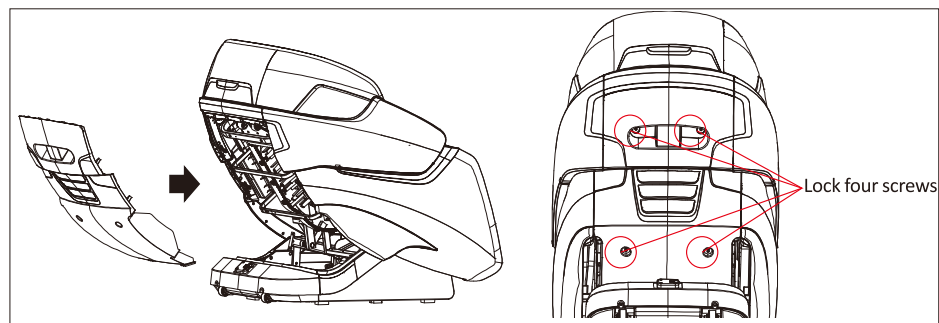

4. Install the hand controller

- (1) Put the top of the bracket into the fastener, then put the round groove at the top of the controller bracket, and then tighten the fastener.
- (2) Open the lock on the controller bracket, tear off the protective film at the bottom of the stent suction cup, and then close the suction cup on the handrail and press it down closure.
- (3) First connect the port of the hand-controller wire with the port of the chair, and finally tighten the nut at the port.

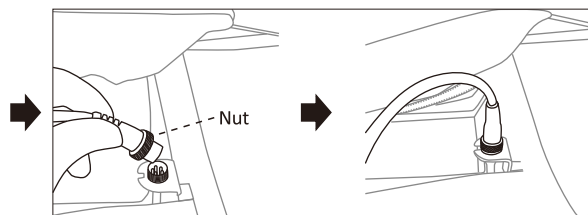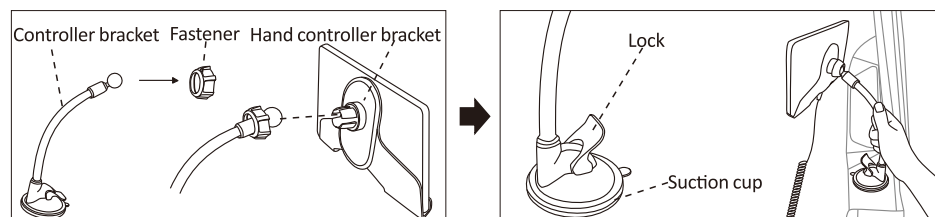


INSTRUCTIONS

Remote controller



INSTRUCTIONS


Shortcut key function chart

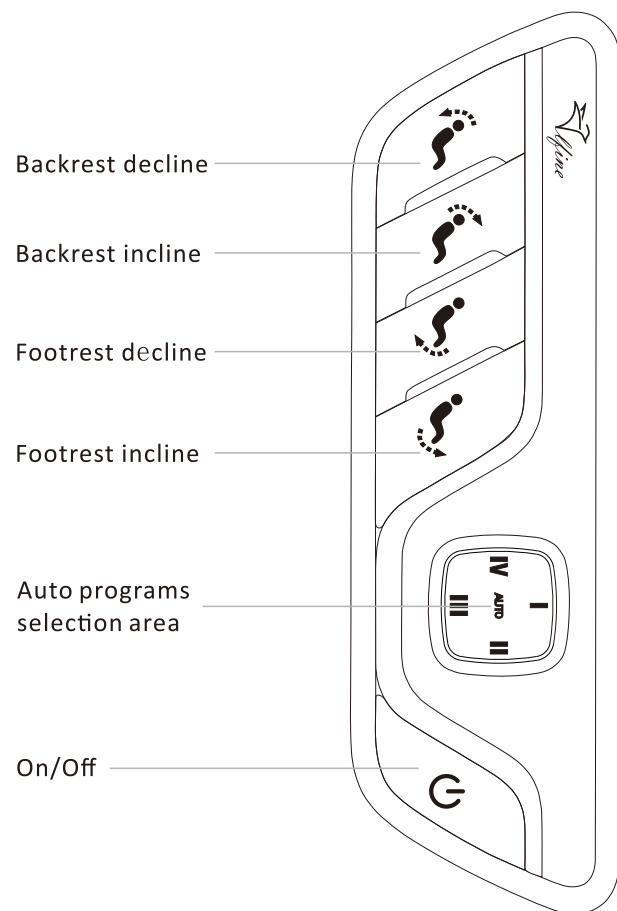


CHAIR INSTALLATION

5. Install leg-rest

- (1) First connect the trachea of the leg with the bus on the massage chair.
- (2) Lift the leg and insert the round hole in the upper right corner of the leg into the metal pin shaft of the massage chair, and then insert it with a buckle to fix it.
- (3) When installing the left side, first move the whole leg to the right, align the round hole in the upper left corner and the pin of the massage chair, move the lower leg to the left, and then insert the buckle to fix it.
- (4) Pull the holster on the leg to the zipper of the massage chair.
- (5) Finish the leather case.

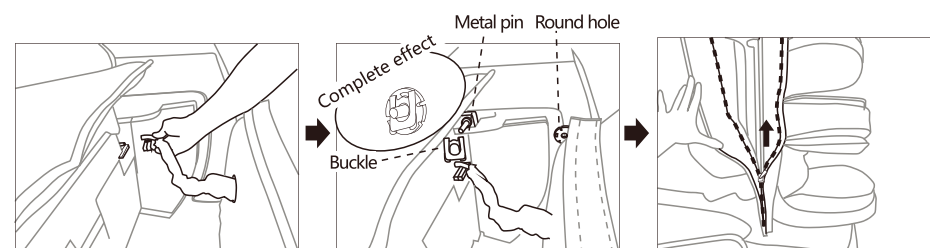

2.Moving the massage chair

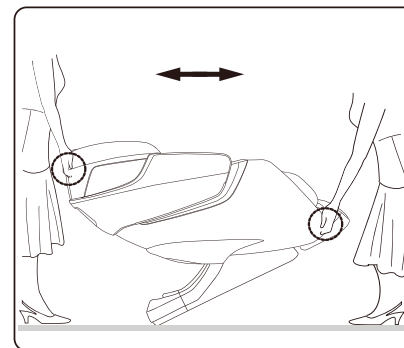

To move the massage chair 2 persons are required. One would hold the side panel and lift up as shown in the diagram. The next would press down the back-rest of the chair so that the castor wheels located at the back of the chair touch the floor.


Move the massage chair using the wheels. After moving to the desired location put the massage chair down slowly & carefully.

Note: Do not move the massage chair with user on it.

suggest moving the massage chair with a rung or carpet underneath to prevent any accidental damage to the floor.

CHAIR INSTALLATION

3. Place the massage chair in an open area

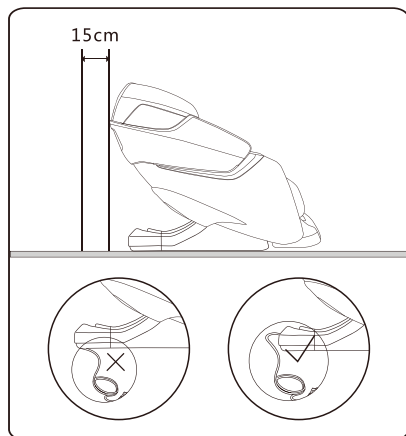

- Allow sufficient space around the chair for recline purposes.
15cm distance for the back side and 40cm in front of the footrest.


***In order to avoid the damage of the floor and to reduce the noise, please put area rug under the massage chair.**

***Make sure that there are no barriers in front and the back of the massage chair.**


***Please do not put it in wet or uneven floor.**

***To avoid signal interference, please place it 4 feet away from AV, TV, and radio.**


BEFORE USE

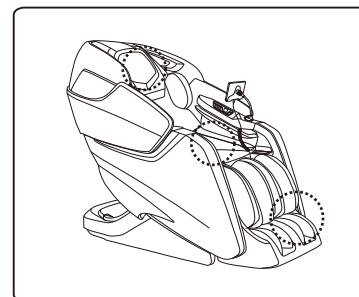


- 1. Make sure the product is in good condition and proper working order.**
 - Check the headrest and backrest pad.
 - Inspect the power plug.
 - Make sure the footrest is in its upright original position in order to prevent damage.

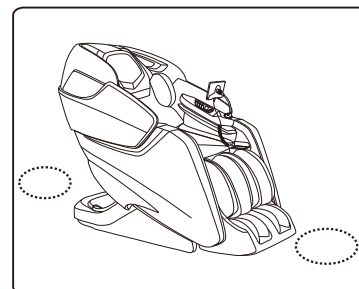

- 2. Check the surrounding environment**
 - Ensure there are no people, pets, or objects obstructing the massage chair.

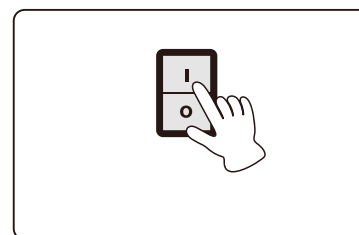

- 3. Plug in the massage chair power cord.**
 - Connect the power cord.
 - Turn ON the power switch, located on the right side of the massage chair.

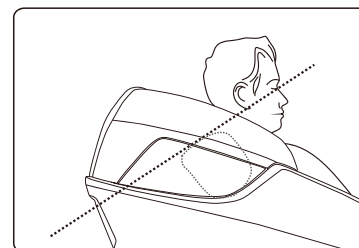

- 4. Adjust the position of the headrest.**
 - Adjust the headrest until it is in a comfortable position.