

Product specification

Declaration:

Thank you for purchasing LALAHOME REALSCOOPER Smart Cat Litter House. LALAHOME Smartech is committed to making pet life better through the power of design. This manual will help you better understand and use this product.

I. User Notice

1. Please install and use the product in strict accordance with the instructions.
2. Place the product on the horizontal ground.
3. The glass of the top window of the product is fragile. Please do not place any articles to avoid safety risks.
4. Do not place the product in high temperature and humidity environment for use.
5. This product is only suitable for clumping cat litter, including mineral litter and crystal litter, tofu litter and other cat litter. Please replace the special spatula when using tofu litter. Do not use non-clump litter.
6. Do not add anything other than clump cat litter into the toilet bin.
7. Do not force your cat into the toilet bin.
8. This product is not suitable for cats less than 6 months old and less than 1KG in weight.
9. The whole product is forbidden to be soaked in water or doused with water. The toilet bin and trash can can be easily removed from the whole machine to be cleaned and dried before assembly. Except for the unloaded bin assembly and litter tray, please soak and wring the body with a towel and wipe it clean.


II. Product list

Please check the product list and quantity carefully:


1pc of the main engine (including 1pc of the back half of the collection bin, 1pc of the front half of the collection bin, 1pc of the litterdrain step)

1.

Main engine

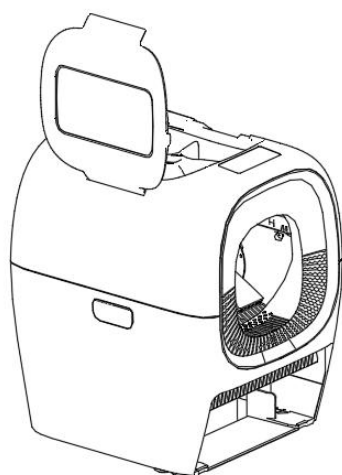

Collection bin

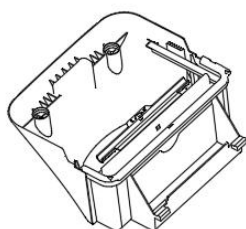


Litterdrain step




2. Adapter x1pc

3. Cat Scratching Board X 1 pc (optional, purchased separately)
4. Tofu litter special spatula X 1pc (optional, purchased separately)

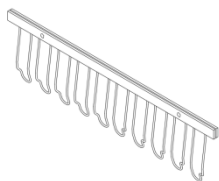


5. Free special mineral litter X 1 bag
6. Free special garbage bag X 1 roll (12 pieces)
7. Specification x1pc
8. Quick Guide X 1pc

III. Product introduction

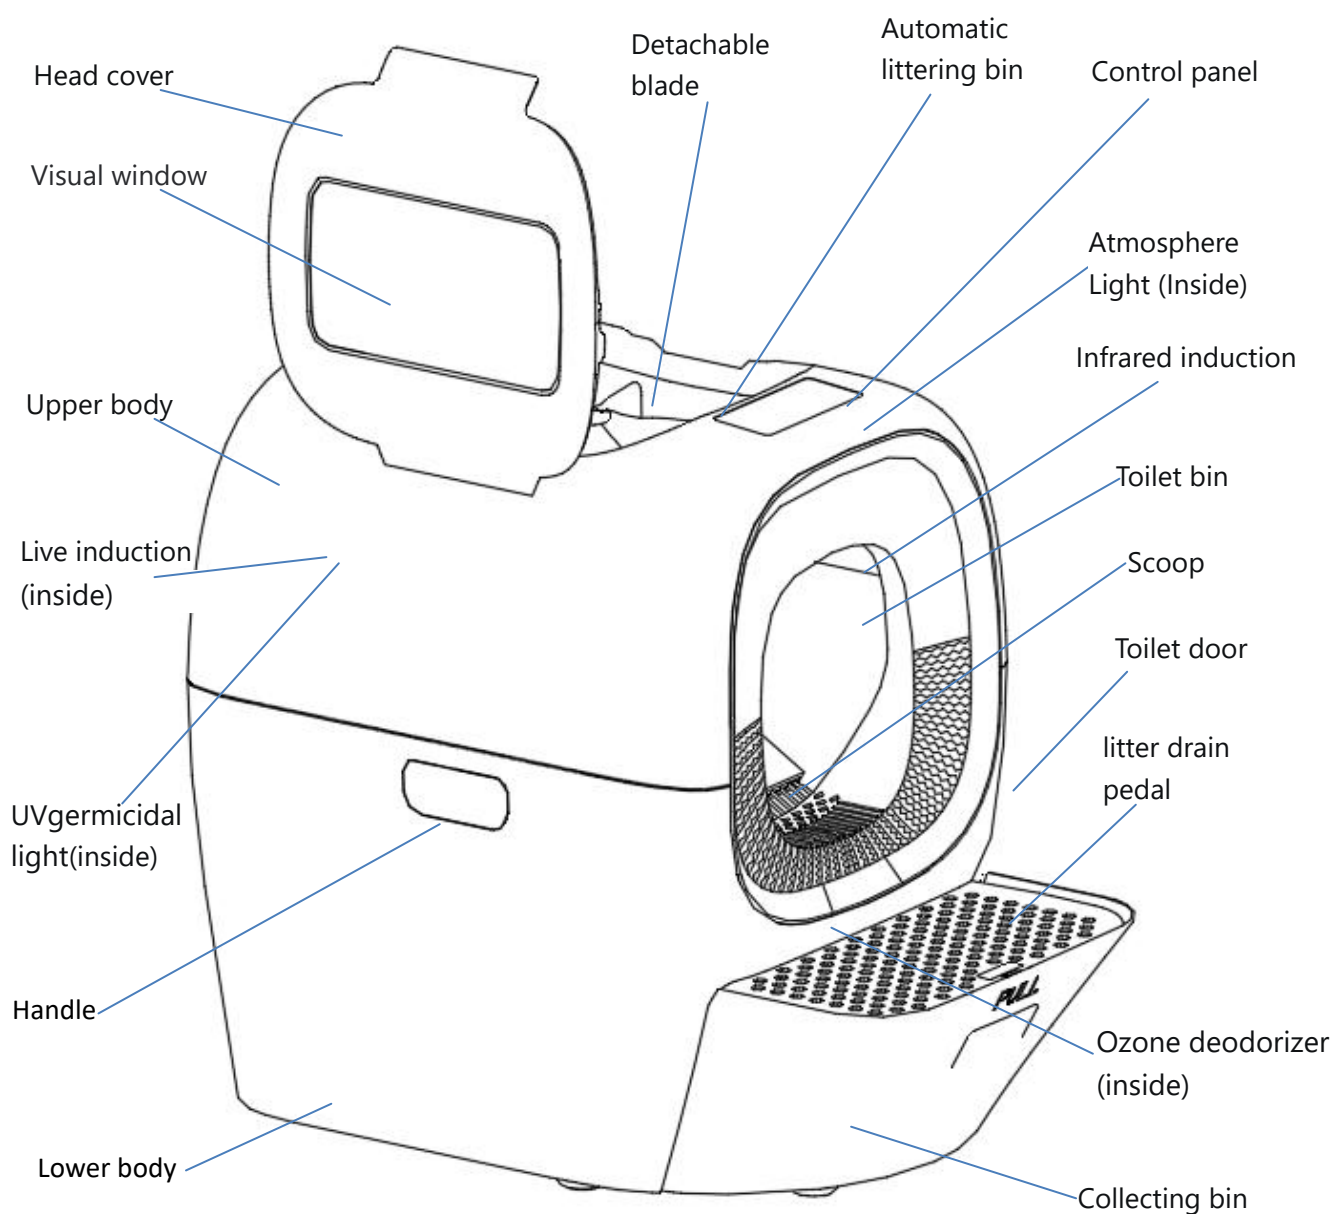

IV. Installation instructions


1. Take the product and its accessories out of the packing box.
2. Remove the bin assembly and remove the ① litter drain step from the upper side.

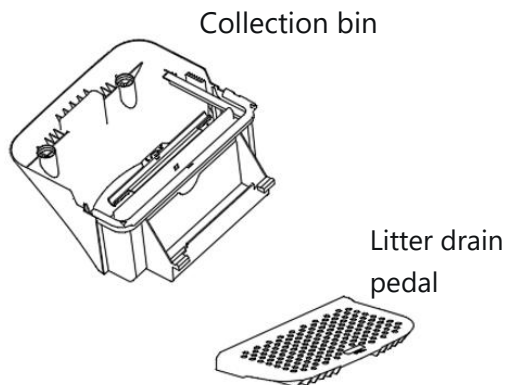


3. Remove the plastic bag from the bag bin on the back of the stool collection bin through the rear wall hole, the end of the plastic bag mouth is pressed on the edge of the stool collection bin with a U-shaped strip, and then back to the sliding bar bar on the stool collection bin to press the other end of the plastic bag mouth, pull the sliding bar to the maximum position, cover the ① litter drain pedal.

Note: The operation process should be handled lightly to avoid product bruises and scratches.


1. As shown in the figure below, first take out the parts ②、③combined.
2. Then rotate the left and right front end of the guide rail to the stop position.
3. Remove the plastic bag from Rear-seat plastic bag bin through the hole in the back wall of the collection bin, press one end of the mouth of the plastic bag with a U-shaped strip on the edge of the collection bin, and then return to the strip on the sliding bar of the collection bin to press the other end of the mouth of the plastic bag, pull the sliding bar to the maximum position, and cover the ① litterdrain pedal.

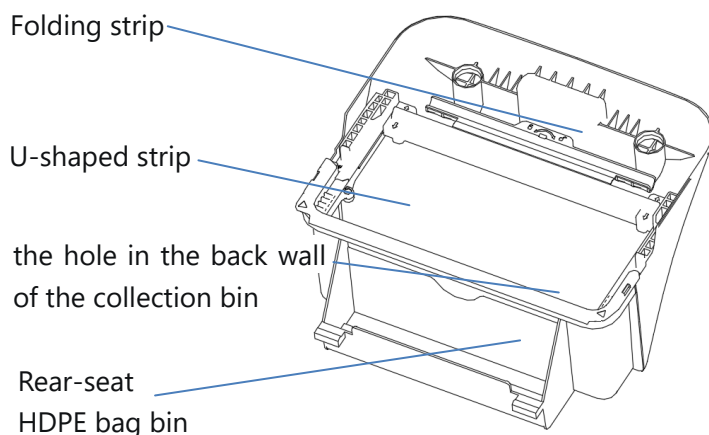


4. Install the litter drain step on the bin assembly, or optionally install the cat scratch plate randomly provided on the litter drain step.

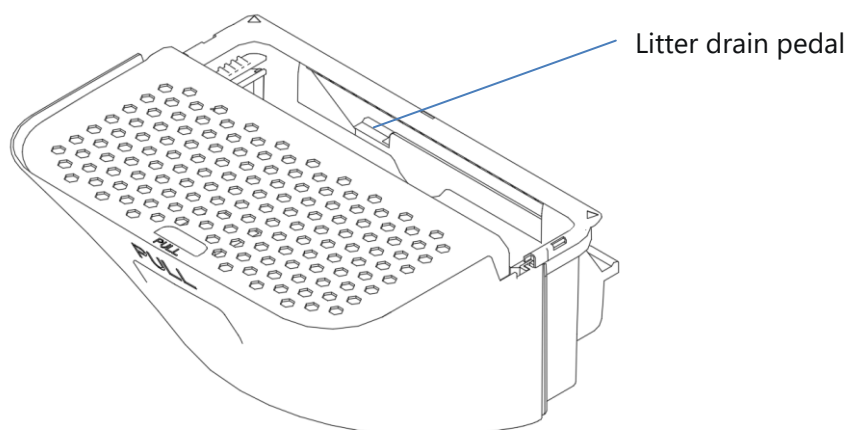

5. Put the litter tray④ back into the toilet bin and ensure that it is properly compressed.

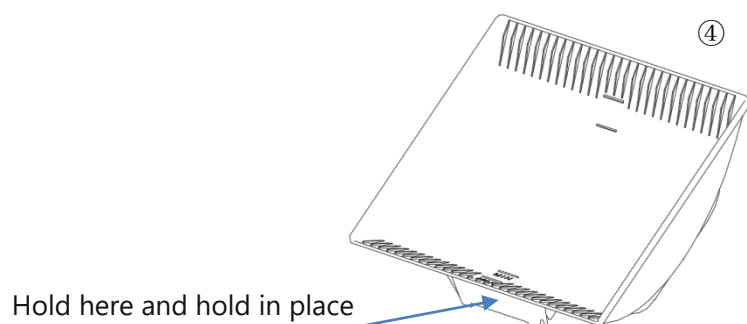


6. Load back into the assembled bin.

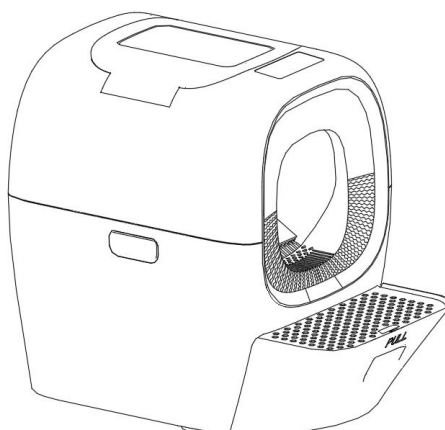


7. Place the product indoors in a dry place near the power supply, ready for use.
8. Refill litter.
 - Open top cover to stop position. (The upper cover assembly is equipped with a damper to buffer opening and closing and prevent smashing hands/pets. Please do not flip the lid quickly or forcefully to avoid damaging the damper and the upper cover, etc.)
 - Pay attention to add litter not exceeding MAX line of warehouse wall to avoid improper closing of top cover.

Pay attention to confirm whether the litter drain is closed before adding litter; If not, right click the host operation panel to reset the blade.

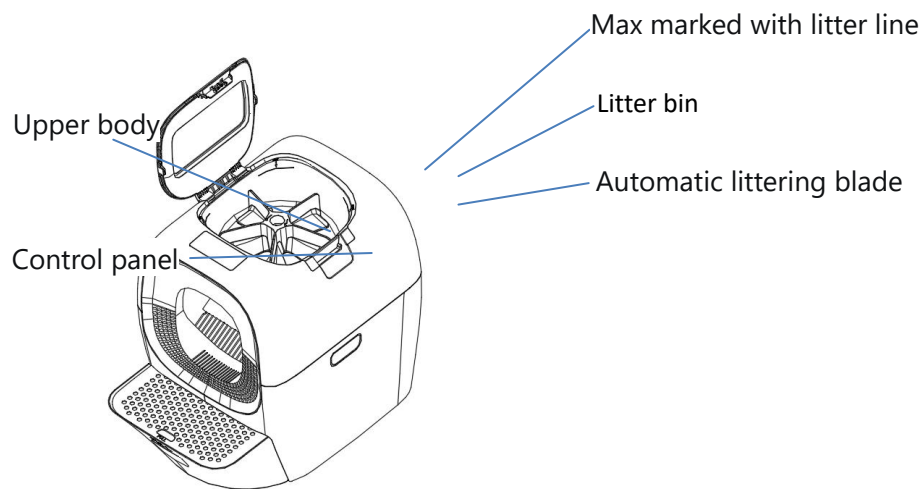


9. Clean out the bin. (Refer to the video boot file.)


Step 1: Pull out the bin

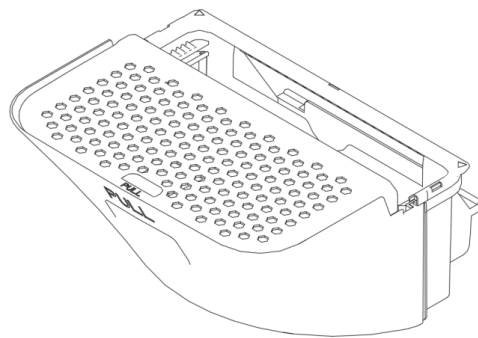


Step 2: Tilt the litter drain pedal to pour the remaining litter brought out by the cat-pad into the bin and remove it.

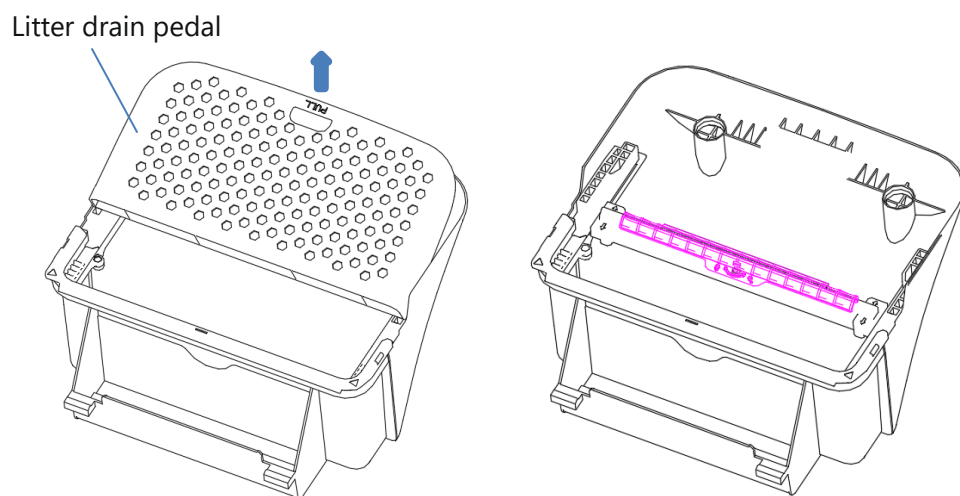


Step 3: Slide the folding strip of the plastic bag forward to close the mouth of the plastic bag.

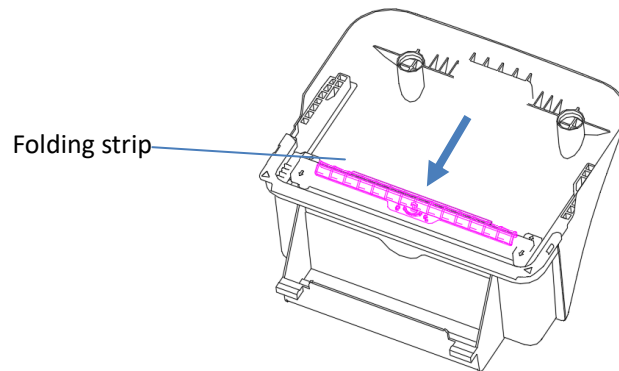

Step 4: Turn back the folding strip of the plastic bag and remove the U-shaped strip at the front end; Pull the drawing strip at the mouth of the bag to tighten the plastic bag.

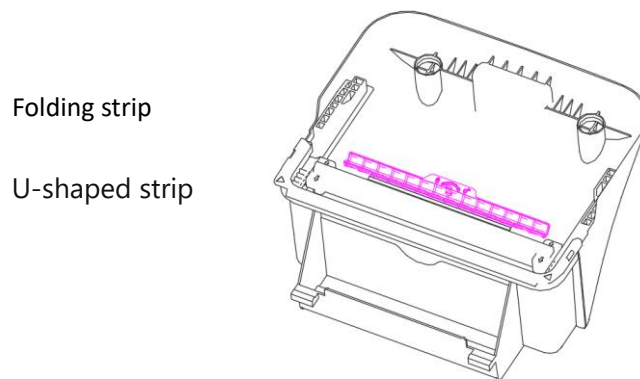

Step 5: Slide the folding strip back to the largest place and remove the litter bag full of cat litter. Fill the new plastic bag as per step three.

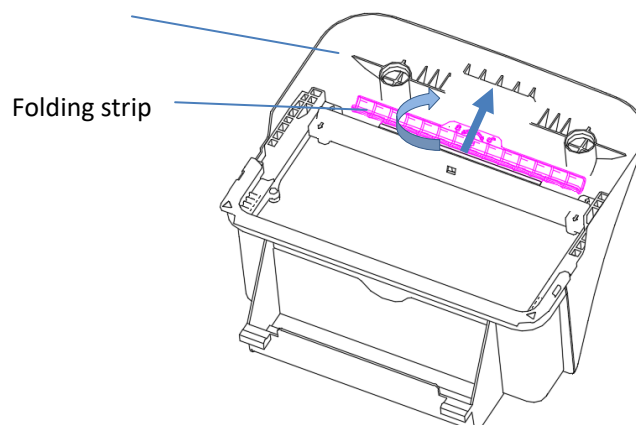

V. Instructions for use

1. Equipment self-test: Power on (please use the 12V2A adapter equipped with the machine), power on until the equipment self-test is completed (after the self-test is completed, the atmosphere light will be steady on).
2. Add cat litter: Open the top cover, fill the litter bin, cover the top cover, and fill the toilet bin with cat litter from the touch screen point to the MAX position. In order to facilitate the equipment to automatically add litter again when the cat litter allowance is insufficient, please open the top cover and fill the automatic litter bin again. Your equipment will automatically add litter when the cat litter allowance is insufficient in the toilet bin, and notify you to add new litter to the litter bin after 5 times of automatic litter.
3. Replace different types of cat litter: We suggest that you prefer LALAHOME special mineral litter for your equipment, but our equipment is compatible with a variety of common litter types on the market. If you use tofu litter, please replace the adaptive special scoop head for tofu litter (purchase separately) to achieve better results.
4. Replace the scoop head: press the right and middle buttons on the touch screen at the same time, and the scoop head will move to the position near the cabin door for easy removal and replacement. Remove the fixing screw, take off the original scoop head, replace with tofu litter special scoop head.
5. Network distribution: Scan the code on your phone to download LALAHOME SMARTECH APP. In standby state, hold down the left button of the host for 3 seconds. Add the device and connect to the network as instructed. After the device is successfully connected, the white light is on.

VI. Code scanning for APP download and Notes for Wi-Fi distribution network

1. The device supports both 2.4G WI-FI and 5G WI-FI without switching networks.
2. Bluetooth should be enabled when the phone is connected to the network.
3. If the APP cannot discover the device, please power off the device for 5 seconds and connect it again. Only one account can be bound to one device. If multiple users are required to use the device, they can share it with other users through the APP.
4. Key description
Left button: Click sterilize/ Deodorizer/Atmosphere light cycle on, off
Press and hold for 3 seconds to enter the distribution mode
Middle: Click to start or stop scooping
Long press for 3 seconds to lock/unlock the child lock
Right-click: Click Refilllitter
Press and hold for 3 seconds to reboot the system
Composite key function:
Right + Middle button: Change scoop
Left + Middle: Language switch
See the function description on the APP page for the remote APP operation.

VII. Function Description

1. Automatic clearing function
After the cat goes to the toilet and leaves, the equipment will automatically start the poop scooping function 3 minutes later (two cycles). After the poop scooping is finished, the equipment will automatically

start sterilization for 30 seconds. After sterilization, the equipment will automatically start deodorization for 30 seconds in the poop collection bin. If the cat enters the device when it is running, the device automatically stops and restarts three minutes after the cat leaves.

2. Manual clearing function

Click the middle button on the host touch screen, and the device starts two cycles of scooping feces. After scooping feces, the device automatically enters 30-second sterilization. After sterilization, the device automatically starts 30-second deodorization for the collection bin, and enters standby state after deodorization. If the cat enters the device when it is running, the device automatically stops and restarts three minutes after the cat leaves.

3. Automatic litter adding function

The equipment will automatically add about 800 grams of litter when the litter storage in the bottom basin of the toilet bin is less than MIN (about 1 kg of litter). You can also manually add litter by clicking the right button on the touch screen of the device. The litter is added about 800g by clicking once. The device will push a message to remind you to add new litter to the litter storage bin when the litter storage bin is less than 800g. Please fill the litter storage bin in time for reserve.

4. Do not disturb mode function

Click the button "More" in APP, select "Do not disturb mode", and the automatic cleaning function will be turned off when you select the "don't disturb mode", and the indicator will be switched to the state of atmosphere light.

VIII. Common problems and solutions

1. Can kittens use this product?

This product is suitable for cats over 6 months old and weighing more than 1KG. If the weight or age of the cat is not up to the standard, do not use the automatic poop scooping function. You can select the all-day rush mode and scoop the poop manually by pressing the building.

2. What should your cat do if he doesn't want to use the new device?

If your cat is alert, leave the device next to the old litter box for a while and pour some of the old litter with your cat's own scent into the new device. The familiar scent will also help your cat get used to the new device more quickly.

3. Is it dangerous for a cat to enter while scooping poop?

When the cat enters the toilet, the monitoring sensor will be triggered immediately and the device will stop running immediately. The device will continue to operate three minutes after the cat leaves the toilet, so there is no need to worry about any danger.

4. What types of cat litter can I use?

This product supports most of the clump cat litter (mineral litter, tofu litter, mixed cat litter) on the market. Do not use non-clump cat litter or poor clump cat litter (crystal litter, wood based litter, etc.).

5. How much litter should I add?

It is recommended that the amount of mineral litter should be about 2kg for the first time, and about 1.5kg for tofu litter. Do not exceed the MAX litter level of the bottom basin. Excessive cat litter will cause unnecessary waste.

6. When should I refill the litter?

The device will automatically judge the cat litter allowance in the bottom basin of the toilet bin and add litter voluntarily. Please timely replenish the cat litter allowance in the litter storage bin at the top of the device according to the APP notification.

7. How often do I need to clean the bin?

It can depend on the specific use (number of cats, etc.).

It is recommended to change the bag every 3-5 days in the case of a cat (increase the frequency of bag changing in hot weather).

8. How often should I clean the bottom of the toilet bin?

It can be determined according to the specific use situation (number of cats or toilet situation of cats, etc.).

It is recommended to clean once every 1-3 months if conditions permit.

IX. Cleaning instructions

1. Remove residual litter

Turn off the power, take out the collection bin, drag out the bottom basin of the toilet bin, dump the remaining litter into a garbage bag, clean it with water, dry it and put it back into the toilet bin, make sure the lock is in place, and put it back into the collection bin.

2. Do not rinse the device directly with water. Except for the bin assembly and litter tray that can be cleaned directly with water after being removed, wring out other parts of the fuselage with a wet towel and wipe them clean.

X. Quick troubleshooting

1. The device button does not work: Check whether the child lock function is locked and hold down the middle button for 3 seconds to unlock/lock.

2. When scooping feces, the door of the bin is not open: check whether it is stuck. After troubleshooting, power off for one minute or restart the device before use.

3. Frequent positive and negative rotation when scooping feces: The cat poop may be too much or too sticky, the self-unplugging program of the device starts, and the device will troubleshoot through the self-unplugging function. If the scooping fails, the device will enter the standby state and push a message to remind you to troubleshoot manually. Use an appropriate tool to scoop the sticky bottom into the bin and restart the device.

4. The ambient light of the device is steady on and blinking: there is insufficient litter left in the bottom basin. The device stops working and pushes a message to remind it to add litter. Please add new litter to the litter storage bin and restart the equipment.

5. Left and right scoop distortion: the induction failure of the equipment, please restart the equipment after power failure, if the product fails to troubleshoot automatically, please inform your after-sales service provider to repair, do not continue to use the product.

6. Products do not work: Please check whether new items have been put into the bottom basin of the toilet after littering, or there are living beings moving 30CM away from the hatch door. The equipment will automatically resume operation when new items are removed or movement near the door stops.

7. The red light of the device is steady on, and the scooping procedure cannot be started: check whether the collection bin is full, clear the collection bin and put on a new garbage bag to run.

XI. FCC Rules

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm.

XII. Description of hazardous substances

Products comply with EU ROHS and REACH requirements.

XIII. Product parameters

Product name: REALSCOOPER Smart Cat Litter House

Product model: LH1001

The machine size is 730x480x650 mm (Carton size is 780x520x730mm)

The net weight of the machine is about 16KG

Rated voltage 12V --- 2A

Implement standard G14706.1-2005,CE/EMC/UKCA/FCC-ID

Shenzhen Lalahome Smartech Co., Ltd. has the right of final interpretation.