

Model S

user manual



Model S

catalogue

Model S Hybrid watch user manual.....	1
Model S.....	1
welcome to use.....	4
Understand the equipment.....	4
product presentation.....	4
Match with your, smartphone.....	4
timing.....	5
software upgrading.....	5
cell.....	5
Guardians Settings.....	5
Affiliate guardianship.....	6
Your exercise health.....	6
Daily activities.....	6
A GPS fitness workout.....	7
Your performance?.....	7
Smart button customization.....	7
.....	7
Find the phone.....	7
Locate the record.....	8
Let' s walk.....	8
Telematography.....	9
Music play / pause.....	9
Last a song / increase the volume.....	9
Next song / lower the volume.....	9
The second time zone.....	9
stopwatch.....	9
Notice management.....	10
Notice menu.....	10

Don't disturb the mode.....	10
device-dependent.....	11
View the device information.....	11
Find the device.....	11
Unbinding equipment.....	11
Reset Settings.....	11
Common doubt, ask the answer.....	12
Operation video demo.....	12
OTA.....	12
corrective maintenance.....	12
equipment maintenance.....	12

welcome to use

Welcome to join the hybrid watch new family! Hybrid watches combine sports and health, smart reminders and fashion collocation. Integrate innovative technology into life, practical functions enable us to conveniently and efficiently manage daily life, to create a healthy life, fashionable life!

Understand the equipment

Device contains 6 time position 0.42'OLED, display and 2 / 3 / 4 time smart key, by clicking / Long press can operate a variety of intelligent functions, but also customized Settings quickly enter the function.



It only takes 4 steps to set up and start using your hybrid watch

1. Use your smartphone to go to the app store, download and enable the HybridSmart app; 
2. Open the Bluetooth Settings on your phone and keep the distance between the device and the phone within about 0.5 meters;
3. Long press the device 3 time position button for 5 seconds to activate the device and wait for the APP connection;



4. Select the following method to add the device to your Hybridsmmart account:

* For the first binding user, please follow the APP interface instructions to bind and set the device;

* If you have ever used and untied or reset a device, please open the application and go to Settings> My Device> Add the device;

* Example of device Bluetooth name: Letter MS- + 7-bit Arabic numerals (such as: MS-0032032)

timing

1. bind the user for the first time, rotate the needle to 12 according to the instructions of the APP interface;

2. If you have used a device, please open the application and go to Set> My Device> calibration.

software upgrading

In order to bring you the latest experience, when a new version is online, we will prompt you to upgrade with one click, including:

cell

When the power is below 30%, Hybridsmart will inform you of the low power.

When the power is below 10%, the device's Bluetooth function will be turned off and disconnected from the Hybridsmart, and the device can still be used for step counting, calories, heart rate monitoring and stopwatch timing

Guardians Settings

When using Hybridsmart for the first time, you can try to be a guardian. This function can be related to your family / friends' account, conduct

daily activities, location tracking, monitoring, and pay attention to the health of each other. When using, make sure that your family / friends have registered a Hybridsmart account.

Keep the APP running in the background of the application. As the guardian, the four major content information below the monitor can be seen to you after obtaining the authorization. You can associate three accounts at the same time, and the name and account of the monitor can be edited, added or deleted. Links to Hybridsmart, or Settings>

Setup and view its details in my settings!

1. GPS positioning, view the historical location of the monitor and request sharing real-time location
2. Daily / weekly / monthly walking and running data were recorded
3. Height
4. Weight

If you need to synchronize your exercise health, you can add a hybrid watch.

Affiliate guardianship

When using Hybridsmart for the first time, you can try to associate guardians, who can be your family / friends, conduct daily activities and location sharing, and allow them to pay attention to your health. Make sure your family / friends have registered an Hybridsmart account.

You can add three accounts at the same time and set the default monitor as direct shares. The name and account can be edited, added or deleted. Go to Settings> My Monitor to view and set their access rights!

Your exercise health

Wear a hybrid watch integrating intelligence and fashion, record your daily exercise and share it with your friends, adding points for your health!

Daily activities

 Wear your hybrid watch to record the number of steps and calories consumed, and the Hybridsmart homepage will

show your daily steps and completion in real time. Go to Activity> Step> Daily Step Goals and we will inform you when you reach your goal.



Select to the right to view the weekly, monthly details.

A GPS fitness workout

You can connect a device to your smartphone to record GPS data for walking or running activities.

In HybridSmart, select exercise mode to start exercising and record your fitness trajectory 


Exercise time and calorie consumption data can be shared with friends and social media to support a healthy life together!

Your performance?

Has recent fitness training caught up?  Your hybrid watch has recorded every training for you
Practice, go to the activity > training to check your record data, every sweat day is becoming a better self, to make persistent efforts oh!

Smart button customi

Pair the device with a smartphone, Can be based at different period HybridSmart APP Set up # 6 in the function Large function icon to 2 / 4 time position button. Through Through the key operation to achieve the function, 2 keys It can be set up simultaneously and switched at any time. Come on Experience it!

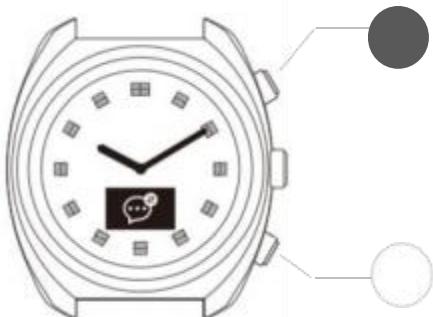



Find the phone

Within about 10 meters of the Bluetooth connection, the hybrid watch can send signals to help you find the missing phone



1. Start function: Set the function at 2 / 4 position, press for 1 second, the device enters the phone icon, and the phone will immediately ring and vibrate for 5 seconds; you can determine the phone position by the ring;
2. Click again: After starting, click the button again, and the device will be sent again

	<p>Send a signal to the mobile phone, make it ring for 5 seconds;</p> <p>3. Close function: long press for 1.5 seconds to manually close, the screen will return to the time interface. With no operation, the function is automatically exit 60 seconds after the screen.</p>
 Locate the record	<p>Want to record and save every important location? Hybrid watch to help you a, key implementation. Go to HybridSmart, in the function> Location record> View details Fine information, click the address to share or navigate the location back.</p> <p>1. Start function: Set the function at 2 / 4 time position, press 1.5, start in seconds and record the current position immediately </p> <p>2. Click again: Record the new location;</p> <p>3. Close function: long press for 1.5 seconds to manually close, the screen will return to the time interface. With no operation, the function is automatically exit 60 seconds after the screen.</p>

 Let' s walk	<p>Do you need to share your location with your family / friends? Hybrid watch to help you easily achieve one key, suitable for family / friends / partner daily positioning notification, children / elderly location tracking and other situations.</p> <p>Go to the Hybridsmart> Let's walk> Default Monitor, select Send objects, and you can set up to three at the same time.</p> <ol style="list-style-type: none"> 1. Start function: Set the function at 2 / 4 position, press 1.5, start in seconds and immediately share the current location; guardians can see your location through the APP, built-in map;  2. Sharing status: Hybridsmart, allows the longest real-time location sharing time is 8 hours, after 8 hours, you will be prompted "currently sharing status", you can choose to continue or close; when you need to stop sharing <p>Enjoy the status, you can also go to setting> My observer> click Stop sharing real-time location. <small>(Reminder: This function is not applicable to special emergency situations of crisis and personal safety.)</small></p>
	<p>Want to take a panoramic picture? Hybrid watch for you to record the beautiful moment, suitable for about 10 meters range of selfie, and scenery distance photo;</p>

 Telematography	<p>Set the function at 2 / 4 and turn on your phone's camera function or 3 Fang Beauty camera, within about 10 meters, click the button</p> <p>Take a beautiful moment. </p> <p>Close function: long press for 1.5 seconds to manually close, the screen will return to the time interface. With no operation, the function is automatically exit 60 seconds after the screen.</p>
 Music play / pause	<p>Use controlled music on the hybrid watch without operating a smartphone</p> <p>You can play music, control is playing or on the smartphone often</p> <p>The music player being used. </p>
 Last a song / increase the volume	<p>Set the function at 2 / 4 position, and press for 1.5 seconds to enter the function interface</p> <p>Click the 3-position button to play or pause the music;</p> <p>Click 2 button to increase the volume, press 1.5s to play the last song; click 4 button to lower the volume and press 1.5s to play the next song;</p>
 Next song / lower the volume	<p>Close function: long press for 1.5 seconds to manually close, the screen will return to the time interface. With no operation, the function is automatically exit 60 seconds after the screen.</p>

 <p>The second time zone</p>	<p>Immediately view the second time zone time, hybrid watch to help you easily one key realization.</p> <p>Set the function at 2 / 4 hours and select the required second time zone country / city or daylight saving time zone. Click the key time and the needle will automatically rotate to the second time</p> <p>Zone time, the screen shows the second time zone country / city. For 15 seconds after no operation</p> <p>Automatically returns the live time. </p>
 <p>stopwatch</p>	<p>Online timing, mixed can watch intuitively for you to achieve; </p> <p>1. Start function: Click the device 3 to press 4 to STOPWATCH function; and press 1.5s to enter the timing interface at 00:00:00.</p>

	<p>2. Continuous status: Click 2 / 3 button to start / pause time, under pause status, click 4 button to zero. In the timing state, the screen does not go out.</p> <p>3. Exit function: long press the 3 position button for 1.5 seconds to exit.</p>
--	---

Notice management

Authorize the relevant permissions on your smartphone to manage message notifications on your device.go to

Hybridsmart APP Notice> Shock reminder notification> Open the notification switch, and set the phone, SMS, calendar or single application notification, the device will remind you through

information!



Notice menu



Social media message re



Call to remind



SMS reminder



Calendar reminder

Step goal reminder

Don't disturb the mode

Open no disturb mode device will turn off smart alerts and reminders for when you sleep or watch a movie time.

1. Go to HybridSmart Settings > My device > Open No disturbance mode;
2. If you need to set a specific time interval, click Add a schedule, and modify or delete the schedule at any time.

device-dependent

View the device information

Go to Hybridsmart APP Settings> My Device> View Device Bluetooth Name, Serial Number, Software version and other information.

Find the device

Within about 10 meters of the Bluetooth connection, the Hybridsmart APP can send a signal to help you find a hybrid watch. Go to Hybridsmart Settings> My Device> Click Find the device, in the state of connection, the device will vibrate for 5 seconds, click again to repeat the signal.

Unbinding equipment

This operation will break the device from the smartphone.

1. Go to Hybridsmart APP> My Device> Unbind;
2. For iOS users, please go to the smartphone system Settings> Bluetooth> Select the device Bluetooth name> ignore the device, and you can untie it successfully.

Reset Settings

This operation will reset the device settings and data, or restore the factory status.

1. Go to Hybridsmart APP Settings> My Device> Reset Settings> Can be reset in 2 types:
 - 1) Reset-clear all data, automatically reconnect the device and refresh the APP.1-1) Long press the device at 2 o'clock and 4 o'clock button for 10 seconds.
 - 1-2) Select settings-my device-reset the watch.

- 2) Erase all contents and settings of the device-erase all data, settings and connections, and Bluetooth off.
In the App select Settings-My Device-Reset Watch "Clear All Content and Settings".

If you need to rearrange the device after clearing all the content and settings, long press the 3 o'clock button for 5 seconds to activate Bluetooth.

Common answers to your questions

If you have questions during your use, go to Hybridsmart APP Settings> Help> Common Questions answers or contact us to send your questions to us in text / pictures / movies. We will guide you to find the most appropriate solution!

Operation video demonstration

If you encounter questions in the use or want to quickly understand the function use plan, please go to the corresponding function section, click the question mark in the upper right corner, view the video operation or content introduction. Press the custom function module, click on a single function icon> Learn more> How to operate? You can enter

Youtube Channel View detailed video instructions, such as how to use Let's walk, features, or how to bind the device to the smart table.

OT A

When the device software function upgrade or optimize the function experience, we will upload through the server and prompt you to have a new version by Hybridsmart APP, click the APP home page pop-up link to enter the upgrade or click Settings> to upgrade the smartwatch software.

(Tips: Do not exit the interface during the upgrade process and do not operate the watch button.)

corrective maintenance

1. Avoid intense collision or violent use, which will reduce the service life of the product.
2. Avoid prolonged exposure to extreme temperatures that are too cold or overheated, which can cause permanent damage.

equipment maintenance

If your equipment has repair needs, please go to HybridSmart Settings > Help > Contact us to send your needs to us, we will provide you with a solution as soon as possible!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.