



**USER MANUAL**  
**NYCETEK MAGNETIC WIRELESS CAR**  
**CHARGER**  
**PLEASE READ THE MANUAL BEFORE**  
**USE**

# Contents

Specifications	01
Attentions	03
Tips for Using the Suction Cup	05
Tips for Using the Magnetic Ring	12
How to Assemble the Magnetic Ring	14
Using Steps	16
Installation Video	23
Customer Service	24
FCC Warning Statement	25

# Specifications

Product Name	Nycetek Magnetic Wireless Car Charger
Model	NKCM-01
Applicable Places	Dashboard / Touchscreen
Function	Foldable Adjustable Rotatable
Material	High Strength Steel Aluminum Alloy ABS
Weight	0.29 lb
Input	5 V/2A 9 V/2A 12 V/2A

Output	5W/ 7.5W/ 10W/ 15W (MAX)
Charging Distance	≤ 4mm
Working Temperature	32°F-104°F(0°C - 40°C)
Package List	MagSafe Phone Mount * 1 Accessories Package * 1 Magnetic Phone Ring * 2 User Guide * 1 USB-C to USB-C Cable * 1 USB-A to USB-C Cable * 1 Installation Frame * 1

# Attentions

1. Please install according to the instructions to avoid dropping.
2. Please do not disassemble.
3. Please install the nycetek magnetic wireless car charger in the appropriate position before driving.
4. Please do not operate or adjust the nycetek magnetic wireless car charger while driving.
5. Do not install your nycetek magnetic wireless car charger in a place that affects airbags or driving.
6. Keep the nycetek magnetic wireless car charger away from the child.
7. Keep the nycetek magnetic wireless car charger away from water, liquid, or wet areas.
8. Cut off the power before cleaning the device.

9. Only use a dry cloth or brush to clean the device.
10. Stop using it if visible defects are observed on the charger.
11. Make sure it's compatible with your device before using it.
12. If you are using a leather or metal case, please remove the case before charging.
13. If you use a thicker case, please take off the case before charging to avoid affecting the charging speed and performance.
14. Please use the original cable for charging, if you use other cable, please make sure it meets the 5V/3A QC3.0 specification.
15. If the temperature inside the car is too low or too high, it will affect the normal charging speed of the nycetek magnetic wireless car charger.

16. In order to protect the environment, please do not dispose of the products indiscriminately.

## Tips for Using the Suction Cup

1. If the surface is flat and smooth, you can use suction cups directly on the dashboard; while the surface is flat but very rough, please use suction cups on Touchscreen behind.
2. Do not attach the suction cup to super curved surfaces, plush fabrics surfaces. Otherwise, it will not be firmly attached.

3. It is not recommended to stick the suction cup on the surface of leather, wall or window film, because the suction cup has strong adhesion and attraction, which may cause surface damage.

4. If suction cups are often used in high temperature, low temperature or humid environment, the suction power will be reduced; please avoid long-term direct exposure to sunlight.

5. After using for a long time, if the suction power is not enough, please remove the suction cup, replace it with our spare 3M suction cup pad, and then reinstall it on your Touchscreen or Dashboard.


# Installation Steps

## Method 1 - Touchscreen

① Wet Wipes



② Dry Wipes

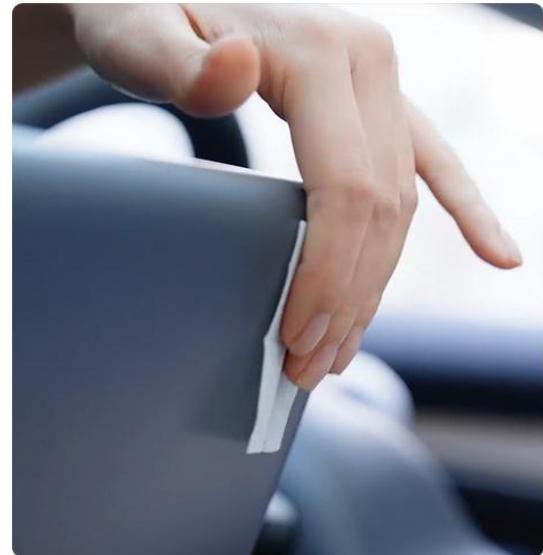

1. Clean the back of the upper left corner of the Touchscreen with a wet wipes, then dry it with a dry wipes.





2. Please keep the bottom ends of the installation frame stuck on the suction cups, then remove the adhesive protection sticker, align the installation frame with the upper left corner of the touch panel and install it, then pull out the installation frame while pressing the suction cups. Finally, **press the suction cups and suction cup edges for 30 seconds** to secure. Please leave the nycetek magnetic wireless car charger for **12 hours** to ensure maximum adhesion.

## Method 2 - Dashboard

1. Select a location on the left or middle of the dashboard that you prefer. Clean the surface of the dashboard with a wet wipe and then dry it with a dry wipes.
2. Remove the red protective sticker from the 3M adhesive pad and place the pad on the surface where you want the dashboard to be. Press it down firmly for 30 seconds to secure it in place. Let it sit for 24 hours to achieve maximum adhesion.

# Tips for Using the Magnetic Ring

The nycetek magnetic wireless car charger can be used in the following ways based on your phone model and usage

## 1. Direct Magsafe:

- a. iPhone 12, 13, and more newer models
- b. Phones with Magsafe feature
- c. Magsafe phone case



## 2. Requires installation of magnetic ring:

- a. iPhone 11 and more older models
- b. Other phones
- c. Phone cases without Magsafe



Note: If your phone has Magsafe feature but your phone case doesn't, we recommend installing a magnetic ring for your phone safety and to enjoy the best experience.

# How to Assemble the Magnetic Ring



1. Clean the back of your phone or phone case with a wet wipe, then dry it with a dry wipe.


2. Align the match-up card with the center of the phone (Apple logo is in the center of the circle) and make sure that the tick marks on the left and right sides of the match-up card are on the same scale. Remove the magnetic ring sticker, place the magnetic ring on the corresponding position of the match-up card, and then remove the docking card.

3. Press the ring for 30 seconds to make sure it is fixed.

Note: That after attaching the magnetic ring, please wait 12 hours to ensure the best adhesion and securely hold your phone.

# Using Steps For Touchscreen

1. Open the suction cup lock, and then pull up the telescopic arm to the appropriate height.

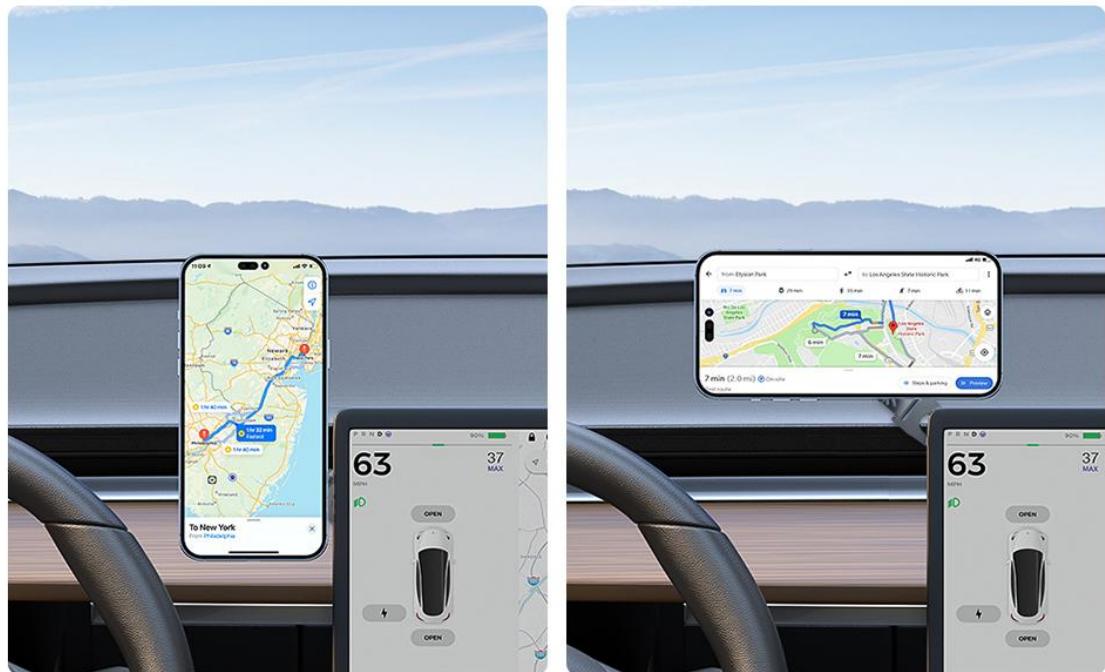

2. Flip the nycetek magnetic wireless car charger to face the driver's side or your desired angle, and place your phone on it to use.



3. Open the suction cup lock, adjust the nycetek magnetic wireless car charger rotation to above the screen, and lock the lock to use.
  
4. Open the suction cup lock, retract the telescopic arm, and lock the lock. Fold the nycetek magnetic wireless car charger backwards parallel to the telescopic arm to complete the storage and hide the nycetek magnetic wireless car charger.

# Tips: Wrong Way To Use It



The magnetic phone ring is not fully attached to the magnetic phone holder.

Magnetic cell phone ring does not fully fit the nycetek magnetic wireless car charger is easy to cause the phone to fall.

# Correct Way To Use



The magnetic phone ring is fully attached to the magnetic phone holder.

Fully fit the magnetic phone ring to the nycetek magnetic wireless car charger, the phone will be stably attached to the nycetek magnetic wireless car charger after fully fit.

# For Dashboard

1. Please install the nycetek magnetic wireless car charger to the dashboard using Method 2 and choose the appropriate angle, fold the arms of the nycetek magnetic wireless car charger to a 45° angle.



2. Adjust the nycetek magnetic wireless car charger to face the driver's seat or your preferred angle, tighten the lock, and place your phone to start using it.

## Power on

Please use the original cable to connect the nycetek magnetic wireless car charger to a supported car charger adapter.

## For Tesla Cars

Use the USB C- USB C cable to directly connect the PD charging port on the center console of Tesla and the nycetek magnetic wireless car charger, and the phone can be charged normally after putting it on.

Or choose the appropriate cable according to the Car Charger Adapter/Tesla USB Hub in your car and connect it for charging.


## For Other Cars

If your car has a USB or PD charging port in the center console, you can directly choose the appropriate cable to connect to the power port and then charge your phone or other devices.

If your car has a Car Charger Adapter/Car USB Hub, then you need to choose the appropriate cable to connect the Car Charger Adapter/Car USB Hub power port, and then charge your cell phone or other devices.

**Note:** Please check that the USB cable is properly installed and that the power port is energized before charging.

## SCAN QR CODE

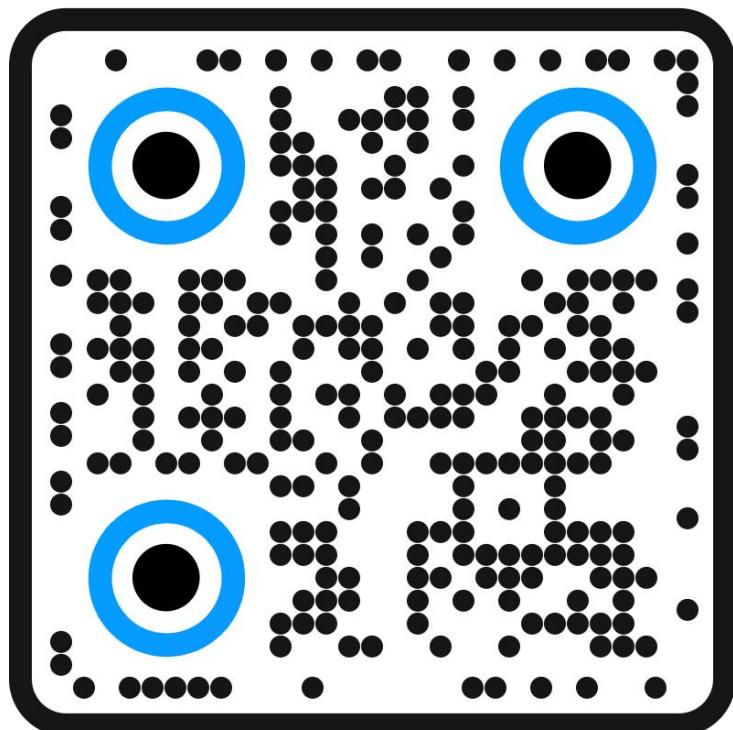

Scan the QR code to watch a detailed installation video

# Customer Service



30 Days No-questions-asked Return Policy



24 Months Valid Warranty Period



Lifetime Technical Support



[nycetekgwc@gmail.com](mailto:nycetekgwc@gmail.com)

Contact us to upgrade to a 36 Months warranty

Two methods to watch product installation videos:

1. Search Our Channel On Youtube



2. Visit the installation and use video page of Nycetek store

FCC Warning statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received,including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.