

Thank you for your purchase of Latumab Eye Massager. While enjoying muscle and body relief, you should use it with care and safety in mind. To ensure safety and avoid any property damage, please read this manual carefully and use as indicated. Non-compliance may cause serious injuries or death and/or severe property damage.

Important Safety Instructions

- This product is not intended for medical use. It is intended only to provide a luxurious massage
- Any individual who may be pregnant or recently gave birth, has a heart condition or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, an abnormal or curved spine, is at an increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her body, is being treated for a medical condition or physical injury or is under a doctor's care should consult with a medical professional before using a massaging device designed for home use.
- If you feel unwell or in any unusual discomfort, please stop using the product immediately. Extensive use could lead to the product's excessive heating and shorter product life.
- Please keep the massager away from heat and avoid using it in places where the surrounding temperature is relatively hot.
- **DO NOT** use the massager with wet hands. **DO NOT** insert any object into the charger input. This may cause damage to the product or electric shock.
- This unit should not be used by children or invalids without adult supervision
- It is prohibited for non-professional personnel to repair the massager or replace parts.
- If the power cord is damaged, it must be replaced by the maintenance department or similarly qualified persons approved by the manufacturer so as to avoid potential hazards.

1

• **DO NOT drop**, apply excessive force or heavy weight over the product to avoid malfunction and/or damages.


• **WARNING** Chemical Exposure: If the battery pack is leaking, **DO NOT** allow the liquid to come in contact with skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Place the battery in a sealed plastic bag and dispose of safely according to local environmental regulation.

• **DO NOT** disassemble or drill into the product and/or batteries.

• **DO NOT** take apart, modify or change the parts. This may cause product malfunction, electric shock, or fire. And the product will no longer be covered under manufacturer warranty.

• **DO NOT** throw the battery into fire or heat it.

Introduction About the Eye Massager

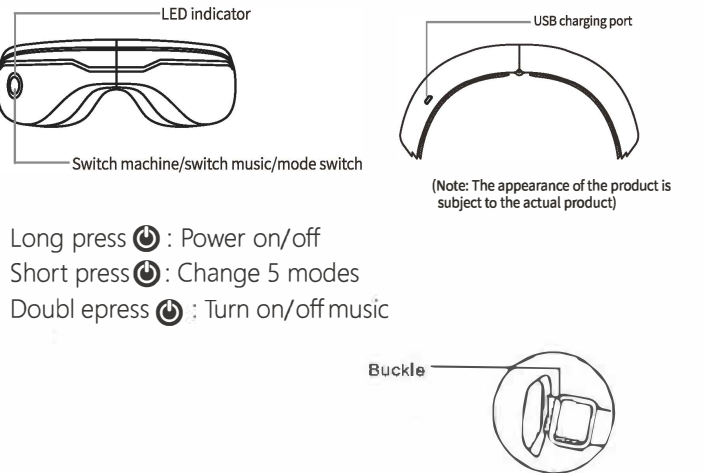

2

Wearing the Massager

Before wearing, please take off your glasses, contact lenses, accessories, etc.. Align the cloth cover to your eyes, put on the device, adjust the elastic band, adjust the device to the most comfortable position. **Hold the power button for 3-5 seconds to turn on the eye massager.**



Modes Details

- **Automatic Mode:** Air compression + Vibration + Heat + Music
- **Clear Mode:** Air compression + Heat + Music
- **Vitality Mode:** Air compression + Vibration + Music
- **Beauty Mode:** Heat + Music
- **Sleep Mode:** Air compression + Music

Music OFF: Double press to turn on/off the music.
ONLY Heat: Choose Beauty Mode, turn off music

3

Wireless Pairing

The BT is automatically ON when powering on, choose 'Latumab AR210' in you BT list and connect it with your device.
Note: Wireless pairing will stop the music, then you can choose your music and change volume on your phone. Voice prompt is not affected.

Charging

- Please charge the massager before use.
- To charge the massager, plug the charger into an outlet and into the unit's Charging Interface.
- **The indicator flashes Blue when charging, and be solid Blue when complete.**
- For safety considerations, the massager will NOT work while charging. Additionally, the massager will automatically shut off after 15 minutes of continuous use.
- For better maintenance, please recharge the massager once at least every 2 months if you don't use it regularly.

Product Care and Maintenance

- Place the massager in a safe, cool, and dry place when not in use.
- Always unplug the massager prior to cleaning.
- After use, wipe massager with a soft, damp cloth using non-abrasive cleaners. If necessary, clean with a sterilizer.
- DO NOT submerge the massager in water or any other liquid.
- Keep away from all solvents and harsh detergents.
- DO NOT attempt to repair this massager. There are no user-serviceable parts.
- DO NOT dispose the massager in a land fill. It contains a Li-ion battery and other electrical components, which is considered hazardous E-waste.

4

Specifications

Name: Latumab Eye Massager
Model: AR210
Input: DC 5V 1A
Battery: 1200mAh
Modes: 5
Net Weight: 376g
Packing List
1 x Eye Massager
1 x USB Cable
1 x Manual

Troubleshooting

Problems	Possible Causes	Resolutions
Too much noise in operation	Normal sound of air pump inflation & deflation.	No need to resolve it.
Fails to power on.	Battery is low.	Recharge the device.
Air compression is weak. Vibration is weak.	Battery is low.	Recharge the device.
Automatically shuts off	15 minutes timer.	Turn on the massager again.

Warranty

Warranty (1-Year-Limited)

The manufacturer's warranty is void under the following circumstances but not limited to:

- Improper or inadequate maintenance or modification.
- Accident, misuse, abuse, contamination, or other external causes.
- The use of unspecified adapter and accessories.
- Loss or damage in transit.
- Damages that occurs as a result of one's failure to follow the instructions.
- This warranty does not apply to expendable or consumable parts and does not extend to any product from which the serial number has been removed.

Customer Service

We have an award-winning warranty, exchange, and customer service eam that guarantees hassle-free solutions to any issue you might have within 24 hours.
Email: latumabs@outlook.com

RF exposure statement
This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5

Notice



This symbol on the device or its packaging indicates: Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Version number V2.1



6

Latumab



User Manual

latumabs@outlook.com

Model: AR210

Scale 1:1 Unit:mm

印刷颜色 ▶ 四色印刷

物料材质 ▶ 157g双铜纸-折页

样品

成品尺寸 ▶ 97*145mm

特种工艺 ▶

样品数量 ▶ 5 套