
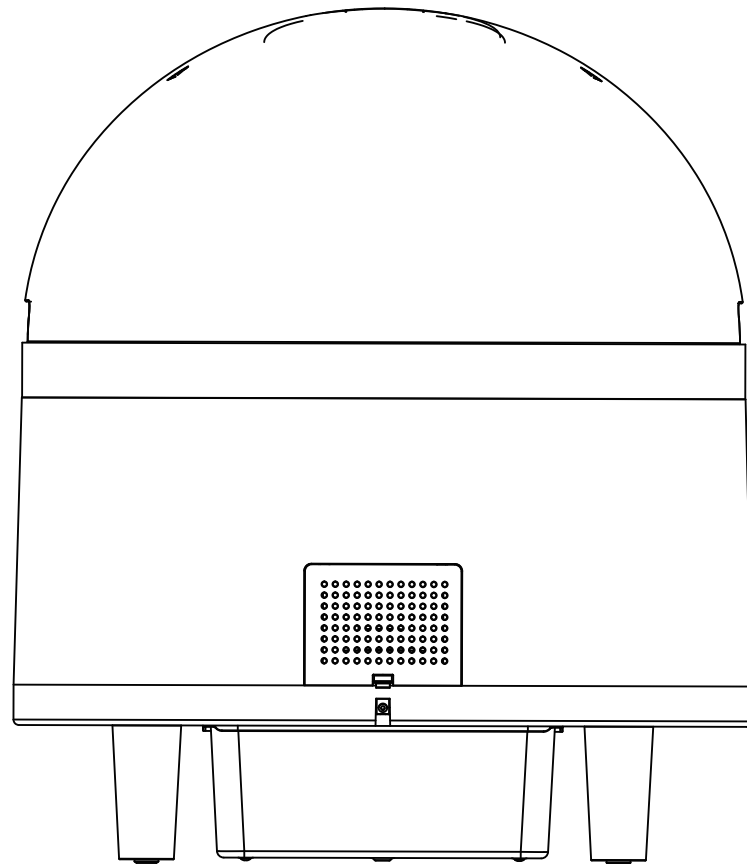


# Automatic cat litter box

Certificate of product  
Inspection date: \_\_\_\_\_  
The inspector: \_\_\_\_\_  
Conclusion: Qualified

Please read the instruction carefully before use and keep the instruction for reference.

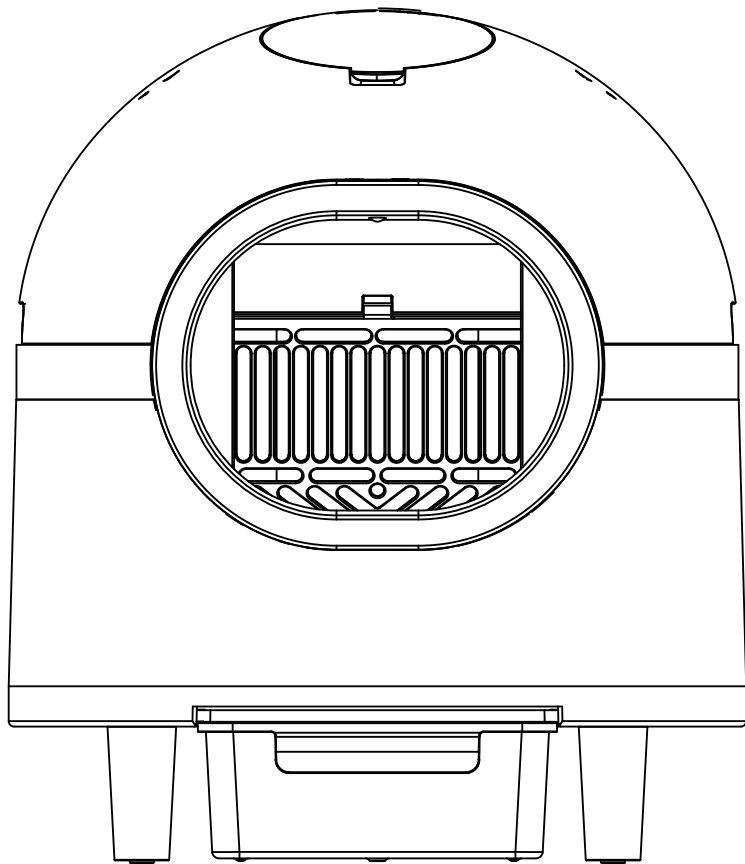

## Directory

Device wifi network configuration instructions

### Product Introduction:

Body structure description 01  
Operation Panel 02

### Instructions for use:

Operation Guide 03

### Cleaning and maintenance

Daily Maintenance 03

### Installation instructions

Complete Installation 04  
Product Clean 05  
Cleaning agent replacement 06

### Safety warning

No forced attention 08

### Service guide

Product parameter 10  
Fault self-test 11  
Environmental Listing 12  
Warranty Notice 13  
Warranty card 14

## Wi-Fi network configuration instructions

This product can through the "Tuya Smart" APP


1. Search for "Tuya Smart" APP in the mobile app store to download and install.
2. Keep the phone open wi-fi and bluetooth, wi-fi button for 3 seconds after the white lights flashing and dripping sound - open the APP click add equipment - waiting for automatic search, found that after adding wi-fi - input the password for the connection is successful.
3. If the route account or password of a device user is changed, the device cannot connect to the device. In this case, perform the preceding steps and hold down the Wi-Fi button for 3 seconds to reconfigure the network.
4. Because the APP to upgrade or update, the actual operation may be slightly different with the description, please refer to our current APP guidance, or consult the official customer service.

#### Attention!

The device only supports 2.4G Wi-Fi band. Please ensure that the router is in 2.4G band when connecting.

## Product introduction


### Main structure description

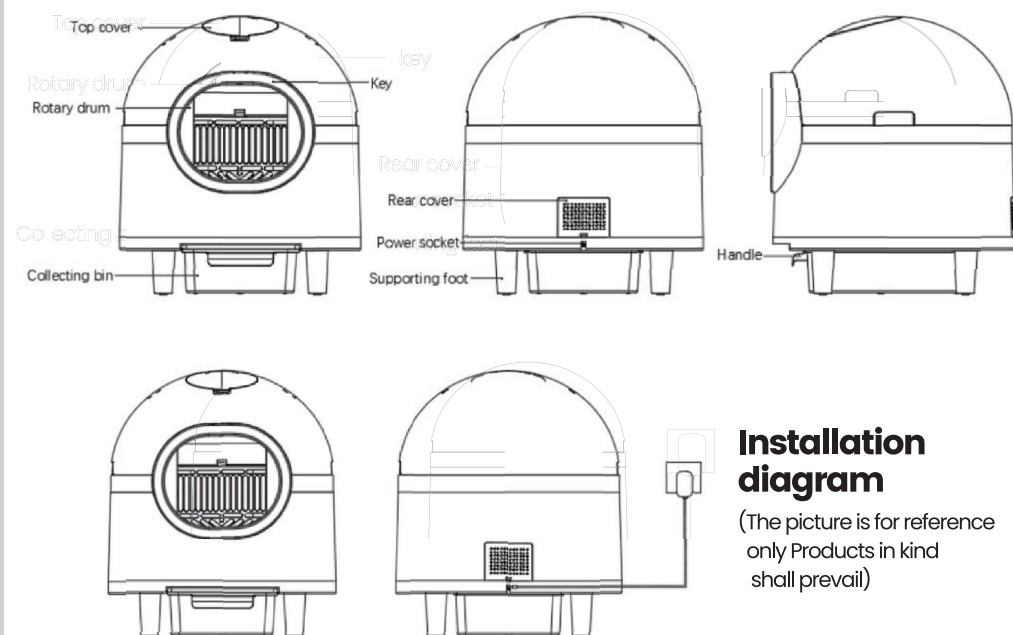

### Installation diagram

(The picture is for reference only Products in kind shall prevail)

### List of parts

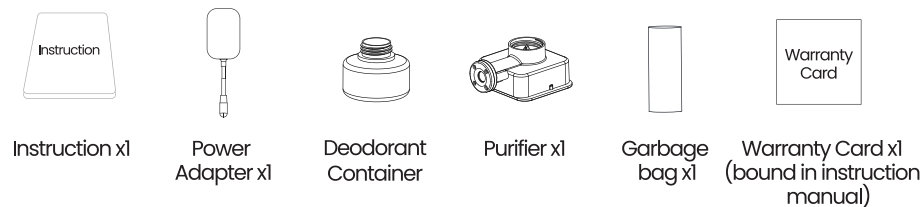



### Operating panel

#### WIFI button


- **Reset network:** Press and hold for about 3 seconds
- **Blinking white light:** The Internet is being connected to
- **White light on :** the connection is normal
- **Yellow light on :** Networking anomaly

#### Cleaning button


- **Cleaning cat litter function:** Short press  for 1 second and the buzzer will sound to activate the clean function .
- **Clear drum clean all cat litter function** Press  for 3-5 seconds and the buzzer will sound to activate the clear function.
- **White light on:** Product is working
- **Blinking yellow light:** The top cover or collection bin of the table is not reset, and the collection bin is full or reminders such as the need to replace the purification solution.
- **Yellow light on:** The product has a malfunction. Please check the specific fault information through the APP or contact customer service for assistance.

## Instructions for use

### Operating instruction | Power on

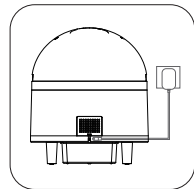

Insert the power adapter port into the rear hole of the product

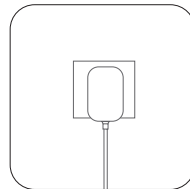

Plug the strip end of the power adapter into the electrical outlet

### Daily maintenance


**Note!** Maintenance work is not within the scope of maintenance.

- Special purification solution should be used to ensure the product's clean taste, deodorization and sterilization effect.
- Matching special cat litter should be used to ensure the cleaning effect of the product.
- Matching special garbage bags should be used to ensure the cleaning effect of products.


## Installation instructions

### Complete installation


#### Deodorant container and purifier

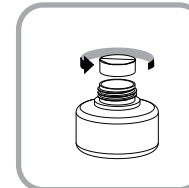


①. Remove the deodorant container and remove the bottle cap by turning it counterclockwise

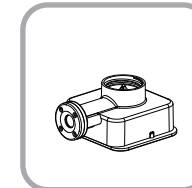


②. Remove the purifier

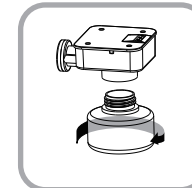


③. The deodorant container is vertically aligned with the mounting port and pressed upward. After opening the sealing port, it is rotated counterclockwise to the purifier

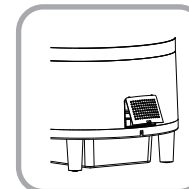

④. Find the back cover of the product and press the two clasps on the back cover, and then remove the back cover

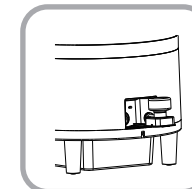

⑤. Push the installed purifier module to the product slot and push it to the end

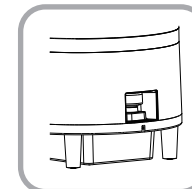


⑥. Install the back cover after the purifier is inserted into place


#### Attention!

There is no deodorant in box, only deodorant container, please buy deodorant by your needs.


### Add cat litter

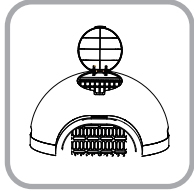

①. Turn the round cover above the top cover upward

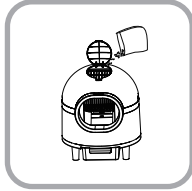


②. Pour appropriate amount of cat litter from the mouth of the top of the top cover (recommended: add special cat litter for the first time 5 liters)

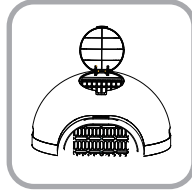


③. The cat litter should not exceed the MAX mark inside the bucket and not be lower than the MIN mark inside the bucket.

### Install bin garbage bags

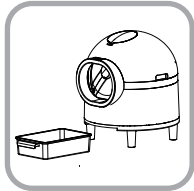

①. Pull out the bottom bin

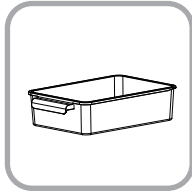


②. The garbage bag is first set to the rear two corners, and then pulled back and stuck on the front two clasps, and then smooth, reset the collection bin


- ①. The weight of cat litter should not exceed 5KG.
- ②. After adding cat litter each time, the collection bin needs to be pulled out and then pushed back, otherwise the cat litter basin will not automatically clean.
- ③. Suggest that the diameter of tofu cat litter should not exceed 1.5MM.

## Clean the container and change the purifying liquid


### Clean the collection bin

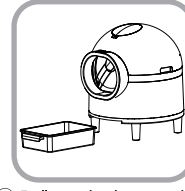

①. Pull out the bottom bin

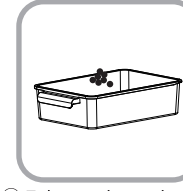

②. Take out the garbage bag and tighten the handle to seal it

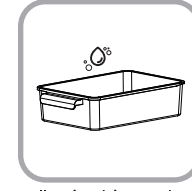


③. The collection bin can be washed dry with clean water, and then reset after loading a new garbage bag


### Rotary cleaning




①. Extract the cover from the side of the top cover upward

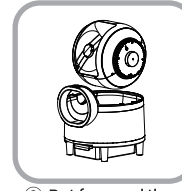


②. Put forward the cylinder

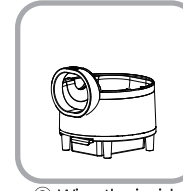


③. Wipe the inside with a dry towel

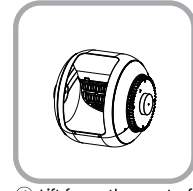


④. Lift from the root of the screen to make the screen fall off from the buckle

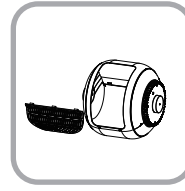

⑤. Take out the screen

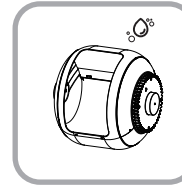


⑥. The rotary cylinder is cleaned directly with water

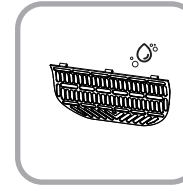


⑦. screen cleaning alone, dry after reset


## Purification fluid replacement

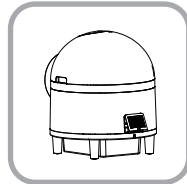


①. Power off, find the back cover on the back and take it off

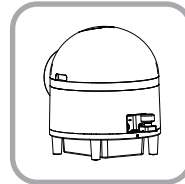


②. Pinch the bottom of the purifier and take it off

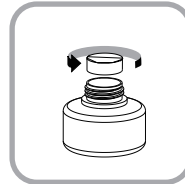


③. Take out the Deodorant Container, take out the new purification liquid and open the bottle cap

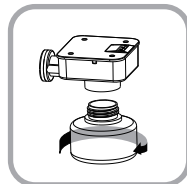

④. Install fresh deodorant and clean up surface stains

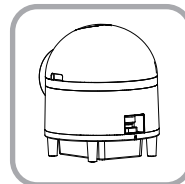

⑤. Put the good purifier at the product card slot and push it to the bottom

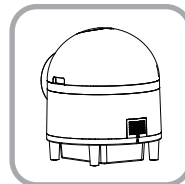

⑥. Reset the rear cover of the product

## Safety warning

### Note!

To ensure safety and avoid injury and property damage to yourself and others, please observe the following safety precautions. Misuse may result in accidents.

⊘ Indicates prohibited content



Keep out the sun



No flammable articles



No wet area



Do not touch with wet hands

- The machine should be placed in a cool and dry place in the room. Avoid the place exposed to strong sunlight, otherwise it will easily cause aging of product parts.
- Do not allow young children to handle, touch, approach or climb. Children and people with intellectual disabilities should use it with a guardian.
- Do not use gasoline and other organic solution to wipe the fuselage, the product is strictly prohibited to wash, water. Do not put the product in contact with or near inflammable and explosive materials.
- In order to save electricity, disconnect the corresponding power switch when not in use for a long time, and clean the remaining sand in the machine. Install and fix the machine before it can be used.
- Do not connect the booster transformer to the power plug.
- The machine is not allowed to be used in the place where there is water spraying, and electrical appliances are not allowed to be used in the cabinet. The fuselage should be at least 10cm away from the wall, and no other items should be placed on the bottom and surrounding areas.
- The product must be placed on a clean, flat, hard surface.

! Indicates mandatory content



Need profession-  
als

- It is strictly prohibited to extend the power cord arbitrarily to avoid fire
- If the power cord is damaged, it must be replaced by the manufacturer, maintenance department or professionals to avoid danger

⚠ May cause minor injury or damage to property

- When cutting off the power supply, do not pull the power cord directly to prevent it from being broken. Keep flammable and volatile substances away from the machine. In the transportation and loading and unloading process, should be handled lightly, prevent a collision scratch products and accessories.
- The machine shall not be installed outdoors. Should be placed in a ventilated, dry, temperature of 4~40 ℃, relative humidity does not exceed 90%. In an environment without corrosive gases. When the ambient temperature drops to 0 ℃, the pure flavor liquid should be drained in time to prevent the pure flavor liquid from freezing and damaging the machine. Please use the special matching cat litter. After the machine is out of service, empty the cat litter in the bucket and the cat feces in the collection bin. Keep the power plug clean. Do not insert or remove the power plug with wet hands.
- There will be slight vibration and noise when the cylinder is rotating, which is a normal phenomenon
- Wet or dusty areas may cause circuit damage. High magnetic appliances are nearby, which may cause fire, product damage or circuit failure.
- When moving the product, handle it gently and avoid dragging it.
- Do not place other items on the top of the product, which may affect the normal work of the product.
- The product can only be used on the special accessories provided by our company

Precautions and Troubleshooting Causes for networking failure:

- To ensure smooth networking of the product, please ensure that the whole machine is installed in a place with strong wireless network.
- This equipment contains a radio transmitting module with model approval code CMIITID:2020DP6462 and device model: WBR3.

## Service guide

### Product parameter

Due to product improvement, the following parameters are subject to change, mainly the product nameplate  
The recommended ambient temperature is 4~40 degrees Celsius. Can not be lower than 2 degrees Celsius, otherwise the purification liquid icing damage the product

Model number	
Rated voltage	12V ---
Rated power	8.5W
Drum capacity	60L
Product size	540*540*625mm
Product package size	565*565*580mm
Litter Container Capacity:	15L



Fault self-test

Note!

The following is the common judgment and inspection, if simple treatment cannot be eliminated, please send to the maintenance network or Call the customer service hotline for consultation. Please do not disassemble and repair by yourself to avoid danger or Cause damage to the product.

Problem	cause	Treatment method
Networking failure	The product is not energized.	Electrify the product
	No network exists in the place where the product is located	Check whether there is a network
	The phone did not turn on Bluetooth	Turn on Bluetooth
	WiFi is not a 2.4G signal	WiFi is adjusted to 2.4G signal
The product is energized, and the cylinder does not rotate	The drum package is not removed	Remove the foam from the top of the cylinder and the pearl-cotton from the bottom
The cleaning button turns yellow and the light flashes	The anti-clamp tube is sheltered	Cut off the power first, check if the anti pinch tube is obstructed, and wipe it clean with a damp tissue
	The cylinder does not rotate when the product is powered on (Top cover or bin not reset)	Reset the top cover or bin
	Press the cleaning button once, and the drum can rotate (The purifier is not installed properly or the remaining amount of purification liquid is insufficient)	Reinstall the purifier or replace with a new purification solution
	Press the cleaning button once, the rotary drum cannot rotate (The collection bin is full, and the sensor is sheltered)	1. Check if the collection bin is full; 2. Check whether the top of the Bin bag is protruding; 3. Check if the fecal collection bin sensor is sheltered by dirt
Cleaning button yellow light permanently on	The infrared radiation at the entrance has been disturbed	Check if there are foreign objects blocking the entrance

 The "environmental protection life" of this product under normal conditions described in the manual is 10 years, which is quoted from the "Guidance Opinions on the Environmental Protection Life of Household Appliances" of China Household Electrical Appliances Association.

Skills:

1. The machine is placed on a flat hard ground, and there are four black parts on the bottom that should be in contact with the same plane

2. Make sure the cat weighs more than 1kg, otherwise it may cause the cat to be injured.

**FCC Statement** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Exposure Information** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Zhejiang Zhaohong New Material Technology Co., Ltd.



## Warranty instructions

### Maintenance service guarantee

In case of product failure, please contact our local distribution service network or customer service center. The litter box is guaranteed for one year. Consumables are not covered by warranty, please purchase them by yourself after use.

The start date of the warranty period is subject to the invoice of the product. The following conditions are not covered by the warranty:

1. Damage caused by improper use, storage and maintenance of consumers.
2. Damage caused by disassembly and repair without the company's designated maintenance department.
3. The model of the invoice is inconsistent with the model of the maintenance product or altered.
4. No valid invoice.
5. Force majeure causes damage.
6. We are not responsible for the quality accidents caused by the non-standard gifts or accessories of our company.
7. This product is used for non-household purposes, the whole machine warranty will be implemented for half a year.
8. Failure caused by human or improper use is not covered by warranty.
9. Please use the spare parts provided by our company. Old parts cannot be reused.
10. Failure or damage caused by forced use of the product beyond normal conditions is not covered by the warranty. For products not covered by warranty, our customer service center is still willing to serve you.

Product implementation standards:

GB 4706.1-2005 FCCID: 2BDYI-CH-ICB006

### Note!

All contents in this manual have been checked. If there is any typographical error or misunderstanding in the content, please refer to the company. If there is any technical improvement, it will be included in the new manual without prior notice. If the appearance and color of the product are changed, the physical object shall prevail.

## Warranty Card (customer deposit)

Product Nameö; \_\_\_\_\_ Specifications and Modelsö; \_\_\_\_\_

Date of Purchaseö; \_\_\_\_\_ Invoice Noö; \_\_\_\_\_

Purchase address and Mallö; \_\_\_\_\_

User Nameö; \_\_\_\_\_ Contact Numberö; \_\_\_\_\_

User Addressö; \_\_\_\_\_

Descriptionö;

To facilitate accurate contact and protect your legitimate rights and interests, please fill in the above information carefully.

2.This warranty card shall be valid only after being verified and confirmed by the salesperson on site and the user.

3.This warranty card shall be used as the warranty basis together with the valid purchase certificate.

- - - - -

## Warranty, replacement parts registration form

Model/Article Noö; \_\_\_\_\_ The product numberö; \_\_\_\_\_

Date of Purchaseö; \_\_\_\_\_ Invoice Noö; \_\_\_\_\_

Purchase address and Mallö; \_\_\_\_\_

User Nameö; \_\_\_\_\_ Contact Numberö; \_\_\_\_\_

User Addressö; \_\_\_\_\_

- -