



# **TANK S2**

User Manual

## **Download Multilingual User Manual (in PDF)**

Please scan the QR code below for the user manual in multiple languages.




The supported languages include: English, French, German, Italian, Spanish, Turkish, Arabic, Russian, Ukrainian, and Traditional Chinese.

## Package List


Smartwatch (including strap), Magnetic charger, User manual



Smartwatch (including strap)

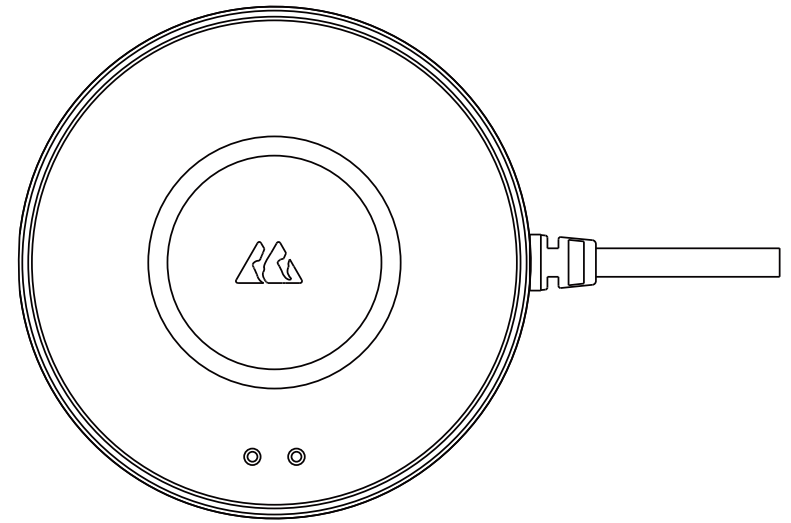


Magnetic charger

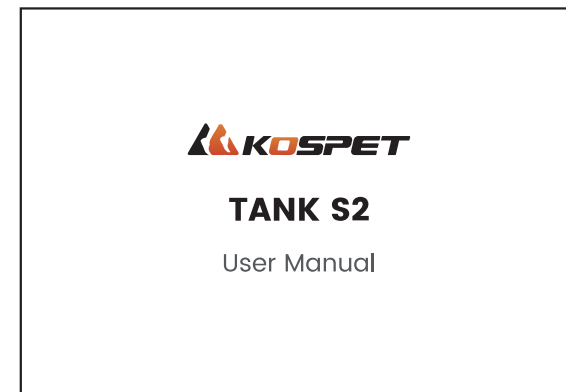

User manual

## About the Watch

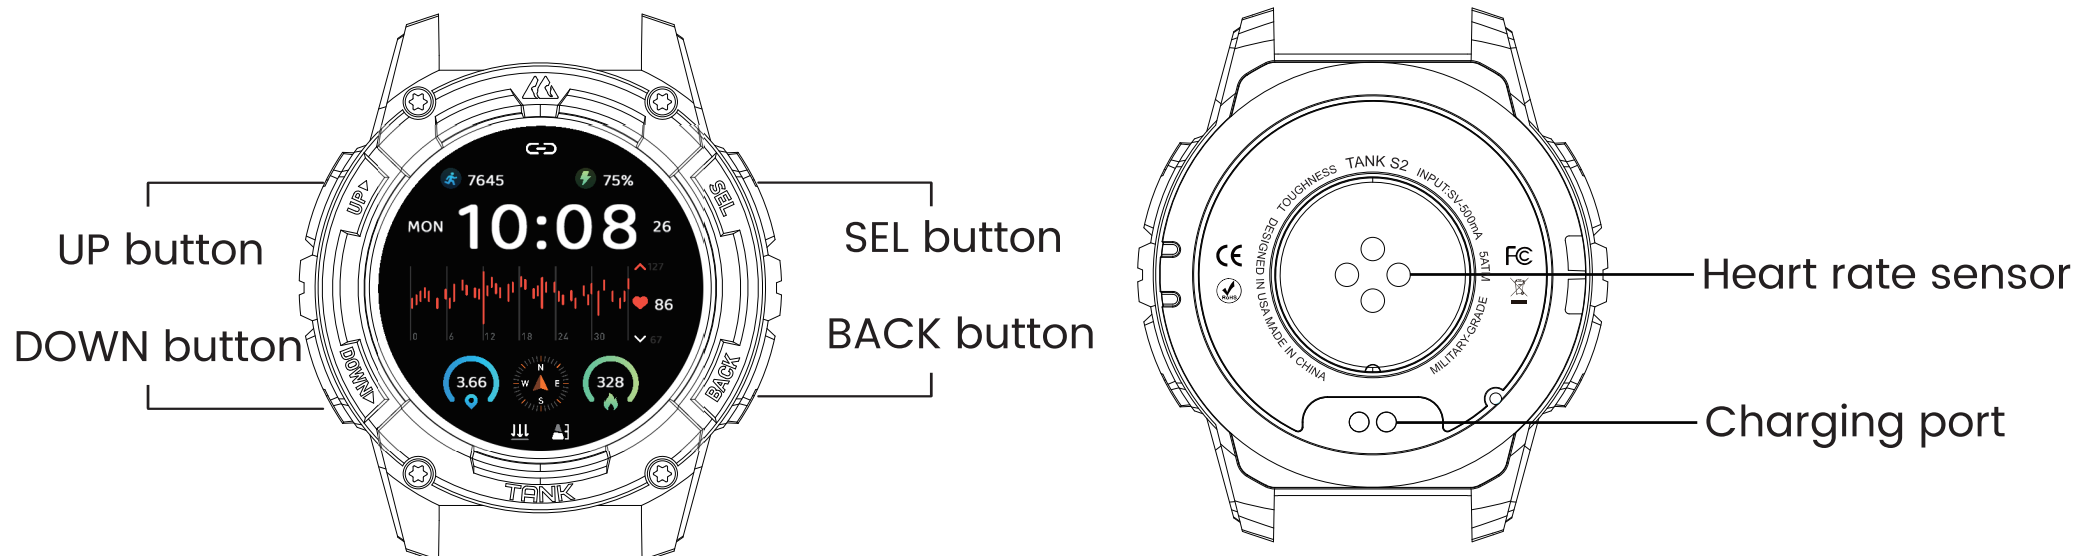


## Watch Charging

- Please fully charge the smartwatch before first use.
- Please plug the watch charger's USB connector into a power adapter or a computer's USB port.
- Place the watch onto the charger, keep it in a proper direction and position, and ensure that the metal contacts on the back of the watch are closely connected to the charger's base.

### Notes:

- Please use the KOSPET original magnetic charger to charge the watch, and make sure the charger is dry and without metallic foreign objects on it.
- Please use the power adapter with output current of 500mA or more, which is certified to meet safety standards.

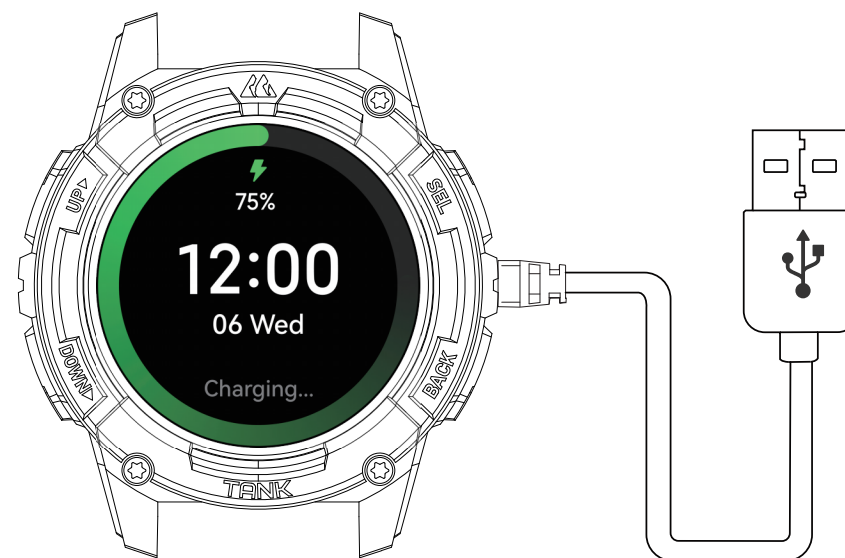

## App Installation

Please download the KOSPET FIT App before using the smartwatch to access more sports and health data, personal settings and beyond, facilitating your journey towards a healthier, more active lifestyle.

Method one: Scan the QR code on the right to download and install the App.



App QR code



KOSPET FIT


Method two: Enter “KOSPET FIT” on App Store or Google Play to download and install the App.




App Store




Google Play

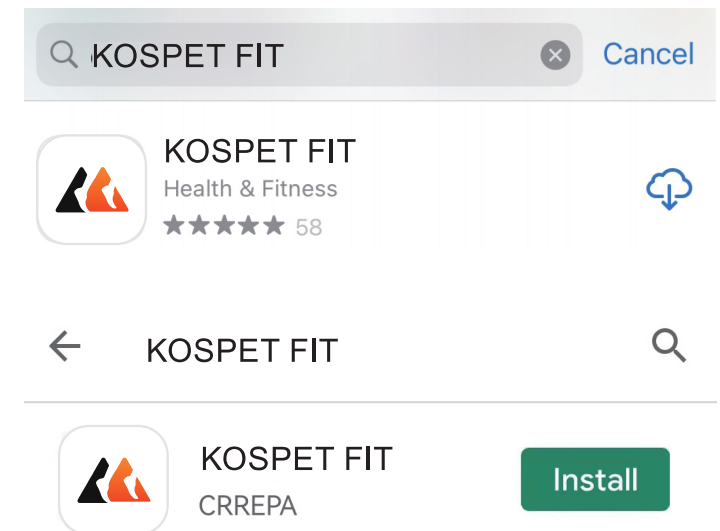

## App Registration and Sign-in

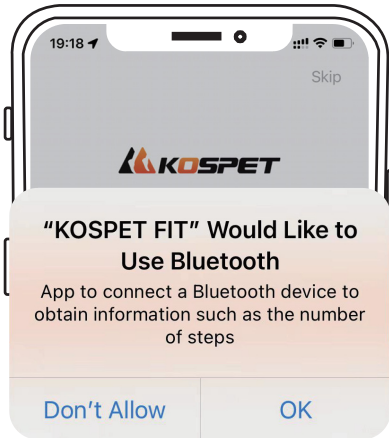


1. Open the App, allow it to access Bluetooth, location, and grant other necessary permissions on your phone.

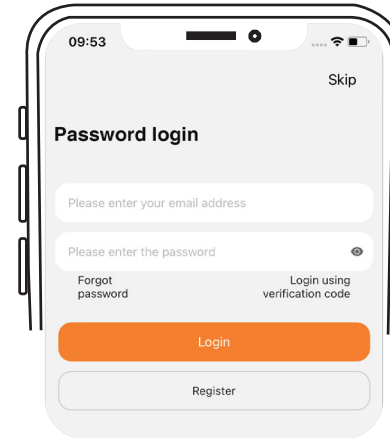

2. Register and sign in to the App.

## Watch Pairing

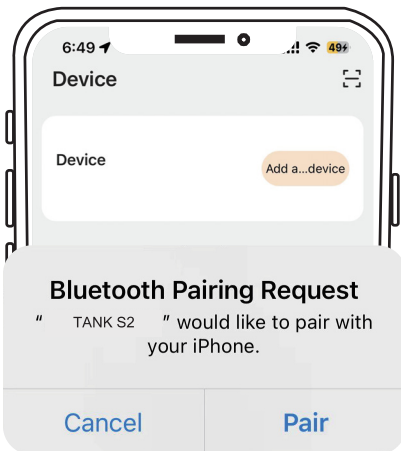

1. Follow the prompts on the App to find and add the device (smartwatch).



2. Allow the watch to connect to the App on your smartwatch.

Note: Please don't pair the watch directly via your mobile phone's Bluetooth on Settings.


## Bluetooth Calling Setup

For iPhones:

Once the watch is connected to the App, tap the call icon on the watch to enable Bluetooth calling.



For Android Phones:

Once the App is connected to the watch, tap Pair on the App to enable Bluetooth calling.

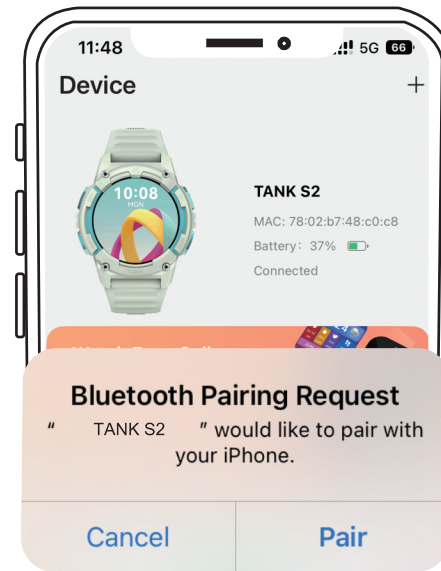

## OTA Update

Enter the Device page on the App, then tap Firmware Update for the latest firmware version.

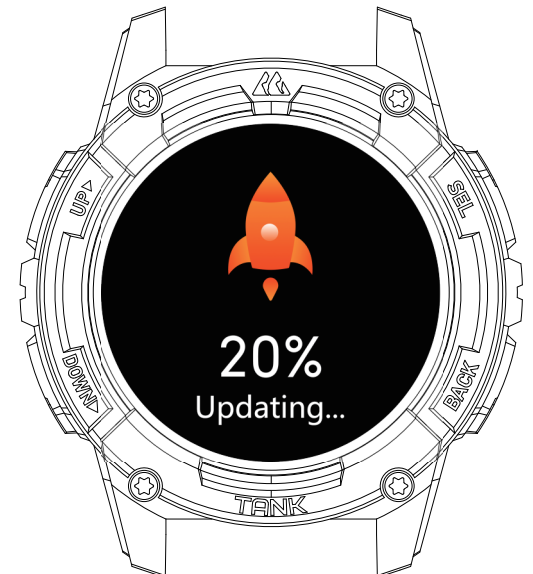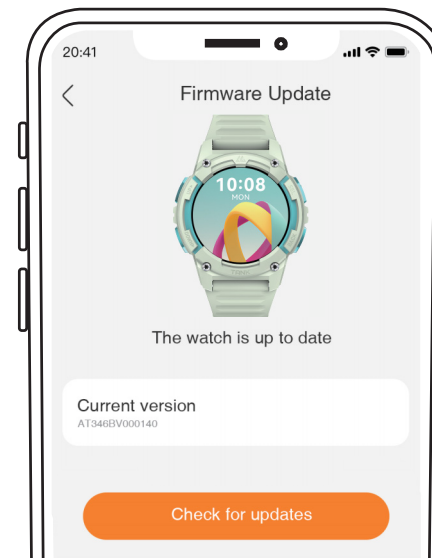


## Watch Gestures



### Shortcut Menu

Swipe down on the watch face to enter the Shortcut Menu which can be customized by tapping the "+" icon.

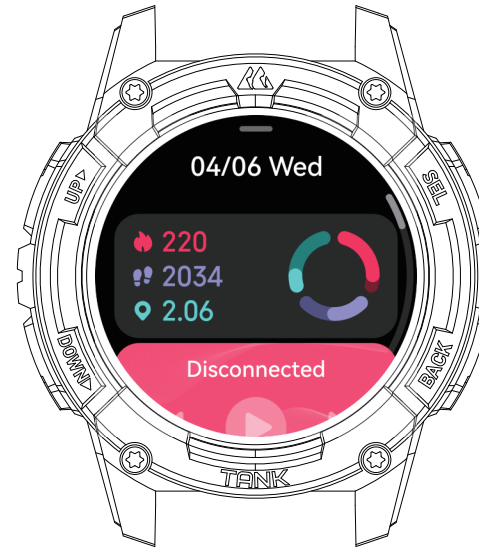


### Notification Center

Swipe up on the watch face to enter Notification Center which can be customized by tapping Edit at the bottom.



### App List

Swipe left on the watch face to enter the App List.

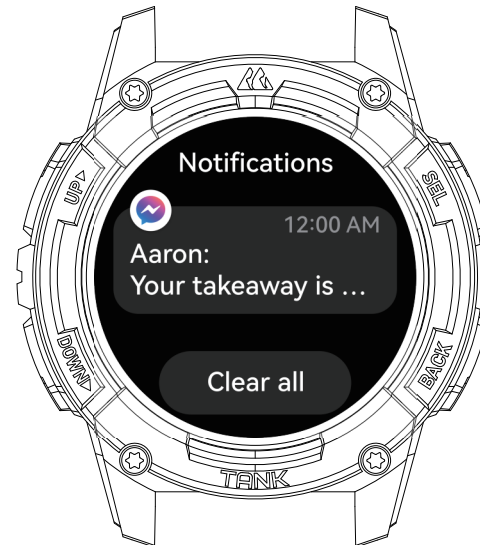

### Unread Notifications

Swipe right on the watch face to view the unread notifications.

## Use of Physical Buttons

### SEL button

#### Short press

- Short press on the watch face to enter the App list.
- Short press during a workout to pause/resume/ unlock the workout.
- Short press on a confirmation page (e.g. with Confirm and Cancel) to confirm.
- Short press on Timer or Stopwatch to pause or resume.
- Short press on the control center to enter Settings.

#### Long press

- Long press for 3s to power on/off, restart, or activate Emergency SOS.
- Long press for 12s to force a restart.



# BACK button

## Short press



- Short press on the watch face to open the workout list. Short press again to return to the watch face, which can be customized.
- Short press on other pages to return to the previous page.
- Short press on a confirmation page (e.g. with Confirm and Cancel) to cancel.
- Short press on Timer to end the current countdown timer and return to the timer list.
- Short press on Stopwatch to end the current stopwatch and start split timing.
- Short press on a paused stopwatch to stop timing.

## Long press

- Long press for 3s during a workout to end the workout and save workout details.
- Long press for 3s on the watch face to activate Voice Assistant.

# UP button


## Short press

- Short press on the watch face to open the control center.
- Short press on other list pages to scroll up.
- Short press on long pages to scroll up.
- Short press on the sound setting page to turn up the volume.
- Short press on the brightness adjustment page to increase screen brightness.



# DOWN button

## Short press

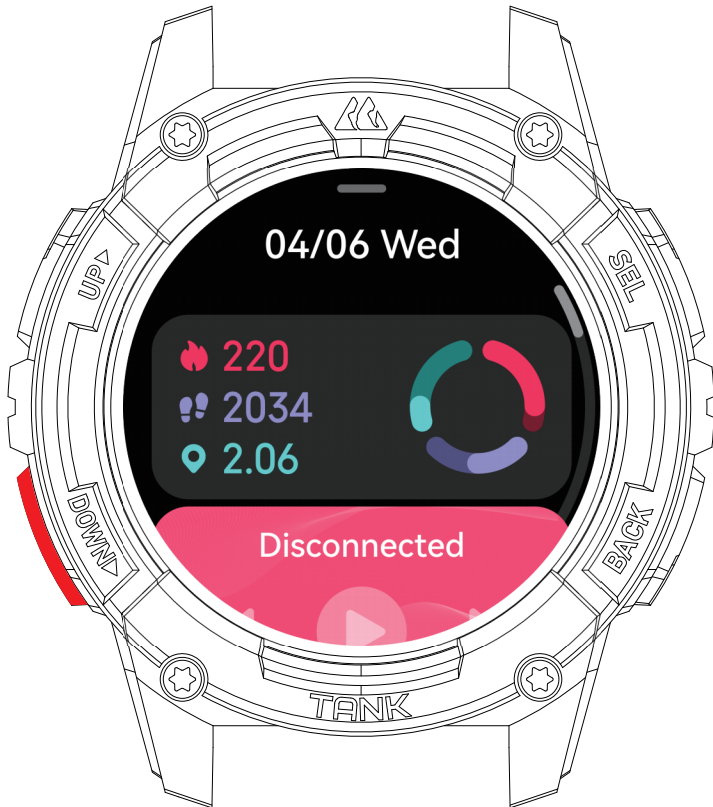

- Short press on the watch face to view widgets.
- Short press on other list pages to scroll down.
- Short press on long pages to scroll down.
- Short press on the sound setting page to turn down the volume.
- Short press on the brightness adjustment page to decrease screen brightness.


## Change Watch Faces

- Long press the watch face, then swipe left or right to replace the current watch face.
- Enter the KOSPET FIT App to download more watch faces on Watch Face Gallery, including those for always-on display.



## Sports Recognition

Once enabled, the watch will remind you whether to enter the corresponding sports mode via a pop-up reminder, when you begin one of these sports — walking, running, cycling, elliptical trainer, or rowing machine.

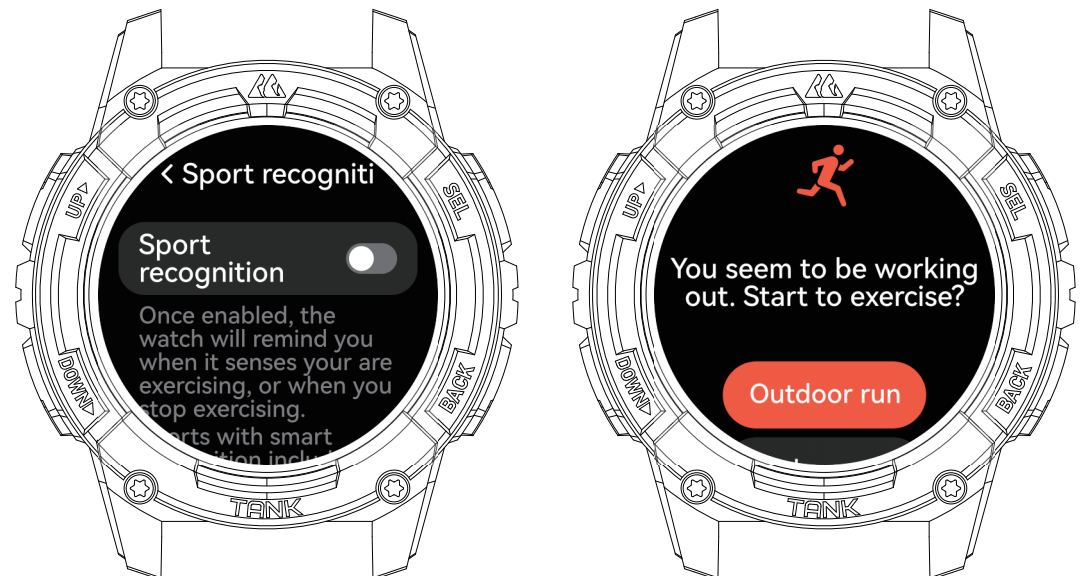

## Technical Specifications

Frequency	2402-2480MHz
-----------	--------------

## Warranty Policy

KOSPET provides a two-year warranty on the products purchased through our official online store(<http://www.kospet.com>).

For more information, please visit: <https://kospet.com/pages/kospet-warranty-policy>.

For further questions, welcome to email us: [after-sales@kospet.com](mailto:after-sales@kospet.com), or call +1(507)668-8466, from Monday to Friday, from 08:00 a.m. EST to 05:00 p.m. EST.

## Security Tips

- Please do not expose the watch to extremely high-temperature environments or near high-temperature equipment, such as ovens, microwaves, or water heaters. High temperatures may cause battery explosions or other safety accidents.
- The watch contains an irremovable lithium-polymer battery. Non-professionals are prohibited from disassembling it to avoid potential safety hazards.
- This watch has passed multiple waterproof tests before leaving the factory. During daily use, wear and tear on internal components may affect its sealing performance. Please wear your watch carefully while swimming or diving, but avoid wearing it in saunas or during hot showers.
- This product is not a professional medical device. Heart rate, blood pressure, and other health-related data detected by the band are for reference only and cannot be used as clinical basis.

**FCC Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This user manual is published by KOSPET that reserves the right of final interpretation. We may make adjustments to this manual anytime if necessary. Feature descriptions on the foregoing pages are provided for reference only.


# The E-label information

To access the e-label information, in the device

1.Go to the main interface as follows



2. Enter the setting interface, as follows

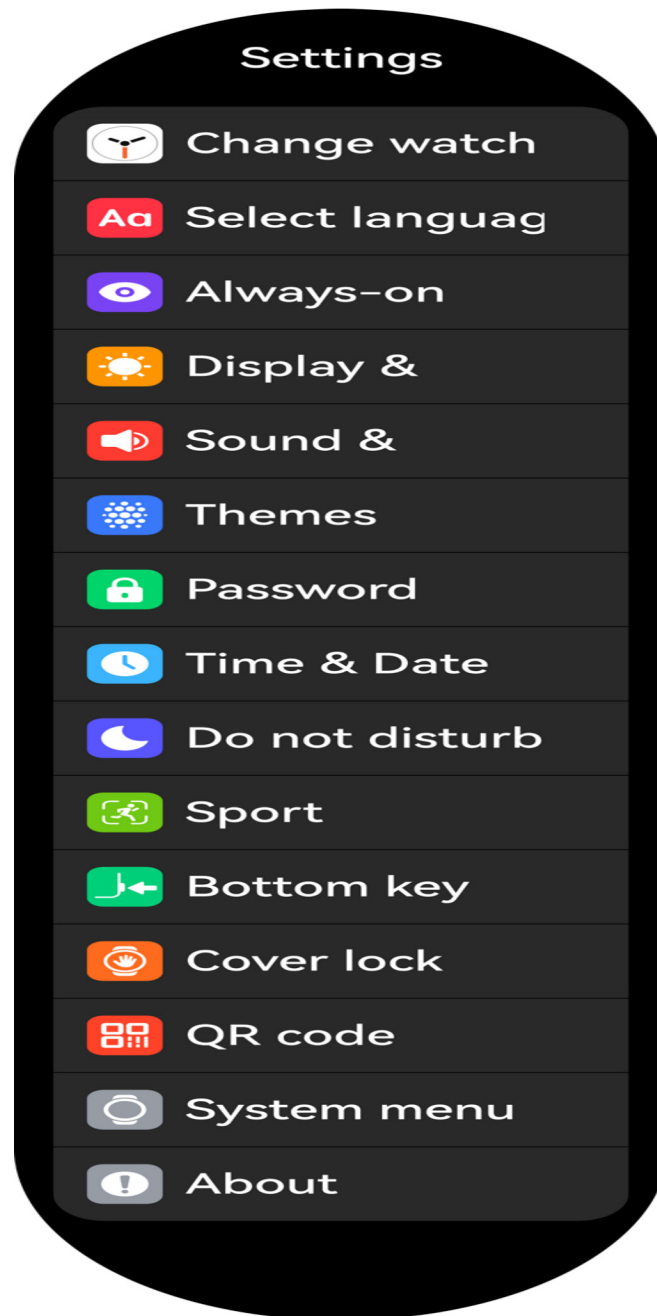

3. Select About, as shown in the following interface





Watch You Want