

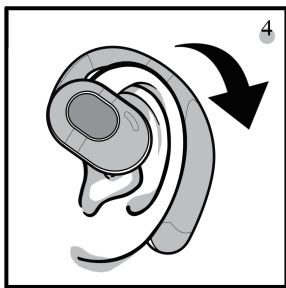
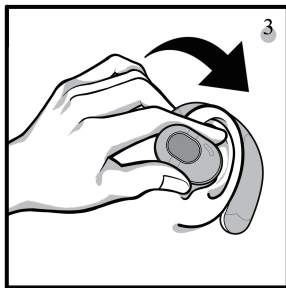


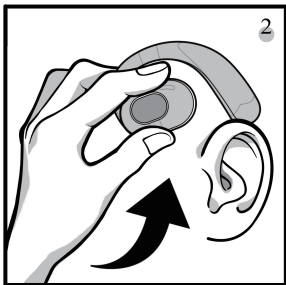


Instructions For Use


BADENBURG

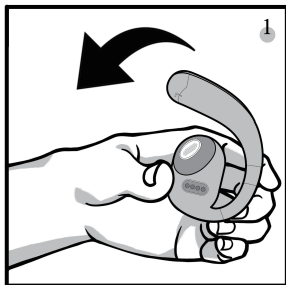


What's in the box




Earbuds x1

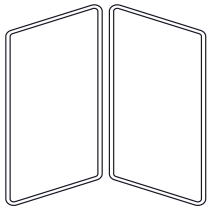

IFU x1



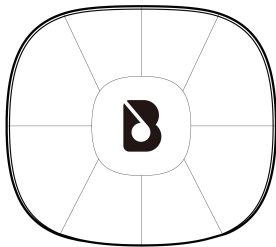


Charging Case x1



USB Type-C cable x1

Product Introduction

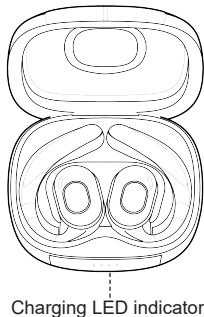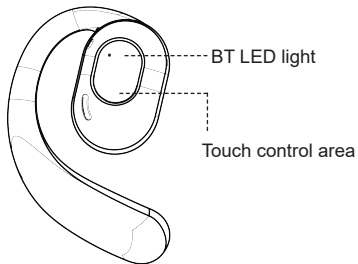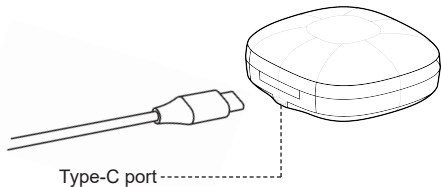

Get Started

Open case lid, BT is ready to pair when light starts to breathing blink.

Control Music

Tap x1: Play/Pause


Tap x2:

Left bud - Previous track

Right bud - Next track

Tap x3:

Activate voice assistant

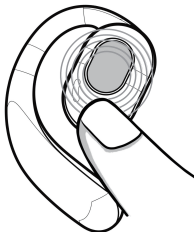

Tap

While Phone Call

Tap x1: Answer the call

Tap x2:

End or decline a call


Tap x3:

Activate voice assistant

Control Music

Slide Forward: Volume up

Slide Back: Volume down

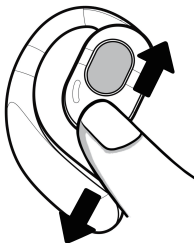

Slide

While Phone Call

Slide Forward: Volume up

Slide Back: Volume down

Clear BT pairing list

Tap and hold 8s on both buds at the same time.



BT Discovery Mode

Tap and hold 2s on both buds at the same time.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

