






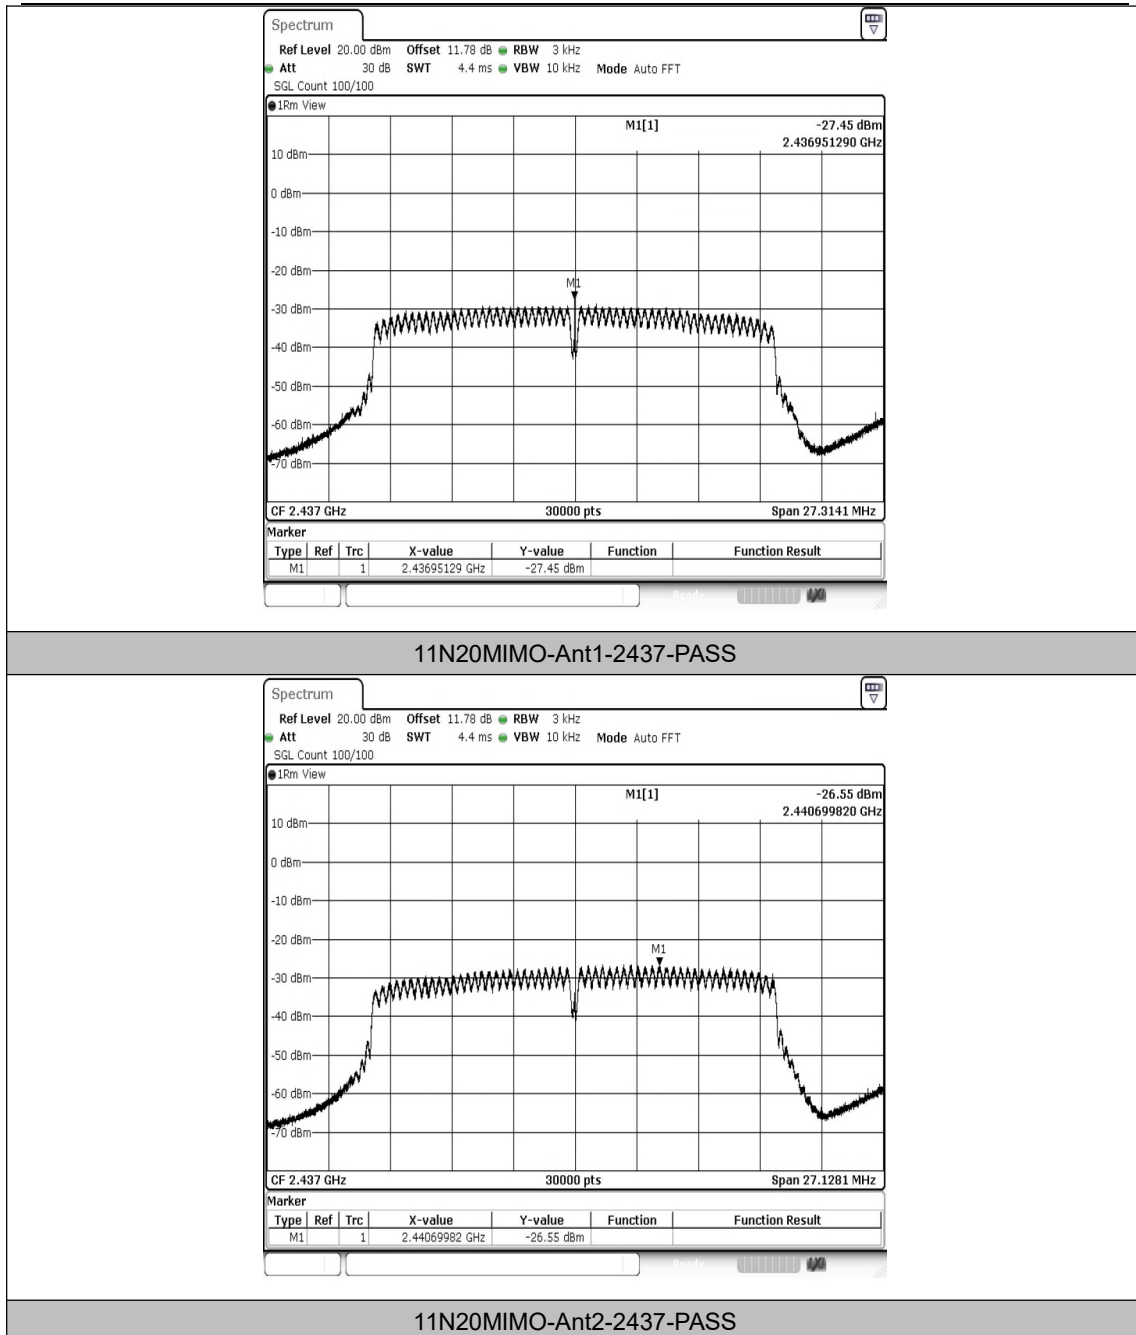

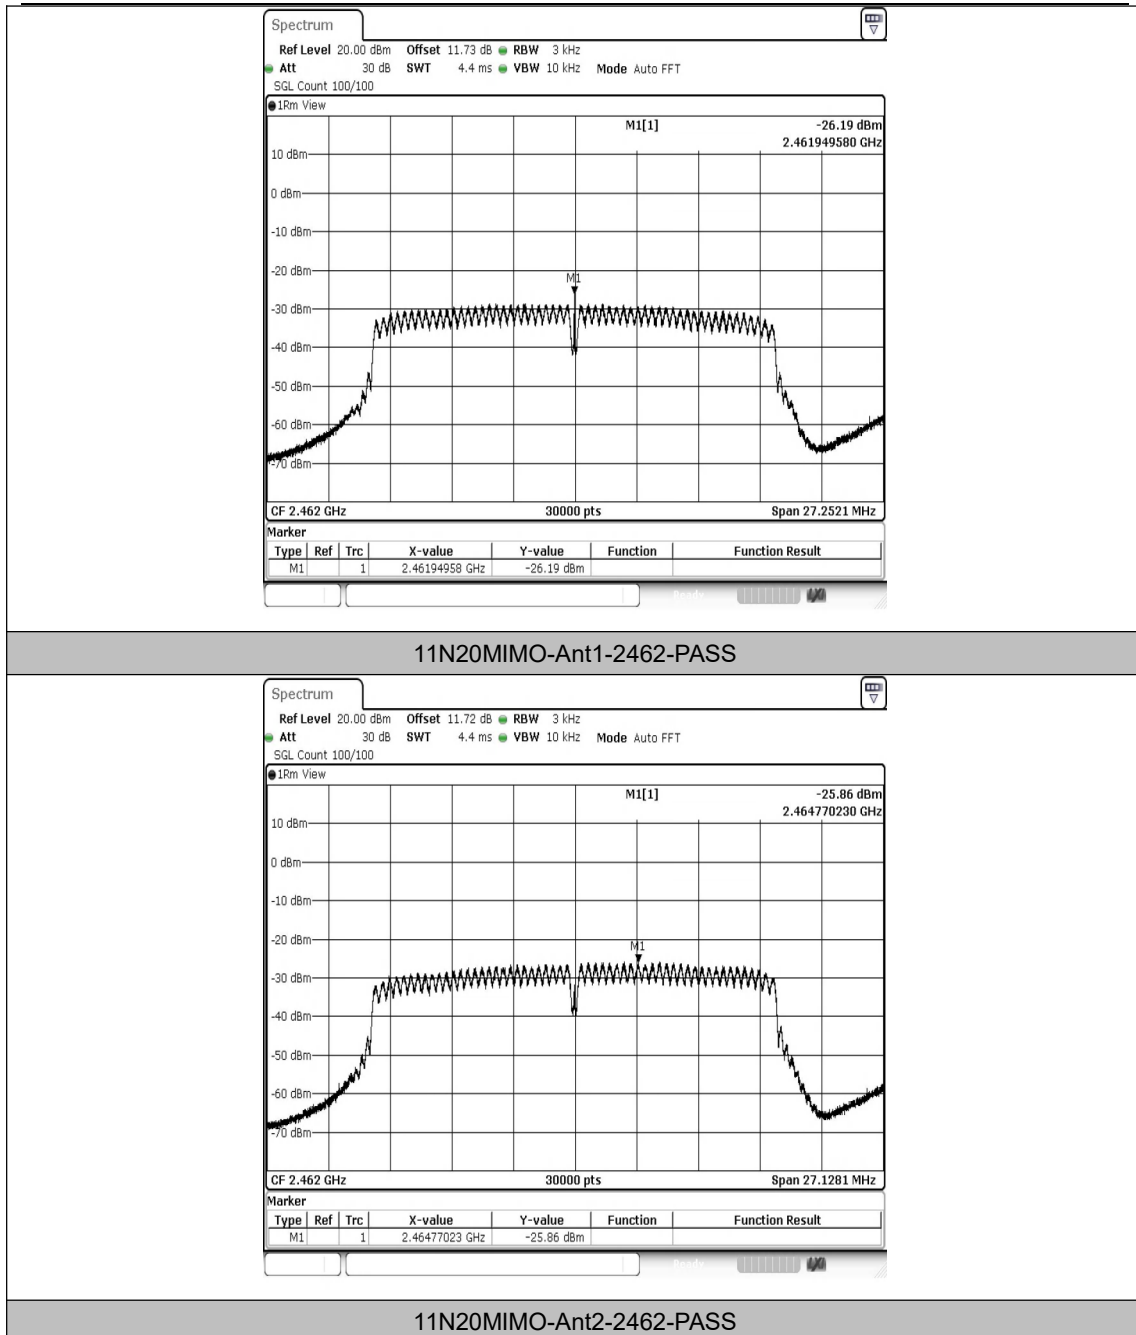

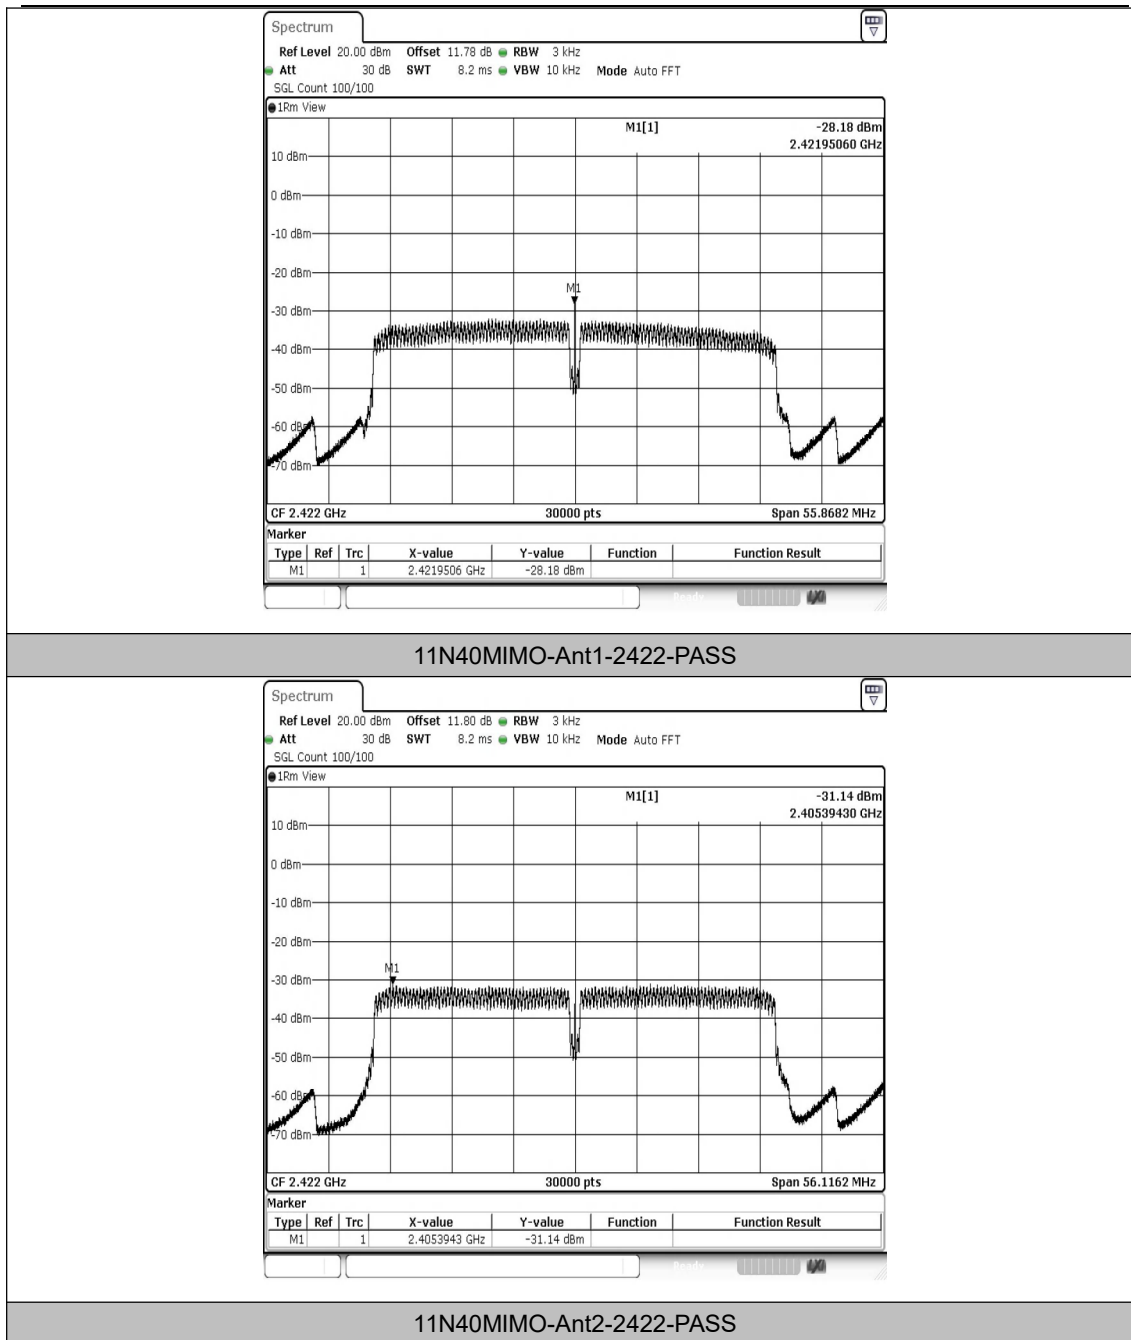

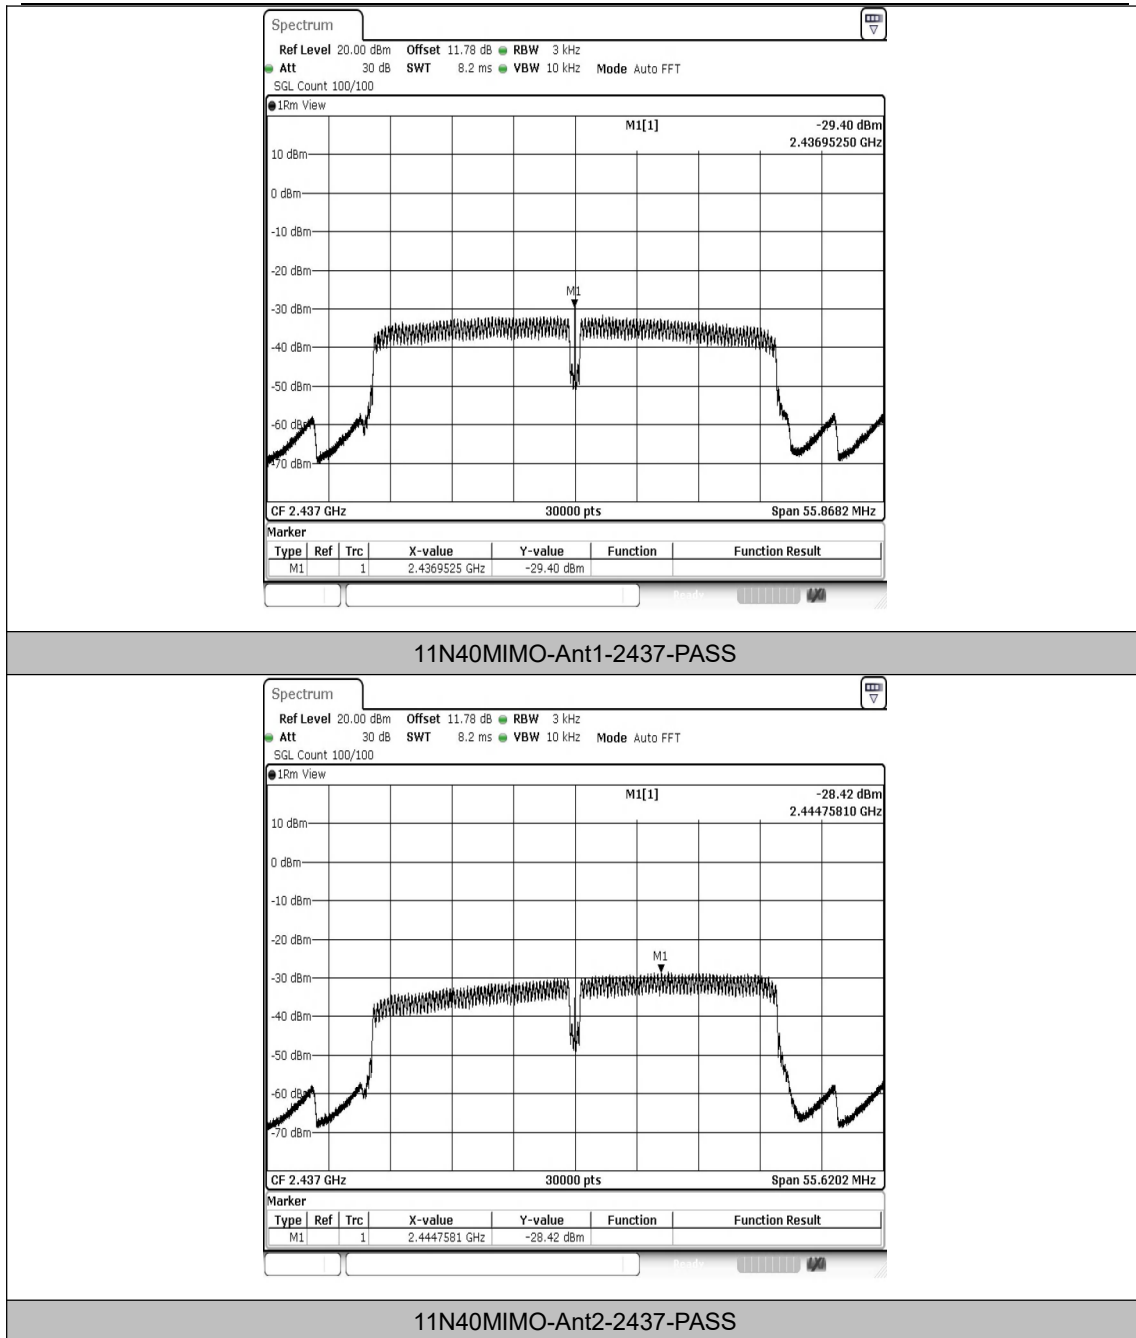


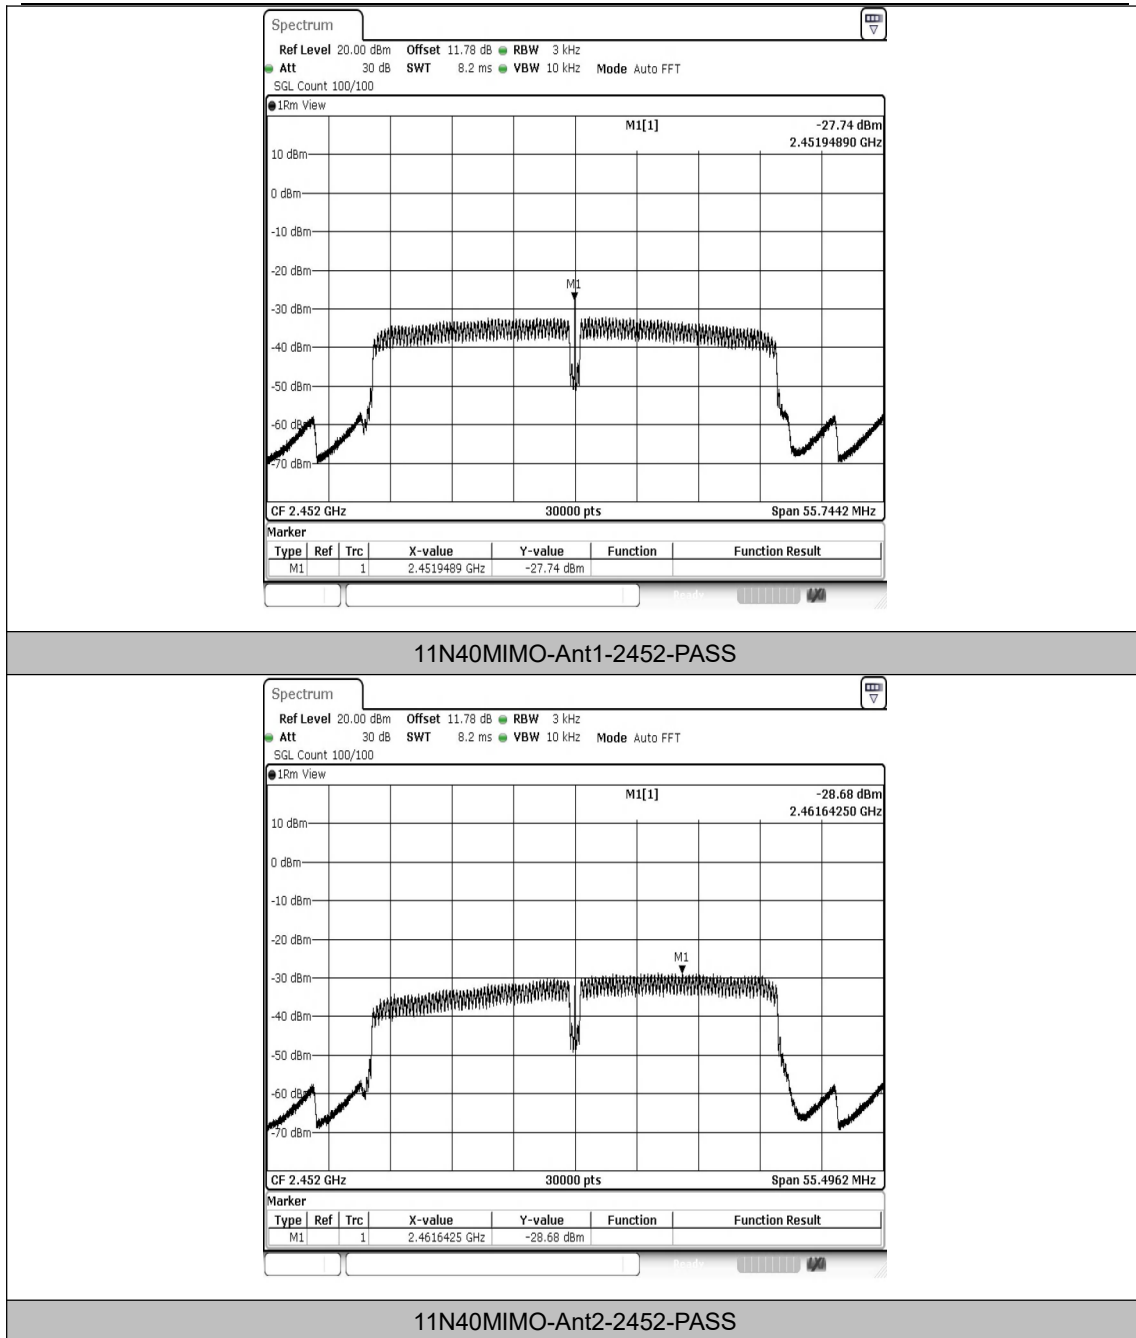

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

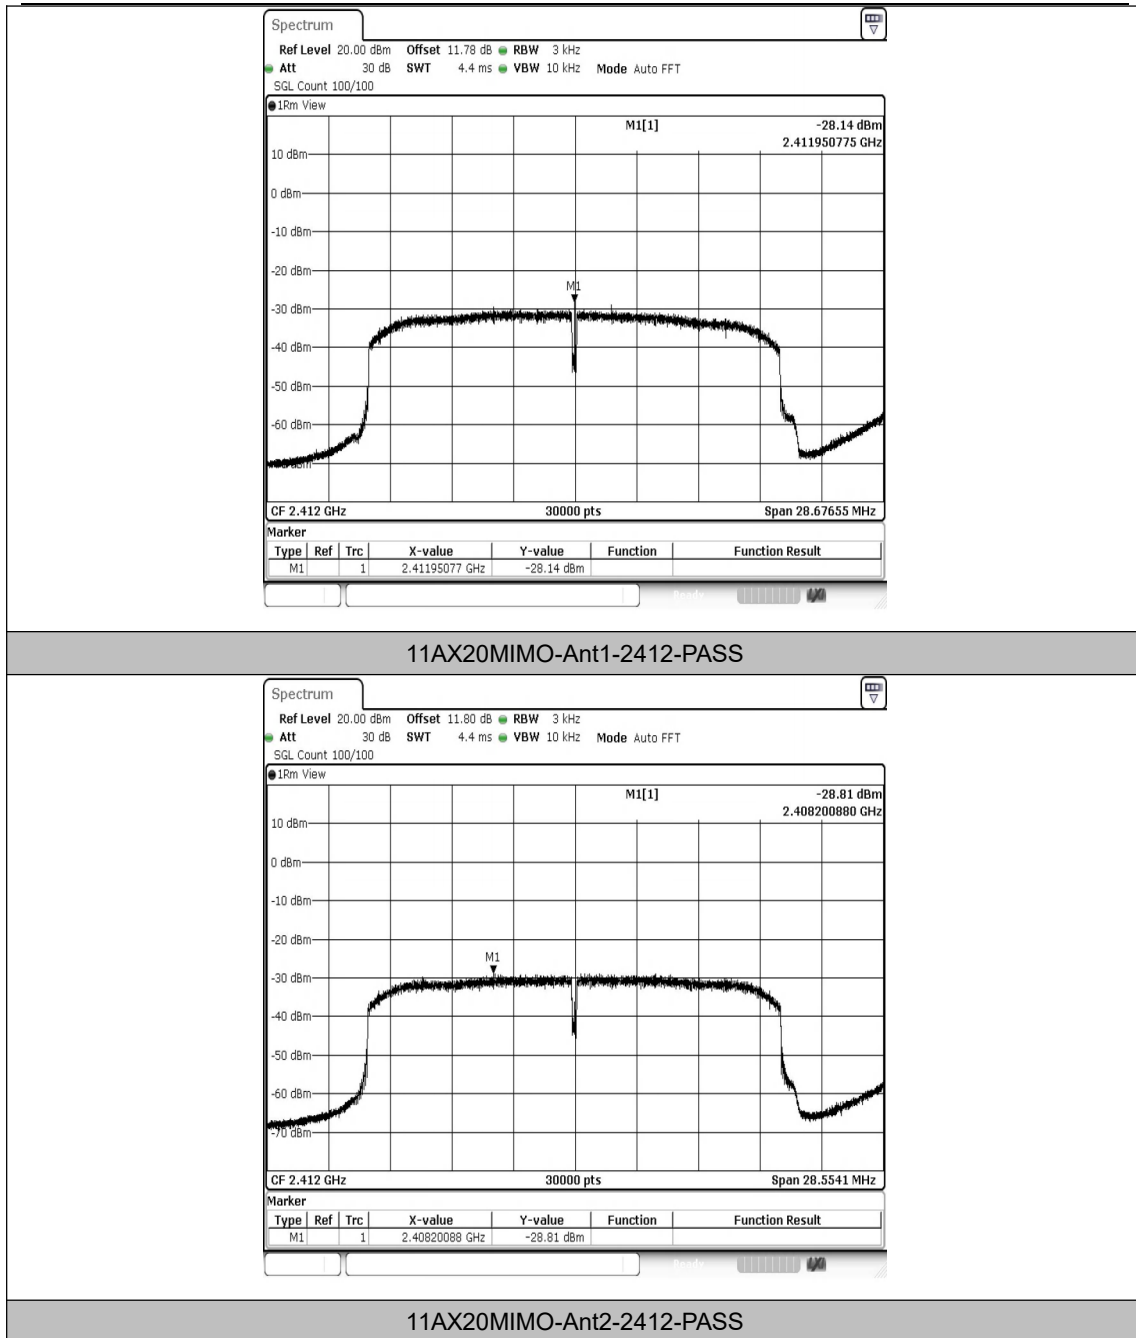



Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

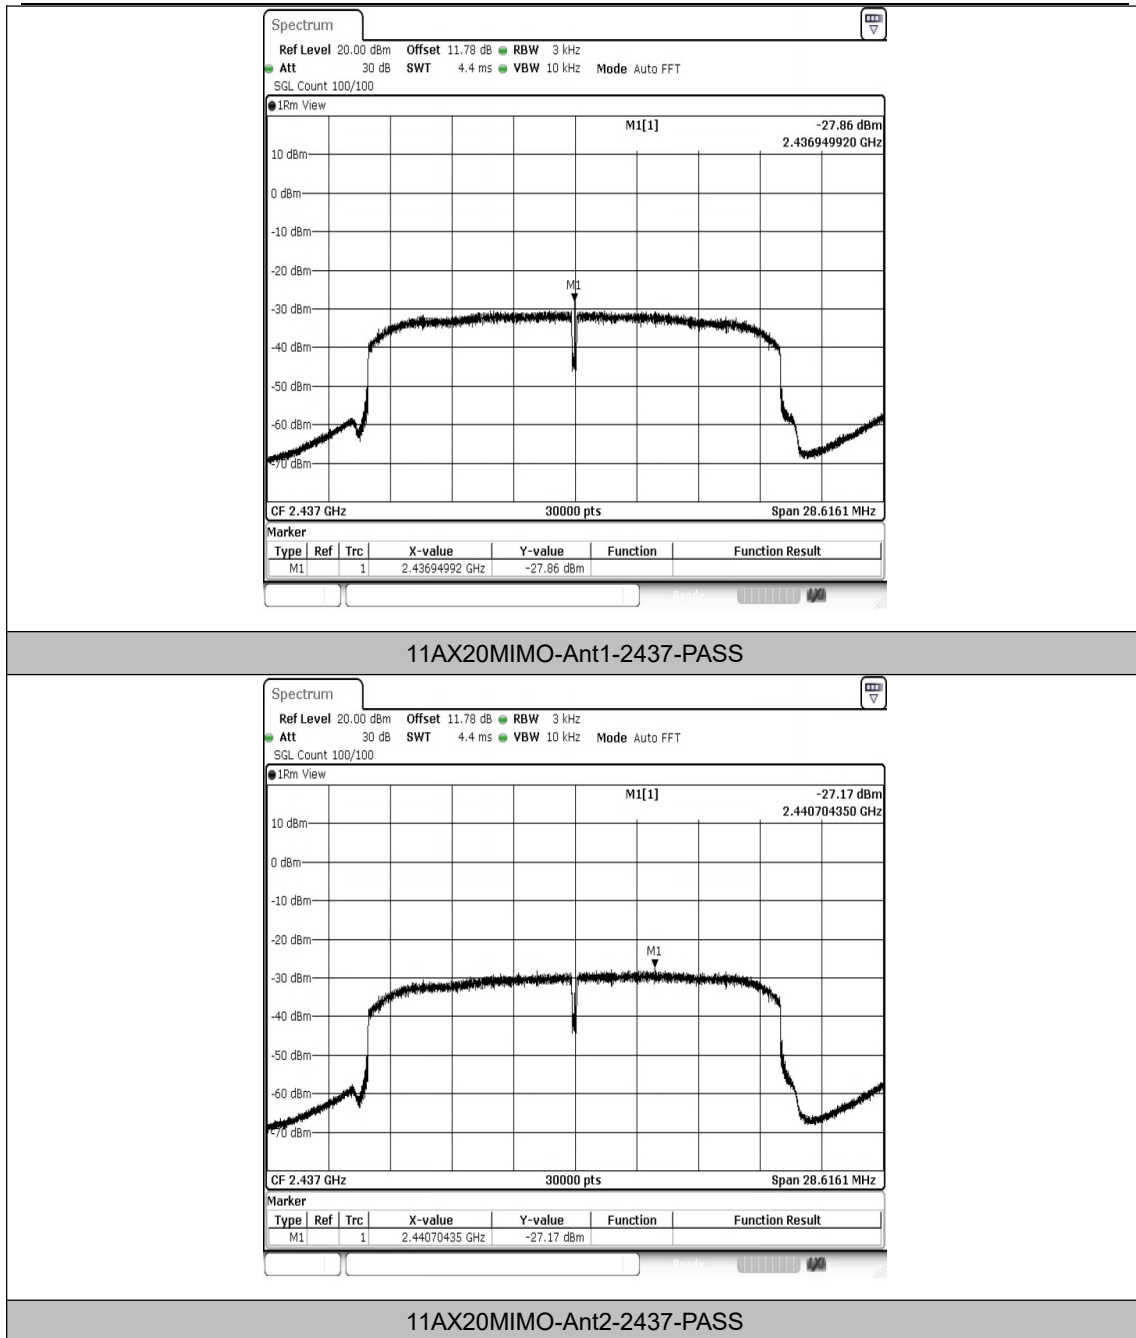

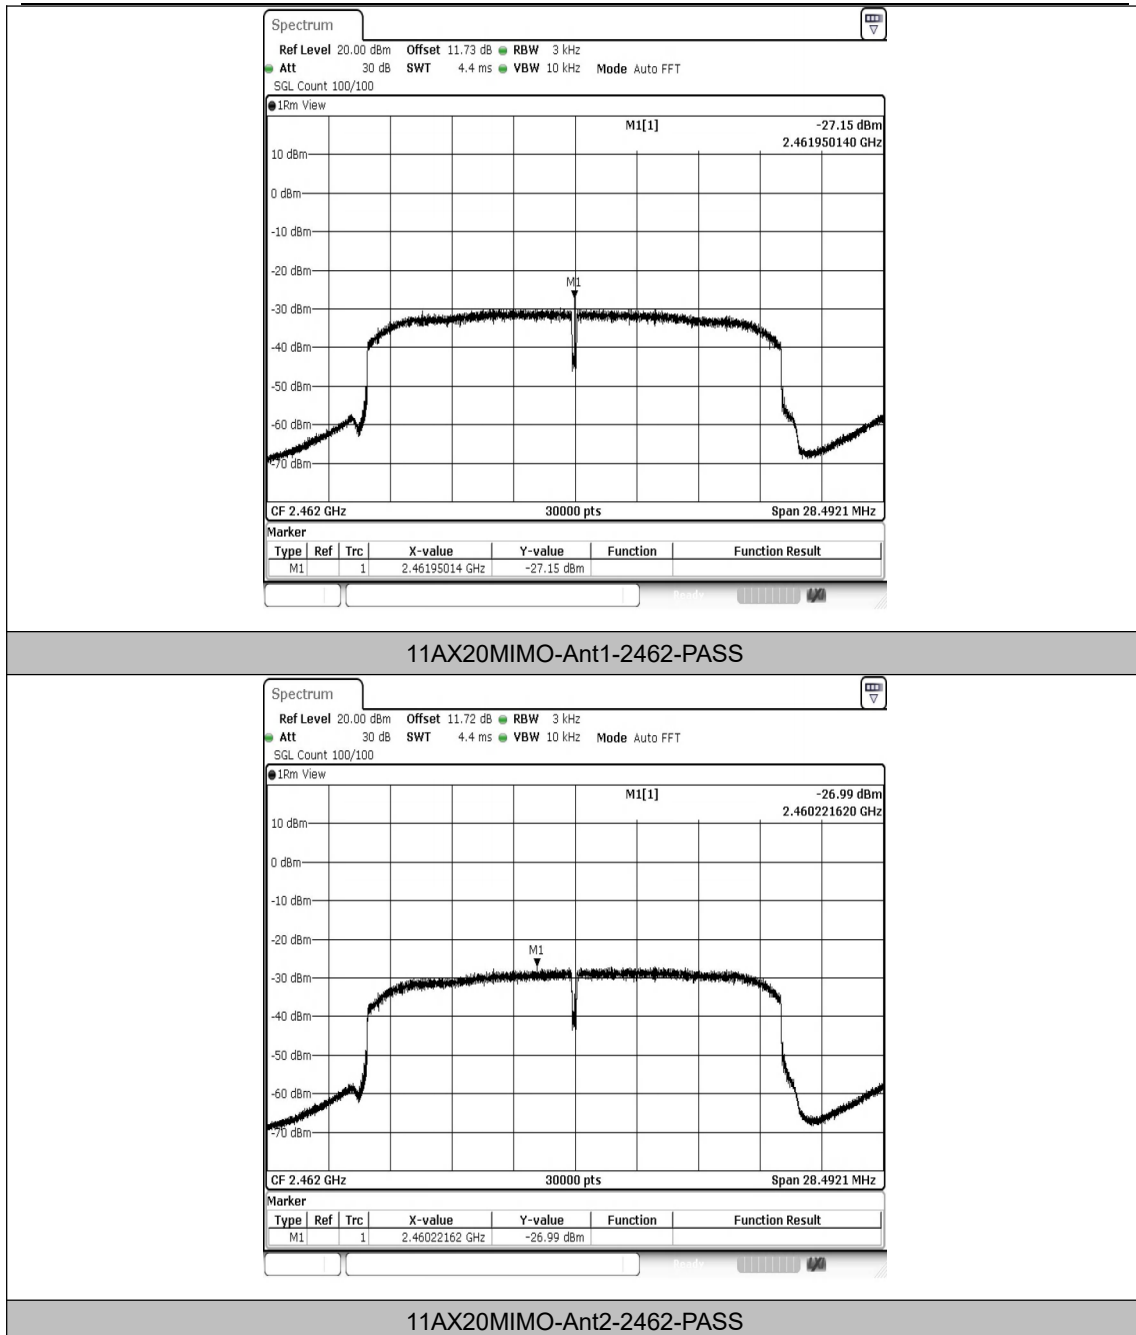

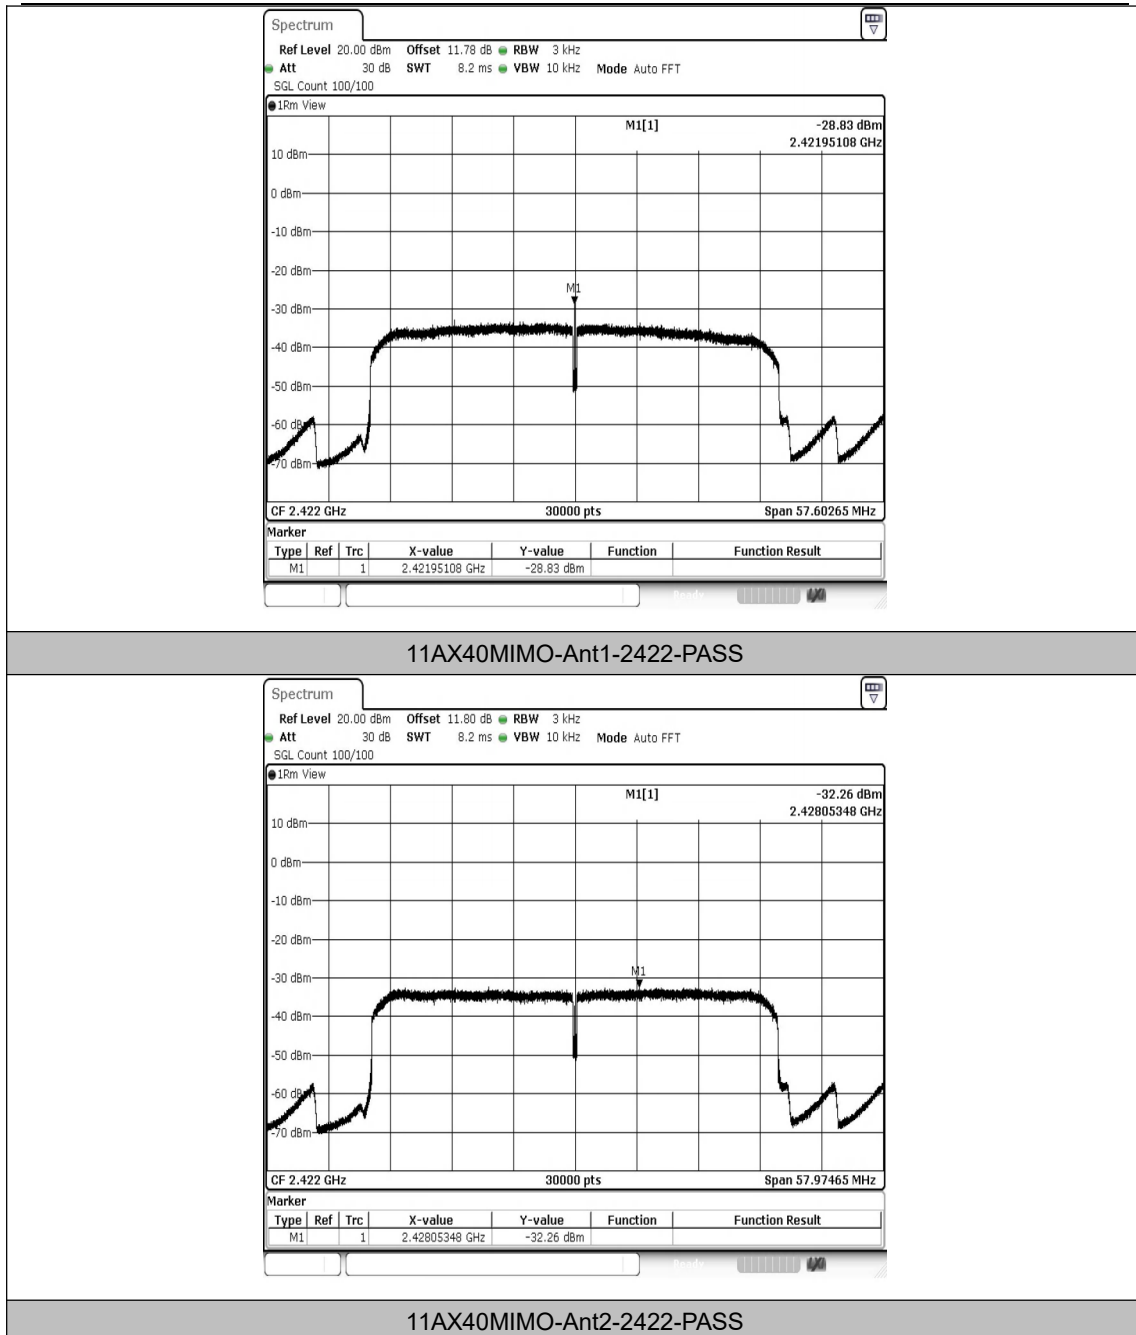

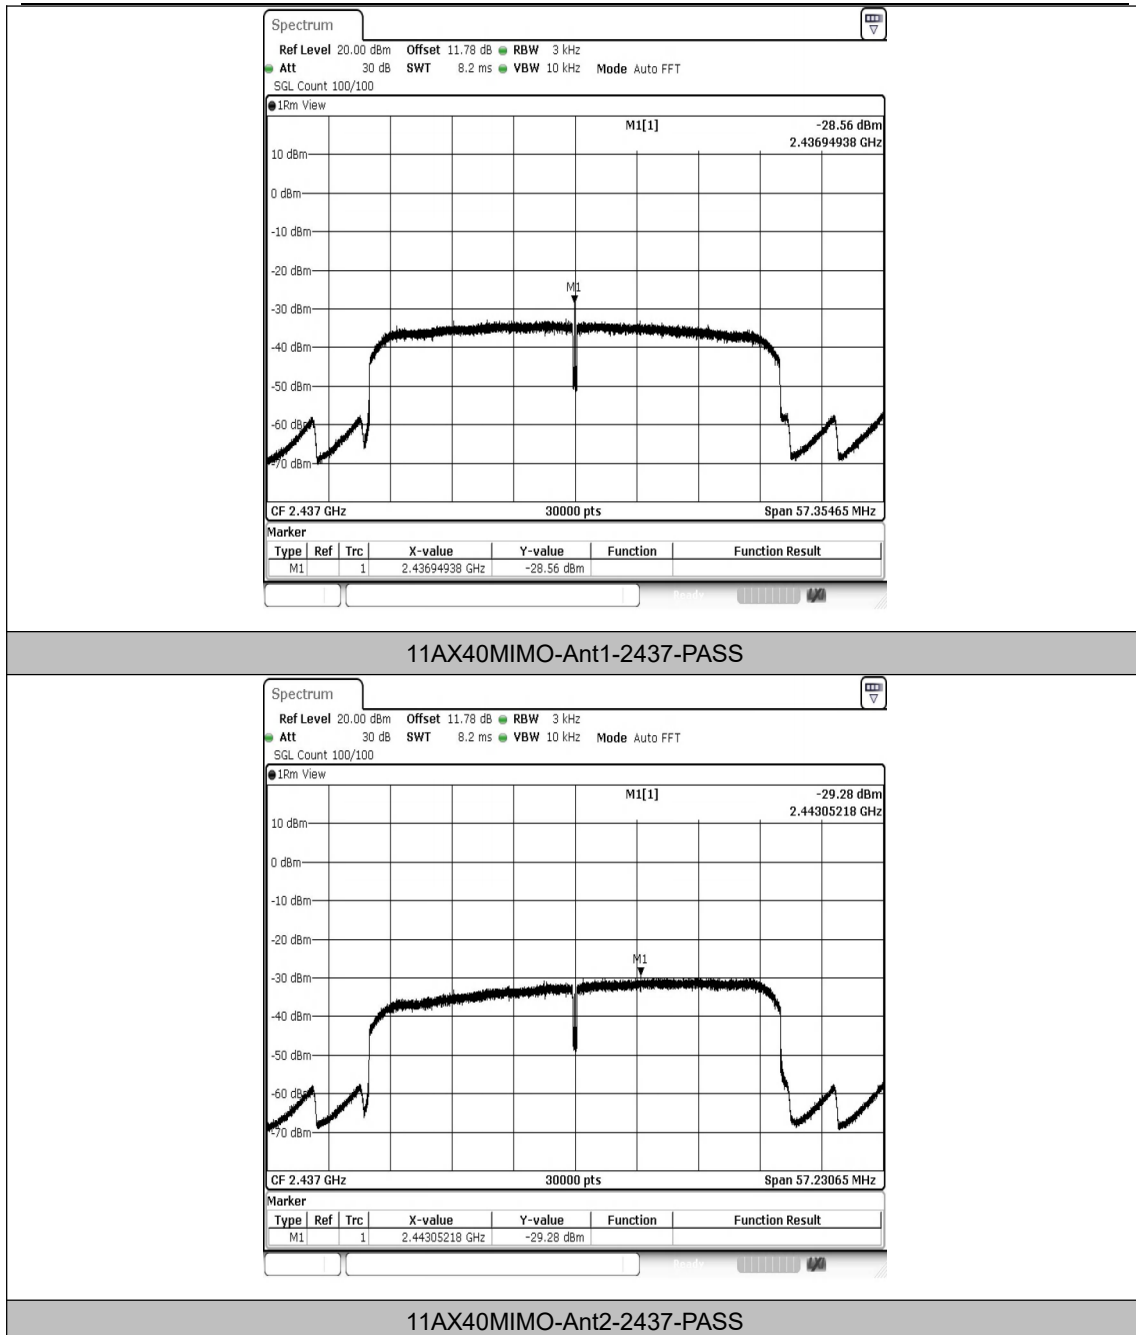

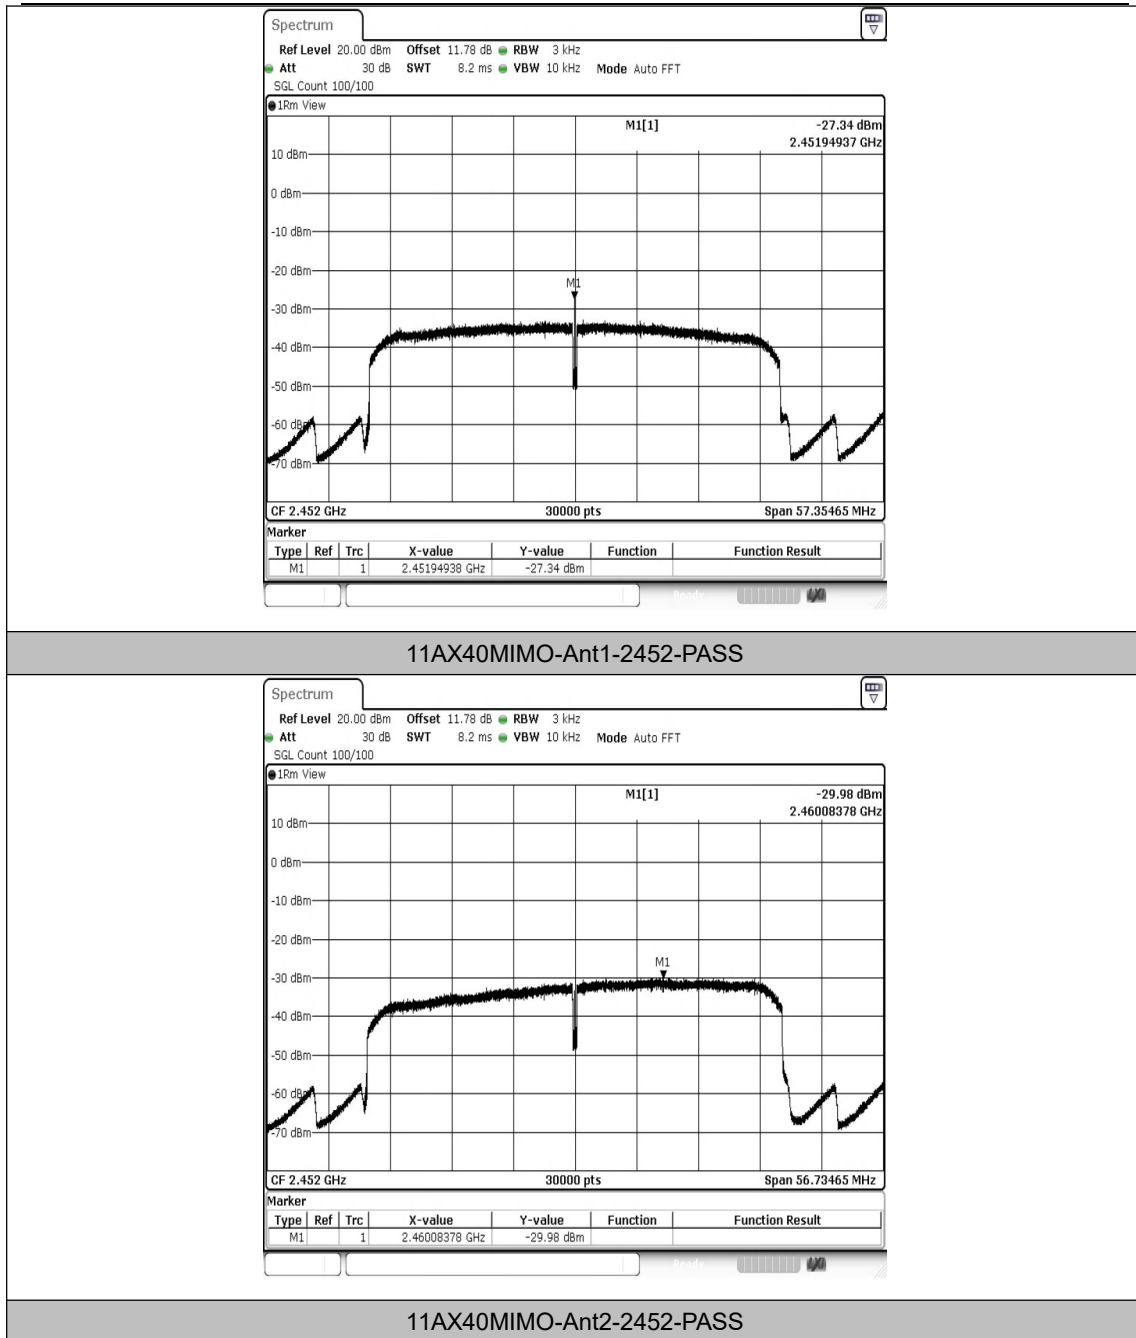


Appendix E: Conducted Band edge

Test Result

Test Mode	Antenna	Ch. Name	Frequency [MHz]	Ref. Level[dBm]	Result[dBm]	Limit[dBm]	Verdict
11B	Ant1	Low	2412	5.38	-47.26	≤-24.62	PASS
11B	Ant2	Low	2412	8.18	-43.51	≤-21.82	PASS
11B	Ant1	High	2462	5.22	-57.53	≤-24.78	PASS
11B	Ant2	High	2462	7.78	-53.38	≤-22.22	PASS
11G	Ant1	Low	2412	-8.74	-54.84	≤-38.74	PASS
11G	Ant2	Low	2412	-6.67	-41.53	≤-36.67	PASS
11G	Ant1	High	2462	-7.69	-58.4	≤-37.69	PASS
11G	Ant2	High	2462	-1.42	-57.2	≤-31.42	PASS
11N20MIMO	Ant1	Low	2412	-8.53	-55.89	≤-38.53	PASS
11N20MIMO	Ant2	Low	2412	-7.29	-44.47	≤-37.29	PASS
11N20MIMO	Ant1	High	2462	-8.83	-58.13	≤-38.83	PASS
11N20MIMO	Ant2	High	2462	-4.36	-56.09	≤-34.36	PASS
11N40MIMO	Ant1	Low	2422	-12.21	-56.85	≤-42.21	PASS
11N40MIMO	Ant2	Low	2422	-9.15	-49.33	≤-39.15	PASS
11N40MIMO	Ant2	High	2452	-7.83	-48.34	≤-37.83	PASS
11N40MIMO	Ant1	High	2452	-11.36	-59.23	≤-41.36	PASS
11AX20MIMO	Ant1	Low	2412	-8.15	-55.16	≤-38.15	PASS
11AX20MIMO	Ant2	Low	2412	-8.23	-45.36	≤-38.23	PASS
11AX20MIMO	Ant1	High	2462	-8.34	-58.83	≤-38.34	PASS
11AX20MIMO	Ant2	High	2462	-5.66	-56.8	≤-35.66	PASS
11AX40MIMO	Ant1	Low	2422	-10.87	-56.03	≤-40.87	PASS
11AX40MIMO	Ant2	Low	2422	-6.40	-48.36	≤-36.4	PASS
11AX40MIMO	Ant1	High	2452	-8.62	-59.39	≤-38.62	PASS
11AX40MIMO	Ant2	High	2452	-6.40	-56.11	≤-36.4	PASS

Remark:1. Regarding the spurious emissions from 30MHz to 26.5GHz, the cable lose have been set in the 'offset' of the Spectrum Analyzer during the test.


Test Graphs

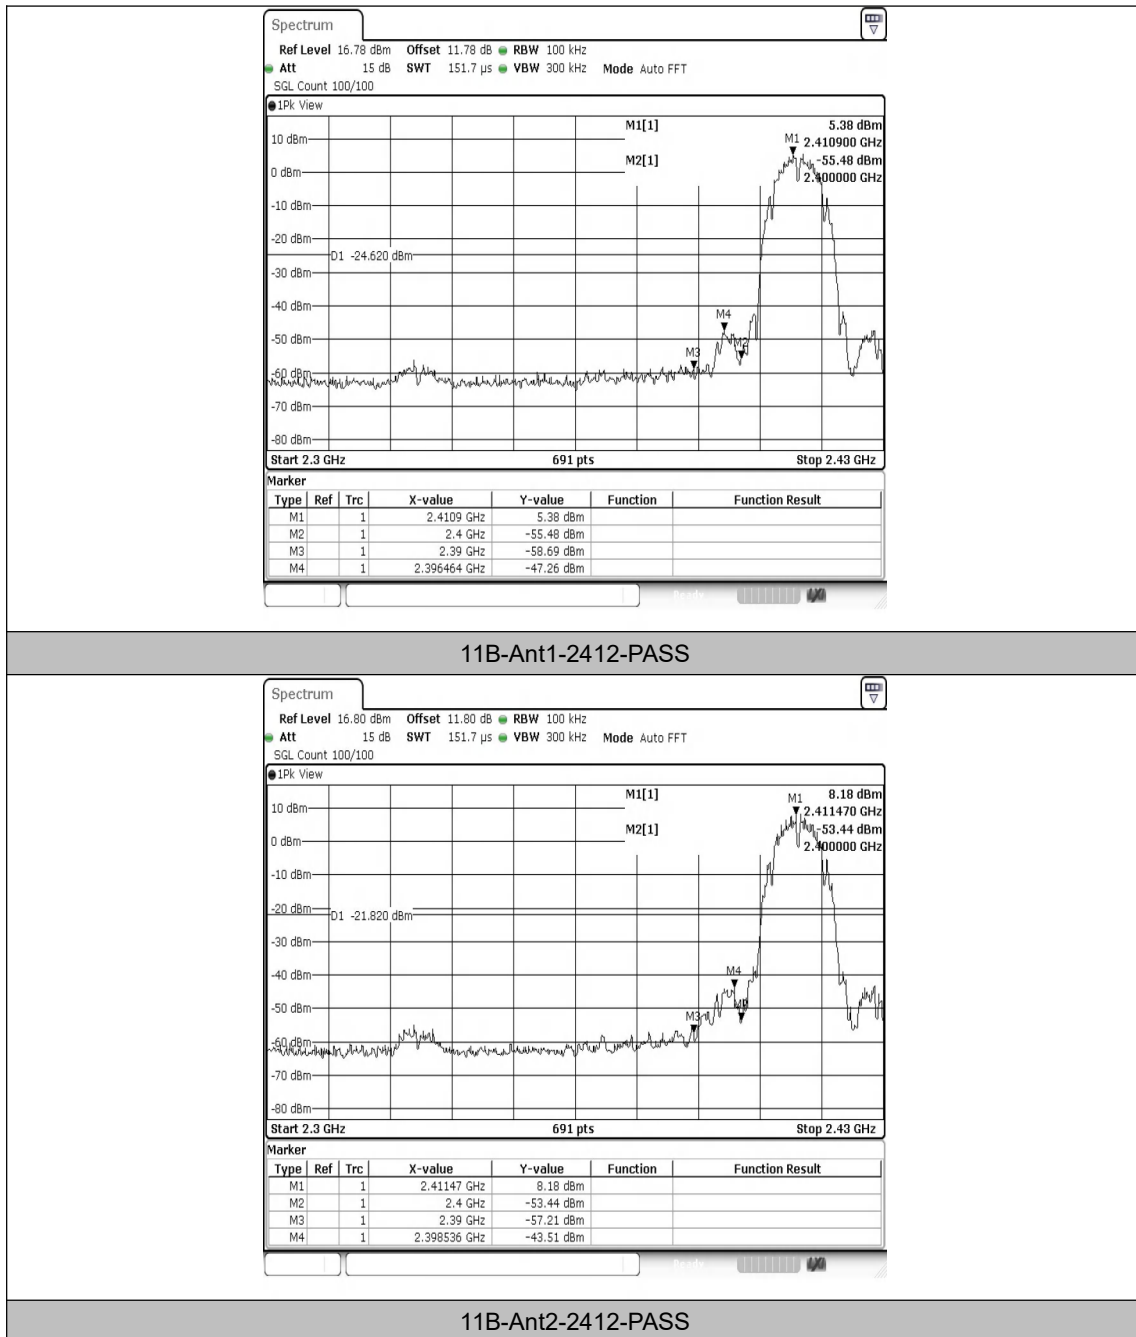



Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

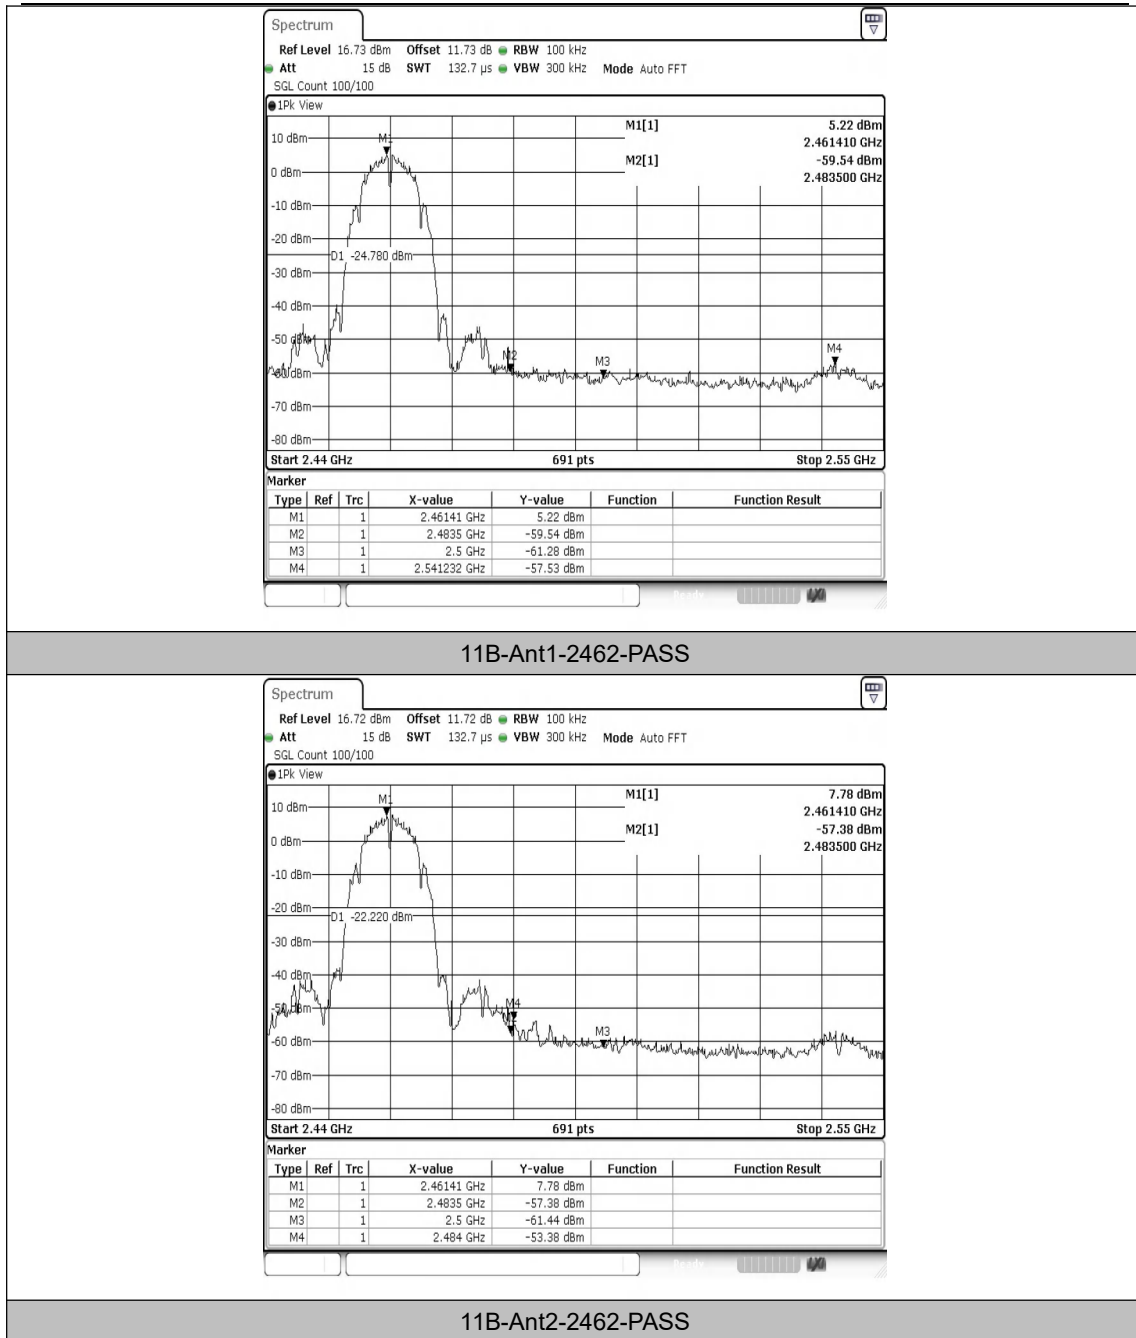


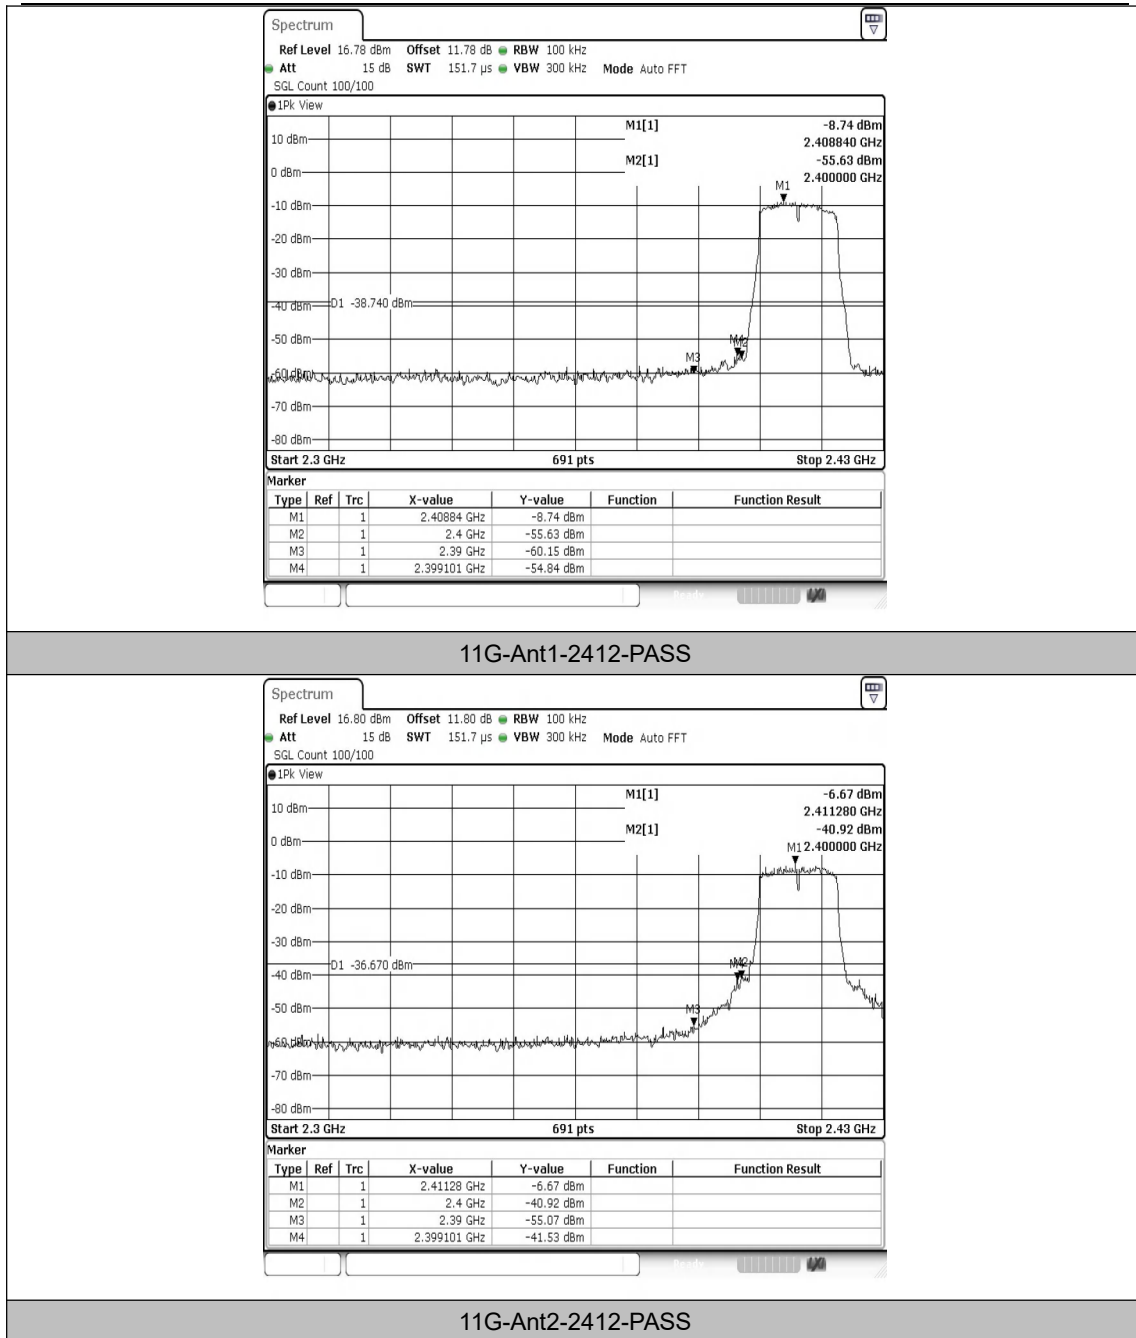


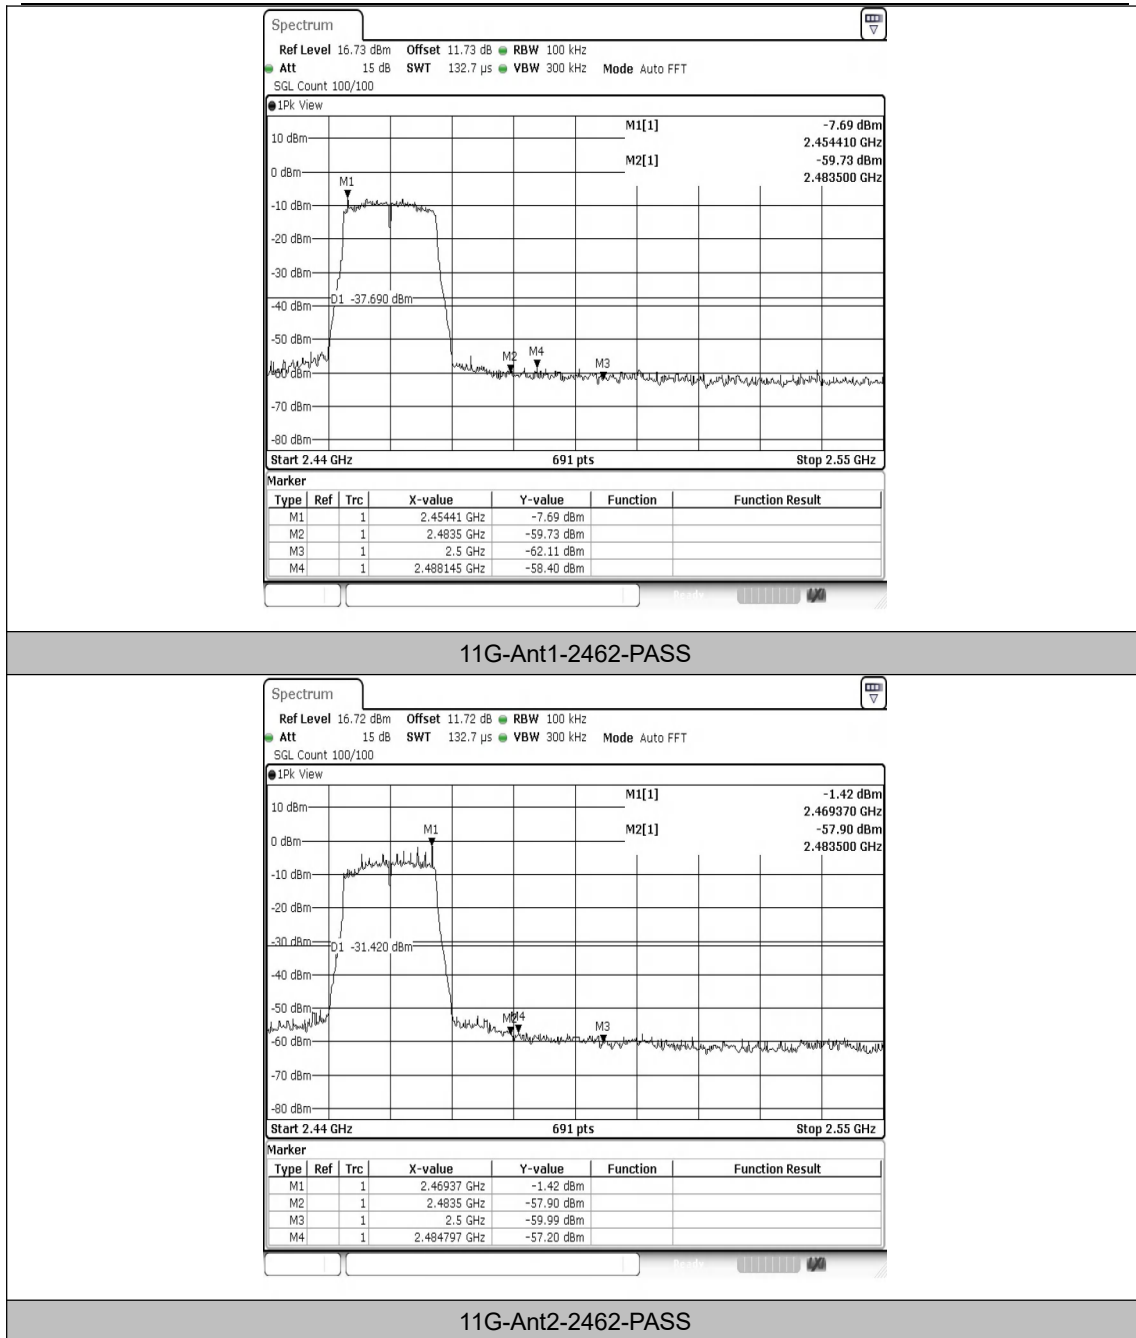


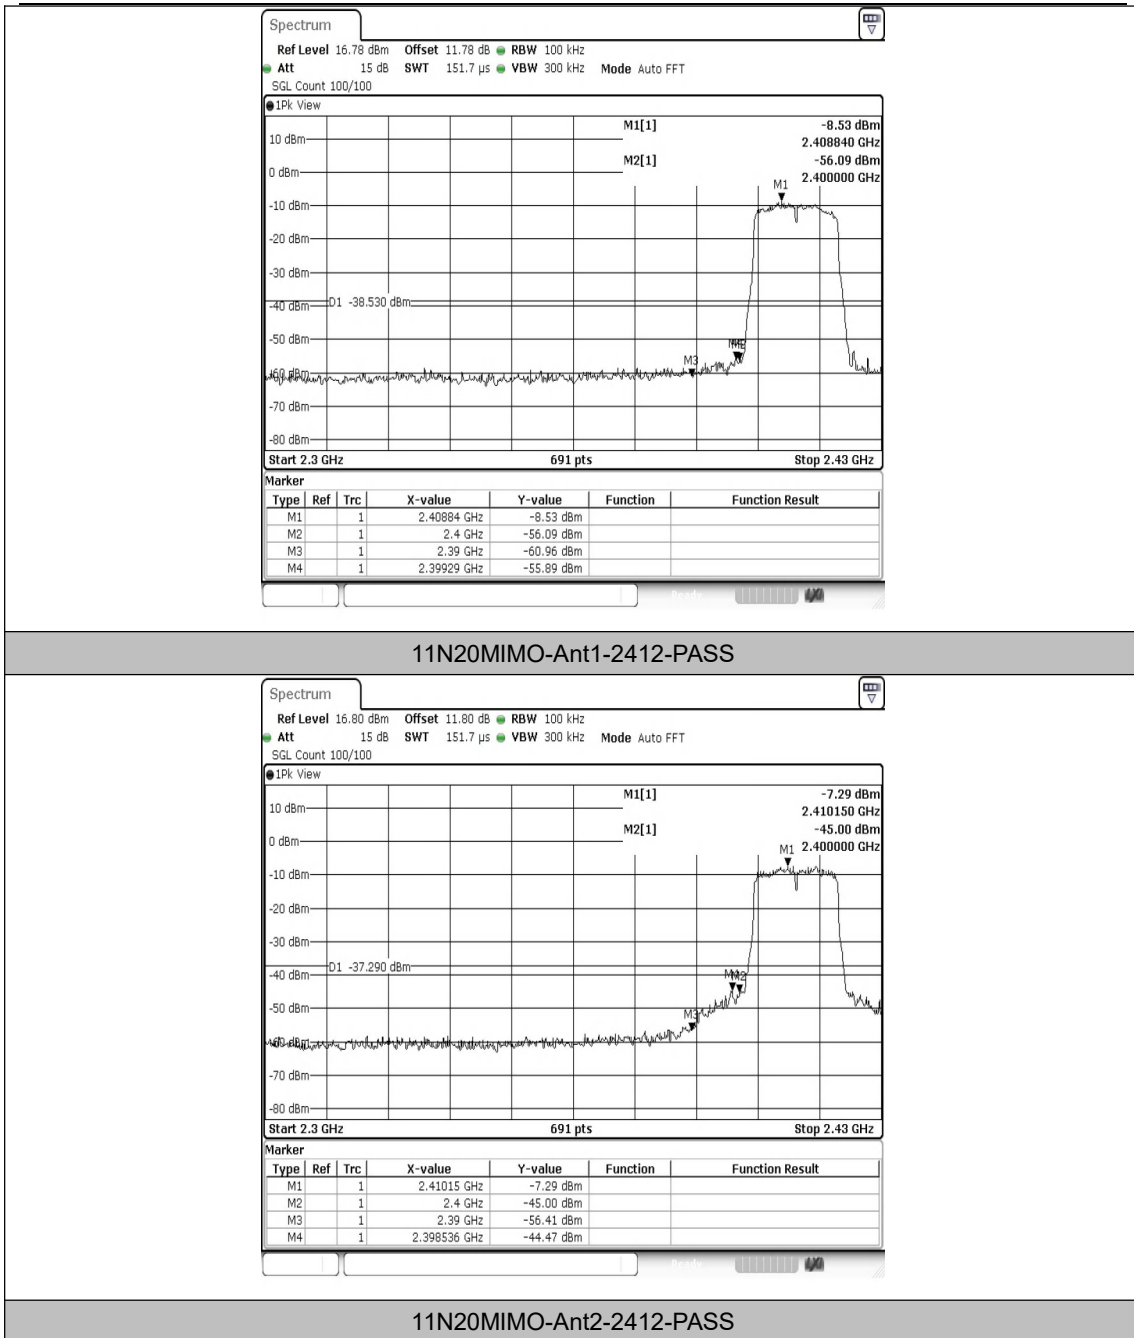


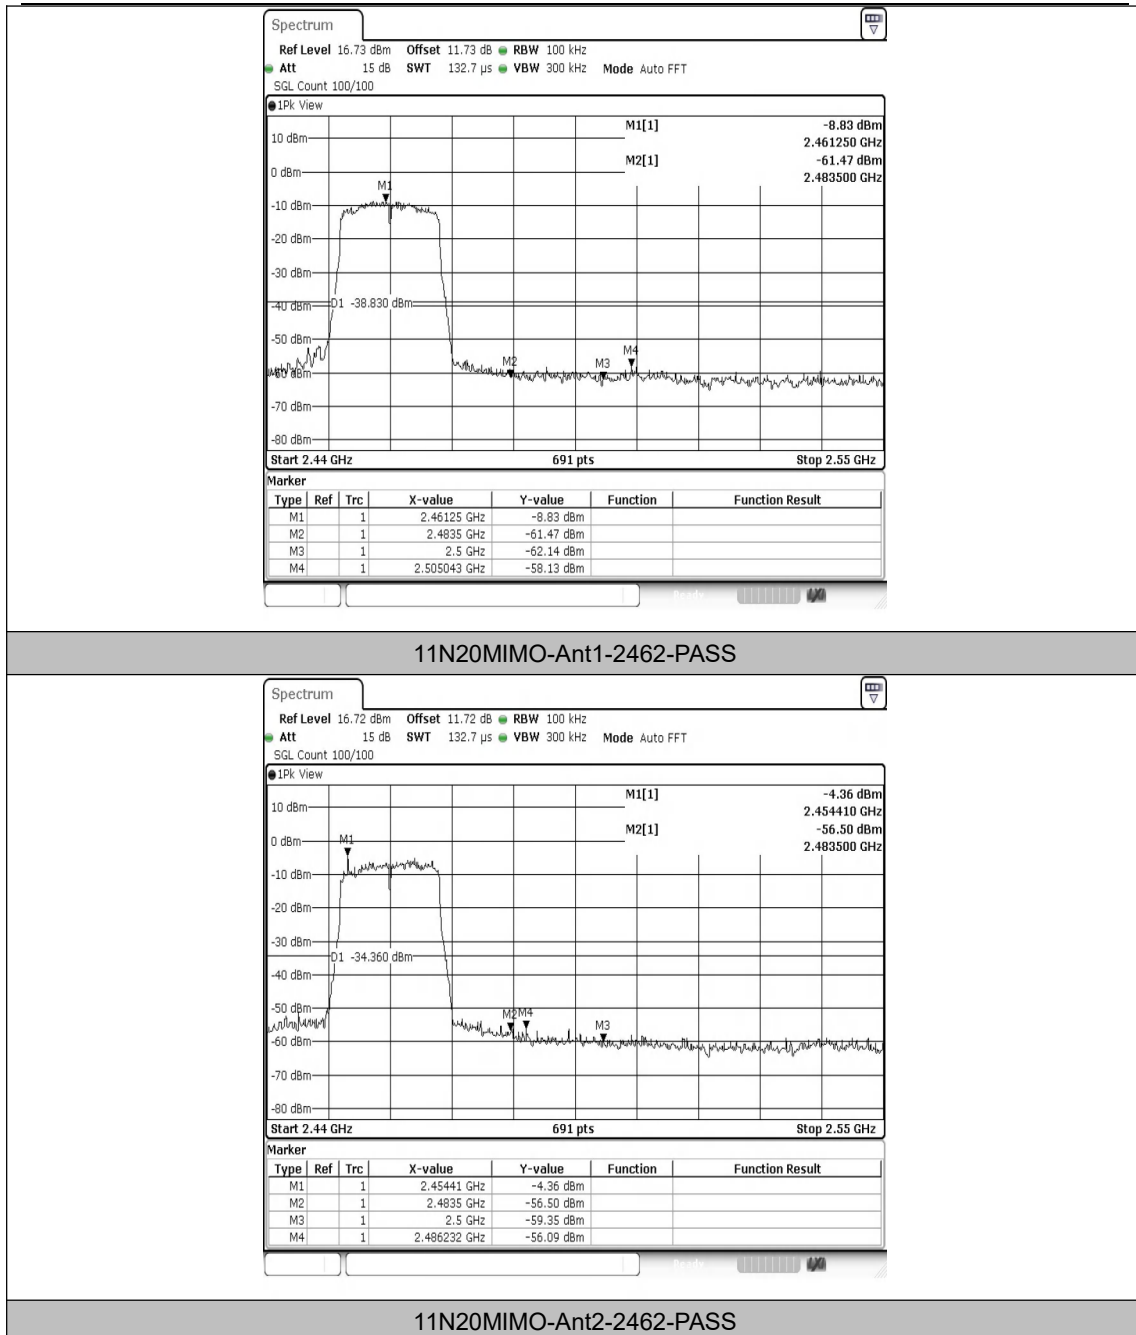


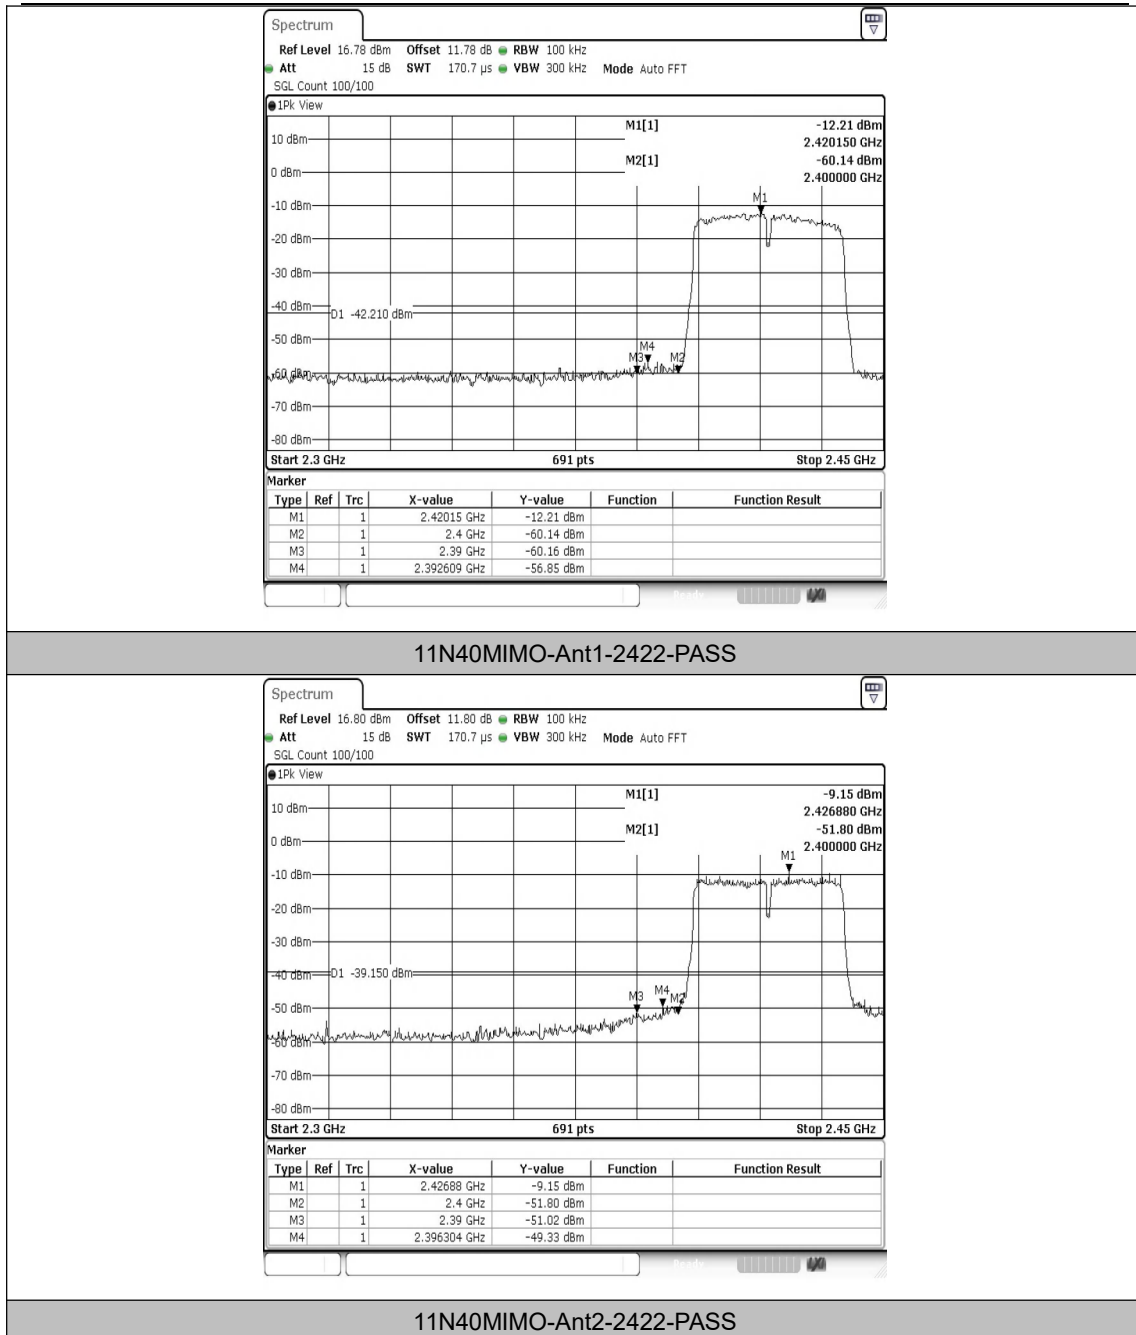


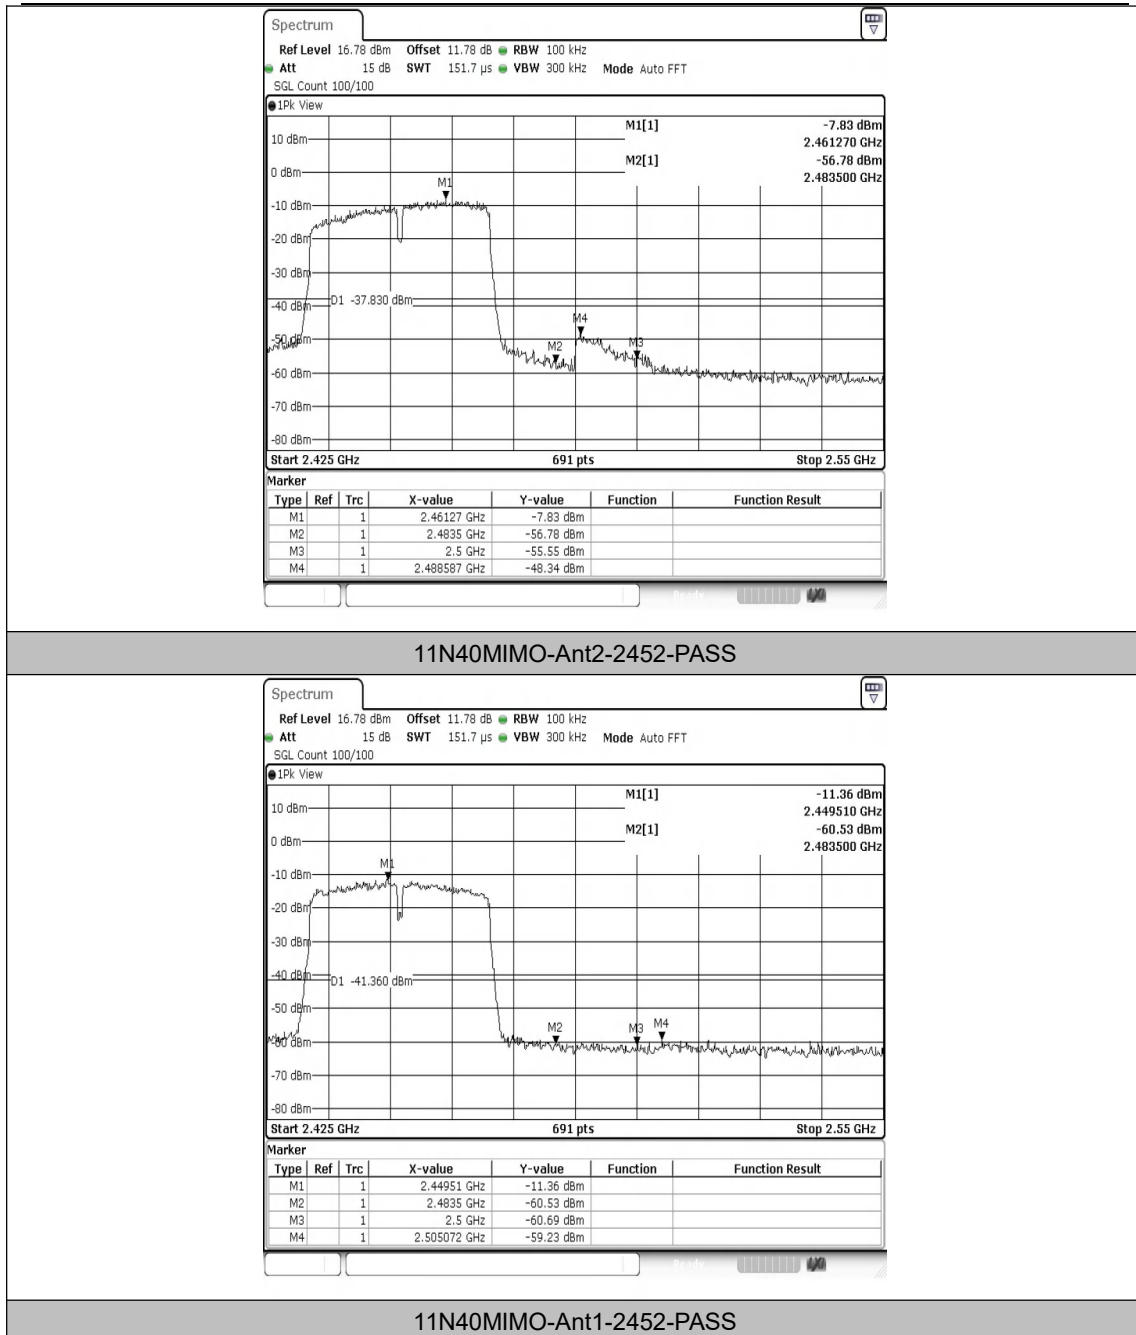

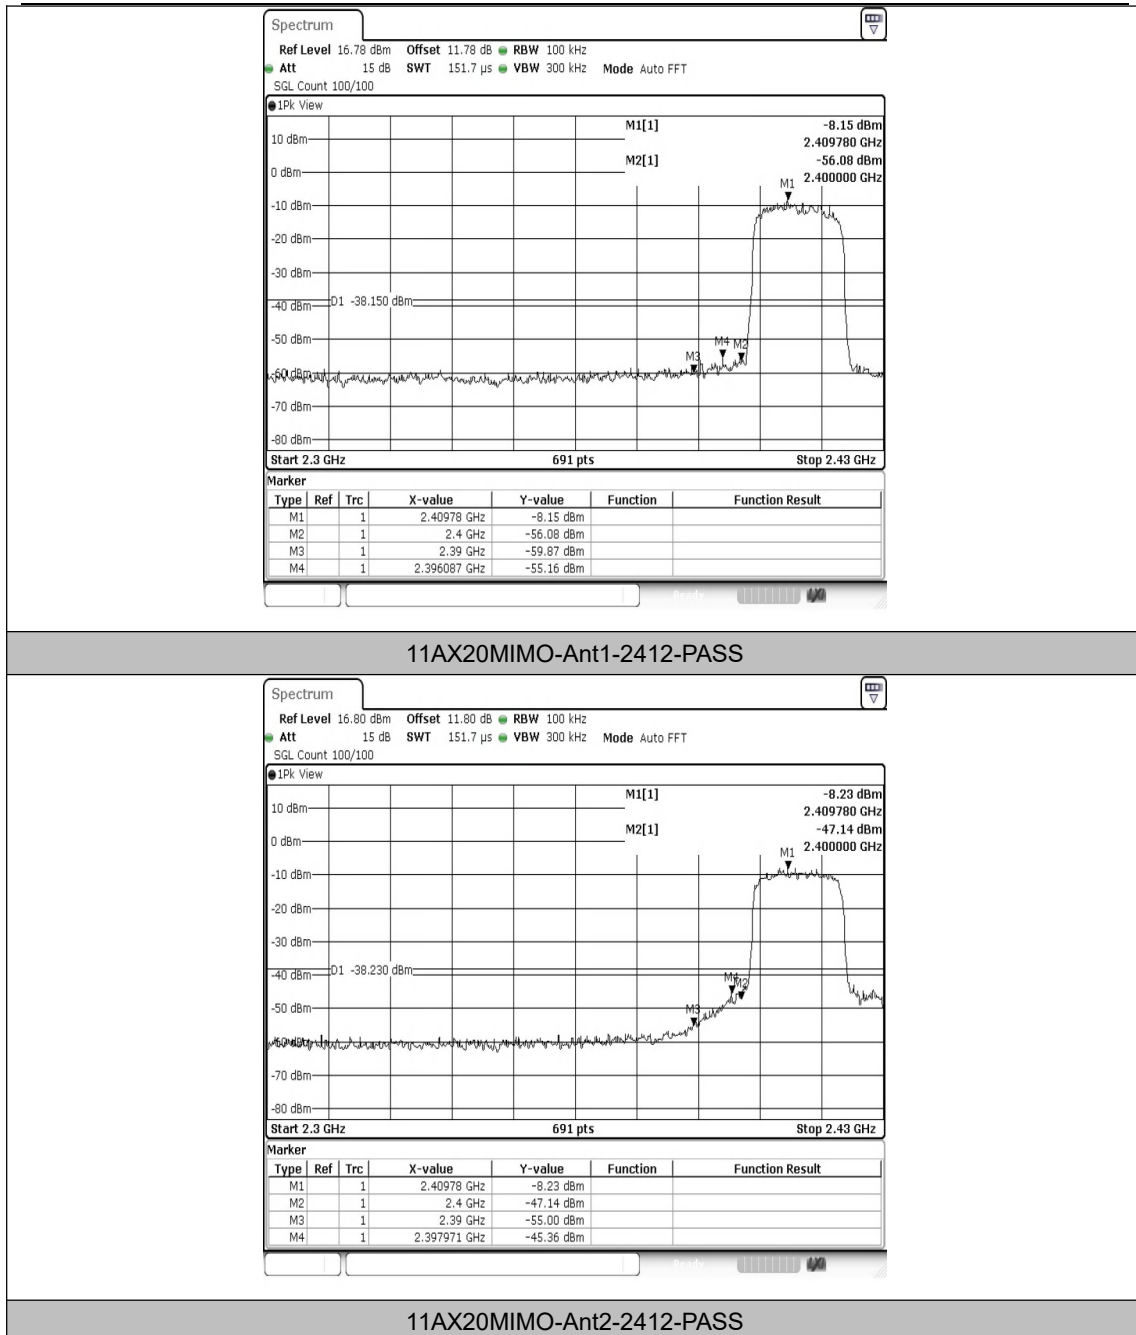

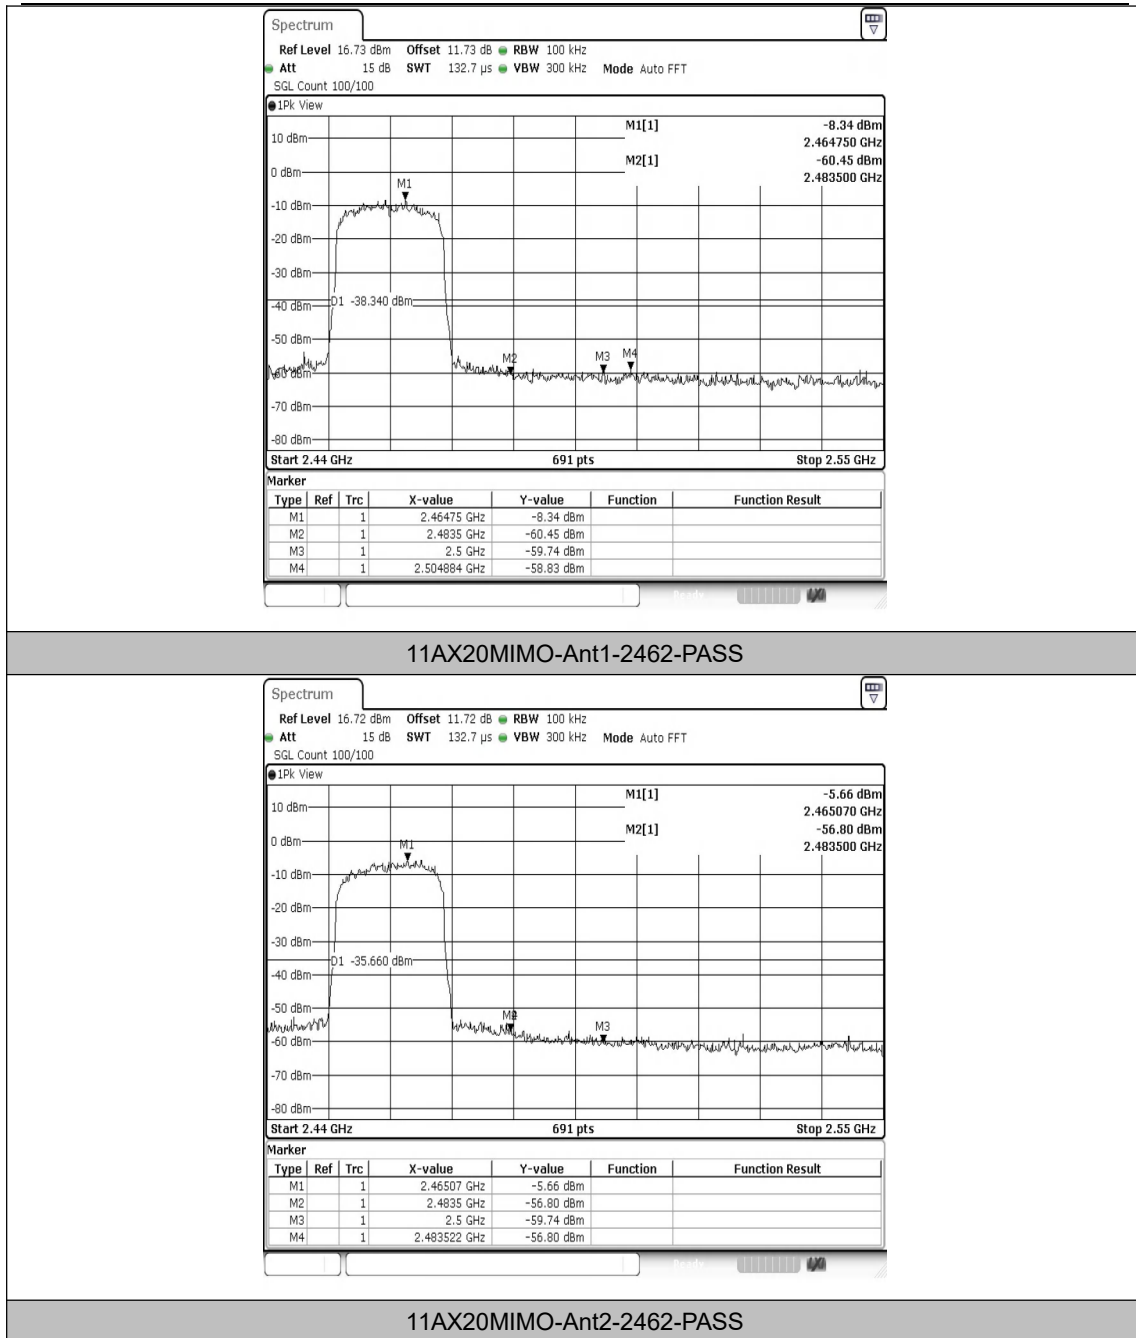

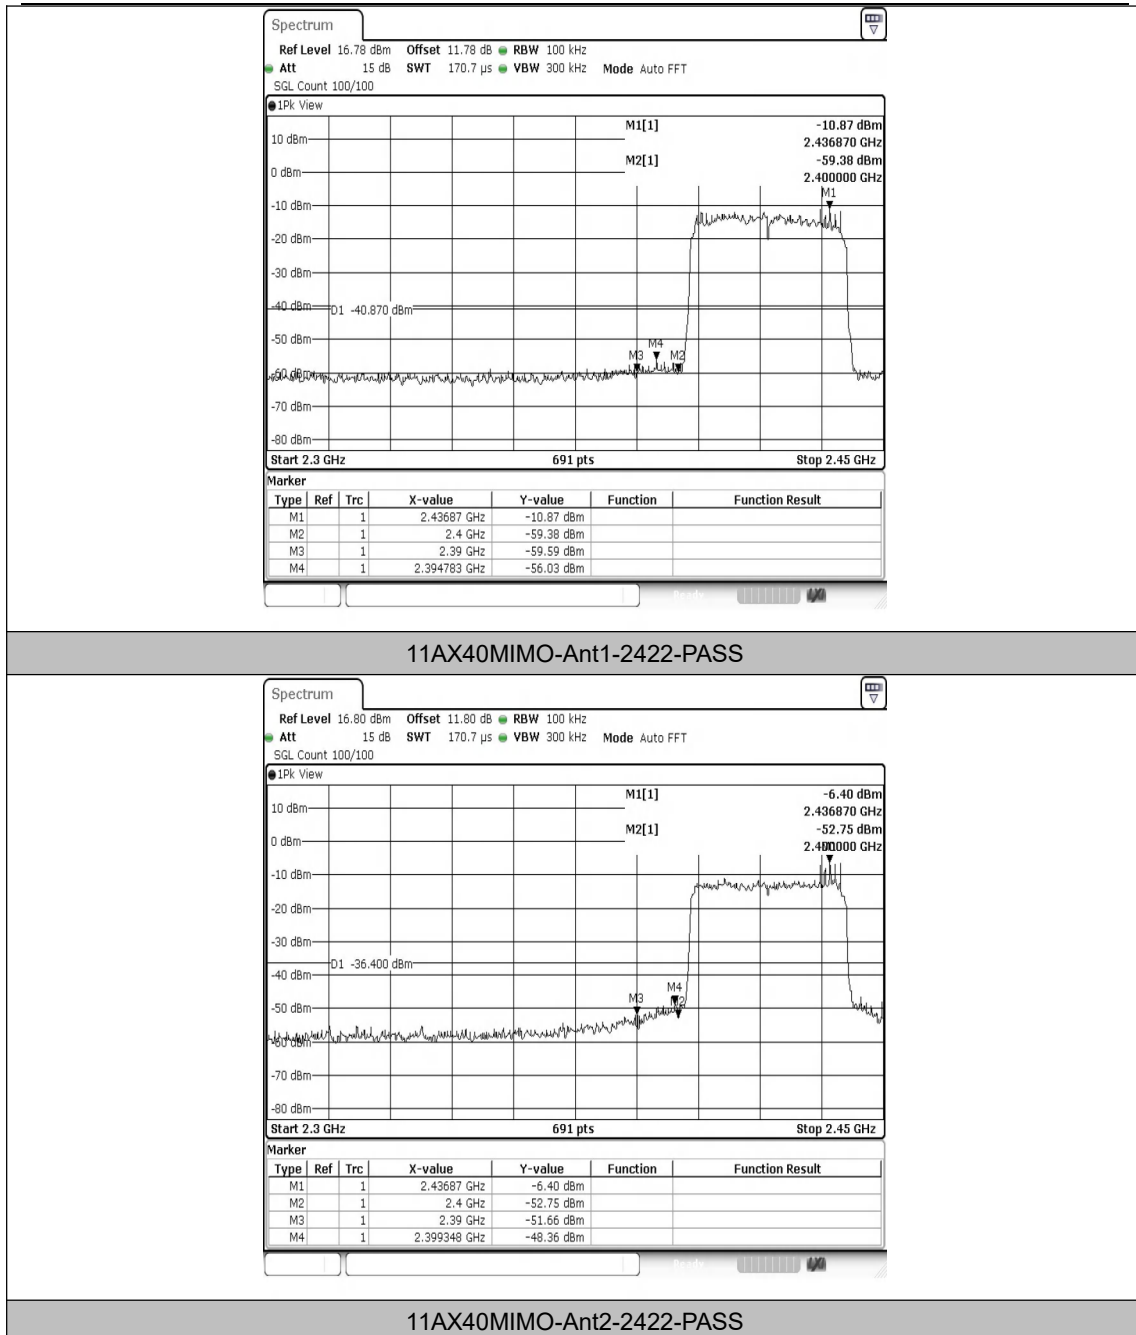

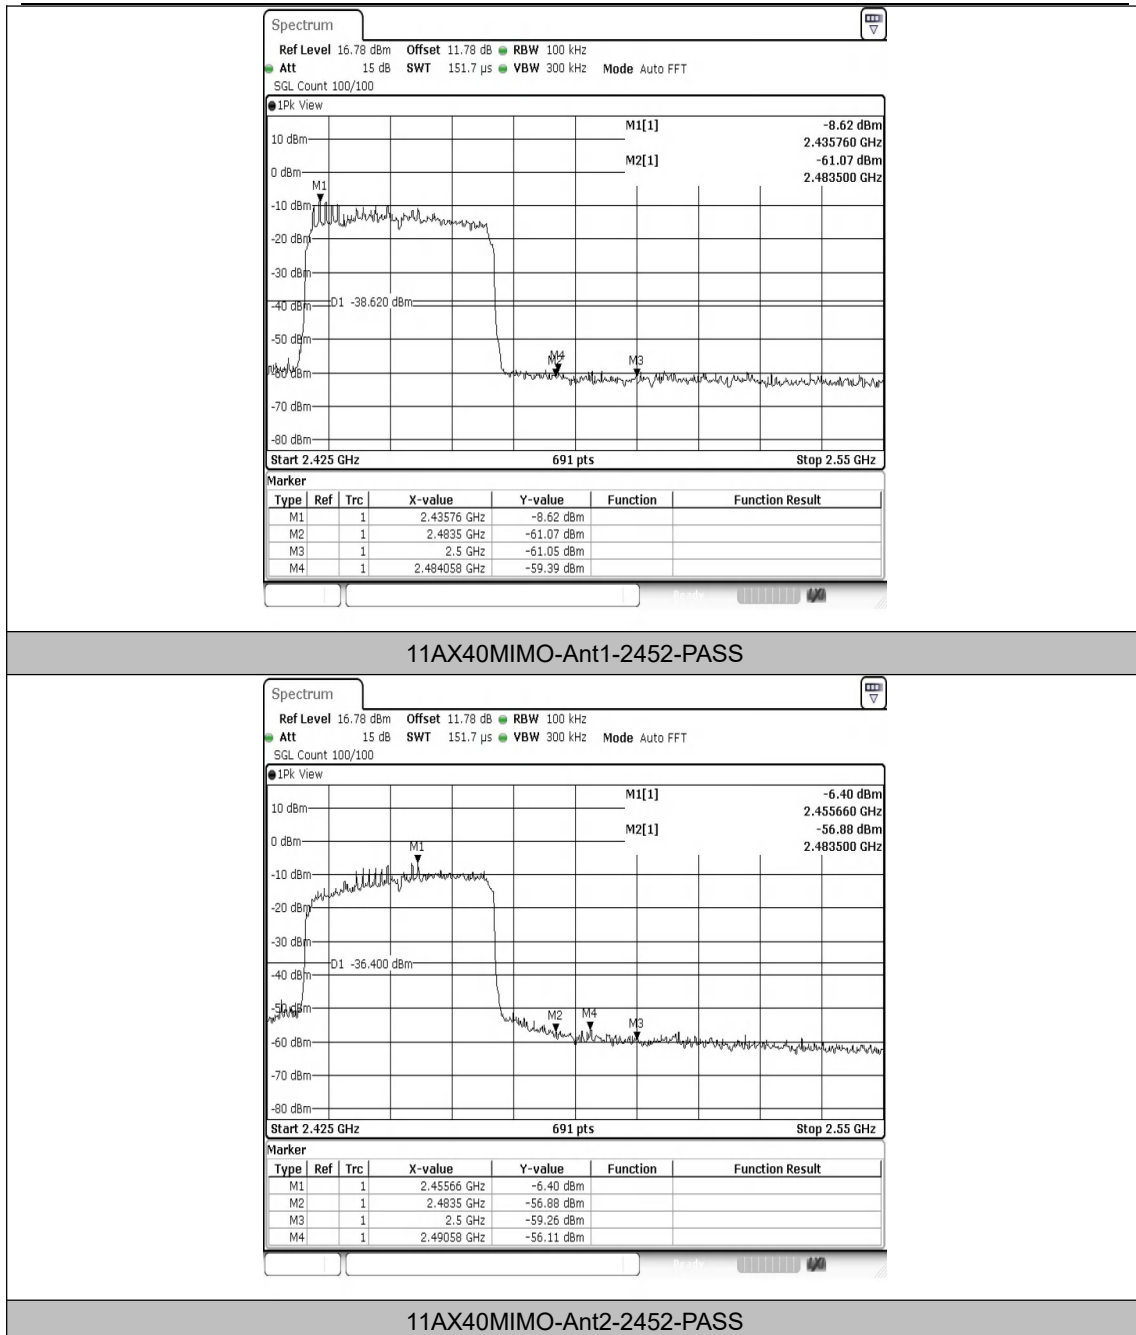

Appendix F: Conducted Spurious Emission

Test Result

Test Mode	Antenna	Frequency [MHz]	Freq. Range [Mhz]	Ref. Level [dBm]	Result [dBm]	Limit [dBm]	Verdict
11B	Ant2	2412	0~Reference	5.99	5.99	---	PASS
11B	Ant1	2412	0~Reference	3.16	3.16	---	PASS
11B	Ant2	2412	30~1000	5.99	-57.78	≤-24.01	PASS
11B	Ant1	2412	30~1000	3.16	-57.25	≤-26.84	PASS
11B	Ant2	2412	1000~26500	5.99	-44.18	≤-24.01	PASS
11B	Ant1	2412	1000~26500	3.16	-43.97	≤-26.84	PASS
11B	Ant2	2437	0~Reference	5.46	5.46	---	PASS
11B	Ant1	2437	0~Reference	3.56	3.56	---	PASS
11B	Ant2	2437	30~1000	5.46	-58.4	≤-24.54	PASS
11B	Ant1	2437	30~1000	3.56	-58.81	≤-26.44	PASS
11B	Ant2	2437	1000~26500	5.46	-43.56	≤-24.54	PASS
11B	Ant1	2437	1000~26500	3.56	-43.35	≤-26.44	PASS
11B	Ant2	2462	0~Reference	5.82	5.82	---	PASS
11B	Ant1	2462	0~Reference	3.71	3.71	---	PASS
11B	Ant2	2462	30~1000	5.82	-58.33	≤-24.18	PASS
11B	Ant1	2462	30~1000	3.71	-57.86	≤-26.29	PASS
11B	Ant1	2462	1000~26500	3.71	-43.86	≤-26.29	PASS
11B	Ant2	2462	1000~26500	5.82	-44.19	≤-24.18	PASS
11G	Ant1	2412	0~Reference	-9.47	-9.47	---	PASS
11G	Ant2	2412	0~Reference	-8.04	-8.04	---	PASS
11G	Ant2	2412	30~1000	-8.04	-57.64	≤-38.04	PASS
11G	Ant1	2412	30~1000	-9.47	-57.91	≤-39.47	PASS
11G	Ant2	2412	1000~26500	-8.04	-43.1	≤-38.04	PASS
11G	Ant1	2412	1000~26500	-9.47	-44.02	≤-39.47	PASS
11G	Ant2	2437	0~Reference	-5.98	-5.98	---	PASS
11G	Ant1	2437	0~Reference	-9.66	-9.66	---	PASS
11G	Ant2	2437	30~1000	-5.98	-58.36	≤-35.98	PASS
11G	Ant1	2437	30~1000	-9.66	-58.87	≤-39.66	PASS
11G	Ant2	2437	1000~26500	-5.98	-44	≤-35.98	PASS
11G	Ant1	2437	1000~26500	-9.66	-44.01	≤-39.66	PASS
11G	Ant2	2462	0~Reference	-5.67	-5.67	---	PASS
11G	Ant1	2462	0~Reference	-9.15	-9.15	---	PASS
11G	Ant2	2462	30~1000	-5.67	-57.97	≤-35.67	PASS
11G	Ant1	2462	30~1000	-9.15	-58.6	≤-39.15	PASS
11G	Ant2	2462	1000~26500	-5.67	-44.21	≤-35.67	PASS
11G	Ant1	2462	1000~26500	-9.15	-43.81	≤-39.15	PASS

Shenzhen Anbotech Compliance Laboratory Limited



11N20MIMO	Ant1	2412	0~Reference	-9.27	-9.27	---	PASS
11N20MIMO	Ant2	2412	0~Reference	-7.44	-7.44	---	PASS
11N20MIMO	Ant1	2412	30~1000	-9.27	-58.58	≤-39.27	PASS
11N20MIMO	Ant2	2412	30~1000	-7.44	-57.73	≤-37.44	PASS
11N20MIMO	Ant1	2412	1000~26500	-9.27	-43.97	≤-39.27	PASS
11N20MIMO	Ant2	2412	1000~26500	-7.44	-43.58	≤-37.44	PASS
11N20MIMO	Ant1	2437	0~Reference	-9.47	-9.47	---	PASS
11N20MIMO	Ant2	2437	0~Reference	-7.59	-7.59	---	PASS
11N20MIMO	Ant1	2437	30~1000	-9.47	-57.11	≤-39.47	PASS
11N20MIMO	Ant2	2437	30~1000	-7.59	-58.3	≤-37.59	PASS
11N20MIMO	Ant1	2437	1000~26500	-9.47	-44.21	≤-39.47	PASS
11N20MIMO	Ant2	2437	1000~26500	-7.59	-43.76	≤-37.59	PASS
11N20MIMO	Ant1	2462	0~Reference	-8.23	-8.23	---	PASS
11N20MIMO	Ant2	2462	0~Reference	-6.16	-6.16	---	PASS
11N20MIMO	Ant1	2462	30~1000	-8.23	-58.72	≤-38.23	PASS
11N20MIMO	Ant2	2462	30~1000	-6.16	-58.22	≤-36.16	PASS
11N20MIMO	Ant1	2462	1000~26500	-8.23	-43.95	≤-38.23	PASS
11N20MIMO	Ant2	2462	1000~26500	-6.16	-43.13	≤-36.16	PASS
11N40MIMO	Ant1	2422	0~Reference	-12.61	-12.61	---	PASS
11N40MIMO	Ant2	2422	0~Reference	-11.76	-11.76	---	PASS
11N40MIMO	Ant1	2422	30~1000	-12.61	-59.07	≤-42.61	PASS
11N40MIMO	Ant2	2422	30~1000	-11.76	-58.01	≤-41.76	PASS
11N40MIMO	Ant1	2422	1000~26500	-12.61	-44.08	≤-42.61	PASS
11N40MIMO	Ant2	2422	1000~26500	-11.76	-44.31	≤-41.76	PASS
11N40MIMO	Ant2	2437	0~Reference	-8.93	-8.93	---	PASS
11N40MIMO	Ant1	2437	0~Reference	-10.36	-10.36	---	PASS
11N40MIMO	Ant2	2437	30~1000	-8.93	-57.92	≤-38.93	PASS
11N40MIMO	Ant1	2437	30~1000	-10.36	-58.48	≤-40.36	PASS
11N40MIMO	Ant2	2437	1000~26500	-8.93	-44.11	≤-38.93	PASS
11N40MIMO	Ant1	2437	1000~26500	-10.36	-43.8	≤-40.36	PASS
11N40MIMO	Ant1	2452	0~Reference	-8.62	-8.62	---	PASS
11N40MIMO	Ant2	2452	0~Reference	-9.00	-9.00	---	PASS
11N40MIMO	Ant2	2452	30~1000	-9.00	-57.97	≤-39	PASS
11N40MIMO	Ant1	2452	30~1000	-8.62	-57.52	≤-38.62	PASS
11N40MIMO	Ant2	2452	1000~26500	-9.00	-43.67	≤-39	PASS
11N40MIMO	Ant1	2452	1000~26500	-8.62	-43.97	≤-38.62	PASS
11AX20MIMO	Ant1	2412	0~Reference	-10.57	-10.57	---	PASS
11AX20MIMO	Ant2	2412	0~Reference	-8.62	-8.62	---	PASS
11AX20MIMO	Ant1	2412	30~1000	-10.57	-58.47	≤-40.57	PASS
11AX20MIMO	Ant2	2412	30~1000	-8.62	-58.37	≤-38.62	PASS
11AX20MIMO	Ant1	2412	1000~26500	-10.57	-43.75	≤-40.57	PASS
11AX20MIMO	Ant2	2412	1000~26500	-8.62	-43.55	≤-38.62	PASS

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotech.com




Hotline
400-003-0500
www.anbotech.com

11AX20MIMO	Ant1	2437	0~Reference	-9.27	-9.27	---	PASS
11AX20MIMO	Ant2	2437	0~Reference	-7.54	-7.54	---	PASS
11AX20MIMO	Ant1	2437	30~1000	-9.27	-58.16	≤-39.27	PASS
11AX20MIMO	Ant2	2437	30~1000	-7.54	-58.53	≤-37.54	PASS
11AX20MIMO	Ant1	2437	1000~26500	-9.27	-43.15	≤-39.27	PASS
11AX20MIMO	Ant2	2437	1000~26500	-7.54	-43.48	≤-37.54	PASS
11AX20MIMO	Ant1	2462	0~Reference	-9.10	-9.10	---	PASS
11AX20MIMO	Ant2	2462	0~Reference	-6.94	-6.94	---	PASS
11AX20MIMO	Ant1	2462	30~1000	-9.10	-57.52	≤-39.1	PASS
11AX20MIMO	Ant2	2462	30~1000	-6.94	-58.85	≤-36.94	PASS
11AX20MIMO	Ant1	2462	1000~26500	-9.10	-44.02	≤-39.1	PASS
11AX20MIMO	Ant2	2462	1000~26500	-6.94	-44.49	≤-36.94	PASS
11AX40MIMO	Ant1	2422	0~Reference	-8.66	-8.66	---	PASS
11AX40MIMO	Ant2	2422	0~Reference	-9.07	-9.07	---	PASS
11AX40MIMO	Ant1	2422	30~1000	-8.66	-58.83	≤-38.66	PASS
11AX40MIMO	Ant2	2422	30~1000	-9.07	-57.83	≤-39.07	PASS
11AX40MIMO	Ant1	2422	1000~26500	-8.66	-42.84	≤-38.66	PASS
11AX40MIMO	Ant2	2422	1000~26500	-9.07	-44.23	≤-39.07	PASS
11AX40MIMO	Ant2	2437	0~Reference	-10.69	-10.69	---	PASS
11AX40MIMO	Ant1	2437	0~Reference	-9.80	-9.80	---	PASS
11AX40MIMO	Ant2	2437	30~1000	-10.69	-58.03	≤-40.69	PASS
11AX40MIMO	Ant1	2437	30~1000	-9.80	-57.88	≤-39.8	PASS
11AX40MIMO	Ant2	2437	1000~26500	-10.69	-44.12	≤-40.69	PASS
11AX40MIMO	Ant1	2437	1000~26500	-9.80	-44	≤-39.8	PASS
11AX40MIMO	Ant1	2452	0~Reference	-7.83	-7.83	---	PASS
11AX40MIMO	Ant2	2452	0~Reference	-9.32	-9.32	---	PASS
11AX40MIMO	Ant2	2452	30~1000	-9.32	-57.45	≤-39.32	PASS
11AX40MIMO	Ant1	2452	30~1000	-7.83	-57.74	≤-37.83	PASS
11AX40MIMO	Ant2	2452	1000~26500	-9.32	-44.11	≤-39.32	PASS
11AX40MIMO	Ant1	2452	1000~26500	-7.83	-44.03	≤-37.83	PASS

Remark:Regarding the spurious emissions from 30MHz to 26.5GHz, the cable lose and attenuator factors have been set in the 'TDF' of the Spectrum Analyzer during the test.


Test Graphs

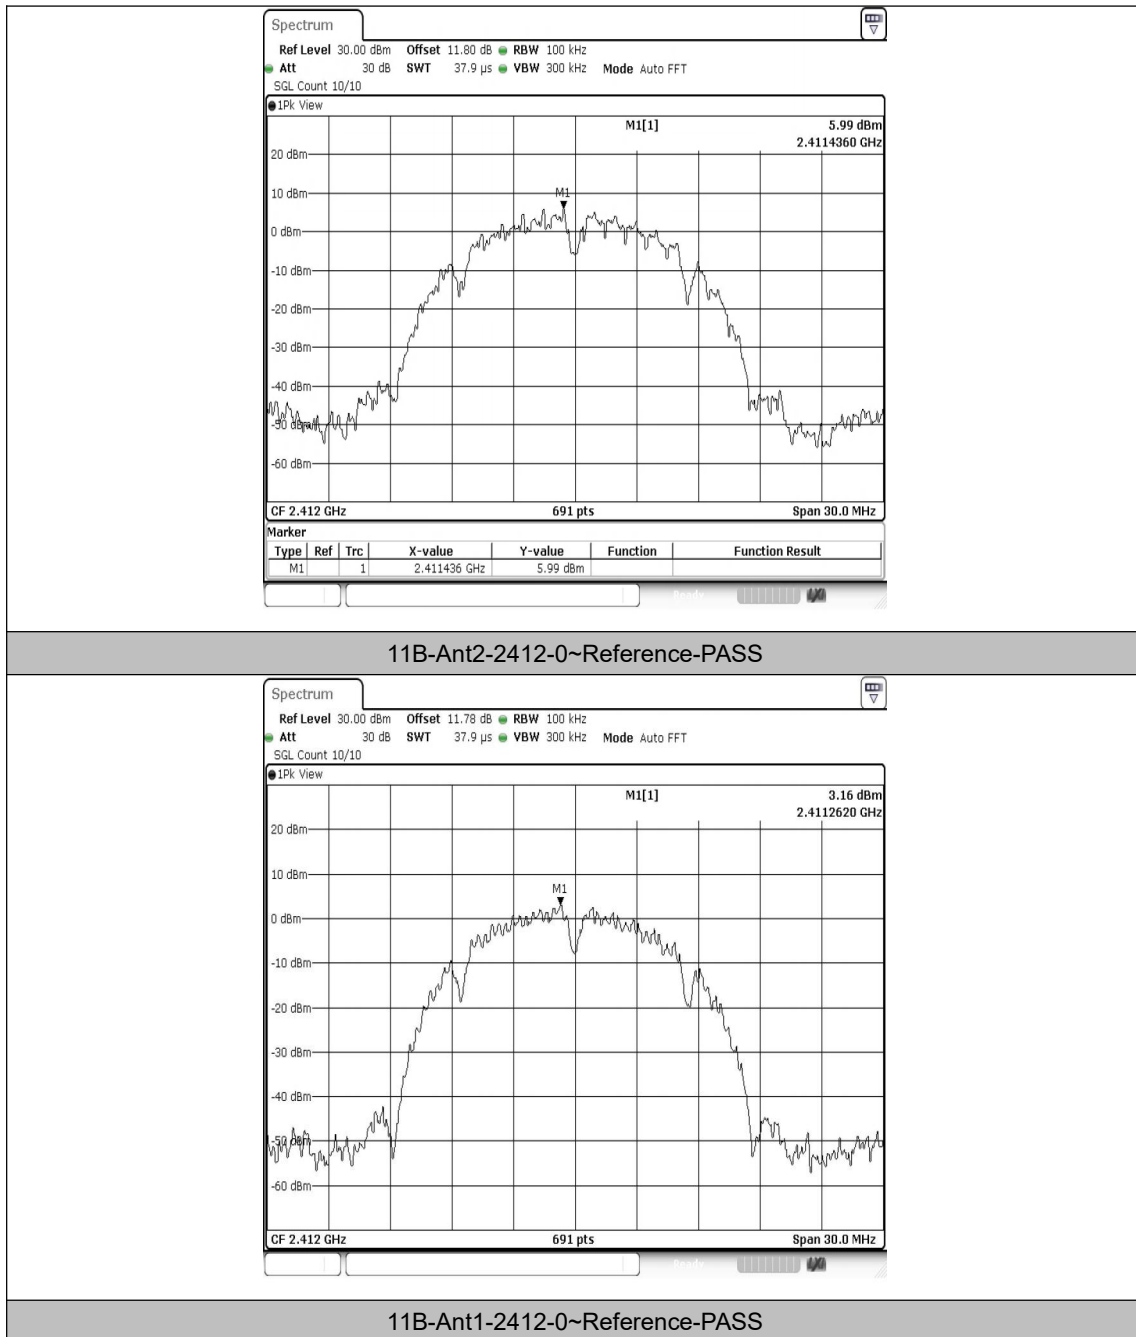

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

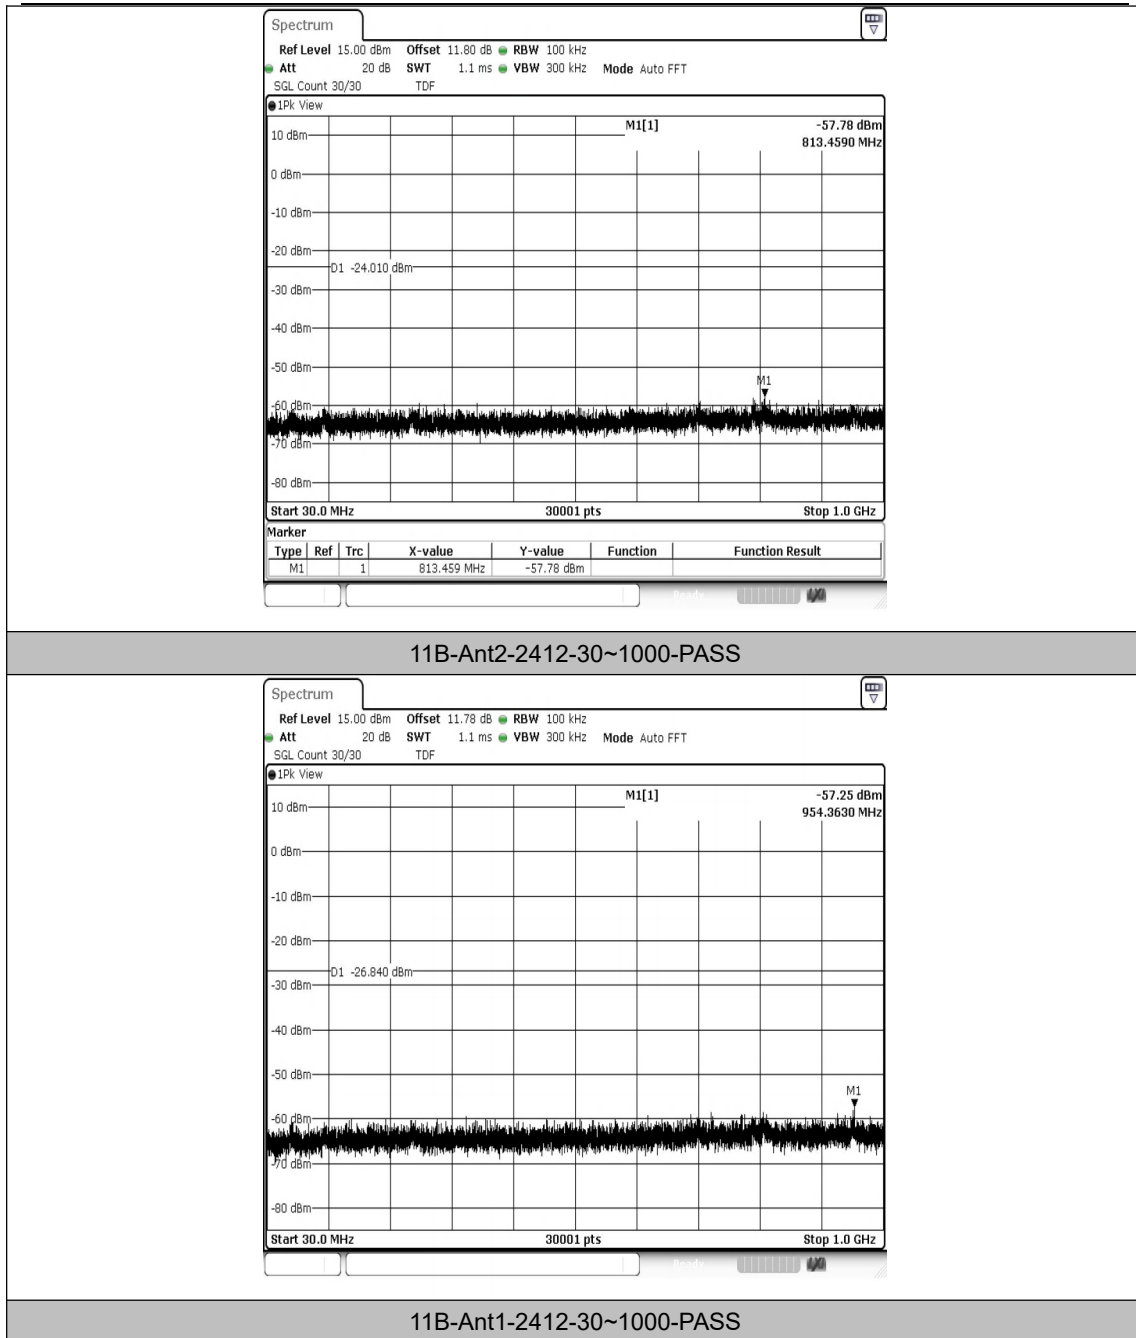

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

 Hotline
400-003-0500
www.anbotek.com

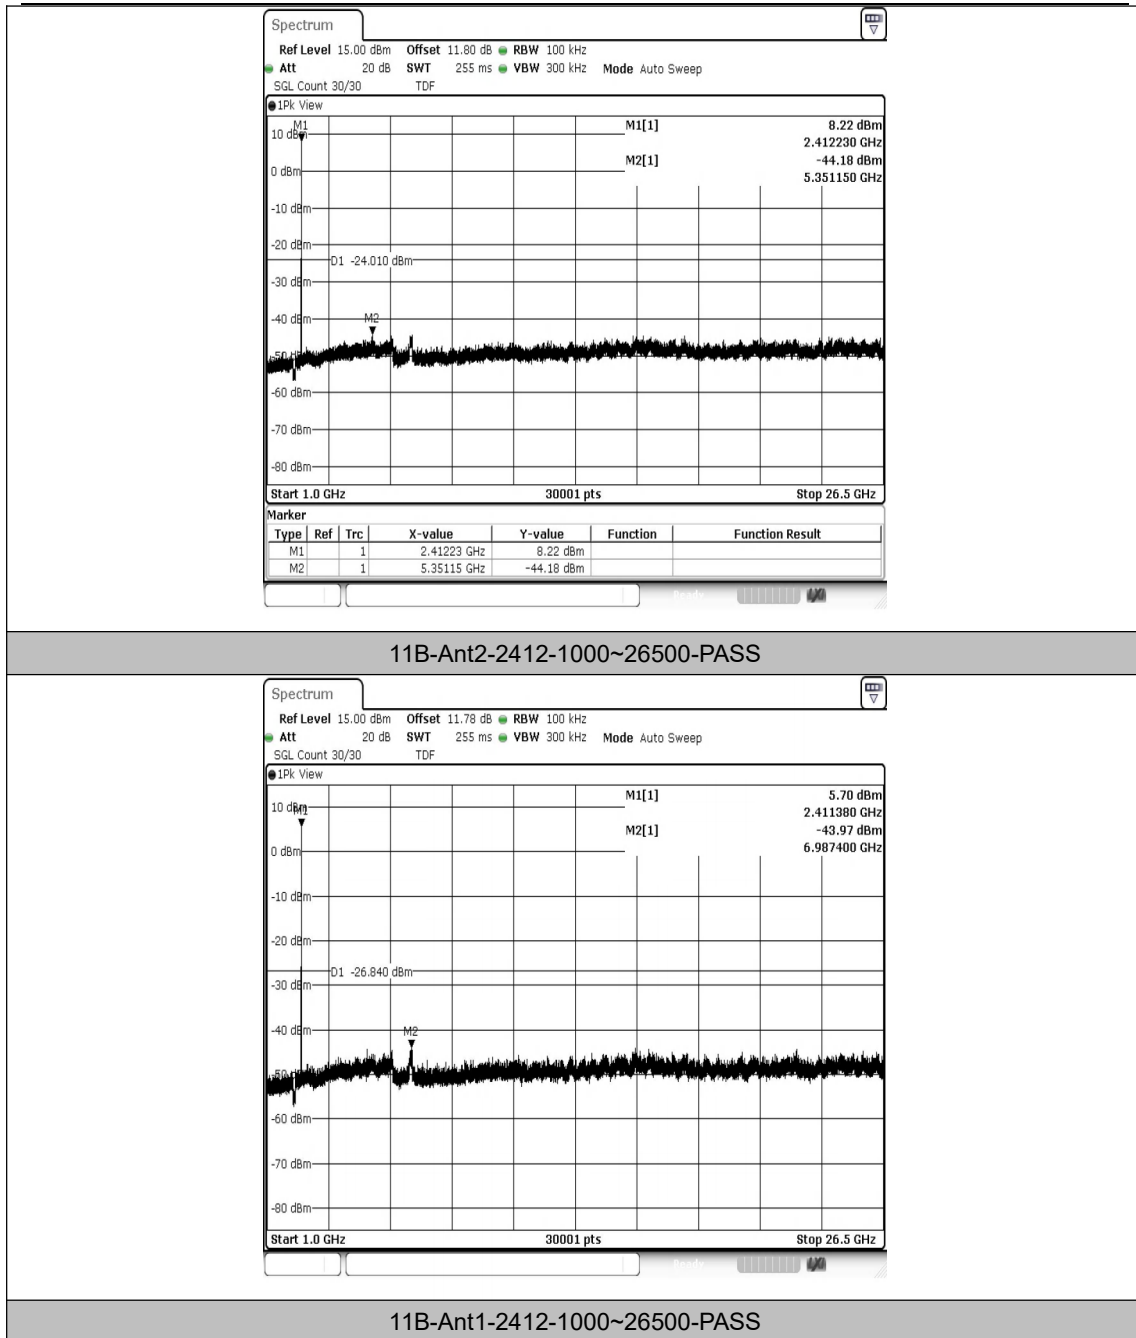

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

