

11AC40MIMO	Ant1	Low	5510	-42.69	≤-27	PASS
11AC40MIMO	Ant1	High	5670	-40.16	≤-27	PASS
11AC40MIMO	Ant2	High	5670	-33.15	≤-27	PASS
11AC80MIMO	Ant2	Low	5210	-31.6	≤-27	PASS
11AC80MIMO	Ant1	Low	5210	-35.65	≤-27	PASS
11AC80MIMO	Ant1	High	5290	-32.04	≤-27	PASS
11AC80MIMO	Ant2	High	5290	-37.2	≤-27	PASS
11AC80MIMO	Ant1	Low	5530	-30.85	≤-27	PASS
11AC80MIMO	Ant2	Low	5530	-30.53	≤-27	PASS
11AC80MIMO	Ant1	High	5610	-40.85	≤-27	PASS
11AC80MIMO	Ant2	High	5610	-44.19	≤-27	PASS
11AX20MIMO	Ant1	Low	5180	-33.86	≤-27	PASS
11AX20MIMO	Ant2	Low	5180	-36.87	≤-27	PASS
11AX20MIMO	Ant1	High	5320	-42.76	≤-27	PASS
11AX20MIMO	Ant2	High	5320	-42.57	≤-27	PASS
11AX20MIMO	Ant1	Low	5500	-40.85	≤-27	PASS
11AX20MIMO	Ant2	Low	5500	-32.87	≤-27	PASS
11AX20MIMO	Ant1	High	5700	-37.37	≤-27	PASS
11AX20MIMO	Ant2	High	5700	-43.3	≤-27	PASS
11AX40MIMO	Ant1	Low	5190	-36.36	≤-27	PASS
11AX40MIMO	Ant2	Low	5190	-36.14	≤-27	PASS
11AX40MIMO	Ant1	High	5310	-36.03	≤-27	PASS
11AX40MIMO	Ant2	High	5310	-37.54	≤-27	PASS
11AX40MIMO	Ant1	Low	5510	-39.26	≤-27	PASS
11AX40MIMO	Ant2	Low	5510	-31	≤-27	PASS
11AX40MIMO	Ant1	High	5670	-38.71	≤-27	PASS
11AX40MIMO	Ant2	High	5670	-31.34	≤-27	PASS
11AX80MIMO	Ant2	Low	5210	-31.56	≤-27	PASS
11AX80MIMO	Ant1	Low	5210	-32.09	≤-27	PASS
11AX80MIMO	Ant2	High	5290	-37.23	≤-27	PASS
11AX80MIMO	Ant1	High	5290	-34.39	≤-27	PASS
11AX80MIMO	Ant2	Low	5530	-30.2	≤-27	PASS
11AX80MIMO	Ant1	Low	5530	-34.29	≤-27	PASS
11AX80MIMO	Ant1	High	5610	-42.85	≤-27	PASS
11AX80MIMO	Ant2	High	5610	-44.46	≤-27	PASS

Note: The margin plus the antenna gain also meets the limit.



Test Result B4

Test Mode	Antenna	Ch. Name	Frequency [MHz]	FreqRange [MHz]	Result [dBm]	Limit [dBm]	Verdict
11A	Ant1	Low	5745	5720~5725	-41.48	≤15.98	PASS
11A	Ant1	Low	5745	5700~5720	-40.02	≤14.48	PASS
11A	Ant1	Low	5745	5650~5700	-47.8	≤-26.88	PASS
11A	Ant1	Low	5745	5645~5650	-47.74	≤-27	PASS
11A	Ant2	Low	5745	5720~5725	-34.41	≤15.98	PASS
11A	Ant2	Low	5745	5700~5720	-33.2	≤15.46	PASS
11A	Ant2	Low	5745	5650~5700	-47.07	≤-26.88	PASS
11A	Ant2	Low	5745	5645~5650	-46.14	≤-27	PASS
11A	Ant1	High	5825	5850~5855	-44.53	≤15.65	PASS
11A	Ant1	High	5825	5855~5875	-45.29	≤10.24	PASS
11A	Ant1	High	5825	5875~5925	-46.6	≤-26.87	PASS
11A	Ant1	High	5825	5925~5935	-45.12	≤-27	PASS
11A	Ant2	High	5825	5850~5855	-26.96	≤19.22	PASS
11A	Ant2	High	5825	5855~5875	-32.85	≤15.55	PASS
11A	Ant2	High	5825	5875~5925	-47.37	≤-26.15	PASS
11A	Ant2	High	5825	5925~5935	-45.28	≤-27	PASS
11N20MIMO	Ant1	Low	5745	5720~5725	-40.98	≤15.98	PASS
11N20MIMO	Ant1	Low	5745	5700~5720	-43.5	≤10.05	PASS
11N20MIMO	Ant1	Low	5745	5650~5700	-47.88	≤-26.63	PASS
11N20MIMO	Ant1	Low	5745	5645~5650	-46.74	≤-27	PASS
11N20MIMO	Ant2	Low	5745	5720~5725	-30.26	≤24.72	PASS
11N20MIMO	Ant2	Low	5745	5700~5720	-39.11	≤15.51	PASS
11N20MIMO	Ant2	Low	5745	5650~5700	-46.82	≤-26.14	PASS
11N20MIMO	Ant2	Low	5745	5645~5650	-47.33	≤-27	PASS
11N20MIMO	Ant1	High	5825	5850~5855	-42.92	≤16.10	PASS
11N20MIMO	Ant1	High	5825	5855~5875	-44.89	≤10.24	PASS
11N20MIMO	Ant1	High	5825	5875~5925	-43.59	≤-24.99	PASS
11N20MIMO	Ant1	High	5825	5925~5935	-43.61	≤-27	PASS
11N20MIMO	Ant2	High	5825	5850~5855	-30.54	≤15.65	PASS
11N20MIMO	Ant2	High	5825	5855~5875	-30.67	≤15.55	PASS
11N20MIMO	Ant2	High	5825	5875~5925	-45.3	≤-26.87	PASS
11N20MIMO	Ant2	High	5825	5925~5935	-45.53	≤-27	PASS
11N40MIMO	Ant1	Low	5755	5720~5725	-35.28	≤15.90	PASS
11N40MIMO	Ant1	Low	5755	5700~5720	-36.1	≤12.46	PASS
11N40MIMO	Ant1	Low	5755	5650~5700	-44.86	≤-24.91	PASS
11N40MIMO	Ant1	Low	5755	5645~5650	-47.84	≤-27	PASS
11N40MIMO	Ant2	Low	5755	5720~5725	-33.84	≤15.90	PASS
11N40MIMO	Ant2	Low	5755	5700~5720	-33.52	≤15.20	PASS
11N40MIMO	Ant2	Low	5755	5650~5700	-43.4	≤-26.94	PASS

Shenzhen Anbotech Compliance Laboratory Limited



11N40MIMO	Ant2	Low	5755	5645~5650	-40.37	≤-27	PASS
11N40MIMO	Ant1	High	5795	5850~5855	-42.43	≤15.85	PASS
11N40MIMO	Ant1	High	5795	5855~5875	-41.96	≤11.75	PASS
11N40MIMO	Ant1	High	5795	5875~5925	-46.2	≤-24.84	PASS
11N40MIMO	Ant1	High	5795	5925~5935	-46.91	≤-27	PASS
11N40MIMO	Ant2	High	5795	5850~5855	-45.98	≤15.85	PASS
11N40MIMO	Ant2	High	5795	5855~5875	-43	≤10.88	PASS
11N40MIMO	Ant2	High	5795	5875~5925	-46.15	≤-26.08	PASS
11N40MIMO	Ant2	High	5795	5925~5935	-43.85	≤-27	PASS
11AC20MIMO	Ant1	Low	5745	5720~5725	-24.96	≤17.12	PASS
11AC20MIMO	Ant1	Low	5745	5700~5720	-26.02	≤15.18	PASS
11AC20MIMO	Ant1	Low	5745	5650~5700	-47.87	≤-25.77	PASS
11AC20MIMO	Ant1	Low	5745	5645~5650	-47.67	≤-27	PASS
11AC20MIMO	Ant2	Low	5745	5720~5725	-30.35	≤17.88	PASS
11AC20MIMO	Ant2	Low	5745	5700~5720	-30.96	≤15.04	PASS
11AC20MIMO	Ant2	Low	5745	5650~5700	-47.81	≤-26.88	PASS
11AC20MIMO	Ant2	Low	5745	5645~5650	-47.14	≤-27	PASS
11AC20MIMO	Ant1	High	5825	5850~5855	-32.81	≤19.22	PASS
11AC20MIMO	Ant1	High	5825	5855~5875	-36.87	≤14.89	PASS
11AC20MIMO	Ant1	High	5825	5875~5925	-47.06	≤-26.87	PASS
11AC20MIMO	Ant1	High	5825	5925~5935	-45.71	≤-27	PASS
11AC20MIMO	Ant2	High	5825	5850~5855	-28.18	≤15.65	PASS
11AC20MIMO	Ant2	High	5825	5855~5875	-25.01	≤15.00	PASS
11AC20MIMO	Ant2	High	5825	5875~5925	-44.65	≤-26.87	PASS
11AC20MIMO	Ant2	High	5825	5925~5935	-44.7	≤-27	PASS
11AC40MIMO	Ant1	Low	5755	5720~5725	-26.35	≤15.90	PASS
11AC40MIMO	Ant1	Low	5755	5700~5720	-22.6	≤13.34	PASS
11AC40MIMO	Ant1	Low	5755	5650~5700	-45.66	≤-26.07	PASS
11AC40MIMO	Ant1	Low	5755	5645~5650	-45.93	≤-27	PASS
11AC40MIMO	Ant2	Low	5755	5720~5725	-27.11	≤15.90	PASS
11AC40MIMO	Ant2	Low	5755	5700~5720	-30.72	≤11.42	PASS
11AC40MIMO	Ant2	Low	5755	5650~5700	-48.28	≤-26.94	PASS
11AC40MIMO	Ant2	Low	5755	5645~5650	-46.73	≤-27	PASS
11AC40MIMO	Ant1	High	5795	5850~5855	-33.61	≤16.94	PASS
11AC40MIMO	Ant1	High	5795	5855~5875	-35.87	≤12.62	PASS
11AC40MIMO	Ant1	High	5795	5875~5925	-44.08	≤-23.78	PASS
11AC40MIMO	Ant1	High	5795	5925~5935	-46.26	≤-27	PASS
11AC40MIMO	Ant2	High	5795	5850~5855	-36.41	≤16.39	PASS
11AC40MIMO	Ant2	High	5795	5855~5875	-34.16	≤14.63	PASS
11AC40MIMO	Ant2	High	5795	5875~5925	-47.72	≤-26.97	PASS
11AC40MIMO	Ant2	High	5795	5925~5935	-45.33	≤-27	PASS
11AC80MIMO	Ant1	Low	5775	5720~5725	-22.82	≤15.67	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com



Hotline
400-003-0500
www.anbotek.com

11AC80MIMO	Ant1	Low	5775	5700~5720	-23.04	≤10.64	PASS
11AC80MIMO	Ant1	Low	5775	5650~5700	-31.65	≤-26.05	PASS
11AC80MIMO	Ant1	Low	5775	5645~5650	-31.16	≤-27	PASS
11AC80MIMO	Ant1	High	5775	5850~5855	-23.86	≤15.98	PASS
11AC80MIMO	Ant1	High	5775	5855~5875	-24.91	≤10.02	PASS
11AC80MIMO	Ant1	High	5775	5875~5925	-30.98	≤-24.28	PASS
11AC80MIMO	Ant1	High	5775	5925~5935	-35.02	≤-27	PASS
11AC80MIMO	Ant2	Low	5775	5720~5725	-22.32	≤16.18	PASS
11AC80MIMO	Ant2	Low	5775	5700~5720	-23.74	≤10.89	PASS
11AC80MIMO	Ant2	Low	5775	5650~5700	-38.38	≤-26.88	PASS
11AC80MIMO	Ant2	Low	5775	5645~5650	-38.65	≤-27	PASS
11AC80MIMO	Ant2	High	5775	5850~5855	-22.64	≤17.81	PASS
11AC80MIMO	Ant2	High	5775	5855~5875	-27.16	≤11.07	PASS
11AC80MIMO	Ant2	High	5775	5875~5925	-43.53	≤-26.86	PASS
11AC80MIMO	Ant2	High	5775	5925~5935	-43.43	≤-27	PASS
11AX20MIMO	Ant1	Low	5745	5720~5725	-26.7	≤15.98	PASS
11AX20MIMO	Ant1	Low	5745	5700~5720	-26.67	≤15.46	PASS
11AX20MIMO	Ant1	Low	5745	5650~5700	-43.27	≤-22.19	PASS
11AX20MIMO	Ant1	Low	5745	5645~5650	-47.21	≤-27	PASS
11AX20MIMO	Ant2	Low	5745	5720~5725	-29.4	≤16.36	PASS
11AX20MIMO	Ant2	Low	5745	5700~5720	-29.97	≤15.09	PASS
11AX20MIMO	Ant2	Low	5745	5650~5700	-47.13	≤-26.88	PASS
11AX20MIMO	Ant2	Low	5745	5645~5650	-47.61	≤-27	PASS
11AX20MIMO	Ant1	High	5825	5850~5855	-35.53	≤15.65	PASS
11AX20MIMO	Ant1	High	5825	5855~5875	-34.49	≤14.67	PASS
11AX20MIMO	Ant1	High	5825	5875~5925	-48.13	≤-26.73	PASS
11AX20MIMO	Ant1	High	5825	5925~5935	-46.03	≤-27	PASS
11AX20MIMO	Ant2	High	5825	5850~5855	-34.8	≤15.65	PASS
11AX20MIMO	Ant2	High	5825	5855~5875	-35.67	≤14.67	PASS
11AX20MIMO	Ant2	High	5825	5875~5925	-47.47	≤-26.87	PASS
11AX20MIMO	Ant2	High	5825	5925~5935	-44.89	≤-27	PASS
11AX40MIMO	Ant1	Low	5755	5720~5725	-26.44	≤15.90	PASS
11AX40MIMO	Ant1	Low	5755	5700~5720	-24.77	≤12.40	PASS
11AX40MIMO	Ant1	Low	5755	5650~5700	-46.16	≤-26.21	PASS
11AX40MIMO	Ant1	Low	5755	5645~5650	-45.83	≤-27	PASS
11AX40MIMO	Ant2	Low	5755	5720~5725	-26.96	≤15.90	PASS
11AX40MIMO	Ant2	Low	5755	5700~5720	-27.45	≤13.66	PASS
11AX40MIMO	Ant2	Low	5755	5650~5700	-47.4	≤-26.94	PASS
11AX40MIMO	Ant2	Low	5755	5645~5650	-46.69	≤-27	PASS
11AX40MIMO	Ant1	High	5795	5850~5855	-31.15	≤15.85	PASS
11AX40MIMO	Ant1	High	5795	5855~5875	-32.1	≤12.75	PASS
11AX40MIMO	Ant1	High	5795	5875~5925	-46.81	≤-26.97	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com





Hotline
400-003-0500
www.anbotek.com


11AX40MIMO	Ant1	High	5795	5925~5935	-46.06	≤ -27	PASS
11AX40MIMO	Ant2	High	5795	5850~5855	-36.81	≤ 15.85	PASS
11AX40MIMO	Ant2	High	5795	5855~5875	-33.36	≤ 14.49	PASS
11AX40MIMO	Ant2	High	5795	5875~5925	-46.71	≤ -26.97	PASS
11AX40MIMO	Ant2	High	5795	5925~5935	-45.85	≤ -27	PASS
11AX80MIMO	Ant1	Low	5775	5720~5725	-20.56	≤ 15.67	PASS
11AX80MIMO	Ant1	Low	5775	5700~5720	-22.01	≤ 10.20	PASS
11AX80MIMO	Ant1	Low	5775	5650~5700	-31.73	≤ -26.38	PASS
11AX80MIMO	Ant1	Low	5775	5645~5650	-31.29	≤ -27	PASS
11AX80MIMO	Ant1	High	5775	5850~5855	-24.43	≤ 15.98	PASS
11AX80MIMO	Ant1	High	5775	5855~5875	-24.47	≤ 10.17	PASS
11AX80MIMO	Ant1	High	5775	5875~5925	-35.9	≤ -26.86	PASS
11AX80MIMO	Ant1	High	5775	5925~5935	-35.29	≤ -27	PASS
11AX80MIMO	Ant2	Low	5775	5720~5725	-25.36	≤ 15.67	PASS
11AX80MIMO	Ant2	Low	5775	5700~5720	-22.81	≤ 12.59	PASS
11AX80MIMO	Ant2	Low	5775	5650~5700	-30.72	≤ -19.73	PASS
11AX80MIMO	Ant2	Low	5775	5645~5650	-40.16	≤ -27	PASS
11AX80MIMO	Ant2	High	5775	5850~5855	-24.42	≤ 15.98	PASS
11AX80MIMO	Ant2	High	5775	5855~5875	-25.37	≤ 11.14	PASS
11AX80MIMO	Ant2	High	5775	5875~5925	-42.95	≤ -25.07	PASS
11AX80MIMO	Ant2	High	5775	5925~5935	-42.91	≤ -27	PASS

Note: The margin plus the antenna gain also meets the limit.

Test Graphs B1/2/3

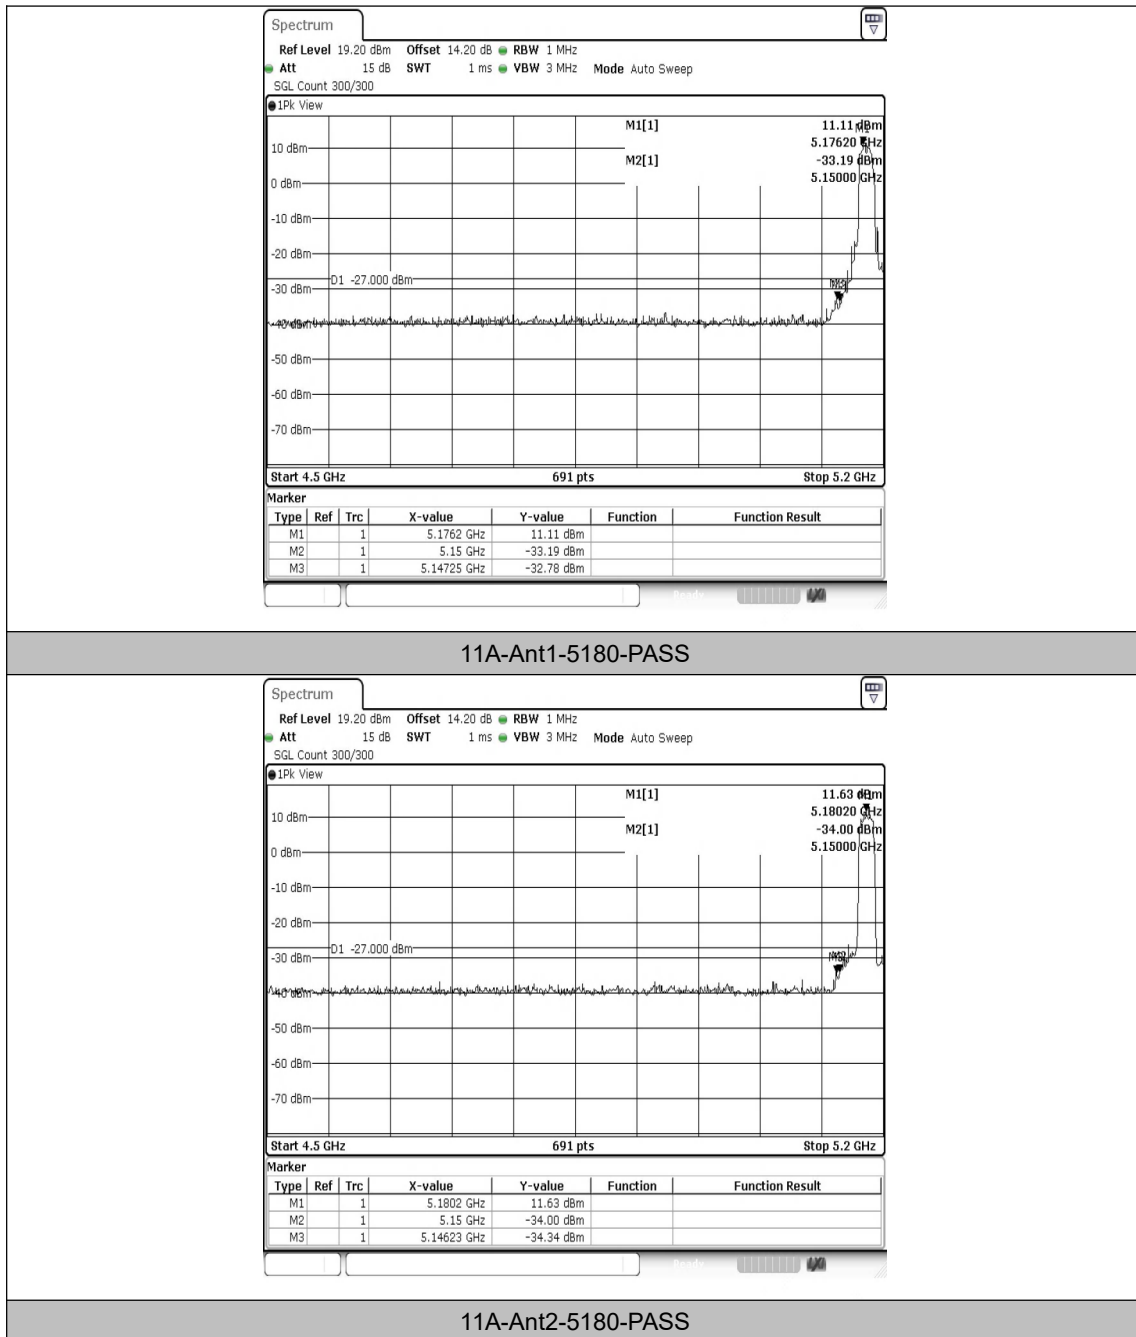

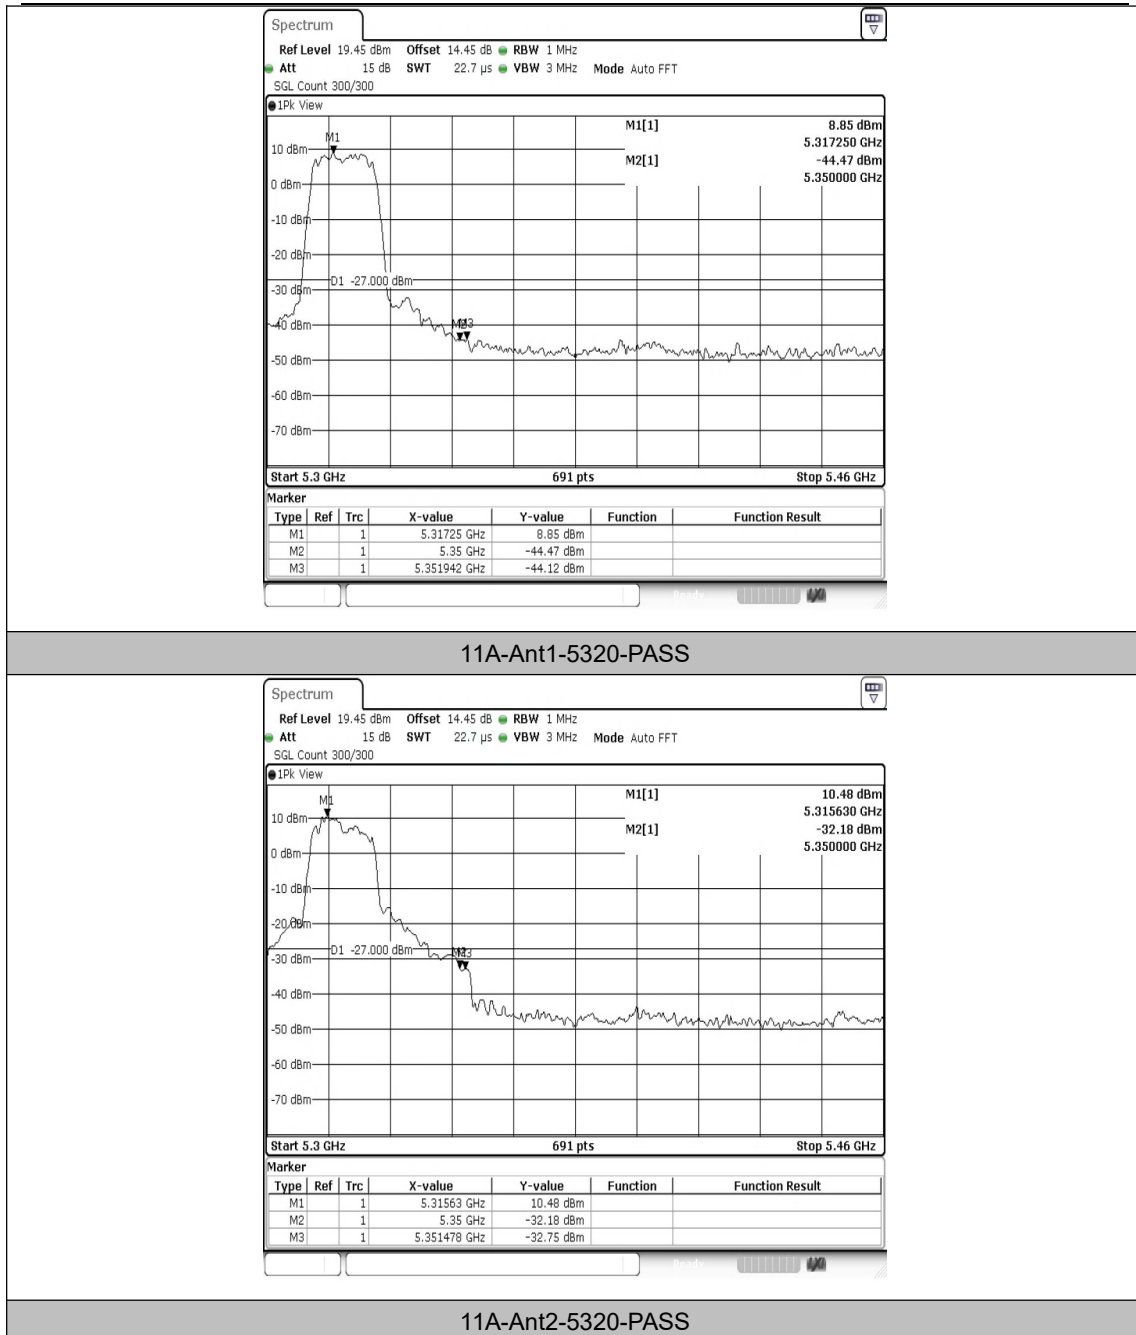


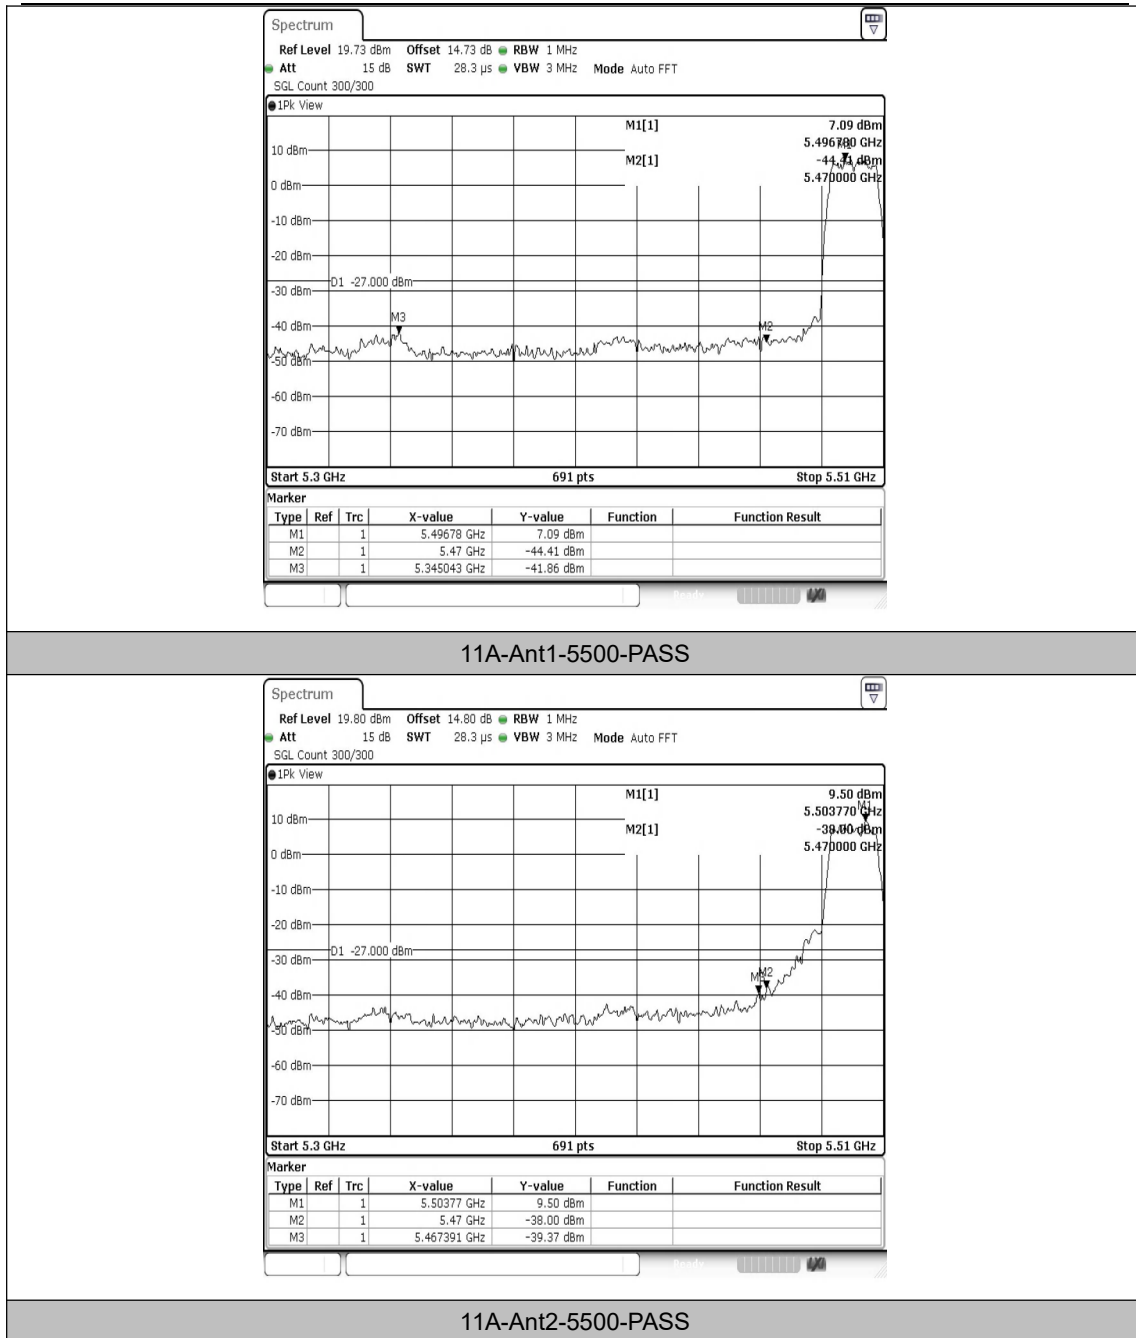



Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

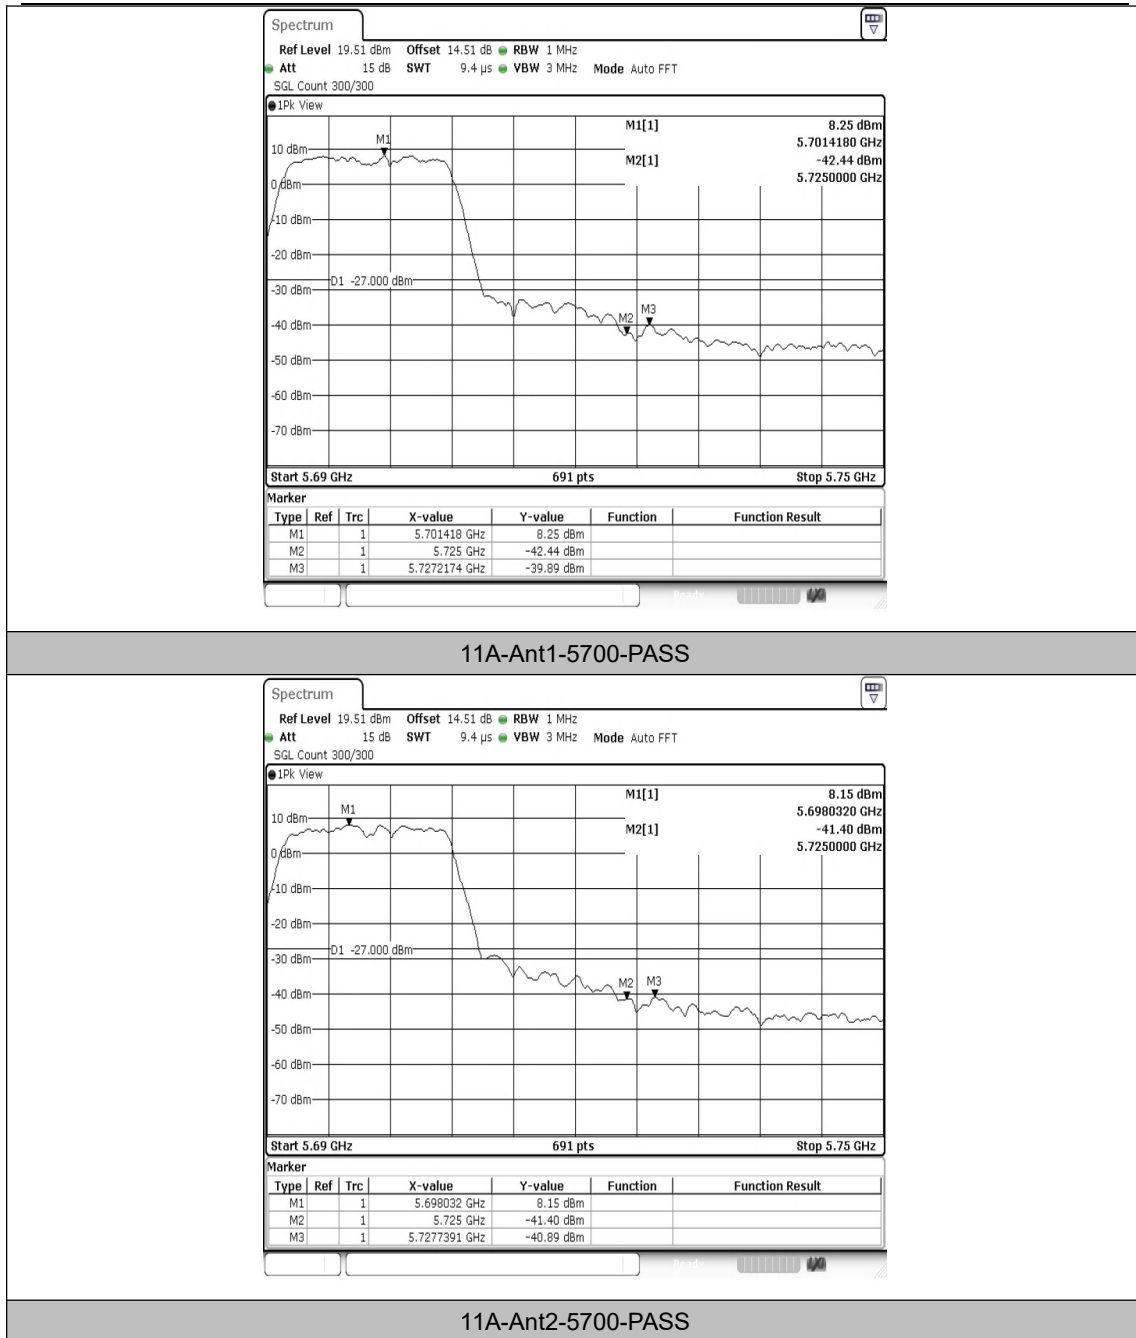

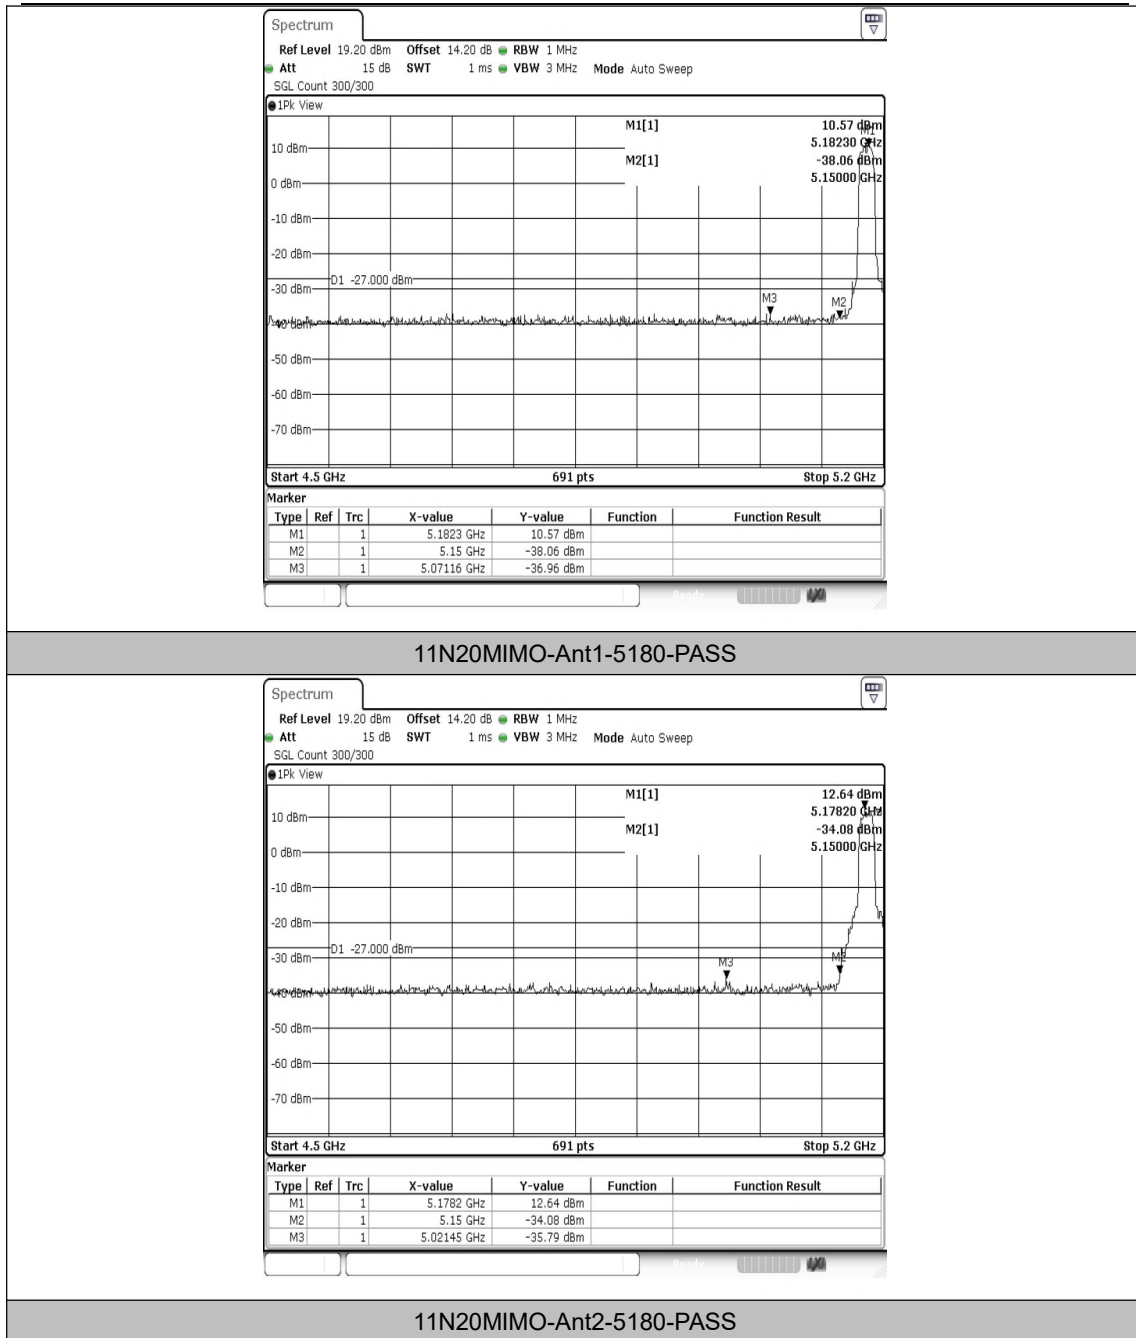

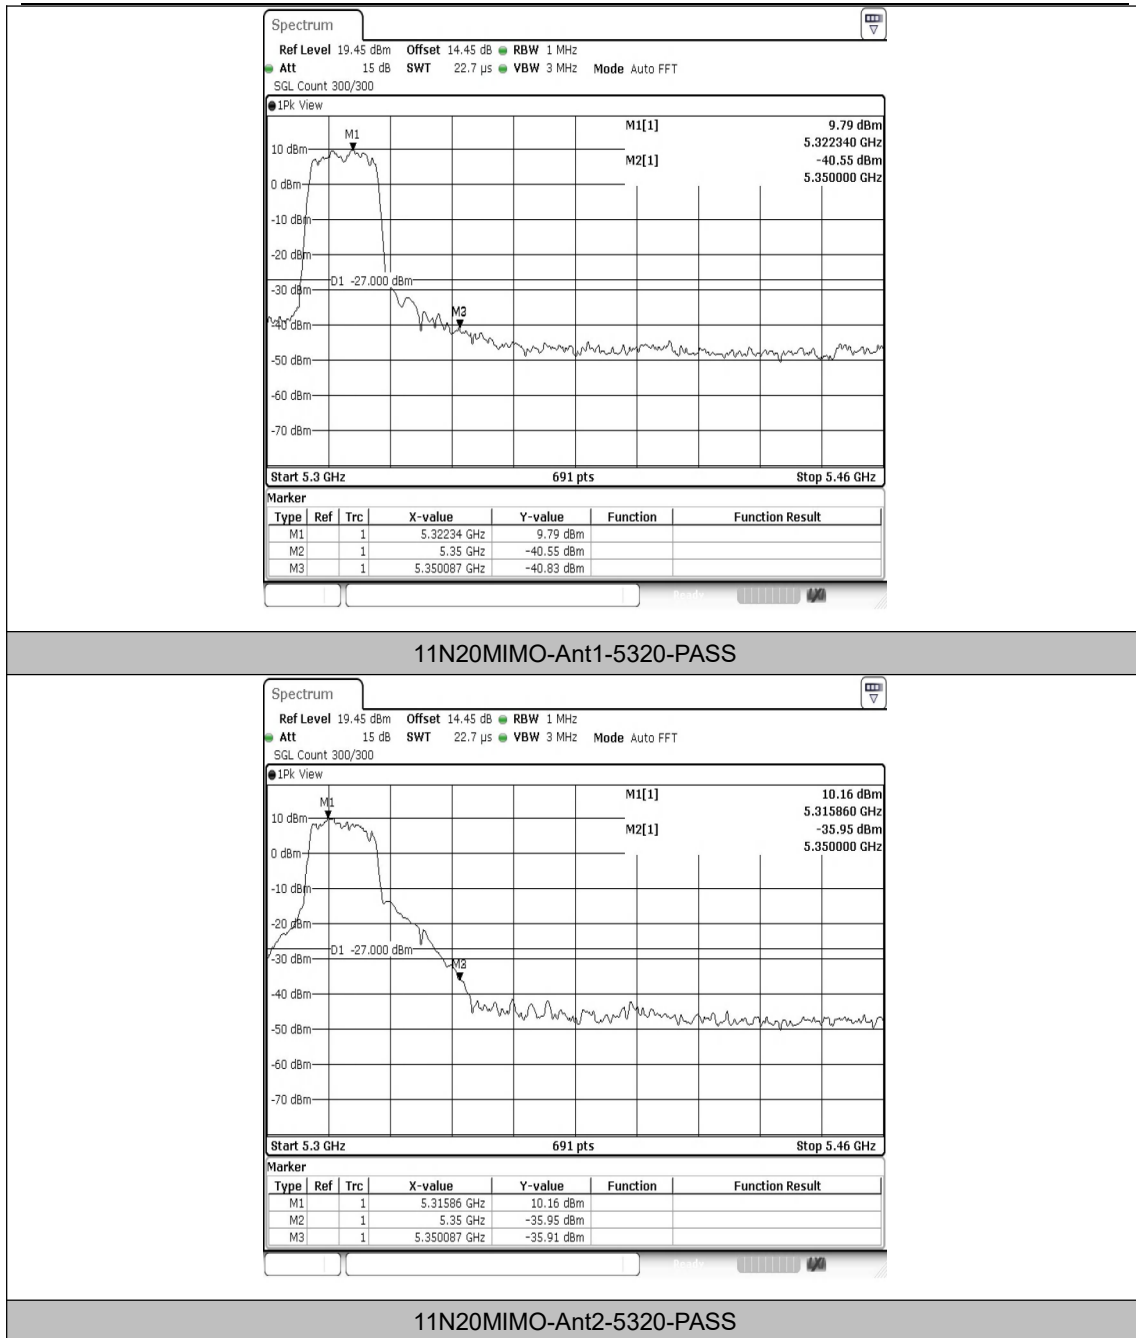


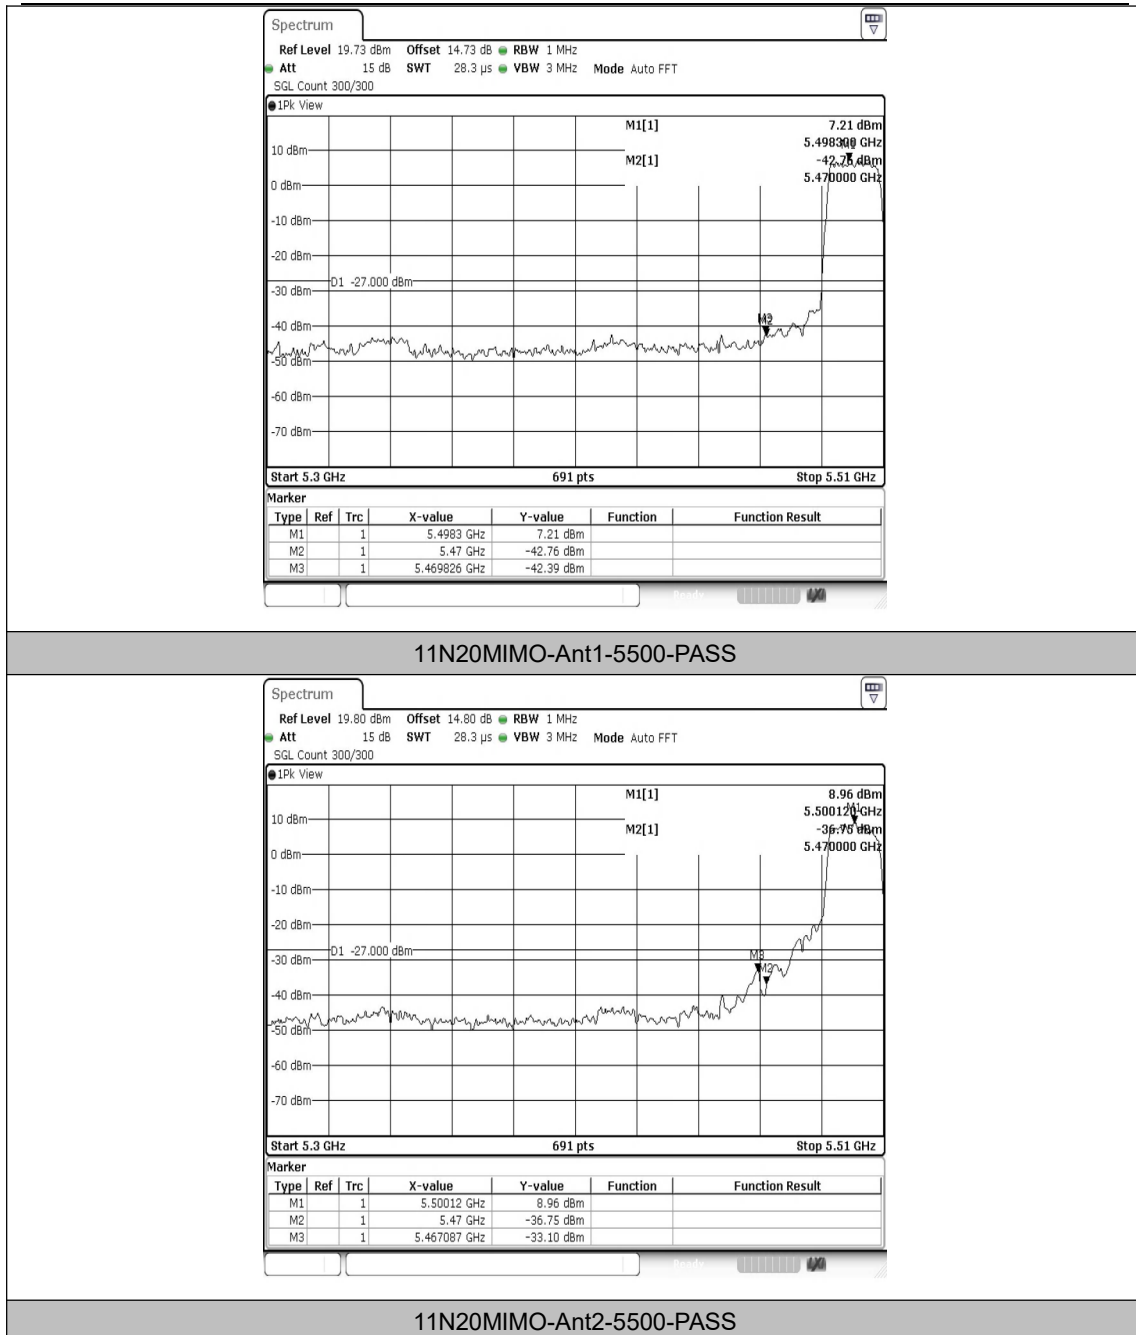


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

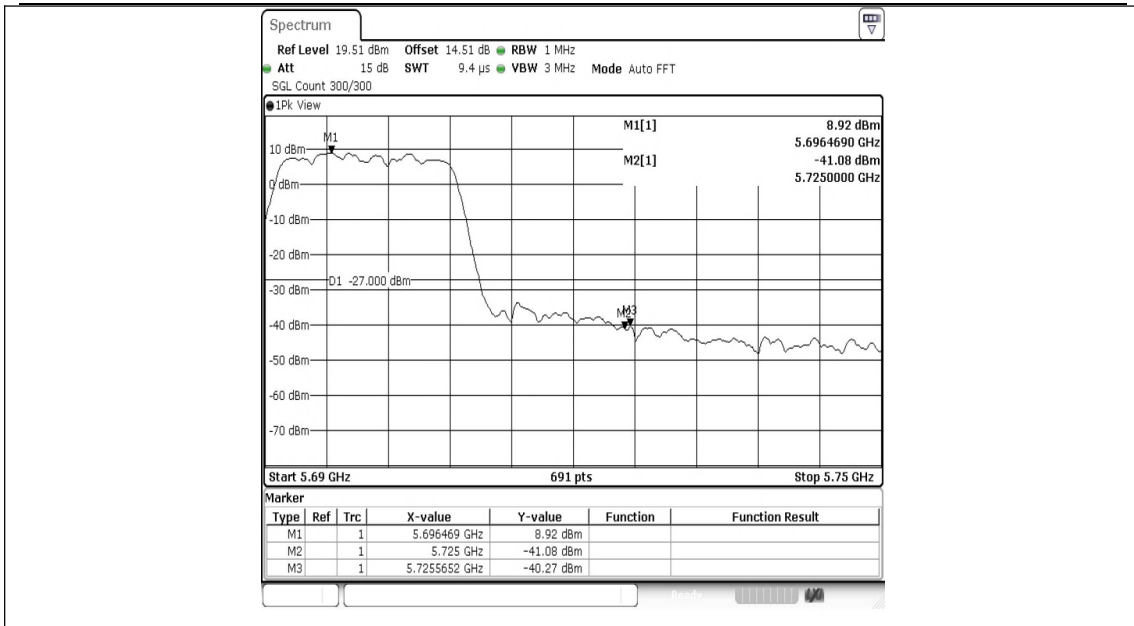



11N20MIMO-Ant1-5700-PASS

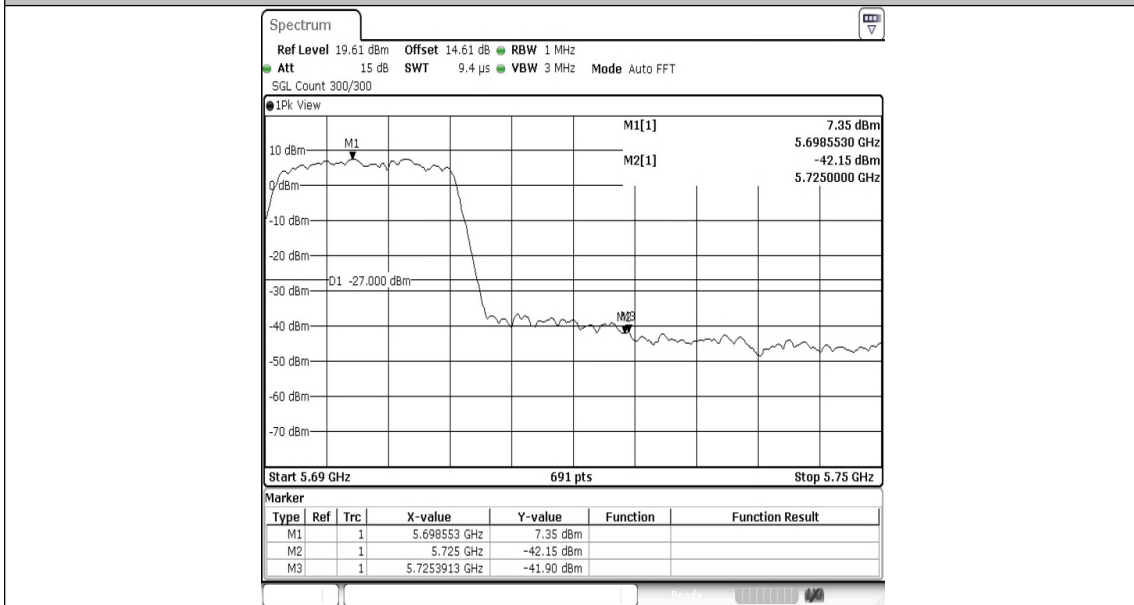



11N20MIMO-Ant2-5700-PASS

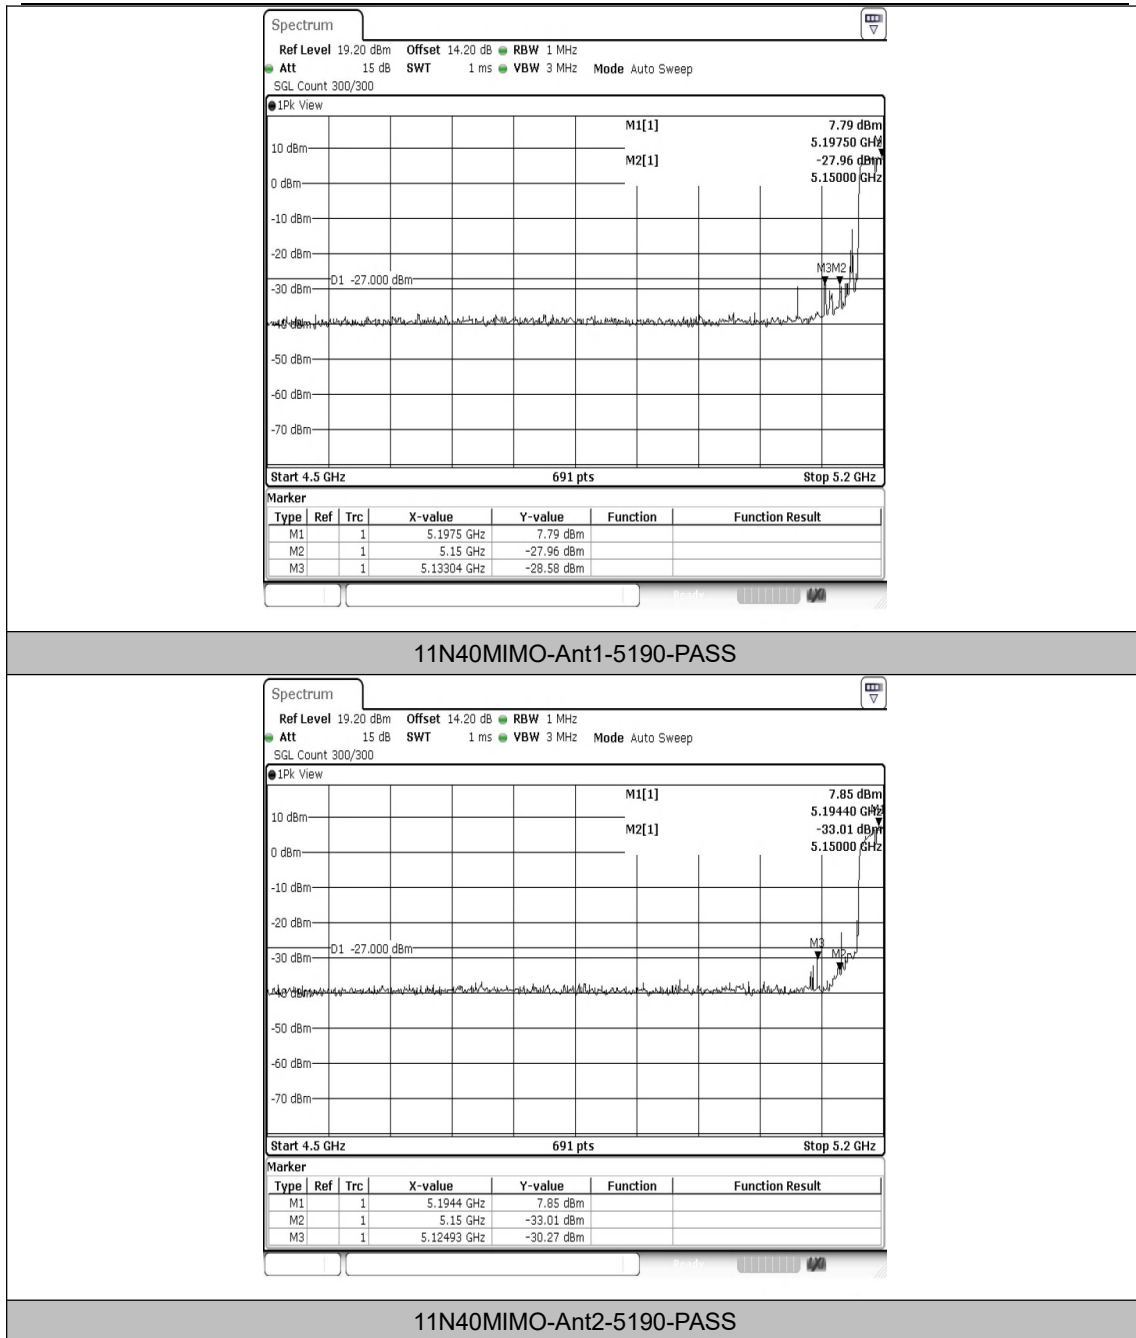


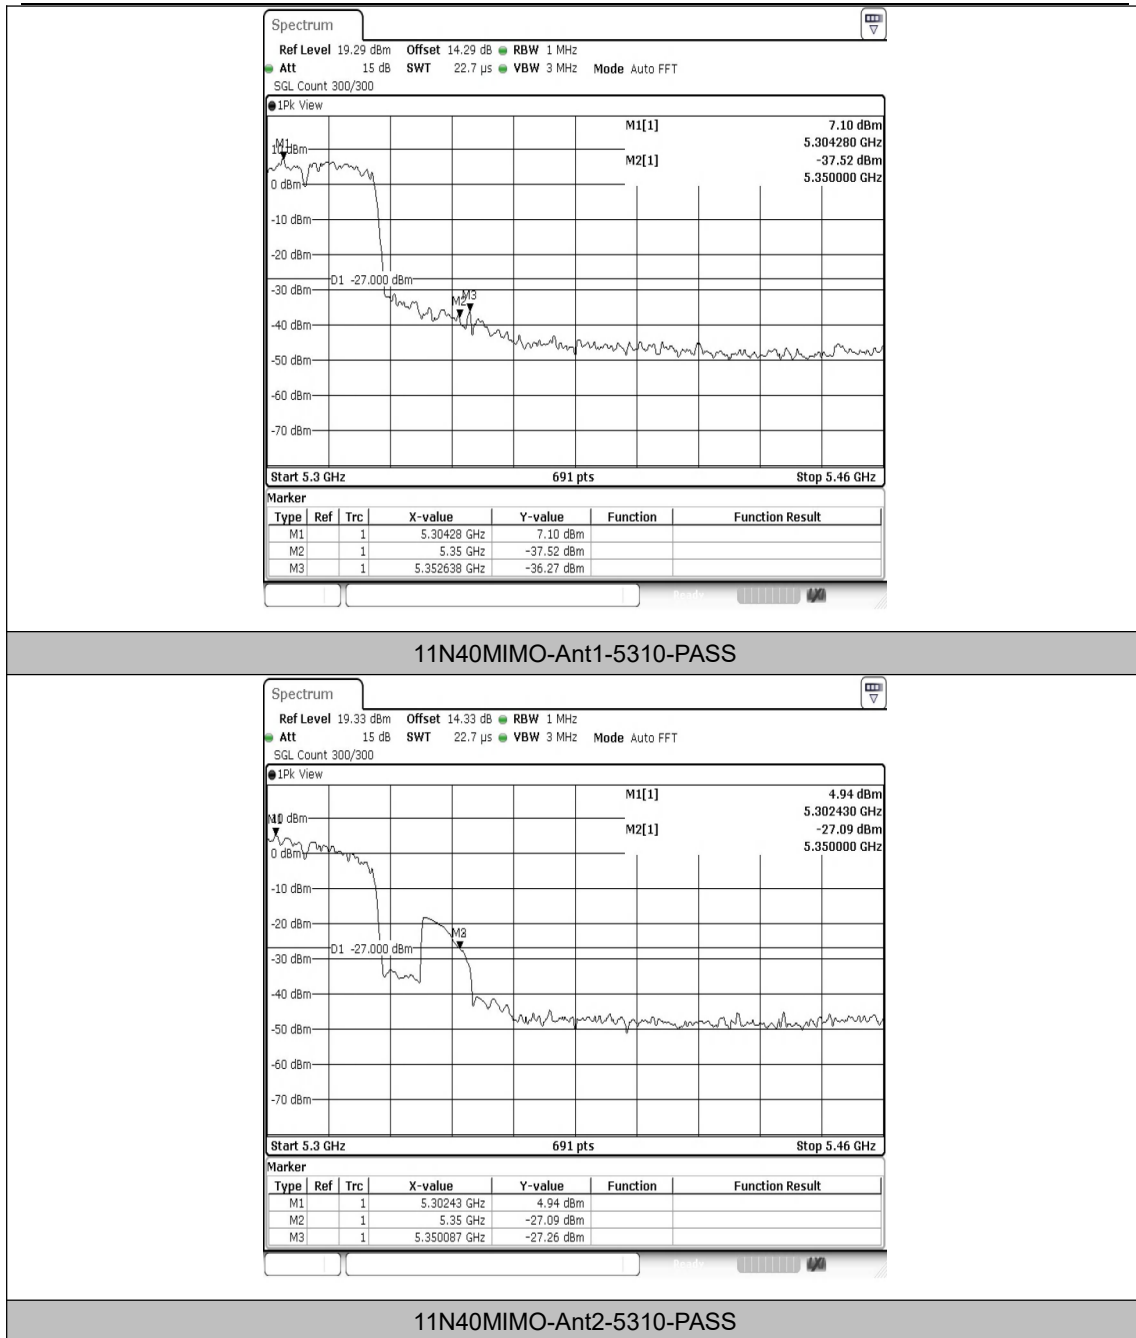

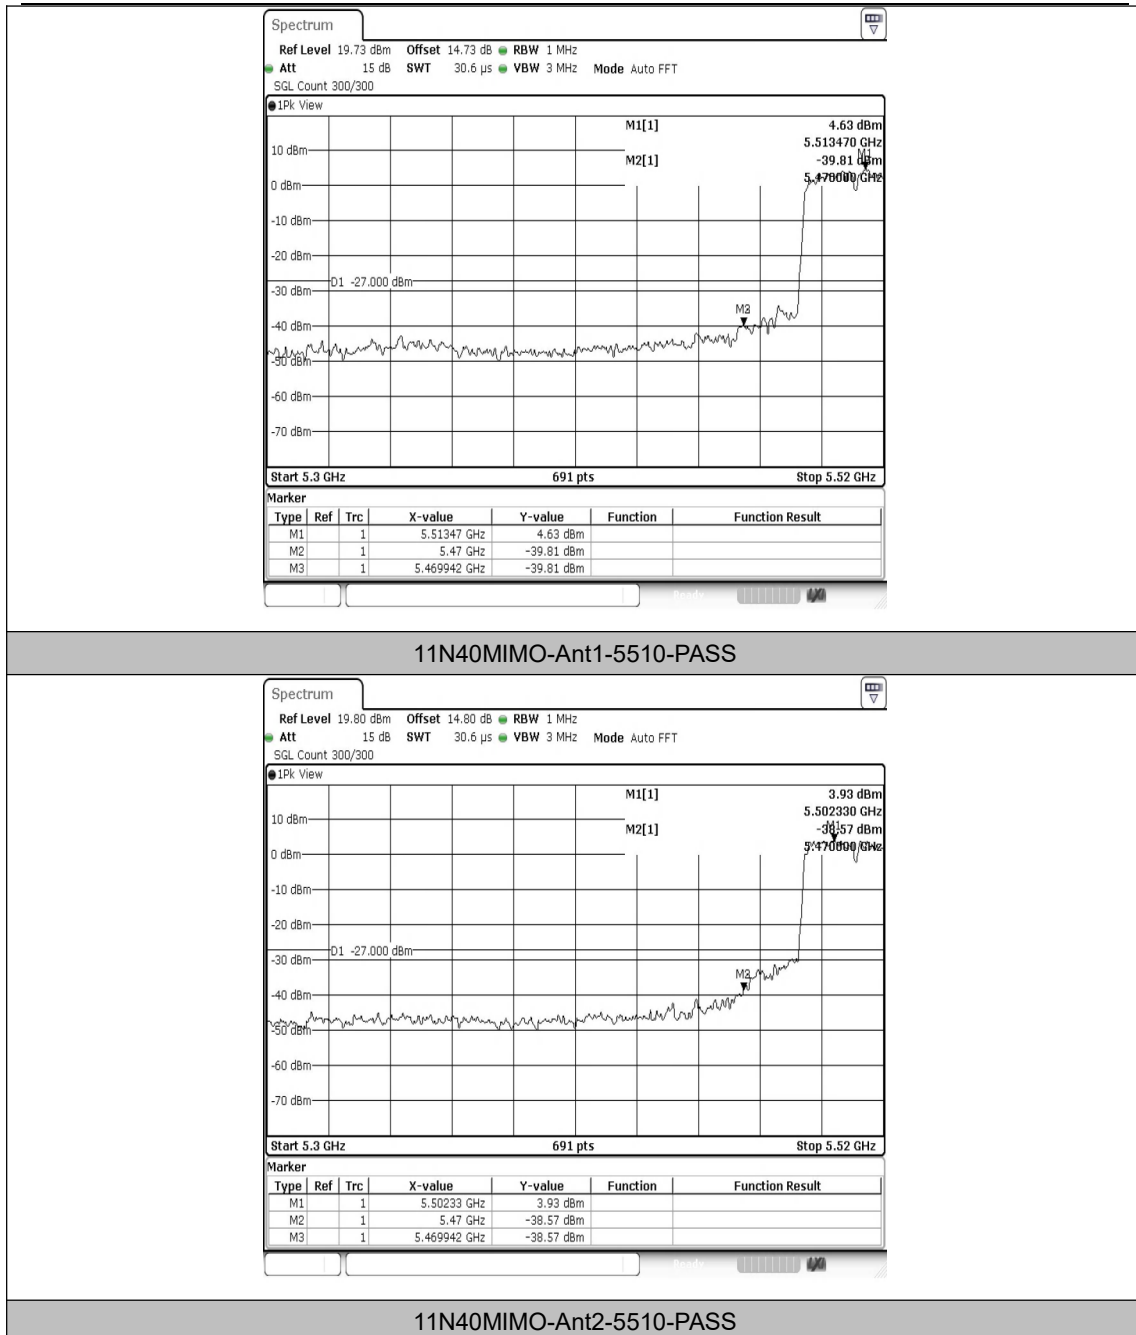

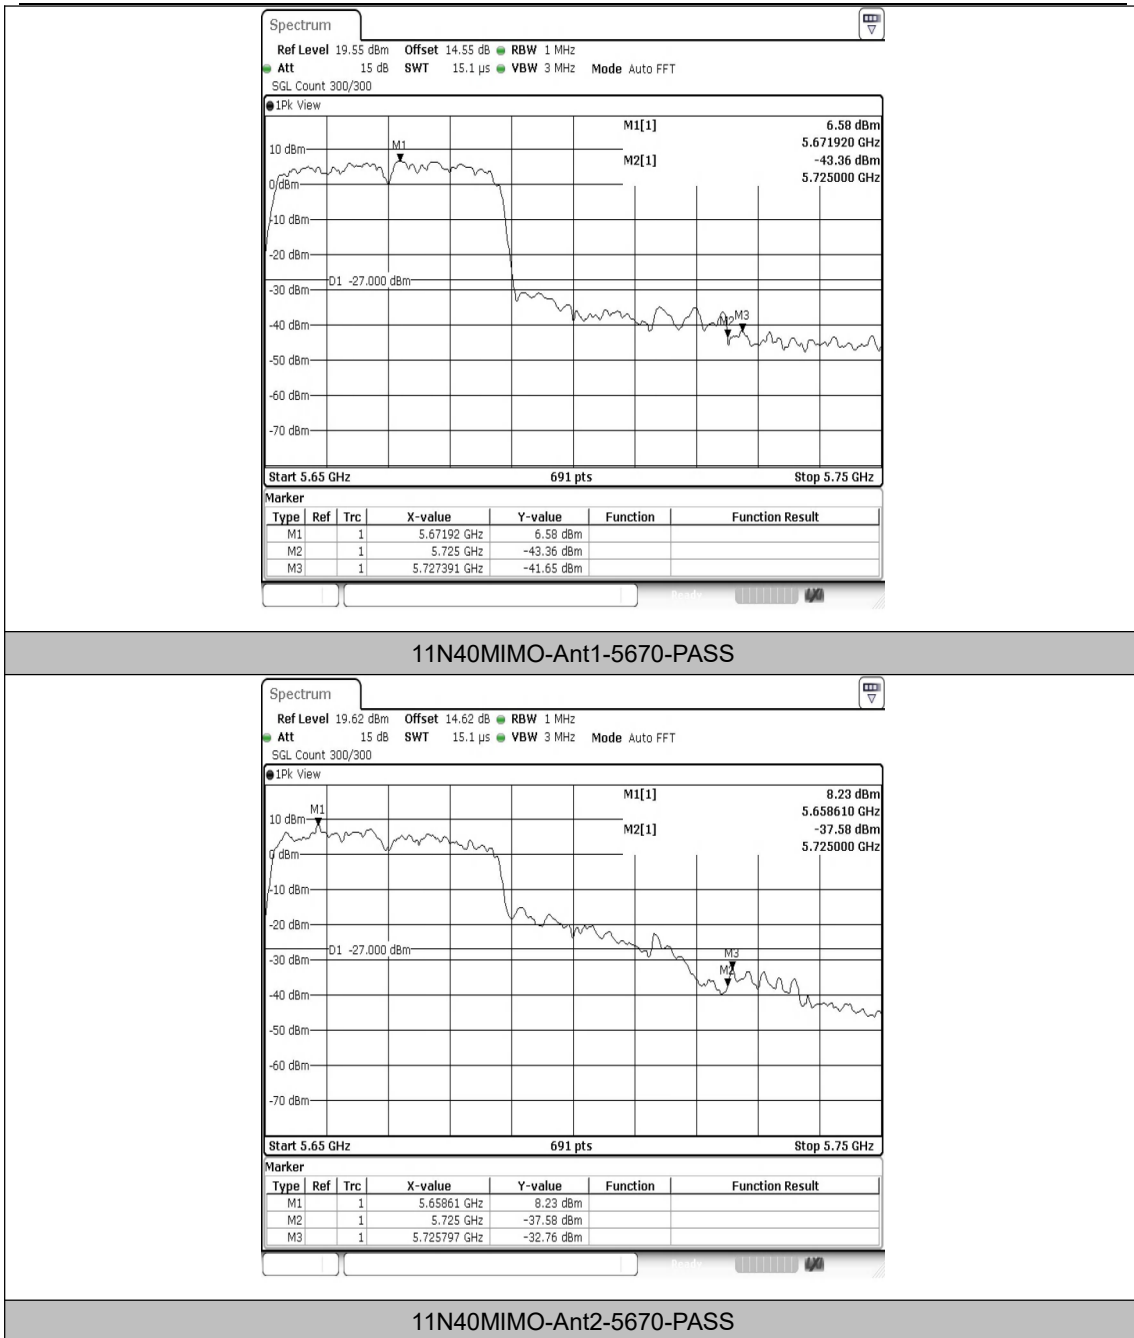

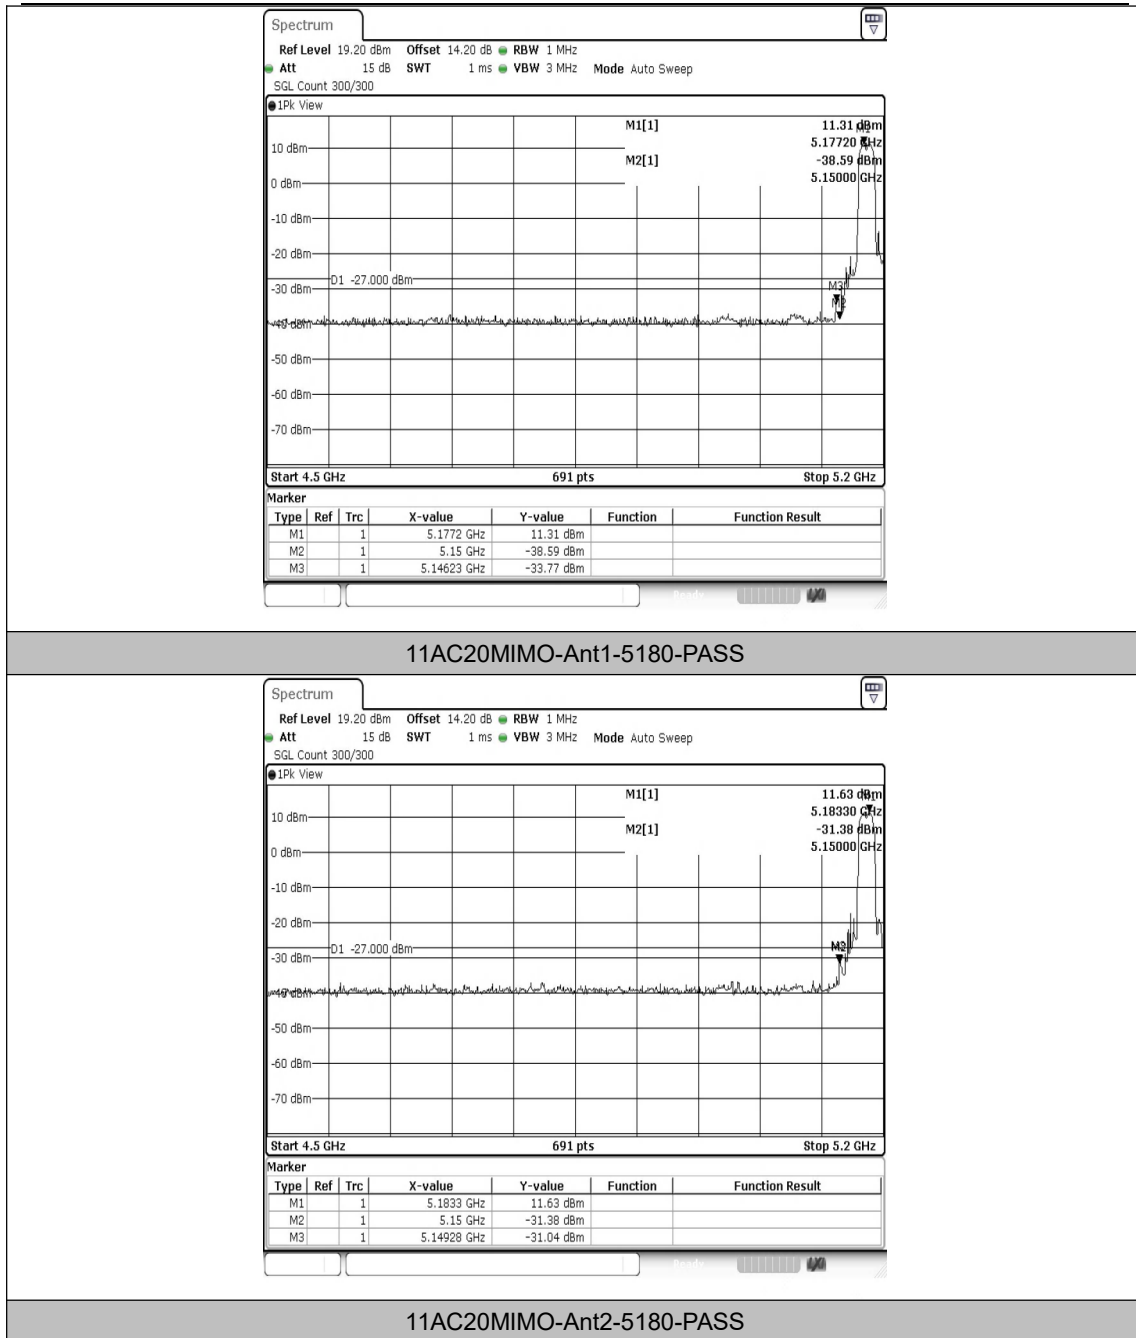


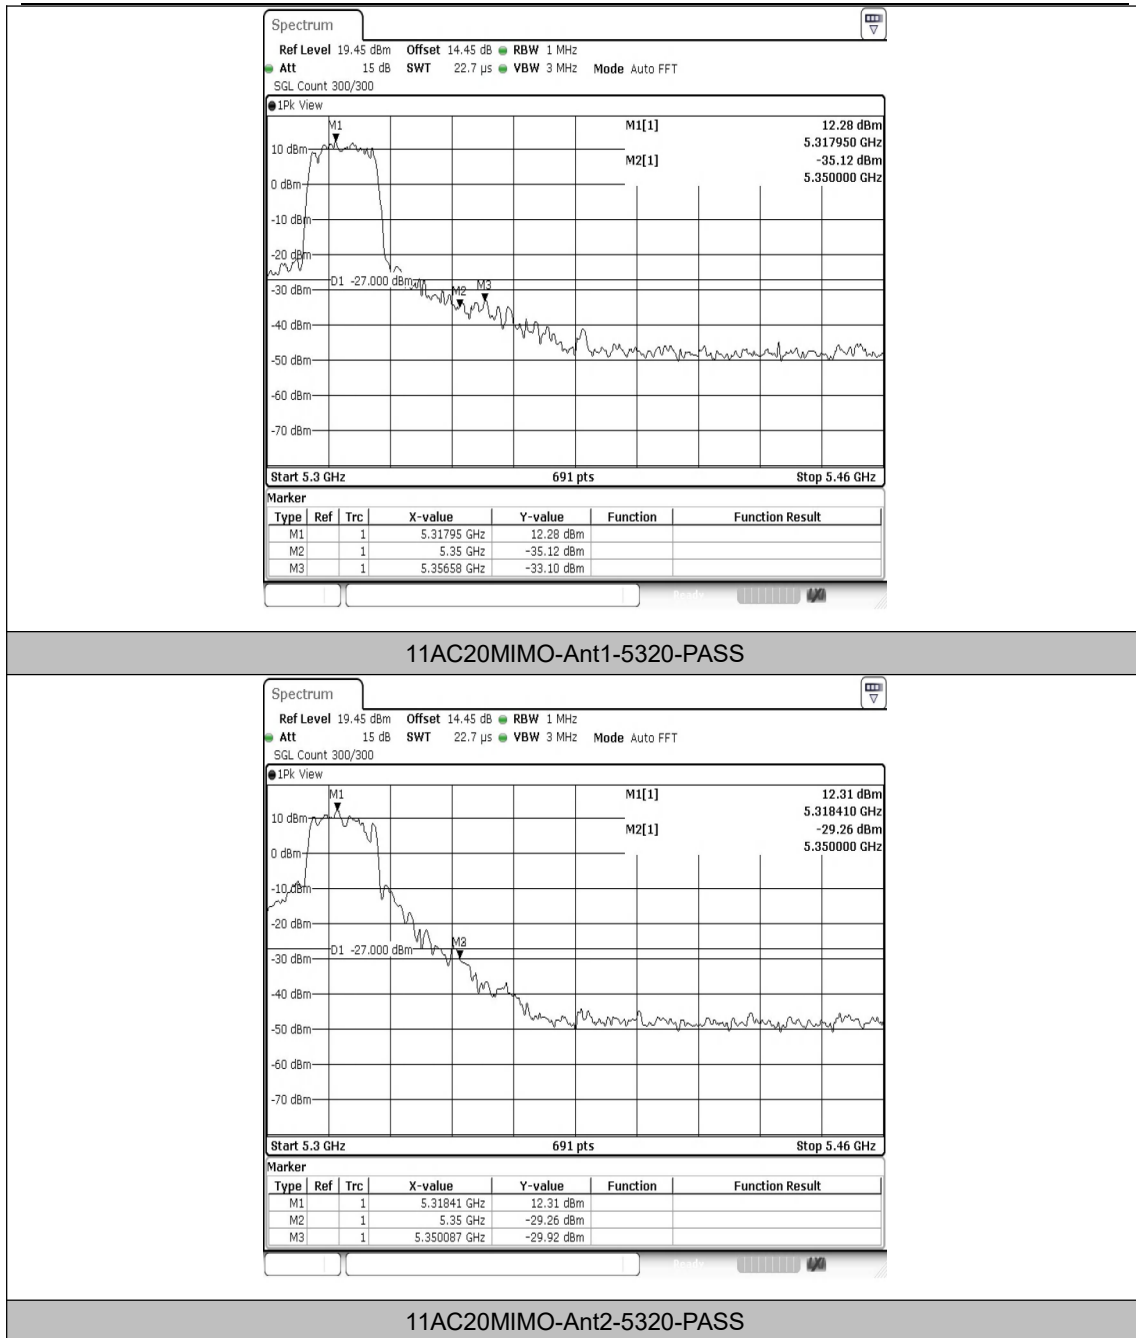


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

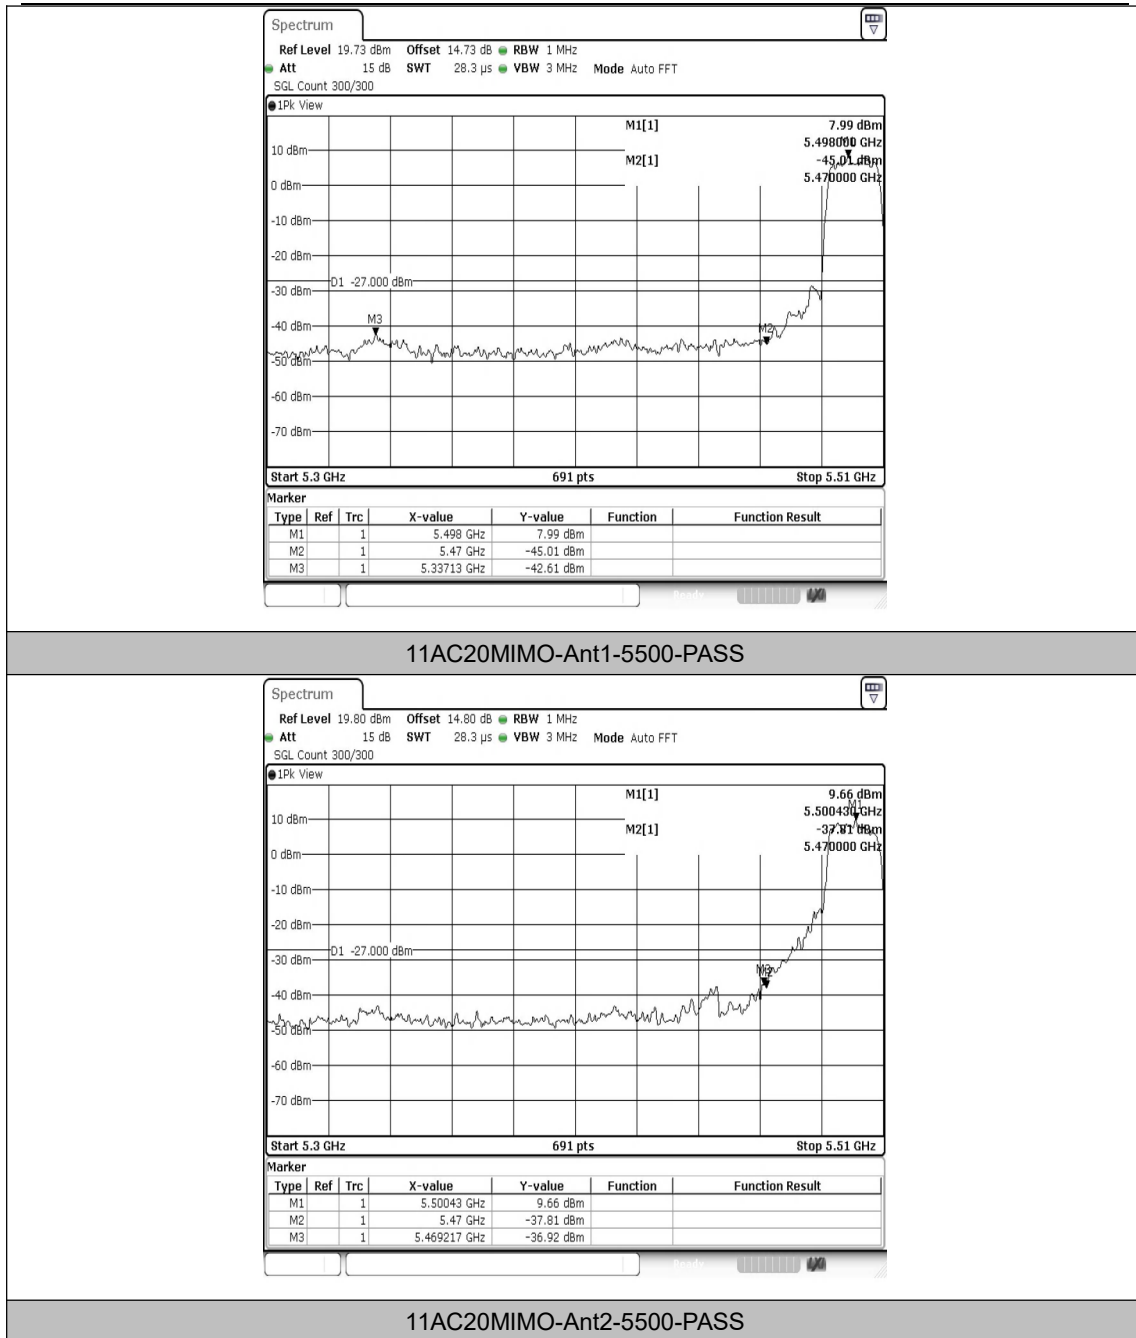


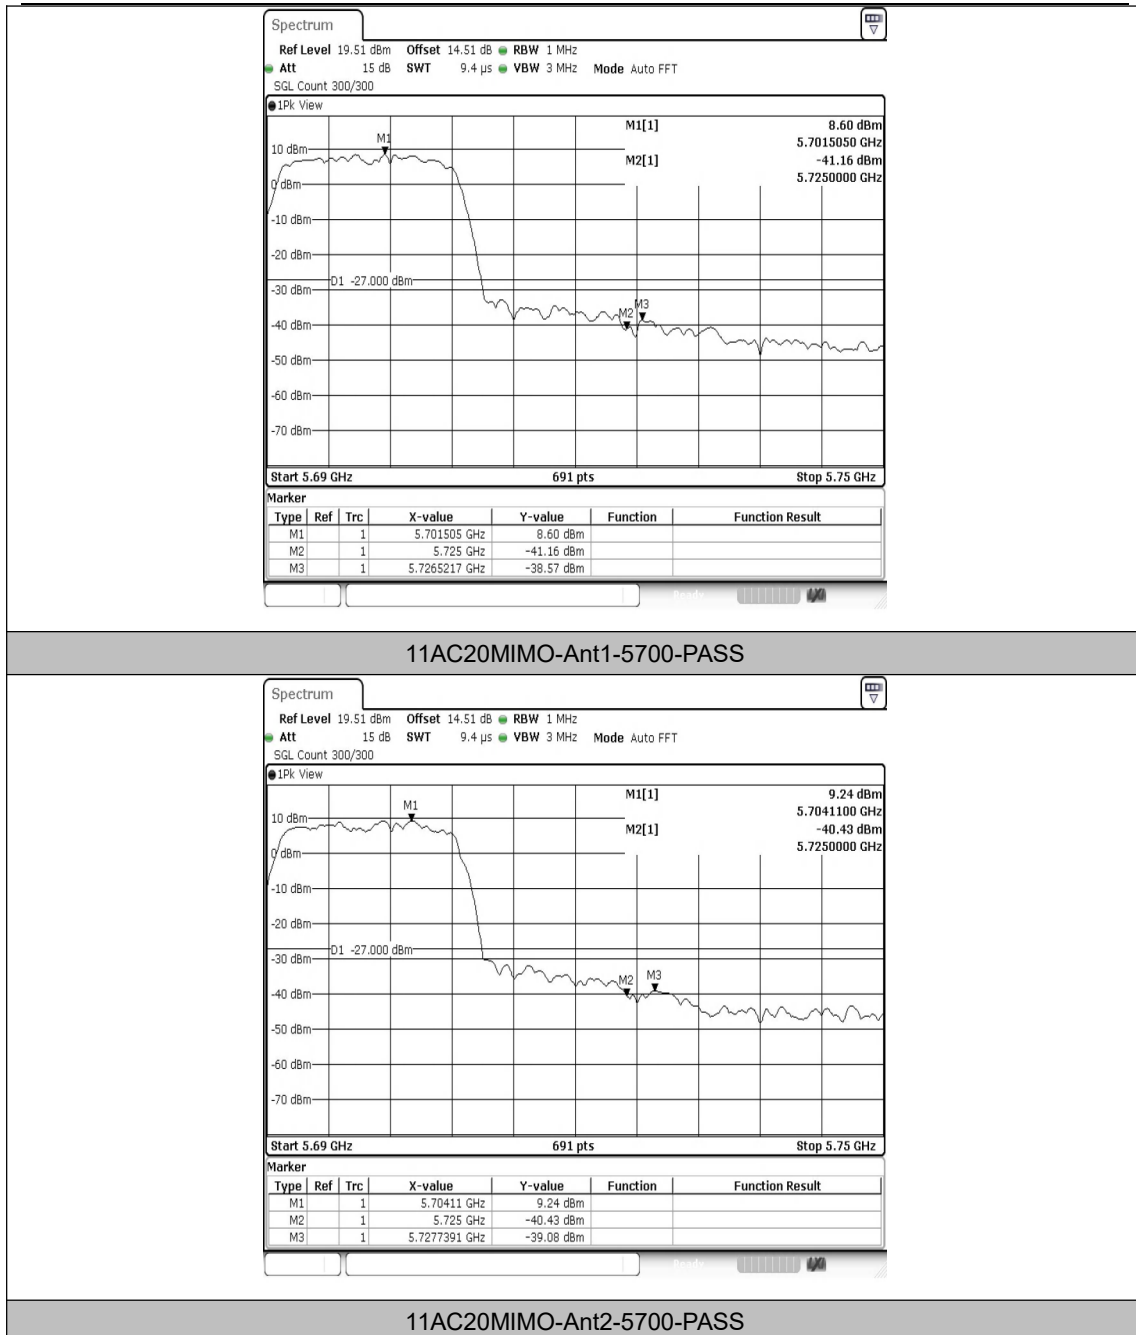


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

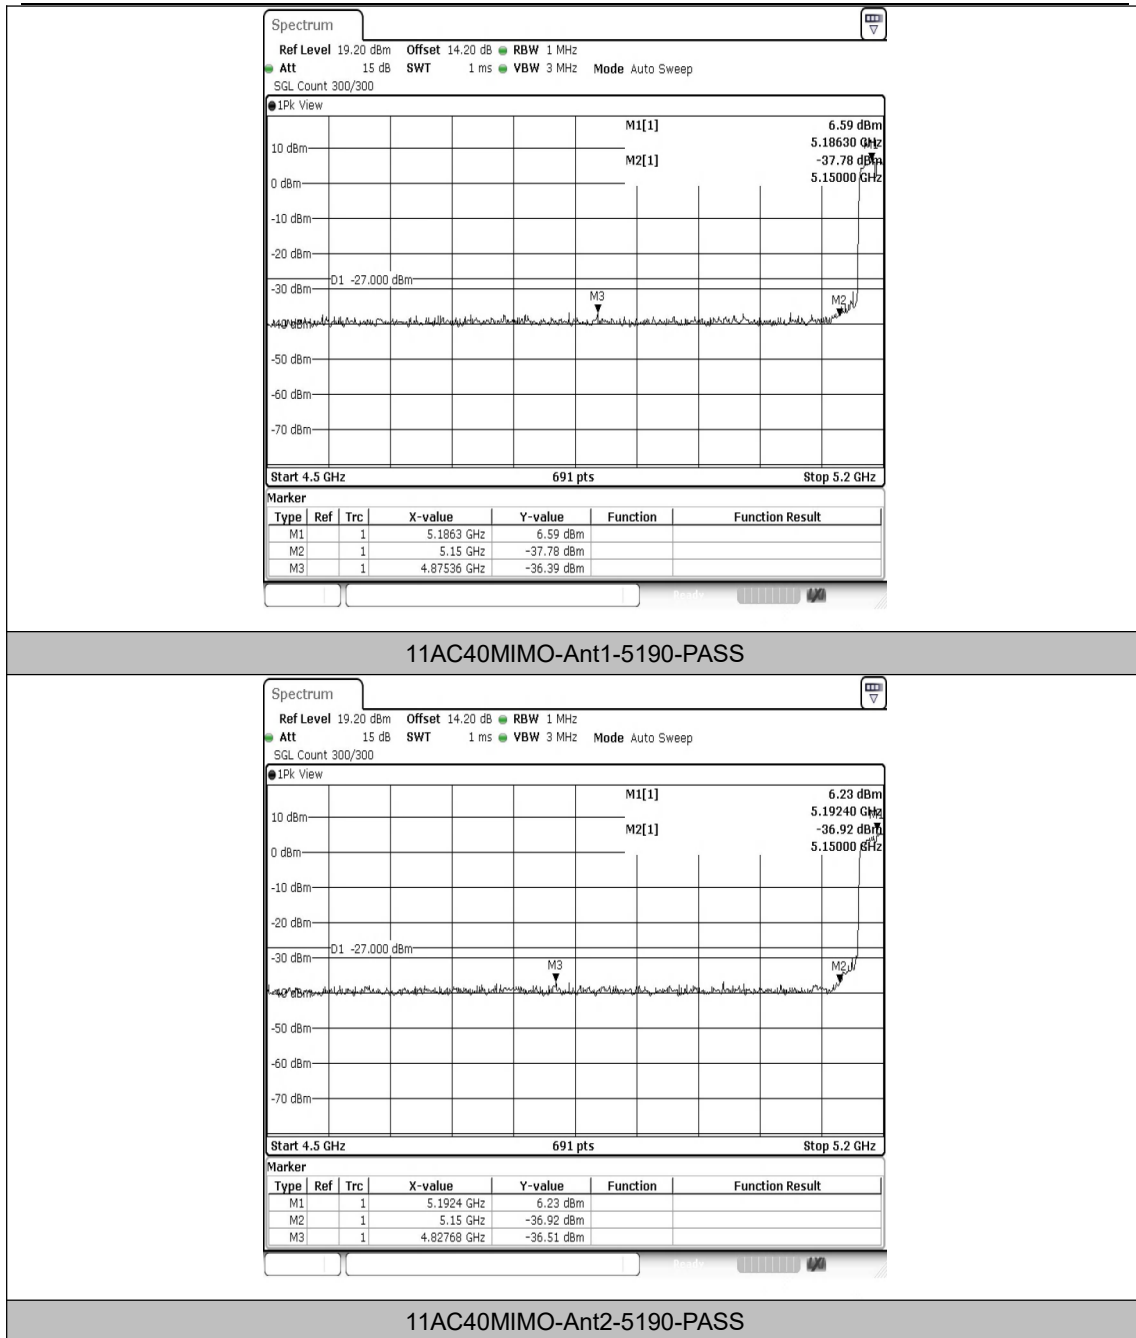


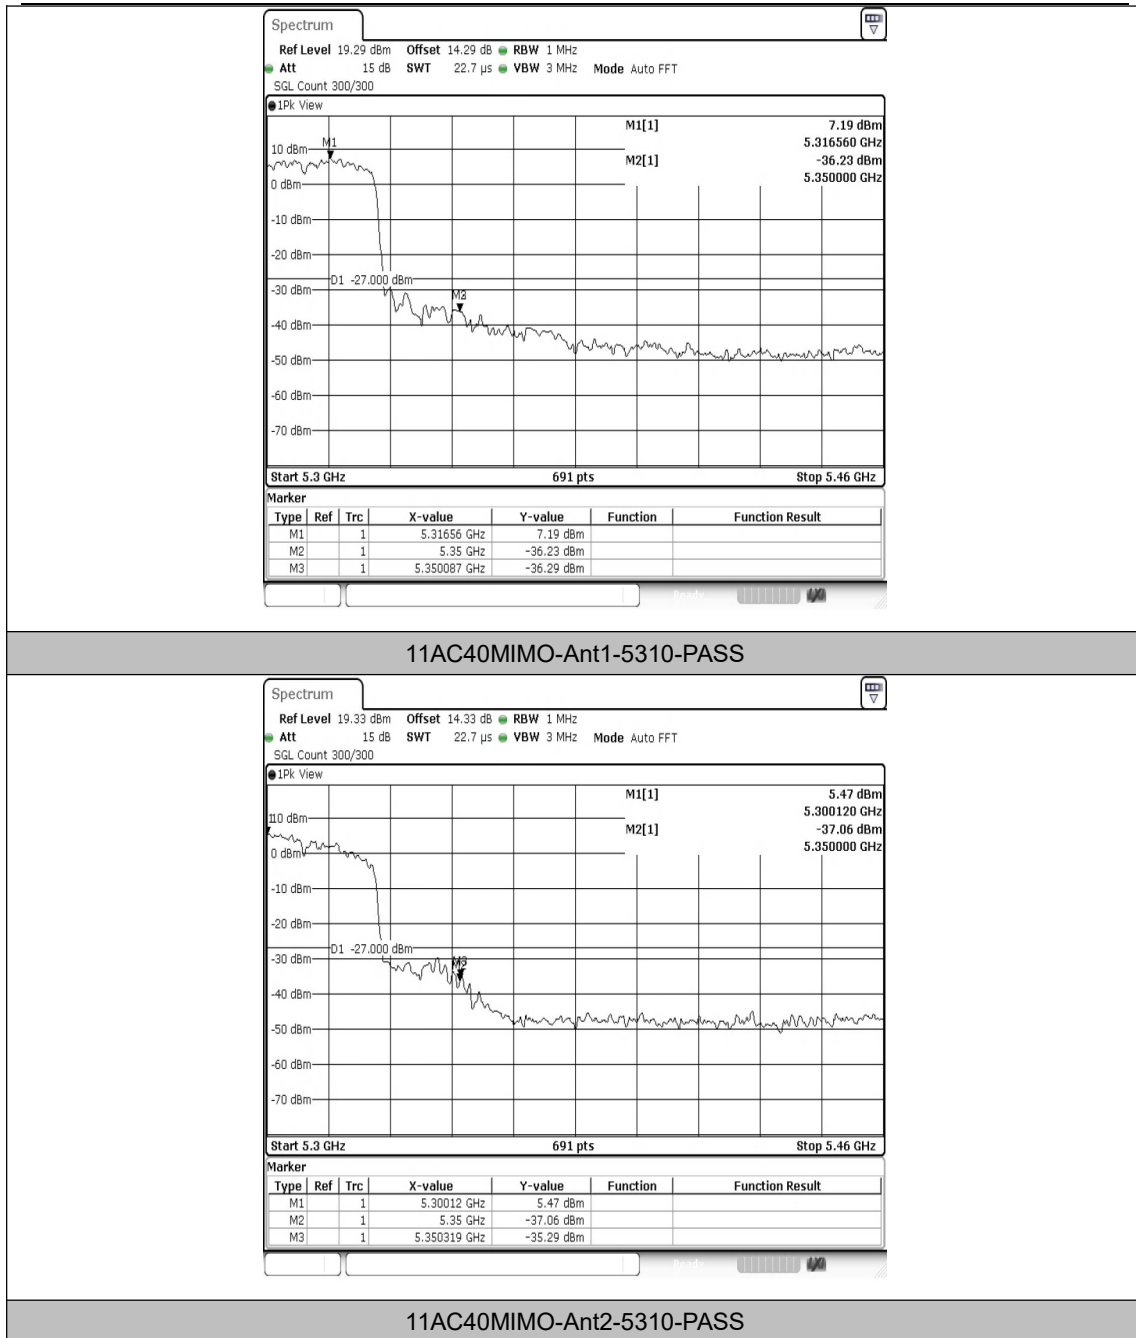



Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

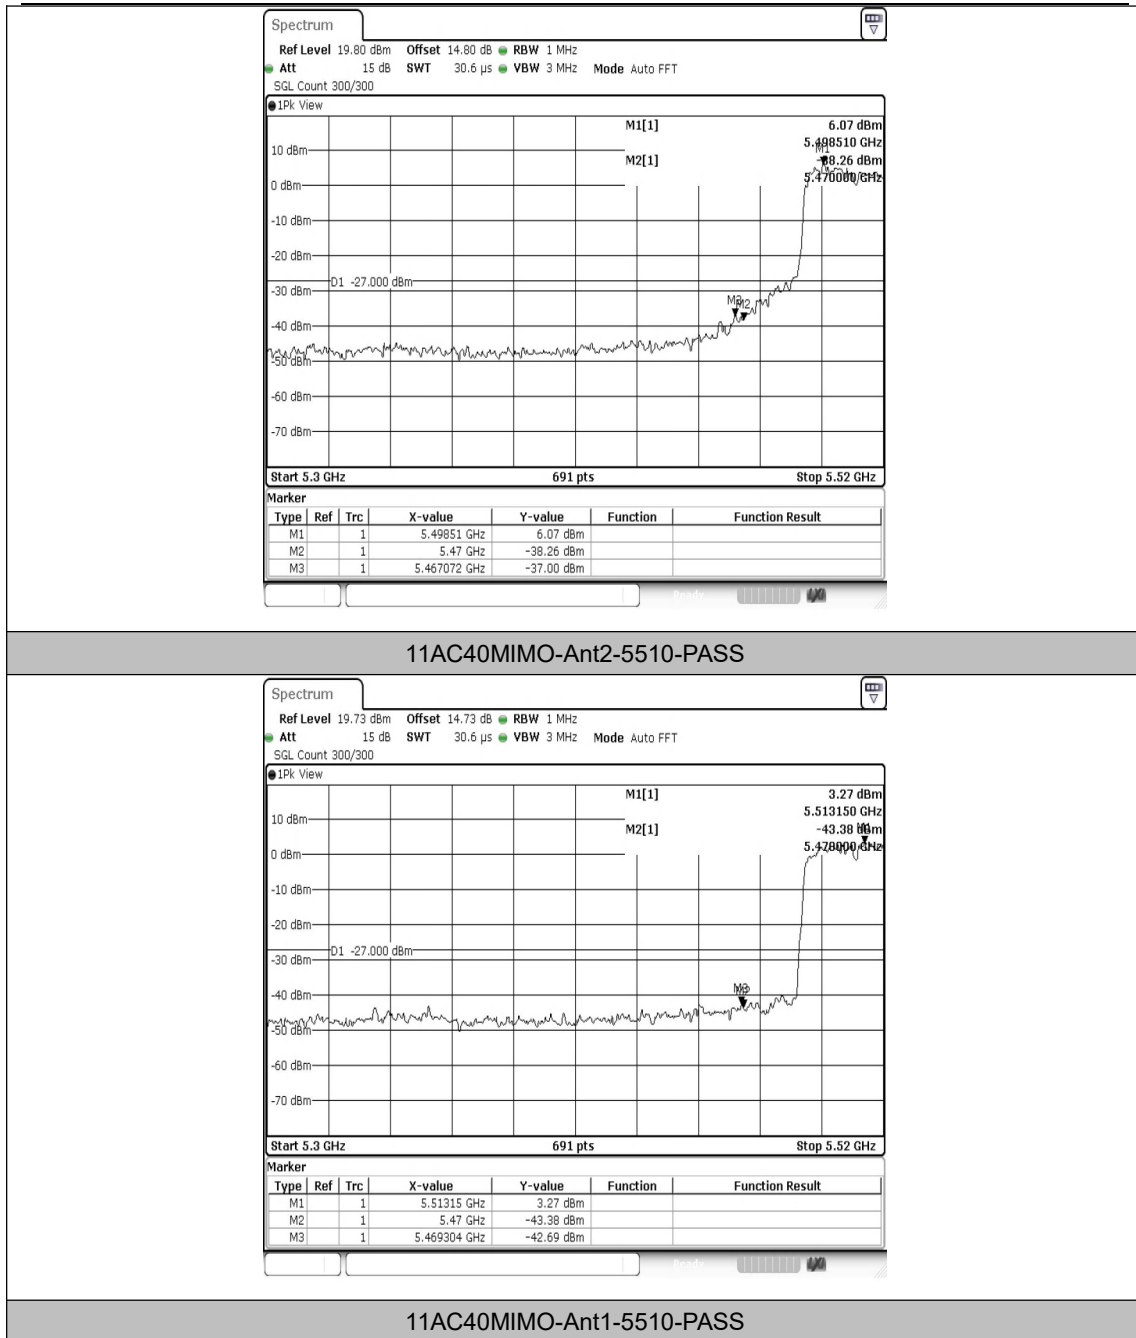

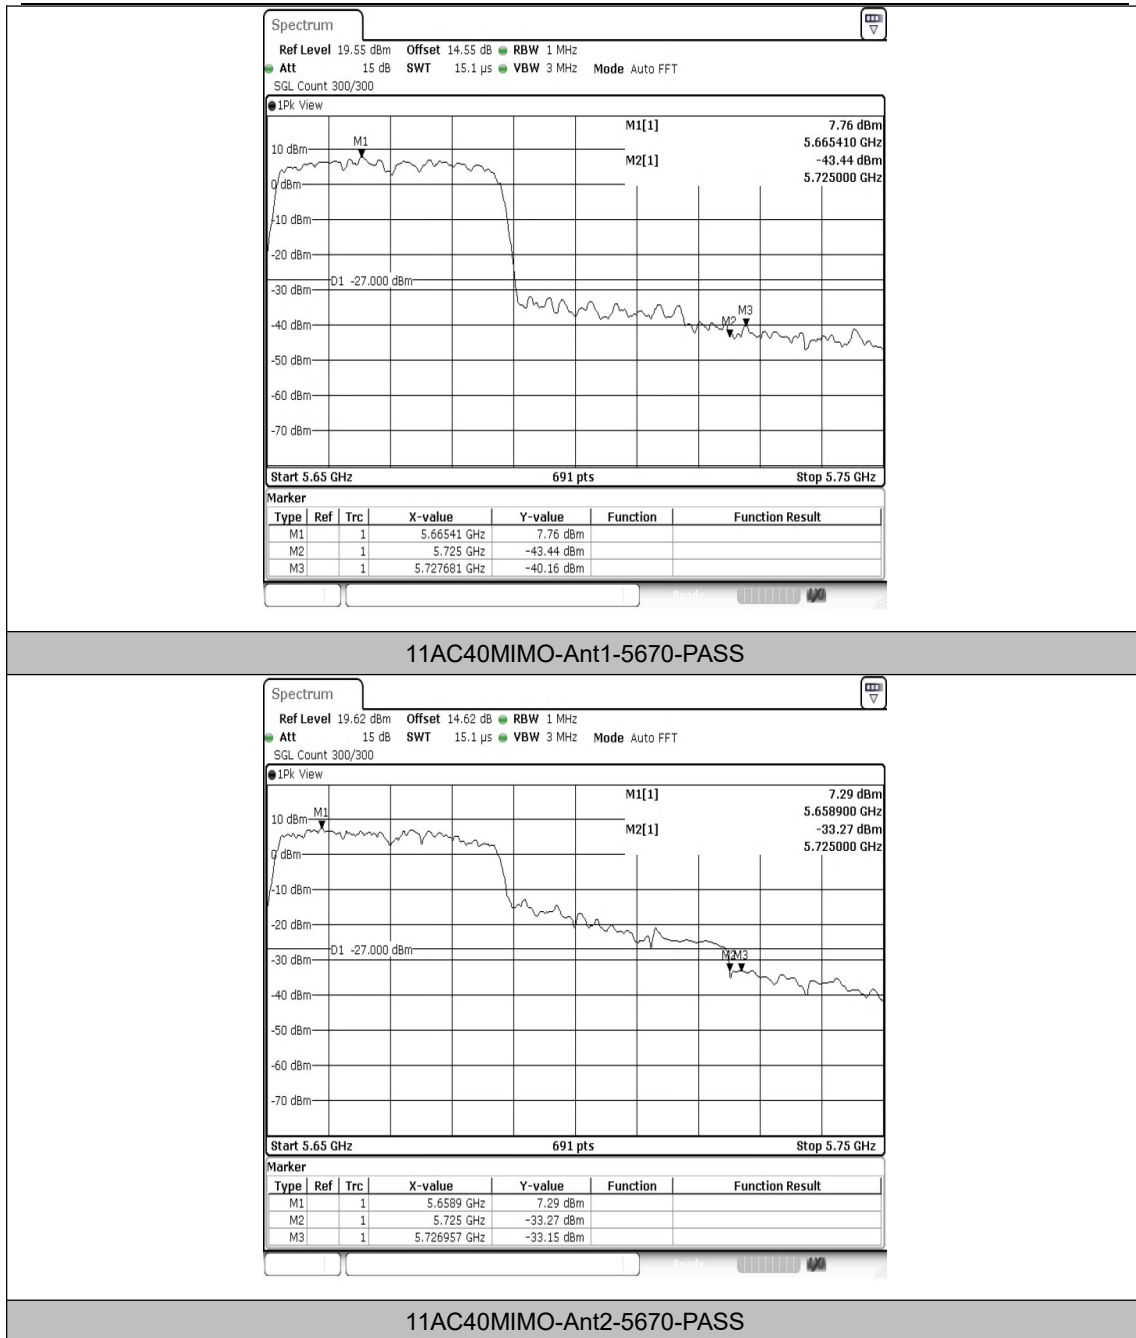

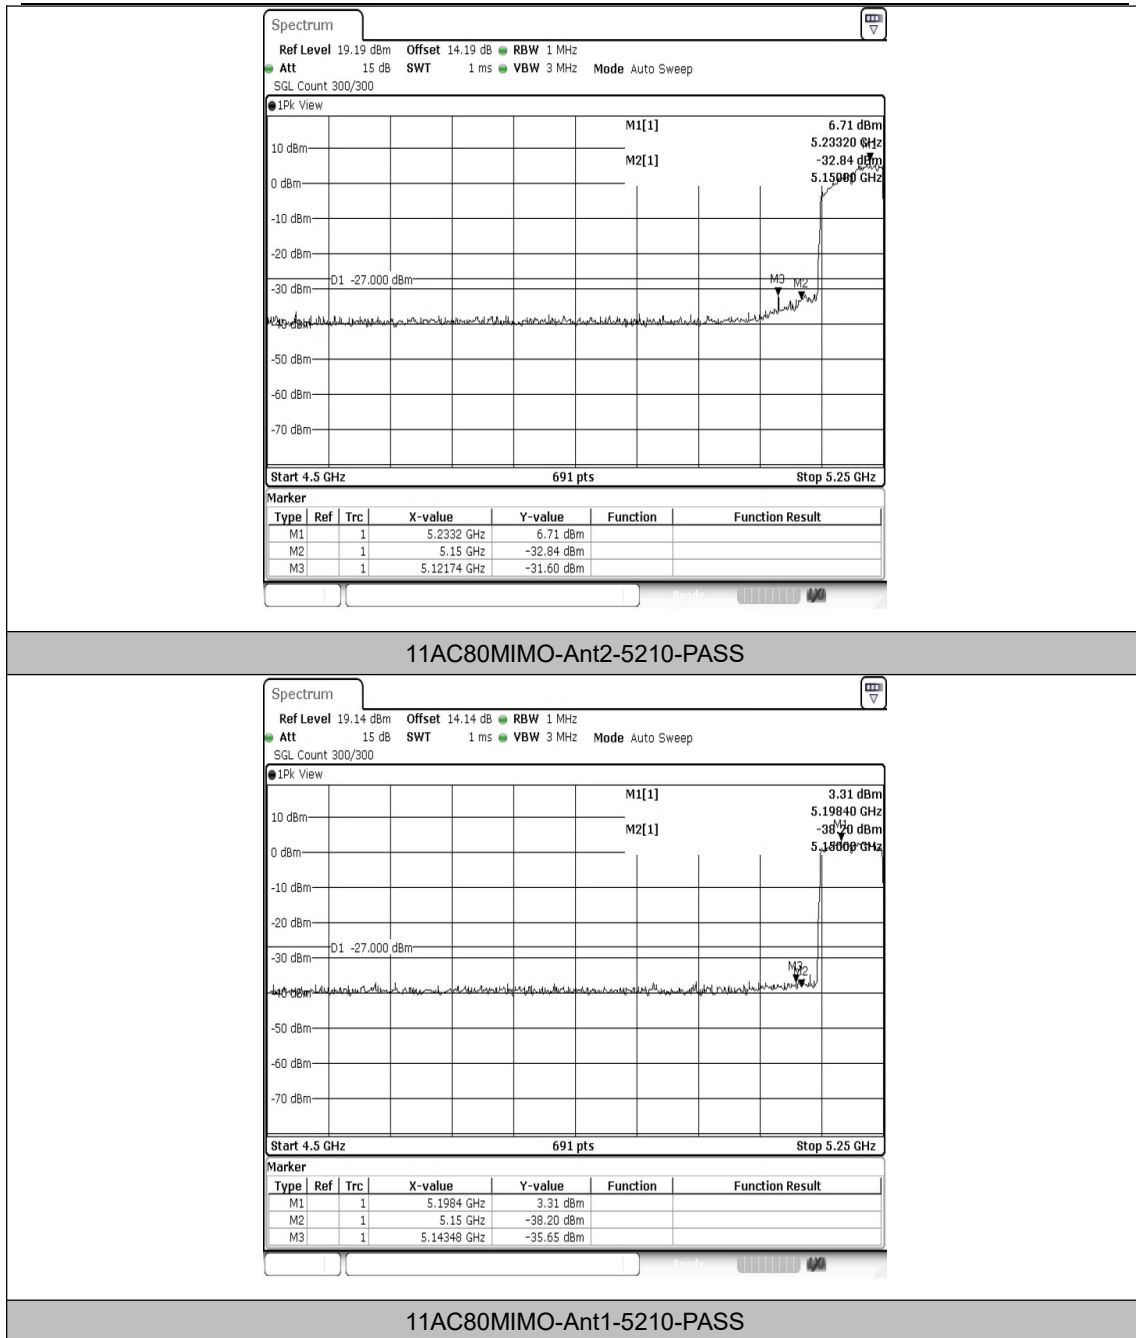

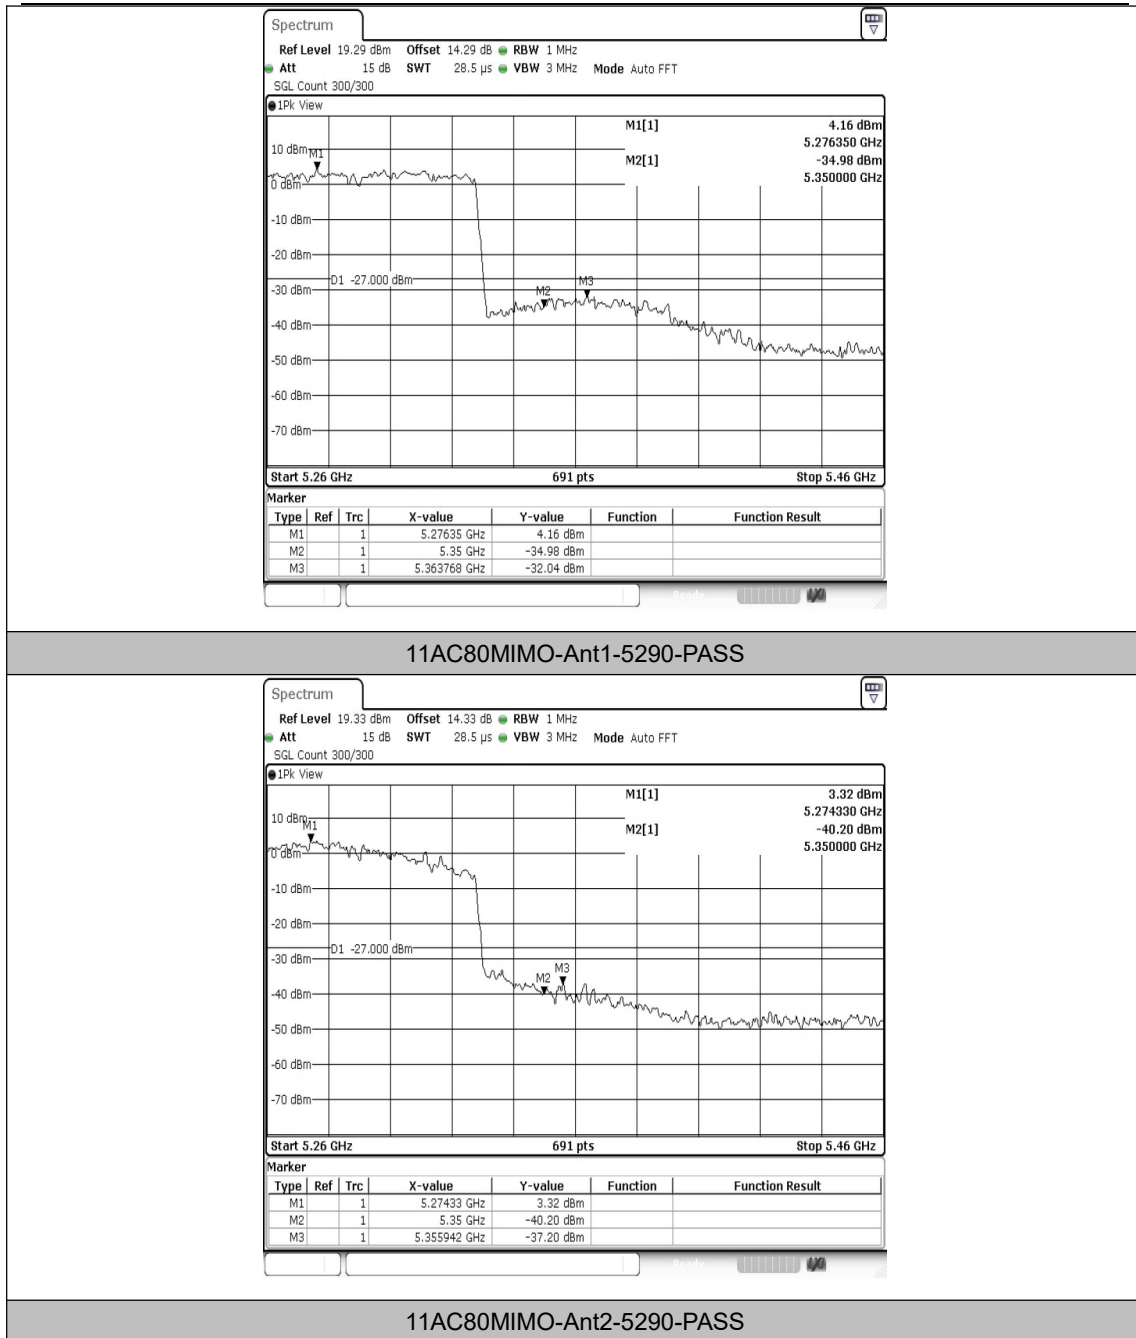


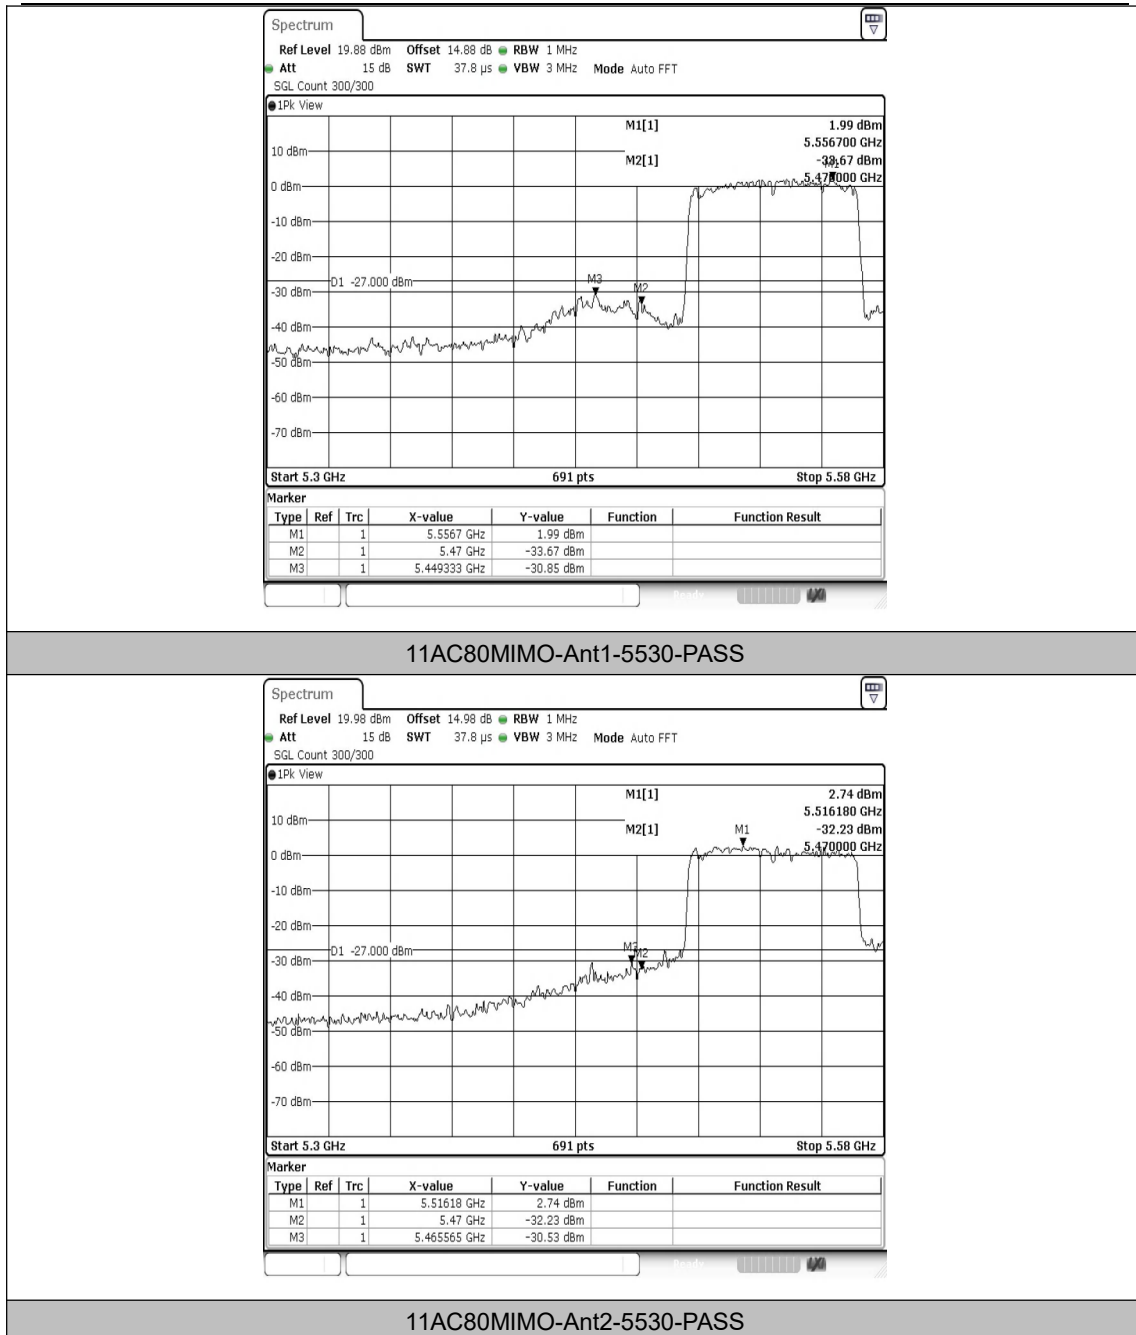



Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

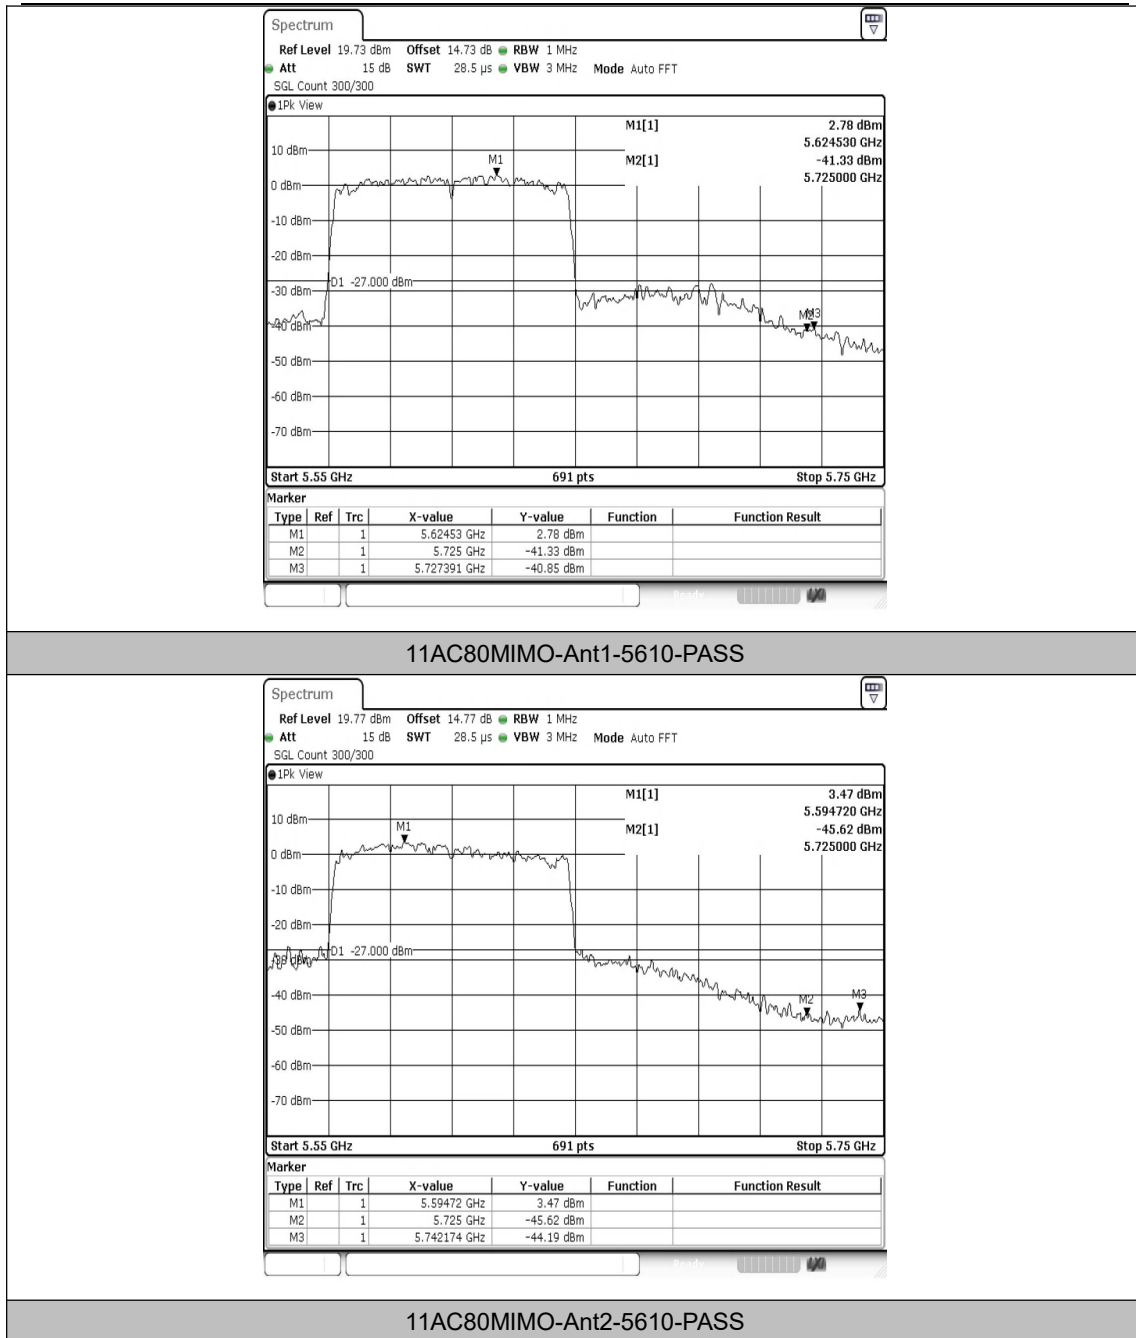

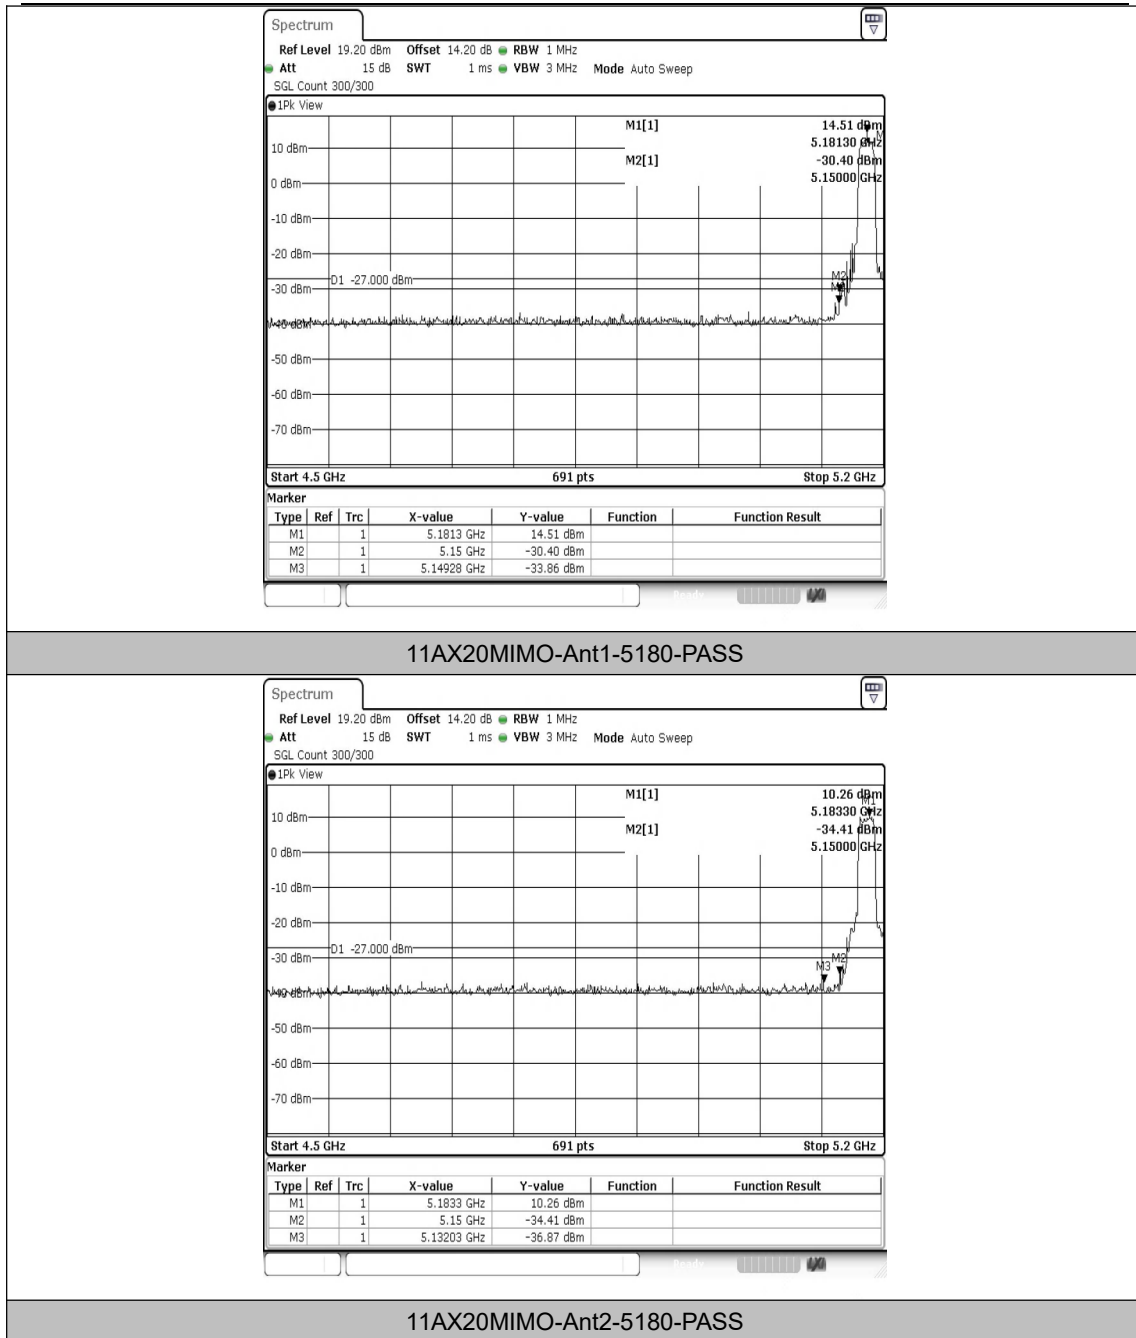


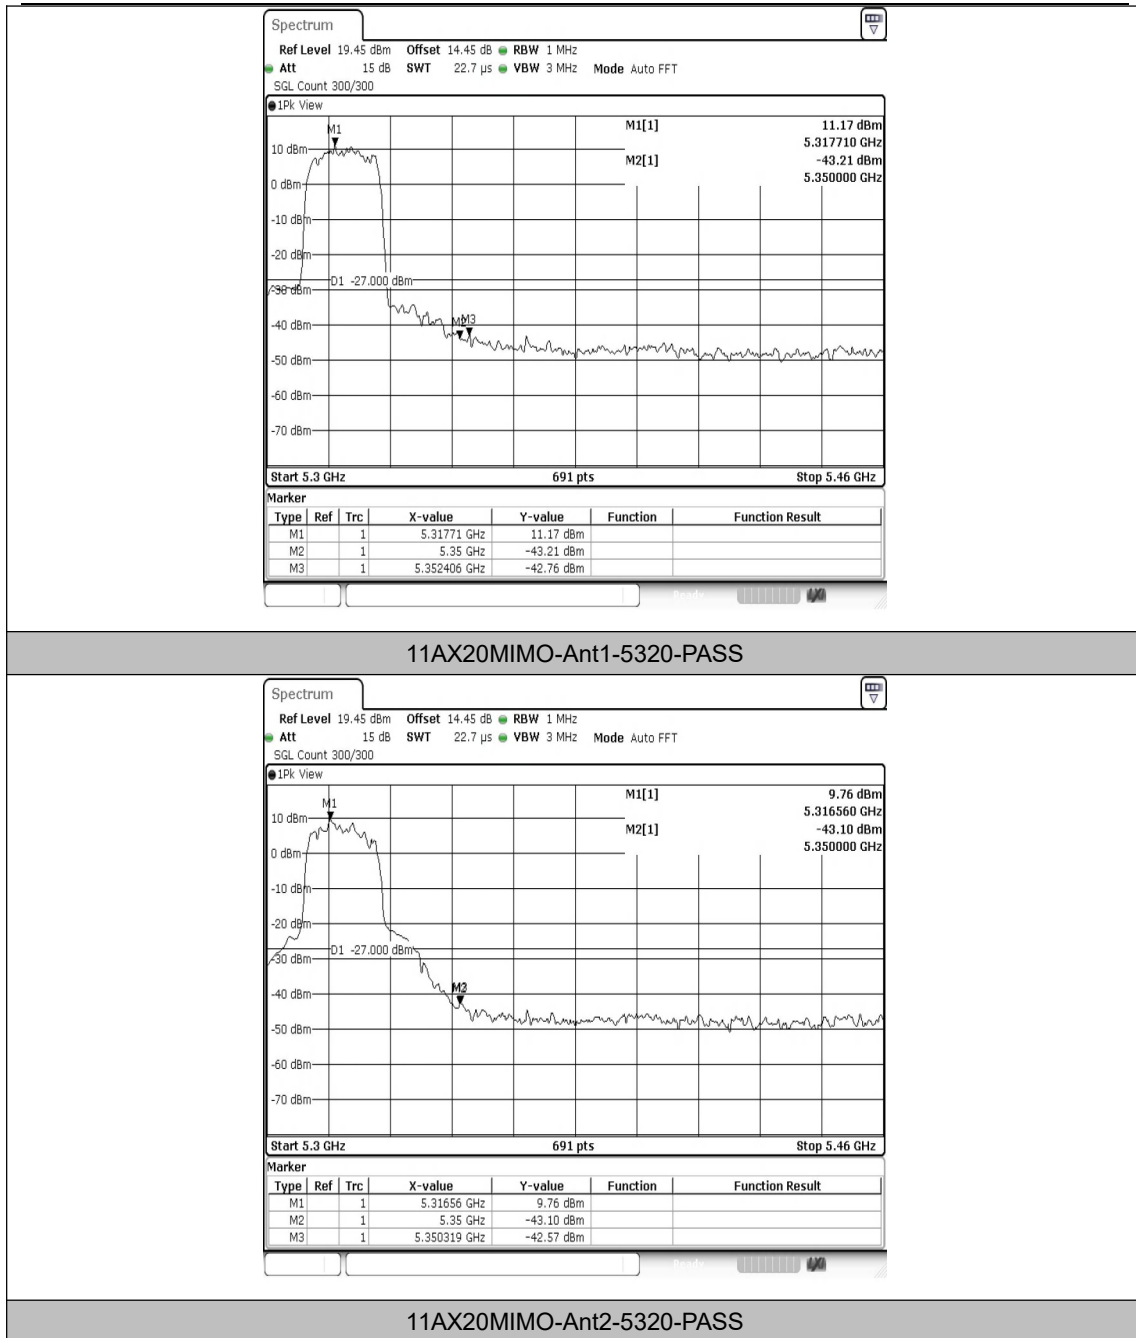

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


 Hotline
400-003-0500
www.anbotech.com

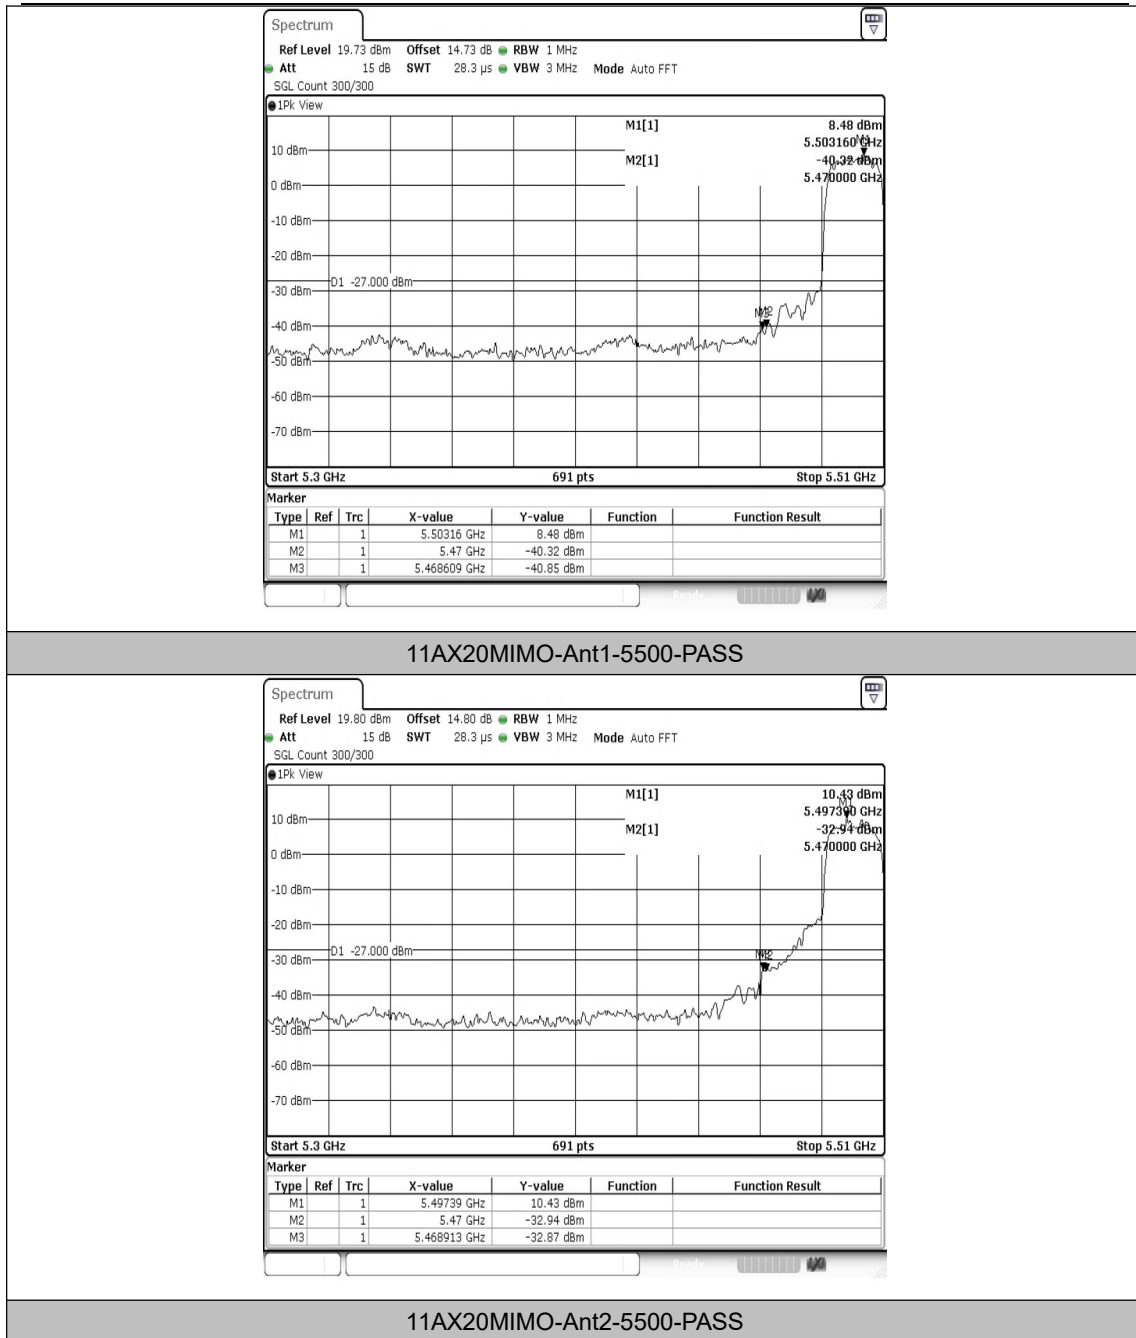

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

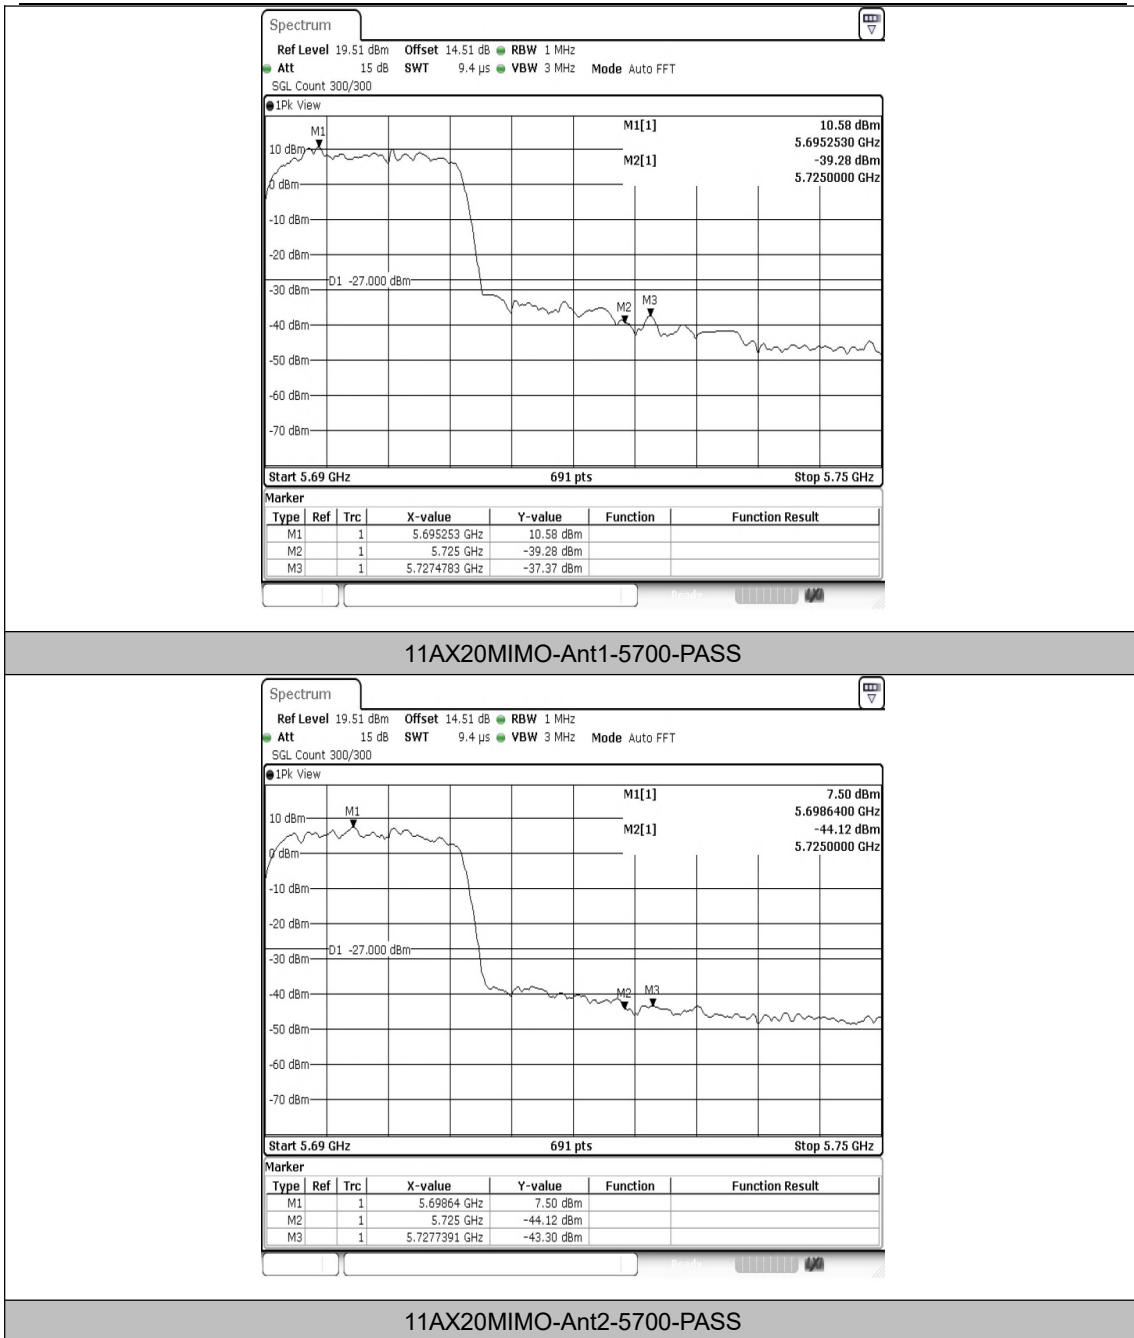

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

