

# Skin expert in my hands

Be like a professional even at home

Beauty device  
**Muilli 2**  
You can diagnose your skin easily and accurately anytime, anywhere




## Patents for skin diagnosis

We define 40 different types of skin, and Muilli 2 diagnose your skin based on big data and algorithm

\*Patents of the skin diagnosis method, skin diagnosis device, and computer-readable media(Patent no. 10-2139801)

## Instructions for using Muilli 2

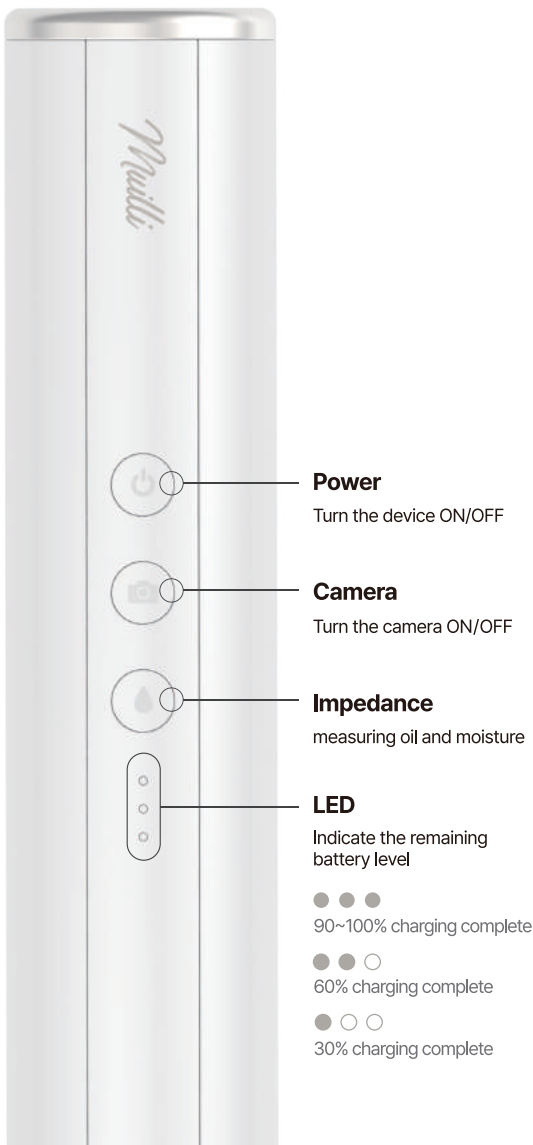

## Diagnosis using a 60X magnification camera




**Camera**  
Take the photos of skin and scalp by using a max 60x magnification camera

## 60X diagnostic camera

Take the photos of skin and scalp by the parts by using 60x magnification camera to diagnose and analyze skin condition more accurately.

## Impedance sensor Moisture measurement

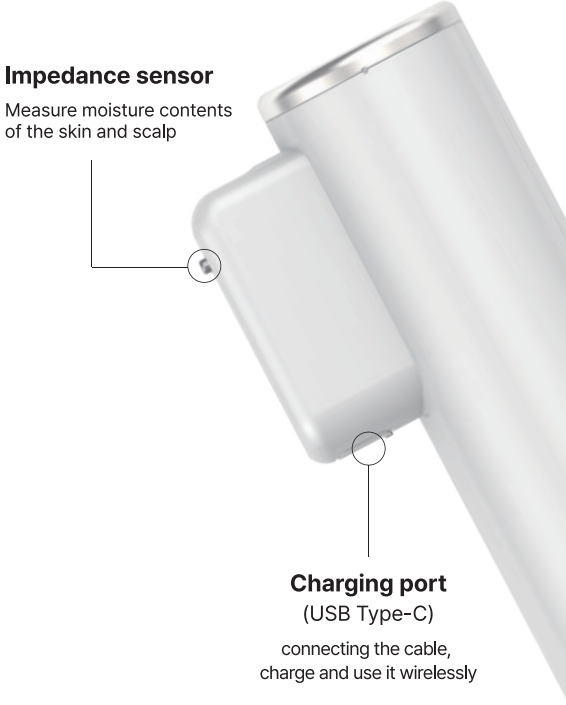


## Impedance sensor

Measure moisture contents of the skin and scalp and use the data as analytic information.

# One stop solution

From diagnosis to customized cosmetics

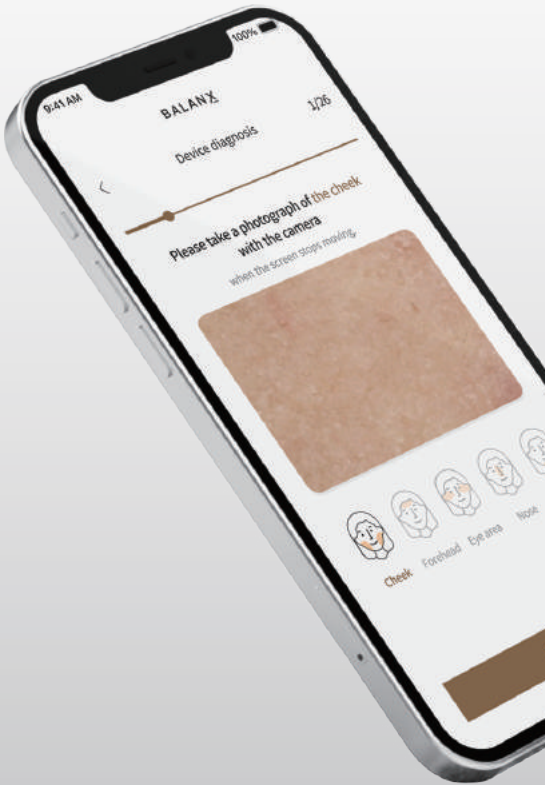

## The institute obsessed with skin data BALANX

Check the analysis results obtained from skin diagnostic data and experience the super-personalized cosmetics customized to my skin all at once.

Diagnostic Device

# Muilli 2



Non-tact skin diagnosis

Skin and scalp condition confirmed by using App on real-time basis



60X magnification camera

Take the photos of skin and scalp by the parts needed for diagnosis



Moisture measurement

Moisture measurement by using impedance sensor.



Diagnosis based on big data

Provide highly accurate diagnosis results by using on big-data-based AI algorithm.



Referrals for customized cosmetics

Provide super-personalized cosmetic recipes matching the skin diagnosis results.

## Register the app and device

### Install the app

1. Search for 'BALANX' in Google Play store/app store to download the application.
2. Scan the QR code to download the application.

### Device registration

Muilli\_ABC123



Log in



Menu



My page



Register the device

1. Register an account or log in the account after running the app
2. Proceed to Menu > My page > Register the device
3. Check the serial number containing numbers and letters on the back of product packaging

\* It is necessary to register the device on your account with official products verification to begin skin diagnosis

## Instruction for using Muilli 2

### Step 1. Run the app



Run the app



Menu



Customized cosmetics



Diagnose skin or scalp



Diagnosis by the device

1. Run the BALANX app on the mobile phone or tablet
2. Go to Menu > Dispense a customized cosmetic, and select the parts you want to diagnose
3. Select skin or scalp diagnosis > 'Device diagnosis' and then, start diagnosis following the instruction on the screen

### Step 2. Running the device Muilli 2

#### Power ON

1. Press the power button for 2~3 seconds and check if the camera LED light turns on.
2. After turning on, connect the device with the mobile phone by following the app instruction Connect Wi-Fi with the serial number same as yours to complete device connection.

#### Diagnosis by camera

1. Press 'Next' in the app and check if the LED light turns on the camera button and lens (If the LED light does not turn on, press 'Camera' button on the device.)
2. Proceed with diagnosis by taking the photo of each part, following the app instructions

#### Diagnosis by impedanse sensor

1. Make sure the LED light turns on the impedance sensor (If the LED light does not turn on, press the 'Impedance sensor' button on the device)
2. Proceed with diagnosis by taking the photo of each part, following the app instructions.

\* In case of scalp diagnosis, proceed with additional photo shooting using the camera of the mobile phone or tablet.  
\* After the completion of diagnosis by the device, proceed to complete the survey, following the app instructions.


## Battery level & charge the device



- ● ● 90~100% charging
- ● ○ 60% charging
- ○ ○ 30% charging

1. Connect with a USB C-type charging cable
2. When the LED indicator turns on, charging starts.

## Info & certification

|                                   |  |
|-----------------------------------|--|
| Product name                      | Muilli 2   |
| Model                             | LC-200   |
| Size                              | 52.8*34.7*174  |
| Weight                            | 140g   |
| Material                          | PC/multifunction PC  |
| Rated voltage/Power consumption   | 3.6V 300mA   |
| Major specification               | WIFI-IEEE 802.11 b/g/n(Duplex transmission)  |
| Operating temperate               | -20°C ~ 50°C   |
| Charging specification            | 5V/1A  |
| Battery                           | 3.6V/3250mA Lithium-ion  |
| Time needed for full charging     | Charging time 5 hours Usage time 8 hours   |
| Manufacturer                      | LILLYCOVER Co., Ltd./KOREA   |
| Date of manufacturing             | 2022.11  |
| Safety Confirmation Certification | ZU10878-18001C   |
| Product composition               | Muilli 2(LC-200), C-TYPE Cable /50cm , Manual  |
| KC Safety Certification           |  R-C-LCV-LC-200 |

## Device precautions

#### Important safety regulations

1. Do not force to open the product. The device components or battery can influence the environment and human body.
2. Do not use a cleaner when cleaning the device
3. Do not use the device in the sauna or a humid place
4. Do not leave the device in direct sunlight for a long time
5. Keep the device away from fire. It may pose a risk of explosion
6. The charger must satisfy the following requirements
  - Use only the charger of 5.0V output voltage
  - Use only the charger over 1A output current
7. Do not disassemble the device. It cause malfunction and safety accidents resulting in refusal of repair or exchange
8. Keep the product away from children.

#### Health and safety precautions.

Muilli 2 device is not a medical device :  
- We inform you that the device or application can not be used for diagnostic treatment or prevention purposes for a disease or any medical issue.  
- Consult with qualified physicians in advance if you need to make a decision on skin treatment and nutrition condition.

## Service warranty & guidelines

- The device comes with a full warranty of 1 year from the date of purchase provided it is for common use only
- The product warranty does not cover damages caused by improper use, random adjustments, accidents or unauthorized repairs, but only covers defects arising naturally from mass production
- If a device is found to have defects, return the product with its receipt and quality certificate to the place of purchase
- The device is eligible for refund or replacement with new product if the defect is subject to protection by warranty regulation

#### Guideline for free A/S

- In case of disorders or defects occurring under common use during the first year after purchase.
- In case of a secondhand device, the warranty period will be counted from the date of first purchase.

#### Guideline for non-free A/S

- The defect or disorder due to customers carelessness.
- In case of malfunction caused by breach of relevant user guides.
- In the event of damage, loss, or break-down caused by someone other than a qualified worker from us
- In case of malfunction caused by improper use of electrical capacity etc. or failure to follow the instructions in the user guide.
- In the event of damage caused by natural disasters (lightning, fire, wind and flood, gas, salt, earthquake, etc)
- In case of malfunction caused by using the inauthentic parts or consumables.

\* Please be fully aware of the product manual before using the device.

## FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Compliance Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:  
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

# Diagnostic Device

# Muilli 2

## Manual Book



### Install the app

Google Play store



App store



Search 'BALANX' in the search window



#### Service Center

Tell. +82-53-756-1140 Kakao talk. @Balanx\_kr Website. lilyshop.net