






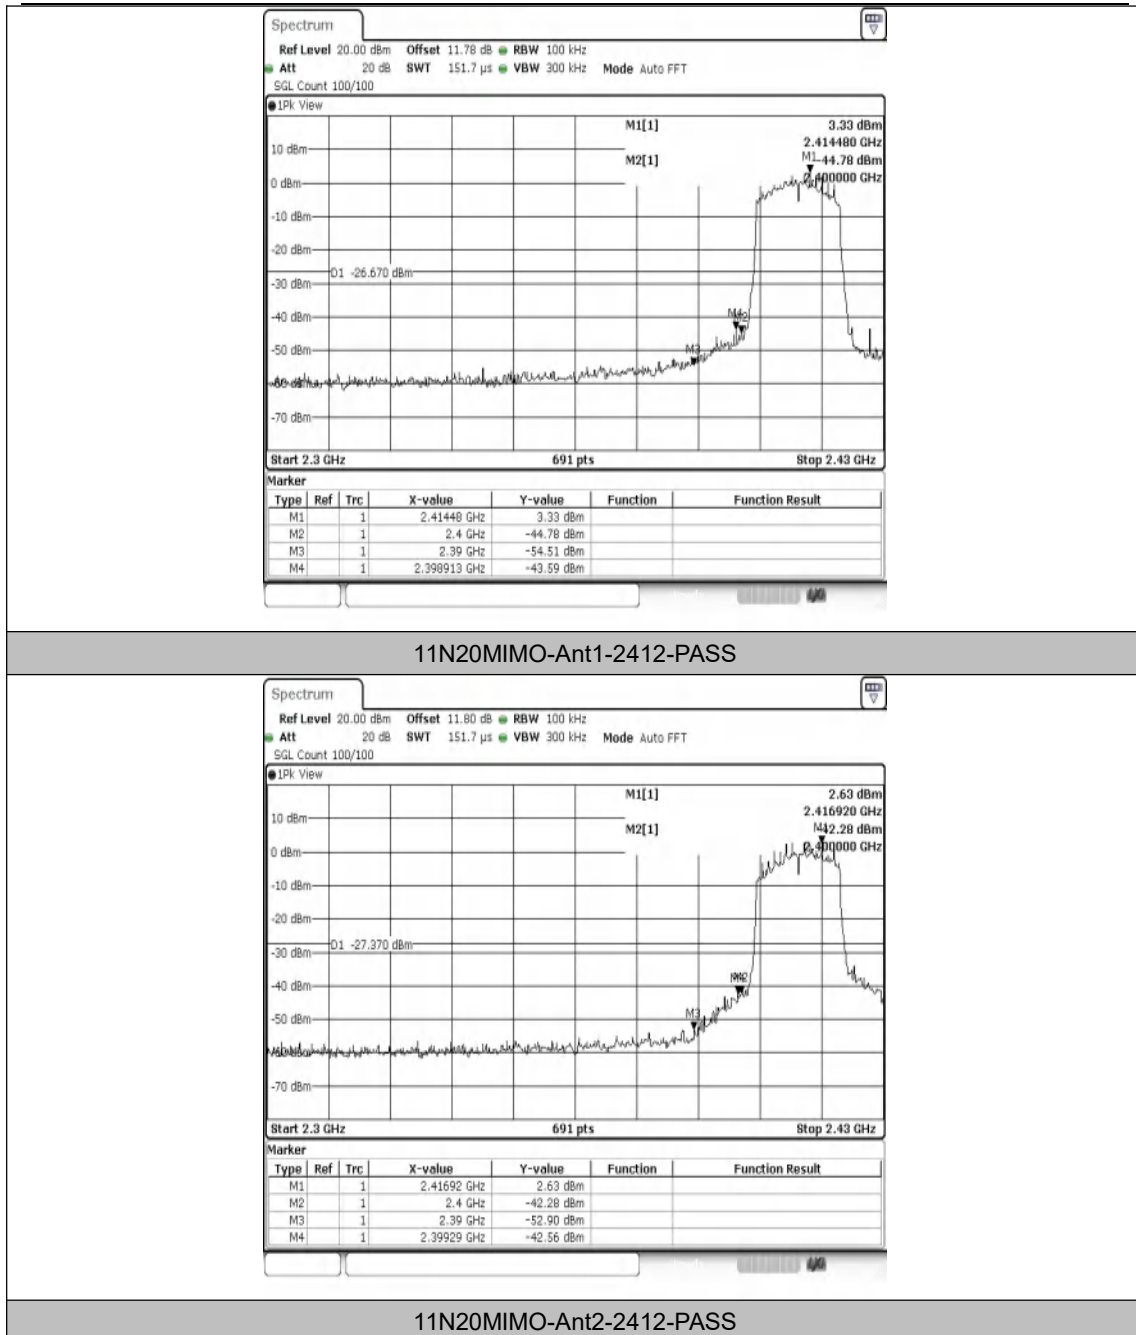


11N20MIMO-Ant1-2462-PASS

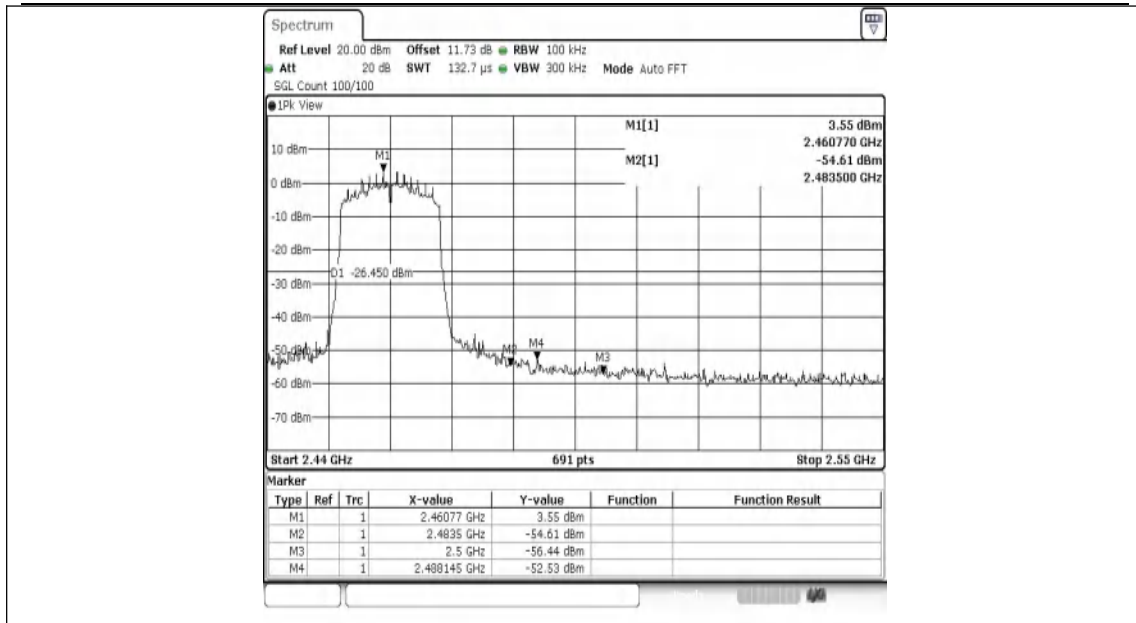


11N20MIMO-Ant2-2462-PASS

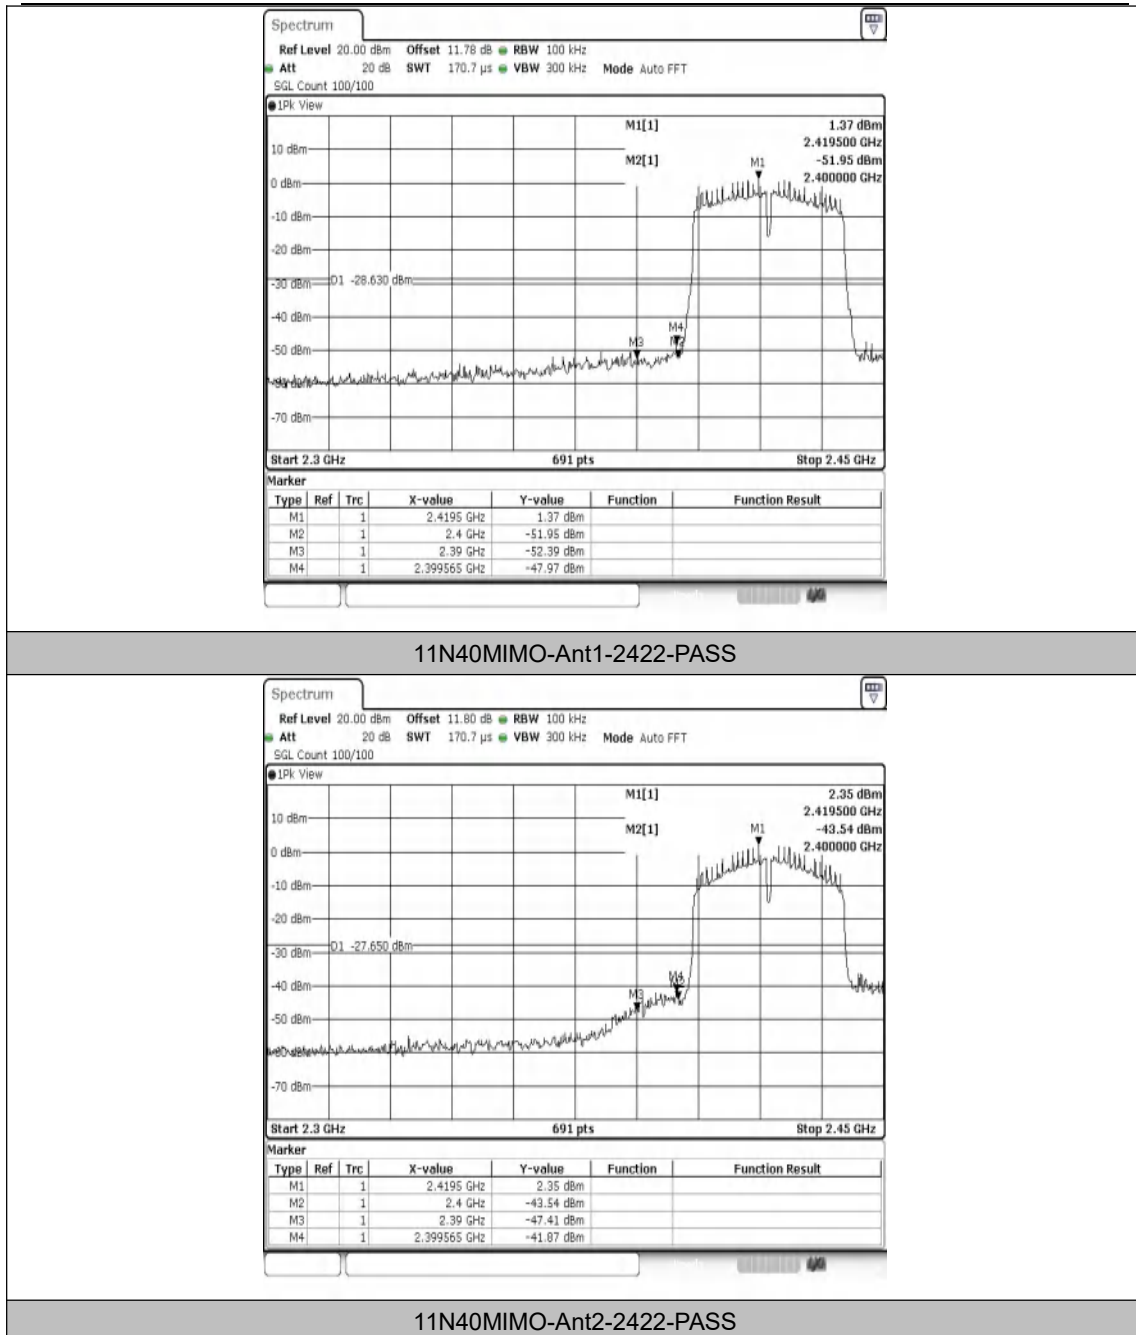


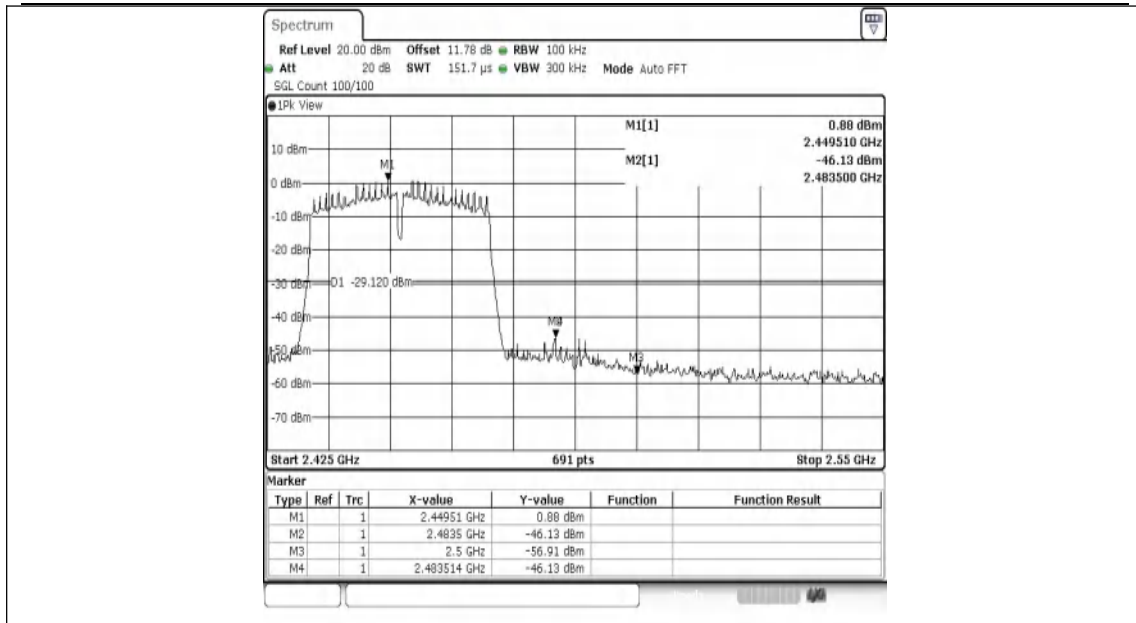



11N40MIMO-Ant1-2452-PASS

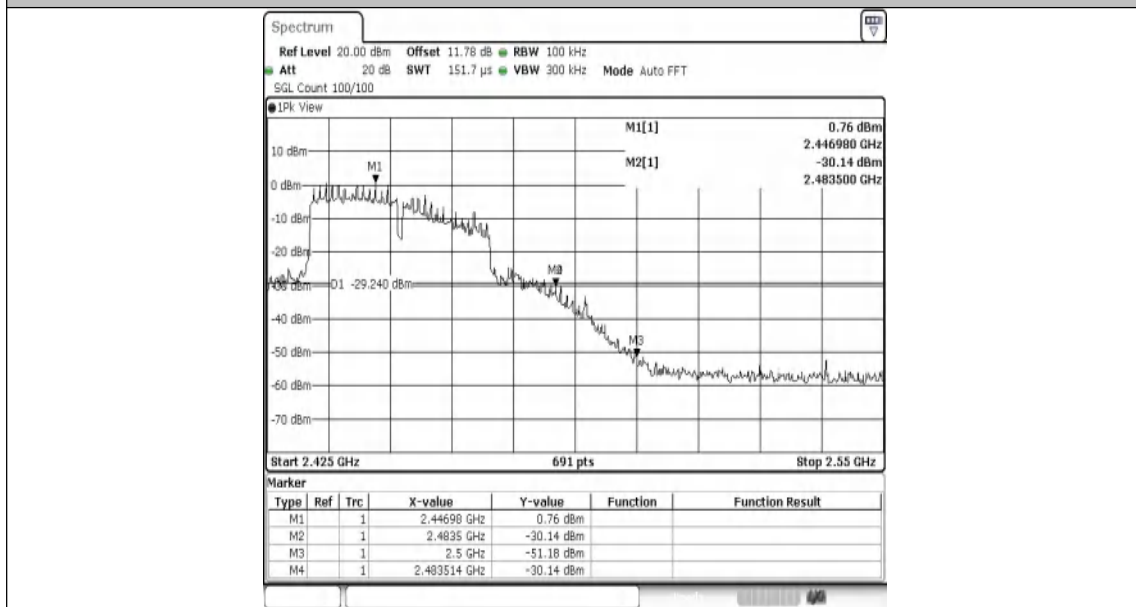

11N40MIMO-Ant2-2452-PASS

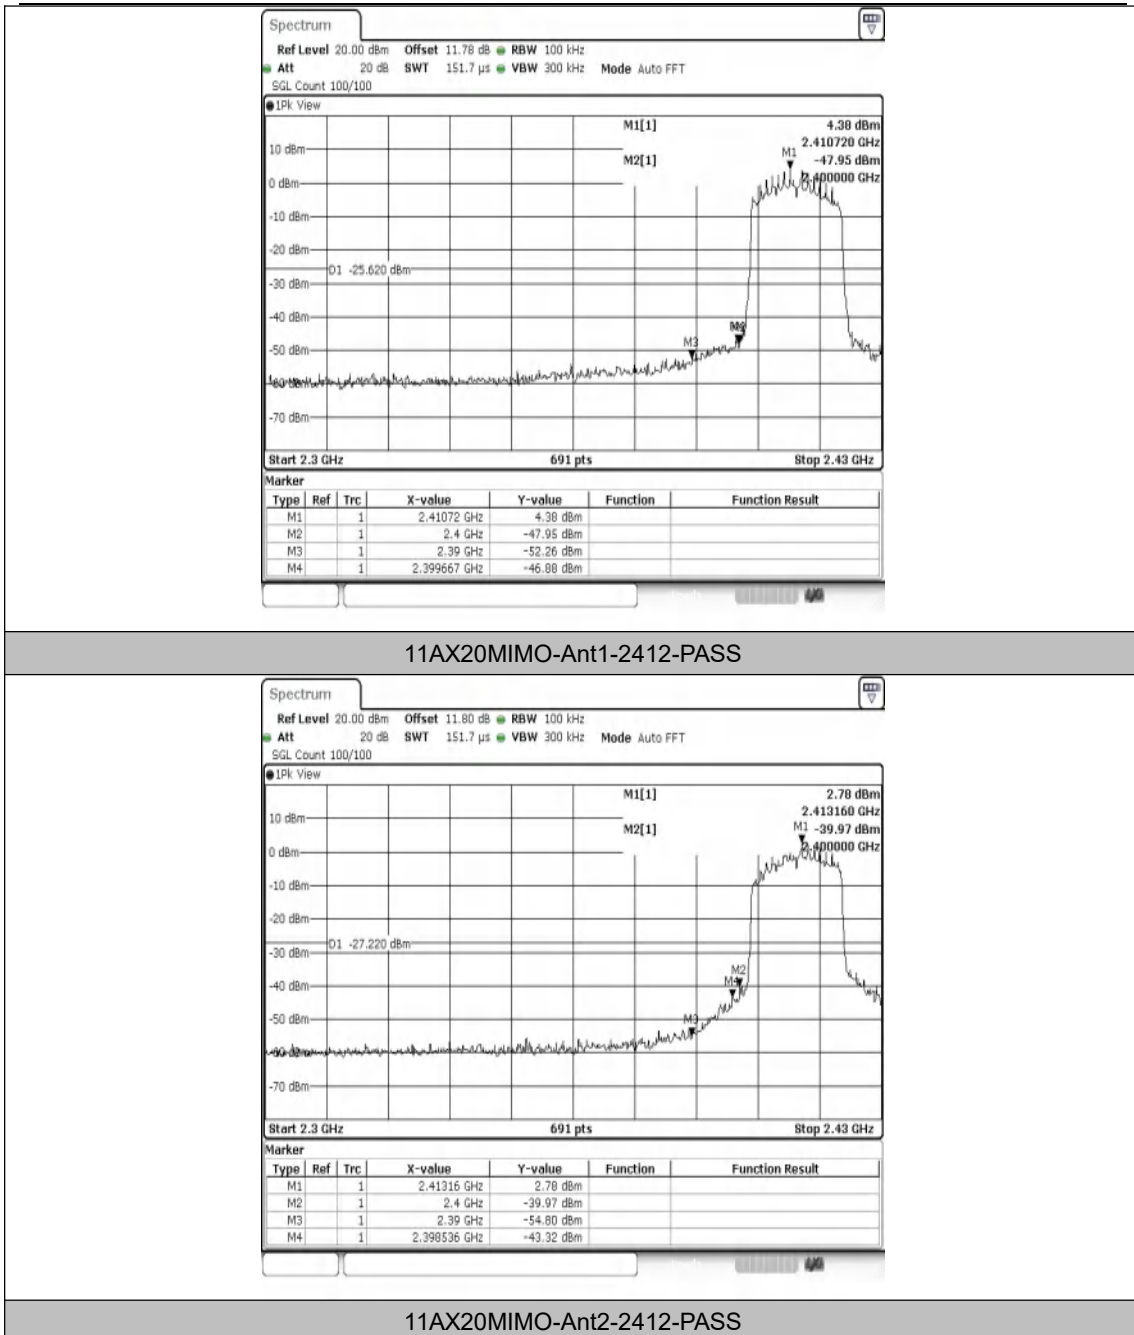

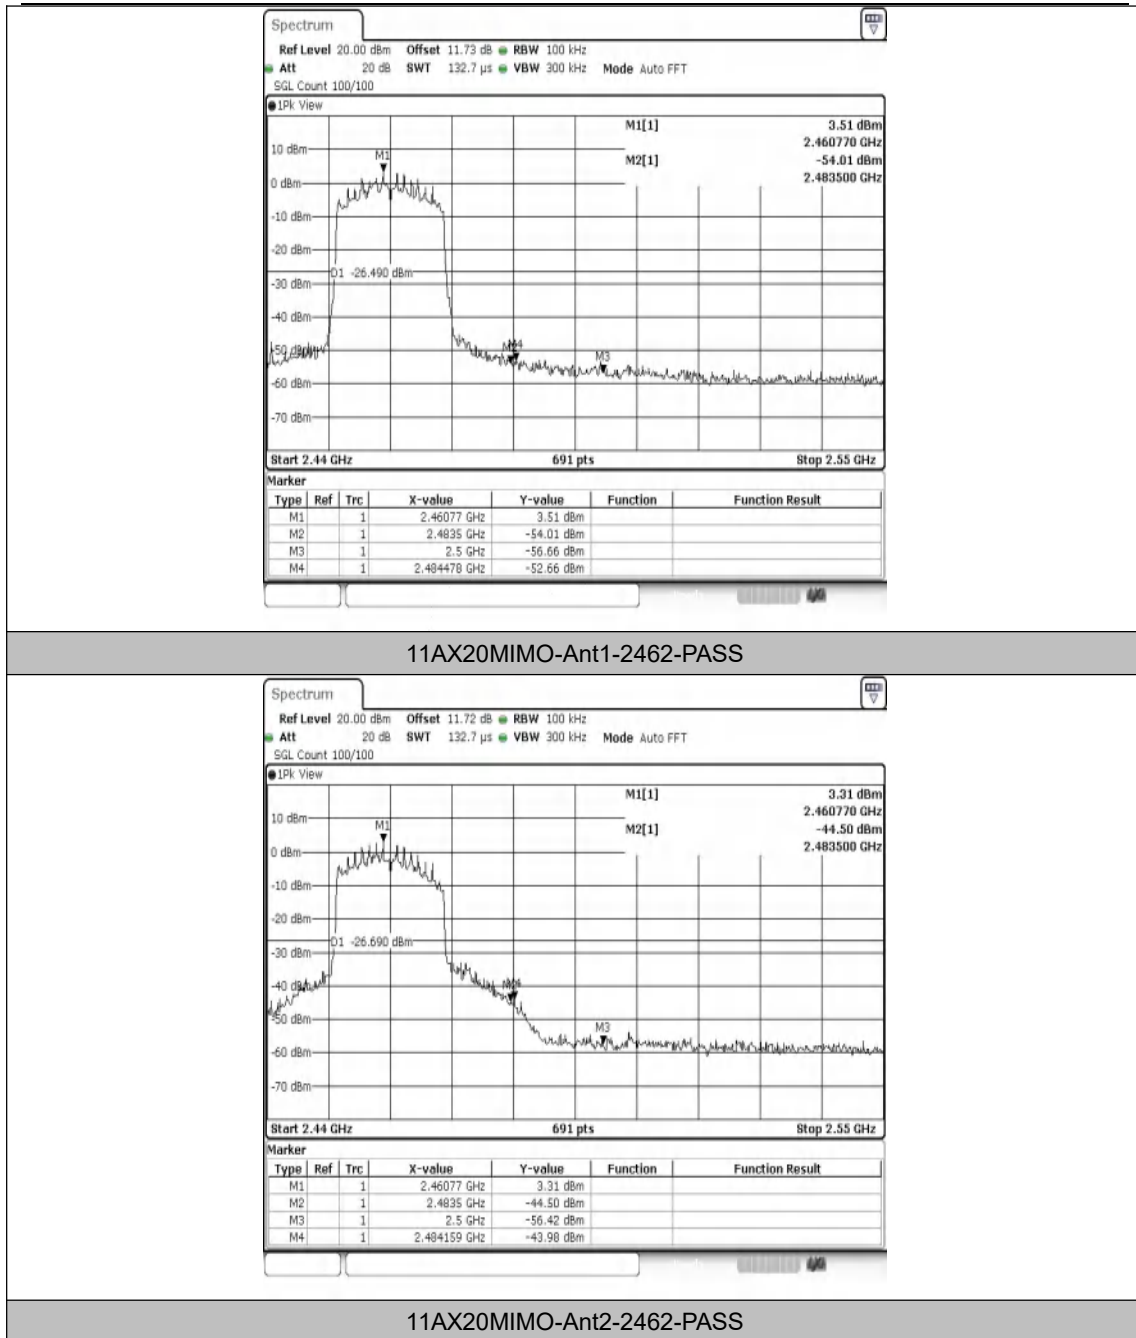


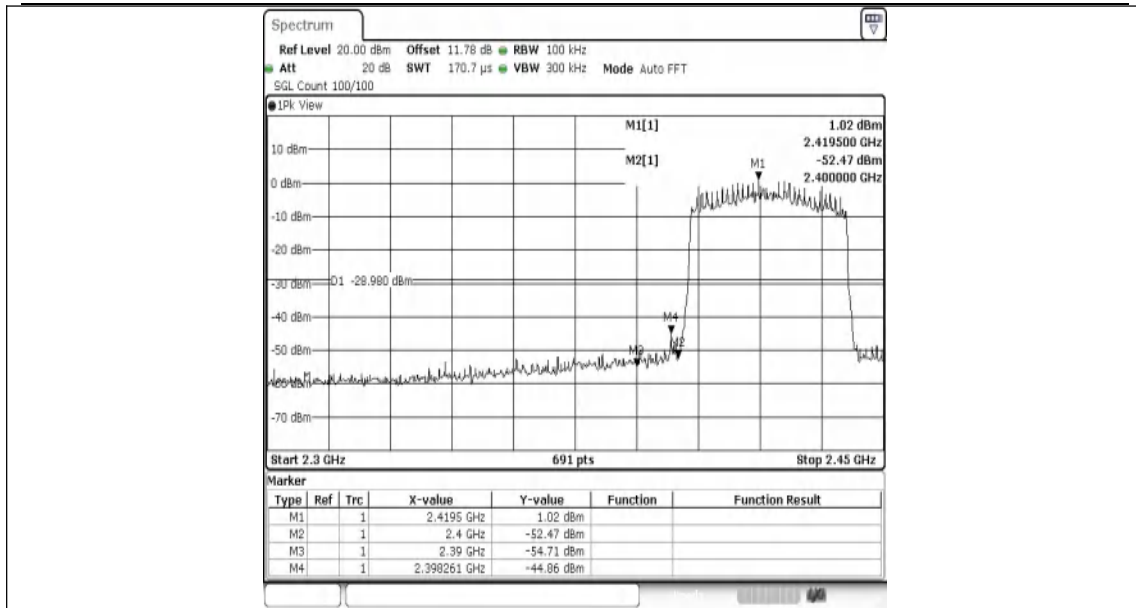


11AX40MIMO-Ant1-2422-PASS



11AX40MIMO-Ant2-2422-PASS

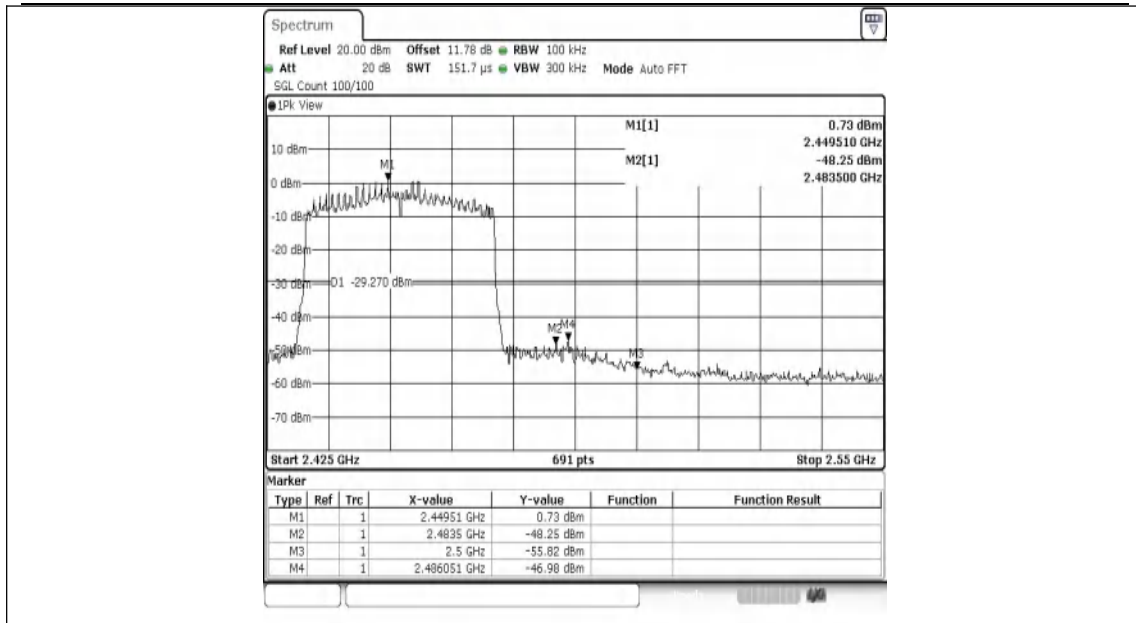

11AX40MIMO-Ant1-2452-PASS

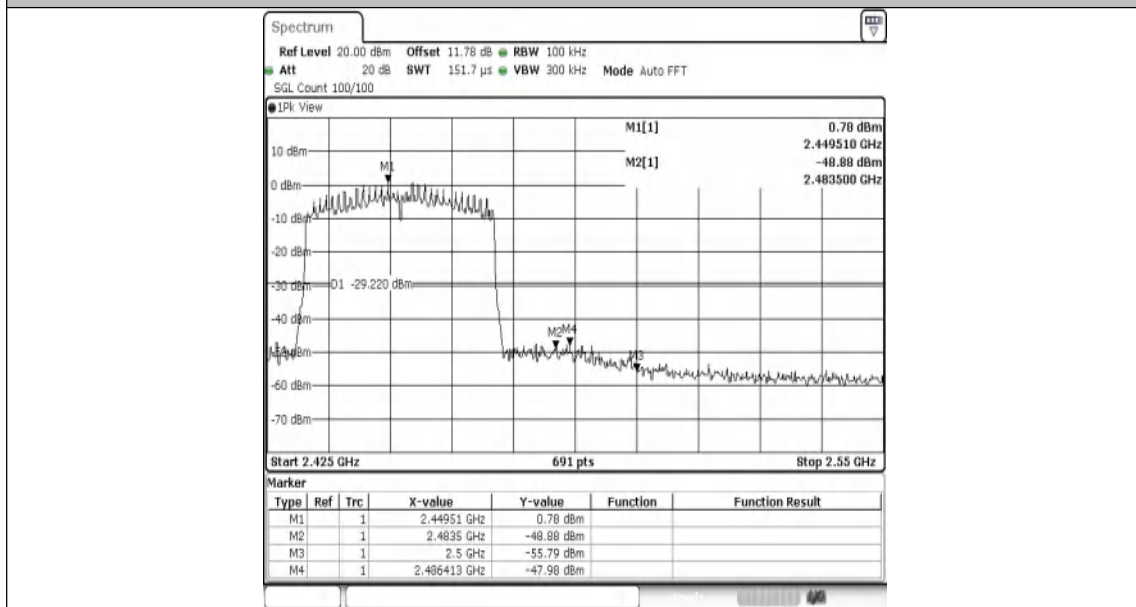

11AX40MIMO-Ant2-2452-PASS

Appendix F: Conducted Spurious Emission

Test Result


Test Mode	Antenna	Frequency [MHz]	Freq. Range [Mhz]	Ref. Level [dBm]	Result [dBm]	Limit [dBm]	Verdict
11B	Ant1	2412	0~Reference	1.67	1.67	---	PASS
11B	Ant2	2412	0~Reference	3.26	3.26	---	PASS
11B	Ant1	2412	30~1000	1.67	-58.76	≤-28.33	PASS
11B	Ant2	2412	30~1000	3.26	-56.88	≤-26.74	PASS
11B	Ant1	2412	1000~26500	1.67	-43.35	≤-28.33	PASS
11B	Ant2	2412	1000~26500	3.26	-43.86	≤-26.74	PASS
11B	Ant1	2437	0~Reference	2.49	2.49	---	PASS
11B	Ant2	2437	0~Reference	1.45	1.45	---	PASS
11B	Ant1	2437	30~1000	2.49	-58.43	≤-27.51	PASS
11B	Ant2	2437	30~1000	1.45	-57.54	≤-28.55	PASS
11B	Ant1	2437	1000~26500	2.49	-43.79	≤-27.51	PASS
11B	Ant2	2437	1000~26500	1.45	-43.73	≤-28.55	PASS
11B	Ant1	2462	0~Reference	2.66	2.66	---	PASS
11B	Ant2	2462	0~Reference	2.11	2.11	---	PASS
11B	Ant1	2462	30~1000	2.66	-57.55	≤-27.34	PASS
11B	Ant2	2462	30~1000	2.11	-57.64	≤-27.89	PASS
11B	Ant1	2462	1000~26500	2.66	-43.65	≤-27.34	PASS
11B	Ant2	2462	1000~26500	2.11	-44.16	≤-27.89	PASS
11G	Ant1	2412	0~Reference	0.61	0.61	---	PASS
11G	Ant2	2412	0~Reference	0.68	0.68	---	PASS
11G	Ant1	2412	30~1000	0.61	-58.08	≤-29.39	PASS
11G	Ant2	2412	30~1000	0.68	-57.78	≤-29.32	PASS
11G	Ant1	2412	1000~26500	0.61	-43.99	≤-29.39	PASS
11G	Ant2	2412	1000~26500	0.68	-43.8	≤-29.32	PASS
11G	Ant1	2437	0~Reference	3.68	3.68	---	PASS
11G	Ant2	2437	0~Reference	3.73	3.73	---	PASS
11G	Ant1	2437	30~1000	3.68	-58.49	≤-26.32	PASS
11G	Ant2	2437	30~1000	3.73	-57.68	≤-26.27	PASS
11G	Ant1	2437	1000~26500	3.68	-43.87	≤-26.32	PASS
11G	Ant2	2437	1000~26500	3.73	-43.99	≤-26.27	PASS
11G	Ant1	2462	0~Reference	1.69	1.69	---	PASS
11G	Ant2	2462	0~Reference	-1.64	-1.64	---	PASS
11G	Ant1	2462	30~1000	1.69	-57.46	≤-28.31	PASS
11G	Ant2	2462	30~1000	-1.64	-58.38	≤-31.64	PASS
11G	Ant1	2462	1000~26500	1.69	-43.59	≤-28.31	PASS
11G	Ant2	2462	1000~26500	-1.64	-44.02	≤-31.64	PASS
11N20MIMO	Ant1	2412	0~Reference	1.94	1.94	---	PASS


11N20MIMO	Ant2	2412	0~Reference	-0.14	-0.14	---	PASS
11N20MIMO	Ant1	2412	30~1000	1.94	-58.6	≤-28.06	PASS
11N20MIMO	Ant2	2412	30~1000	-0.14	-58.11	≤-30.14	PASS
11N20MIMO	Ant1	2412	1000~26500	1.94	-44.44	≤-28.06	PASS
11N20MIMO	Ant2	2412	1000~26500	-0.14	-42.91	≤-30.14	PASS
11N20MIMO	Ant1	2437	0~Reference	0.08	0.08	---	PASS
11N20MIMO	Ant2	2437	0~Reference	-0.33	-0.33	---	PASS
11N20MIMO	Ant1	2437	30~1000	0.08	-57.79	≤-29.92	PASS
11N20MIMO	Ant2	2437	30~1000	-0.33	-57.35	≤-30.33	PASS
11N20MIMO	Ant1	2437	1000~26500	0.08	-44.06	≤-29.92	PASS
11N20MIMO	Ant2	2437	1000~26500	-0.33	-44.22	≤-30.33	PASS
11N20MIMO	Ant1	2462	0~Reference	0.31	0.31	---	PASS
11N20MIMO	Ant2	2462	0~Reference	-0.77	-0.77	---	PASS
11N20MIMO	Ant1	2462	30~1000	0.31	-57.88	≤-29.69	PASS
11N20MIMO	Ant2	2462	30~1000	-0.77	-58.2	≤-30.77	PASS
11N20MIMO	Ant1	2462	1000~26500	0.31	-43.85	≤-29.69	PASS
11N20MIMO	Ant2	2462	1000~26500	-0.77	-43.95	≤-30.77	PASS
11N40MIMO	Ant1	2422	0~Reference	0.74	0.74	---	PASS
11N40MIMO	Ant2	2422	0~Reference	1.82	1.82	---	PASS
11N40MIMO	Ant1	2422	30~1000	0.74	-58.29	≤-29.26	PASS
11N40MIMO	Ant2	2422	30~1000	1.82	-57.91	≤-28.18	PASS
11N40MIMO	Ant1	2422	1000~26500	0.74	-43.98	≤-29.26	PASS
11N40MIMO	Ant2	2422	1000~26500	1.82	-43.57	≤-28.18	PASS
11N40MIMO	Ant1	2437	0~Reference	-2.51	-2.51	---	PASS
11N40MIMO	Ant2	2437	0~Reference	-1.45	-1.45	---	PASS
11N40MIMO	Ant1	2437	30~1000	-2.51	-57.23	≤-32.51	PASS
11N40MIMO	Ant2	2437	30~1000	-1.45	-58.22	≤-31.45	PASS
11N40MIMO	Ant1	2437	1000~26500	-2.51	-44.45	≤-32.51	PASS
11N40MIMO	Ant2	2437	1000~26500	-1.45	-43.79	≤-31.45	PASS
11N40MIMO	Ant1	2452	0~Reference	-1.66	-1.66	---	PASS
11N40MIMO	Ant2	2452	0~Reference	-0.93	-0.93	---	PASS
11N40MIMO	Ant1	2452	30~1000	-1.66	-57.97	≤-31.66	PASS
11N40MIMO	Ant2	2452	30~1000	-0.93	-57.75	≤-30.93	PASS
11N40MIMO	Ant1	2452	1000~26500	-1.66	-44.15	≤-31.66	PASS
11AX20MIMO	Ant1	2412	0~Reference	0.14	0.14	---	PASS
11AX20MIMO	Ant2	2412	0~Reference	-0.58	-0.58	---	PASS
11AX20MIMO	Ant1	2412	30~1000	0.14	-57.74	≤-29.86	PASS
11AX20MIMO	Ant2	2412	30~1000	-0.58	-57.79	≤-30.58	PASS
11AX20MIMO	Ant1	2412	1000~26500	0.14	-42.92	≤-29.86	PASS
11AX20MIMO	Ant2	2412	1000~26500	-0.58	-43.99	≤-30.58	PASS
11AX20MIMO	Ant1	2437	0~Reference	0.13	0.13	---	PASS
11AX20MIMO	Ant2	2437	0~Reference	-0.16	-0.16	---	PASS


11AX20MIMO	Ant1	2437	30~1000	0.13	-57.96	≤-29.87	PASS
11AX20MIMO	Ant2	2437	30~1000	-0.16	-57.93	≤-30.16	PASS
11AX20MIMO	Ant1	2437	1000~26500	0.13	-44.03	≤-29.87	PASS
11AX20MIMO	Ant2	2437	1000~26500	-0.16	-43.97	≤-30.16	PASS
11AX20MIMO	Ant1	2462	0~Reference	3.65	3.65	---	PASS
11AX20MIMO	Ant2	2462	0~Reference	-0.75	-0.75	---	PASS
11AX20MIMO	Ant1	2462	30~1000	3.65	-57.62	≤-26.35	PASS
11AX20MIMO	Ant2	2462	30~1000	-0.75	-58.26	≤-30.75	PASS
11AX20MIMO	Ant1	2462	1000~26500	3.65	-44.16	≤-26.35	PASS
11AX20MIMO	Ant2	2462	1000~26500	-0.75	-44.01	≤-30.75	PASS
11AX40MIMO	Ant1	2422	0~Reference	0.57	0.57	---	PASS
11AX40MIMO	Ant2	2422	0~Reference	-0.69	-0.69	---	PASS
11AX40MIMO	Ant1	2422	30~1000	0.57	-58.27	≤-29.43	PASS
11AX40MIMO	Ant2	2422	30~1000	-0.69	-57.64	≤-30.69	PASS
11AX40MIMO	Ant1	2422	1000~26500	0.57	-43.35	≤-29.43	PASS
11AX40MIMO	Ant2	2422	1000~26500	-0.69	-43.22	≤-30.69	PASS
11AX40MIMO	Ant1	2437	0~Reference	0.74	0.74	---	PASS
11AX40MIMO	Ant2	2437	0~Reference	-1.14	-1.14	---	PASS
11AX40MIMO	Ant1	2437	30~1000	0.74	-58.39	≤-29.26	PASS
11AX40MIMO	Ant2	2437	30~1000	-1.14	-57.69	≤-31.14	PASS
11AX40MIMO	Ant1	2437	1000~26500	0.74	-44.25	≤-29.26	PASS
11AX40MIMO	Ant2	2437	1000~26500	-1.14	-43.86	≤-31.14	PASS
11AX40MIMO	Ant1	2452	0~Reference	-1.37	-1.37	---	PASS
11AX40MIMO	Ant2	2452	0~Reference	-2.50	-2.50	---	PASS
11AX40MIMO	Ant1	2452	30~1000	-1.37	-57.63	≤-31.37	PASS
11AX40MIMO	Ant2	2452	30~1000	-2.50	-57.67	≤-32.5	PASS
11AX40MIMO	Ant1	2452	1000~26500	-1.37	-43.83	≤-31.37	PASS
11AX40MIMO	Ant2	2452	1000~26500	-2.50	-44.28	≤-32.5	PASS


The results of single antenna testing in MIMO mode meet the margin of more than 3db

Test Graphs

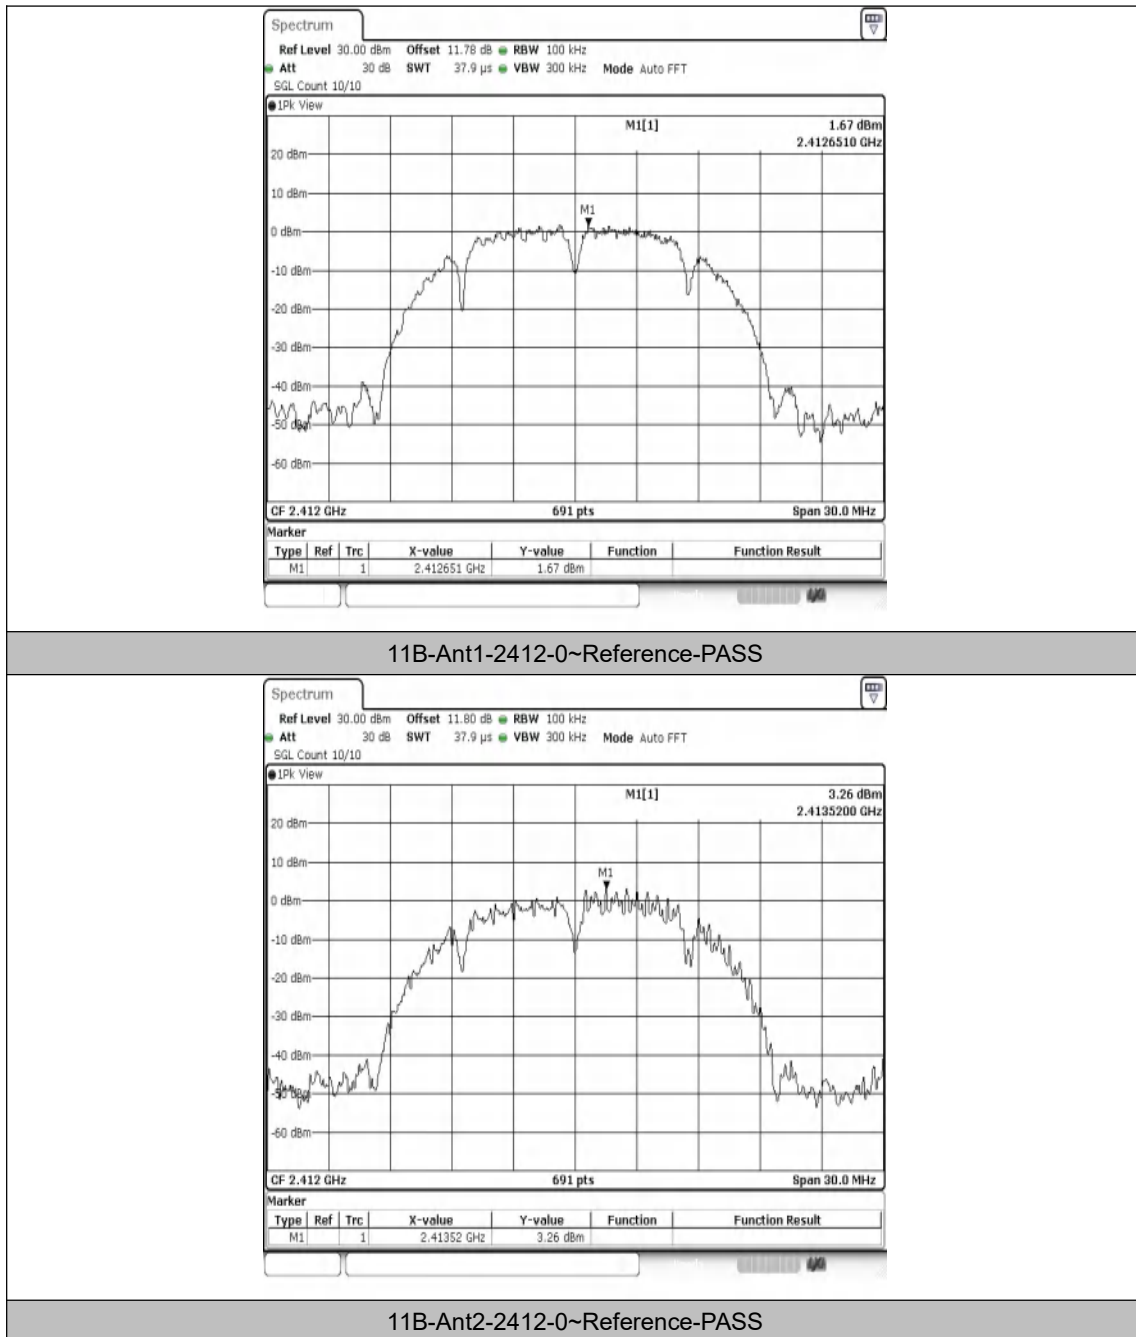


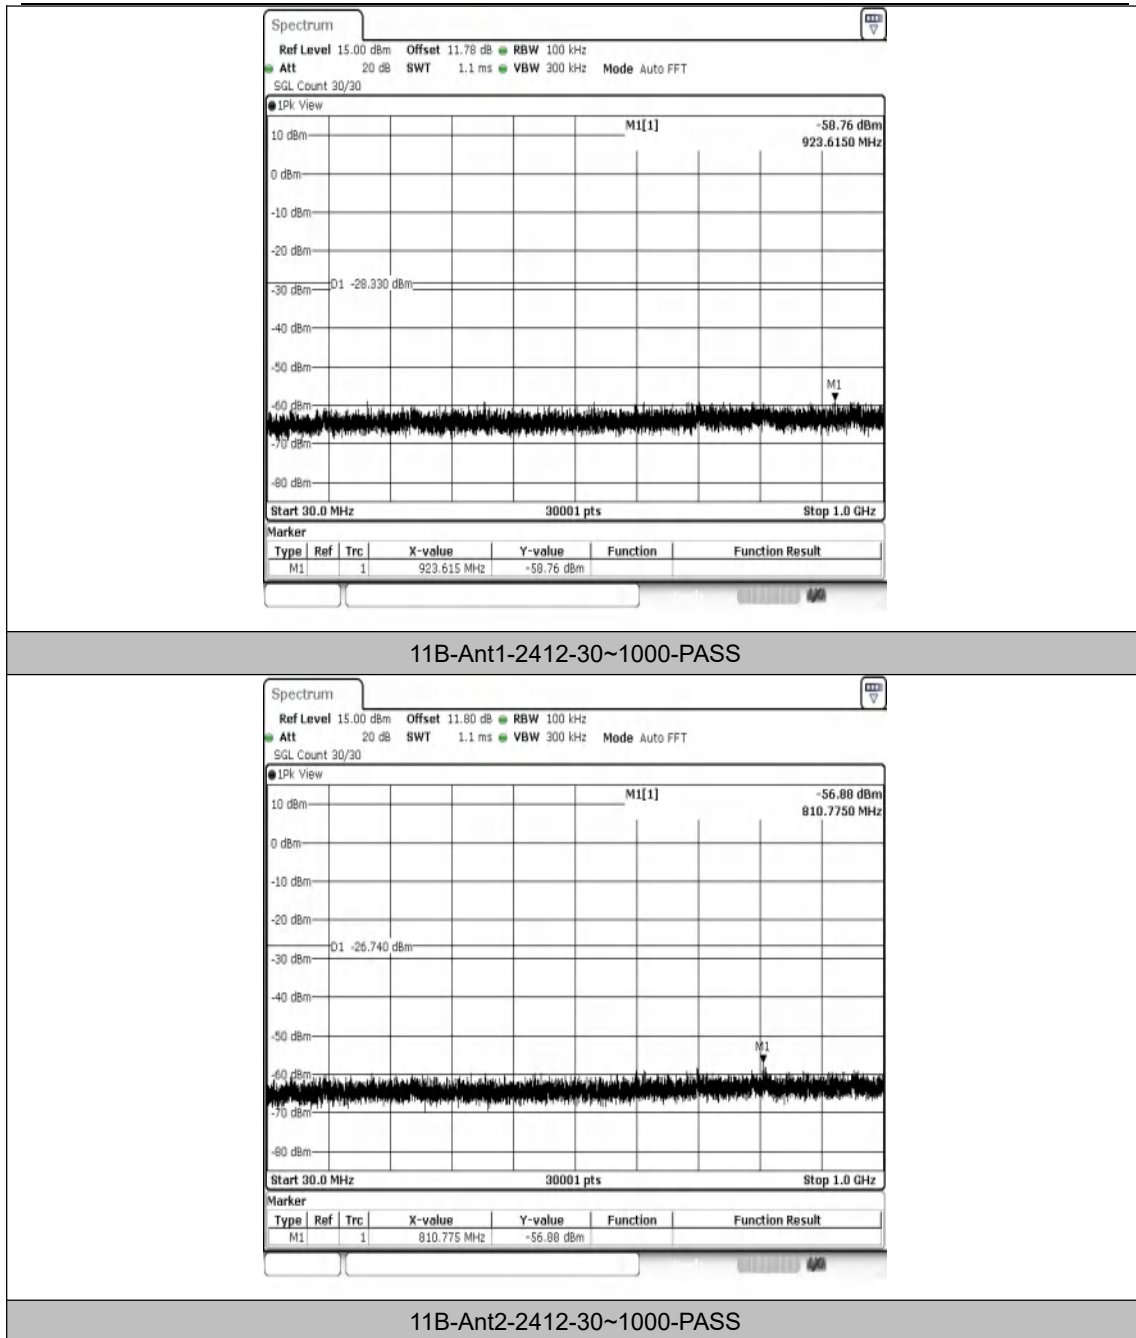

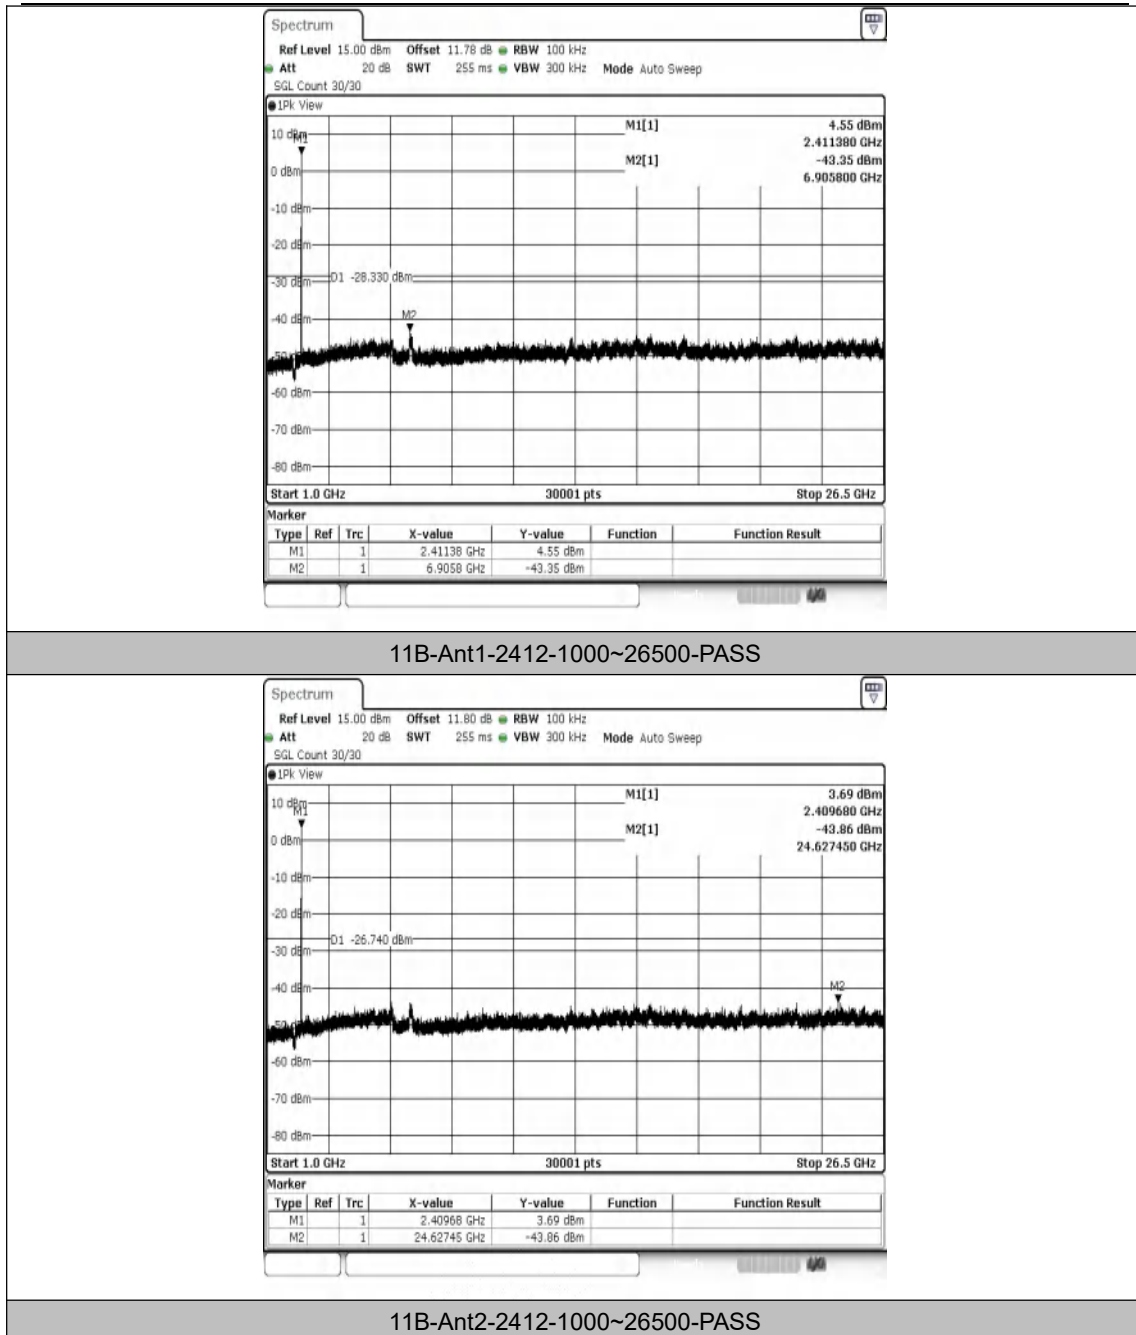


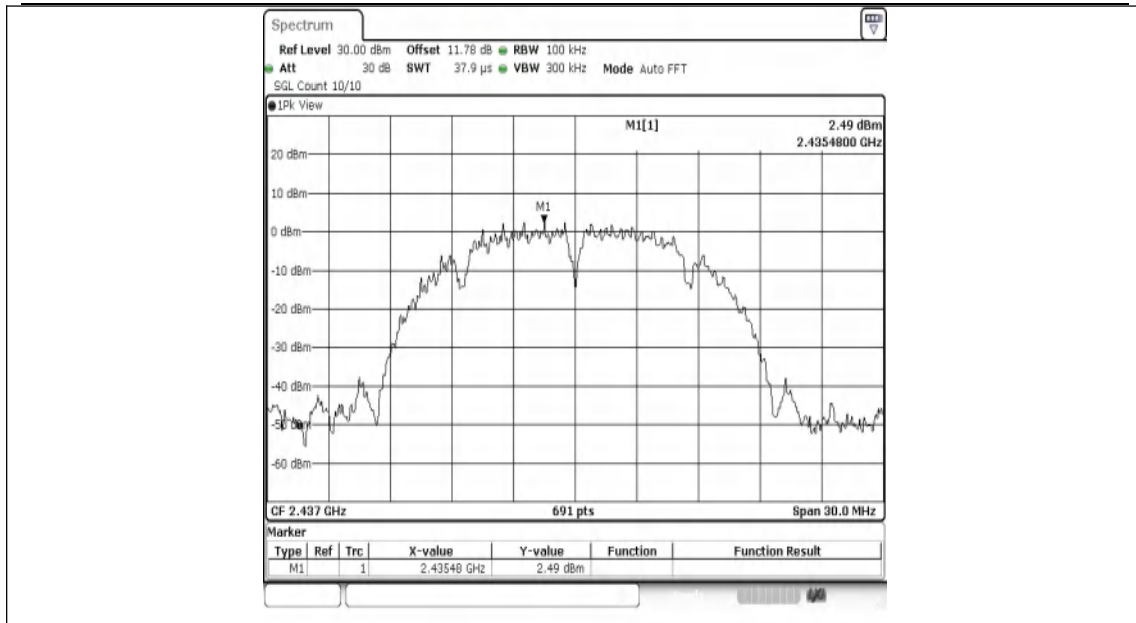



11B-Ant1-2437-0~Reference-PASS

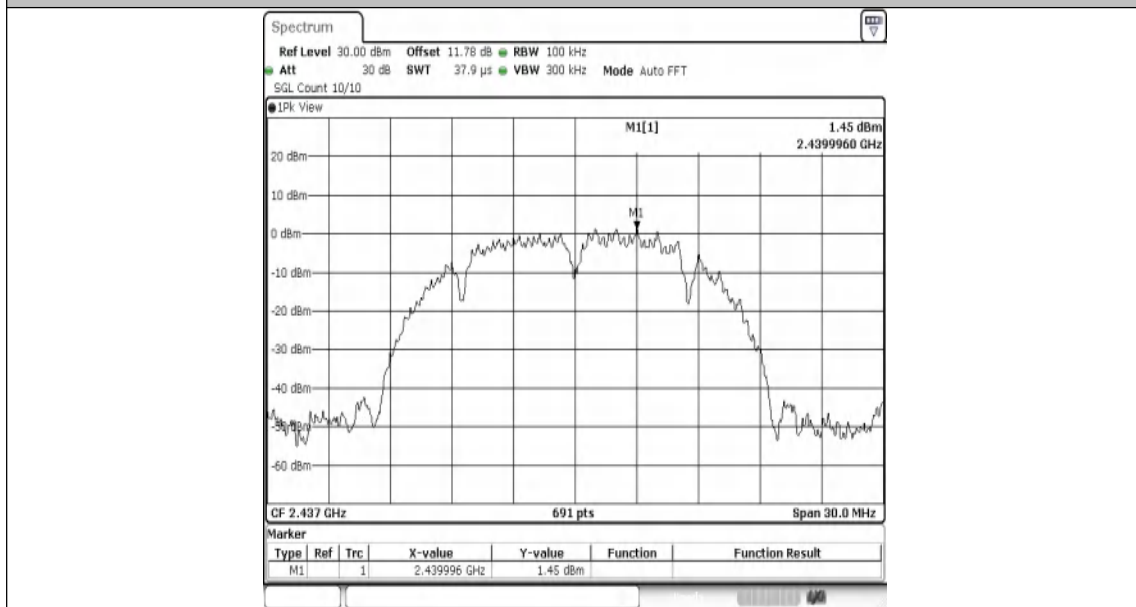



11B-Ant2-2437-0~Reference-PASS

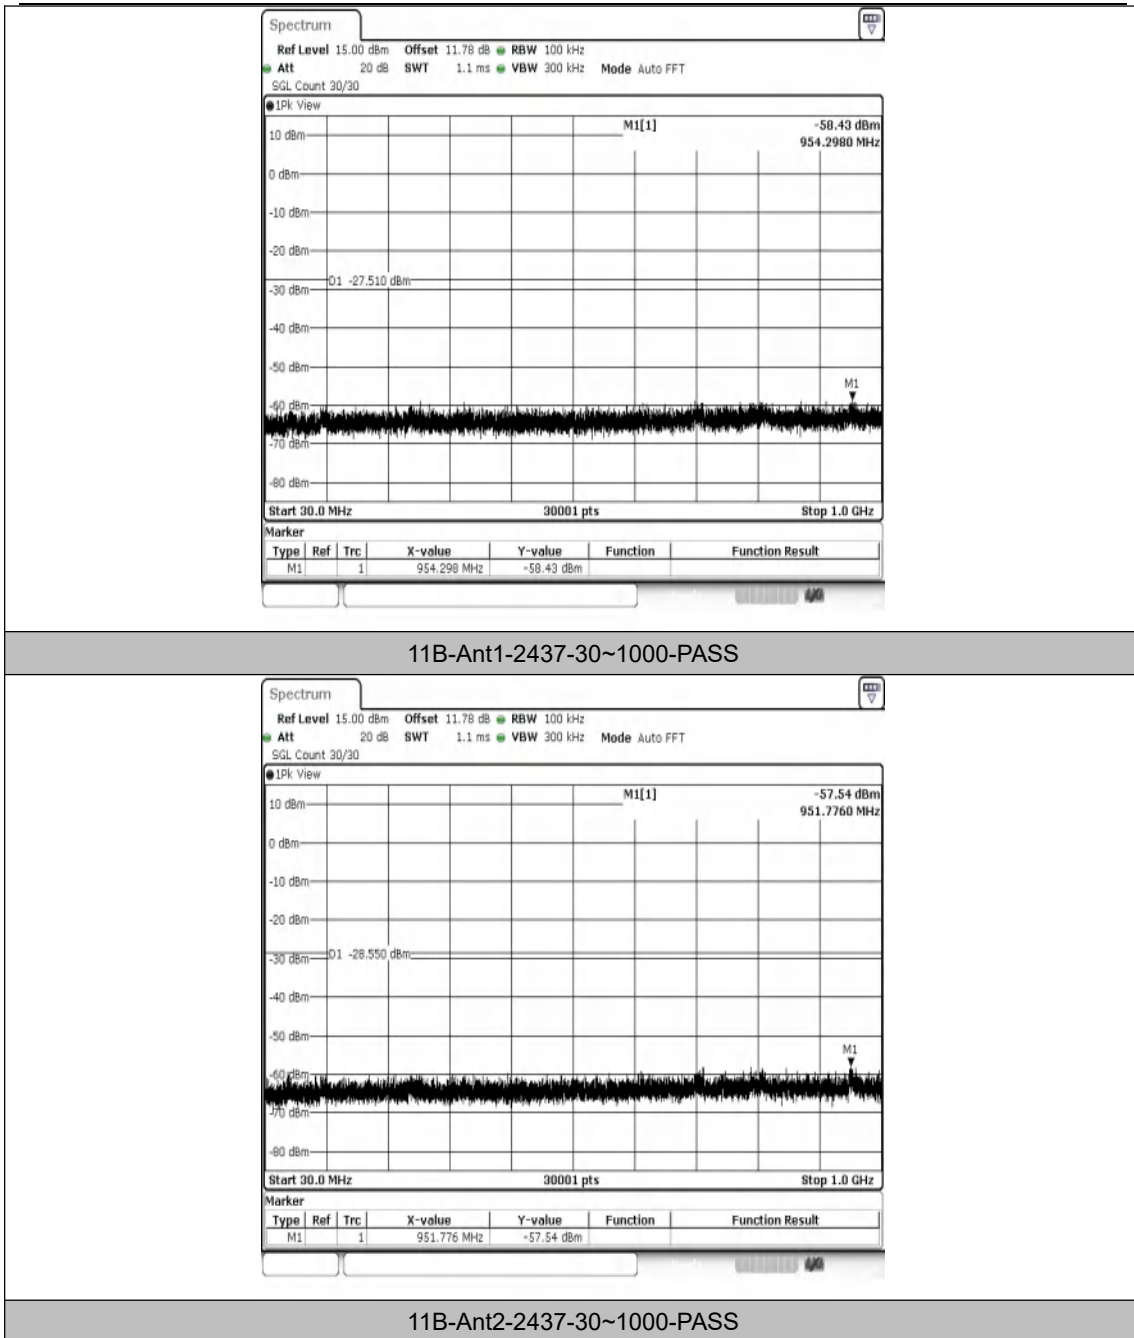


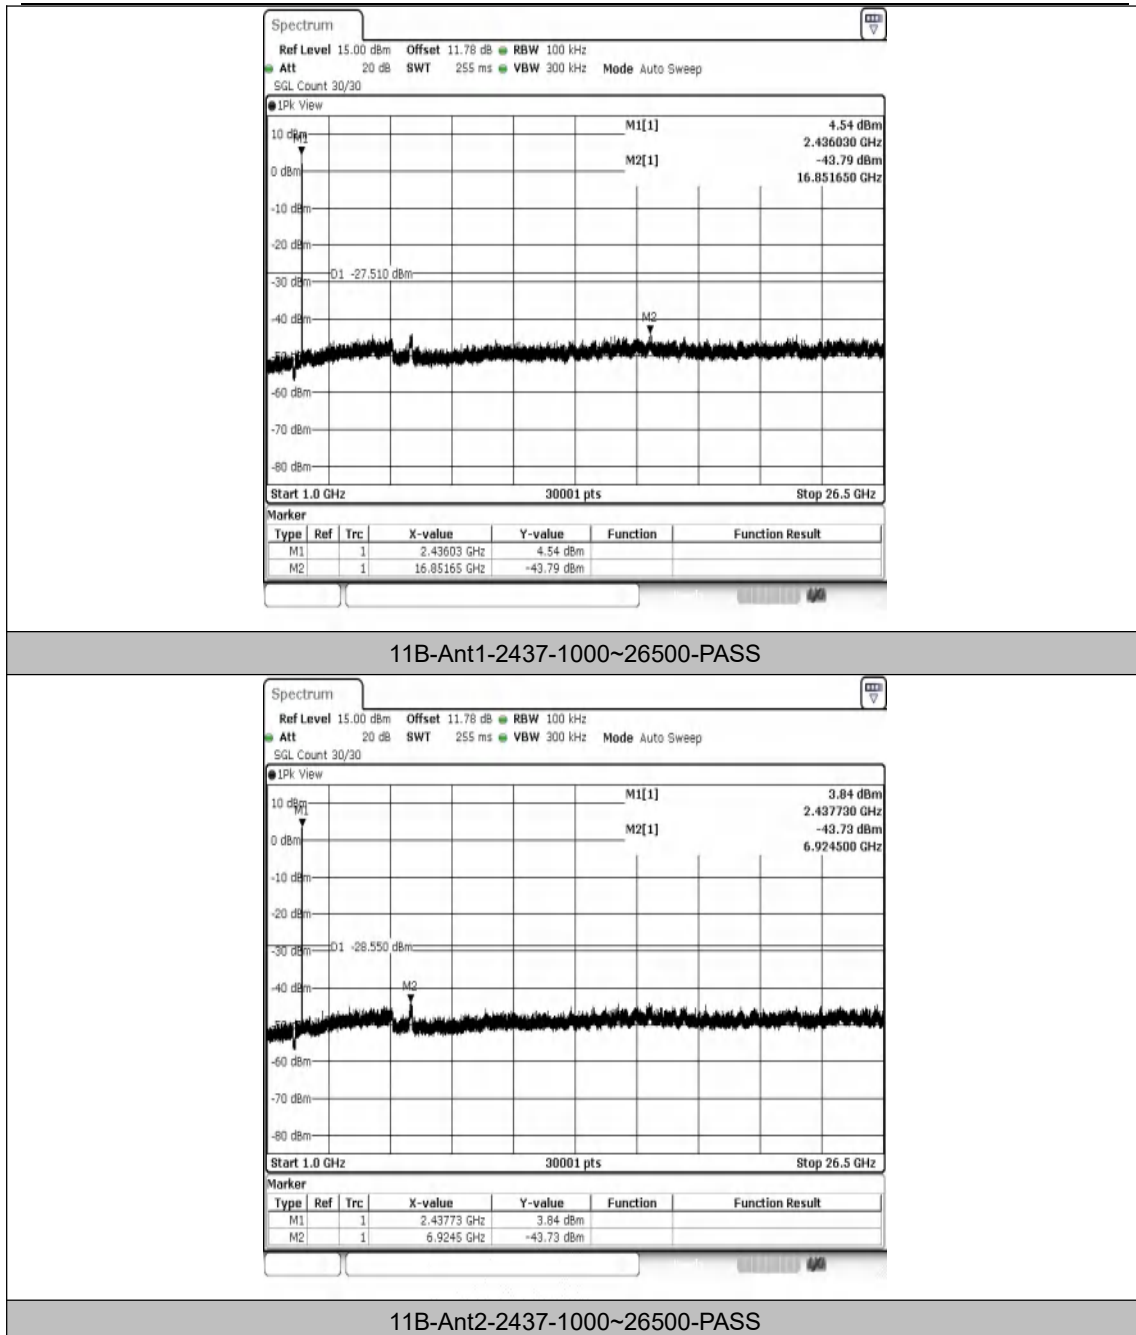

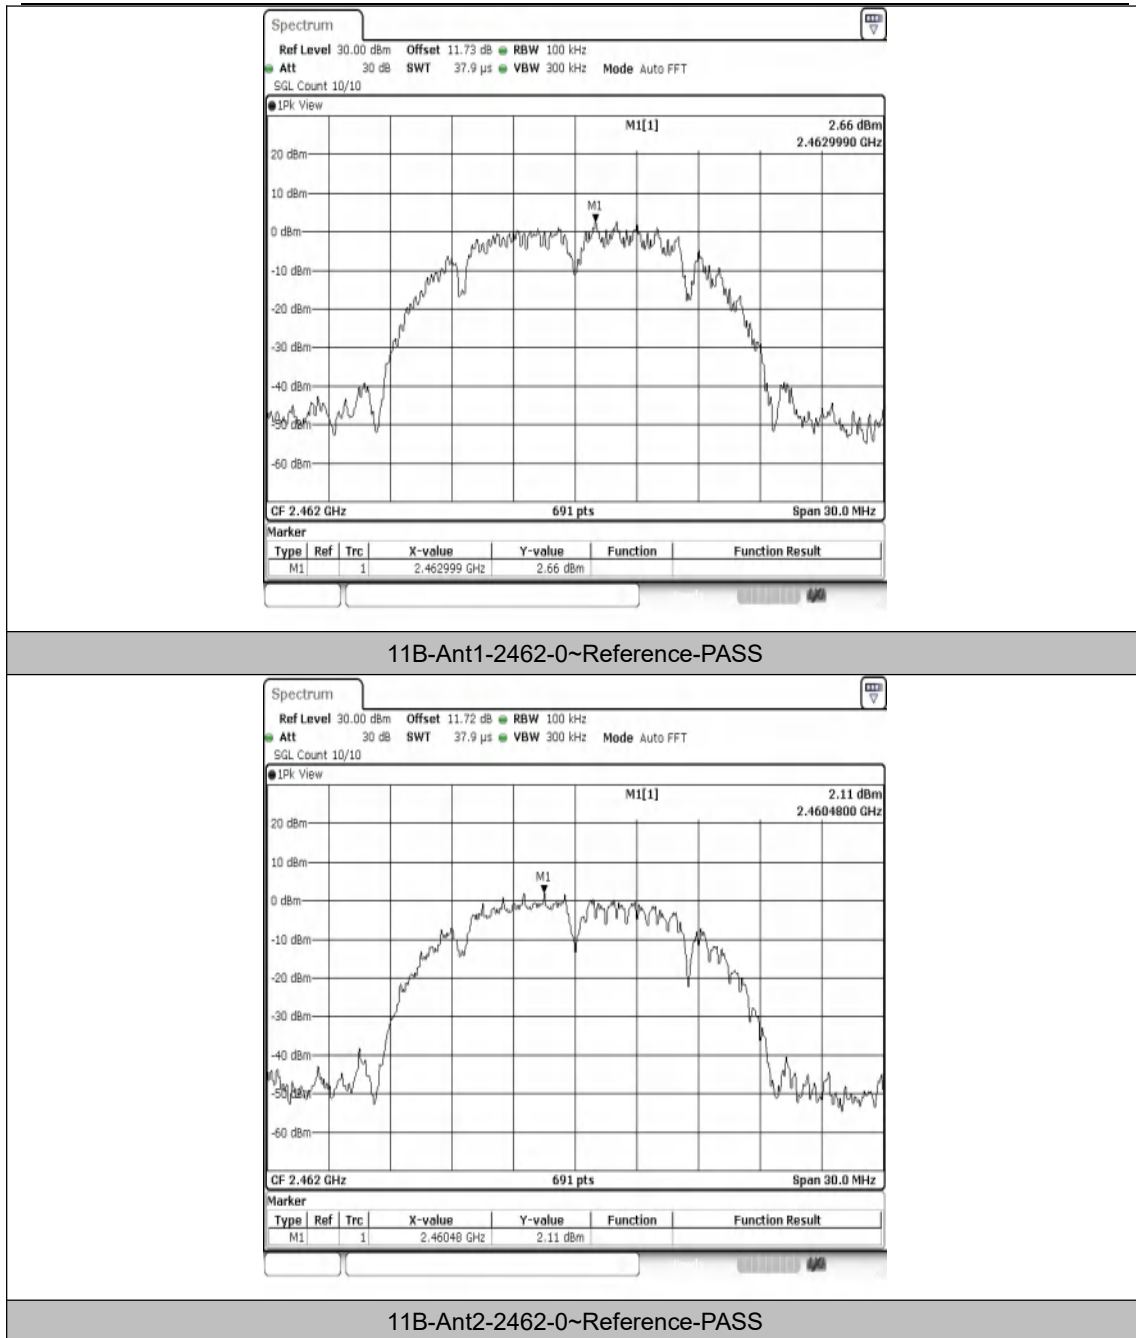

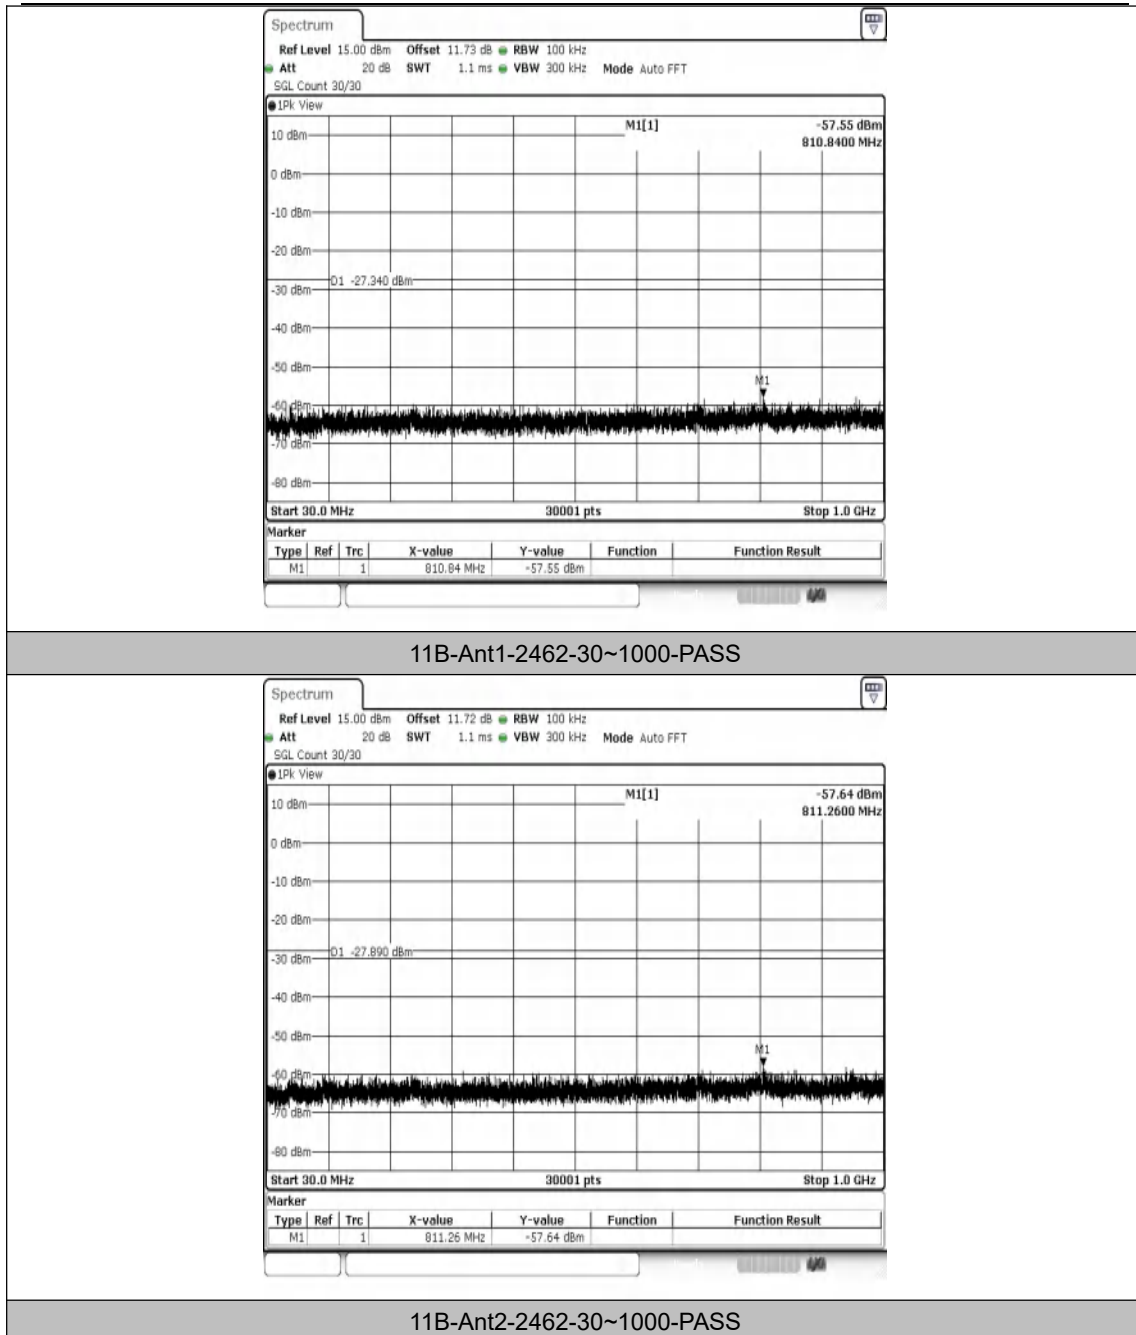

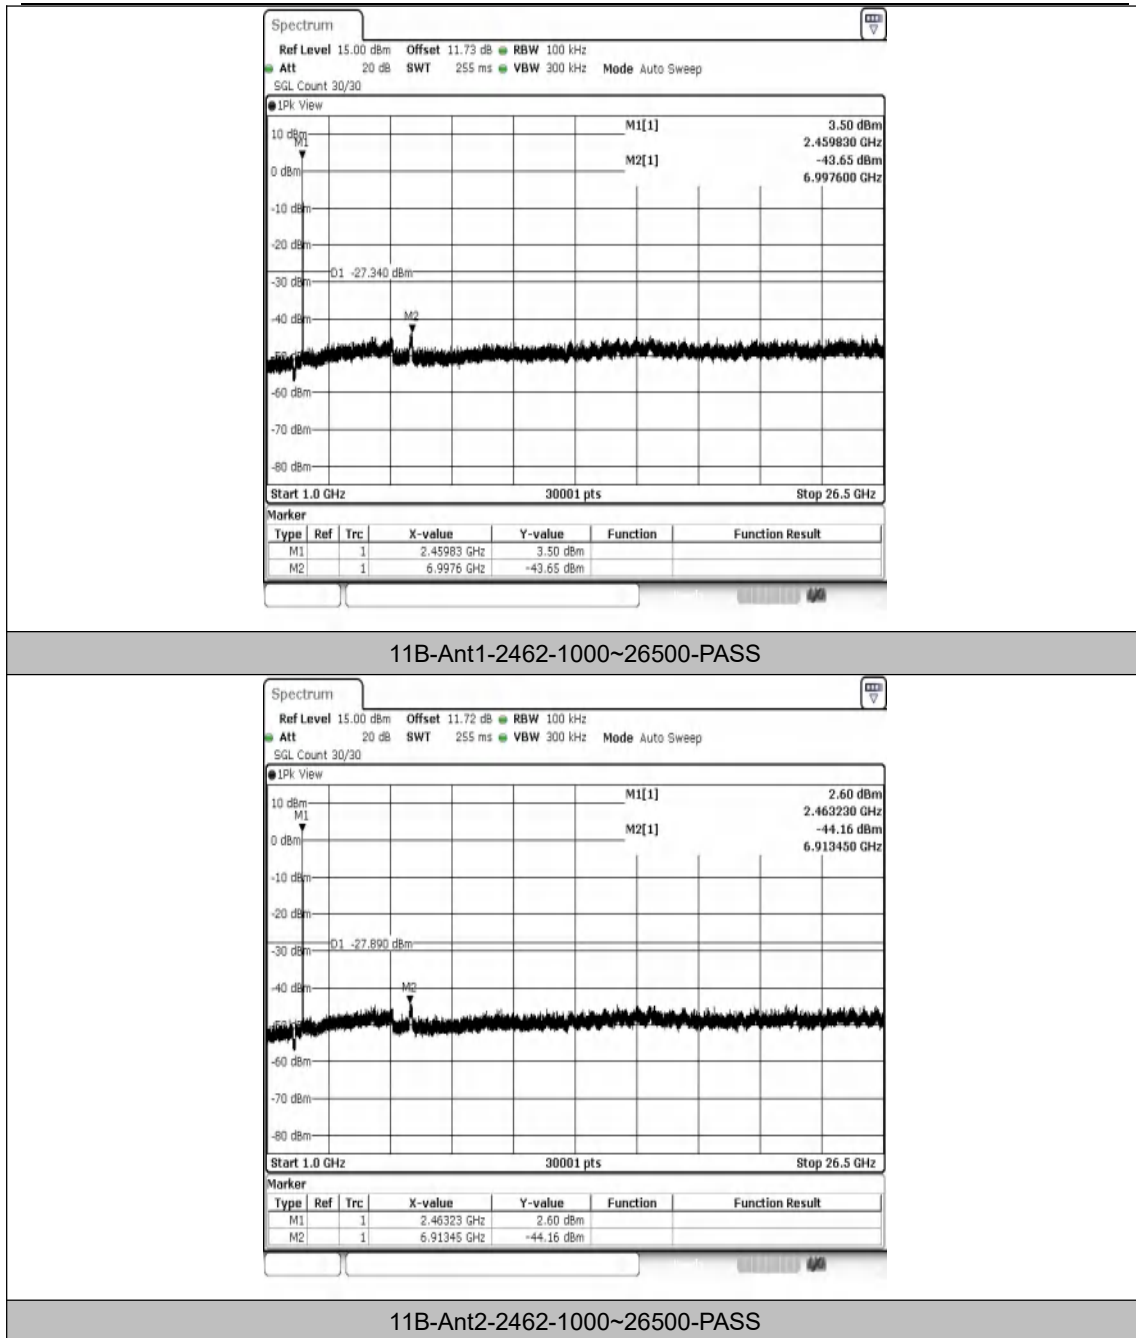


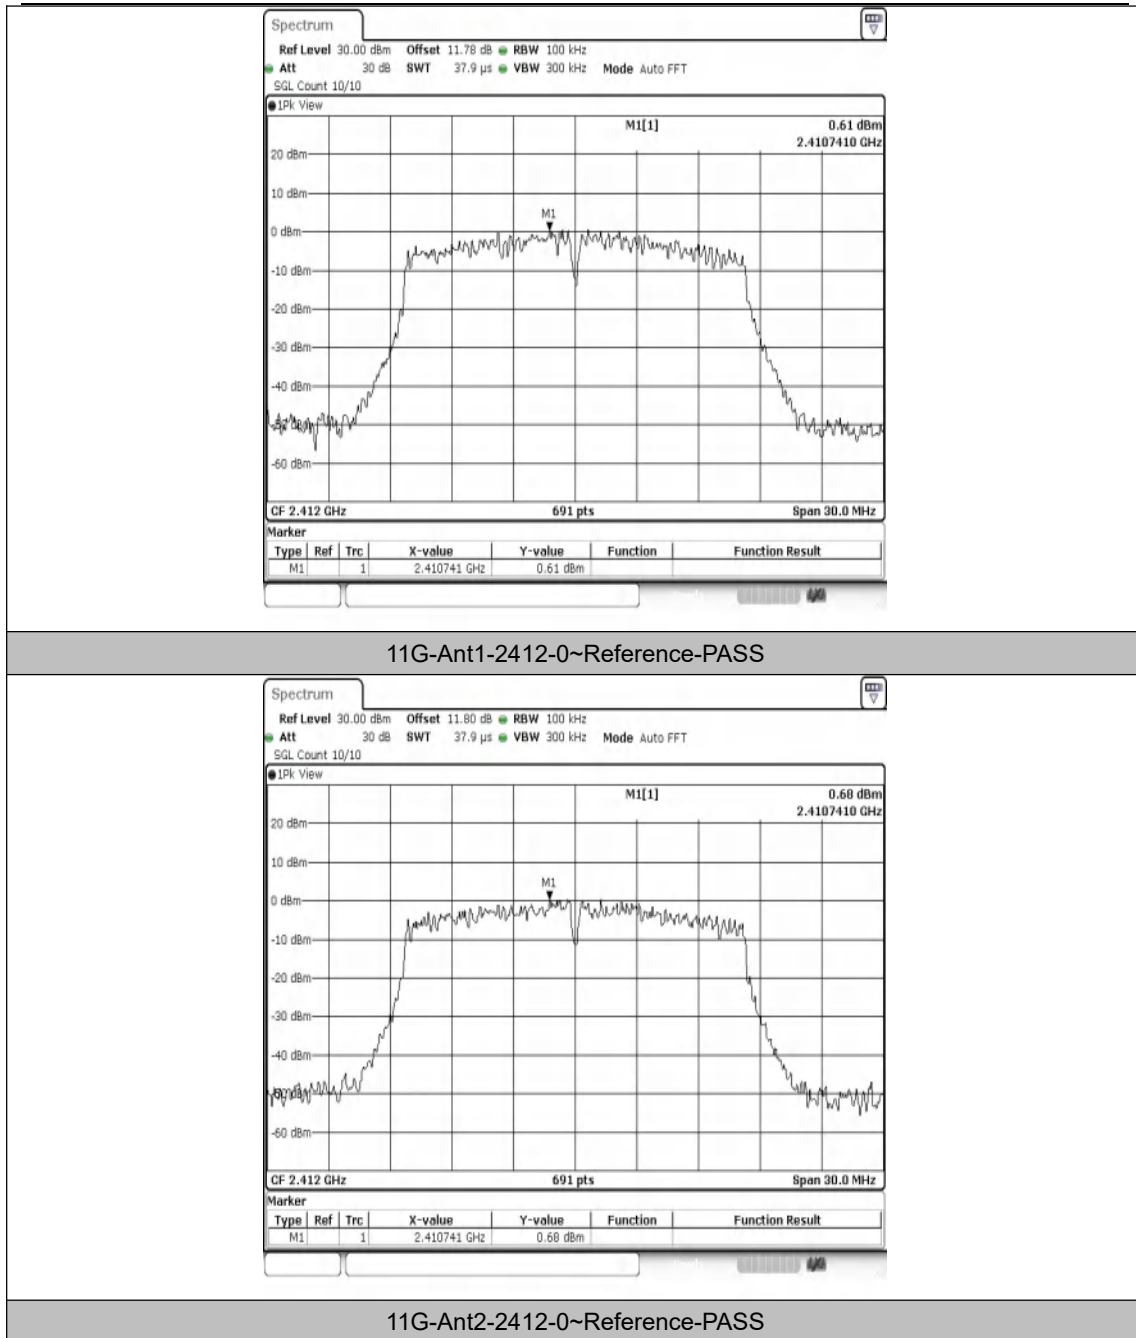


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

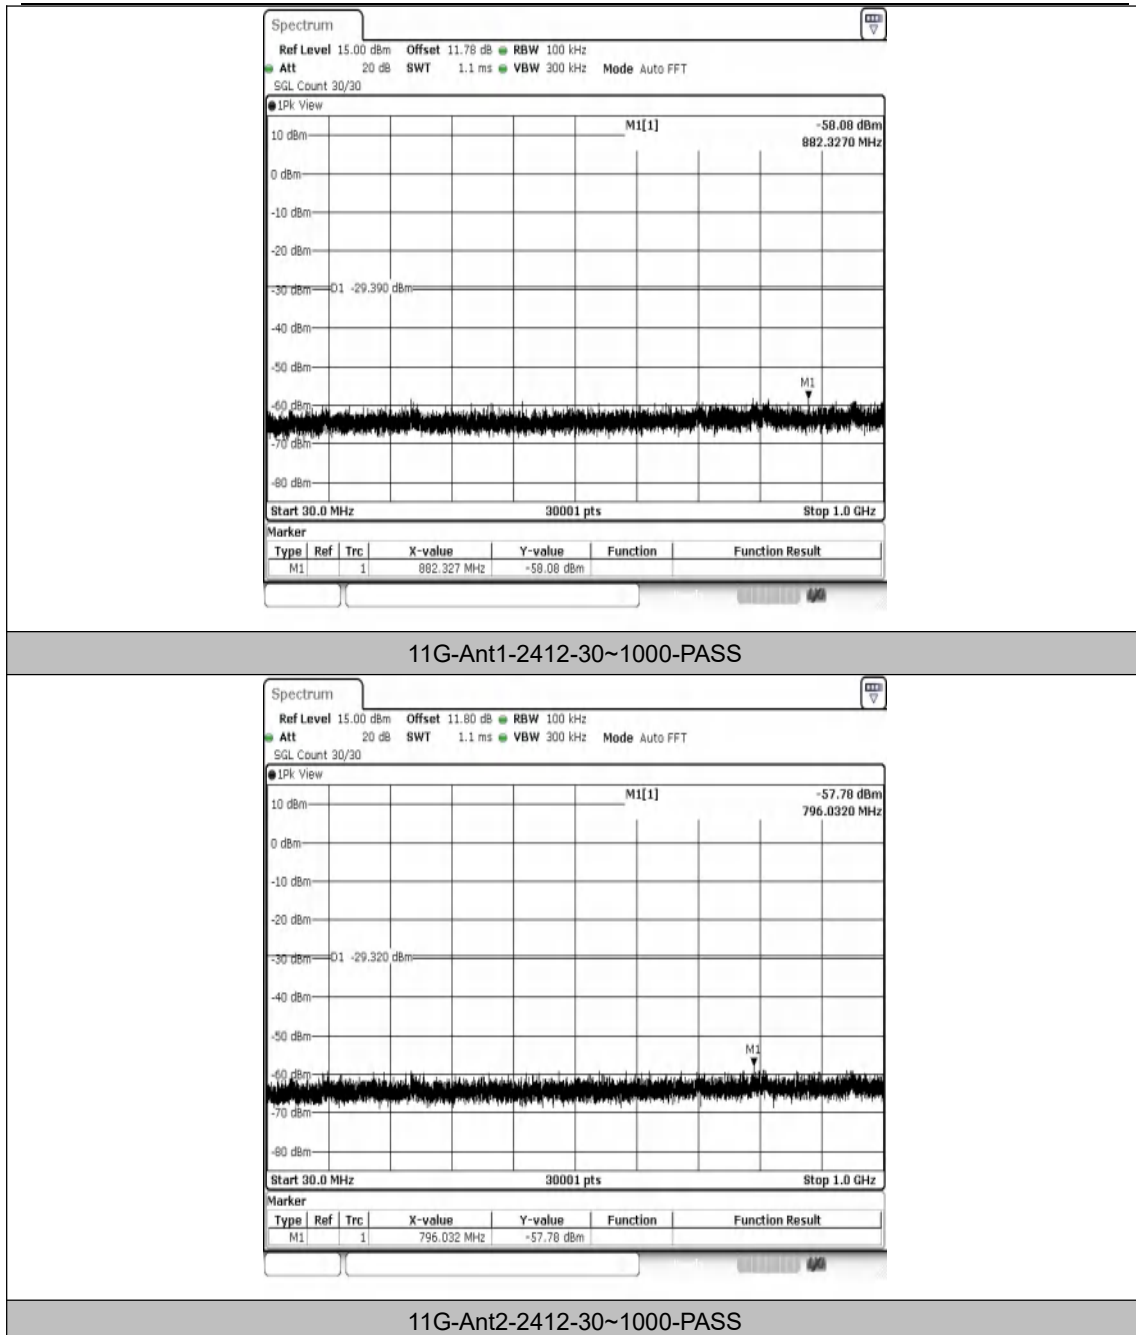


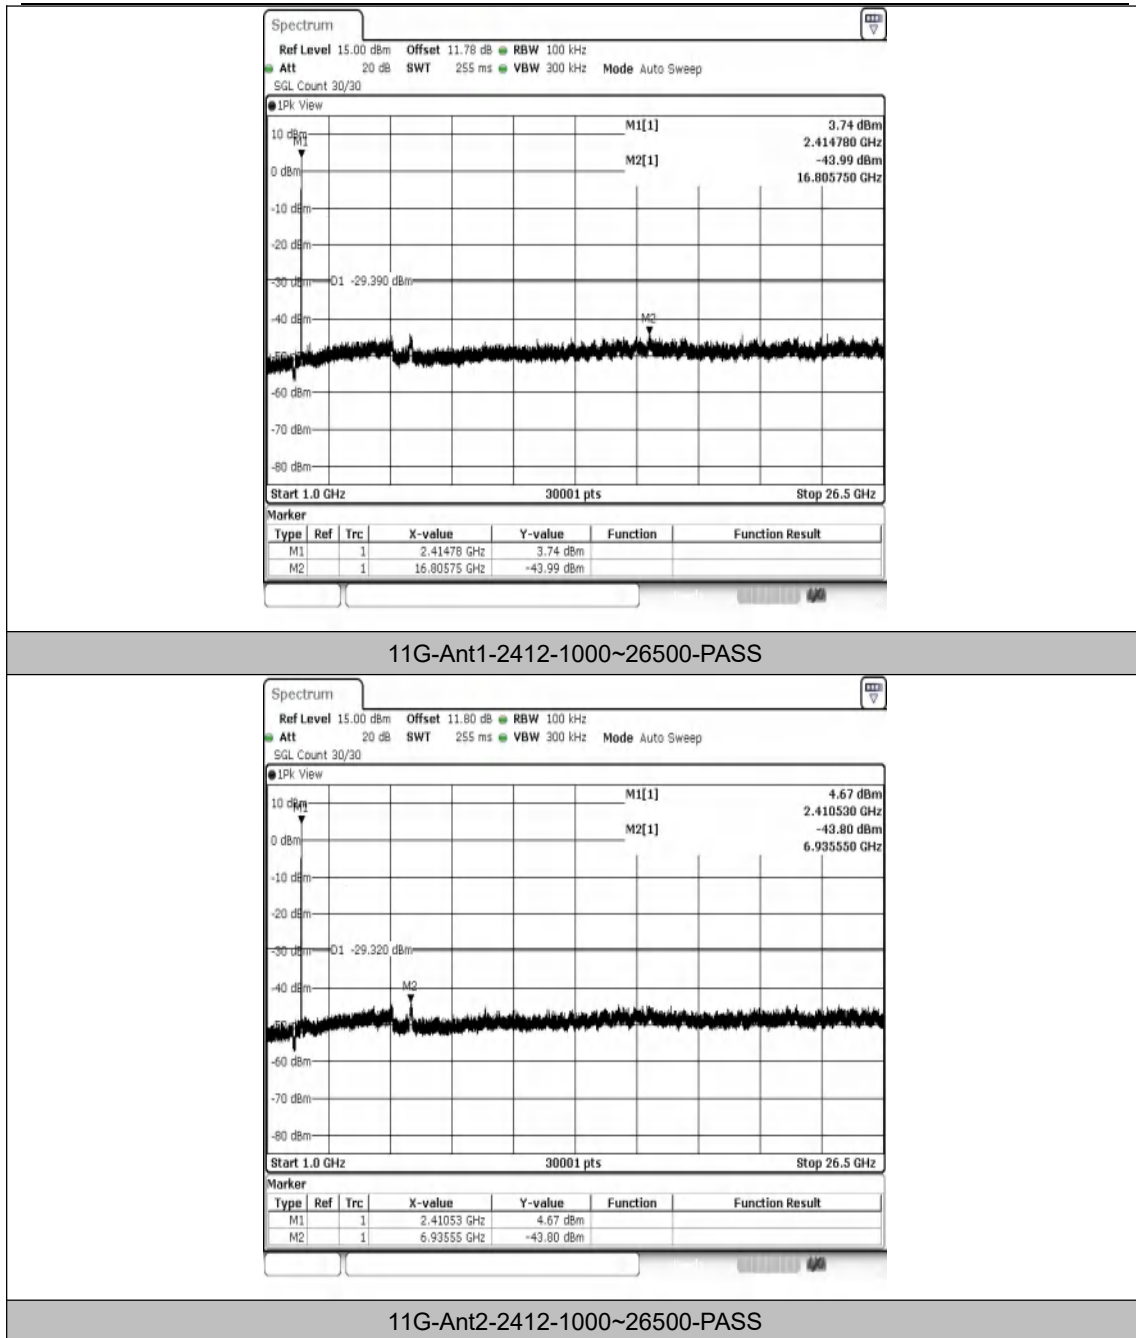


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

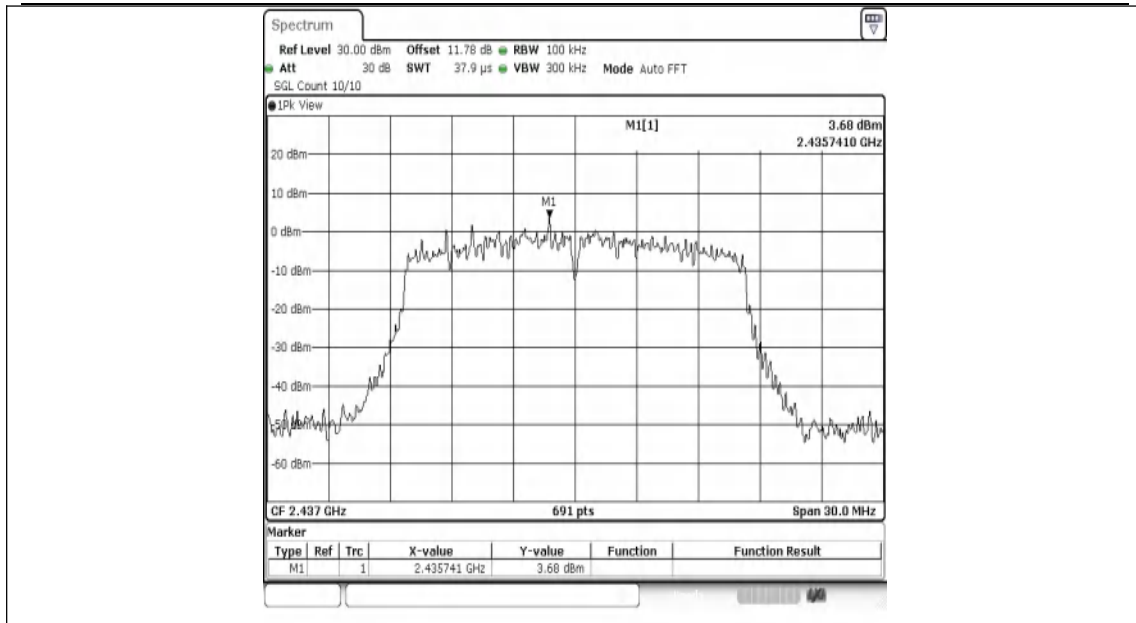



11G-Ant1-2437-0~Reference-PASS

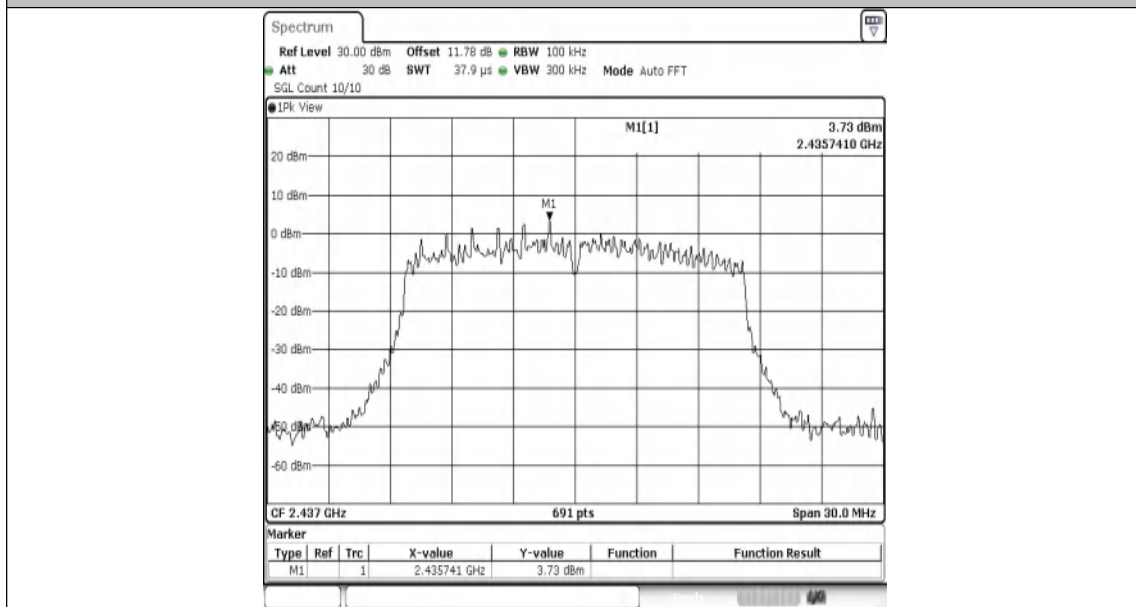



11G-Ant2-2437-0~Reference-PASS

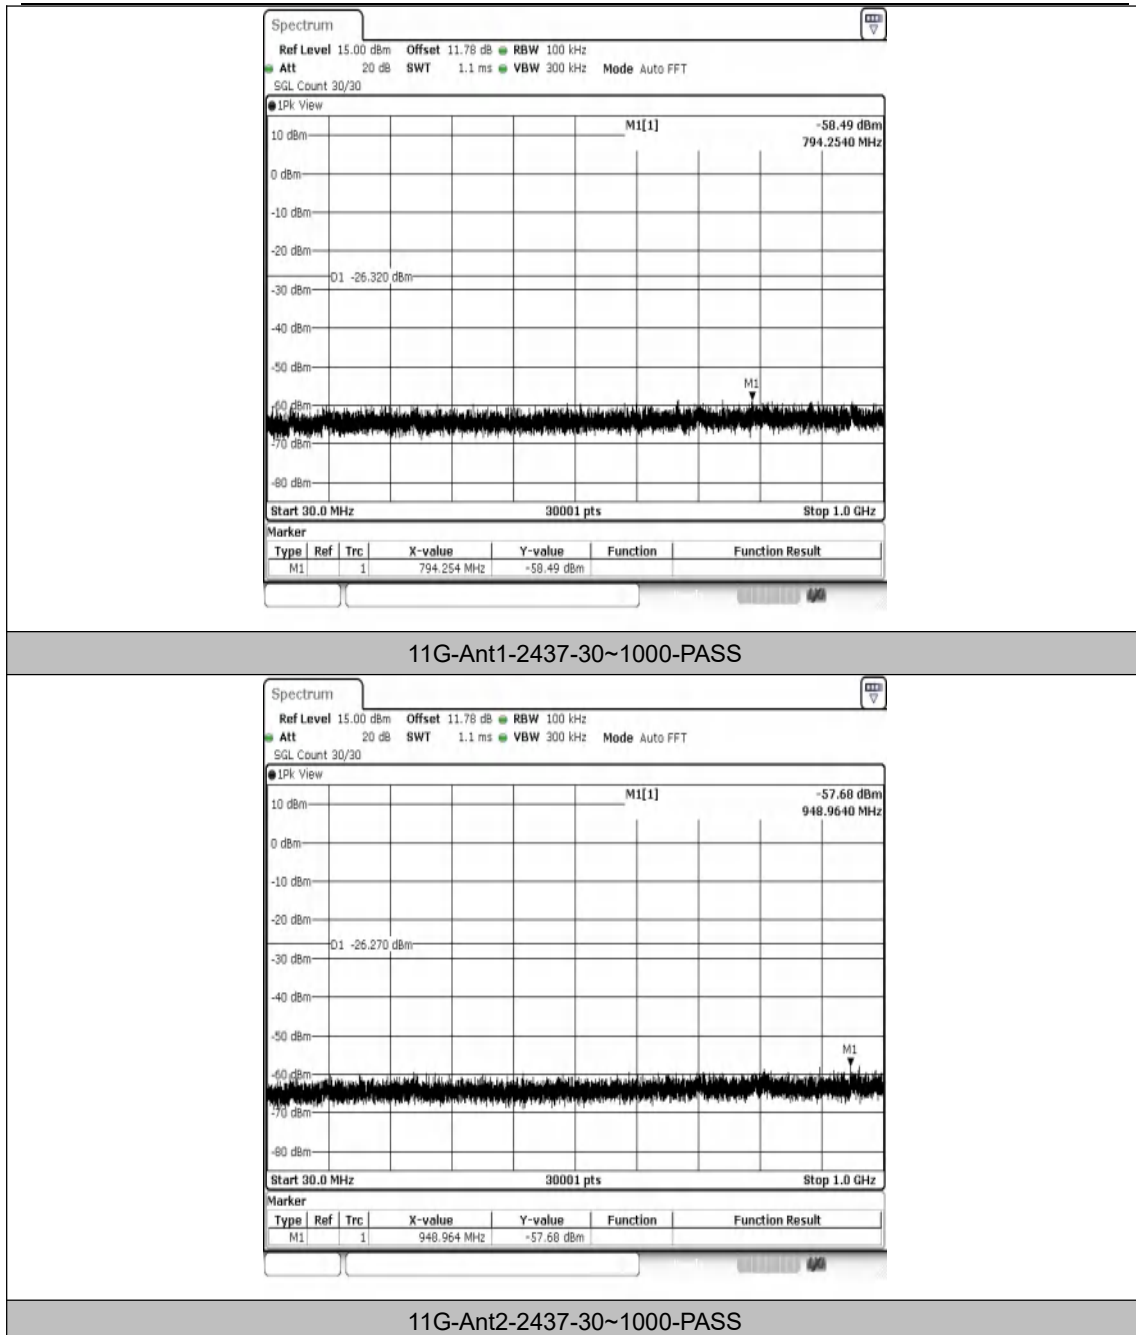


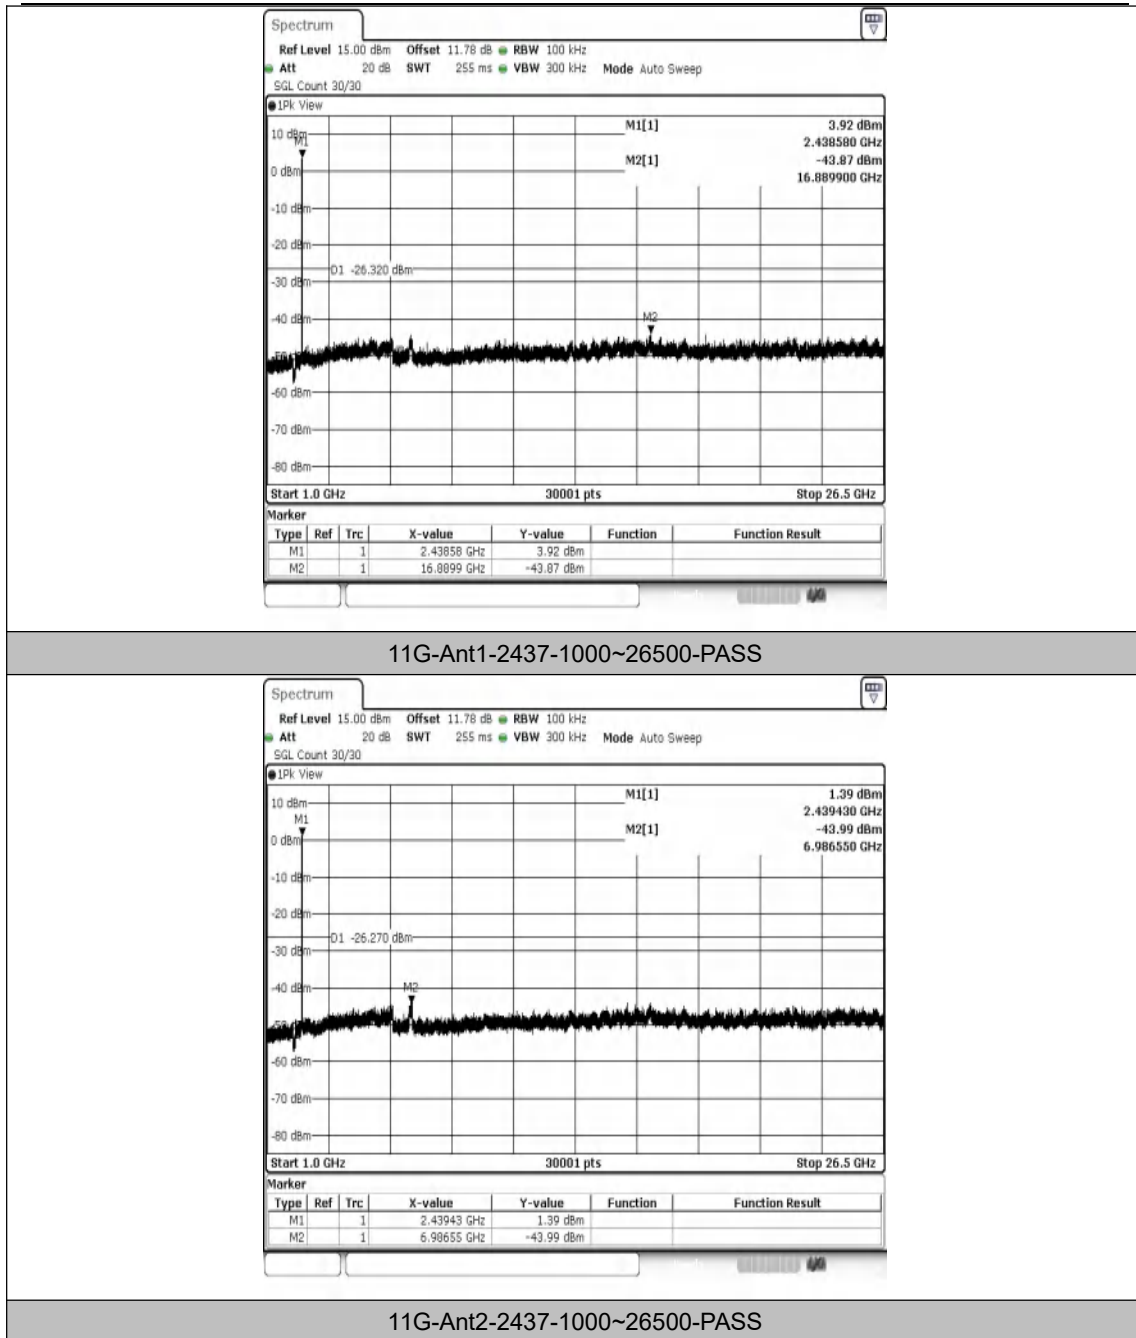

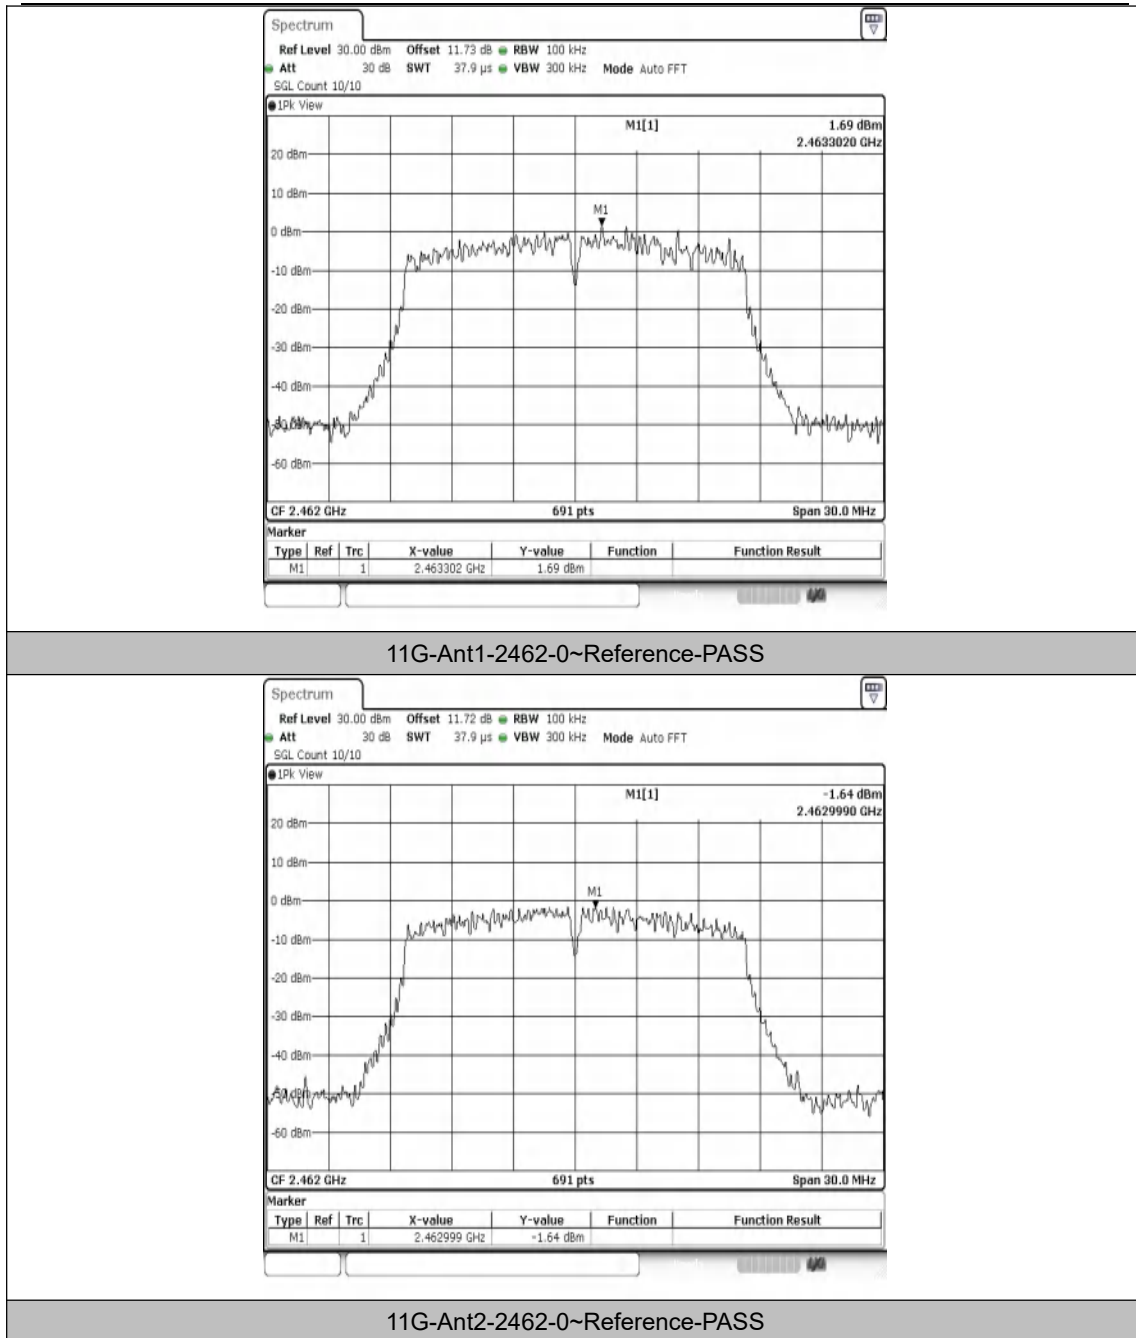


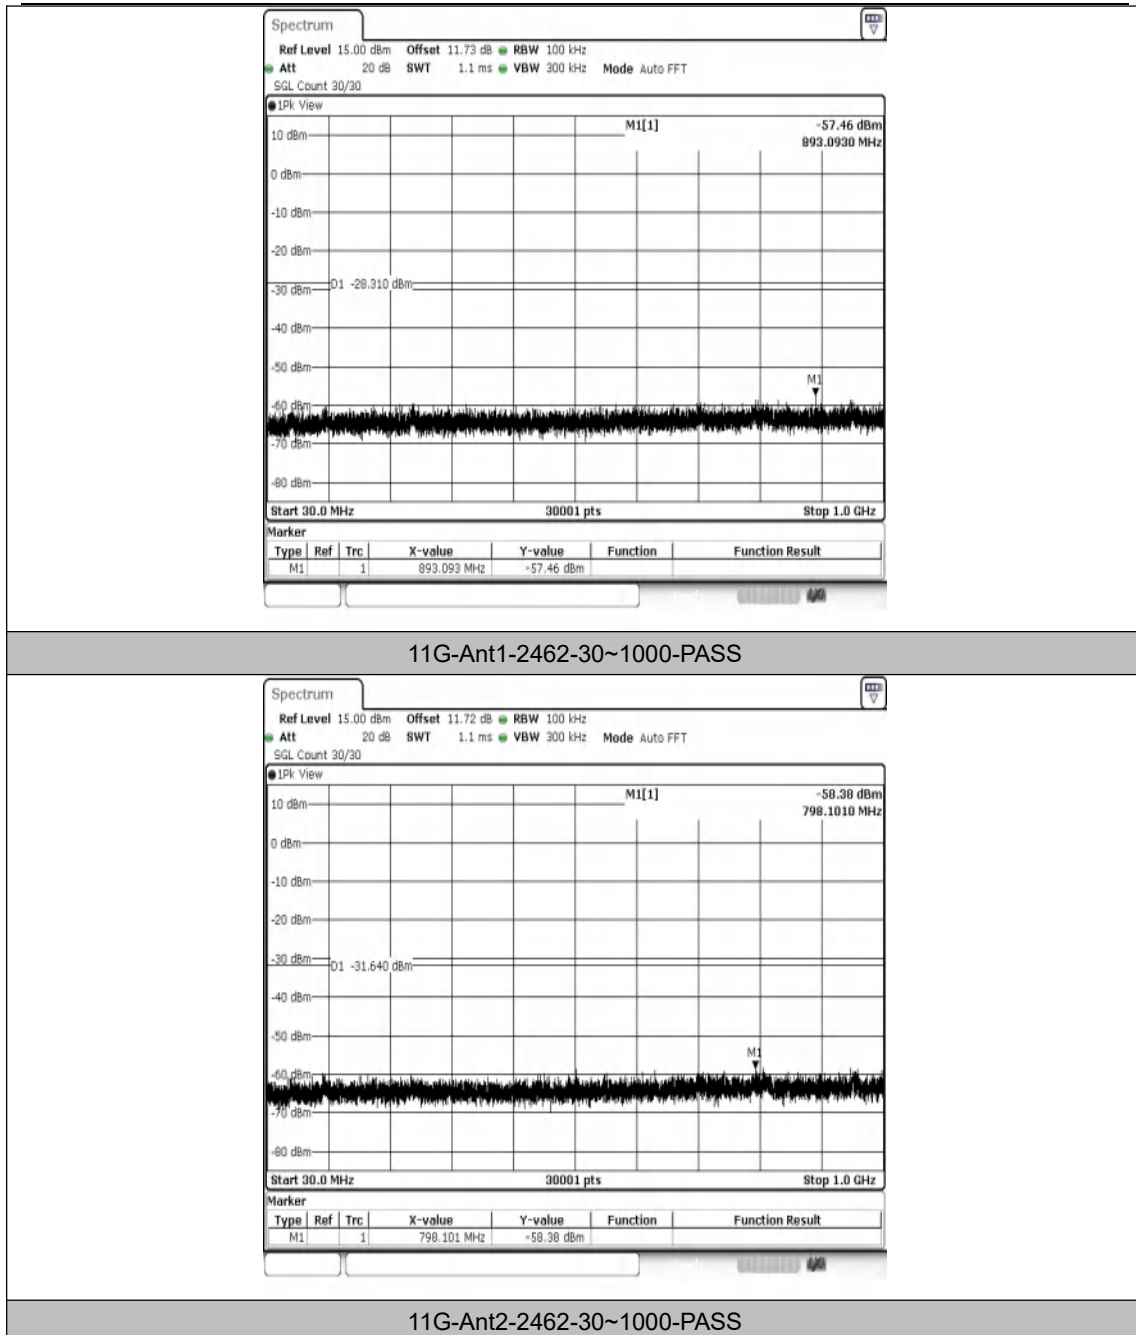

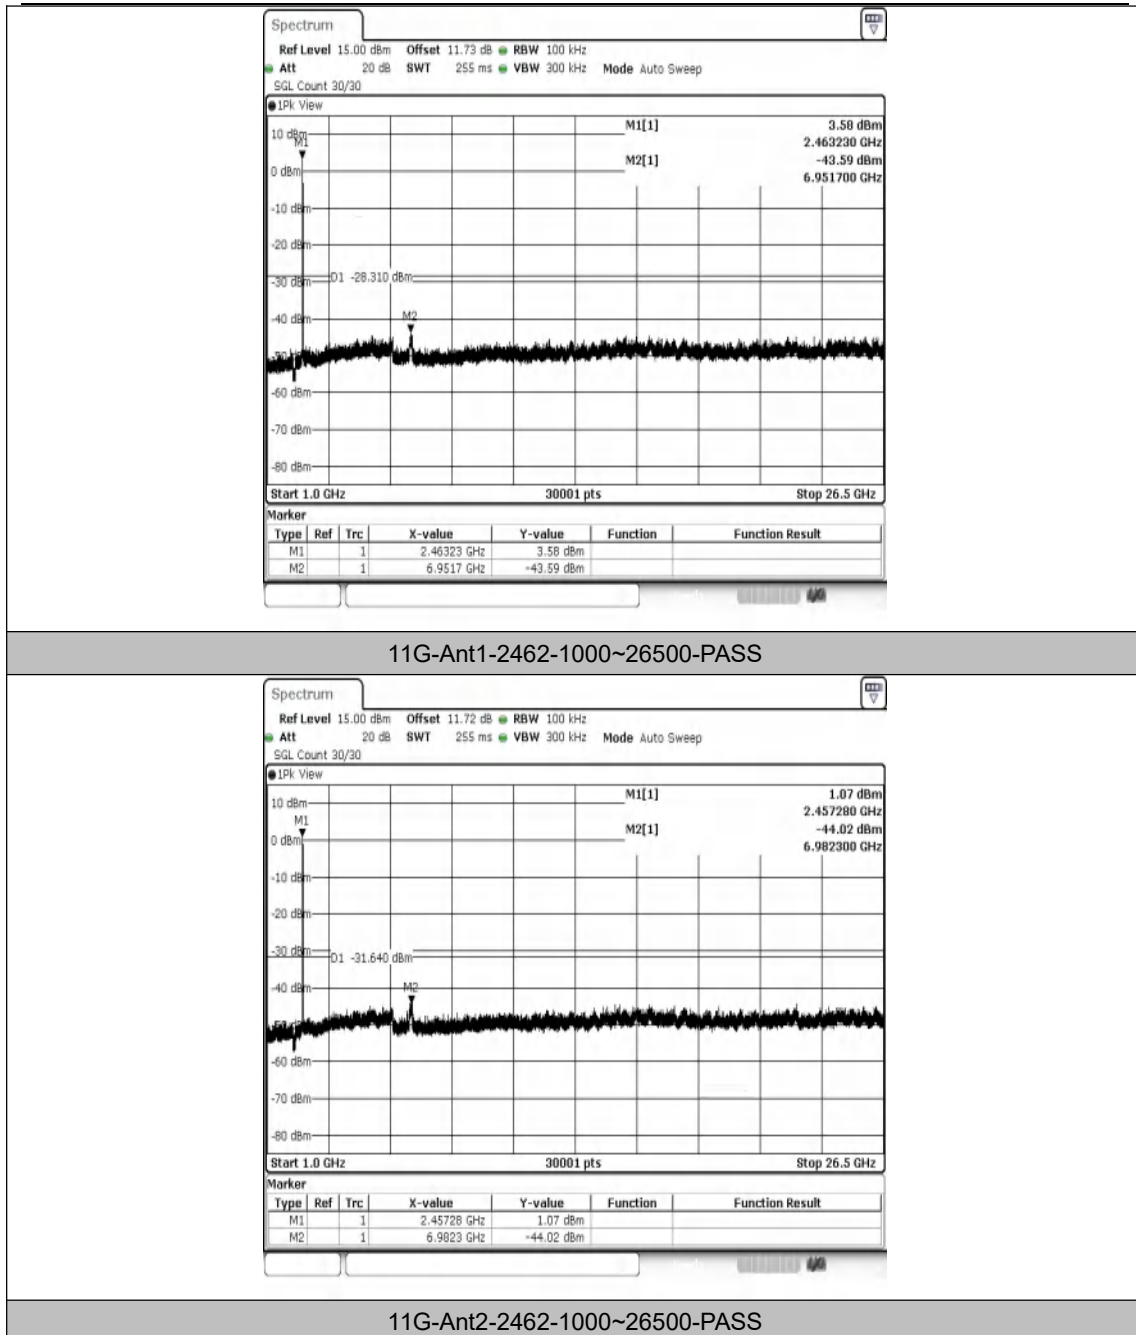


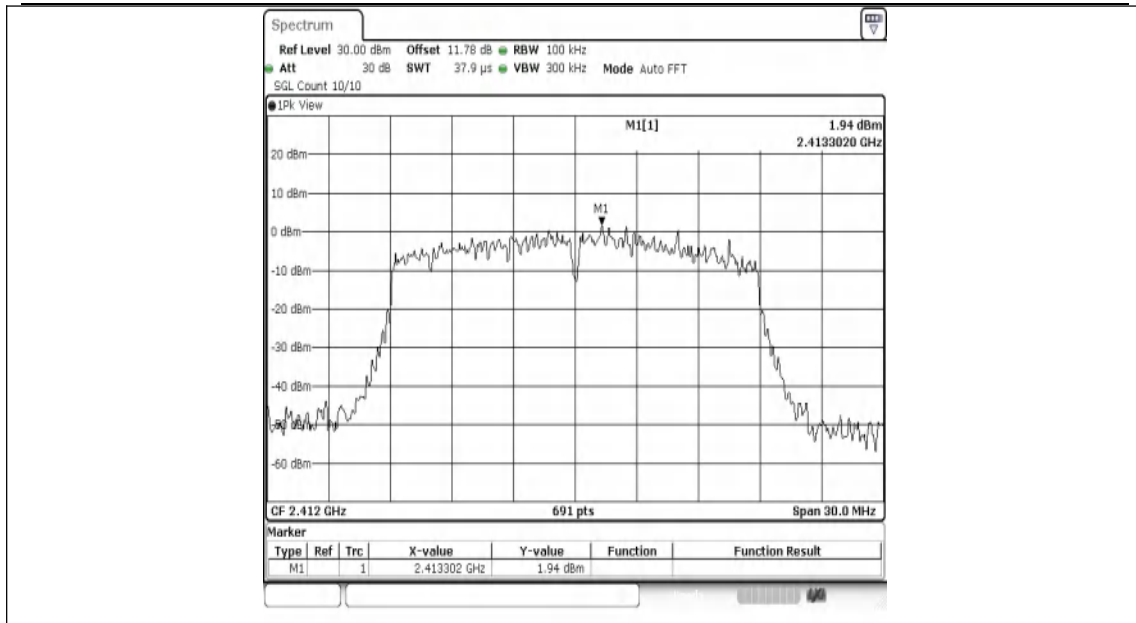



11N20MIMO-Ant1-2412-0~Reference-PASS

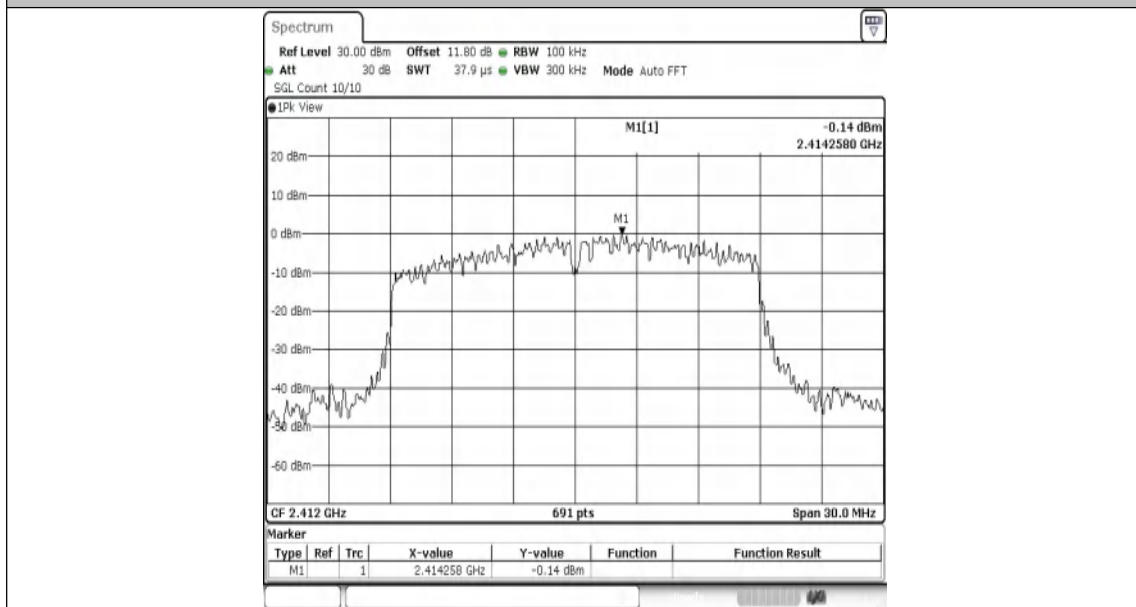


11N20MIMO-Ant2-2412-0~Reference-PASS

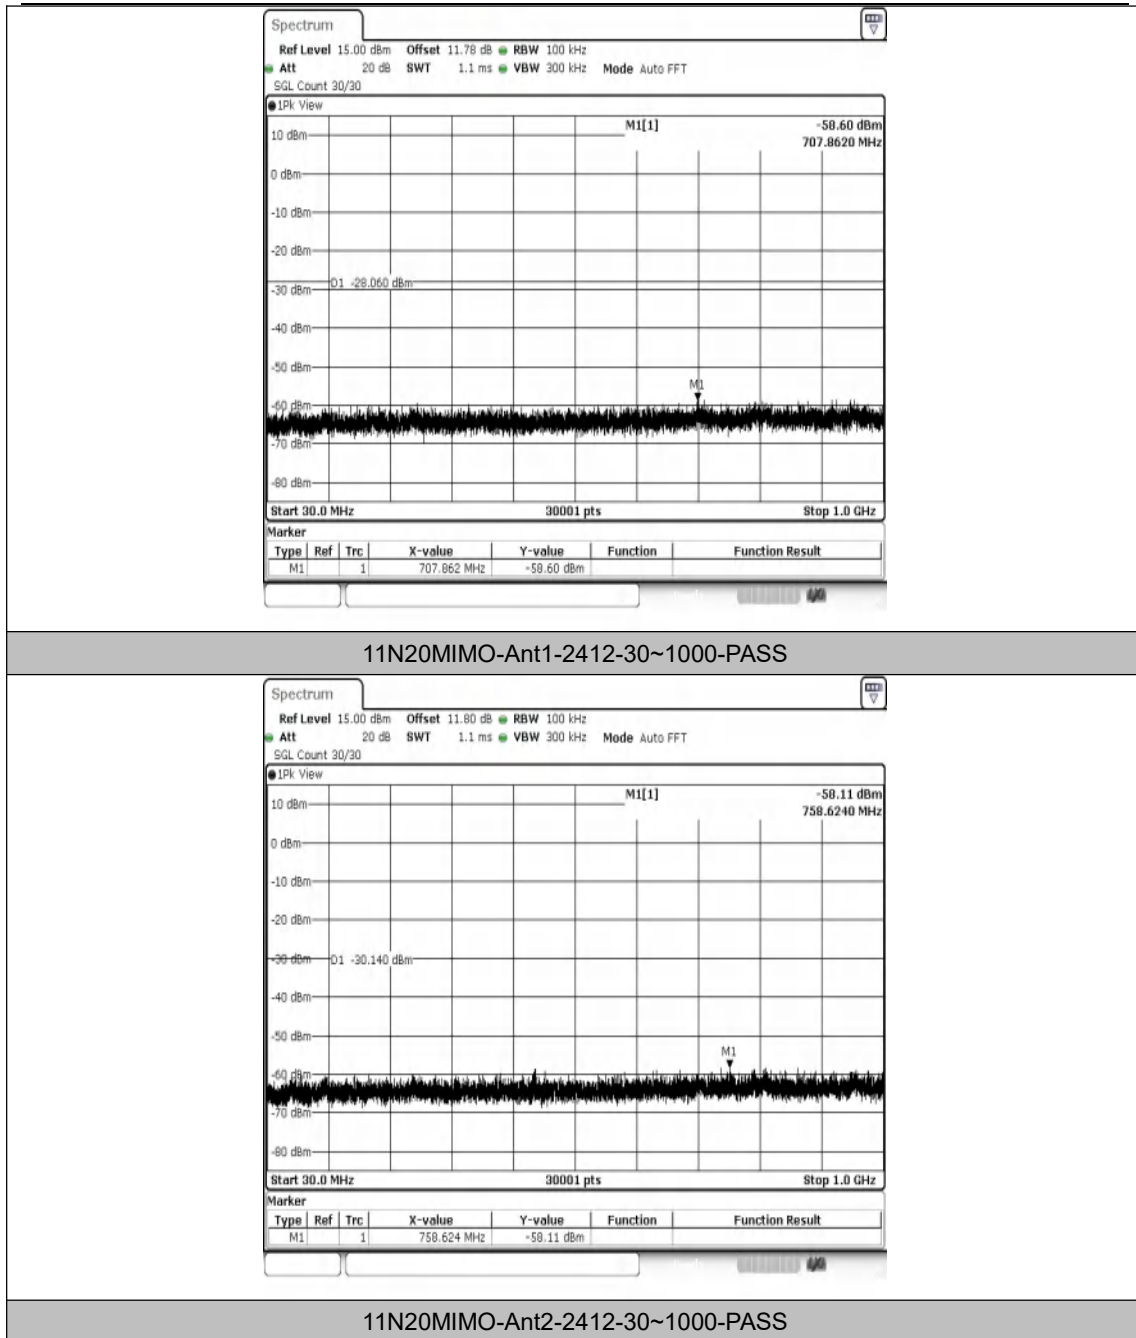

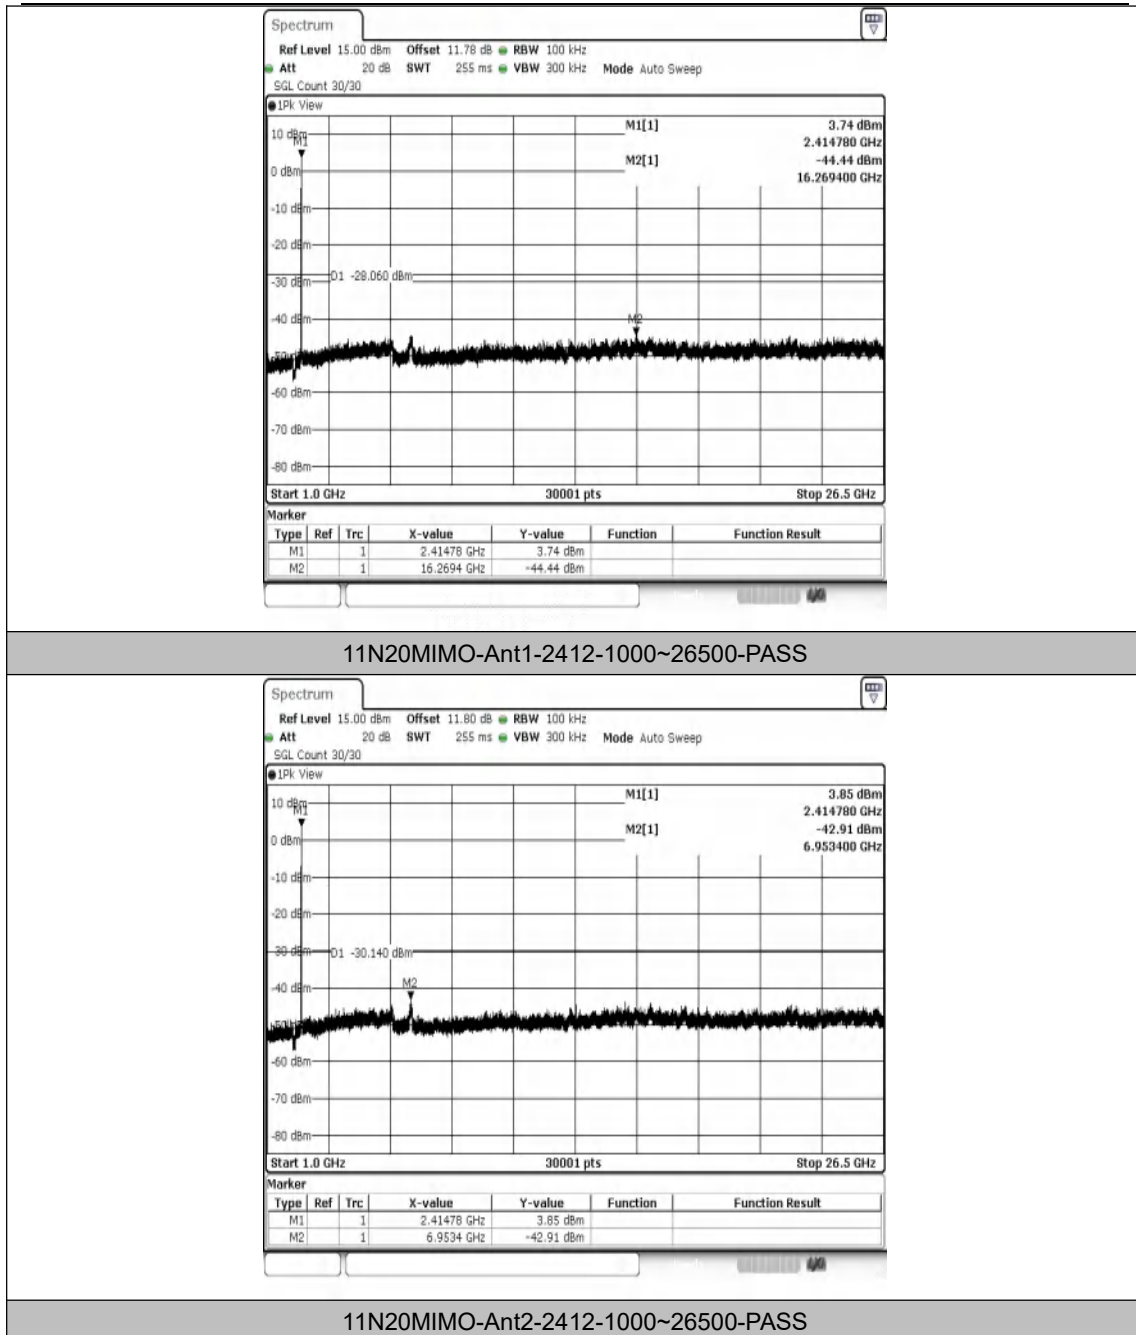


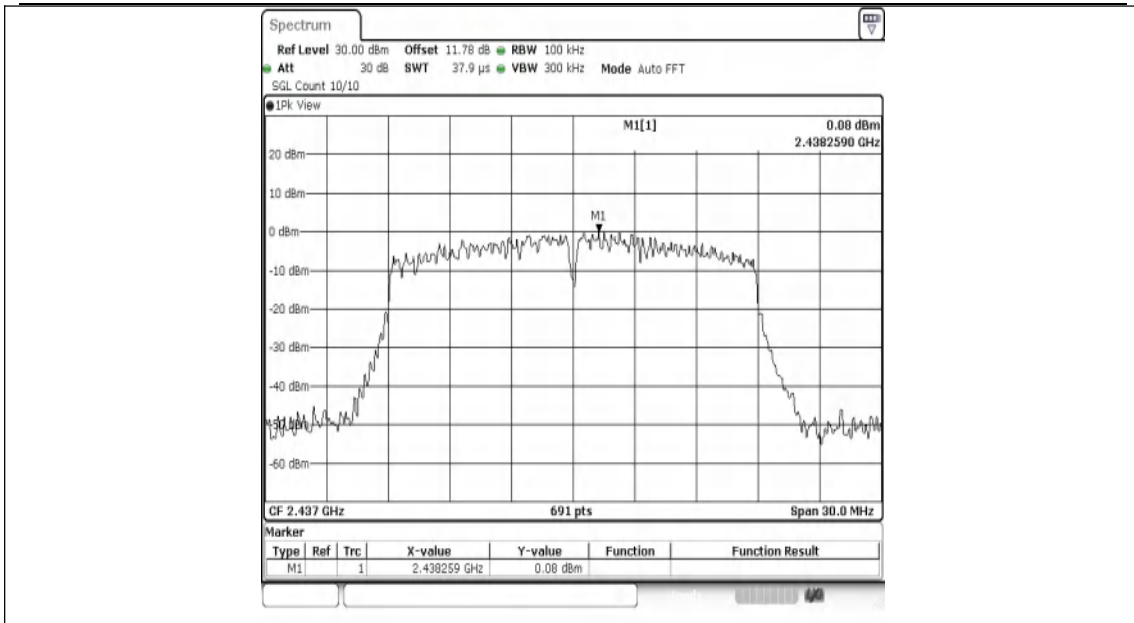



11N20MIMO-Ant1-2437-0~Reference-PASS

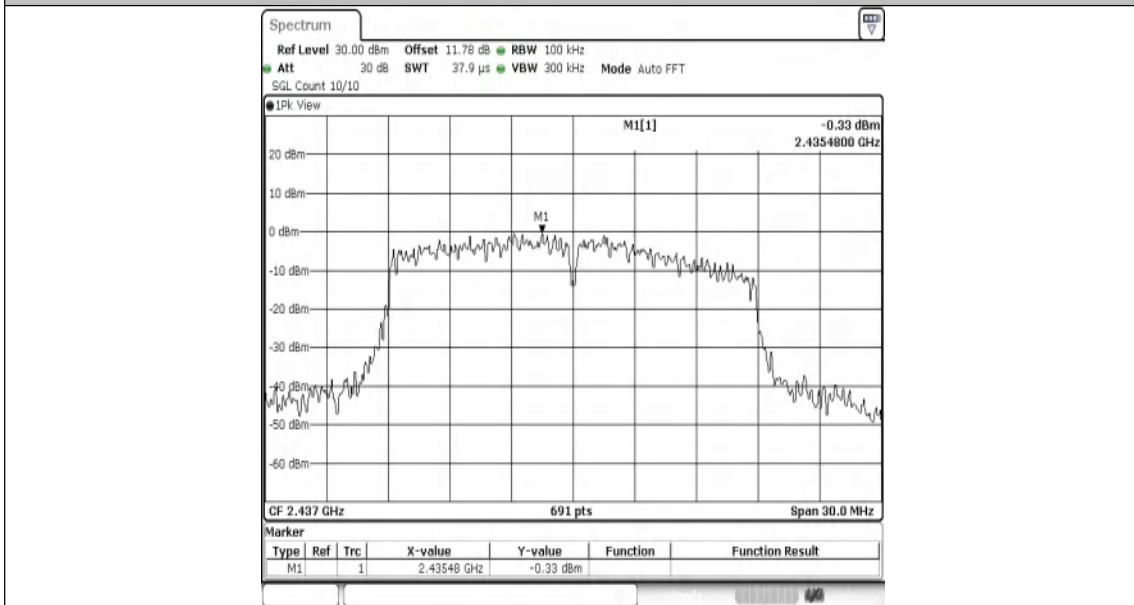


11N20MIMO-Ant2-2437-0~Reference-PASS

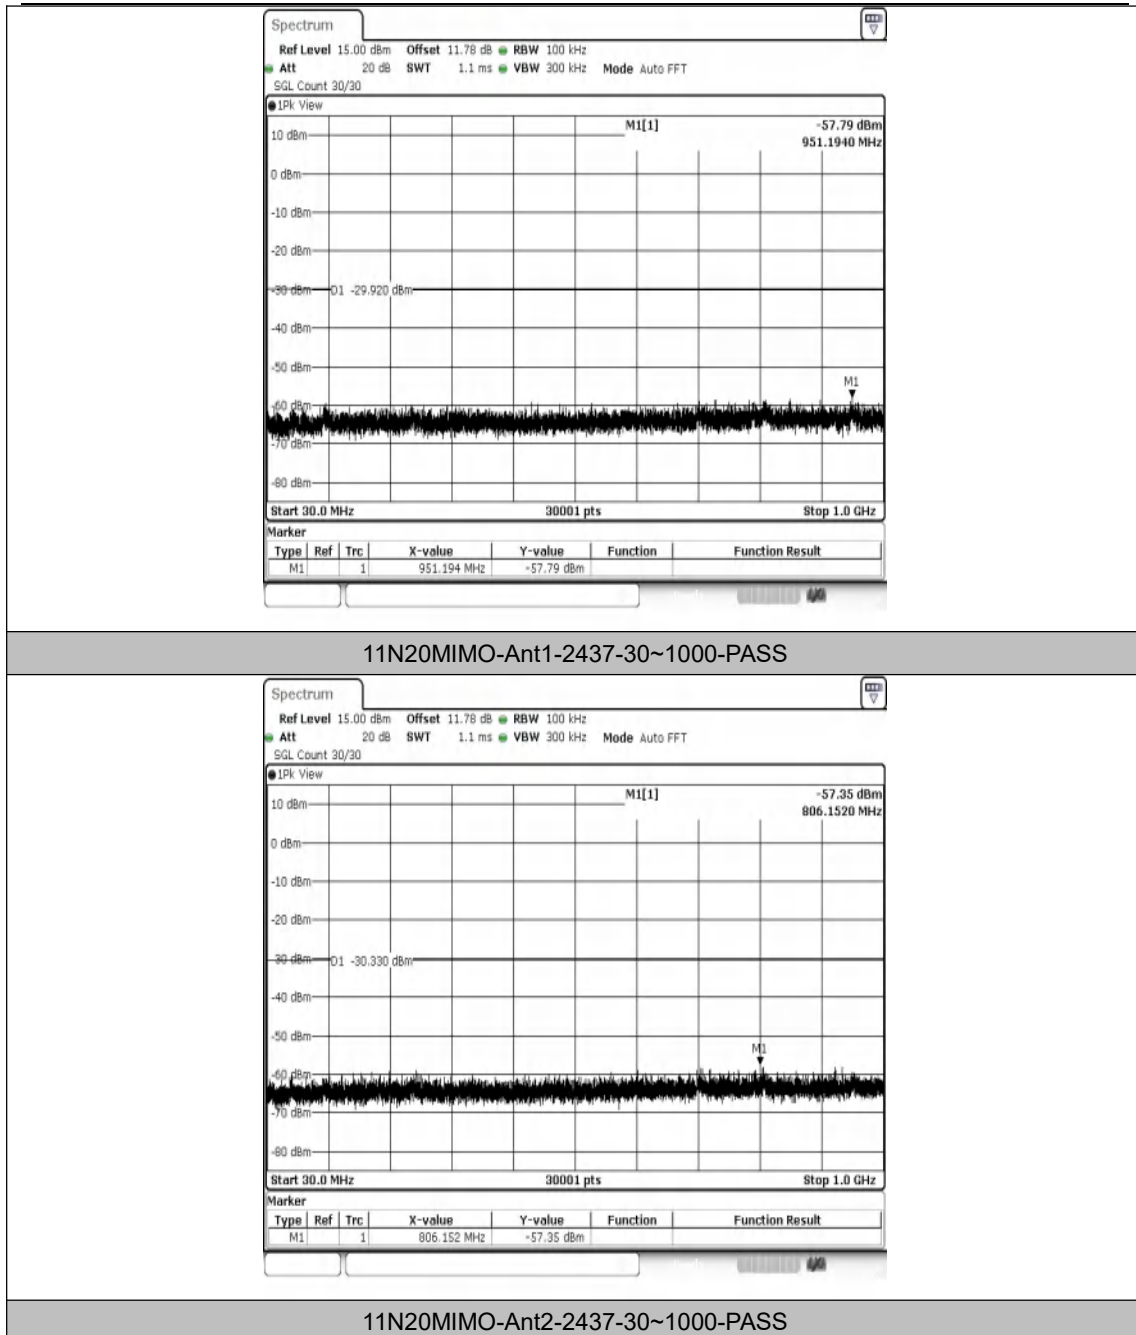

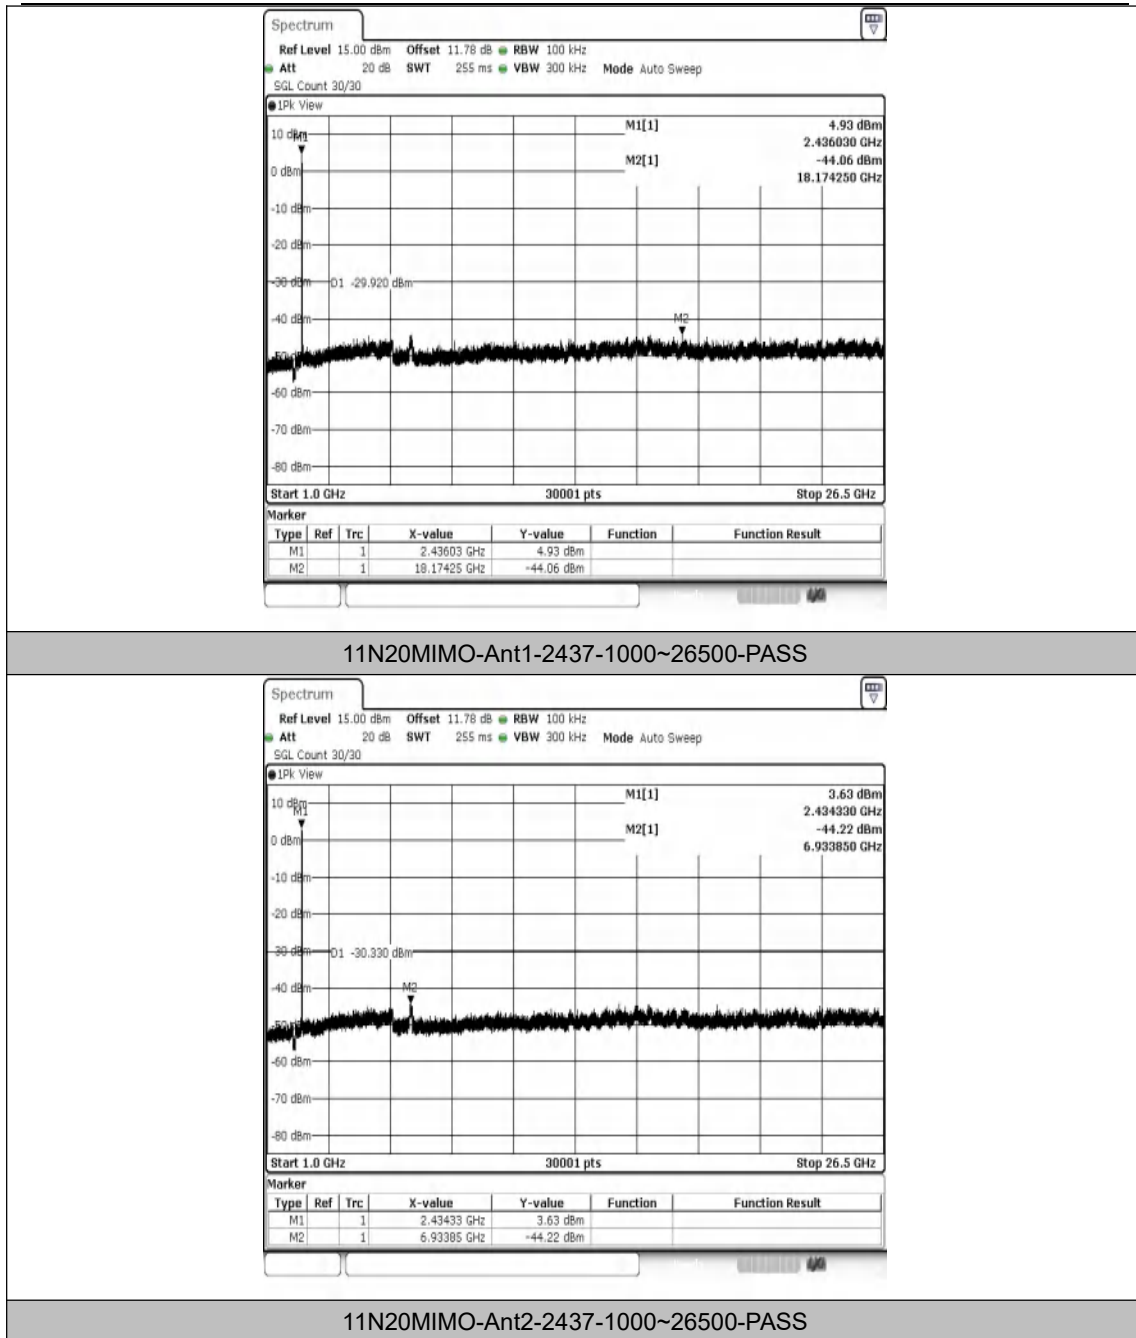


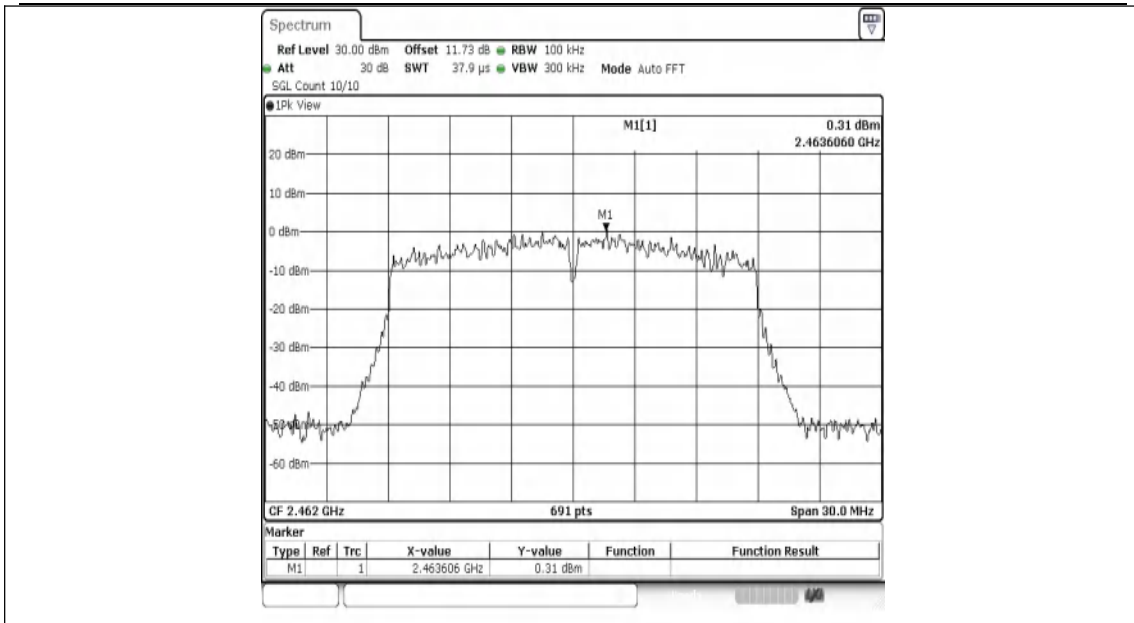



11N20MIMO-Ant1-2462-0~Reference-PASS

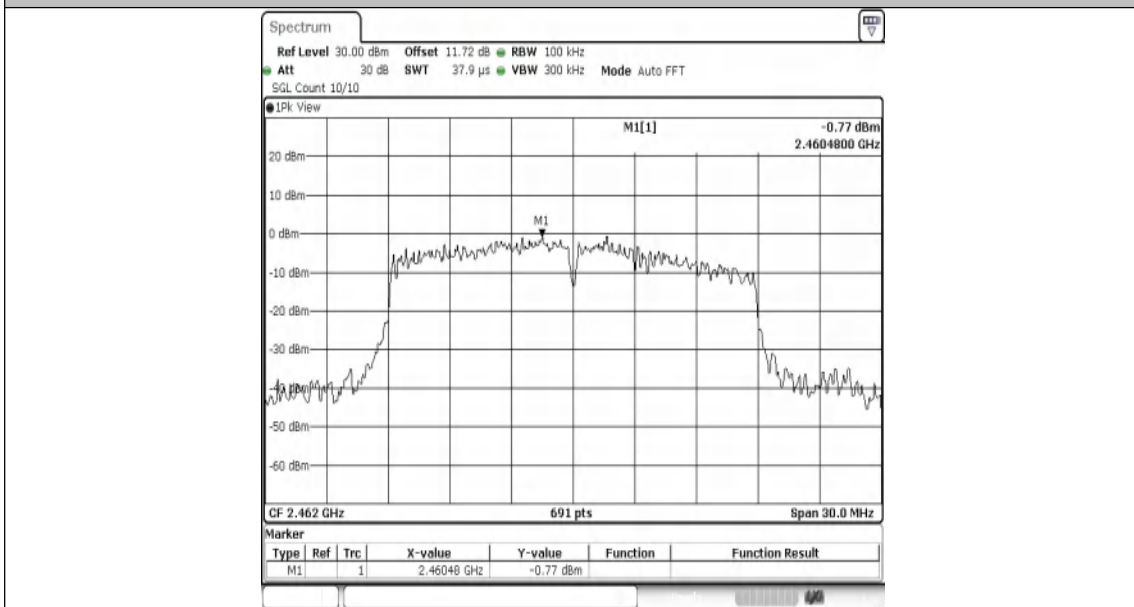


11N20MIMO-Ant2-2462-0~Reference-PASS

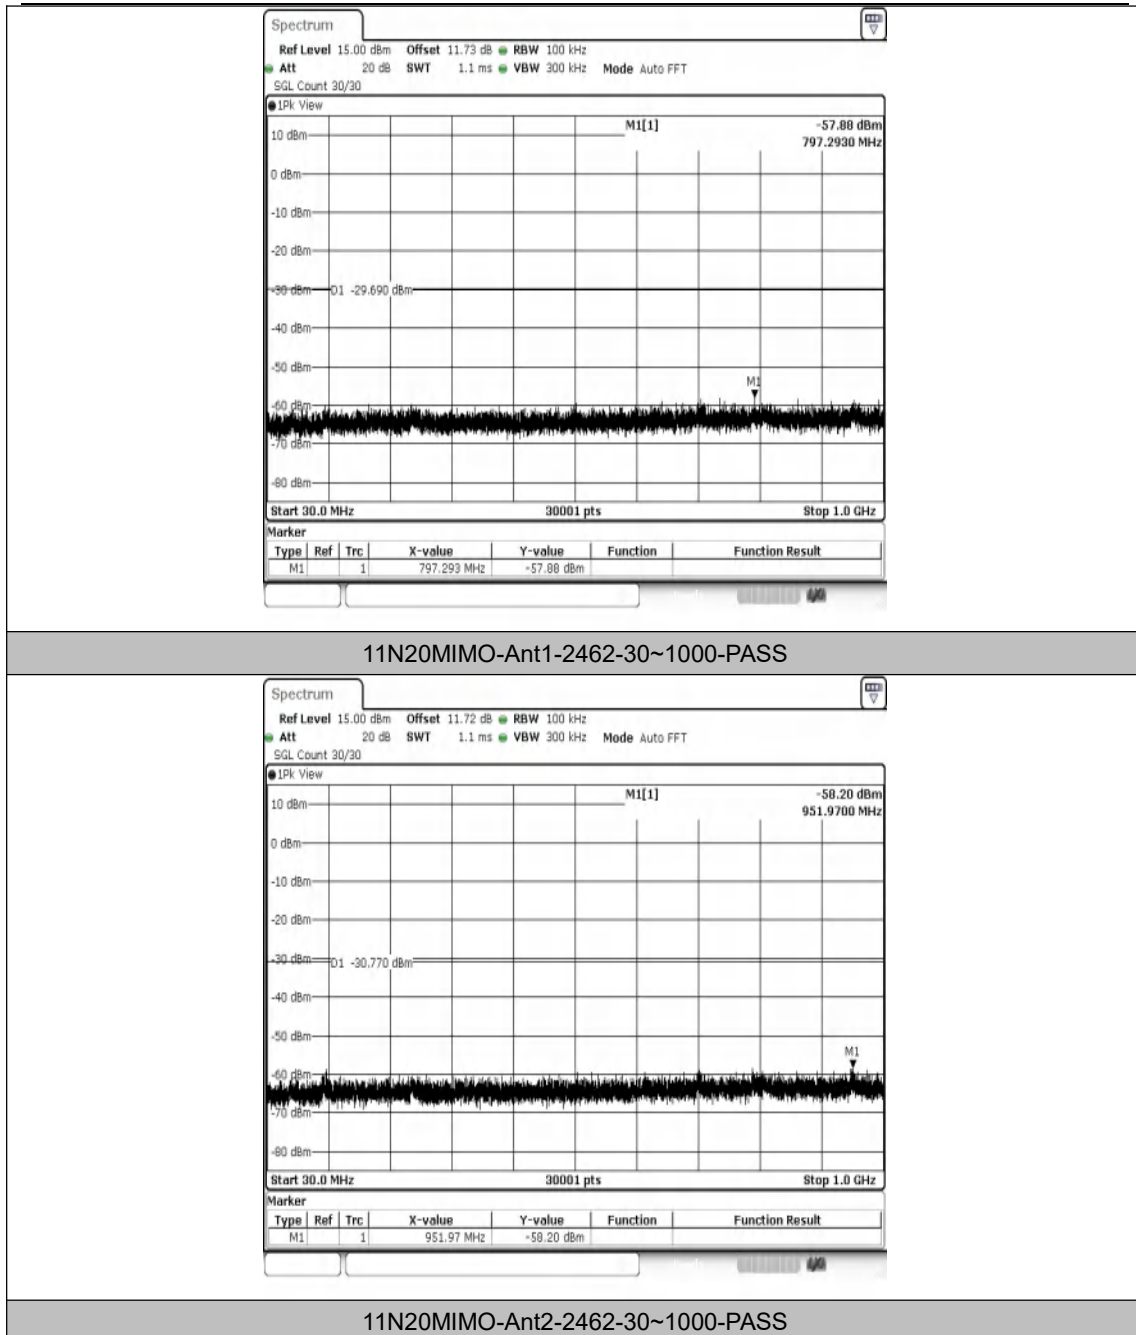

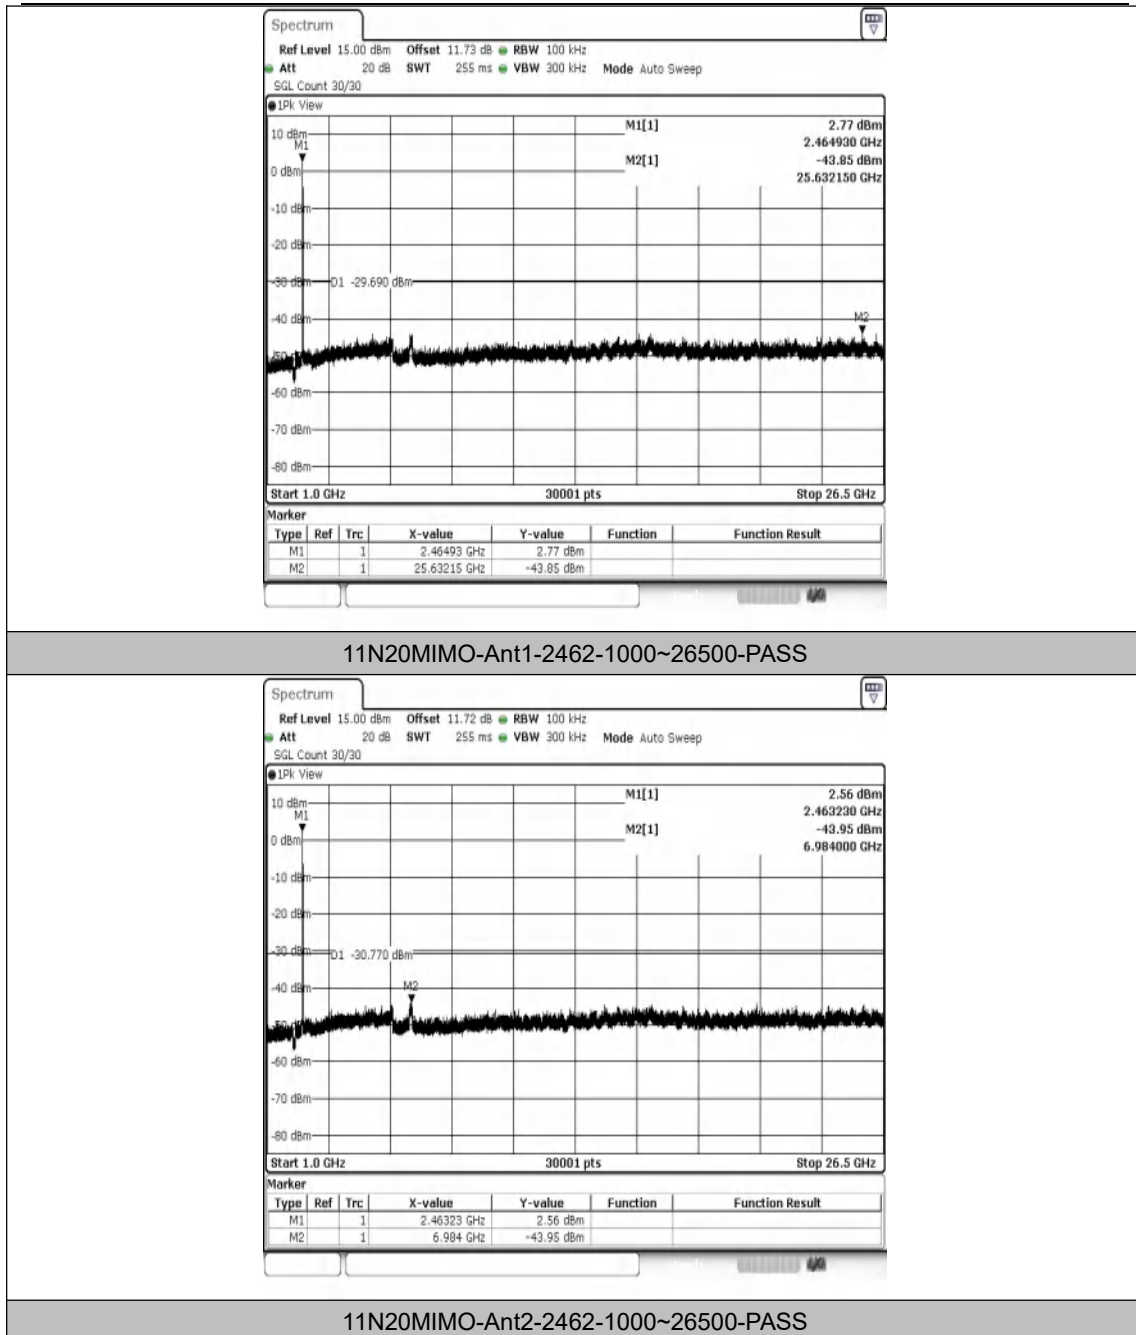


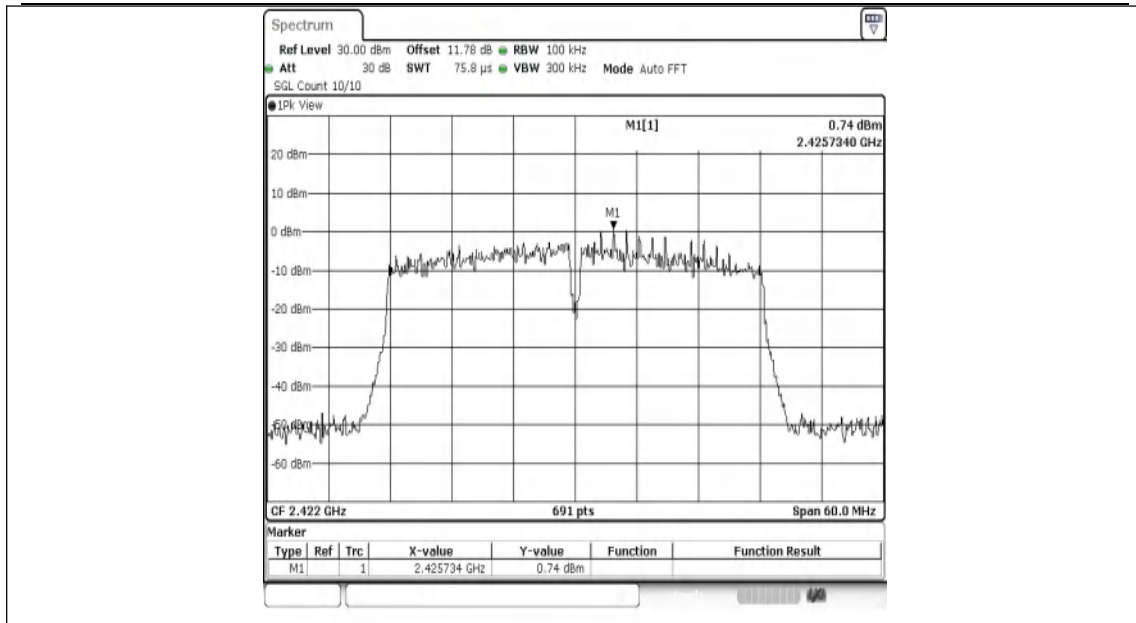


11N40MIMO-Ant1-2422-0~Reference-PASS

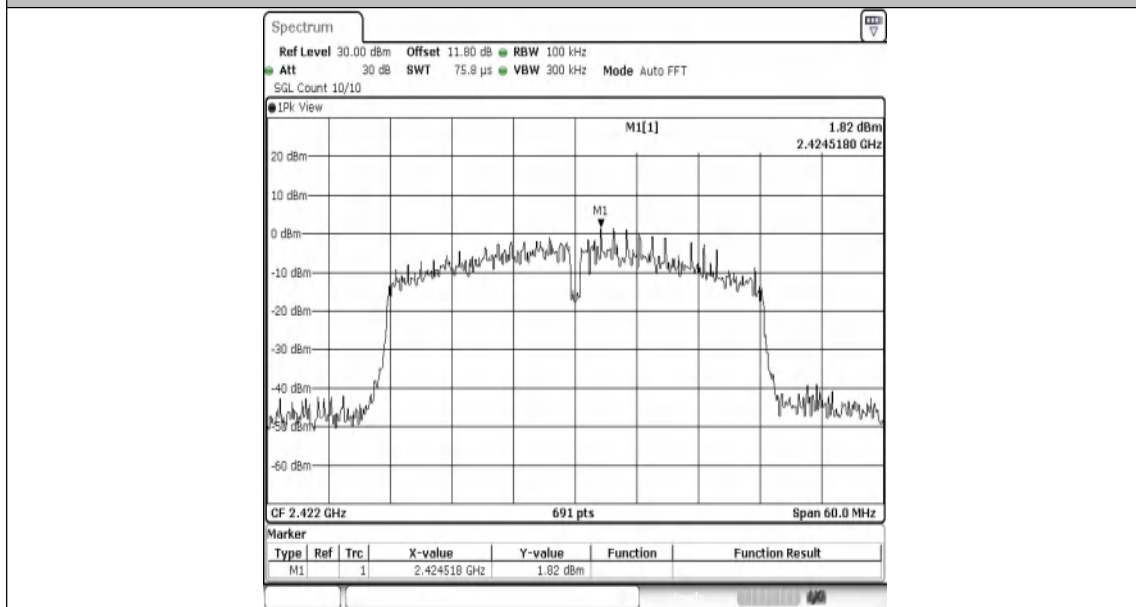


11N40MIMO-Ant2-2422-0~Reference-PASS

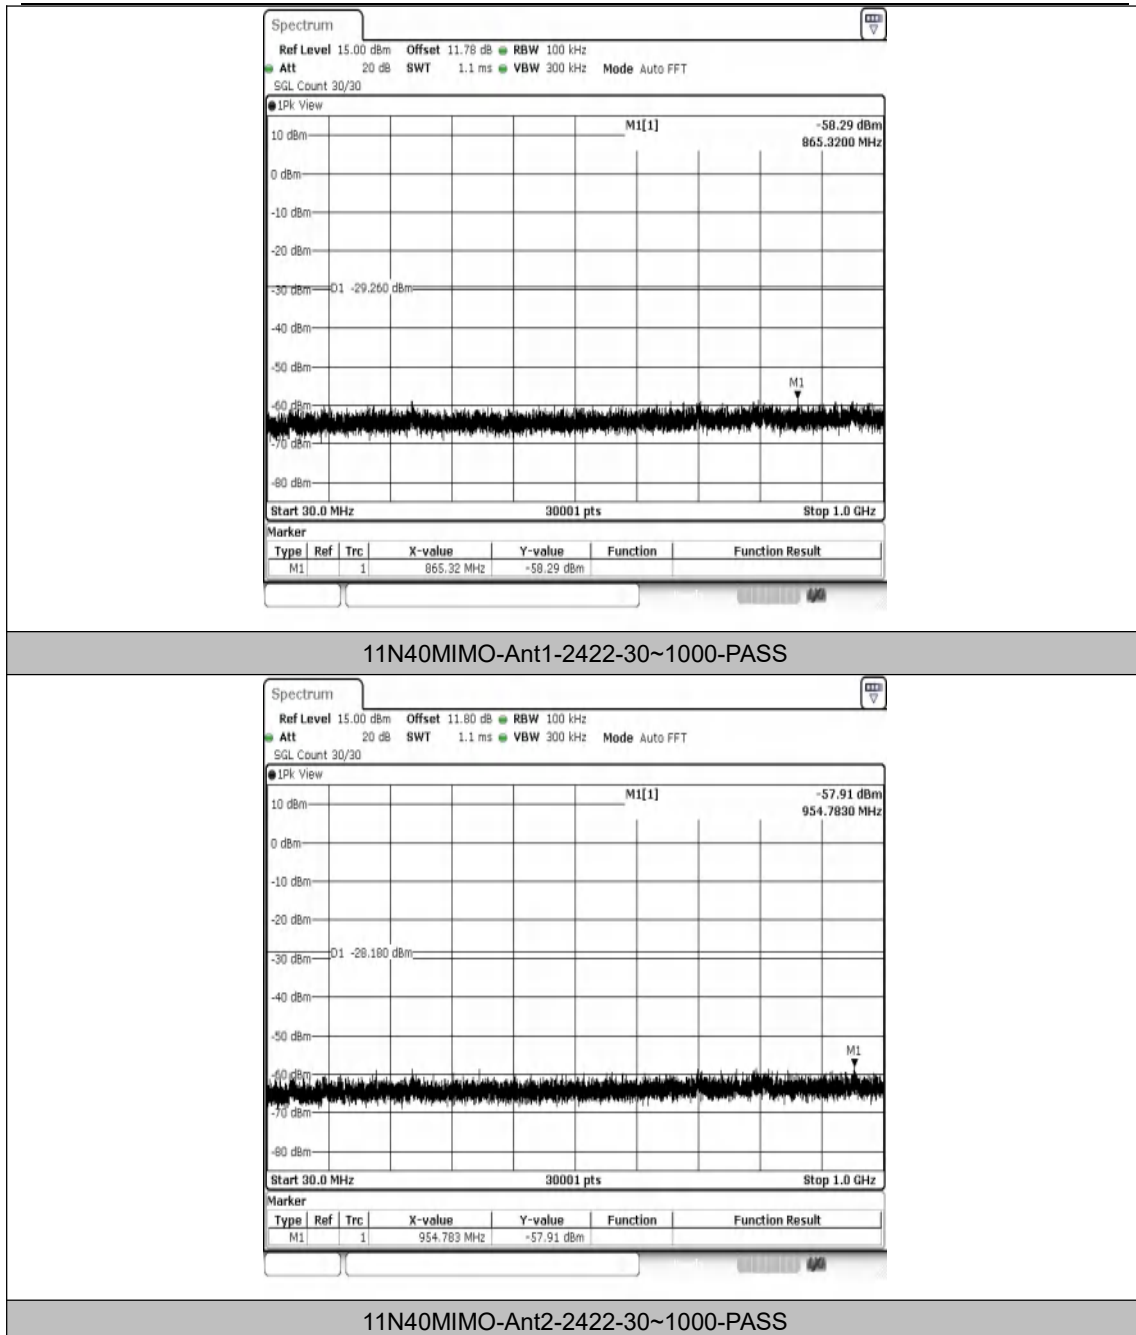


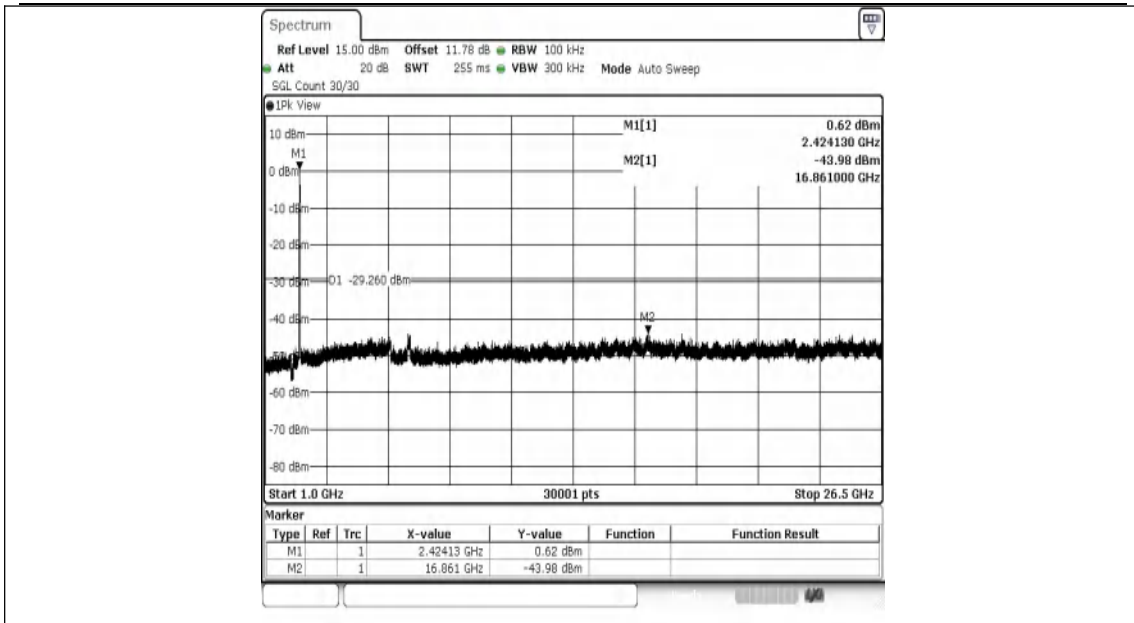


11N40MIMO-Ant1-2422-1000~26500-PASS

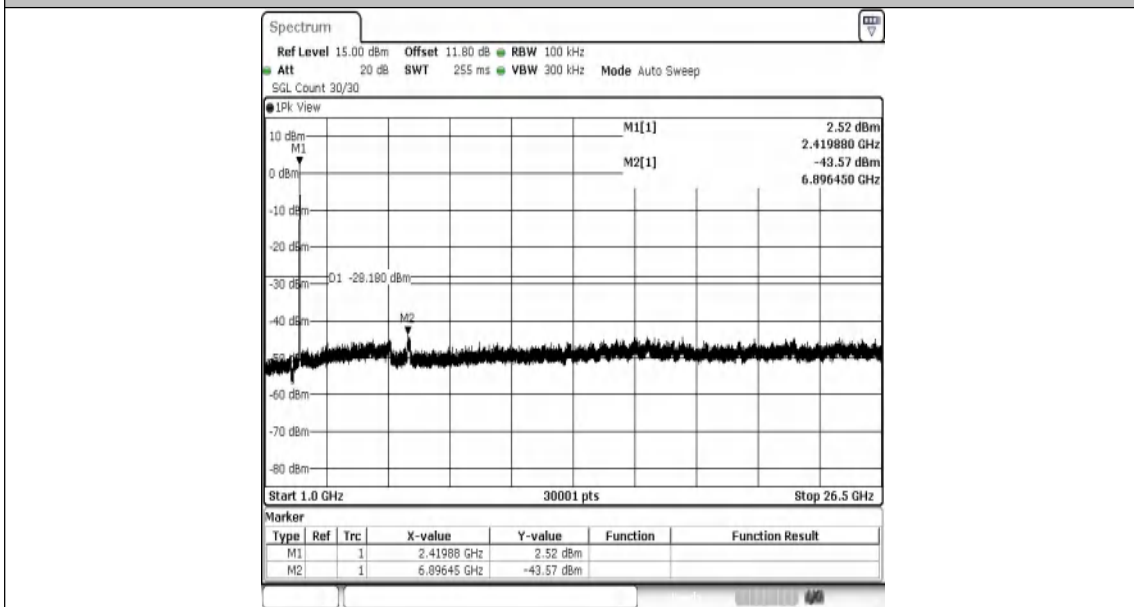


11N40MIMO-Ant2-2422-1000~26500-PASS

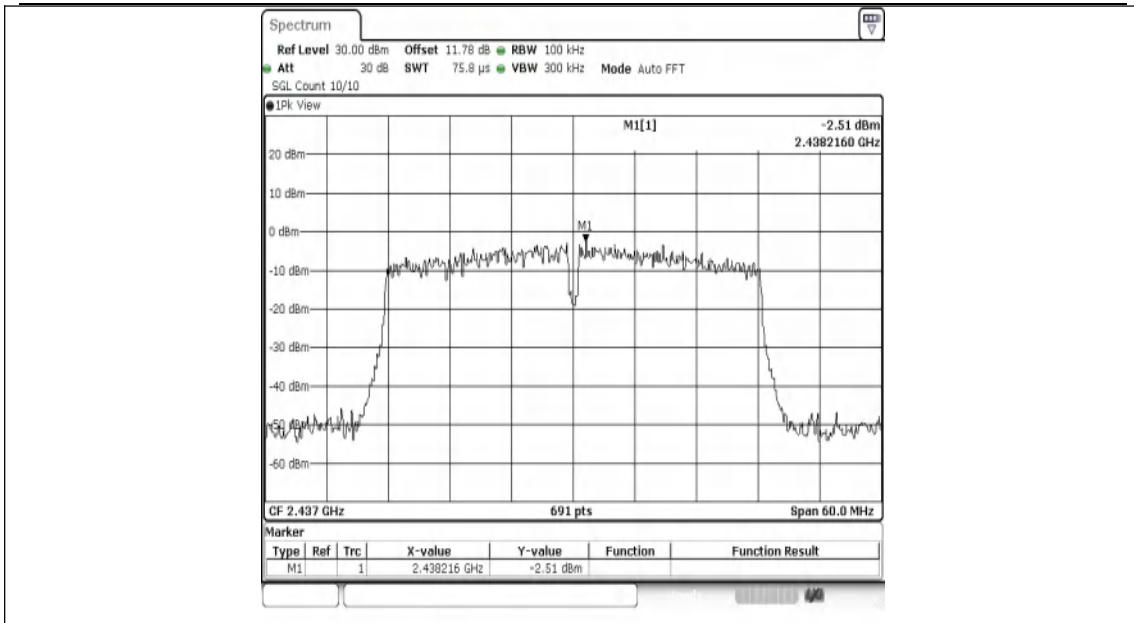



11N40MIMO-Ant1-2437-0~Reference-PASS

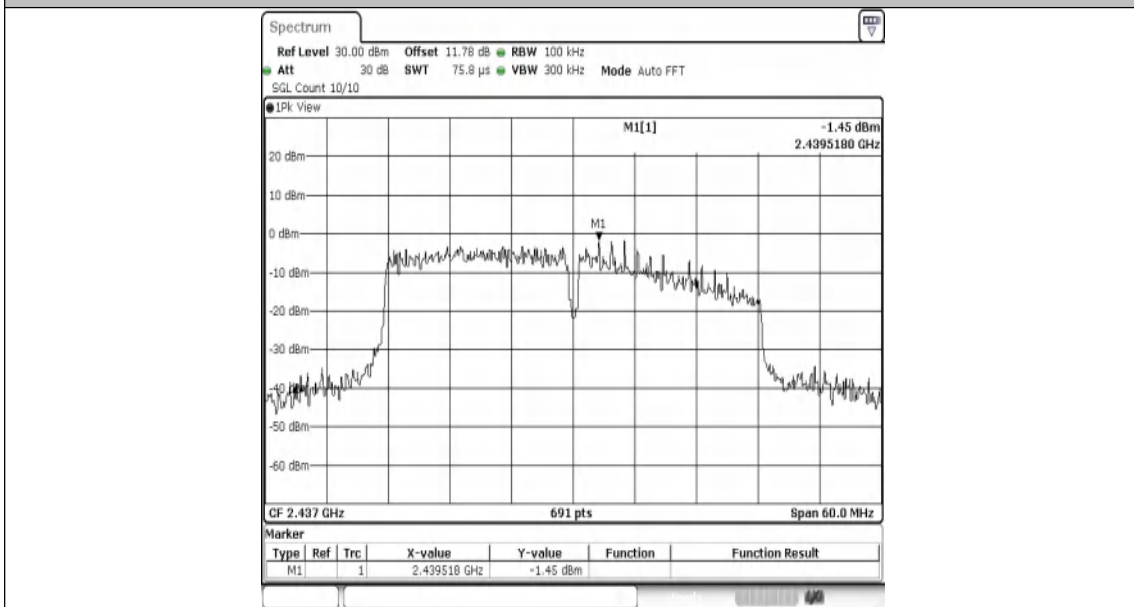



11N40MIMO-Ant2-2437-0~Reference-PASS

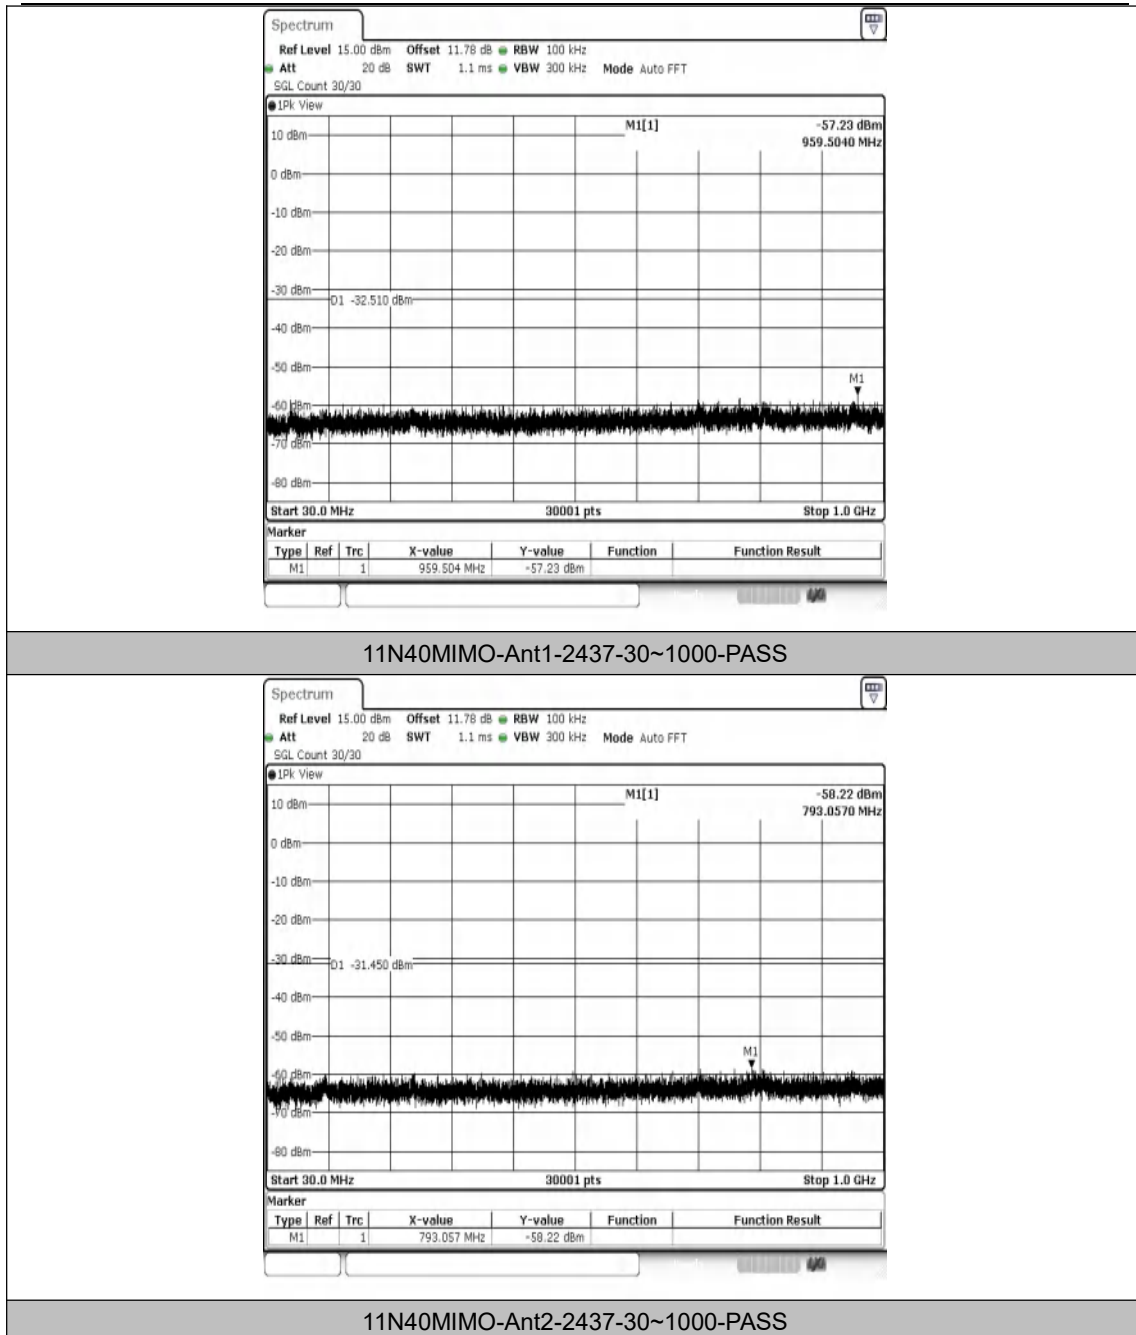


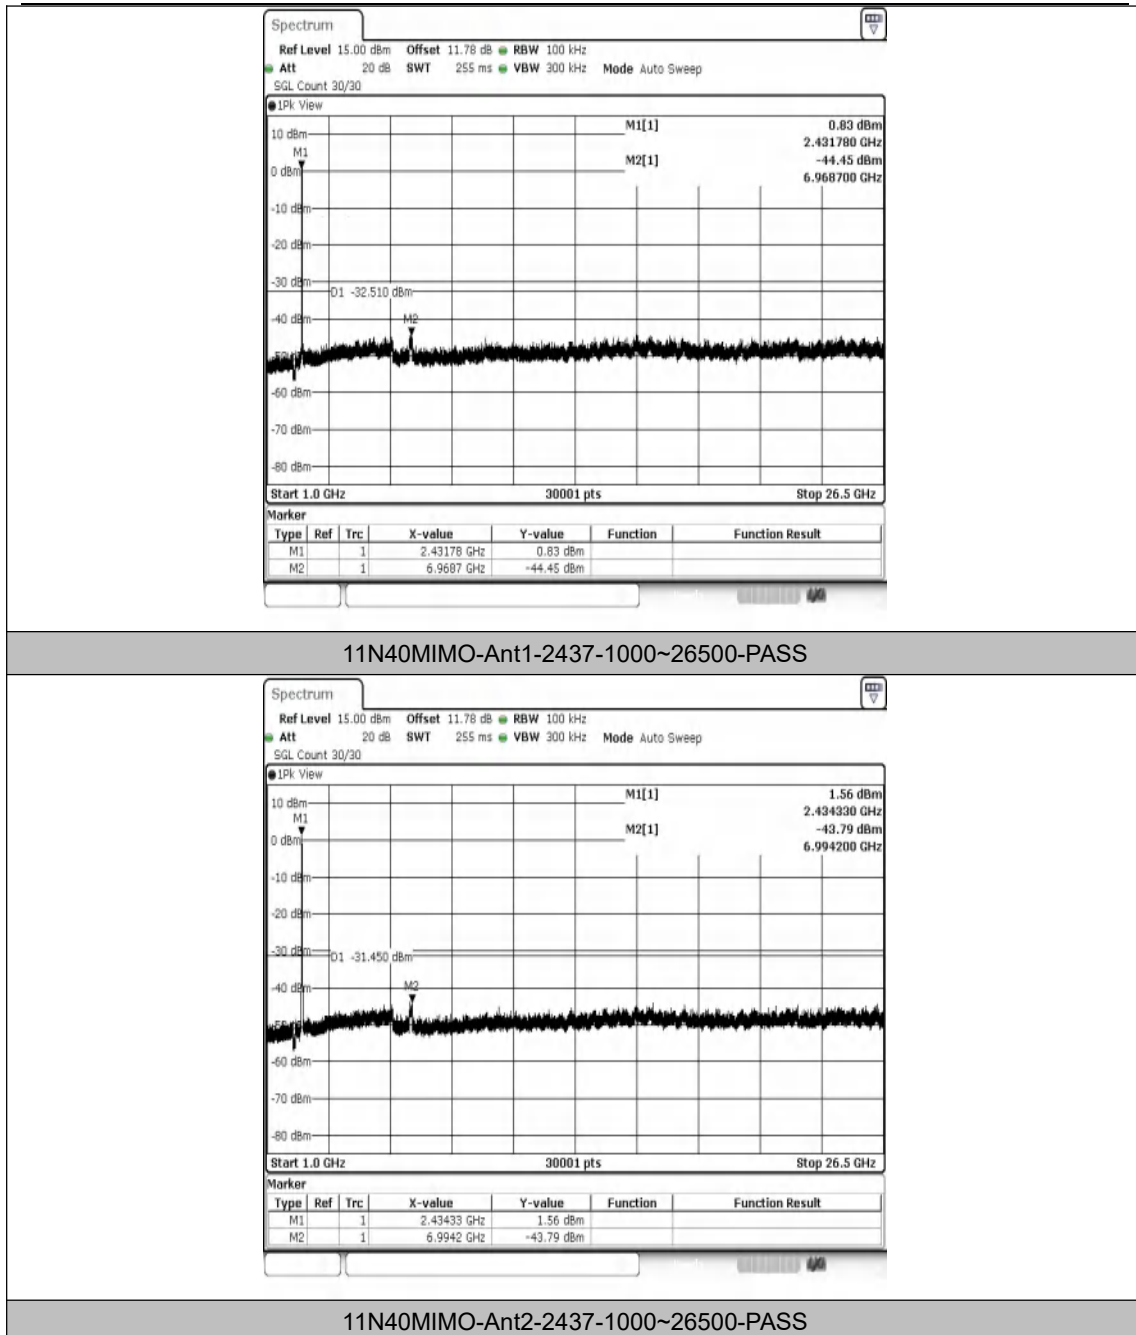


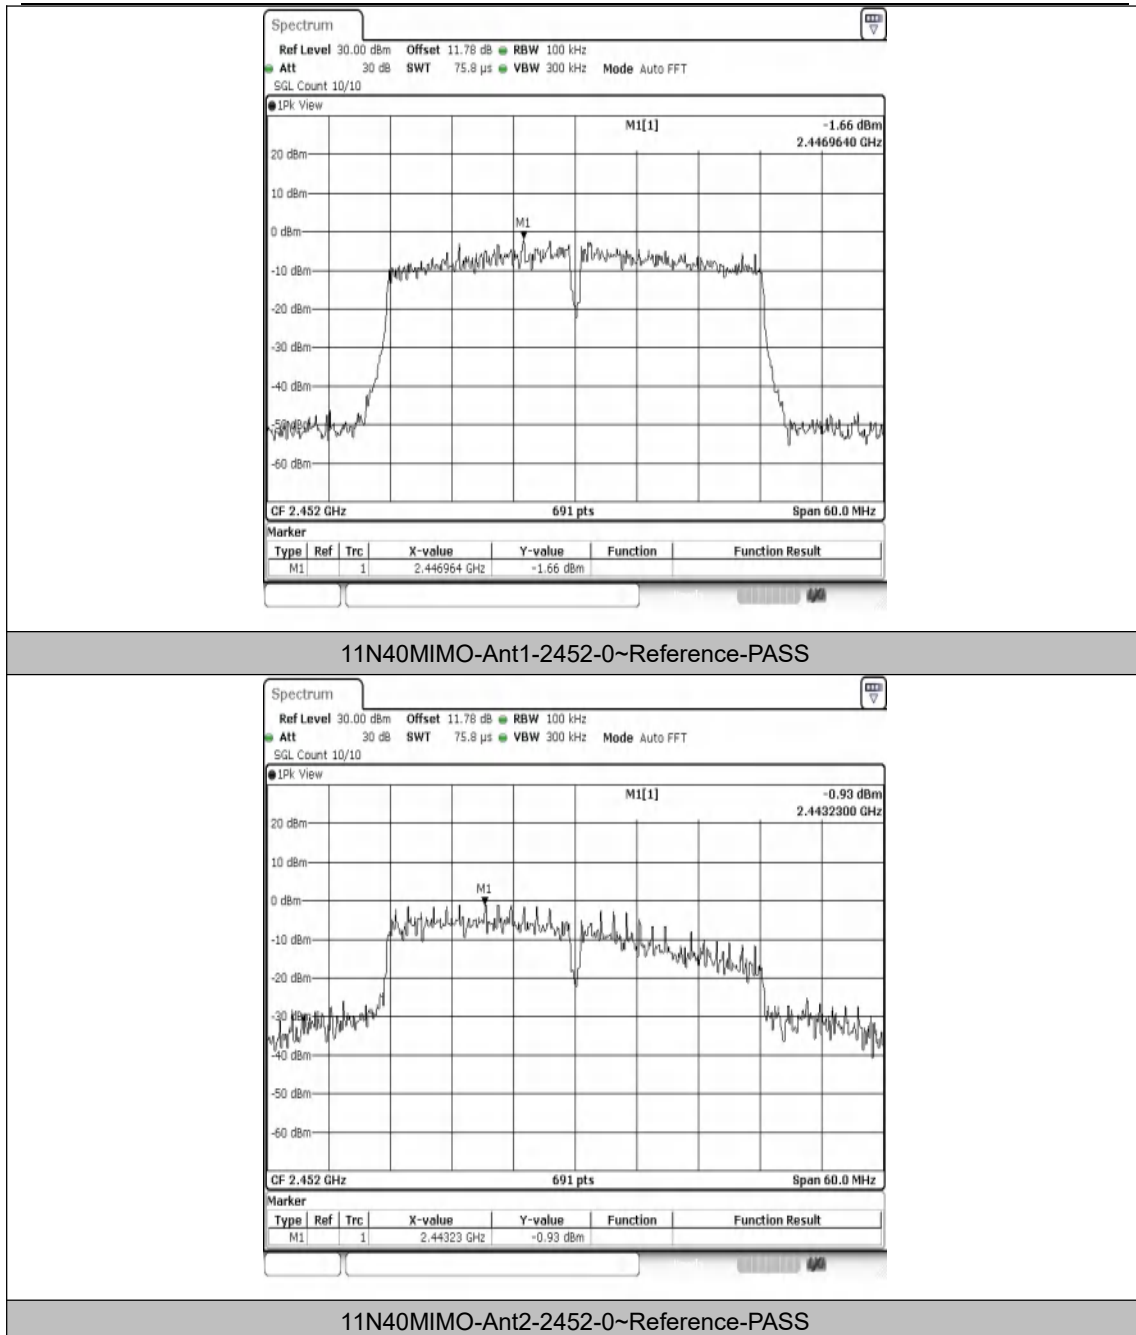

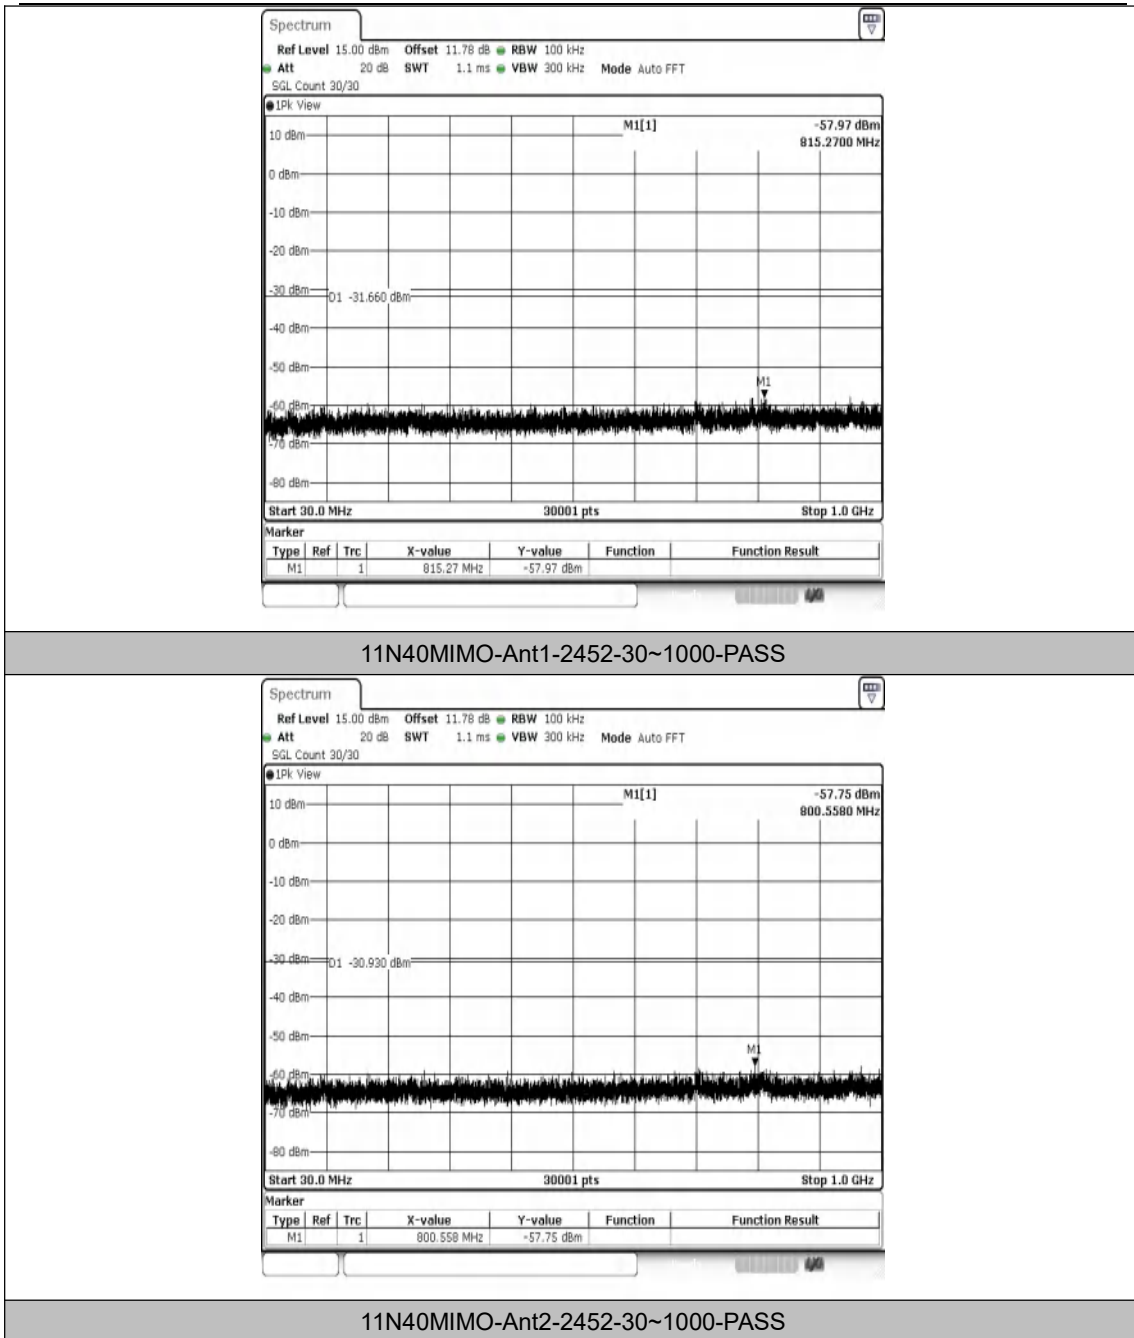

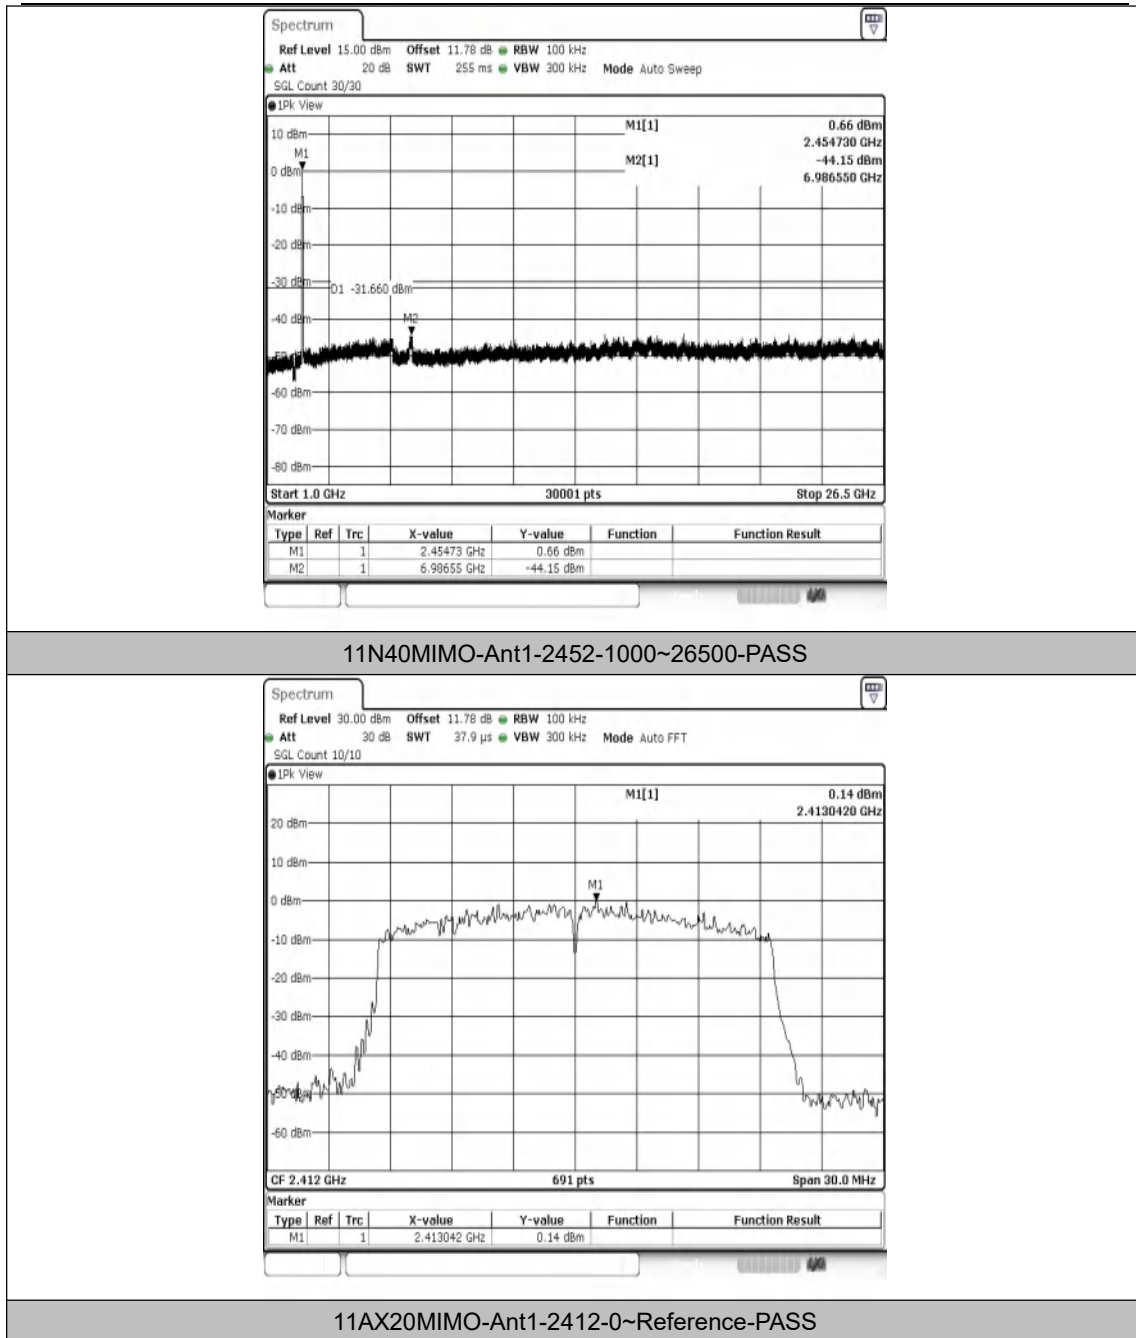

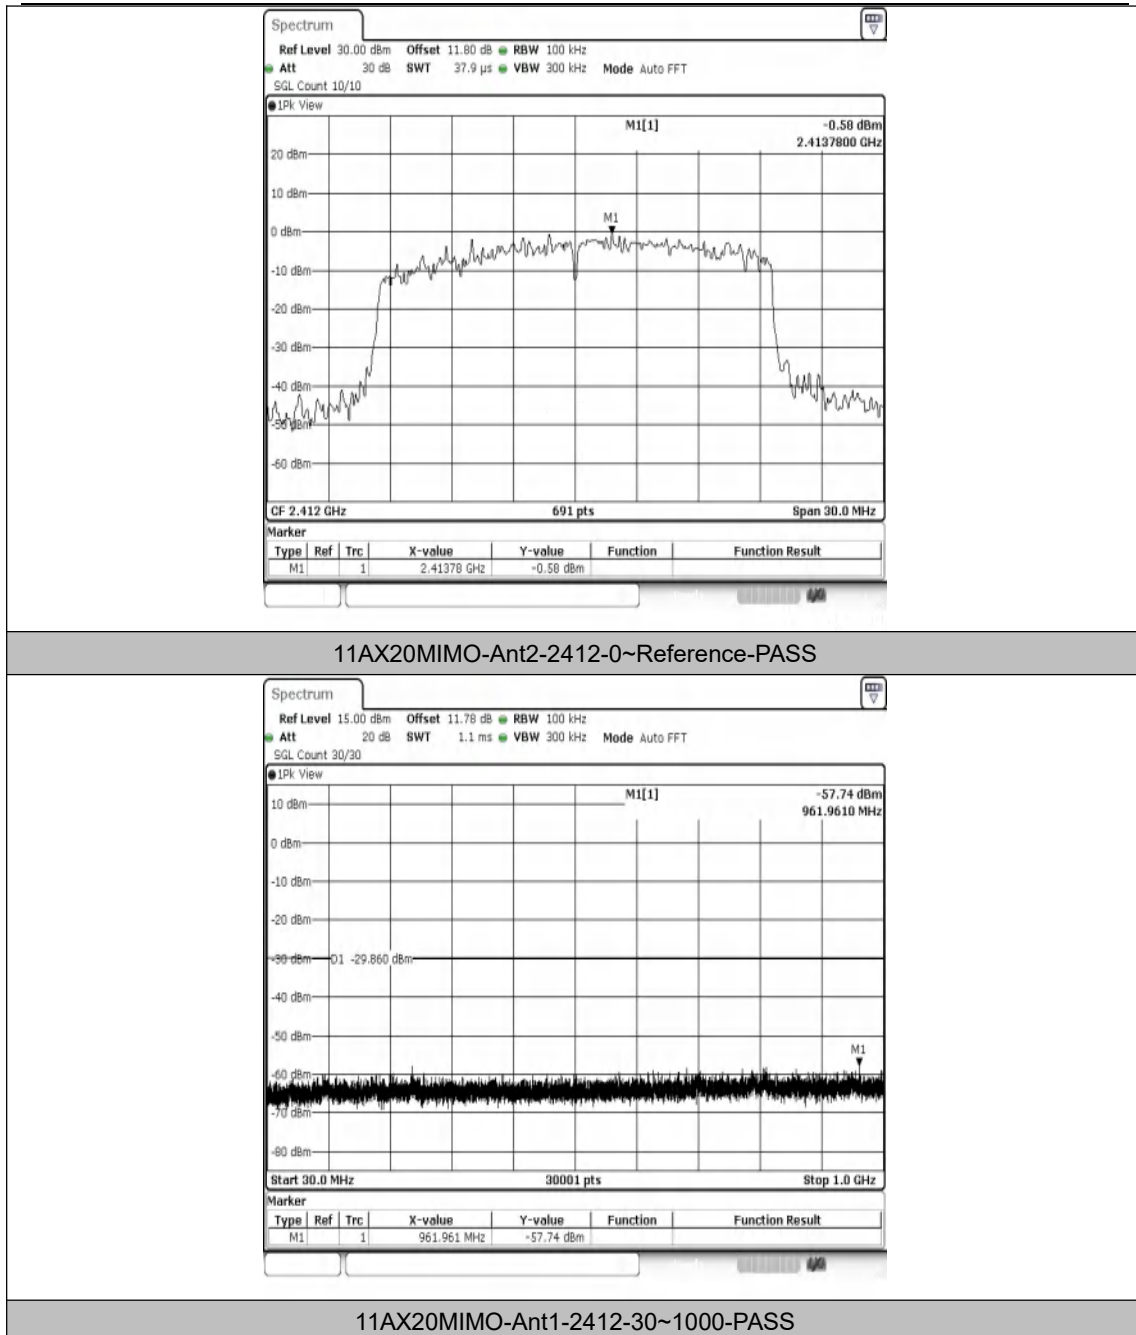


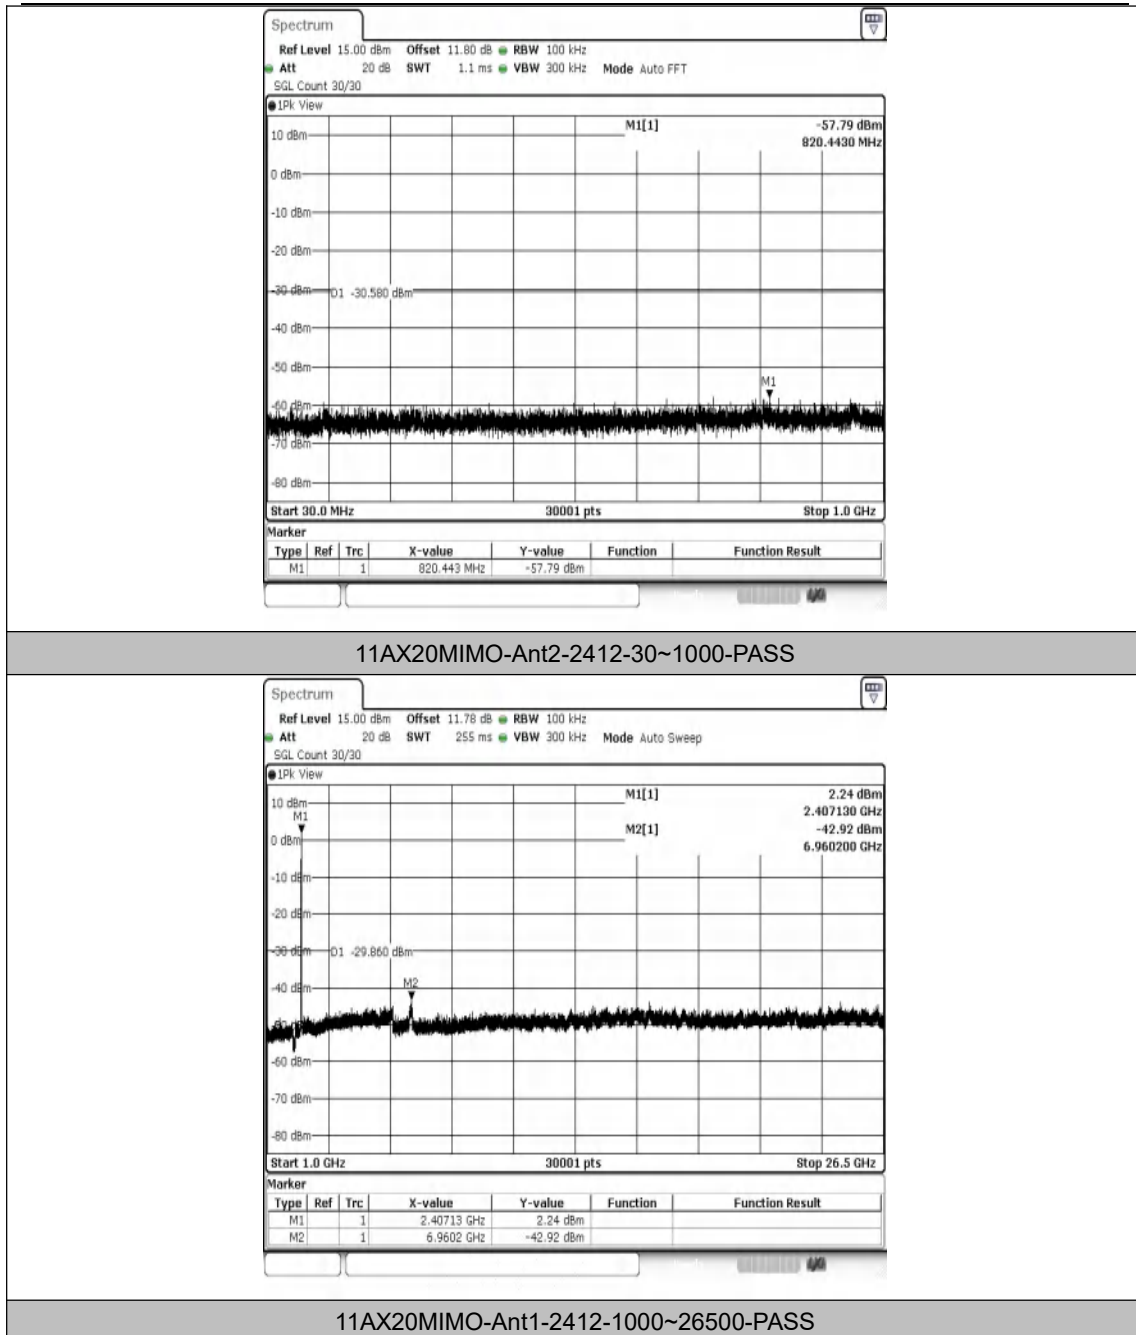


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

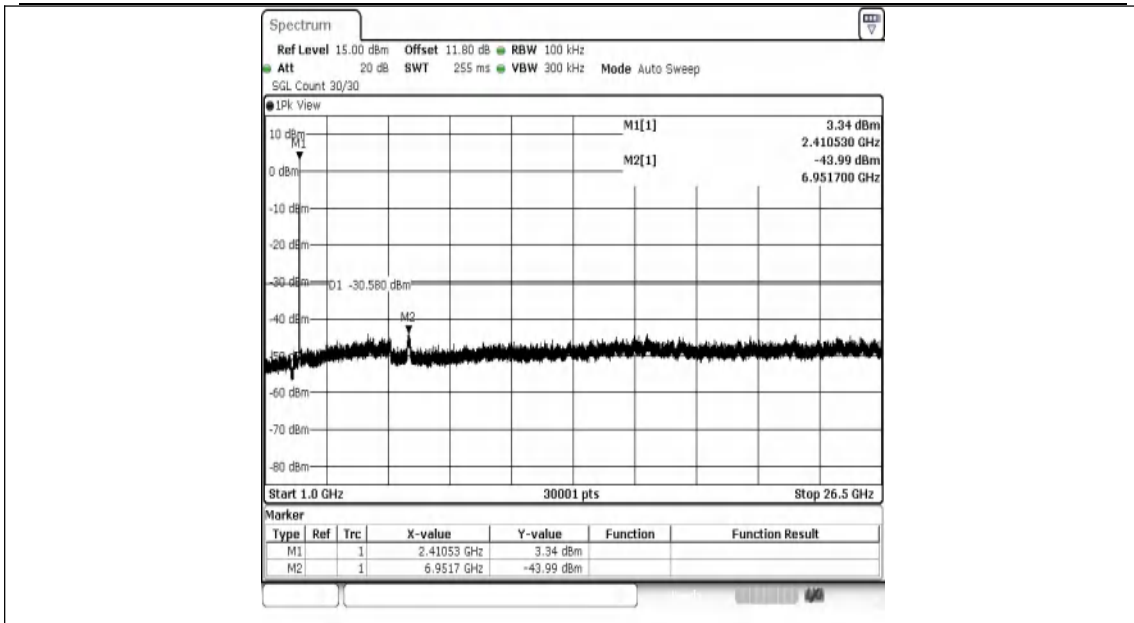



11AX20MIMO-Ant2-2412-1000~26500-PASS

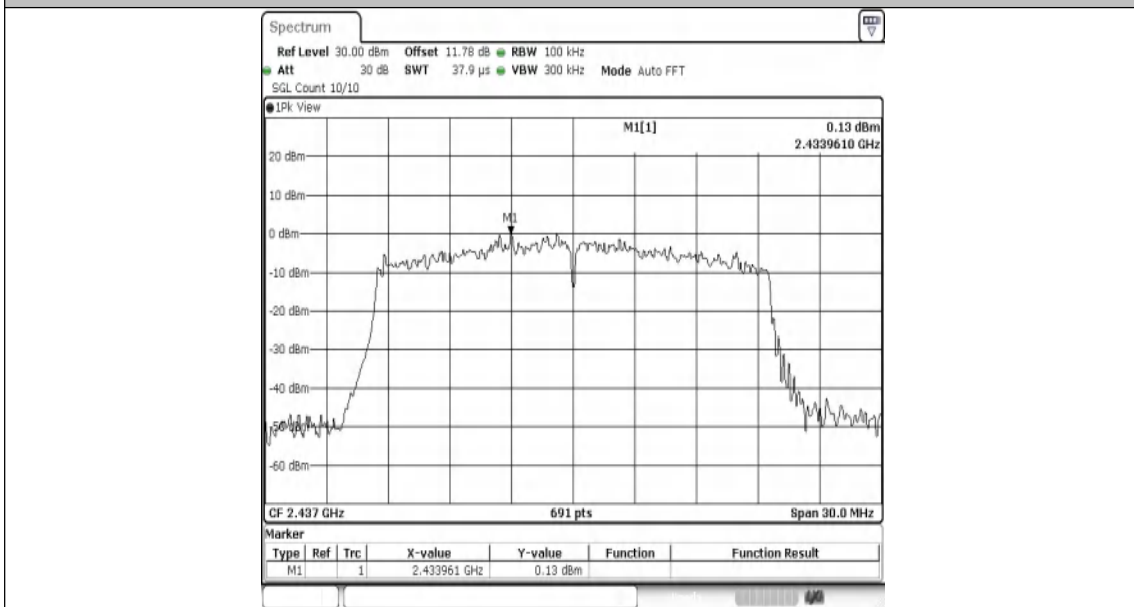



11AX20MIMO-Ant1-2437-0~Reference-PASS

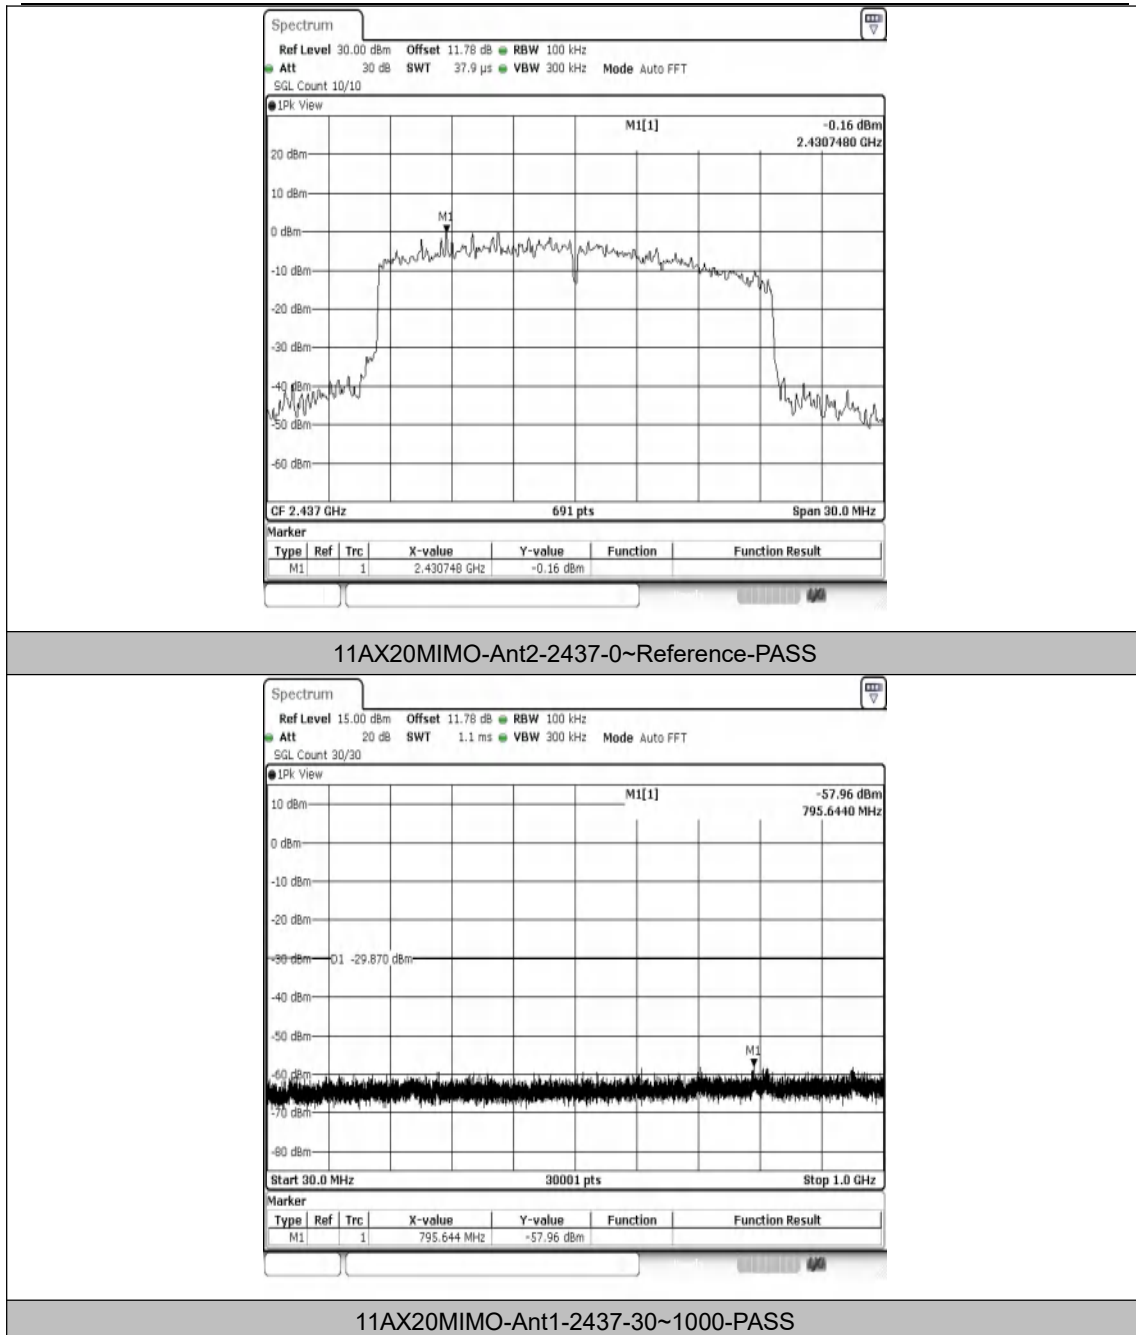


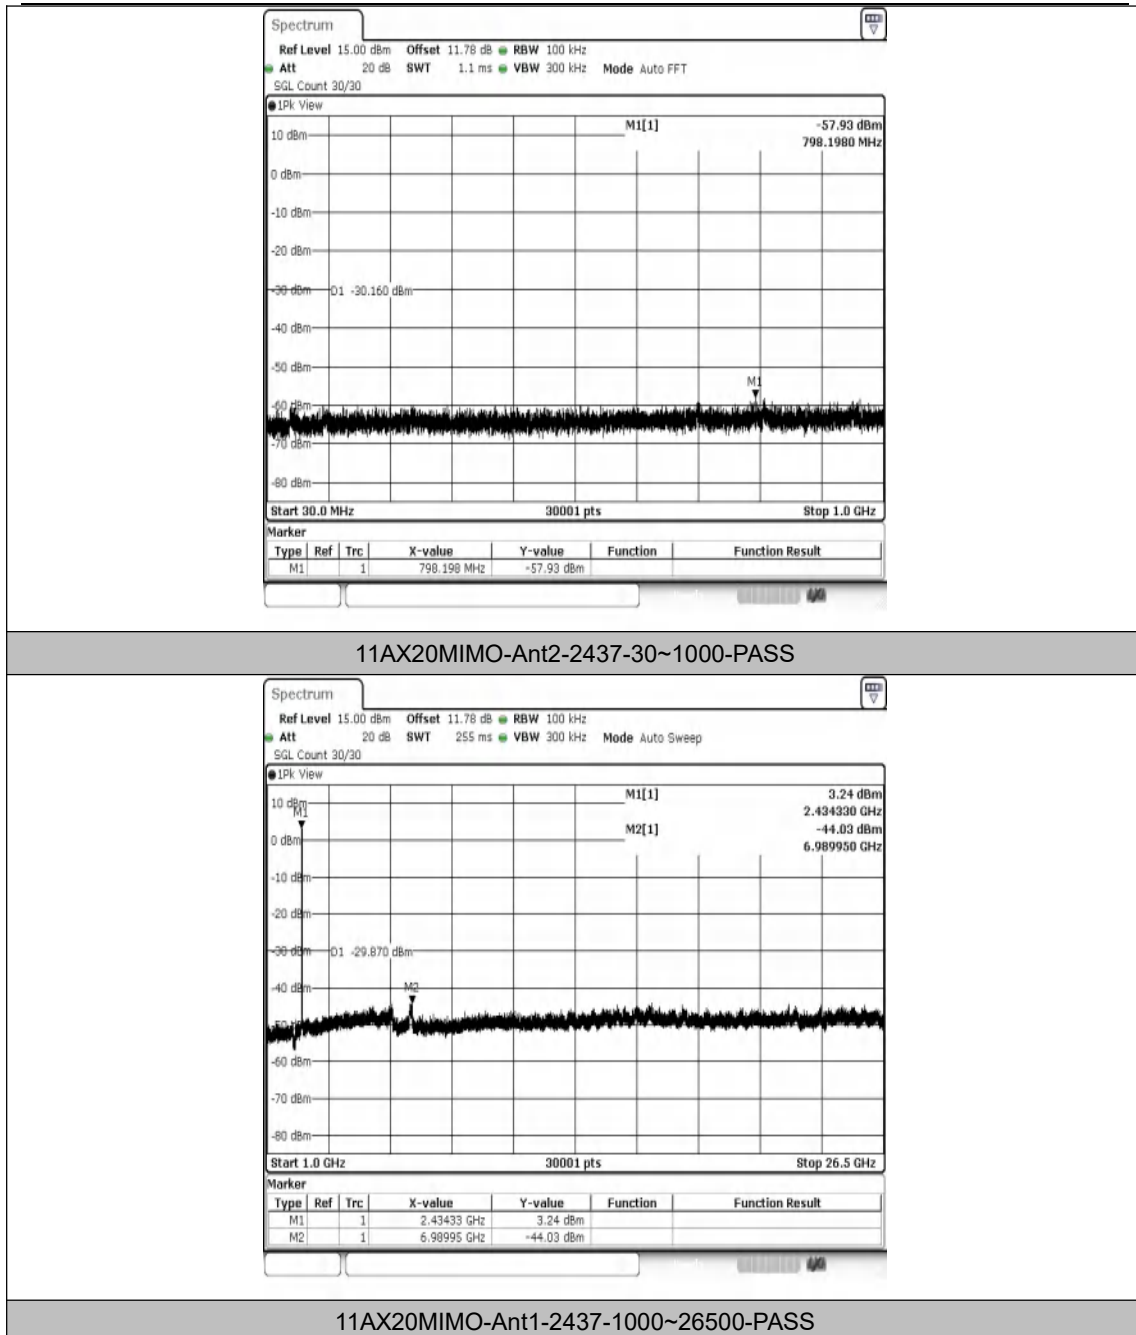


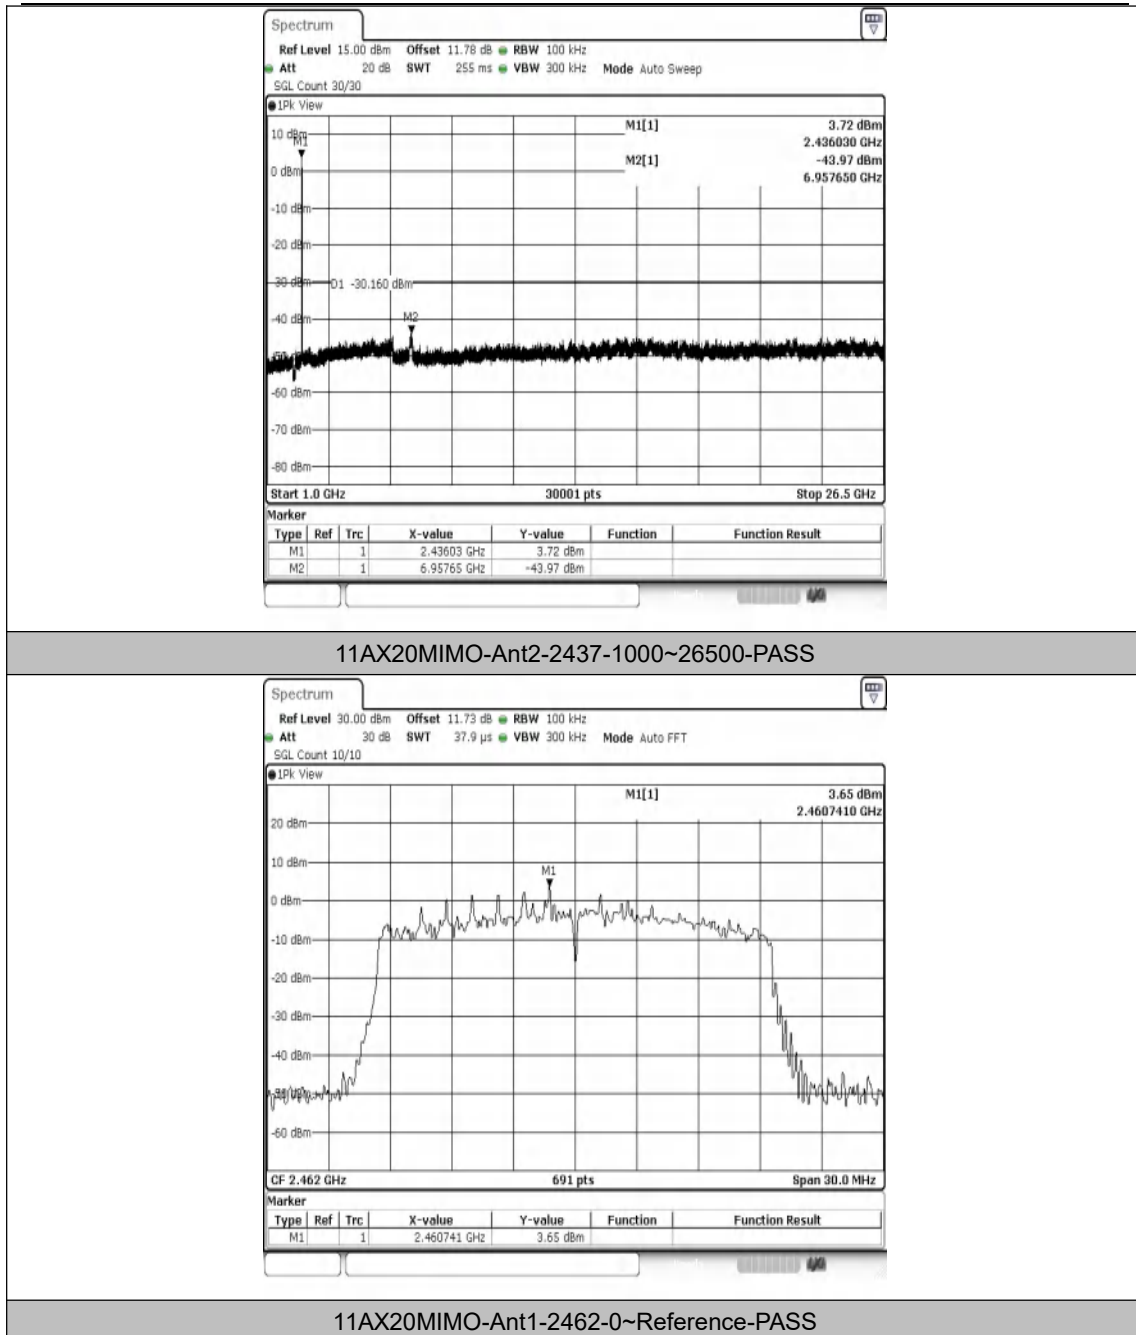

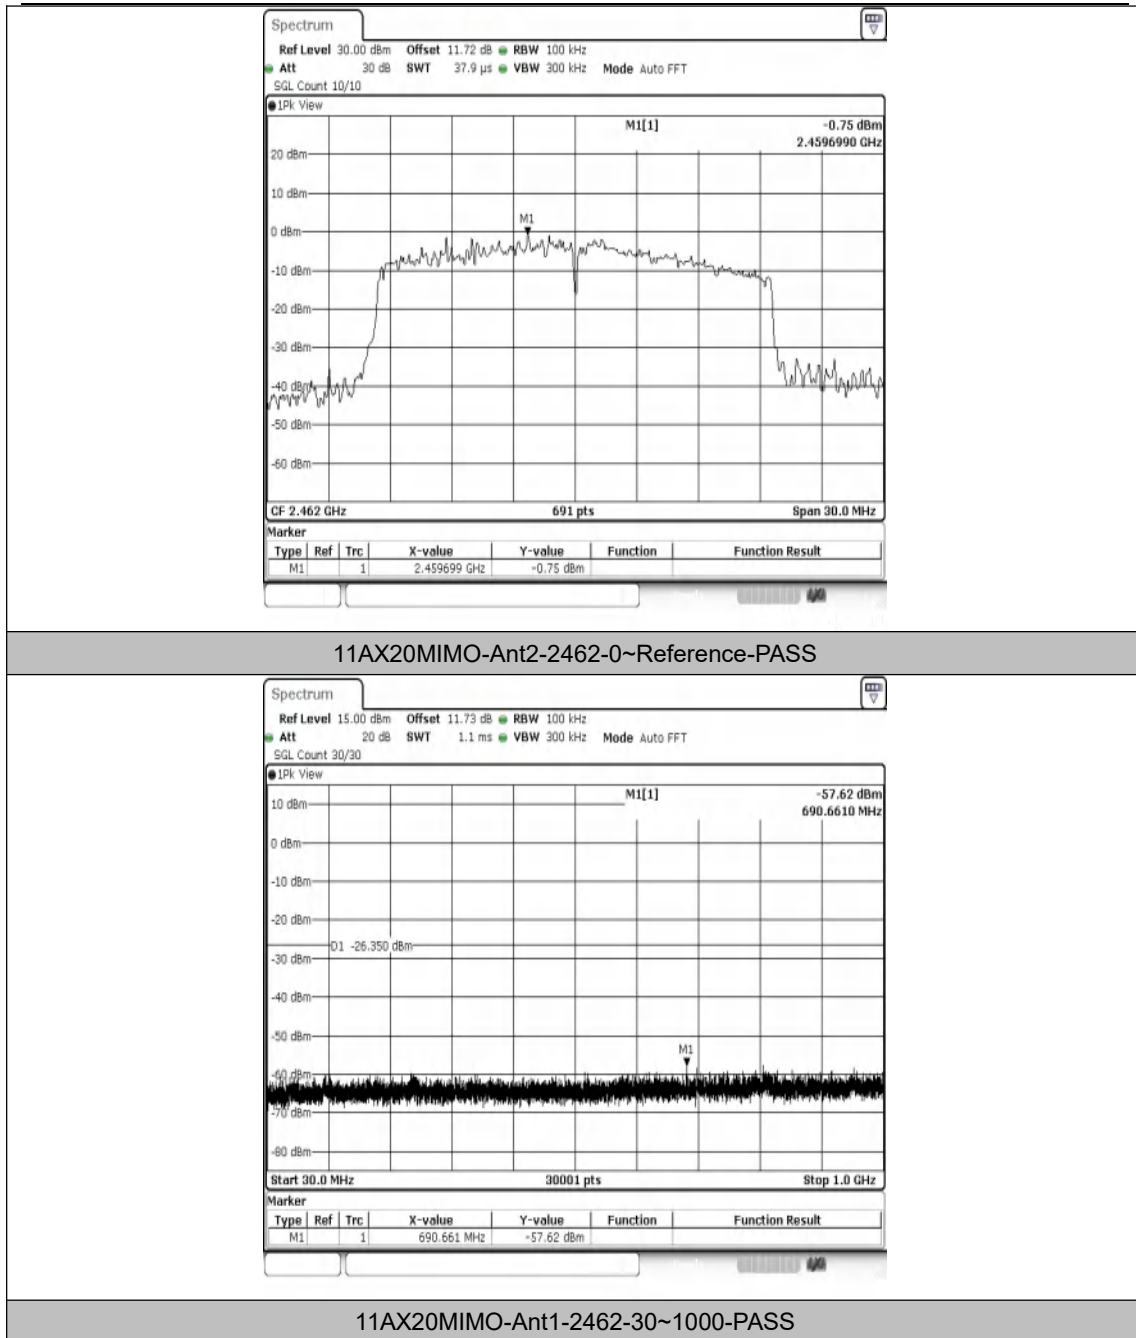

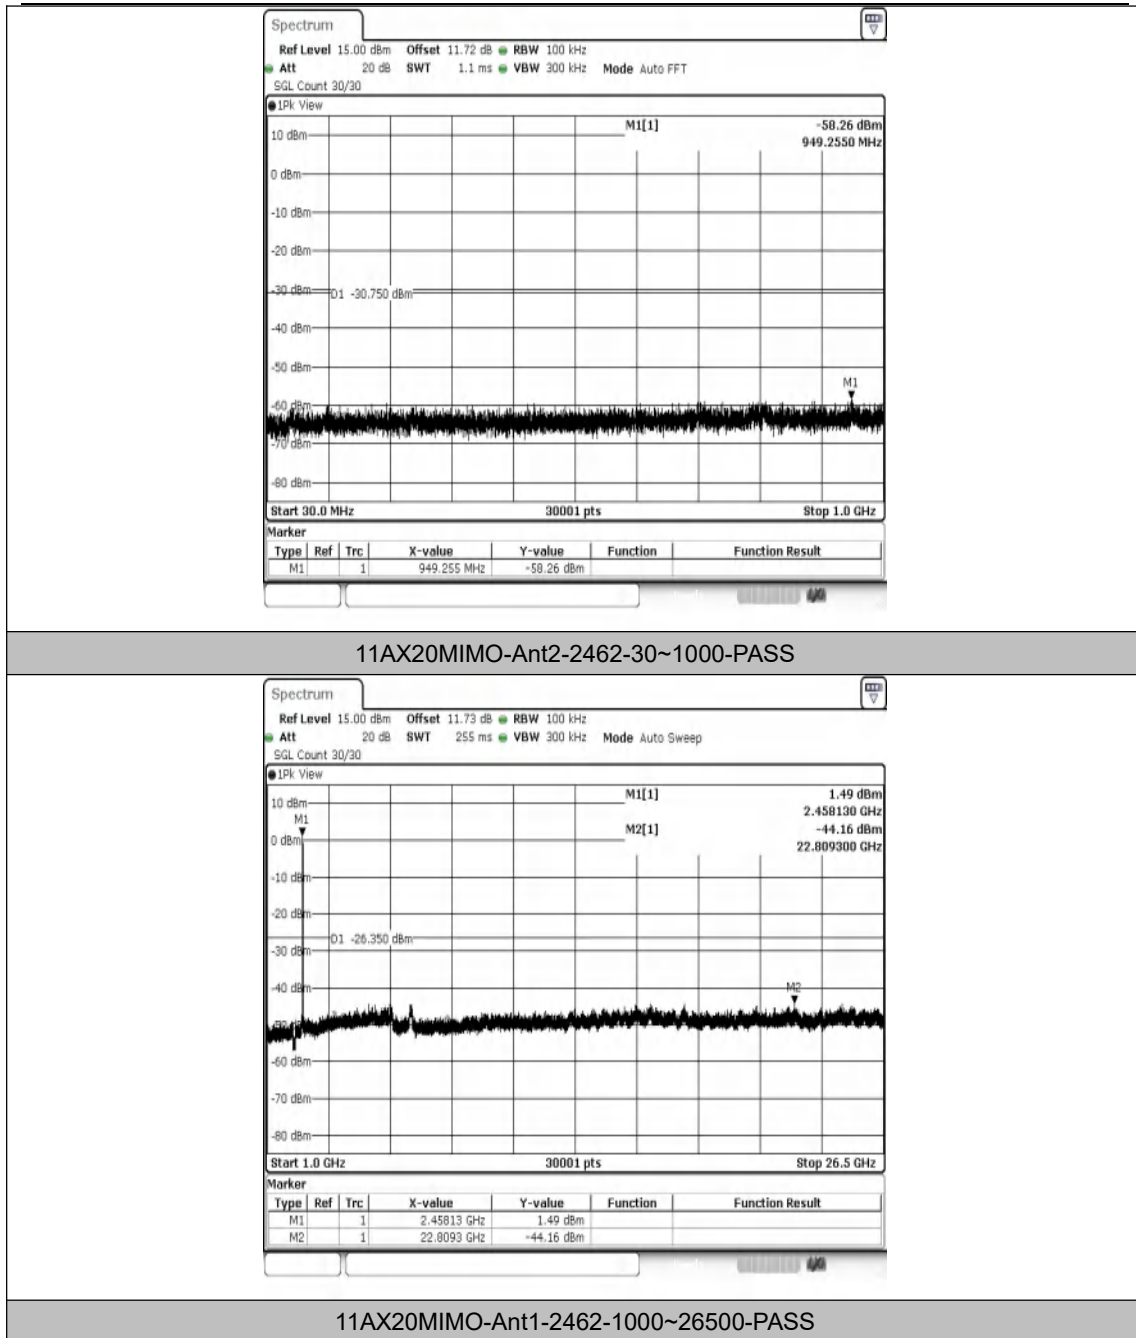

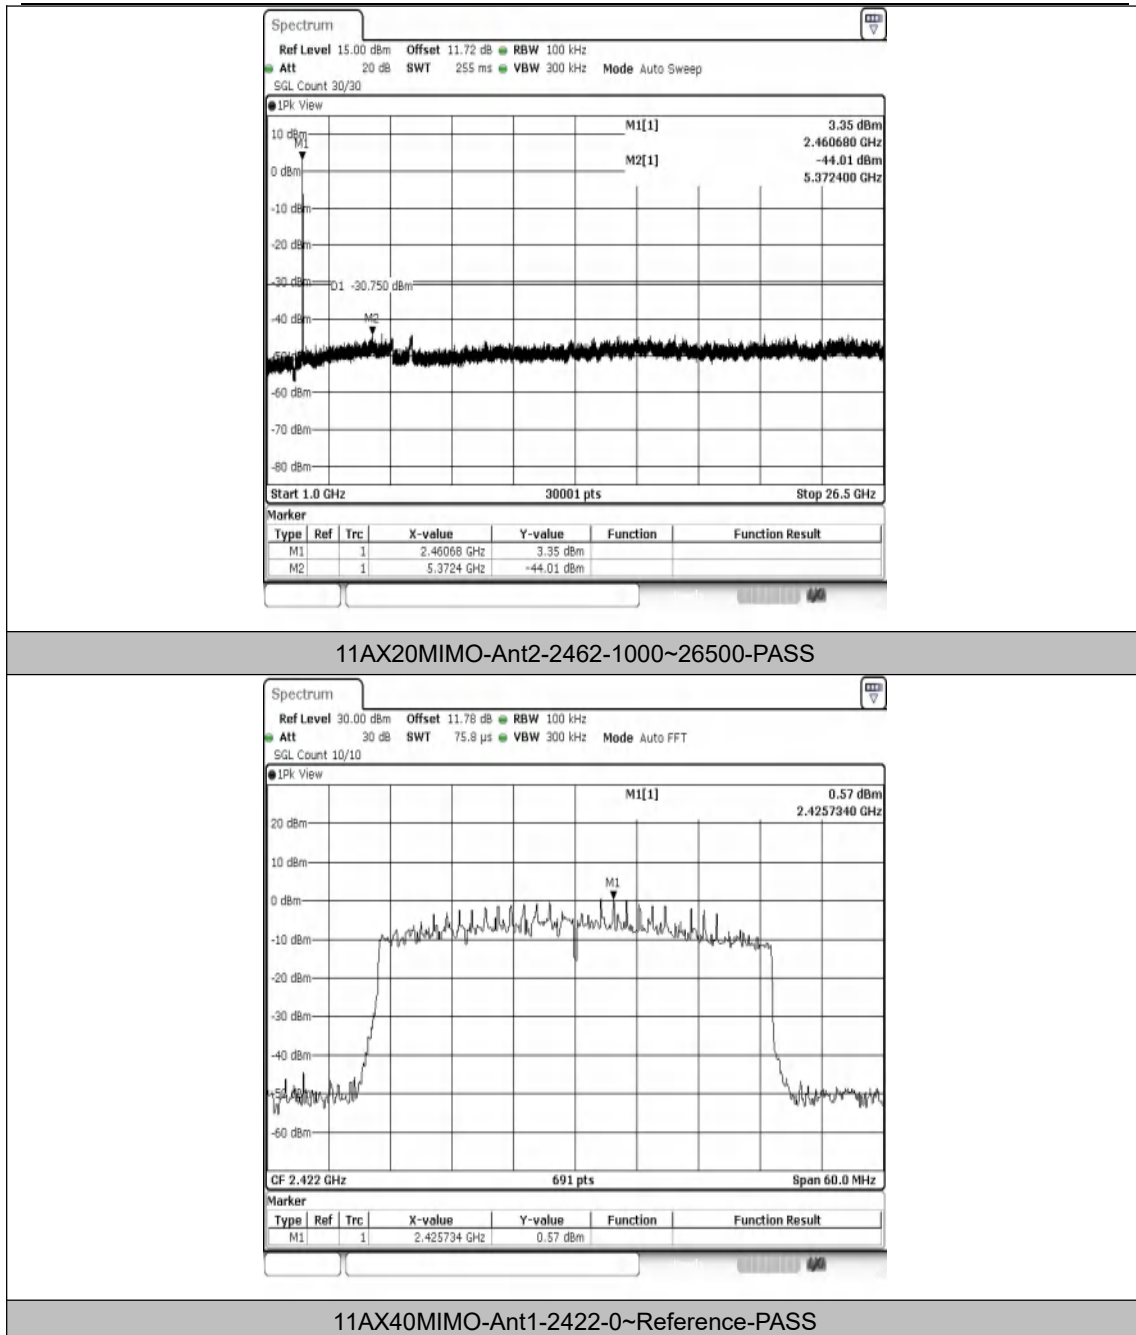


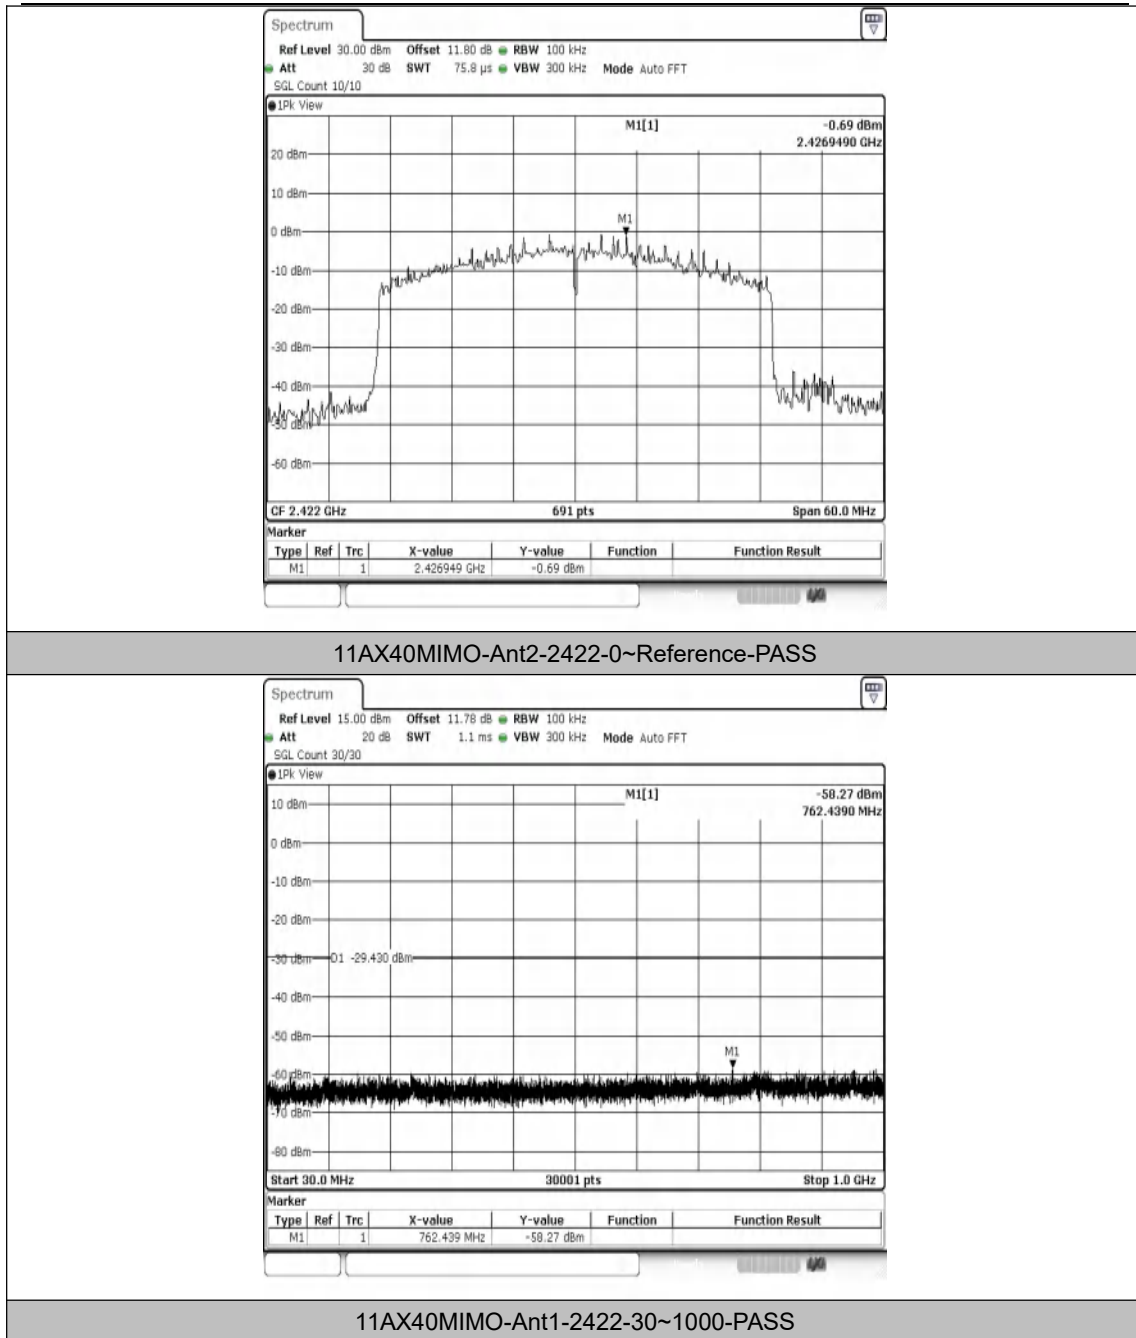



Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

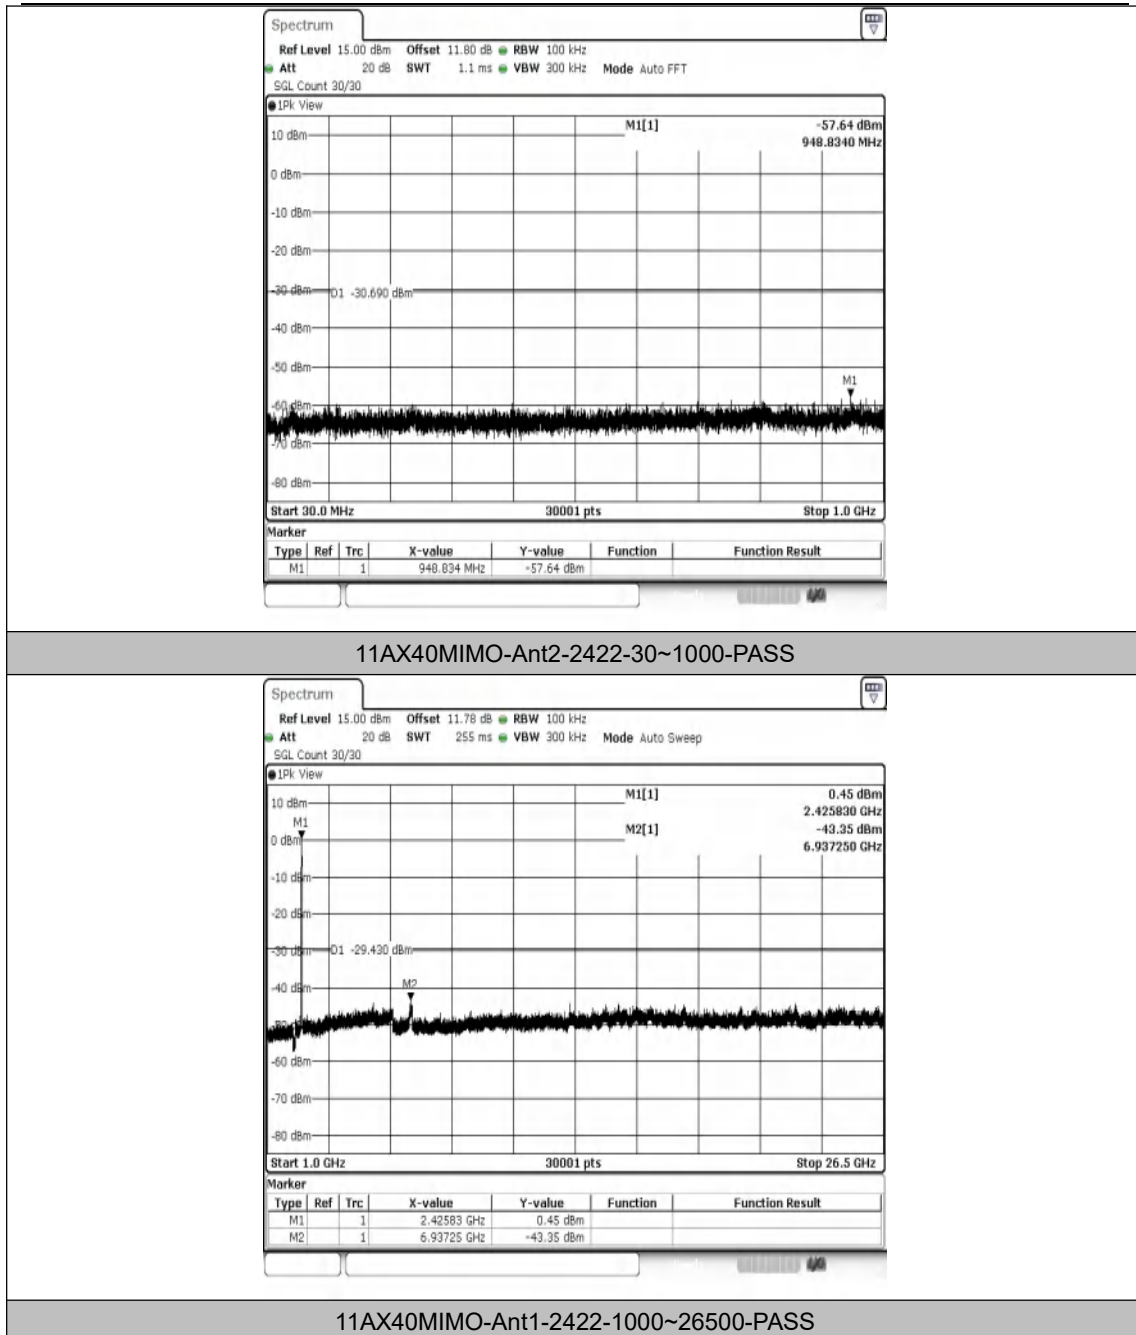

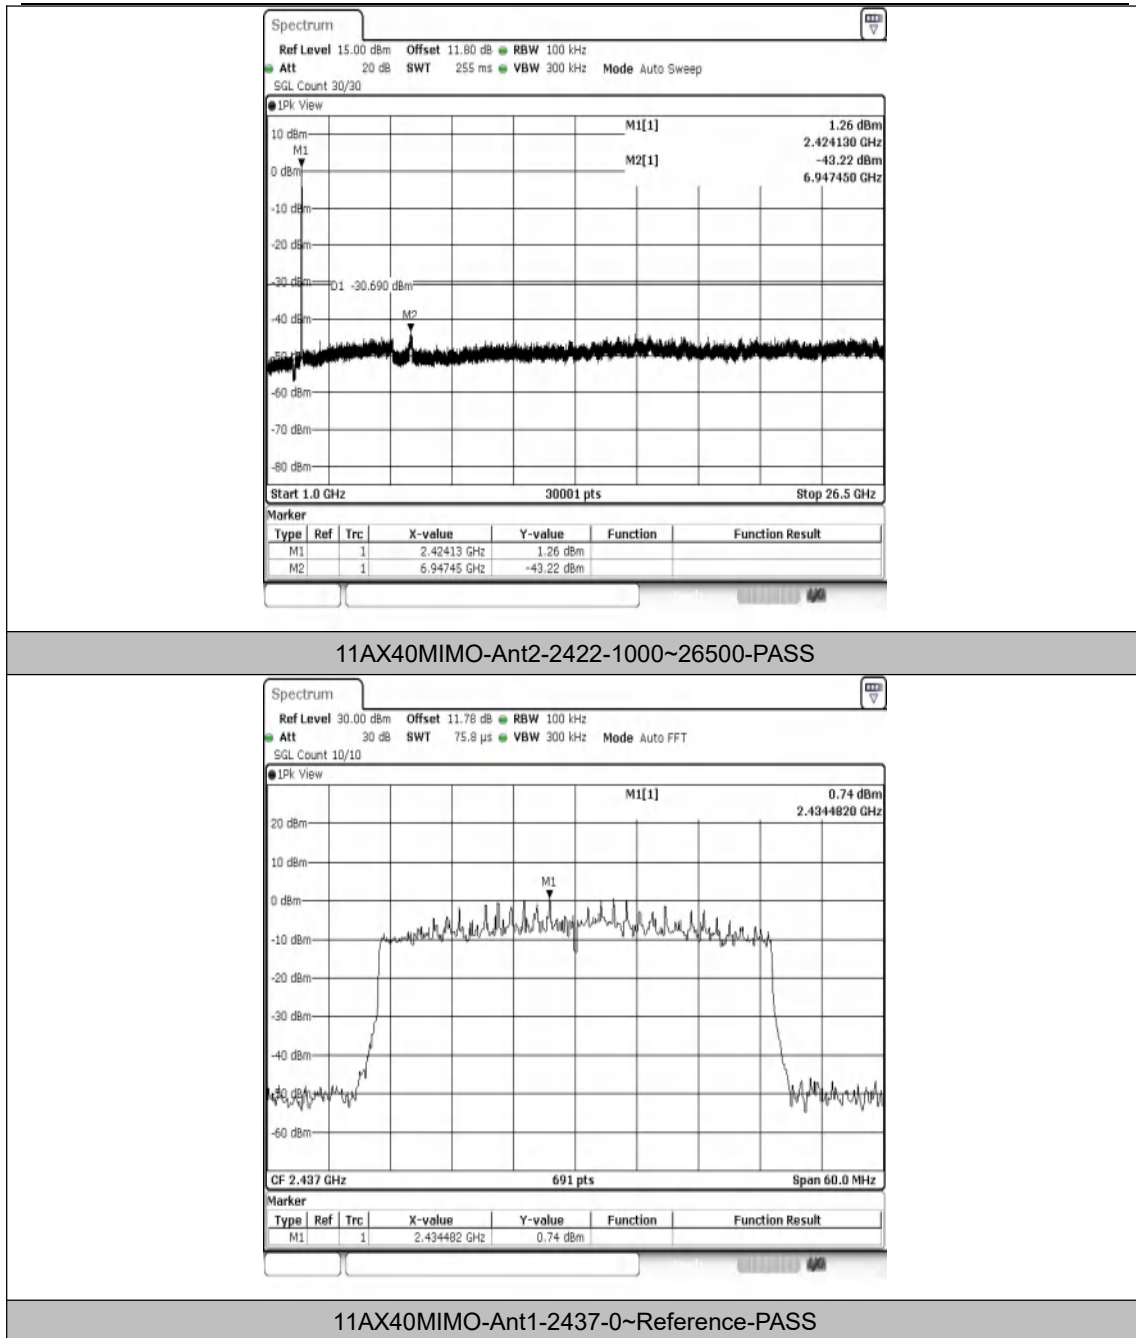


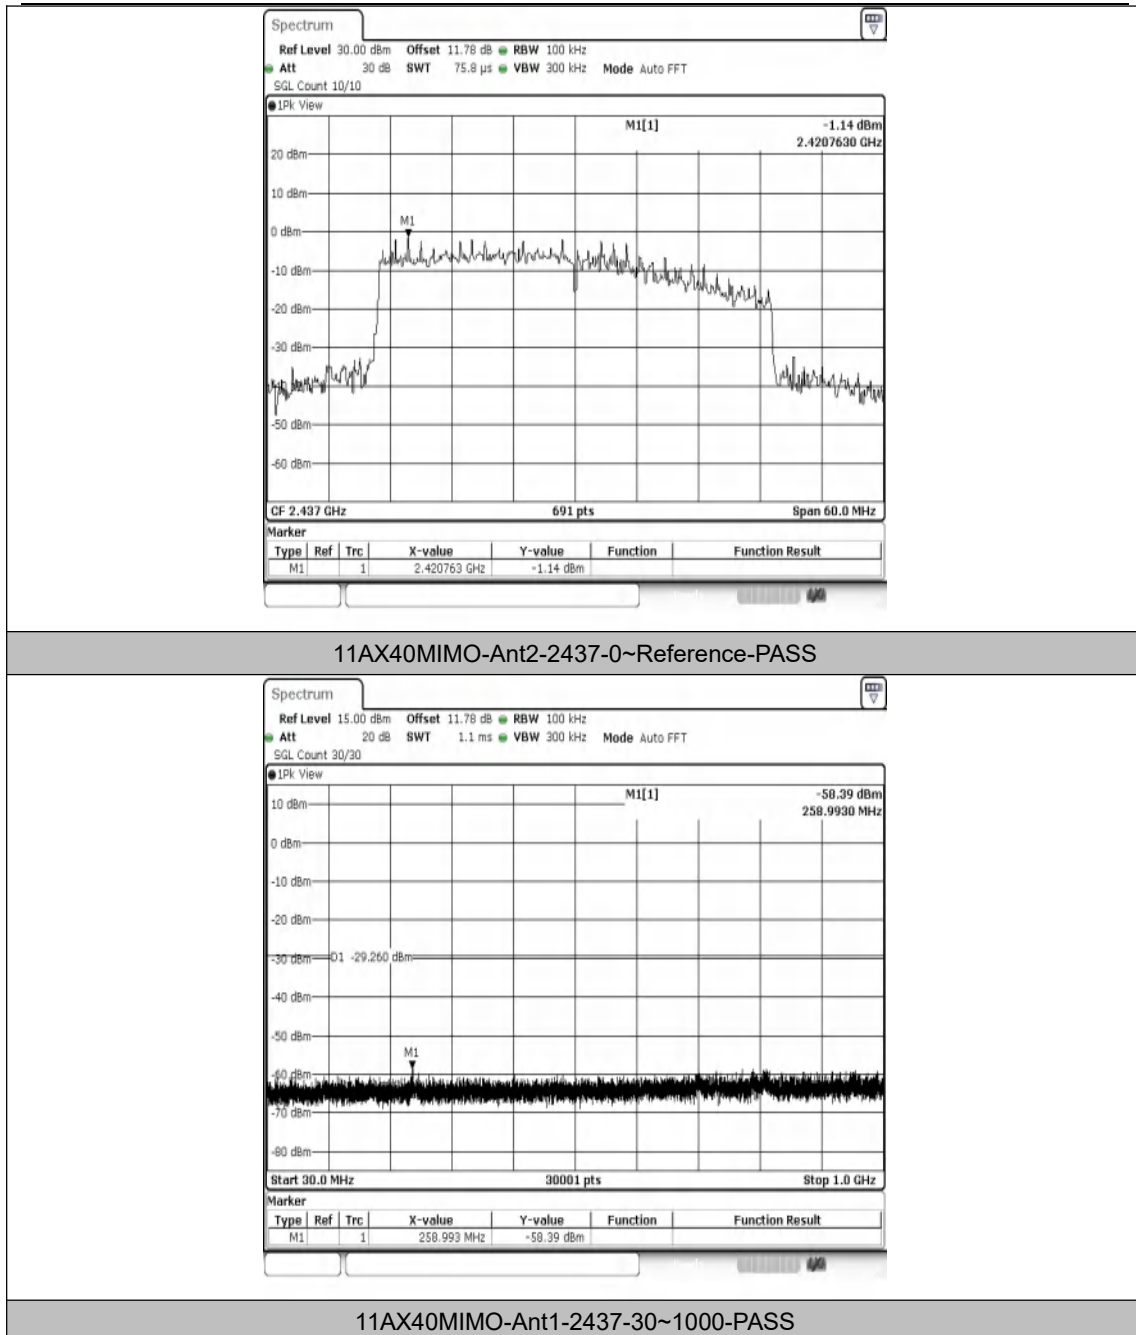

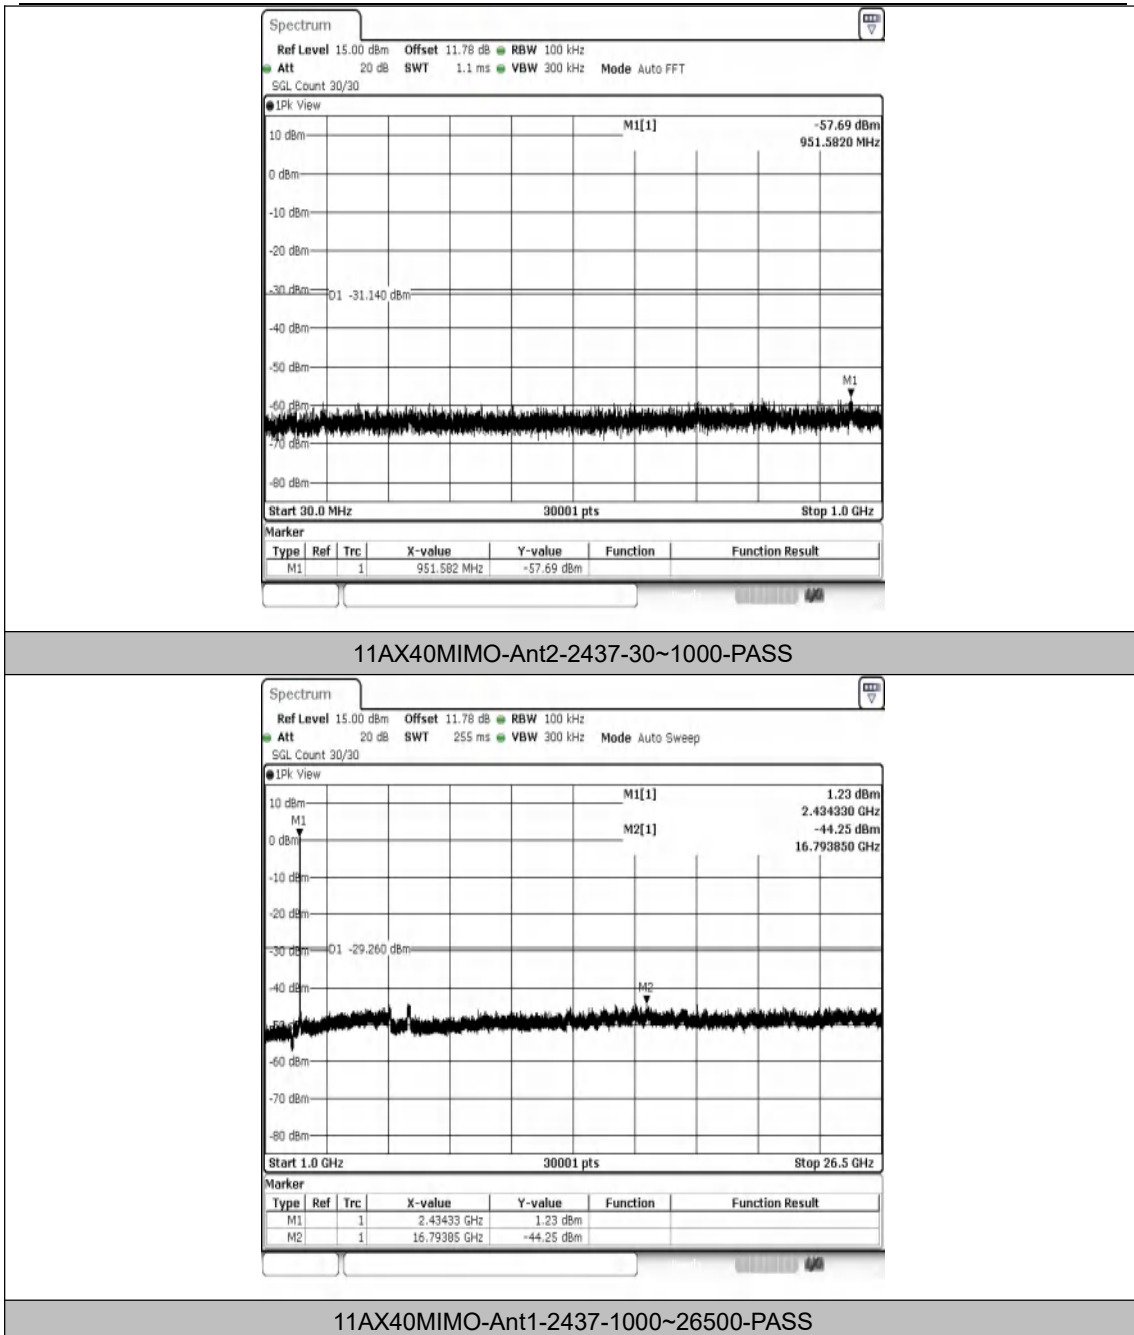


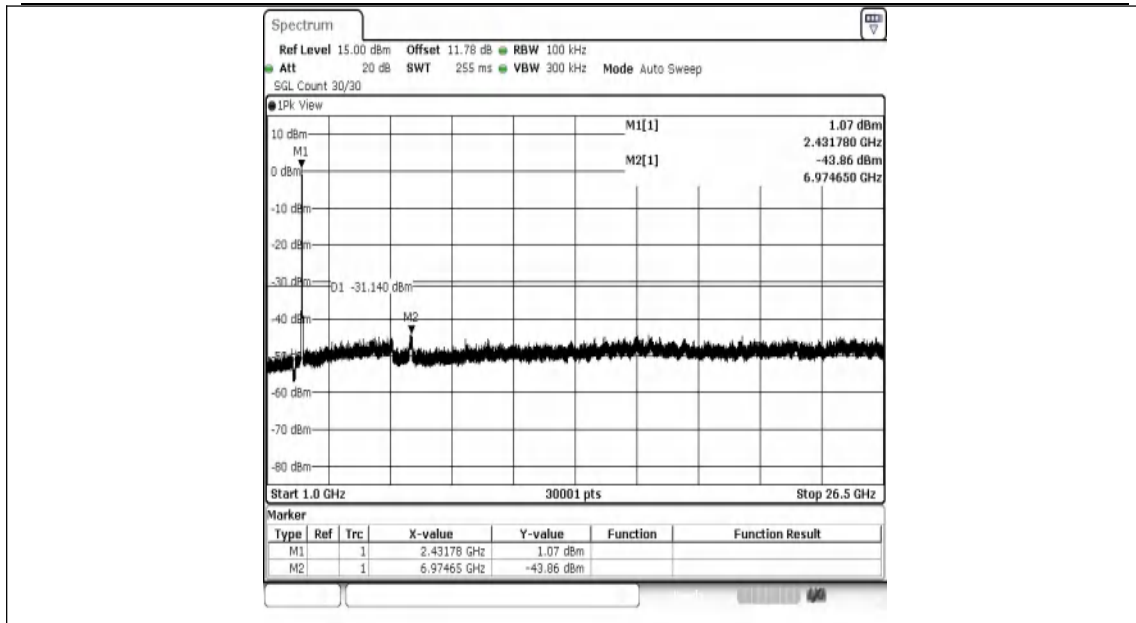



11AX40MIMO-Ant2-2437-1000~26500-PASS

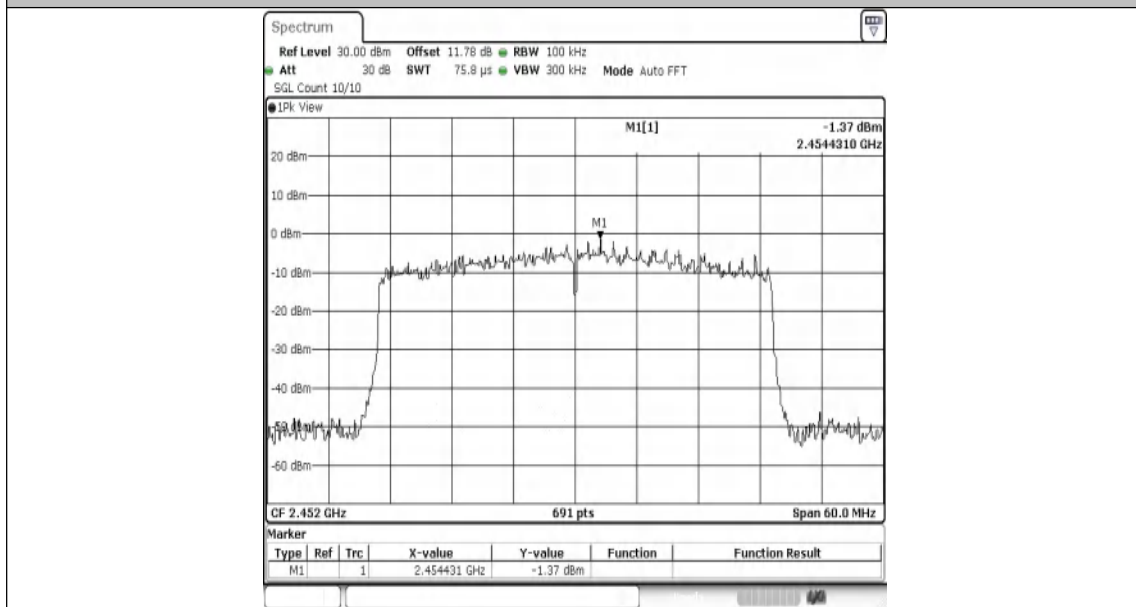

11AX40MIMO-Ant1-2452-0~Reference-PASS

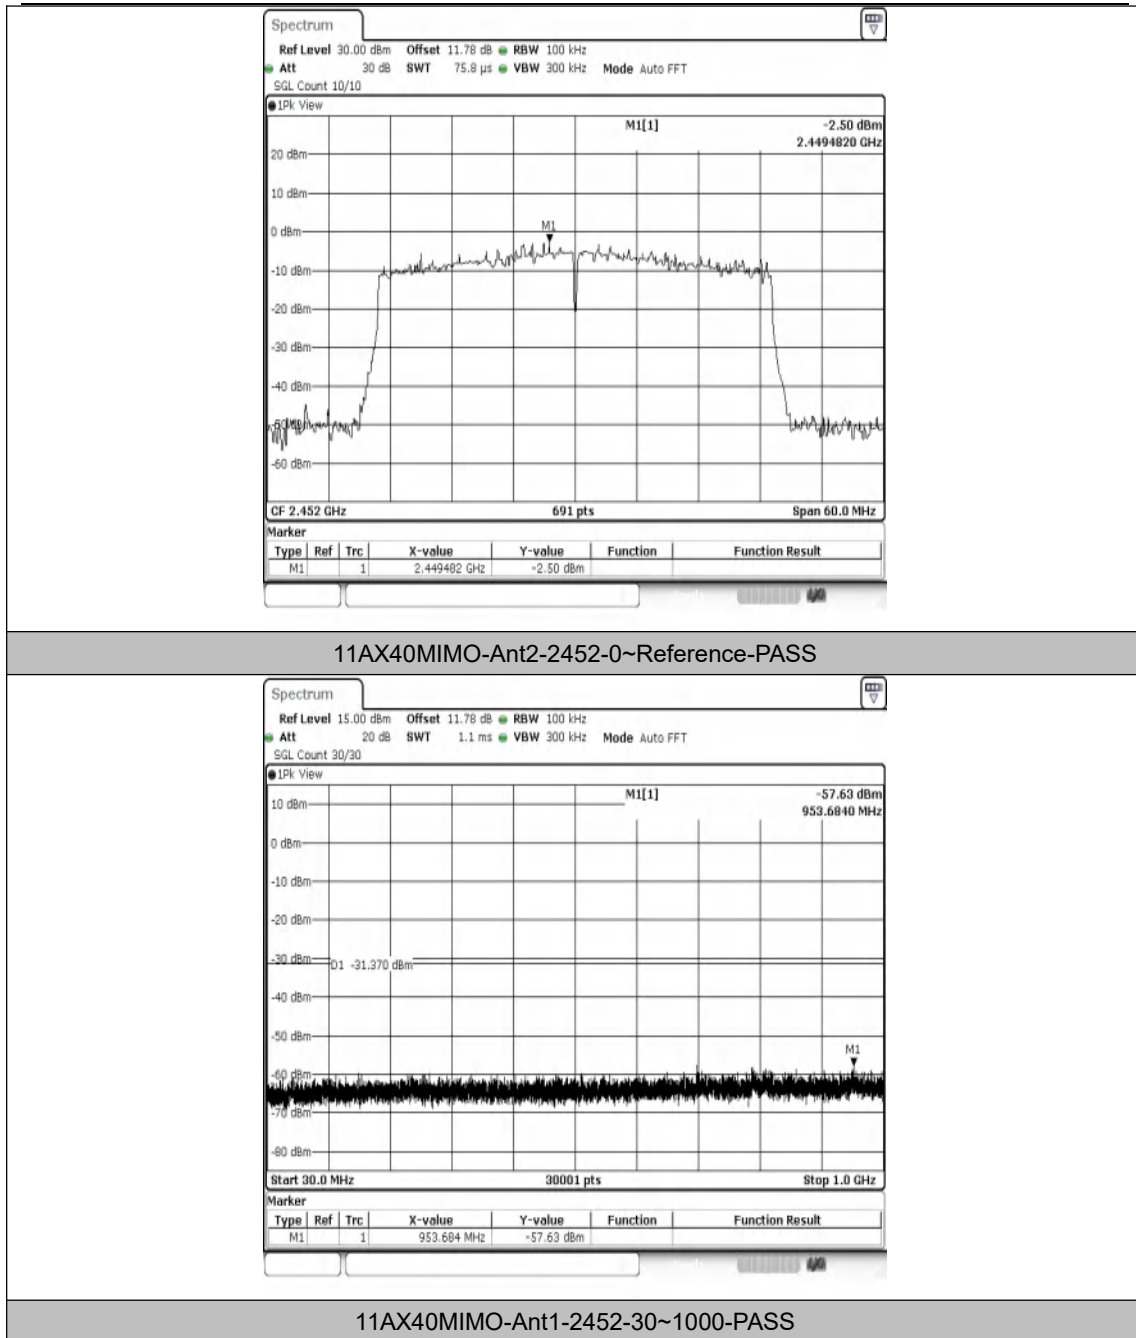

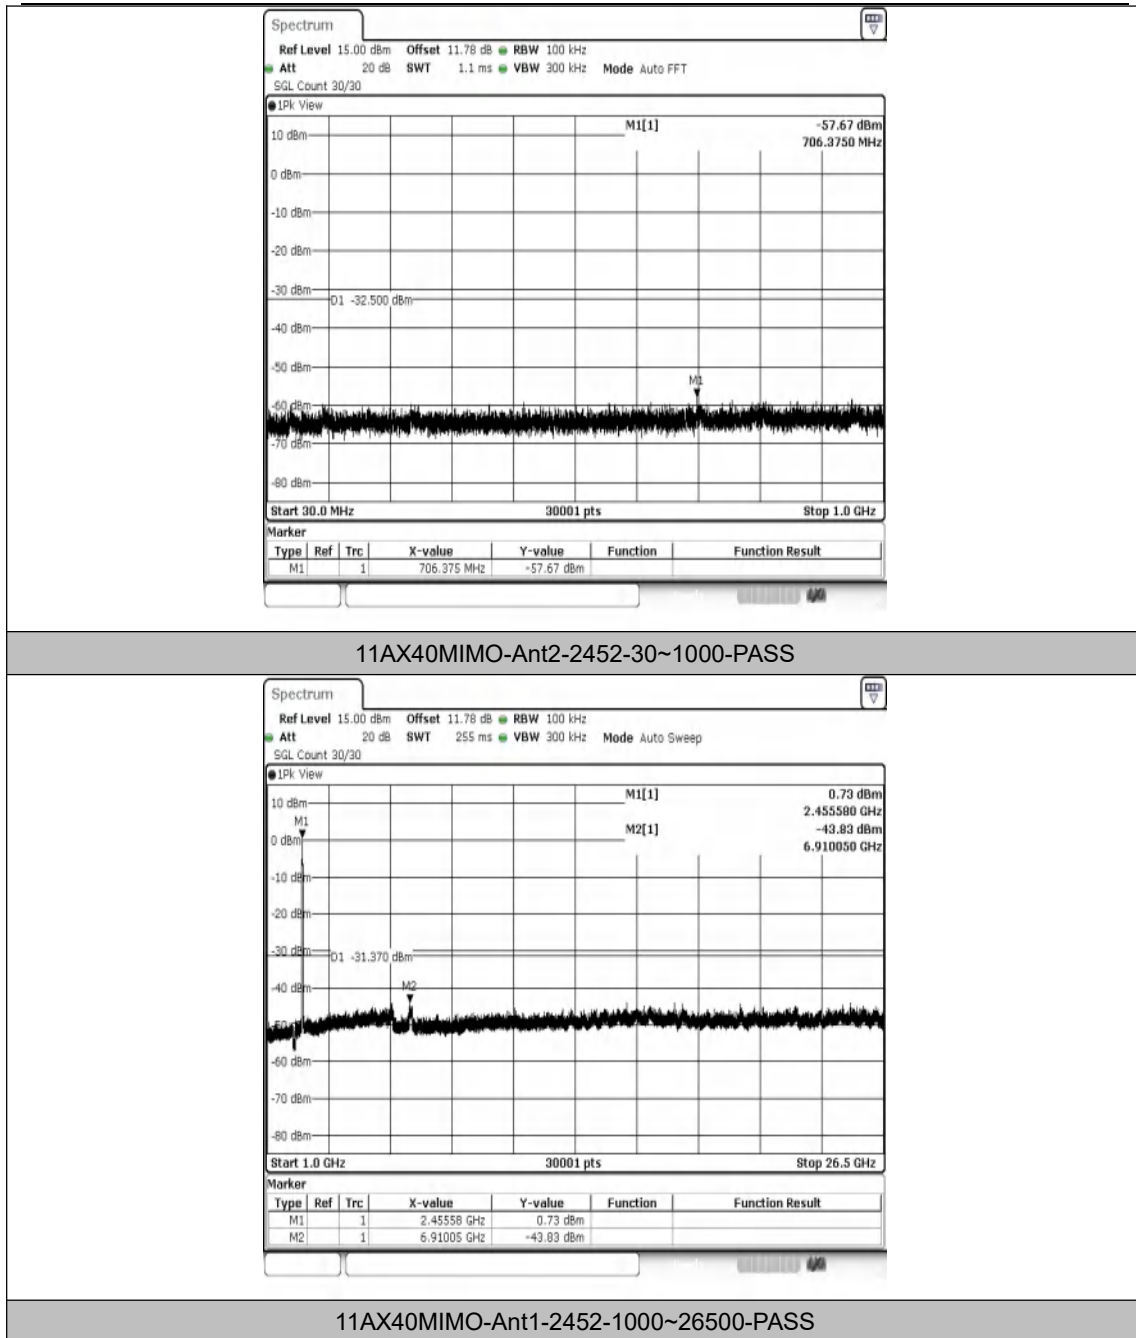

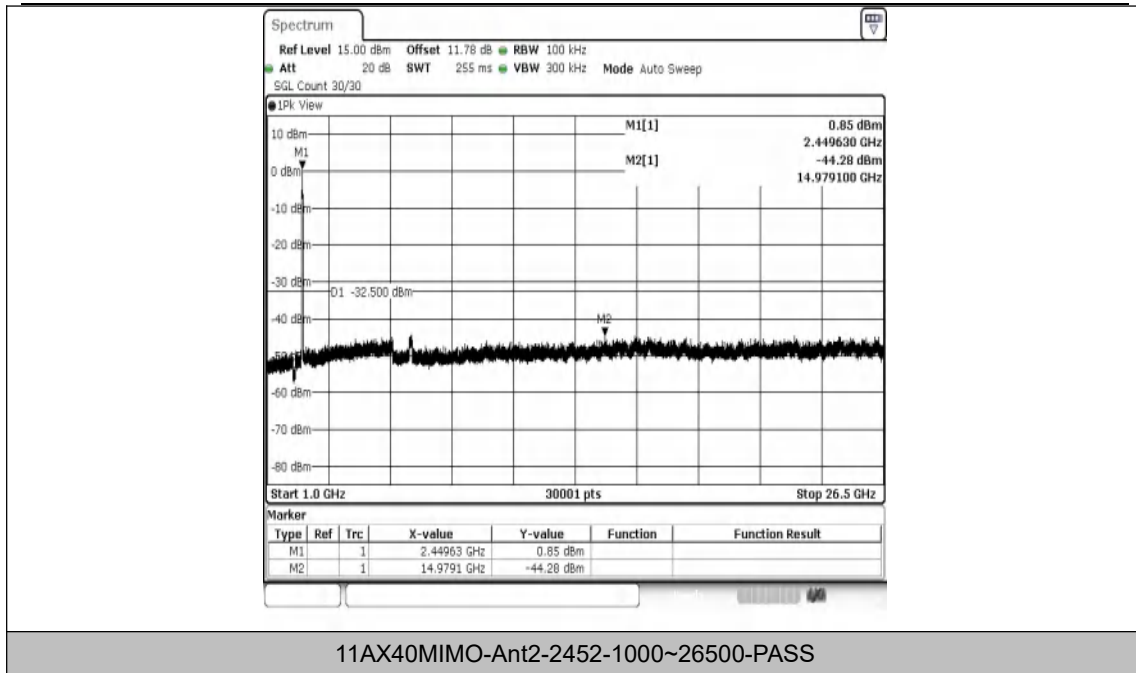

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

Appendix G: Duty Cycle

Test Result

Test Mode	Antenna	Frequency [MHz]	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]	Factor
11B	Ant1	2412	100.00	100.00	100.00	0.00
11B	Ant2	2412	100.00	100.00	100.00	0.00
11B	Ant1	2437	100.00	100.00	100.00	0.00
11B	Ant2	2437	100.00	100.00	100.00	0.00
11B	Ant1	2462	100.00	100.00	100.00	0.00
11B	Ant2	2462	100.00	100.00	100.00	0.00
11G	Ant1	2412	100.00	100.00	100.00	0.00
11G	Ant2	2412	100.00	100.00	100.00	0.00
11G	Ant1	2437	100.00	100.00	100.00	0.00
11G	Ant2	2437	100.00	100.00	100.00	0.00
11G	Ant1	2462	100.00	100.00	100.00	0.00
11G	Ant2	2462	100.00	100.00	100.00	0.00
11N20MIMO	Ant1	2412	100.00	100.00	100.00	0.00
11N20MIMO	Ant2	2412	100.00	100.00	100.00	0.00
11N20MIMO	Ant1	2437	100.00	100.00	100.00	0.00
11N20MIMO	Ant2	2437	100.00	100.00	100.00	0.00
11N20MIMO	Ant1	2462	100.00	100.00	100.00	0.00
11N20MIMO	Ant2	2462	100.00	100.00	100.00	0.00
11N40MIMO	Ant1	2422	100.00	100.00	100.00	0.00
11N40MIMO	Ant2	2422	100.00	100.00	100.00	0.00
11N40MIMO	Ant1	2437	100.00	100.00	100.00	0.00
11N40MIMO	Ant2	2437	100.00	100.00	100.00	0.00
11N40MIMO	Ant1	2452	100.00	100.00	100.00	0.00
11N40MIMO	Ant2	2452	100.00	100.00	100.00	0.00
11AX20MIMO	Ant1	2412	100.00	100.00	100.00	0.00
11AX20MIMO	Ant2	2412	100.00	100.00	100.00	0.00
11AX20MIMO	Ant1	2437	100.00	100.00	100.00	0.00
11AX20MIMO	Ant2	2437	100.00	100.00	100.00	0.00
11AX20MIMO	Ant1	2462	100.00	100.00	100.00	0.00
11AX20MIMO	Ant2	2462	100.00	100.00	100.00	0.00
11AX40MIMO	Ant1	2422	100.00	100.00	100.00	0.00
11AX40MIMO	Ant2	2422	100.00	100.00	100.00	0.00
11AX40MIMO	Ant1	2437	100.00	100.00	100.00	0.00
11AX40MIMO	Ant2	2437	100.00	100.00	100.00	0.00
11AX40MIMO	Ant1	2452	100.00	100.00	100.00	0.00
11AX40MIMO	Ant2	2452	100.00	100.00	100.00	0.00


Test Graphs

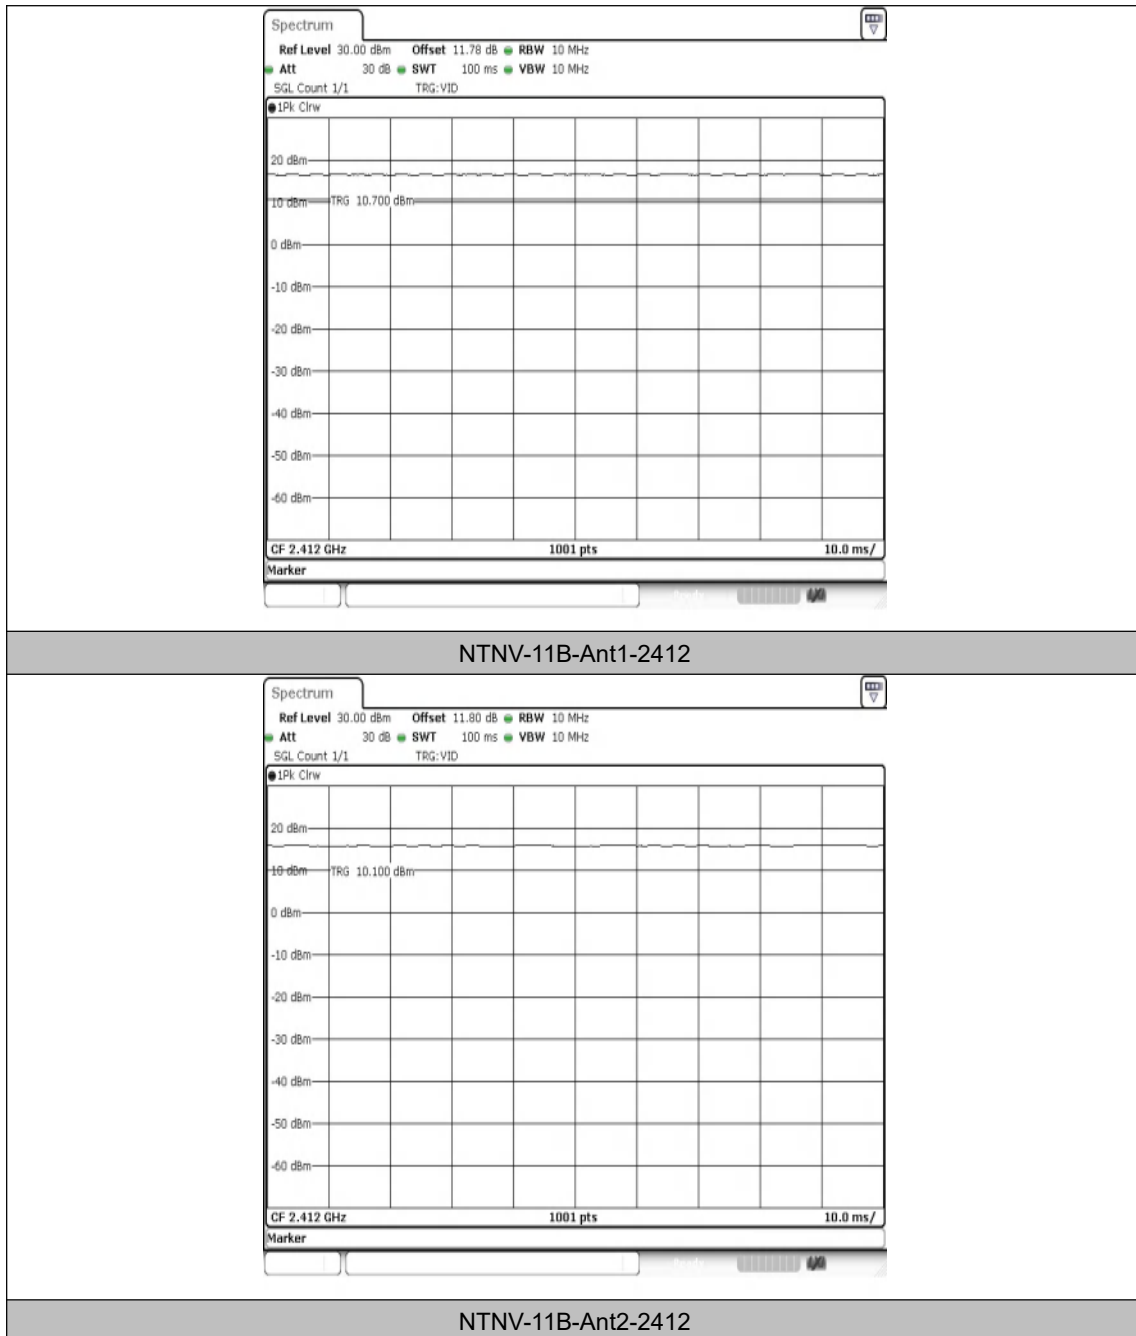

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

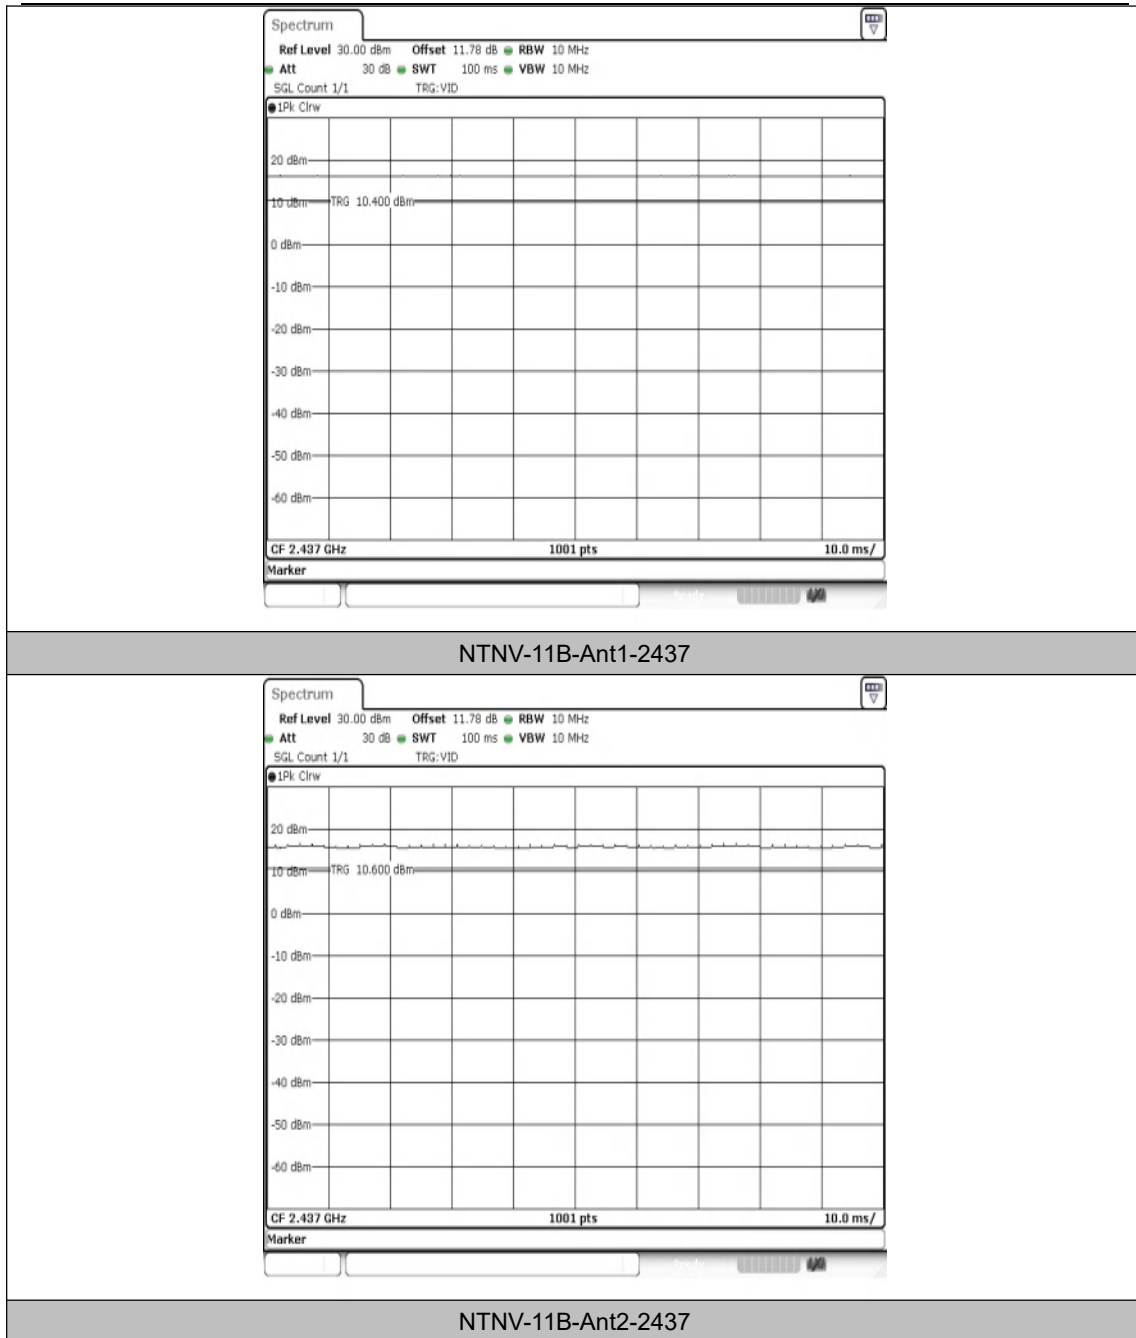

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

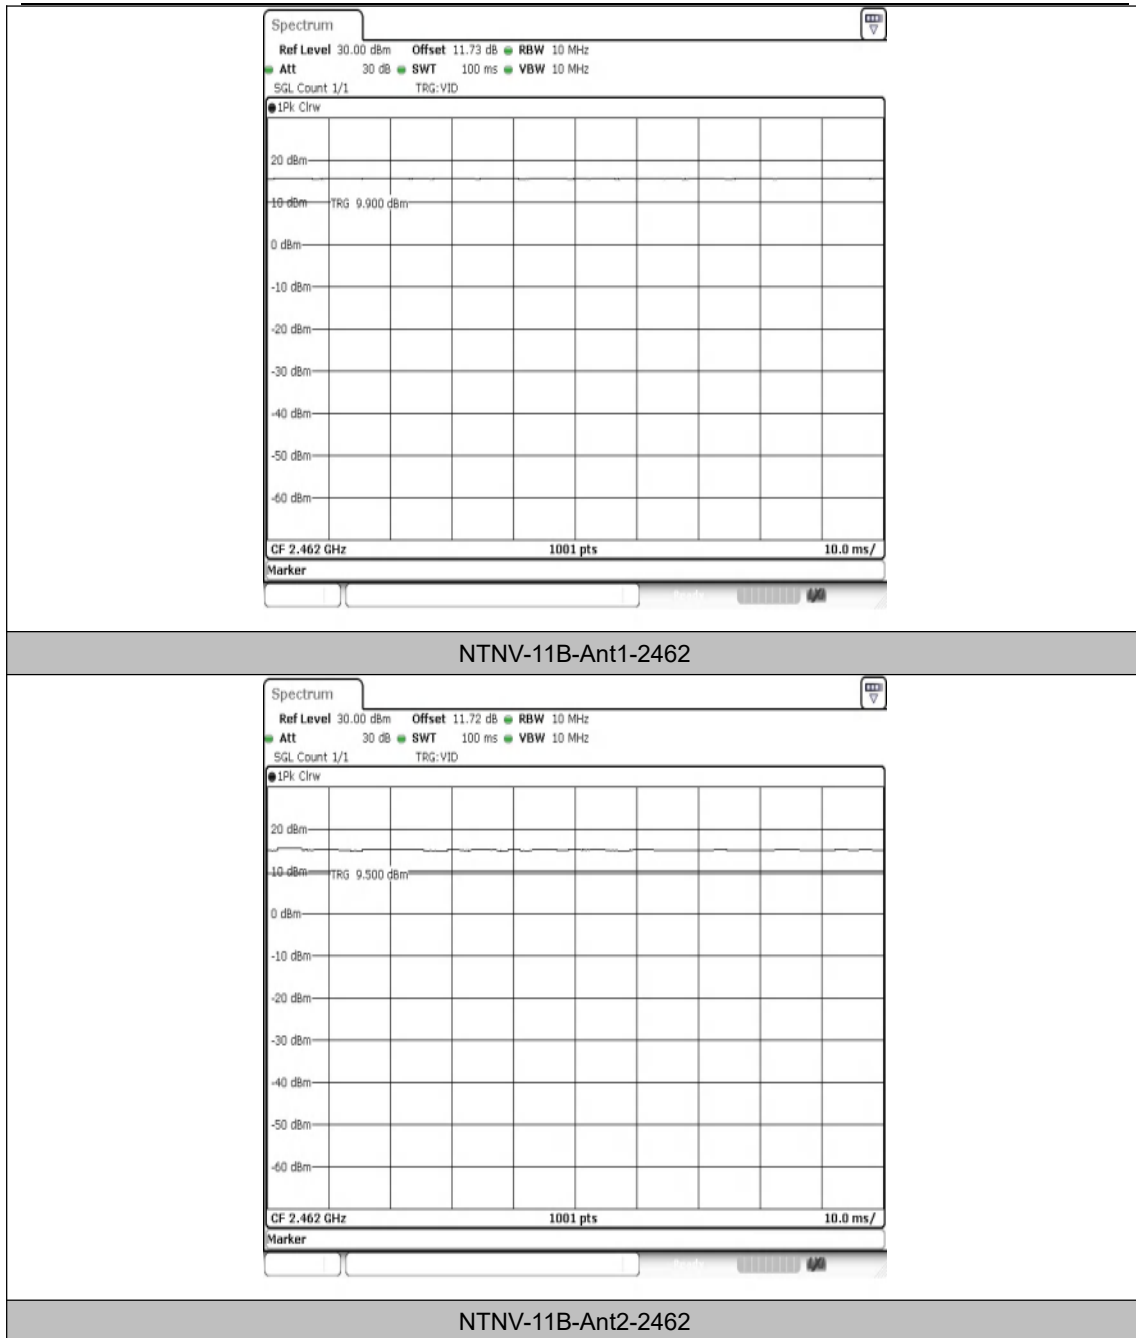

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

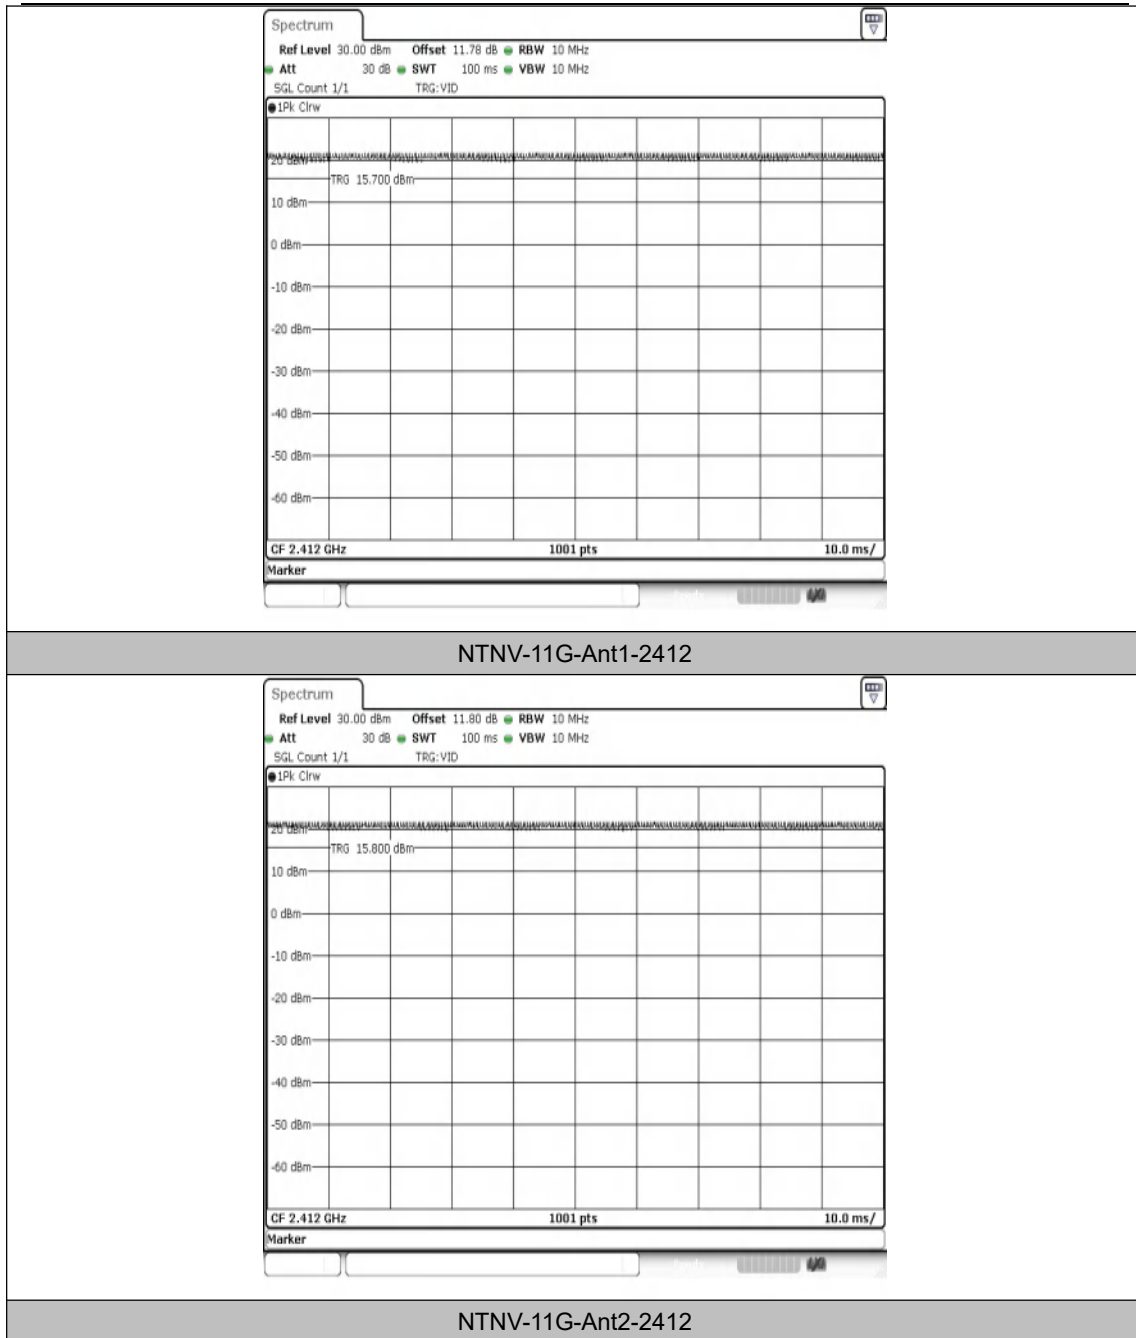

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

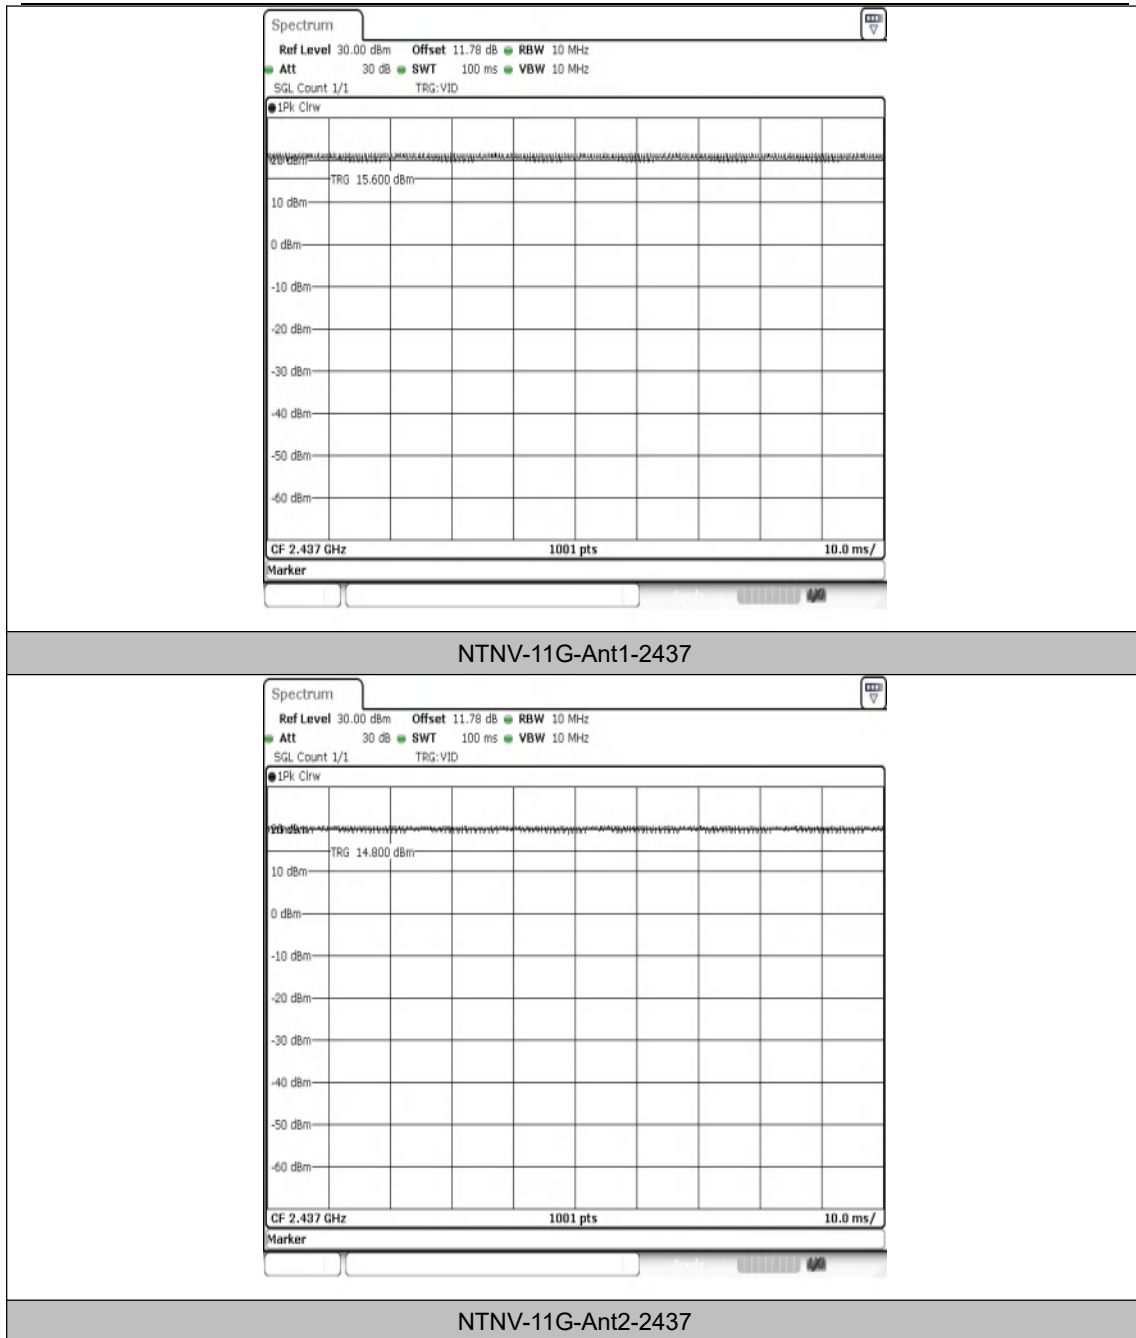

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

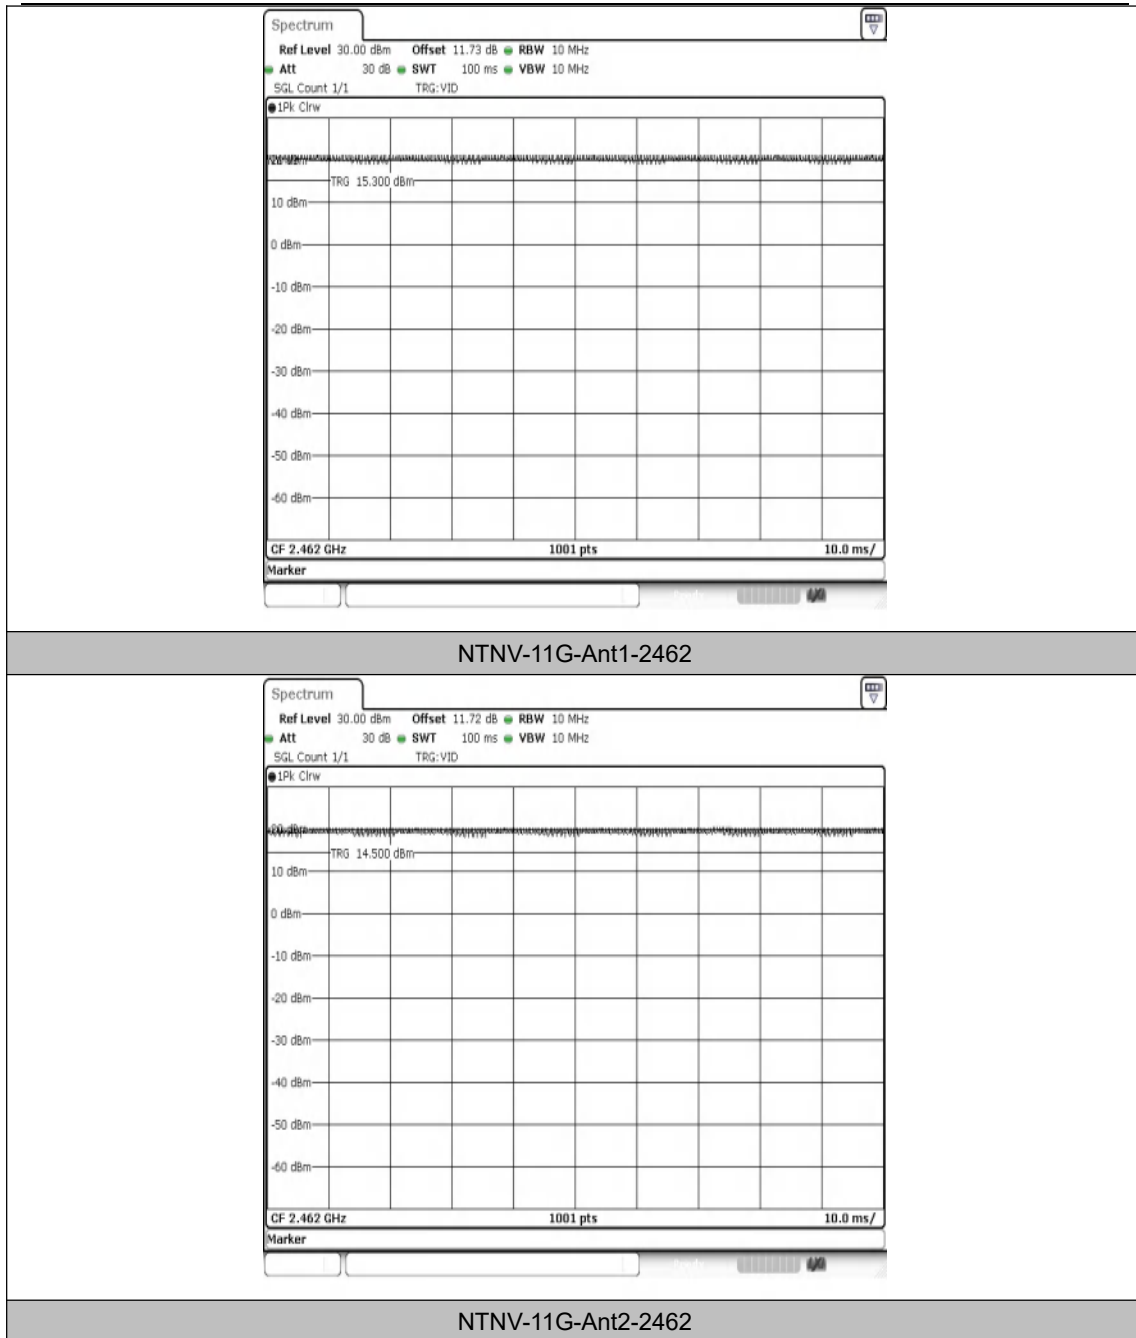

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

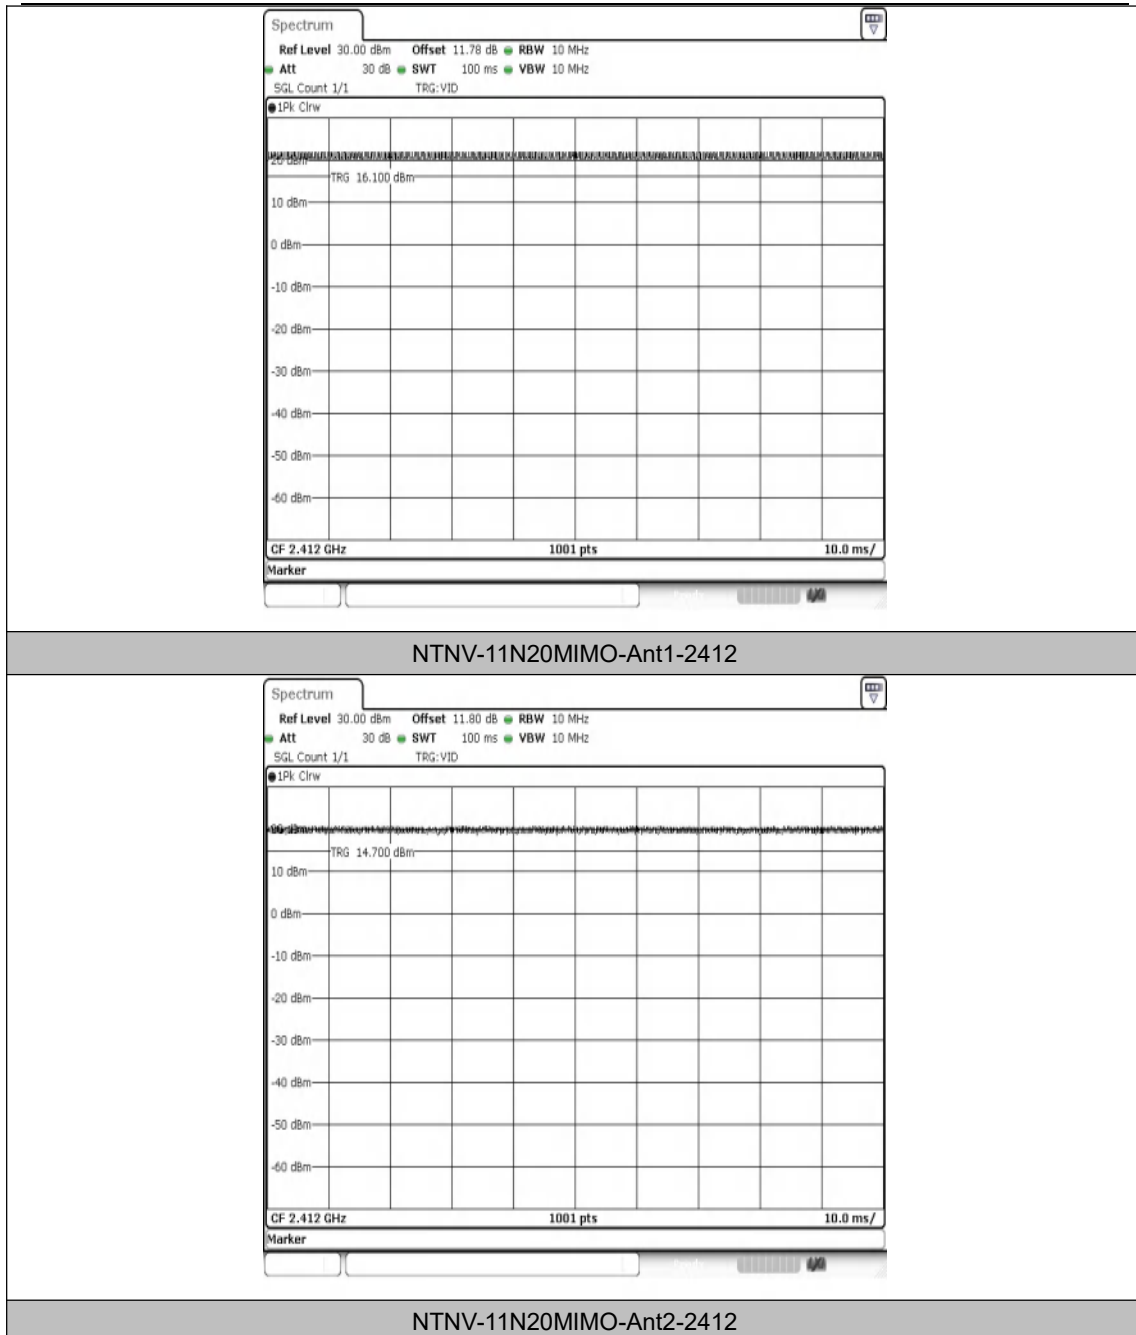

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

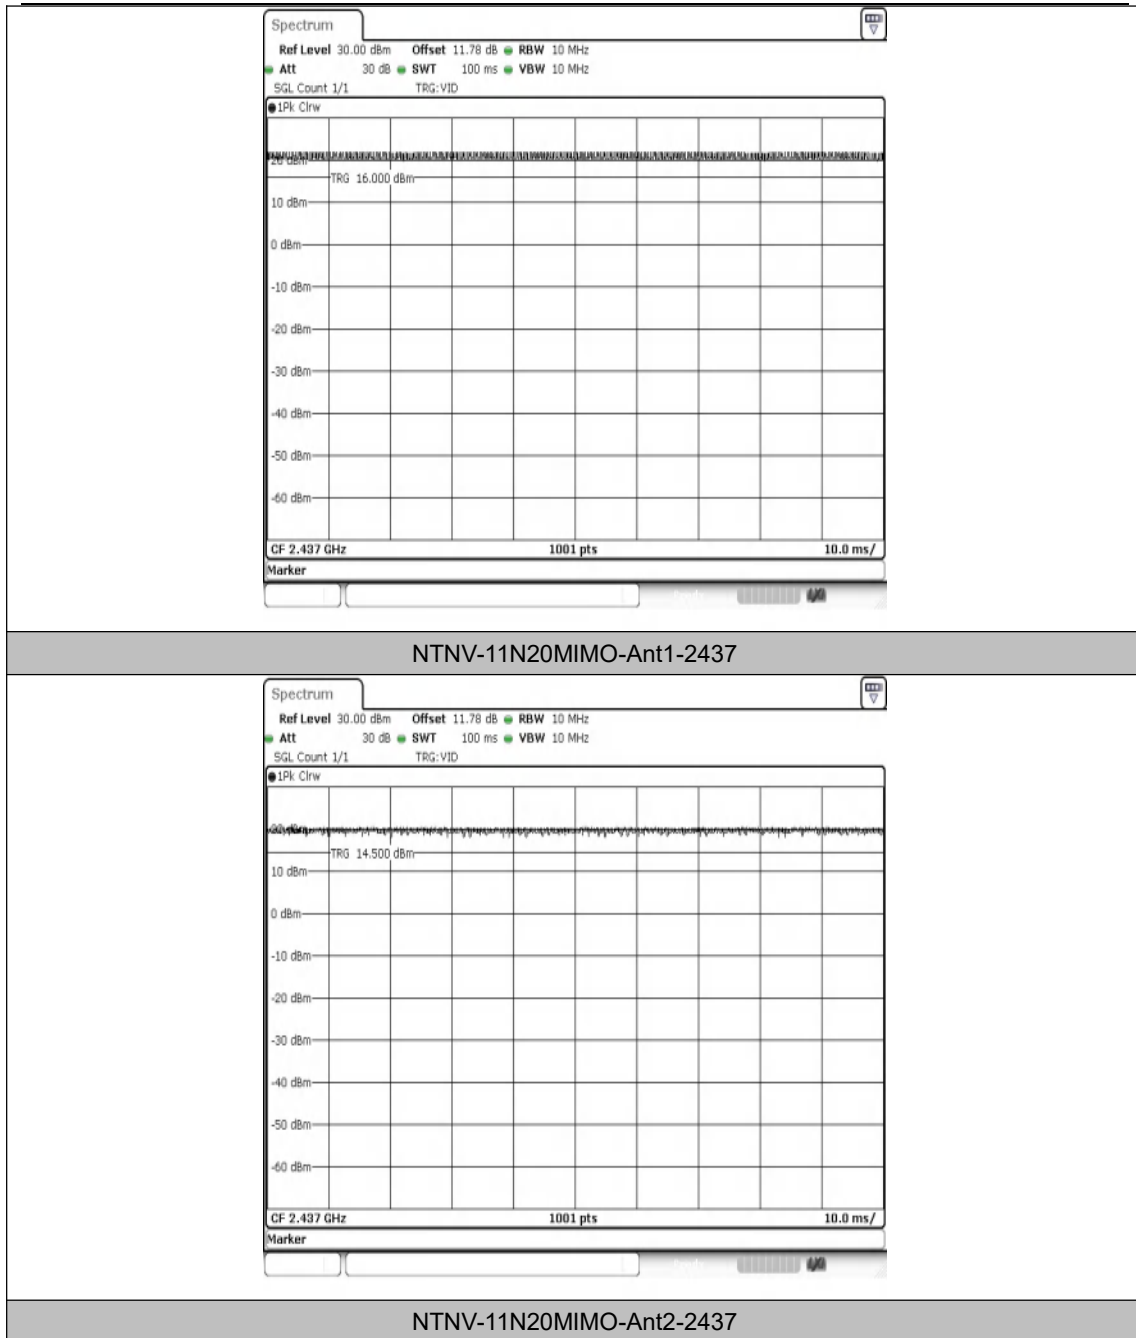

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

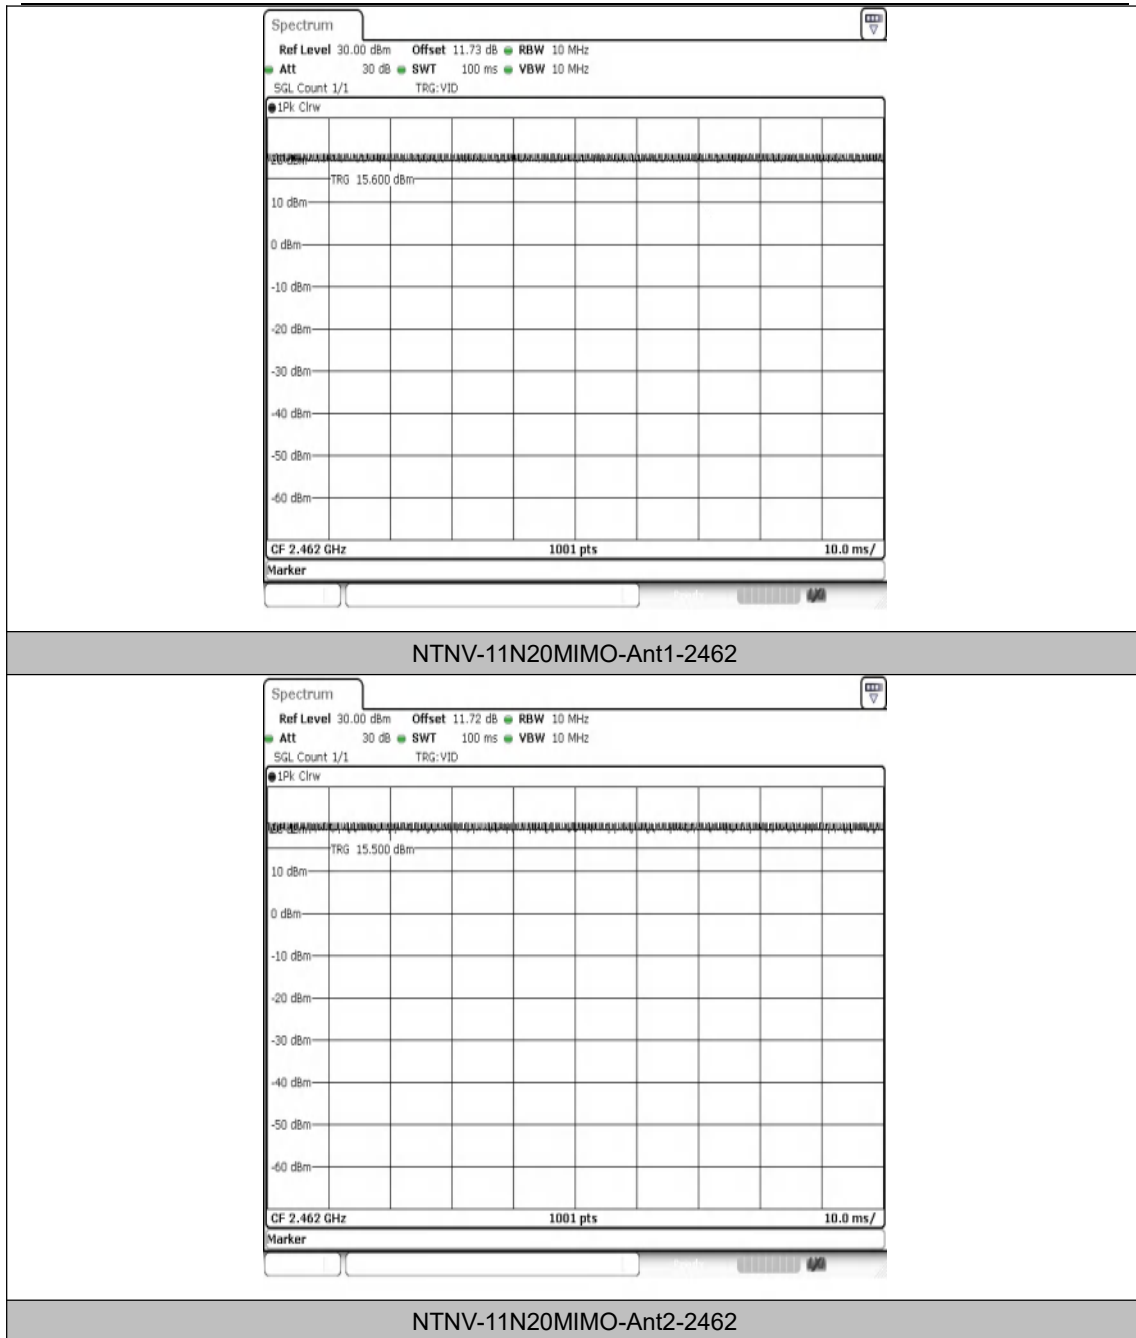


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

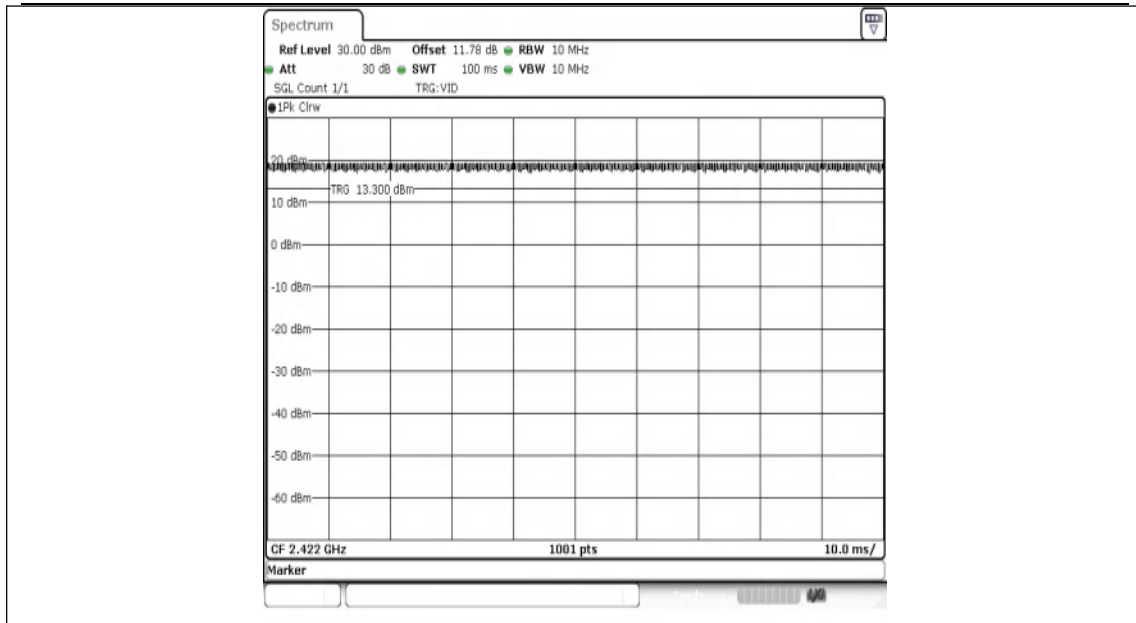

NTNV-11N40MIMO-Ant1-2422

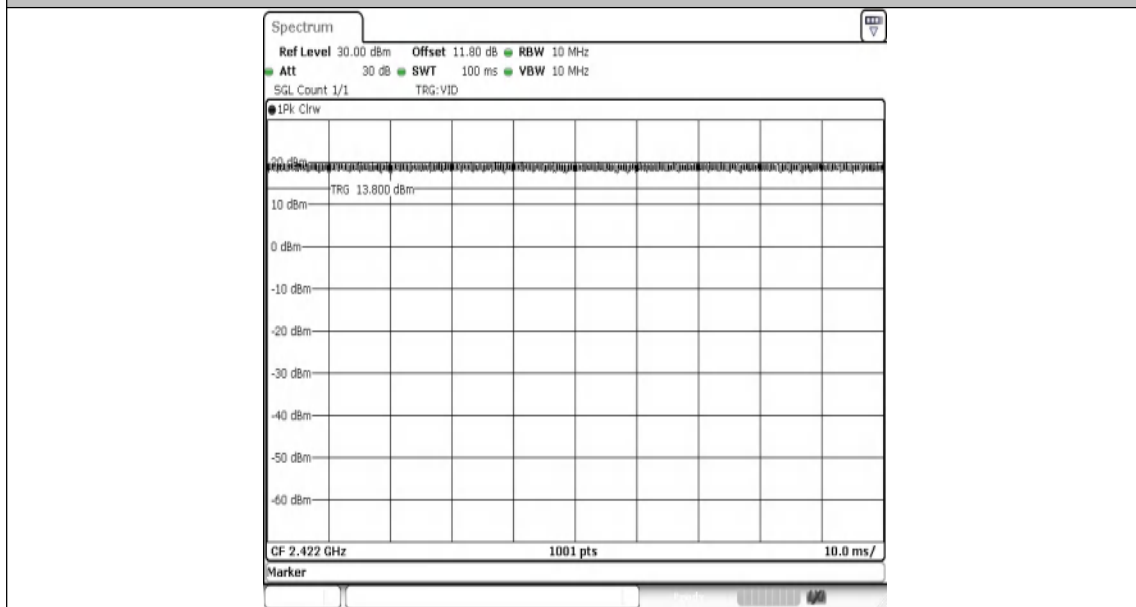


NTNV-11N40MIMO-Ant2-2422

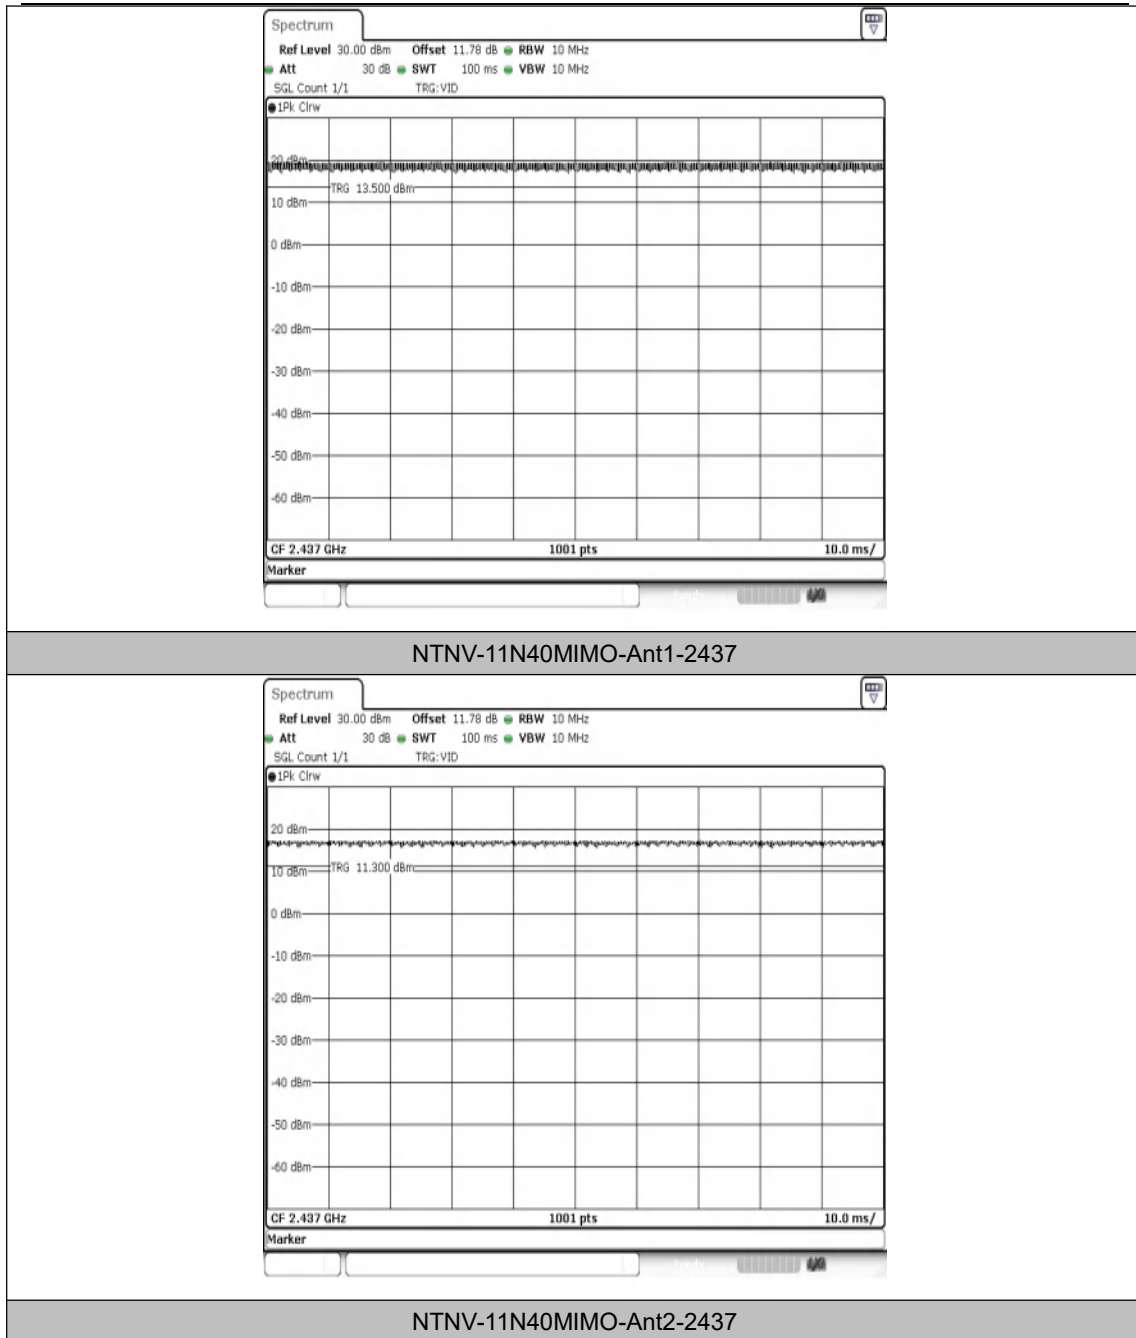


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

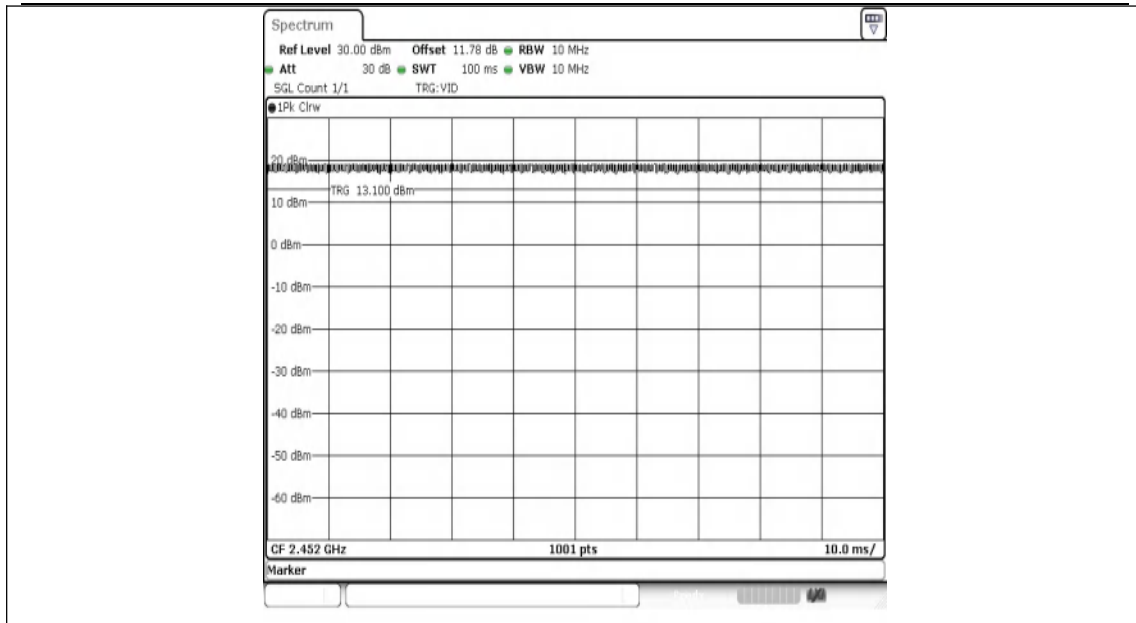


NTNV-11N40MIMO-Ant1-2452

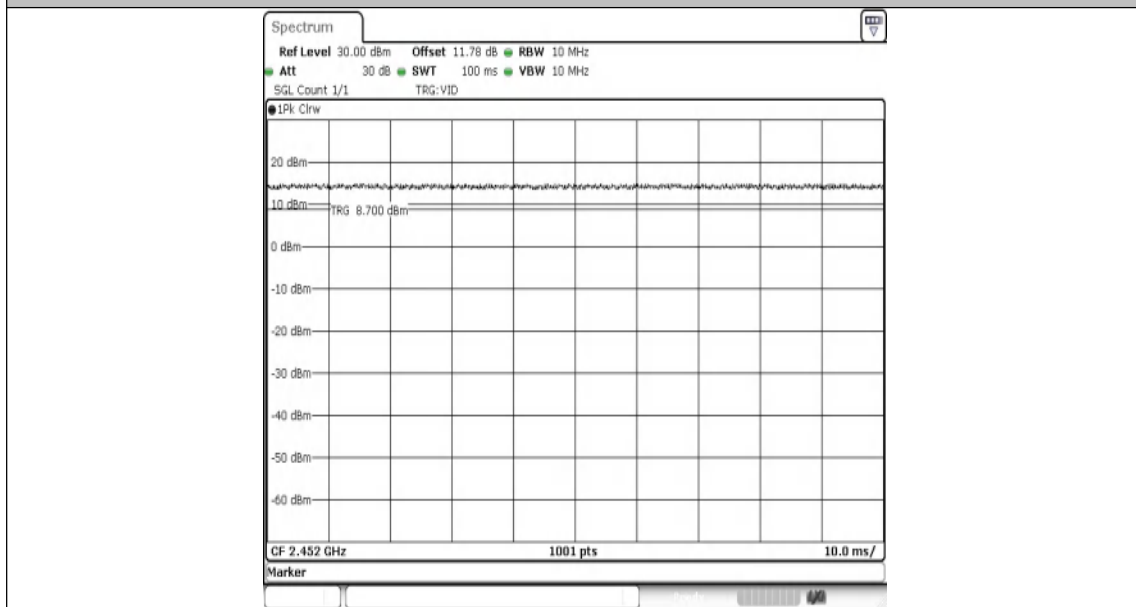


NTNV-11N40MIMO-Ant2-2452

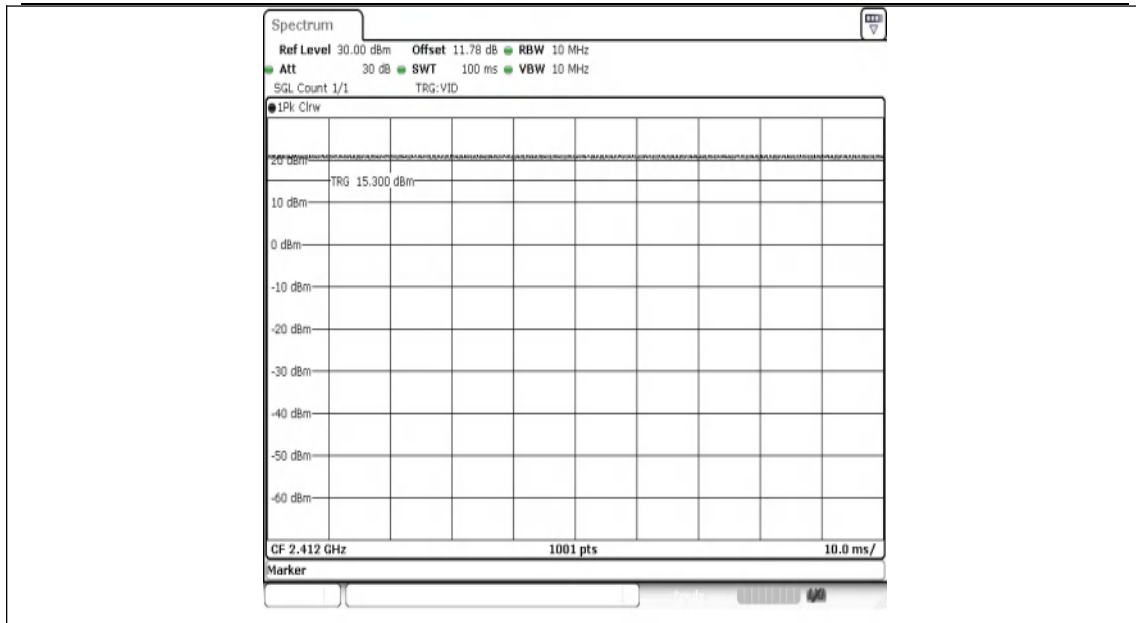

NTNV-11AX20MIMO-Ant1-2412

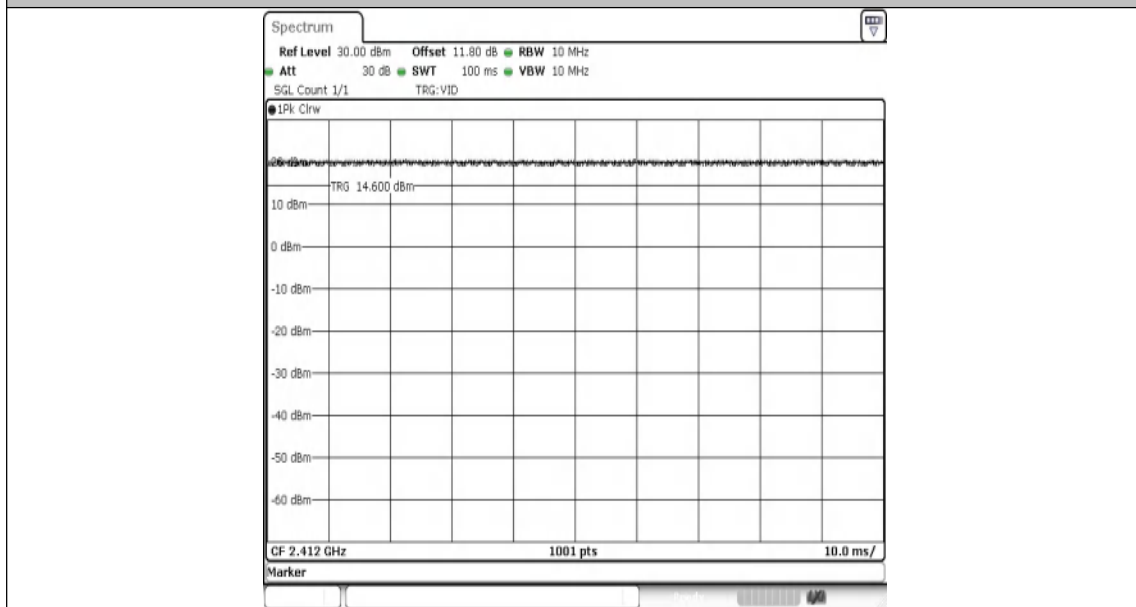


NTNV-11AX20MIMO-Ant2-2412

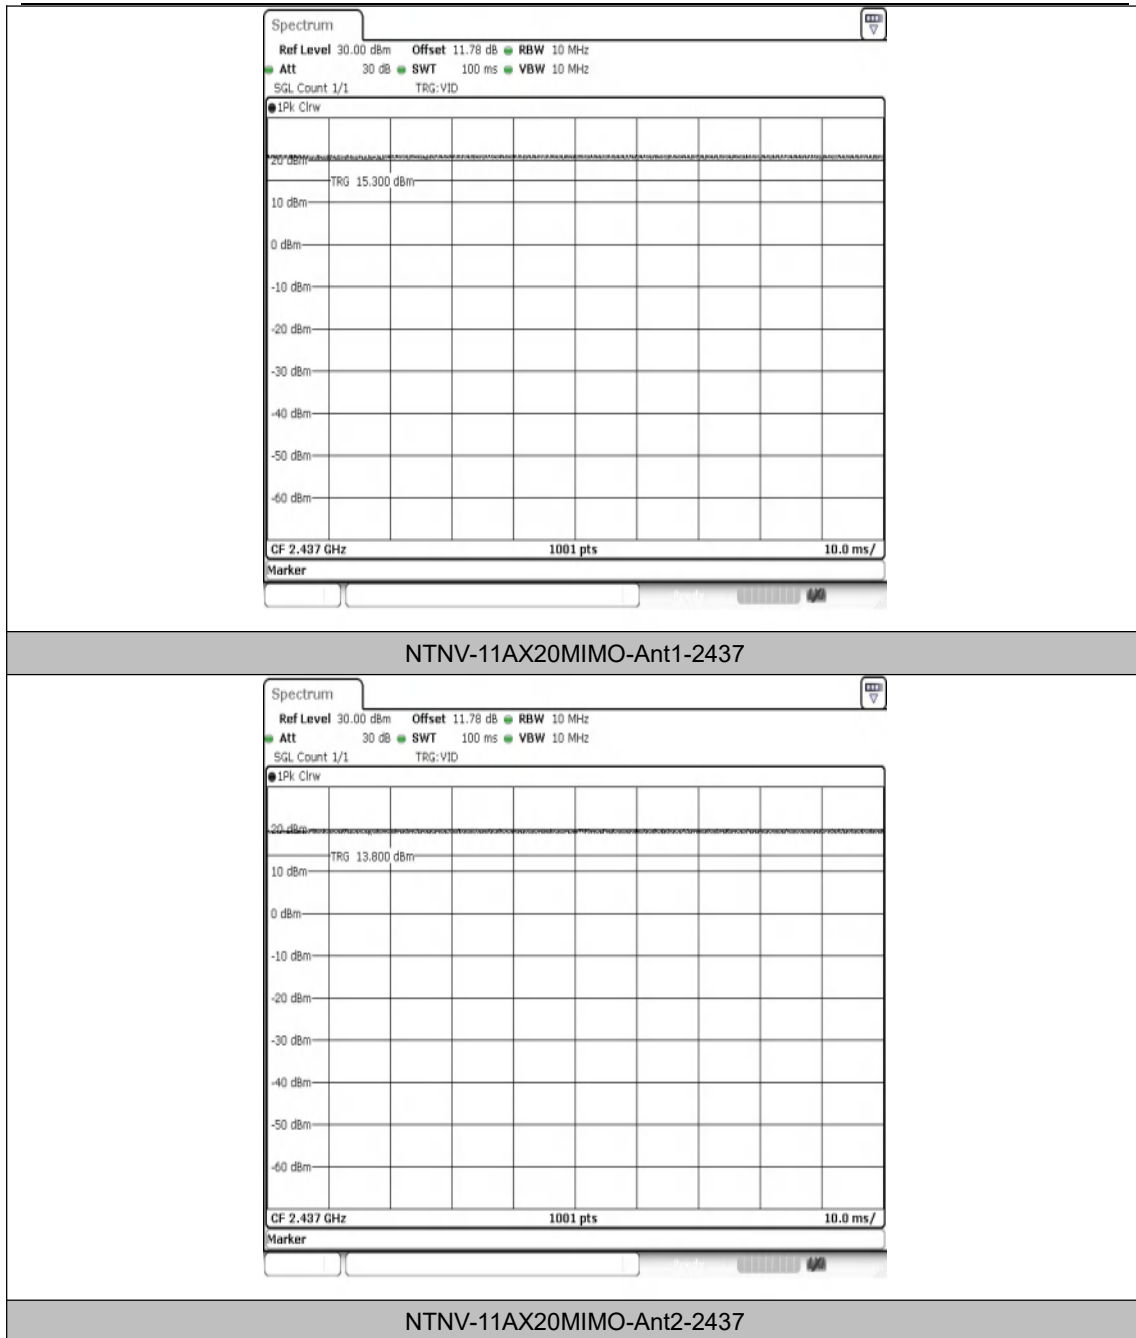

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

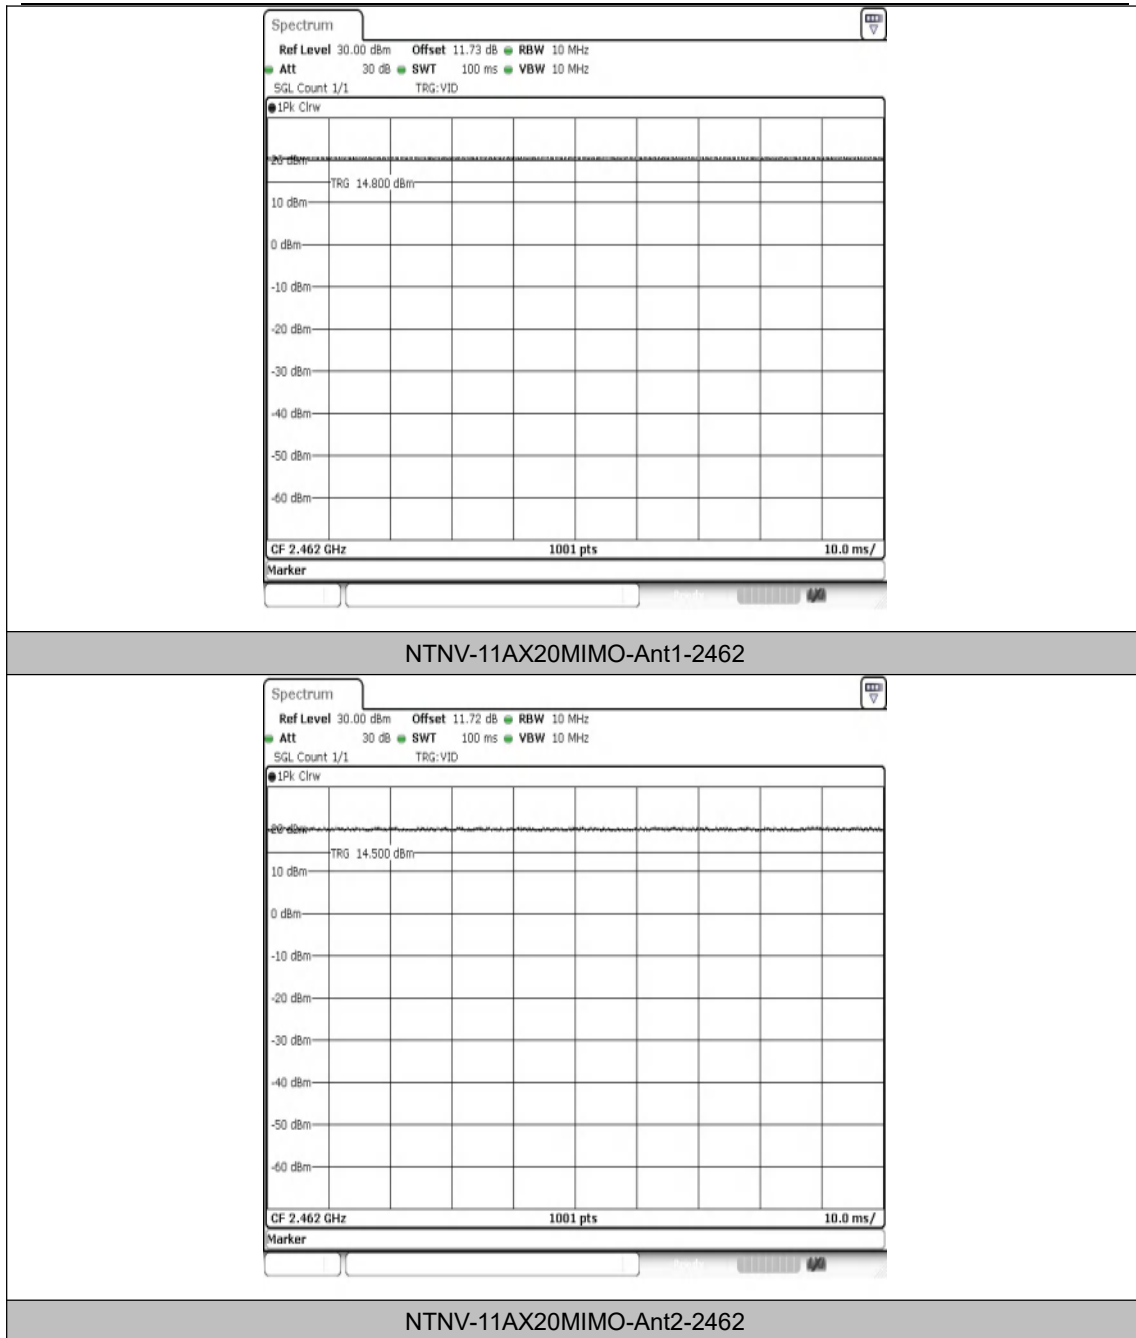

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

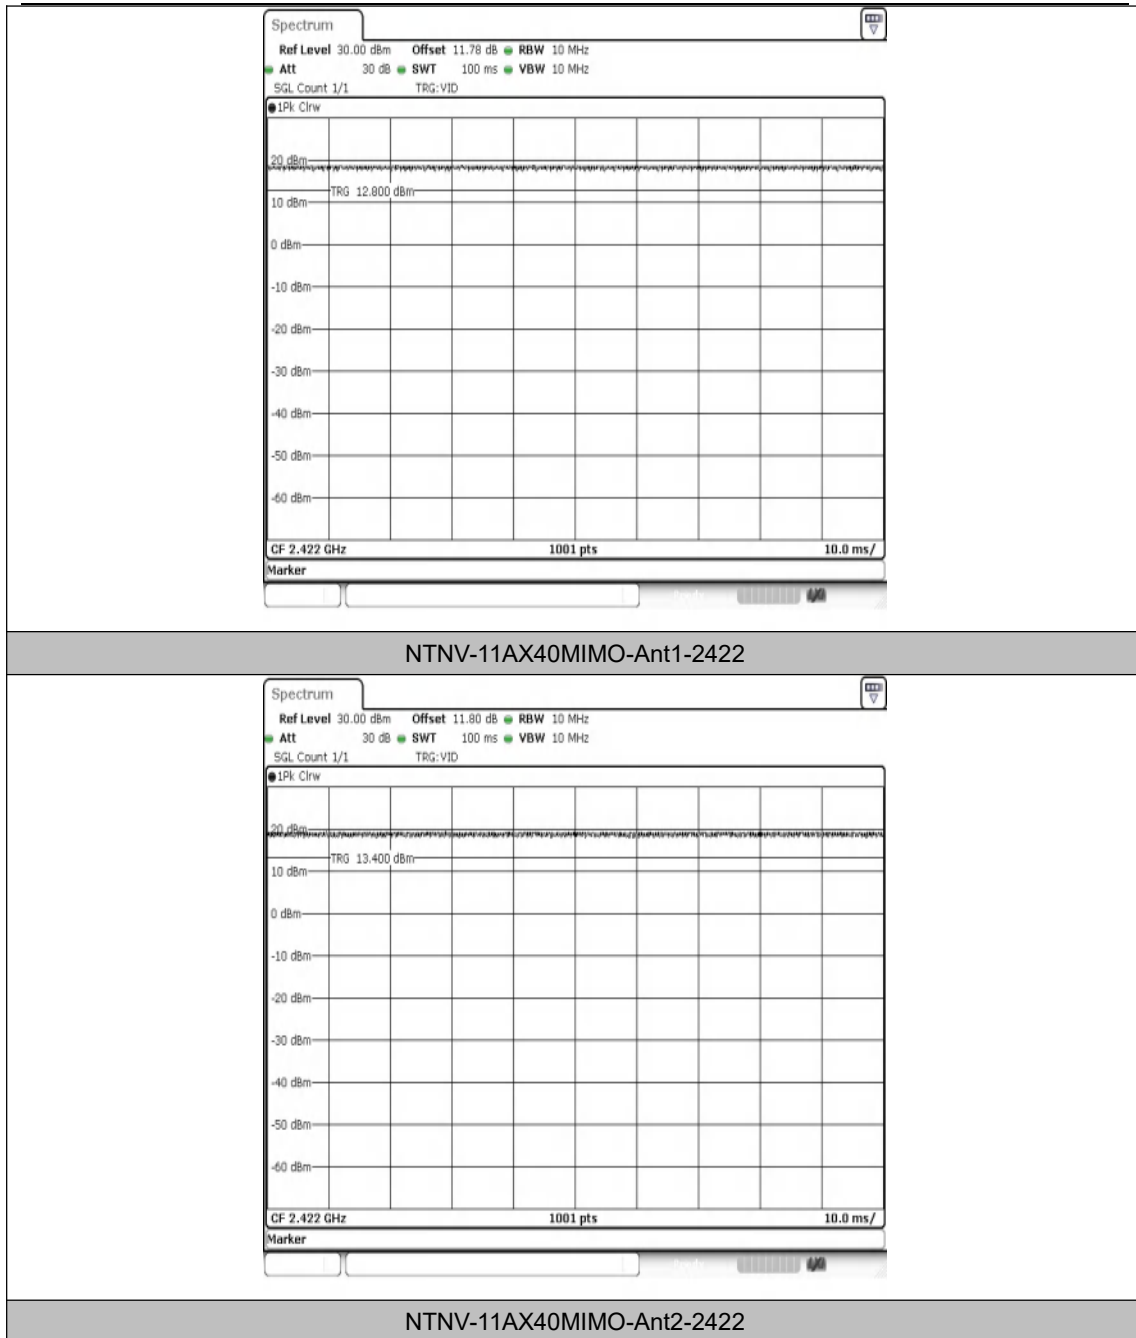


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

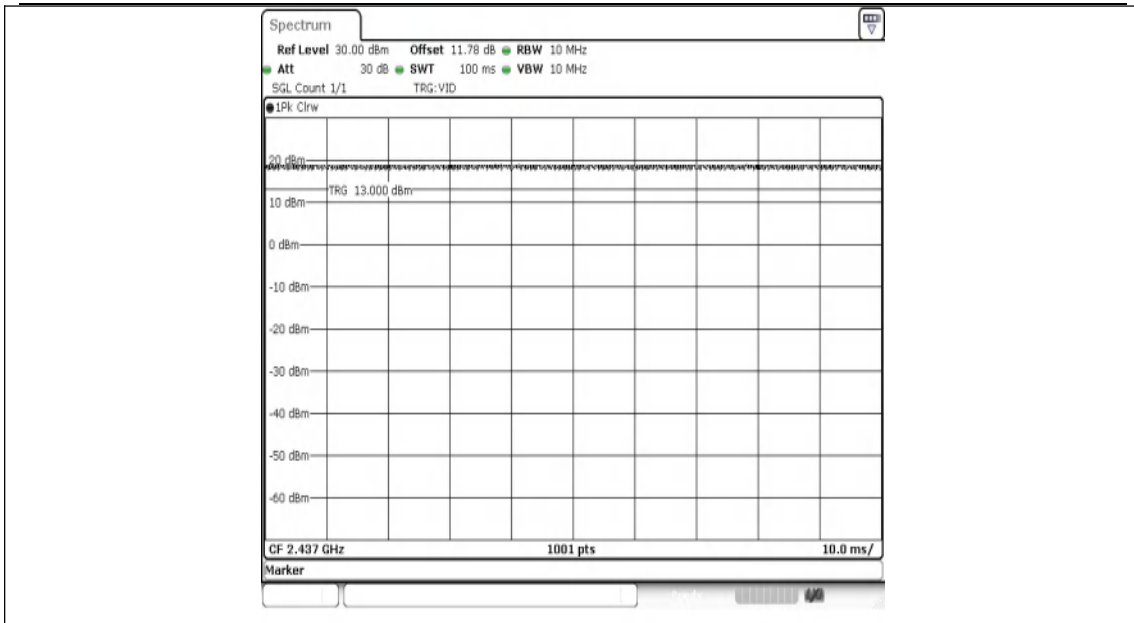

NTNV-11AX40MIMO-Ant1-2437

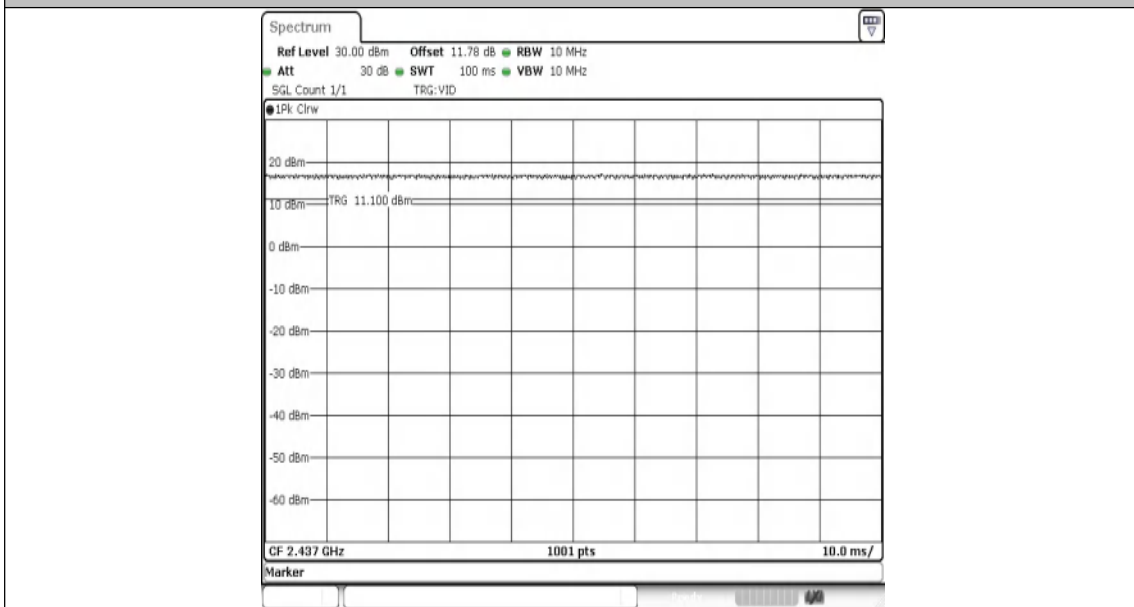

NTNV-11AX40MIMO-Ant2-2437

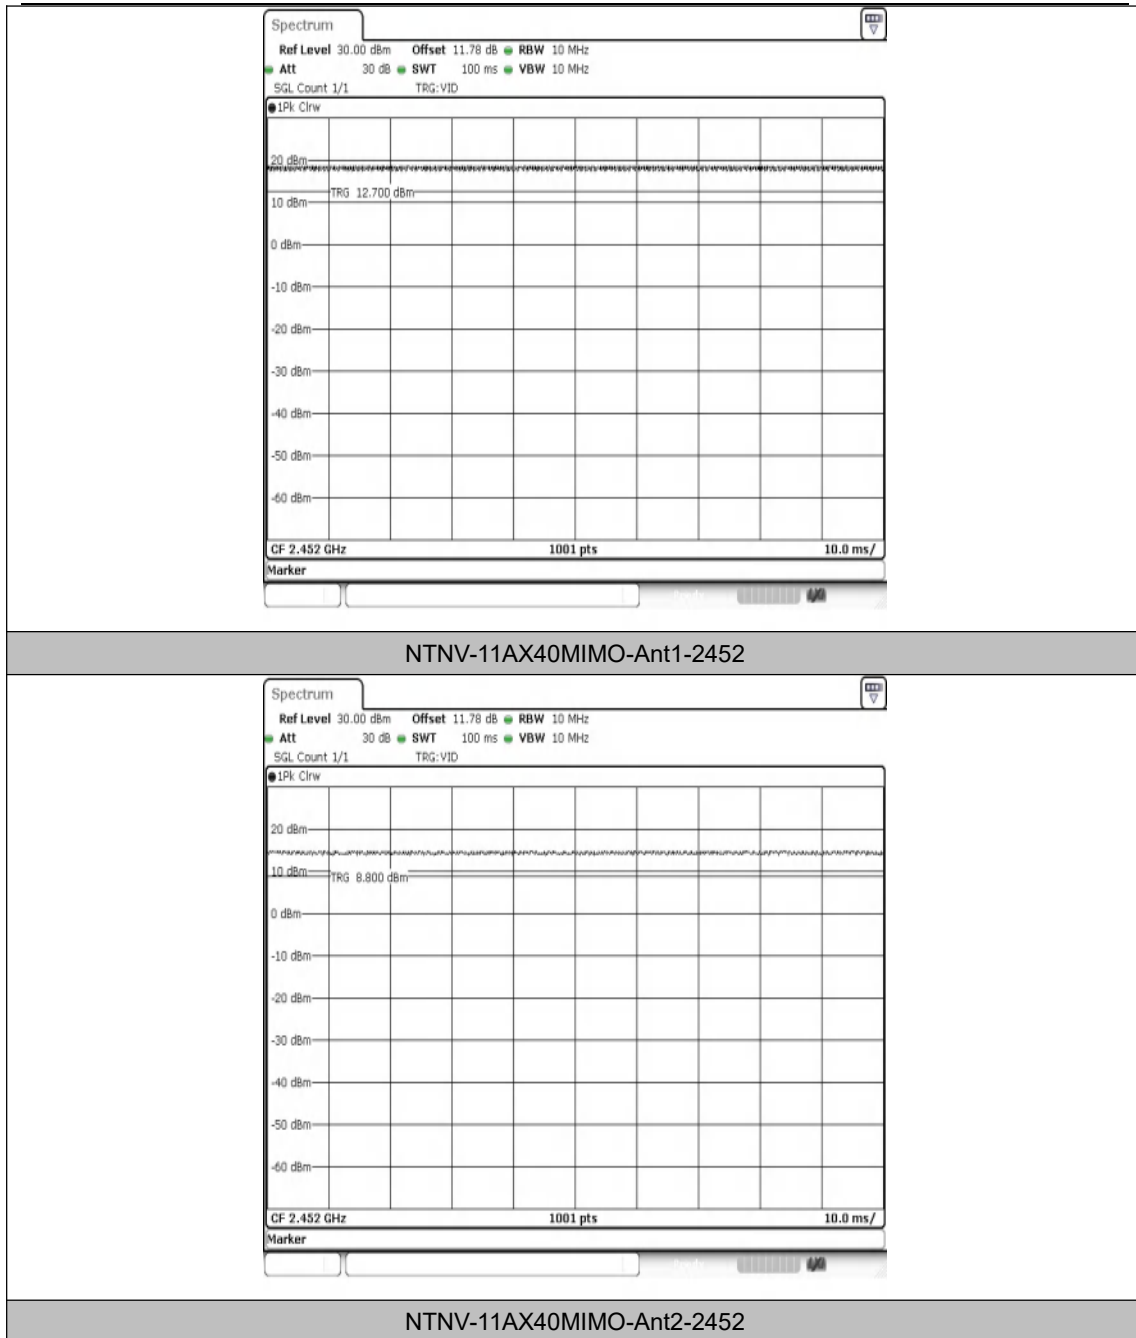

---End---