


MP TETRA Keyboard

Wireless keyboard

User Guide ▶

1 Package overview

1.1 Keyboard & accessories

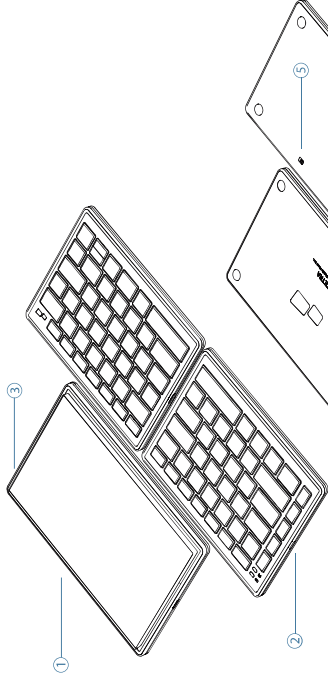


MP TETRA

- ① 2 x USB Type-C Port
- ② USB Type-C Charging Port
- ③ Screen Menu Button
- ④ Right keyboard Power Switch
- ⑤ Left keyboard Power Switch

Accessories

- ① USB Type-C cable with USB-A to C adapter
- ② Tinting & Tilting Blocks

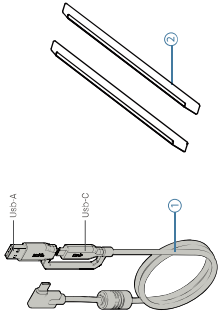


2 Getting Started

2.1 System Requirement

MP TETRA Keyboard is compatible with Bluetooth enabled desktops and laptops running Windows (10, 11), macOS (10.3 - 14), And partially compatible with mobile devices running iOS, iPados and Android.


2.2 Set up the Keyboard

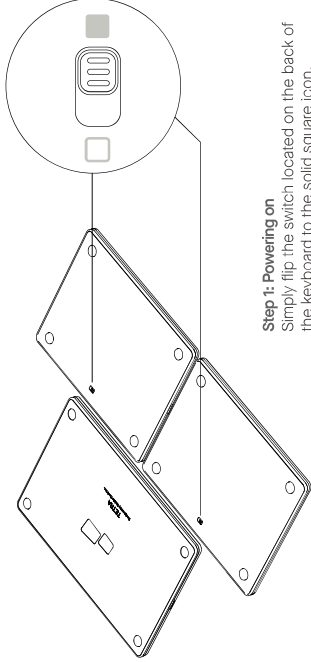

Step 1: Powering on


Simply flip the switch located on the back of the keyboard to the solid square icon.

Step 2: Pairing

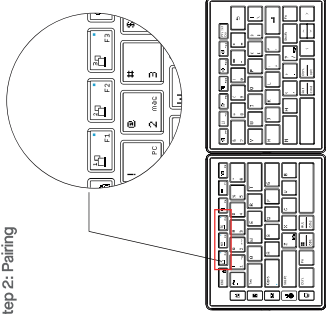


- Long press the F1 key to pair with device 1, F2 with device 2 etc.

- Open the Bluetooth settings on your device.

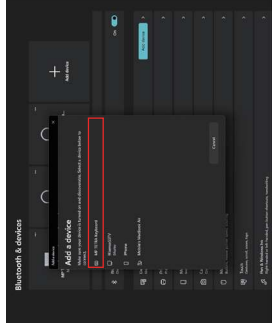

- Select the MP Tetra Keyboard from the list of available devices and wait for the connection to be established.


- To re-establish connection between two halves of the keyboard, press down Fn+A+C on the left half, and Fn+P+K on the right half
- To wipe all previously connected devices and reset the keyboard to its original state press down Fn+Left Shift +Backspace

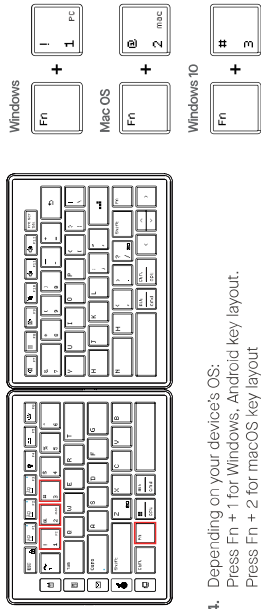


- Depending on your device's OS:
Press Fn + 1 for Windows, Android key layout.
Press Fn + 2 for macOS key layout
*For Windows 10 key layout, press Fn + 3

Step 3: Charging

There are two ways to charge the keyboards

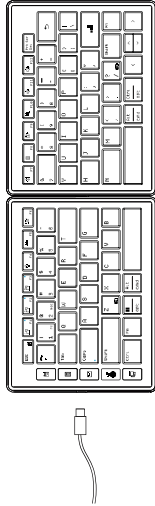


- Connect the left and right keyboards via the pogo pins by docking the two halves together. keyboard should charge via the USB-C port located on the left side of the keyboard, the under-glow light should start pulsing

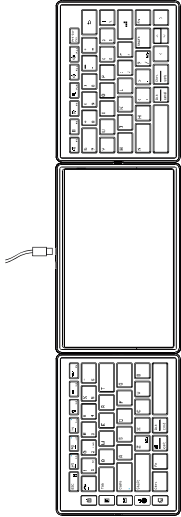

- Connect the left and right keyboards to the display by docking the two halves to its sides. Keyboard should charge via the TETRA display. The under-glow light should start pulsing

Step 4: Positioning

There are several recommended configurations of keyboards placement. You can dock the two halves together, dock them to the display or split them up to use it.

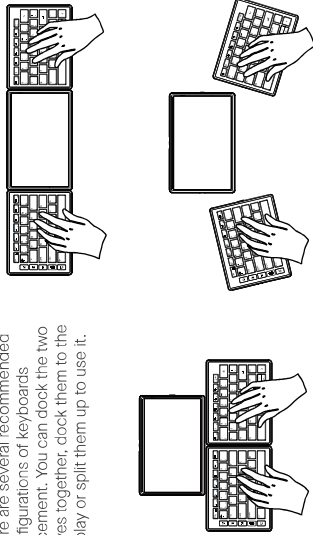

Most importantly, place the two halves of the keyboard in a comfortable position in front of you. A good starting point is to align each half with your shoulders. Adjust the angle and distance between the keyboard halves to reduce strain on your wrists and arms. It may take some time to get used to typing on a split keyboard. Practice regularly to build muscle memory.



3 Technical Information

4 Tetra Board Application

2.3 Set up the Display

Step 1: Connection


The Display needs to be connected to USB-A or USB-C port that supports USB 3.1 standard. If host supports Thunderbolt or DisplayPort enabled USB-C. Device will be plug-and-play.

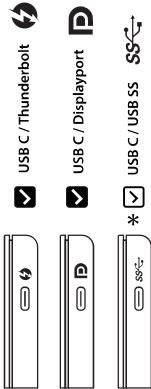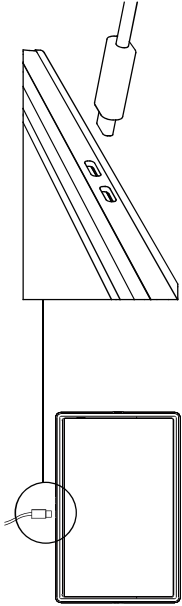

- ☒ USB C / Thunderbolt
- ☒ USB C / Displayport
- ☒ * USB C / USB SS

* If USB-C or USB-A only supports data transfer, a video driver is required. For installation, visit [mobilepixels.us](https://www.mobilepixels.us).

Step 2: Setting up

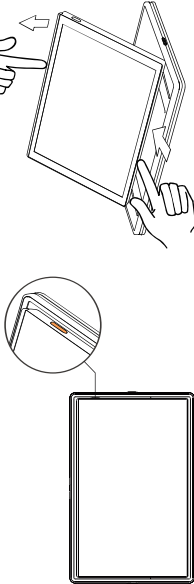


The Display settings can be adjusted using the OSD touch-enabled menu.

The Display angle can be adjusted by lifting the top edge or pushing from the bottom edge of the panel housing.

2.4 Shortcut Keys

The 5 shortcut keys can be found under the left keyboard indicator lights (mac user please install script here for full functions):

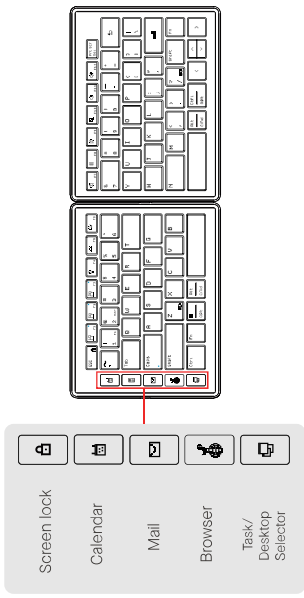

MP TETRA KEYBOARD	
Model	172 mm x 132 mm x 13.8 mm
Size	200g(Left), 196g(Right)
Weight	1.3±0.3mm
Key Travel	Peak: 64±12 gf/Bottom-out: 29±10 gf
Peak/Bottom-out Force	ABS chamfered backlit keycap
Keycap Type	42(Left)+43(Right)
Key Number	Scissor Switches
Switch Type	1200 mah on each keyboard
Battery	134mA (Dock), 320mA(USB-C)
Charging Current	

MP TETRA DISPLAY	
Model	207 mm x 136 mm x 19 mm
Size	498g
Weight	IPS(LCD)
Display Type	60Hz
Refresh Rate	30ms
Response time	1280×800 RGB
Resolution	16.7M
Display Color:	60% NTSC
Color Gamut	134mA (Dock), 320mA(USB-C)
Charging Current	300 nit
Luminance	6.2W (Specificos)
Power Consumption	

*Specifications are subject to change without notice.

Safety and Handling

IMPORTANT SAFETY INFORMATION

Carefully go through the user manual and other documentation before setting up the MP TETRA. If any part is broken or damaged, do not try to open MP TETRA or attempt to fix it yourself. Please contact the retailer, a qualified service technician or email us directly at contact@mobilepixels.us. Store MP TETRA under appropriate conditions, avoid exposure to extreme heat, moisture and dust. We recommend you to place MP TETRA on a stable surface and keep your MP TETRA in a sleeve to protect it during transport. Never spill liquid of any kind onto the surface or into the openings of the v. Do not spray any cleaner on the screen to avoid an electric shock if your MP TETRA gets wet. Unplug all cables and reconnect till the MP TETRA is completely dry. Carefully unplug all cables before cleaning MP TETRA. Clean with a soft, dry, lint-free cloth. To ensure satisfactory experience, use the MP TETRA with recommended display size of your laptop. Please disconnect the cables when you reverse the position of MP TETRA, decouple the MP TETRA from the backplane of your laptop, rotate 180°. About a vector normal to the backplane, and re-couple to the backplane of the laptop computer.

CHOKING HAZARD

MP TETRA and accessories contain small parts that may present a choking hazard to small children, please keep them out of reach from small children.

MEDICAL DEVICE INTERFERENCE

The MP TETRA contains magnets. The MP TETRA also contain components and radios that emit electromagnetic fields. It may interfere with personal medical devices, e.g. pacemakers or defibrillators. Keep a safe distance between the MP TETRA and your medical device. Consult a physician or medical device manufacturer for specific details of your medical device. Stop using MP TETRA if the interference is observed with your personal medical devices. Items with magnetically-stored data such as credit cards and hard drives may be sensitive to magnetic or electromagnetic fields, hence should be kept at a distance from MP TETRA.

4.1 Introduction

MP TETRA Board is a content controller software that allows you to easily switch between different scenes, actions, and tools with the touch of a virtual button. The program has customizable keys that you can assign various functions, such as adding text, launching applications, opening webpages, activating hotkeys, controlling your devices, and more. MP TETRA Board is designed to integrate with your most frequently used software, and in doing so, enhance their functionalities.

4.2 System Requirements


MP TETRA Board is compatible with MP TETRA touch-enabled display connected to hosts running Windows (8, 10, 11) or macOS (10.3 - 14) with the MP Touch Driver installed.

4.3 Getting Started

Please connect the MP Tetra monitor to the USB-C or A port on your Windows or Mac machine. (If you are connecting to a USB-A port or a data transfer-only USB-C port, please download and install the MP video driver)

To ensure the touch input is registered on the proper screen, please refer to the steps below:

Windows On Windows machines, please navigate to Control Panel and select Tablet PC Settings, then select the Setup button.

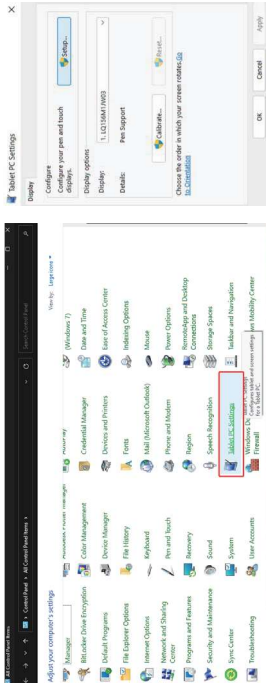

Mac OS On machines running macOS, please install the touch driver

To configure touch input to bind to the monitor, please launch the identify command. Visit Monitor configuration for more information.

4.4 Installation

Please visit <https://www.mobilepixels.us/pages/download-drivers> for downloads and installation guide

4.5 Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

