


HEATED INSOLES

APP CONTROL

INSTRUCTION MANUAL

NOTE: Please read the instructions carefully before the first use.

PRODUCT DETAILS

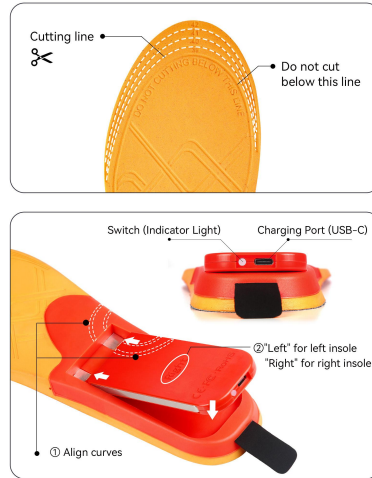

1. PACKAGE CONTENTS

- 1 Pair of Heated insoles
- 1 Pair of Batteries
- 1 PC Battery charger
- 1 PC Fabric dust bag
- 1 PC User manual
- 4 PC Velcro (Extra gifts for replacement)

2. HEATING TEMPERATURE

The heating temperature is adjustable from 86°F-158°F.

3. HOW TO CLEAN

We recommend wiping insoles with a wet towel, please do not rinse it with water.

4. BATTERY MAINTENANCE INSTRUCTIONS

- Please store the product at room temperature.
- If you do not use the insoles for a long time, you need to fully charge the battery before storing it.
- To protect the battery's life, please charge the battery once at least every 3 months, long-term non-electricity may cause damage to the internal battery core.
- Please keep the metal contacts of the battery and insoles clean.

5. SAFETY WARNINGS

- Please don't wear the insole without batteries installed.
- Please don't store near a heat source (like a fire or heater) and moisture.
- Please don't use the insoles supply in an extremely hot environment (such as direct sunlight). Overheating the power supply will affect the performance of the battery and shorten the service life of the battery!
- If the battery bulges, please stop using it immediately and contact us at support@gtbriter.com

6. HOW TO USE

● Charge

Battery: Charging—Orange light, Fully charged—Green light
Note: Please fully charge before the first use.

● Battery Switch Control

Long press the battery switch 3S to turn it ON/OFF, short press to adjust the gear. (When not using the APP, you can use the insole using this method)

● APP Control

Step 1) Download the APP


Please search and download the "WarmLife" APP from the App Store or Google Play, or scan the following QR code to download the App.



Thank you for purchasing!

We are truly grateful that you have chosen our products. Your suggestions and feedback will help us improve our products and service to perfectly match your needs.

We provide 18 months warranty and 24/7 customer service, if there are any problems or doubts with the product, please contact us by Amazon Message Function (Click the "Contact Seller" button) or Email us at support@gtbriter.com with your order number. we will do our best to resolve your issues, if you need to get a replacement or return the product, please return the entire package including the product and all accessories.

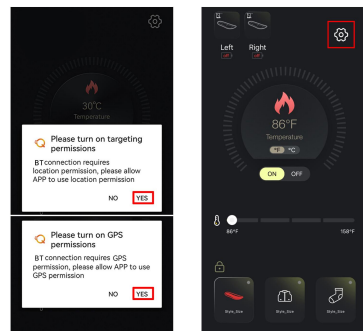

Step 2) Turn on Bluetooth and location before using the device.

Step 3) Click "YES" to allow the APP to use Bluetooth and location.

Step 4) Click the Settings button to enter the connection interface.

Step 5) Long press the batteries switch to turn on the batteries, then click ①, then click ② to confirm the connection.



(Left and right insoles need to be connected separately)

Note: If the APP does not scan the battery, please make sure the Bluetooth and location function of your phone is turned on, click ③ to refresh the search device.


Step 6) Connected

Insoles icon turns red to indicate successful connection, green battery icon shows battery level.

(If the connection fails, please check whether the BT and location are turned on, repeat Step5)

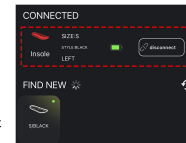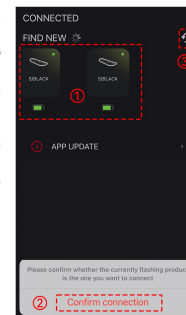

Step 7) APP Control Instruction

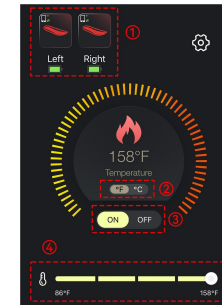

①APP connection status icon description



1. Device is not connected
2. Devices is connected
3. Devices is connected & running

- ①Select the insoles you want to control, the insoles icon turns red to indicate it is controlled
- ②Toggle the °F/°C display.
- ③Click ON/OFF to turn the device ON/OFF(StandBy), The OFF is the StandBy mode. If you want to completely turn off the device, please long press the battery switch.
- ④Slide the progress bar to adjust the temperature.

If you have any questions about the use of the APP, you can scan the QR code to view the instructional video; or contact us at support@gtbriter.com



If the QR code is invalid, please email us to get the video

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction