



BleeqUp Ranger 智能运动眼镜

制造商:北京致敬未知科技有限公司
地址:北京市海淀区中关村东路18号1号楼5层C-60
邮箱:support@bleequp.com

BleeqUp Ranger AI Sports Glasses

Manufacturer: Beijing Honor The Unknown Technology Co.,Ltd
Address: C- 601, 5th Floor, Building 1, No. 18 Zhongguancun East Road, Haidian District, Beijing, China

Importer in Europe: EUREPSTAR GmbH
Schlüterstr.3,85057 Ingolstadt,Germany

型号: CGQ542A0

网址: www.bleequp.com


Model: CGQ542A0

EMAIL: support@bleequp.com

Website: www.bleequp.com

用户使用手册 User Manual

包装清单 Packaging List

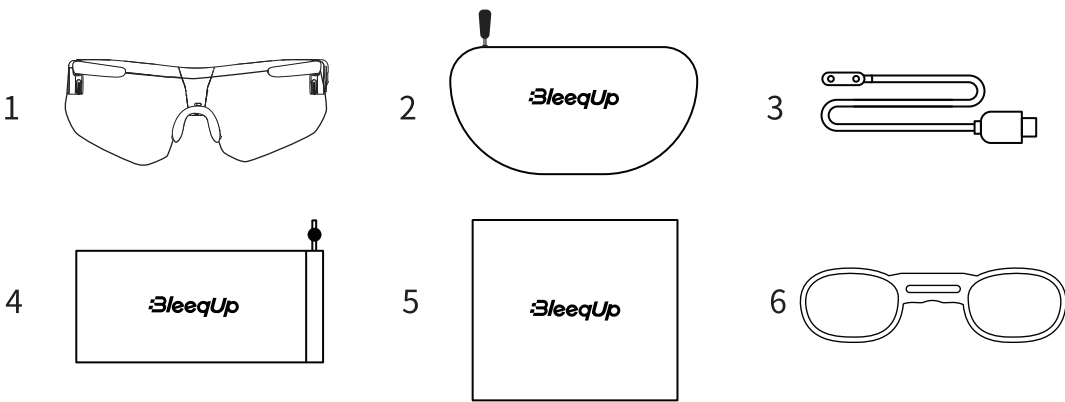


1 BleeqUp Ranger智能运动眼镜
2 便携盒
3 磁吸充电线

4 眼镜袋
5 眼镜布
6 视力矫正镜架

1 BleeqUp Ranger AI Sports Glasses
2 Portable box
3 Magnetic charging wire

4 Glasses bag
5 Glasses cloth
6 Vision correction frame

产品介绍 Product Introduction

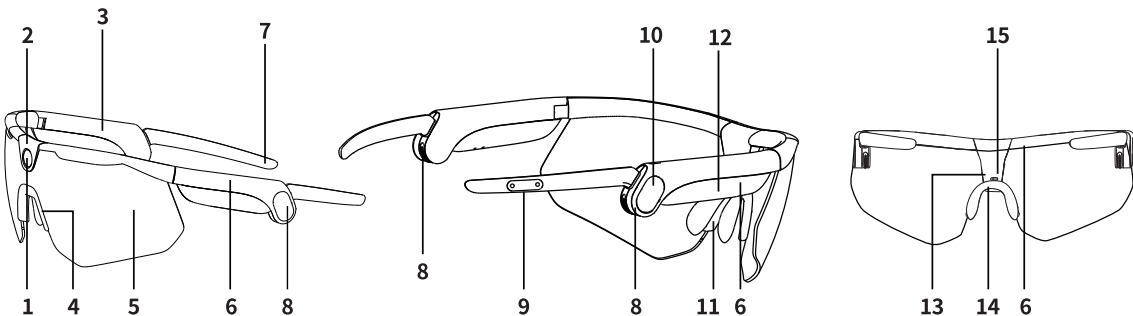

1 摄像头
2 拍摄指示灯
3 镜架
4 鼻托支架
5 镜片
6 麦克风
7 对讲键
8 扬声器

9 磁吸充电口
10 拍摄键
11 鼻托
12 触控
13 鼻托支架拆卸开关
14 鼻托拆卸螺钉
15 状态指示灯

1 Camera
2 Camera indicator LED
3 Mirror frame
4 Nose pad bracket
5 Lens
6 Microphones
7 Intercom button
8 Speakers

9 Magnetic charging port
10 Capture button
11 Nose pad
12 Touchpad
13 Nose pad bracket disassembly switch
14 Nose pad disassembly screw
15 Status LED

开始使用 Quick Guide & Start Using

首次使用 First use

开机:首次使用或眼镜已关机,需用磁吸充电线连接眼镜充电并开机,开机过程中状态灯持续白色闪烁,当状态灯绿色亮2秒钟,表示眼镜完成开机。充电5-10分钟后可进行配对和使用。充电:眼镜电池电量低于20%时,状态灯红色亮2秒钟,并听到电池电量低提示音,需要对电池进行充电。状态灯黄色闪烁表示正常充电中,状态灯绿色常亮,表示已经充满。注意:长时间不用,需要每间隔6个月,电池需完全充满电一次。如果电池在上次使用后,间隔6个月没有完全充电一次,这可能会导致电池永久损坏,从而使产品无法运行

Power On: First use or glasses have been powered off, you need to use the magnetic charging cable to connect the glasses for charging and powering on. The white status light on the inside of the glasses continues to blink during the startup process. When the status light is green for 2 seconds, it means that the glasses are powered on. After charging for 5-10 minutes, it can be paired and used. **Charging:** When the battery level of the glasses is less than 20%, the status light will be red for 2 seconds, and you will hear a low battery level prompt sound, the battery needs to be charged. The status light will be yellow flashing when the glasses are charging. When the status light is green, indicating that it has been fully charged. **Note:** If not used for a long time, the battery needs to be fully charged every 6 months. If the battery has not been fully charged every 6 months since its last use, it may cause permanent damage to the battery, rendering the product inoperable.



① 充电中:状态灯黄色闪烁 ② 已充满:状态灯绿色常亮 ③ 电量低:状态灯红色亮2秒
① Charging: Status light yellow flashing ② Fully charged: Status light green on ③ Low battery: Status light red on for 2 seconds

安装BleeqUp App Install BleeqUp App



在App Store 或Google Play或应用市场查找“BleeqUp”,下载BleeqUp App,并安装到您的手机。
Search for "BleeqUp" in the App Store or Google Play, download the BleeqUp App, and install it on your phone.



开启手机蓝牙

Enable Bluetooth on mobile phone




根据APP提示添加设备

Add devices according to the prompts on the BleeqUp App

配戴:镜腿打开后从头上往下配戴,将眼镜上下左右微调。戴好后调整鼻托宽度和前后位置,调整到配戴舒适、镜片居中且与面部不干涉位置。


Wear the product: After opening the legs of the glasses, wear them from top to bottom and fine tune them up, down, left, and right. After wearing, adjust the width and front and back position of the nose rest to a comfortable position with the lens centered and not interfering with the face.



调节鼻托 Adjusting nose pad

按下图调整鼻托软性支架,调整到配戴舒适、镜片居中且与面部不干涉位置。


Adjust the nose pad soft bracket according to the following diagram to a comfortable wearing position, with the lens centered and not interfering with the face.

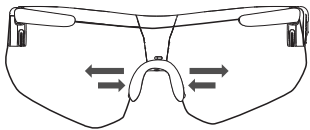

视力矫正支架安装及拆卸 Installation and disassembly of vision correction bracket

若需要视力矫正,请携带视力矫正镜架至当地具有验光能力的眼镜店或医疗机构配镜。并将配好的镜架按下图装配到眼镜上。

If vision correction is required, please bring a vision correction frame to a local optometry store or medical institution for glasses matching. And assemble the prepared frame onto the glasses according to the following diagram.

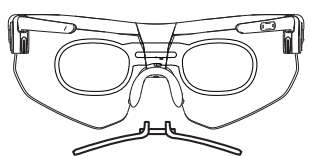

镜片更换 Lens replacement



BleeqUp Ranger镜片通过卡扣与机身连接,您可以自由更换不同片型、颜色的镜片。 BleeqUp Ranger lenses are connected to the body through buckles, allowing you to freely change lenses of different types and colors.

拆卸镜片: ①将左侧镜片卡位从左侧卡槽取出 ②将右侧镜片卡位从右侧卡槽取出 ③捏住鼻托支架及鼻托向下将整体镜片取出 ④分别捏住鼻托支架两侧将鼻托支架从镜片上取下

Remove the lens: ①Remove the left lens from the left card slot ②Remove the right lens from the right card slot ③Pinch the nose pad bracket and lower the nose pad to remove the entire lens ④ Pinch the nose pads on both sides and remove the nose pads from the lens

安装镜片: ①分别捏住鼻托支架两侧将鼻托支架装配到镜片上 ②将左侧镜片卡位装入左侧卡槽 ③将右侧镜片卡位装入右侧卡槽 ④镜片中间两个卡位对准眼镜架中间的两个卡槽,捏住鼻托支架向上插入到鼻托支架卡槽

Installing lenses: ①Pinch both sides of the nose pad bracket and assemble the nose pad bracket onto the lens ②Install the left lens into the left card slot ③Install the right lens into the right card slot ④Align the two card slots in the middle of the lens with the two card slots in the middle of the glasses frame, pinch the nose pad bracket and insert it upward into the nose pad slot

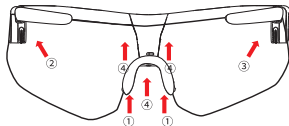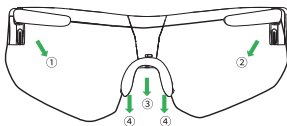

清洁方式 Cleaning method

日常清洁,使用干燥的无研磨性纤维布或眼镜布擦拭镜片内、外侧表面

注意:不能用冲洗方式,不能用超声波,不能用酒精。

Daily cleaning, use dry non-abrasive fiber cloth or glasses cloth, wipe the inner and outer surfaces of the lens. **Note:** Do not use rinsing methods, ultrasound, or alcohol

使用注意事项 Precautions for use

请避免以下或类似动作,以免损坏设备:

1.过度向外侧掰动镜腿,或施加一切超出该产品机械载荷之外的力量

2.强行拆卸鼻托

3.强行拆卸镜片

4.抛掷

5.持续旋转把玩

Please avoid the following or similar actions to avoid damaging the equipment:

1.Excessive outward movement of the mirror legs or application of any force beyond the mechanical load of the product

2.Forcefully dismantling nose pads

3.Forcefully disassembling the lens

4.Throwing

5.Continuously rotate and play with it

安全与保修 Safty & Warranty guide

▼ 健康与安全使用指南 Health & safety information

1.本产品仅供16周岁或以上人士使用。请勿让16周岁以下的人使用本产品。2.儿童吞食本产品可能会窒息。请将本产品远离儿童。3.如果产品有处方镜片,则仅供处方用户使用。其他用户使用带有处方镜片的产品可能无法提供足够的视力矫正或视力比正常情况更差。4.在嘈杂的环境中使用本产品可能会损害您的听力,并可能分散您的注意力。您可以通过避免嘈杂的环境和避免长时间高音量收听来降低风险。当覆盖设备的扬声器和耳朵时(例如,戴上贴身的帽子/头盔,或用手捂住耳朵),声压级可能会达到对听力有害的水平,请谨慎使用。5.配戴本产品时,本产品会直接接触用户皮肤。多个用户共用产品可能会导致疾病的生产,建议共用本产品。为避免传播传染性疾病(如红眼病),请勿与患有传染性疾病,或感染疾病(特别是眼部或皮肤疾病)的人员共用眼镜。每次使用前应仔细清洁眼镜,方法为:用中性、温和的清洁剂蘸湿眼镜附带的眼镜布,轻轻擦拭眼镜,并用干燥的无研磨性超细纤维布或眼镜布进行擦拭。6.本产品包含的部分组件和无线电路装置会发射电磁场。本产品及附带的配件中还含有磁体。这些电磁场和磁体可能干扰医疗设备,例如植入耳蜗、助听器、心脏起搏器、除颤器或其他医疗设备。请咨询您的医师和医疗设备生产企业以获得有关医疗设备特定的信息,以及是否需要将植入耳蜗和其他医疗设备与本产品及附带的配件保持安全距离。如果怀疑本产品正在干扰您的医疗设备,请停止使用。7.本产品在使用一段时间后可能会发热。如果产品过热并长时间接触用户皮肤,则存在低温灼伤的危险。出于安全考虑,如果您在使用产品时觉得产品异常发热,请立即摘下眼镜并断开眼镜与任何设备的连接,直至其完全冷却。8.本产品涉及视觉交互,例如通过可见LED灯接收视觉反馈,可能会分散您的注意力或增加对危险做出反应所需的时间。请始终注意周围的环境,包括标志和障碍物。9.如果您处于需要全神贯注的情况,或者分心可能会对其他人造成伤害,请关闭产品的电子功能。10.在配戴本产品的情况下驾驶机动车辆时请务必小心,并将注意力集中在驾驶上。如果需要保持注意力,请关闭产品的电子功能。如果该产品影响您的周边视力,请勿在驾驶时佩戴。本产品不适合光线昏暗时驾驶和行路用。11.本产品包含一个用户不可更换的锂离子电池。不要试图拆卸或更换电池。请勿拆卸、压碎、刺破、短接外部触点。不要在阳光直射下留在车内,也不要暴露在高温的环境中或焚烧。按照说明和当地要求处理电池。如果电池液泄漏,请勿触摸。如果电池液接触到皮肤或眼睛,请立即用水冲洗并就医。12.本产品需通过标配的充电器充电。本产品不配带电源适配器,消费者若使用电源适配器充电,则应购买获得安全认证并满足标准要求的产品。13.本产品长时间不用,需要每隔6个月,电池完全充满电一次。如果电池在上次使用后,间隔6个月必须有完全充满电一次,这可能会导致电池永久损坏,从而使产品无法运行。14.为了正常使用本产品,镜片必须牢固地安装在镜架上。15.本产品只能用于遭受外部太阳光;不能用于防护人造光源,如日光浴的伤害。16.请勿跌落、挤压或刺穿设备,避免发生意外太阳光;不能用于防护人造光源,如日光浴的伤害。17.保持设备干燥。请勿在雨、飞溅、潮湿、高温(如海边)的环境中使用时使用设备。

7.This product may generate heat after a period of use. If the product overheats and comes into prolonged contact with the user's skin, there is a risk of low-temperature burns. For safety reasons, if you feel that the product is abnormally hot while using it, please immediately remove your glasses and disconnect them from any devices until they are completely cooled down. 8.This product involves visual interaction, such as receiving visual feedback through visible LED lights, which may distract your attention or increase the time required to respond to danger. Please always pay attention to the surrounding environment, including signs and obstacles. 9.If you are in a situation that requires full attention, or if distraction may cause harm to you or others, please turn off the electronic function of the product. 10.For Driving.Use caution when operating a motor vehicle while wearing the product, and keep your focus on driving. If necessary to maintain attention, turn off electronic functionalities of the product.Follow local laws and requirements applicable to mobile phone operation. Do not use the camera while driving. If the Product impairs your peripheral vision, do not wear while driving. This product is not suitable for driving and road use in dim light. 11.This product contains a user non replaceable lithium-ion battery. Do not attempt to disassemble or replace the battery. Do not disassemble, crush, puncture, or short-circuit external contacts. Do not leave it in the car under direct sunlight, and do not expose it to overheating or burning. Handle the battery according to the instructions and local requirements. If the battery fluid leaks, do not touch it. If the battery fluid comes into contact with the skin or eyes, rinse immediately with water and seek medical attention. 12.This product needs to be charged through the standard charging cable. This product does not come with a power adapter. If consumers use a power adapter for charging, they should purchase a power adapter that has obtained safety certification and meets standard requirements. 13.If this product is not used for a long time, the battery needs to be fully charged every 6 months. If the battery is not fully charged every 6 months after its last use, it may cause permanent damage to the battery, rendering the product inoperable. 14.In order to function properly, the lens must be securely mounted on the frame. 15.They are not to be used when looking directly at the sun or as protection against UV rays originating from sources of artificial radiation. 16.Do not drop, squeeze or puncture the equipment to avoid exposing it to external pressure, which may cause damage, failure, short circuit, or broken lenses. 17.Please keep the equipment dry. Do not use the equipment in dusty, dirty, humid, and high salt environments (such as by the sea) to avoid causing circuit failures inside the equipment. 18.Do not use this device during thunderstorms, as thunderstorms may cause equipment malfunction or electric shock hazards.

本表格依据 SJ/T 11364-2014 的规定编制O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572-2011规定的限量要求以下X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572-2011规定的限量要求,表中标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。印刷电路板组件*: 包括印刷电路板及其零部件,电子元器件等。根据产品型号不同,您所购买的产品可能不会含有以上所有部件。在中华人民共和国境内销售的电子电气产品上将会印有“环保使用期限”符号。圆圈中的数字代表产品的正常环保使用年限。

▼ 国际法规符合性 Conformity to international regulations

作为太阳镜如何使用产品
本产品可防止因暴露在阳光下而对眼睛造成伤害的风险。其镜片分类描述如下:
浅色太阳镜 (0类): 仅非常有限阻挡太阳光和眩光
浅色太阳镜 (1类): 能有限阻挡太阳光和眩光
遮阳镜 (2类): 能较好地阻挡太阳光和眩光
遮阳镜 (3类): 能非常好地阻挡太阳光和眩光
特殊用途太阳镜 (4类): 能阻挡太阳光和眩光, 适用于海边、雪地、高山或沙漠环境
本产品镜片分类号详见包装上的标示。若是非变色镜片, 包装上的标记是“Cat.X” (“X”代表的是透射比类别); 若是变色镜片, 包装上的标记是“Cat.X | Cat.Y” (“X”代表的是变色前的透射比类别, “Y”代表的是变色后的透射比类别)
本产品抗冲击强度为1级。本产品紫外线防护等级为UV400。
HOW TO USE THE PRODUCT AS SUNGLASSES
This product can prevent the risk of eye damage caused by exposure tosunlight. Category description of the Lens is described as follows:
-Light tint sunglasses or fashion spectacles (Filter category 0): Very limited reduction of sunglare Some UV protection.
-Light tint sunglasses or fashion spectacles (Filter category 1): Limited protection against sunglare Some UV protection. Not suitable for driving in twilight or at night, or not suitable for driving at night or under dull light conditions.
-General purpose sunglasses (Filter category 2): Good protection against sunglare Good UV protection. Not suitable for driving in twilight or at night, or not suitable for driving at night or under dull light conditions.
-General purpose sunglasses (Filter category 3): High protection against sunglare Good UV protection. Not suitable for driving in twilight or at night, or not suitable for driving at night or under dull light conditions.
-Very dark special purpose sunglasses - very high sunglare reduction (Filter category 4): Very high

Caution!Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC RF EXPOSURE INFORMATION (SAR)This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement. **EU COMPLIANCE STATEMENT**BleeqUp hereby declares that this wireless device is in compliance with Radio Equipment Directive 2014/53/EU and in compliance with Radio Equipment Regulations 2017 (SI 2017 No. 1206) The full text of the EU declaration of conformity is available at the following internet address: www.bleequp.com/conformity-declaration
Radio Frequency and Power:
Bluetooth: 2402~2480 MHz :12 dBm;
BLE: 2402~2480 MHz : 12 dBm;
Wi-Fi: 2412~2472 MHz :17 dBm; 5180~5240 MHz : 20 dBm;
5260~5320 MHz :20dBm; 5500~5700 MHz: 20 dBm; 5745~5825 MHz : 14 dBm;
Note:
Frequency band: 5150 - 5250 MHZ:
Indoor use: Inside buildings only. Installations and use inside road vehicles and train carriages are not permitted. Limited outdoor use: If used outdoors, equipment shall not be attached to a fixed installation or to the external body of road vehicles, a fixed infrastructure or a fixed outdoor antenna. Use by unmanned aircraft systems (UAS) is limited to within the 5170 - 5250 MHz band.
Frequency band: 5250 - 5350 MHZ:
Indoor use: Inside buildings only. Installations and use in road vehicles, trains and aircraft are not permitted. Outdoor use is not permitted.
Frequency band: 5470 - 5725 MHZ:
Installations and use in road vehicles, trains and aircraft and use for unmanned aircraft systems (UAS) are not permitted.
This device has a maximum specific absorption rate (SAR) of electromagnetic radiation of 1.59 W/kg (head), and complies with CE (EN50360 & EN62311) standard.

This product has 32G storage space. The photos and video information generated by users when using BleeqUp products are only stored in the product or your mobile device.We have not saved or backed up the information in any form. Once deleted, it cannot be restored. Please keep your information properly. When it is found that other different accounts are tied to the device, all personal information stored in the device will be deleted and the user's personal information will not be leaked.
When using the app, your consent will be sought to obtain location information. If you do not allow access to location information, some functions related to location information will not be available.
We not only protect personal privacy, but also respect the privacy of others. Through the design of the product, we inform you that you are using BleeqUp products for shooting. For example, when using the product for shooting, the status light on the front of the glasses will give others a prompt that you are shooting.

▼ 免责声明 Disclaimers

1.使用本产品之前, 请仔细阅读本产品说明书。本声明对安全使用本产品以及您的合法权益有着重要影响, 一旦使用本产品, 即视为您已理解、认可和接受本声明全部条款和内容。2. 本产品并非玩具, 请勿让儿童(16周岁以下)接触本产品, 在有儿童(16周岁以下)出现的场景操作时请务必特别小心注意。3. 本产品是一款智能眼镜产品, 在电源正常工作以及各部件未损坏的情况下将提供智能穿戴设备体验。使用本产品前, 请认真检查产品的外观是否损坏, 比如镜框、镜片等部件是否有裂痕或缺口。如果产品已损坏或在任何时间发现产品损坏, 请勿使用或立即停止使用。4. BleeqUp保留更新本免责声明的权利, 最新的免责声明, 请以产品官网以及电子邮件接收的版本为准。5. 使用者承诺对自己的行为及因此而产生的所有后果负责, 使用者承诺仅出于正当目的使用本产品, 并符合所有适用的当地法律、法规和规范性文件, 并且同意本条款及BleeqUp可能制定的任何相关政策或者准则。6. BleeqUp不承担因不按照本产品说明书使用本产品所造成的任何直接或间接的人身伤害及财产损失的赔偿责任。7. 您通过我们眼镜使用第三方提供的服务、应用或内容(简称“第三方内容”)。遵守您与第三方之间的用户协议。倘若这些协议与本使用手册的条款内容存在冲突, 则以本使用手册的条款为准。BleeqUp不对您访问或使用第三方内容, 或第三方内容所包含的任何内容或功能承担责任或义务。您对这些内容的访问或使用权利仅遵照您与这类第三方内容提供商之间的许可。在任何情况下, BleeqUp均不应被视为是第三方内容的许可方、授予使用第三方内容的权利, 就第三方内容受到任何义务, 或是就第三方内容作出任何声明或担保。8. 您了解并同意, 本产品涉及互联网服务, 可能会受到各个环节不稳定因素的影响, 因此服务存在因不可抗力、计算机病毒、黑客攻击、系统不稳定、互联网网络、通信线路原因等造成的服务中断或不能满足您要求的风险。您须承担以上风险, BleeqUp对因此造成的服务及时性、安全性、准确性问题不作担保, 对此导致用户出现的问题不承担任何责任。

▼ 售后服务保修条款 Product warranty

我们将为购买本产品的消费者, 从购买之日起凭购机发票, 提供整机12个月的保修服务。请注意, 存在下列情况之一者, 不属于保修范围内: 1. 超过保修有效期的 2. 未按产品使用说明的要求使用、维护、保管而造成损坏的 3. 非授权保修的修理者私自拆机造成损坏的 4. 无有效保修凭证及有效发票的 (能够证明该商品在保修有效期内的除外) 5. 擅自更改保修凭证的 6. 保修凭证上的产品型号与商品实物不符合的 7. 正常使用的磨损8. 使用非官方或未经官方认证的配件。
如果您在使用此设备时遇到任何问题, 请直接通过BleeqUp应用程序中的问题反馈或在BleeqUp.com网站上与我们联系。您也可以通过电子邮件联系我fSupport@bleequp.com, 并请提供您的订单ID、产品序列号和应用程序版本, 以便更有效地回复。
We will provide consumers who purchase this product with a 12-month warranty service from the date of purchase, based on the purchase invoice. Please note that any of the following situations are not covered by the warranty:1.Beyond the warranty3.Unauthorized repairers who dismantle the machine without authorization and cause damage4.Without valid warranty certificate and invoice (excluding those that can prove that the product is within the warranty period)5.Unauthorized alteration of warranty certificate6.The product model on the warranty certificate does not match the actual product7.Wear and tear during normal use8.Using unofficial or uncertified accessories.
If you encounter any issues while using this device, com website. You can contact us via email support@bleequp.com.Please provide your order ID, product serial number, and application version for a more effective response.

以免引起设备内电路故障 18. 请勿在雷雨天气中使用本设备, 雷雨天气可能导致设备故障或电击危险。19. 请在高于0°C且低于+40°C范围内使用本设备, 并在-20°C至+45°C范围内存放设备及其配件, 当环境温度过高或过低时, 可能会引起设备故障。20. 请勿将设备暴露在高温处, 或发热设备的周围, 如强日照、取暖器、微波炉、烤箱或热水器等。21. 请勿拆解或改装设备、插入异物、或浸入水或其他液体中。22. 请勿将设备扔入火中, 否则会引起设备的起火。23. 请按照当地的规定处理设备, 不可将设备作为生活垃圾处理。请遵守本设备及其附件处理的本地法, 并支持回收行动。24. 遵照所有适用的当地法律、法规和条例使用产品。尊重第三方的权利、隐私和保密性。

1.The product is intended only for use by persons age 16 or older. Do not allow anyone under 16 to use the product.
2.Children can choke or suffocate in case of swallowing of this Product. Keep this Product away from children.
3.If the product has prescription lenses, it is intended only for use by the prescribed user. Use of a Product with prescription lenses by other users may provide inadequate vision correction or vision that is worse than normal.
4.Exposure to loud sound may damage your hearing and could distract you. You can reduce risks by avoiding loud environments and avoid listening at high volume for prolonged periods of time. When covering the speakers of the device and your ears (e.g., with a close fitting hat/helmet, or cupping hands over ears), sound pressure levels could reach levels that are harmful to your hearing. Please use caution.
5.When wearing this product, it will come into direct contact with the user's skin. Sharing the product among multiple users may lead to the spread of diseases, and it is not recommended to share this product. To avoid spreading infectious diseases (such as red eye disease), do not share glasses with individuals who have infectious diseases, infections, or other illnesses (especially eye or skin diseases). Before each use, the glasses should be cleaned by dipping the glasses cloth attached with a neutral and mild cleaning agent, gently wiping the glasses, and drying them with a dry, non abrasive ultra-fine fiber cloth or glasses cloth
6.Some components and wireless devices included in this product emit electromagnetic fields. This product and its accompanying accessories also contain magnets. These electromagnetic fields and magnets may interfere with medical devices such as cochlear implants, hearing aids, pacemakers, defibrillators, or other medical devices. Please consult your physician and medical device manufacturer for specific information about medical devices, as well as whether it is necessary to keep cochlear implants and other medical devices at a safe distance from this product and its accompanying accessories. If you suspect that this product is interfering with your medical equipment, please stop using it.

19.Please use this device within the range of above 0°C and below+40°C, and store the device and its accessories within the range of -20°C to+45°C. When the ambient temperature is too high or too low, it may cause equipment failure.
20. Do not expose the device to high temperatures or around heating devices such as strong sunlight, heaters, microwaves, ovens, or water heaters.
21.Do not disassemble or modify equipment, insert foreign objects, or immerse in water or other liquids.
22.Do not throw the device into the fire, otherwise it may cause the device to catch fire.
23.Please dispose of the equipment according to local regulations and do not dispose of it as household waste. Please comply with local regulations regarding the handling of this device and its accessories, and support recycling actions.
24.Use the product in accordance with all applicable local laws, regulations, and ordinances. Respect the rights, privacy, and confidentiality of third parties.

▼ 有害物质说明

部件名称	有害物质					
	铅(Pb)	镉(Cd)	汞(Hg)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯(PBDE)
塑胶壳	○	○	○	○	○	○
镜片	○	○	○	○	○	○
贴片电阻	○	○	○	○	○	○
贴片电容	○	○	○	○	○	○
贴片二极管	○	○	○	○	○	○
晶体管/薄膜	○	○	○	○	○	○
焊锡	○	○	○	○	○	○
镀镍架	○	○	○	○	○	○
USB	○	○	○	○	○	○
数据线	○	○	○	○	○	○
螺钉	○	○	○	○	○	○
贴片元器件	○	○	○	○	○	○
弹簧	○	○	○	○	○	○
连接器	○	○	○	○	○	○
摄像头	○	○	○	○	○	○



环保回收年限

protection against extreme sunglare, e.g. at sea, over snowfield, or in desert Good UV protection. Not suitable for road use and driving.
Please refer to the label on the packaging for the filter category of the lenses. For non-color-changing lenses, the label on the packaging is "Cat.X" ("X" represents the filter category); for color changing lenses, the label on the packaging is "Cat.X | Cat.Y" ("X" represents the filter category before color change, "Y" represents the filter category after color change)
The impact strength of this product is level 1.This product has a UV protection level of UV400.

使用限制 本产品不能用于直接观测太阳;不能用于防护人造光源,如日光浴的伤害 ;**警示:本产品不适合光线昏暗时驾驶和行路用。**
LIMITATIONS OF USE This product is not to be used for direct viewing of the sun or for protection against artificial radiation sources. **Warning: This product is not suitable for driving and road use in dim light.**

CONFORMITY TO INTERNATIONAL REGULATIONS
FCC ID :2BN95A0
CMIIT ID :25J1105JR060



This Product complies with Regulation (EU) 1606/425 It is also compliant with the US FDA Reg.21CFR 801.410 Reference standard EN ISO 12312-1:2022,, ANSI Z80.3-2018. **FCC COMPLIANCE STATEMENT** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions , may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio technician for help.



EU DISPOSAL INFORMATION The symbol above means that, according to local laws and regulations, the Product and/or its battery shall be disposed of separately from household waste. When this Product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of the Product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. **SAFETY CERTIFICATIONS FOR THE PRODUCT'S BATTERIES** This article describes the international safety standards that the Product's batteries meet. All of the Product's batteries are tested, certified, and in compliance with these international safety standards: -United Nations (UN) Transport Regulations UN38.3: Covers battery safety during air transport. -Underwriters Laboratory (UL) 2054: Covers safety of lithium-ion batteries in general use. -UL 60950-1/62368-1 and International Standard IEC 60950-1/62368-1: Cover the use of batteries in information-technology equipment. -International Standard IEC 62133: Covers secondary cells and batteries containing alkaline or other non-acid electrolytes. **WARNING** The battery contains no mercury. Do not puncture or incinerate.
BATTERY DISPOSAL & WEEE INFORMATION BleeqUp is committed to the proper disposal, reuse, recycling and recovery of batteries and Waste lectronical and Electronic Equipment ("WEEE"). Batteries and WEEE should not be disposed of in normal domestic waste bins.

▼ 隐私政策 Privacy Policy

我们重视个人信息及隐私对您的重要性, 并将尽全力保障您的个人信息及隐私信息安全。本产品具备32G存储空间。用户在使用BleeqUp产品时生成的照片、视频信息仅存储在产品或您的手机设备中。我们没有对信息进行任何形式的另存或备份, 一经删除无法恢复, 请妥善保管您的信息。当发现其它不同的账号绑定该设备时, 设备中存储的所有个人信息将会被删除, 不会泄露用户的个人信息。在使用App时, 会征询您的同意, 获取位置信息。如您不允许获取位置信息, 涉及位置信息的部分功能将不可用。我们不仅保护个人隐私, 还尊重他人隐私, 通过产品的设计告知您您正在使用 BleeqUp产品拍摄。例如在使用产品拍摄时, 眼镜前侧的状态灯会给予他人 提示, 您正在拍摄。

We value the importance of personal information and privacy to you , and will do our best to protect your personal information and privacy information security.

1.Before using this product, please read the product manual carefully. This statement has a significant impact on the safe use of this product and your legitimate rights and interests.Once you use this product, it is deemed that you have understood, acknowledged, and accepted all the terms and contents of this statement.2.This product is not a toy, please do not let children (under 16 years old) come into contact with this product. Please be particularly careful when operating in scenarios where children (under 16 years old) are present.3.This product is a smart glasses product that will provide a smart wearable device experience when the power supply is working normally and all components are not damaged. Before using this product, please carefully inspect the appearance of the product for any damage, such as cracks or gaps in the frame, lens, and other components. If the product is damaged or found to be damaged at any time, do not use or immediately stop using it.4.BleeqUp reserve the right to update this disclaimer. For the latest disclaimer, please refer to the product website and the version you received in the email. 5.The user promises to be responsible for their actions and all consequences arising therefrom. The user promises to use this product only for legitimate purposes and in compliance with all applicable local laws, regulations, and normative documents, and agrees to these terms and any related policies or guidelines that may be developed by BleeqUp.6.BleeqUp does not assume any direct or indirect liability for personal injury and property damage caused by the use of this product in violation of the product manual.7.You use third-party services, applications, or content provided through our glasses (referred to as "third-party content"). We need to comply with the user agreement between you and the third party. If there is a conflict between these agreements and the terms of this user manual, the terms of this user manual shall prevail. We do not assume any responsibility or obligation for your access to or use of third-party content, or any content or functionality contained in third-party content. Your access or use rights to these contents are only subject to the license between you and such third-party content providers. Under no circumstances should BleeqUp be considered as the licensor of third-party content, granting the right to use third-party content, assuming any obligations regarding third-party content, or making any statements or warranties regarding third-party content.8.You understand and agree that this product involves Internet services and may be affected by unstable factors in various links. Therefore, there is a risk of service interruption or failure to meet your requirements due to force majeure, computer viruses, hacker attacks, system instability, Internet, communication lines, etc. You are responsible for the above risks. BleeqUp does not guarantee the timeliness, security, or accuracy of the service caused by this, and does not assume any responsibility for any problems that may occur to users as a result.

BleeqUp®