



# COMOSAR E-Field Probe Calibration Report

Ref : ACR.41.11.25.BES.A

## LGT(SHENZHEN) TEST TECHNOLOGY CO., LTD.

13-B205, ZONE B, CHEN HSONG INDUSTRIAL  
PARK(SHENZHEN), NO.33 RENMIN MIDDLE ROAD,  
JINSHA COMMUNITY  
KENGZI SUBDISTRICT, PINGSHAN NEW DISTRICT,  
SHENZHEN, GUANGDONG, CHINA  
MVG COMOSAR DOSIMETRIC E-FIELD PROBE  
SERIAL NO.: SN 04/22 EPG0364

### Calibrated at MVG

Z.I. de la pointe du diable

Technopôle Brest Iroise – 295 avenue Alexis de Rochon  
29280 PLOUZANE - FRANCE

Calibration date: 02/05/2025




Accreditations #2-6789  
Scope available on [www.cofrac.fr](http://www.cofrac.fr)

**The use of the Cofrac brand and the accreditation references is prohibited from any reproduction.**

### *Summary:*

This document presents the method and results from an accredited COMOSAR E-Field Probe calibration performed at MVG, using the CALIPROBE test bench, for use with a MVG COMOSAR system only. The test results covered by accreditation are traceable to the International System of Units (SI).



|                      | <i>Name</i>  | <i>Function</i>     | <i>Date</i> | <i>Signature</i>                                                                    |
|----------------------|--------------|---------------------|-------------|-------------------------------------------------------------------------------------|
| <i>Prepared by :</i> | Jérôme Luc   | Technical Manager   | 2/05/2025   |  |
| <i>Checked by :</i>  | Jérôme Luc   | Technical Manager   | 2/05/2025   |  |
| <i>Approved by :</i> | Yann Toutain | Laboratory Director | 2/05/2025   |  |

2025.02.05  
10:25:03 +01'00'

|                       | <i>Customer Name</i>                          |
|-----------------------|-----------------------------------------------|
| <i>Distribution :</i> | LGT(Shenzhen)<br>Test Technology<br>Co., Ltd. |

| <i>Issue</i> | <i>Name</i> | <i>Date</i> | <i>Modifications</i> |
|--------------|-------------|-------------|----------------------|
| A            | Jérôme Luc  | 2/05/2025   | Initial release      |
|              |             |             |                      |
|              |             |             |                      |
|              |             |             |                      |

## TABLE OF CONTENTS

|     |                                       |    |
|-----|---------------------------------------|----|
| 1   | Device Under Test .....               | 4  |
| 2   | Product Description .....             | 4  |
| 2.1 | General Information .....             | 4  |
| 3   | Measurement Method .....              | 4  |
| 3.1 | Linearity .....                       | 4  |
| 3.2 | Sensitivity .....                     | 4  |
| 3.3 | Lower Detection Limit .....           | 5  |
| 3.4 | Isotropy .....                        | 5  |
| 3.1 | Boundary Effect .....                 | 5  |
| 4   | Measurement Uncertainty .....         | 6  |
| 5   | Calibration Measurement Results ..... | 6  |
| 5.1 | Sensitivity in air .....              | 6  |
| 5.2 | Linearity .....                       | 7  |
| 5.3 | Sensitivity in liquid .....           | 8  |
| 5.4 | Isotropy .....                        | 9  |
| 6   | List of Equipment .....               | 10 |

## 1 DEVICE UNDER TEST

| Device Under Test                        |                                                                         |
|------------------------------------------|-------------------------------------------------------------------------|
| Device Type                              | COMOSAR DOSIMETRIC E FIELD PROBE                                        |
| Manufacturer                             | MVG                                                                     |
| Model                                    | SSE2                                                                    |
| Serial Number                            | SN 04/22 EPGO364                                                        |
| Product Condition (new / used)           | Used                                                                    |
| Frequency Range of Probe                 | 0.15 GHz-6GHz                                                           |
| Resistance of Three Dipoles at Connector | Dipole 1: R1=0.206 MΩ<br>Dipole 2: R2=0.225 MΩ<br>Dipole 3: R3=0.212 MΩ |

## 2 PRODUCT DESCRIPTION

### 2.1 GENERAL INFORMATION

MVG's COMOSAR E field Probes are built in accordance to the IEC/IEEE 62209-1528 and FCC KDB865664 D01 standards.



**Figure 1** – MVG COMOSAR Dosimetric E field Probe

|                                            |        |
|--------------------------------------------|--------|
| Probe Length                               | 330 mm |
| Length of Individual Dipoles               | 2 mm   |
| Maximum external diameter                  | 8 mm   |
| Probe Tip External Diameter                | 2.5 mm |
| Distance between dipoles / probe extremity | 1 mm   |

## 3 MEASUREMENT METHOD

The IEC/IEEE 62209-1528 and FCC KDB865664 D01 standards provide recommended practices for the probe calibrations, including the performance characteristics of interest and methods by which to assess their affect. All calibrations / measurements performed meet the fore mentioned standards.

### 3.1 LINEARITY

The evaluation of the linearity was done in free space using the waveguide, performing a power sweep to cover the SAR range 0.01W/kg to 100W/kg.

### 3.2 SENSITIVITY

The sensitivity factors of the three dipoles were determined using a two step calibration method (air and tissue simulating liquid) using waveguides as outlined in the standards.

### 3.3 LOWER DETECTION LIMIT

The lower detection limit was assessed using the same measurement set up as used for the linearity measurement. The required lower detection limit is 10 mW/kg.

### 3.4 ISOTROPY

The axial isotropy was evaluated by exposing the probe to a reference wave from a standard dipole with the dipole mounted under the flat phantom in the test configuration suggested for system validations and checks. The probe was rotated along its main axis from 0 to 360 degrees in 15-degree steps. The hemispherical isotropy is determined by inserting the probe in a thin plastic box filled with tissue-equivalent liquid, with the plastic box illuminated with the fields from a half wave dipole. The dipole is rotated about its axis (0°–180°) in 15° increments. At each step the probe is rotated about its axis (0°–360°).

### 3.1 BOUNDARY EFFECT

The boundary effect is defined as the deviation between the SAR measured data and the expected exponential decay in the liquid when the probe is oriented normal to the interface. To evaluate this effect, the liquid filled flat phantom is exposed to fields from either a reference dipole or waveguide. With the probe normal to the phantom surface, the peak spatial average SAR is measured and compared to the analytical value at the surface.

The boundary effect uncertainty can be estimated according to the following uncertainty approximation formula based on linear and exponential extrapolations between the surface and  $d_{be} + d_{step}$  along lines that are approximately normal to the surface:

$$SAR_{uncertainty} [\%] = \Delta SAR_{be} \frac{(d_{be} + d_{step})^2}{2d_{step}} \frac{(e^{-d_{be}/(\delta/2)})}{\delta/2} \quad \text{for } (d_{be} + d_{step}) < 10 \text{ mm}$$

where

|                     |                                                                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| $SAR_{uncertainty}$ | is the uncertainty in percent of the probe boundary effect                                                                                                                                           |
| $d_{be}$            | is the distance between the surface and the closest <i>zoom-scan</i> measurement point, in millimetre                                                                                                |
| $\Delta_{step}$     | is the separation distance between the first and second measurement points that are closest to the phantom surface, in millimetre, assuming the boundary effect at the second location is negligible |
| $\delta$            | is the minimum penetration depth in millimetres of the head tissue-equivalent liquids defined in this standard, i.e., $\delta \approx 14$ mm at 3 GHz;                                               |
| $\Delta SAR_{be}$   | in percent of SAR is the deviation between the measured SAR value, at the distance $d_{be}$ from the boundary, and the analytical SAR value.                                                         |

The measured worst case boundary effect  $SAR_{uncertainty}[\%]$  for scanning distances larger than 4mm is 1.0% Limit ,2%).

## 4 MEASUREMENT UNCERTAINTY

The guidelines outlined in the IEC/IEEE 62209-1528 and FCC KDB865664 D01 standards were followed to generate the measurement uncertainty associated with an E-field probe calibration using the waveguide technique. All uncertainties listed below represent an expanded uncertainty expressed at approximately the 95% confidence level using a coverage factor of k=2, traceable to the Internationally Accepted Guides to Measurement Uncertainty.

| Uncertainty analysis of the probe calibration in waveguide |                       |                          |         |    |                          |
|------------------------------------------------------------|-----------------------|--------------------------|---------|----|--------------------------|
| ERROR SOURCES                                              | Uncertainty value (%) | Probability Distribution | Divisor | ci | Standard Uncertainty (%) |
| Expanded uncertainty<br>95 % confidence level k = 2        |                       |                          |         |    | 14 %                     |

## 5 CALIBRATION MEASUREMENT RESULTS

| Calibration Parameters |             |
|------------------------|-------------|
| Liquid Temperature     | 20 +/- 1 °C |
| Lab Temperature        | 20 +/- 1 °C |
| Lab Humidity           | 30-70 %     |

### 5.1 SENSITIVITY IN AIR


|                                            |                                            |                                            |
|--------------------------------------------|--------------------------------------------|--------------------------------------------|
| Normx dipole<br>1 (μV/(V/m) <sup>2</sup> ) | Normy dipole<br>2 (μV/(V/m) <sup>2</sup> ) | Normz dipole<br>3 (μV/(V/m) <sup>2</sup> ) |
| 0.92                                       | 0.92                                       | 0.88                                       |

|                      |                      |                      |
|----------------------|----------------------|----------------------|
| DCP dipole 1<br>(mV) | DCP dipole 2<br>(mV) | DCP dipole 3<br>(mV) |
| 110                  | 106                  | 109                  |

Calibration curves  $e_i=f(V)$  (i=1,2,3) allow to obtain E-field value using the formula:

$$E = \sqrt{E_1^2 + E_2^2 + E_3^2}$$

### Calibration curves

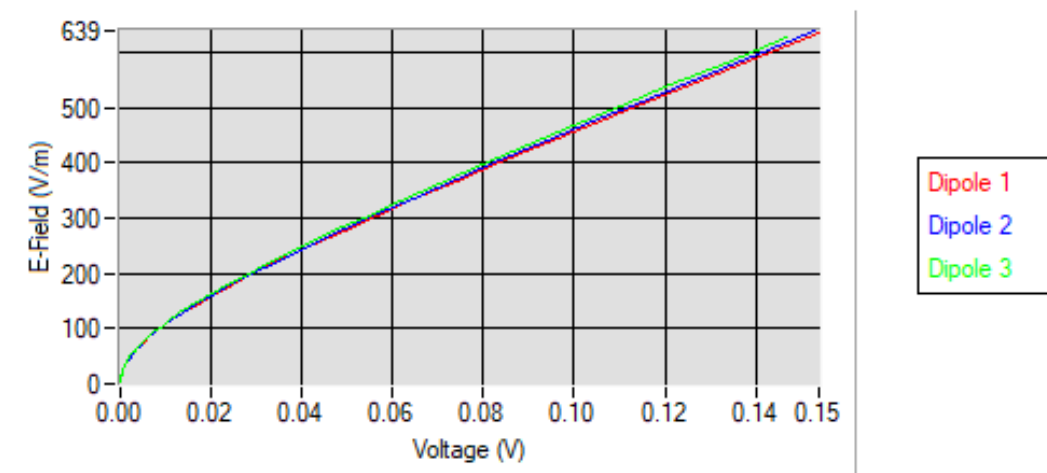

### 5.2 LINEARITY

#### Linearity



Linearity: +/-1.91% (+/-0.08dB)

### 5.3 SENSITIVITY IN LIQUID


| Liquid | Frequency<br>(MHz +/-<br>100MHz) | ConvF |
|--------|----------------------------------|-------|
| HL450* | 450                              | 1.84  |
| BL450* | 450                              | 1.75  |
| HL750  | 750                              | 1.67  |
| BL750  | 750                              | 1.70  |
| HL850  | 835                              | 1.72  |
| BL850  | 835                              | 1.71  |
| HL1800 | 1800                             | 1.92  |
| BL1800 | 1800                             | 2.01  |
| HL1900 | 1900                             | 2.20  |
| BL1900 | 1900                             | 2.21  |
| HL2000 | 2000                             | 2.33  |
| BL2000 | 2000                             | 2.33  |
| HL2100 | 2100                             | 2.31  |
| BL2100 | 2100                             | 2.36  |
| HL2300 | 2300                             | 2.32  |
| BL2300 | 2300                             | 2.45  |
| HL2450 | 2450                             | 2.33  |
| BL2450 | 2450                             | 2.26  |
| HL2600 | 2600                             | 2.37  |
| BL2600 | 2600                             | 2.10  |
| HL3500 | 3500                             | 1.81  |
| BL3500 | 3500                             | 1.98  |
| HL3700 | 3700                             | 1.81  |
| BL3700 | 3700                             | 1.95  |
| HL3900 | 3900                             | 1.81  |
| BL3900 | 3900                             | 1.99  |
| HL4200 | 4200                             | 2.08  |
| BL4200 | 4200                             | 2.10  |
| HL4600 | 4600                             | 2.01  |
| BL4600 | 4600                             | 2.03  |
| HL4900 | 4900                             | 1.97  |
| BL4900 | 4900                             | 1.83  |
| HL5200 | 5200                             | 1.99  |
| BL5200 | 5200                             | 1.93  |
| HL5400 | 5400                             | 1.87  |
| BL5400 | 5400                             | 1.83  |
| HL5600 | 5600                             | 1.87  |
| BL5600 | 5600                             | 1.74  |
| HL5800 | 5800                             | 1.70  |
| BL5800 | 5800                             | 1.73  |

\* Frequency not covered by COFRAC scope, calibration not accredited

LOWER DETECTION LIMIT: 8mW/kg

## 5.4 ISOTROPY

### HL1800 MHz

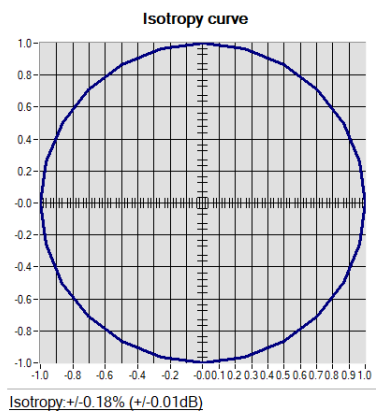

## 6 LIST OF EQUIPMENT

| Equipment Summary Sheet            |                         |                         |                                               |                                               |
|------------------------------------|-------------------------|-------------------------|-----------------------------------------------|-----------------------------------------------|
| Equipment Description              | Manufacturer / Model    | Identification No.      | Current Calibration Date                      | Next Calibration Date                         |
| CALIPROBE Test Bench               | Version 2               | NA                      | Validated. No cal required.                   | Validated. No cal required.                   |
| Network Analyzer                   | Rohde & Schwarz ZVM     | 100203                  | 08/2024                                       | 08/2027                                       |
| Network Analyzer                   | Agilent 8753ES          | MY40003210              | 10/2022                                       | 10/2025                                       |
| Network Analyzer – Calibration kit | Rohde & Schwarz ZV-Z235 | 101223                  | 07/2022                                       | 07/2025                                       |
| Network Analyzer – Calibration kit | HP 85033D               | 3423A08186              | 06/2021                                       | 06/2027                                       |
| Multimeter                         | Keithley 2000           | 1160271                 | 02/2025                                       | 02/2026                                       |
| Signal Generator                   | Rohde & Schwarz SMB     | 106589                  | 03/2022                                       | 03/2025                                       |
| Amplifier                          | MVG                     | MODU-023-C-0002         | Characterized prior to test. No cal required. | Characterized prior to test. No cal required. |
| Power Meter                        | NI-USB 5680             | 170100013               | 06/2021                                       | 06/2026                                       |
| Power Meter                        | Rohde & Schwarz NRVD    | 832839-056              | 11/2022                                       | 11/2025                                       |
| Directional Coupler                | Krytar 158020           | 131467                  | Characterized prior to test. No cal required. | Characterized prior to test. No cal required. |
| Waveguide                          | MVG                     | SN 32/16 WG4_1          | Validated. No cal required.                   | Validated. No cal required.                   |
| Liquid transition                  | MVG                     | SN 32/16 WGLIQ_0G900_1  | Validated. No cal required.                   | Validated. No cal required.                   |
| Waveguide                          | MVG                     | SN 32/16 WG6_1          | Validated. No cal required.                   | Validated. No cal required.                   |
| Liquid transition                  | MVG                     | SN 32/16 WGLIQ_1G500_1  | Validated. No cal required.                   | Validated. No cal required.                   |
| Waveguide                          | MVG                     | SN 32/16 WG8_1          | Validated. No cal required.                   | Validated. No cal required.                   |
| Liquid transition                  | MVG                     | SN 32/16 WGLIQ_1G800B_1 | Validated. No cal required.                   | Validated. No cal required.                   |
| Liquid transition                  | MVG                     | SN 32/16 WGLIQ_1G800H_1 | Validated. No cal required.                   | Validated. No cal required.                   |
| Waveguide                          | MVG                     | SN 32/16 WG10_1         | Validated. No cal required.                   | Validated. No cal required.                   |
| Liquid transition                  | MVG                     | SN 32/16 WGLIQ_3G500_1  | Validated. No cal required.                   | Validated. No cal required.                   |