

Appendix Test Data

Report No.:	1813C50041212504	Test Sample No.:	1-2-2
Start Test Date:	2025.02.24	Finish Test Date:	2025.02.25
Test Engineer:	<i>Alex Peng</i>	Auditor:	<i>Justin Feng</i>
Temperature:	25.3°C	Relative Humidity:	49%
Pressure:	101kPa		

Appendix A1: 26dB Bandwidth

Test Result

Test Mode	Antenna	Frequency [MHz]	26db EBW [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5180	18.120	5171.040	5189.160	---	---
11A	Ant2	5180	18.480	5170.800	5189.280	---	---
11A	Ant1	5200	18.280	5190.840	5209.120	---	---
11A	Ant2	5200	18.280	5190.800	5209.080	---	---
11A	Ant1	5240	18.360	5230.800	5249.160	---	---
11A	Ant2	5240	18.400	5230.800	5249.200	---	---
11A	Ant1	5745	18.120	5735.920	5754.040	---	---
11A	Ant2	5745	18.440	5735.760	5754.200	---	---
11A	Ant1	5785	18.200	5775.960	5794.160	---	---
11A	Ant2	5785	18.200	5775.960	5794.160	---	---
11A	Ant1	5825	18.240	5815.920	5834.160	---	---
11A	Ant2	5825	18.200	5815.880	5834.080	---	---
11N20MIMO	Ant1	5180	19.200	5170.280	5189.480	---	---
11N20MIMO	Ant2	5180	19.360	5170.200	5189.560	---	---
11N20MIMO	Ant1	5200	19.320	5190.240	5209.560	---	---
11N20MIMO	Ant2	5200	19.240	5190.240	5209.480	---	---
11N20MIMO	Ant1	5240	19.400	5230.200	5249.600	---	---
11N20MIMO	Ant2	5240	19.200	5230.360	5249.560	---	---
11N20MIMO	Ant1	5745	19.200	5735.360	5754.560	---	---
11N20MIMO	Ant2	5745	19.320	5735.320	5754.640	---	---
11N20MIMO	Ant1	5785	19.320	5775.240	5794.560	---	---
11N20MIMO	Ant2	5785	19.200	5775.320	5794.520	---	---
11N20MIMO	Ant1	5825	19.520	5815.200	5834.720	---	---
11N20MIMO	Ant2	5825	19.360	5815.320	5834.680	---	---



11N40MIMO	Ant1	5190	38.640	5170.720	5209.360	---	---
11N40MIMO	Ant2	5190	39.280	5170.320	5209.600	---	---
11N40MIMO	Ant1	5230	38.480	5210.720	5249.200	---	---
11N40MIMO	Ant2	5230	38.880	5210.560	5249.440	---	---
11N40MIMO	Ant1	5755	38.640	5735.720	5774.360	---	---
11N40MIMO	Ant2	5755	38.320	5736.040	5774.360	---	---
11N40MIMO	Ant1	5795	38.720	5775.560	5814.280	---	---
11N40MIMO	Ant2	5795	38.880	5775.480	5814.360	---	---
11AC20MIMO	Ant1	5180	19.440	5170.200	5189.640	---	---
11AC20MIMO	Ant2	5180	19.400	5170.200	5189.600	---	---
11AC20MIMO	Ant1	5200	19.280	5190.320	5209.600	---	---
11AC20MIMO	Ant2	5200	19.280	5190.280	5209.560	---	---
11AC20MIMO	Ant1	5240	19.400	5230.280	5249.680	---	---
11AC20MIMO	Ant2	5240	19.400	5230.240	5249.640	---	---
11AC20MIMO	Ant1	5745	19.440	5735.360	5754.800	---	---
11AC20MIMO	Ant2	5745	19.440	5735.080	5754.520	---	---
11AC20MIMO	Ant1	5785	19.120	5775.360	5794.480	---	---
11AC20MIMO	Ant2	5785	19.440	5775.240	5794.680	---	---
11AC20MIMO	Ant1	5825	19.320	5815.200	5834.520	---	---
11AC20MIMO	Ant2	5825	19.360	5815.280	5834.640	---	---
11AC40MIMO	Ant1	5190	38.880	5170.480	5209.360	---	---
11AC40MIMO	Ant2	5190	38.800	5170.480	5209.280	---	---
11AC40MIMO	Ant1	5230	39.040	5210.480	5249.520	---	---
11AC40MIMO	Ant2	5230	38.880	5210.560	5249.440	---	---
11AC40MIMO	Ant1	5755	38.800	5735.640	5774.440	---	---
11AC40MIMO	Ant2	5755	38.800	5735.480	5774.280	---	---
11AC40MIMO	Ant1	5795	38.720	5775.800	5814.520	---	---
11AC40MIMO	Ant2	5795	38.880	5775.640	5814.520	---	---
11AC80MIMO	Ant1	5210	86.080	5166.640	5252.720	---	---
11AC80MIMO	Ant2	5210	84.000	5167.920	5251.920	---	---
11AC80MIMO	Ant1	5775	83.360	5732.920	5816.280	---	---
11AC80MIMO	Ant2	5775	82.560	5733.880	5816.440	---	---
11AX20MIMO	Ant1	5180	20.120	5169.880	5190.000	---	---
11AX20MIMO	Ant2	5180	20.320	5169.880	5190.200	---	---
11AX20MIMO	Ant1	5200	20.280	5189.760	5210.040	---	---
11AX20MIMO	Ant2	5200	20.040	5190.040	5210.080	---	---
11AX20MIMO	Ant1	5240	20.120	5229.840	5249.960	---	---
11AX20MIMO	Ant2	5240	20.080	5229.960	5250.040	---	---
11AX20MIMO	Ant1	5745	19.880	5734.960	5754.840	---	---
11AX20MIMO	Ant2	5745	20.080	5734.880	5754.960	---	---
11AX20MIMO	Ant1	5785	20.160	5774.920	5795.080	---	---
11AX20MIMO	Ant2	5785	20.360	5774.760	5795.120	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com



Hotline
400-003-0500
www.anbotek.com

11AX20MIMO	Ant1	5825	20.480	5814.800	5835.280	---	---
11AX20MIMO	Ant2	5825	20.040	5814.920	5834.960	---	---
11AX40MIMO	Ant1	5190	38.480	5170.800	5209.280	---	---
11AX40MIMO	Ant2	5190	38.880	5170.640	5209.520	---	---
11AX40MIMO	Ant1	5230	38.320	5210.720	5249.040	---	---
11AX40MIMO	Ant2	5230	38.560	5210.720	5249.280	---	---
11AX40MIMO	Ant1	5755	38.720	5735.640	5774.360	---	---
11AX40MIMO	Ant2	5755	38.720	5735.720	5774.440	---	---
11AX40MIMO	Ant1	5795	38.640	5775.720	5814.360	---	---
11AX40MIMO	Ant2	5795	38.640	5775.560	5814.200	---	---
11AX80MIMO	Ant1	5210	80.480	5169.680	5250.160	---	---
11AX80MIMO	Ant2	5210	80.000	5170.000	5250.000	---	---
11AX80MIMO	Ant1	5775	79.840	5735.160	5815.000	---	---
11AX80MIMO	Ant2	5775	80.000	5735.000	5815.000	---	---


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com



Hotline
400-003-0500
www.anbotek.com


Test Graphs

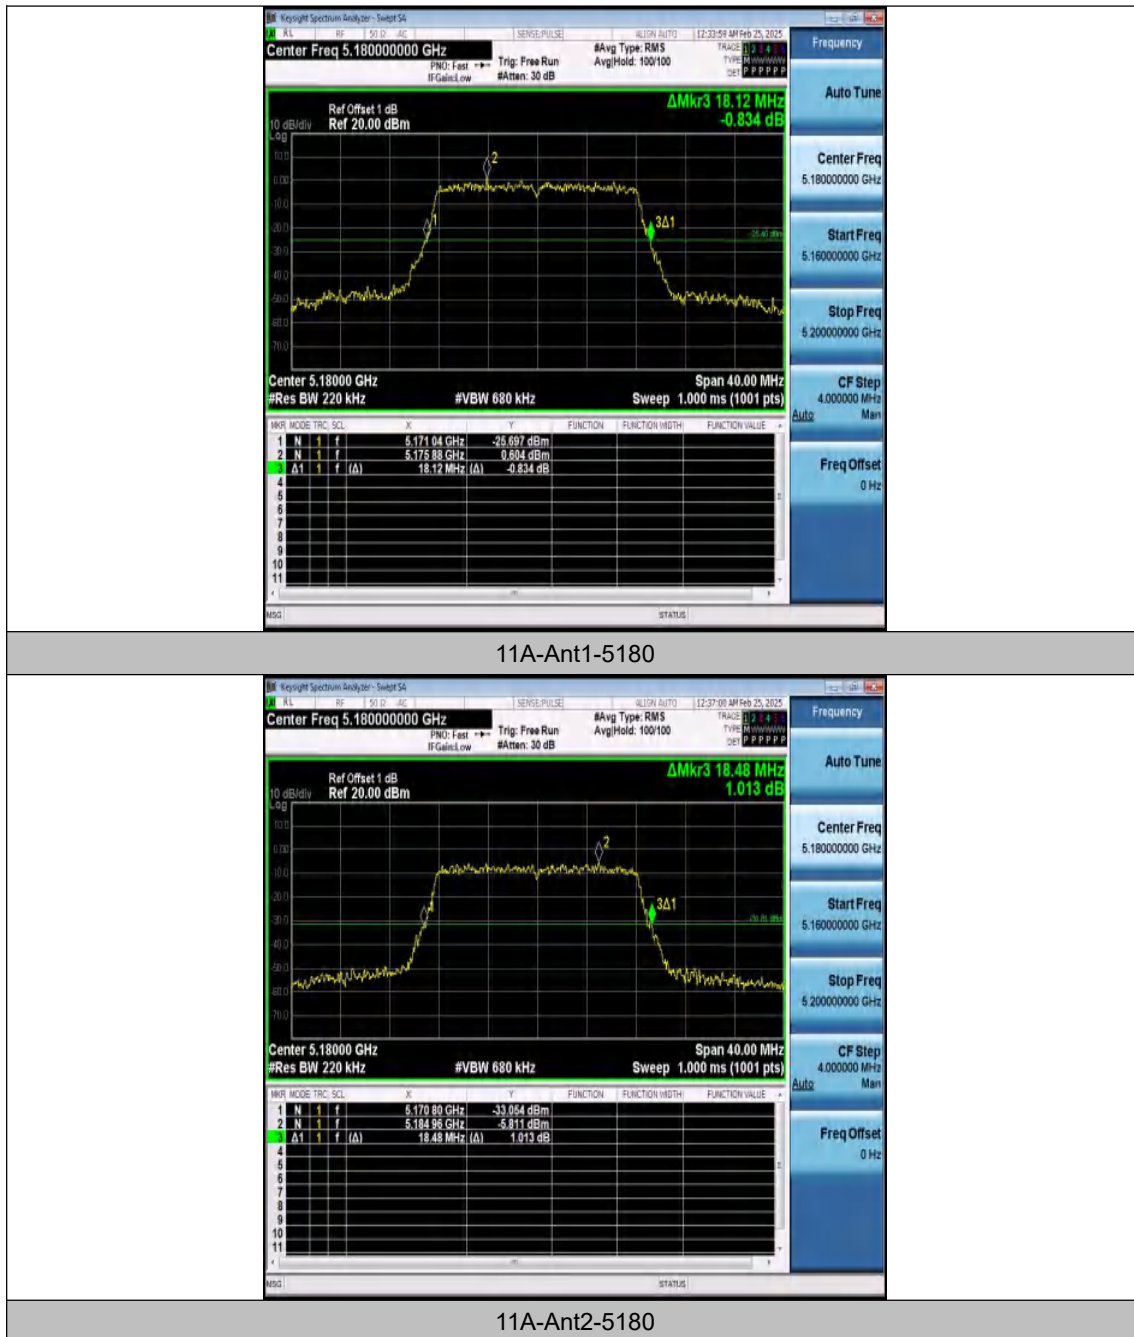



Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

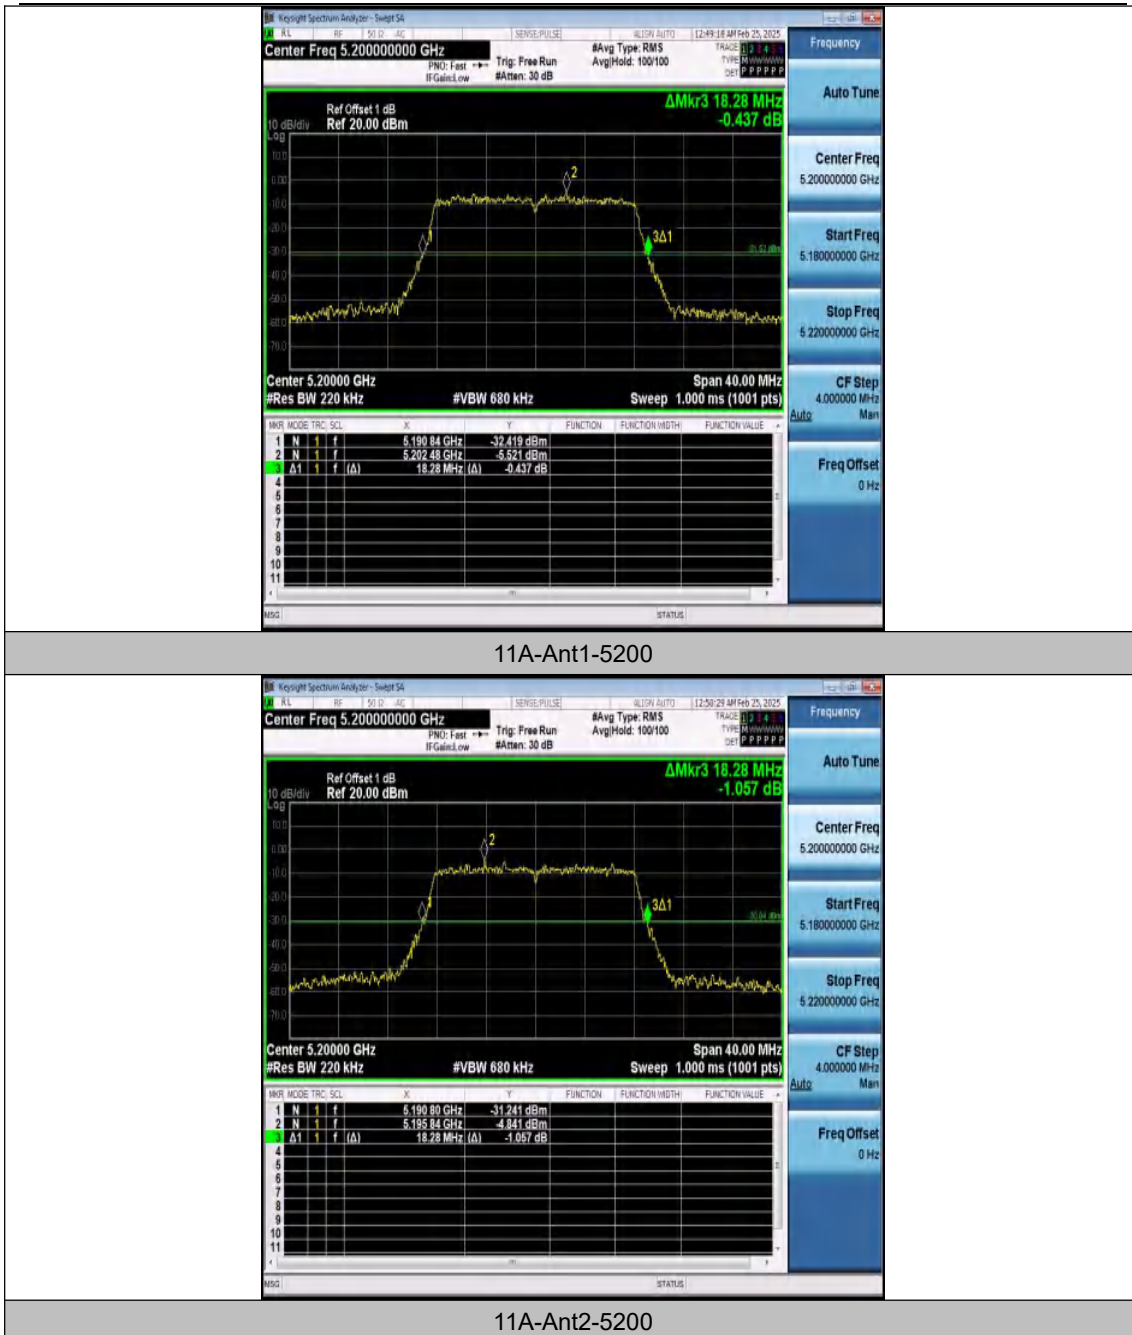


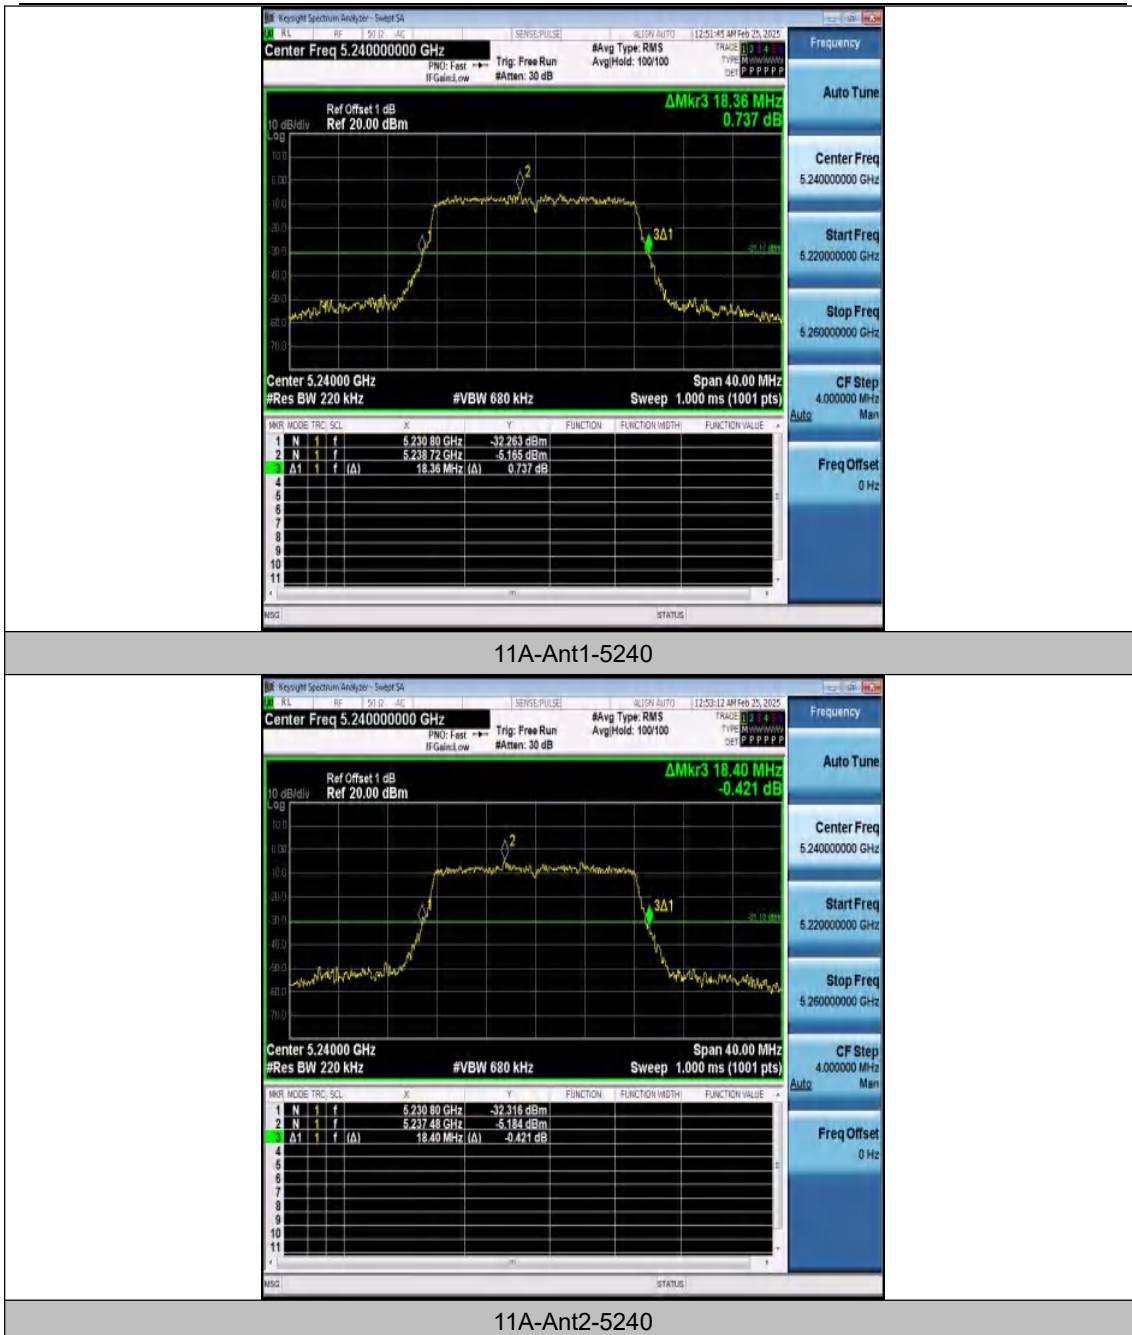

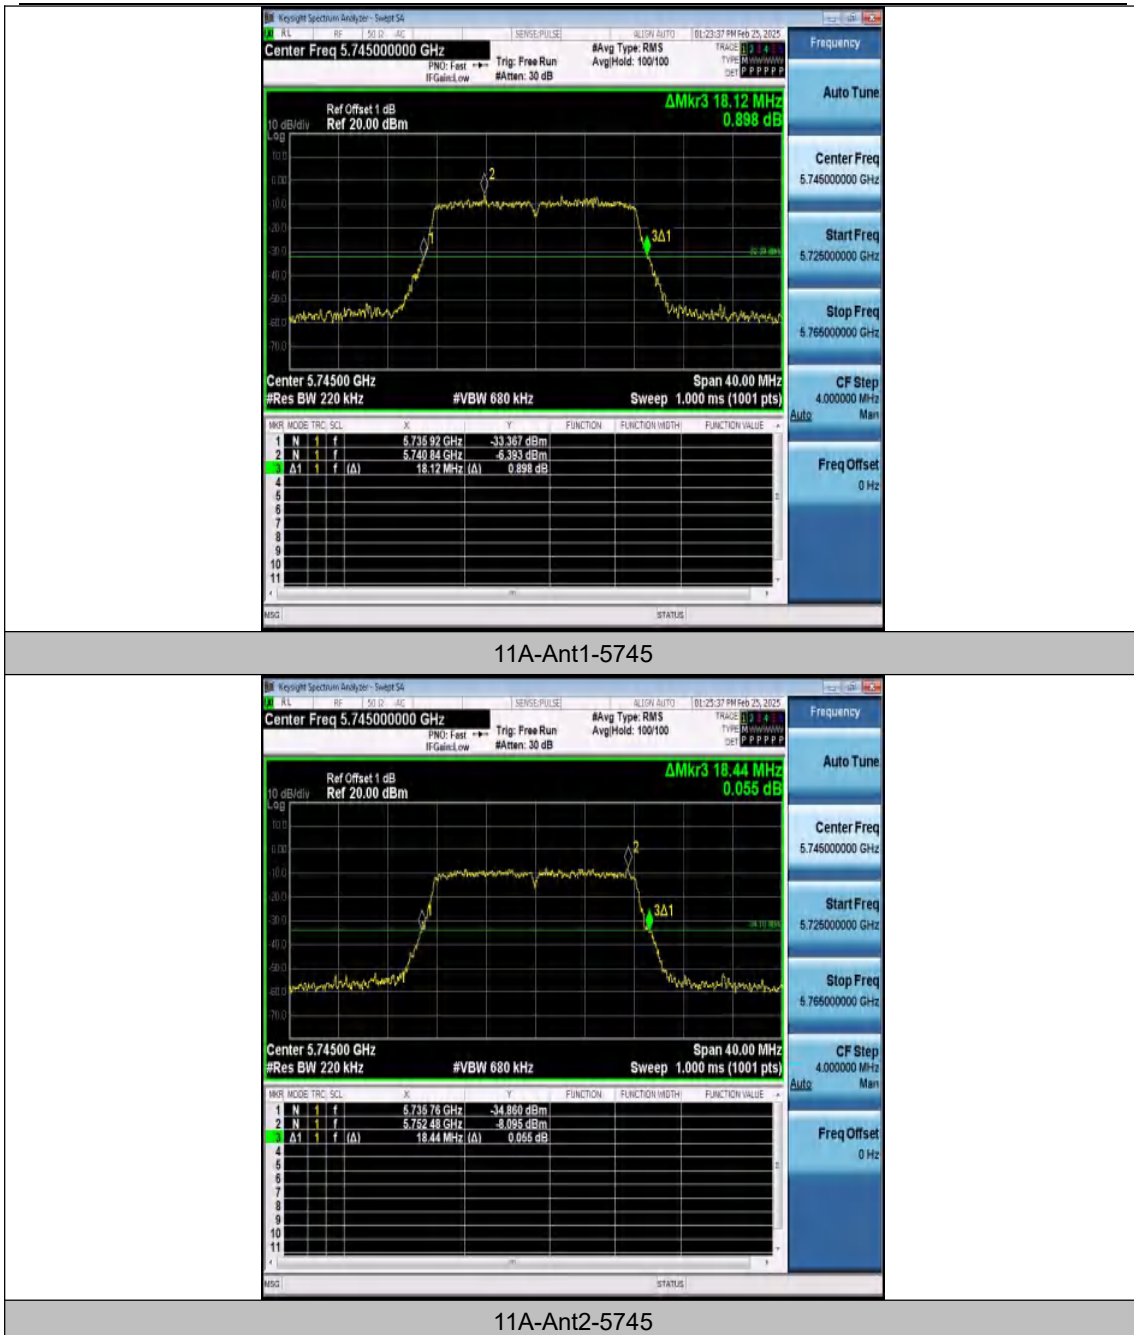

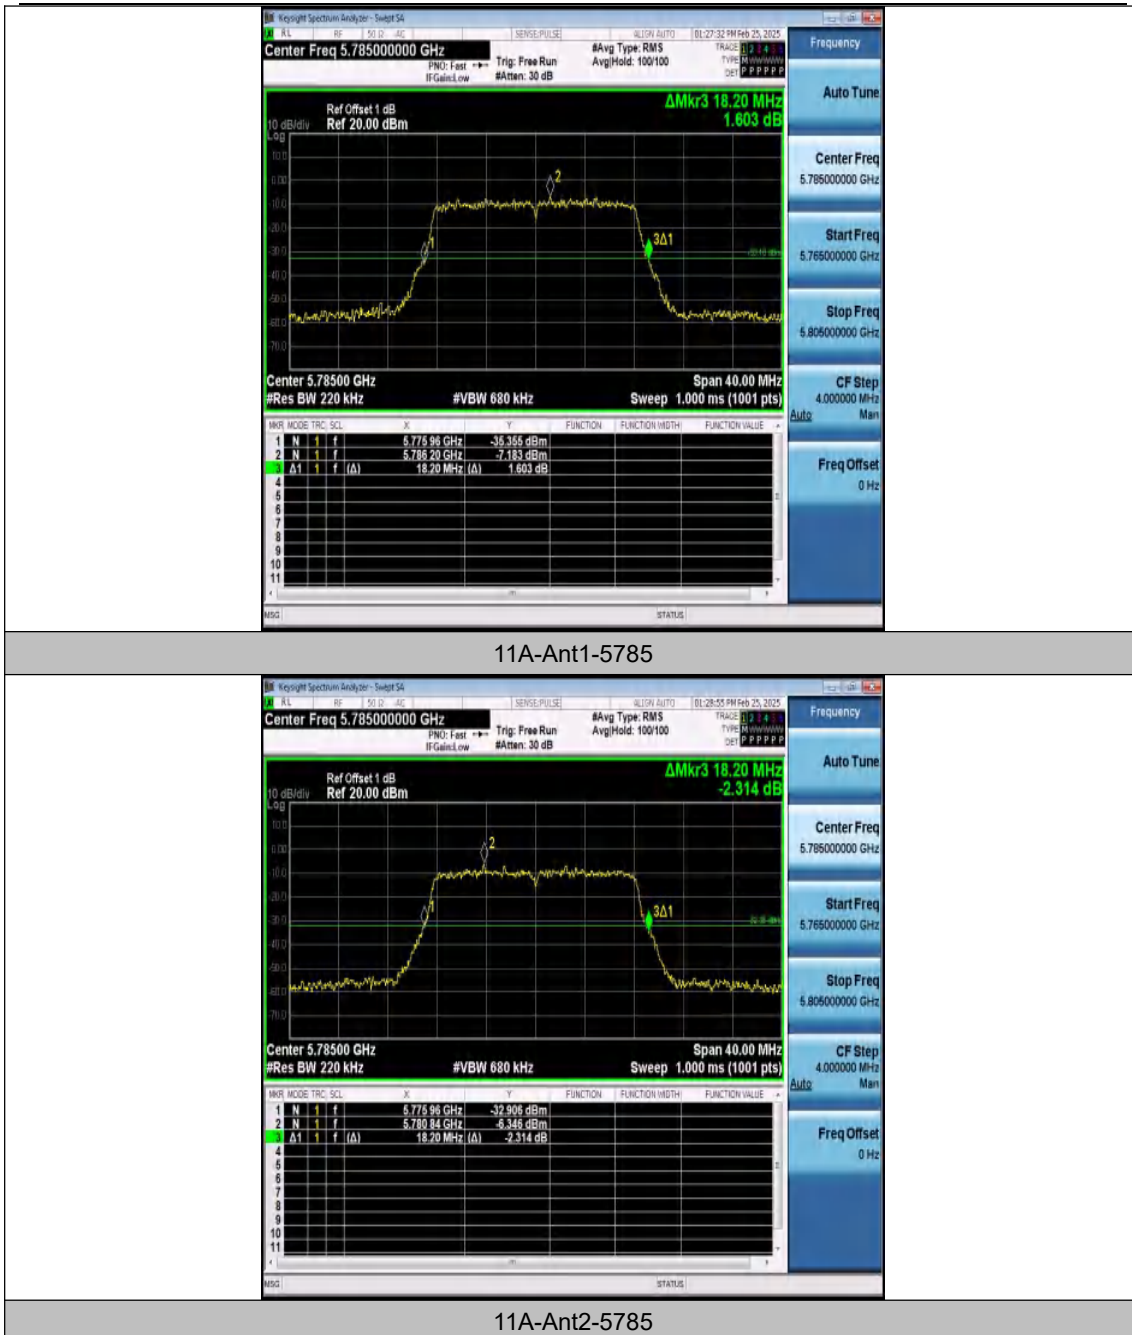

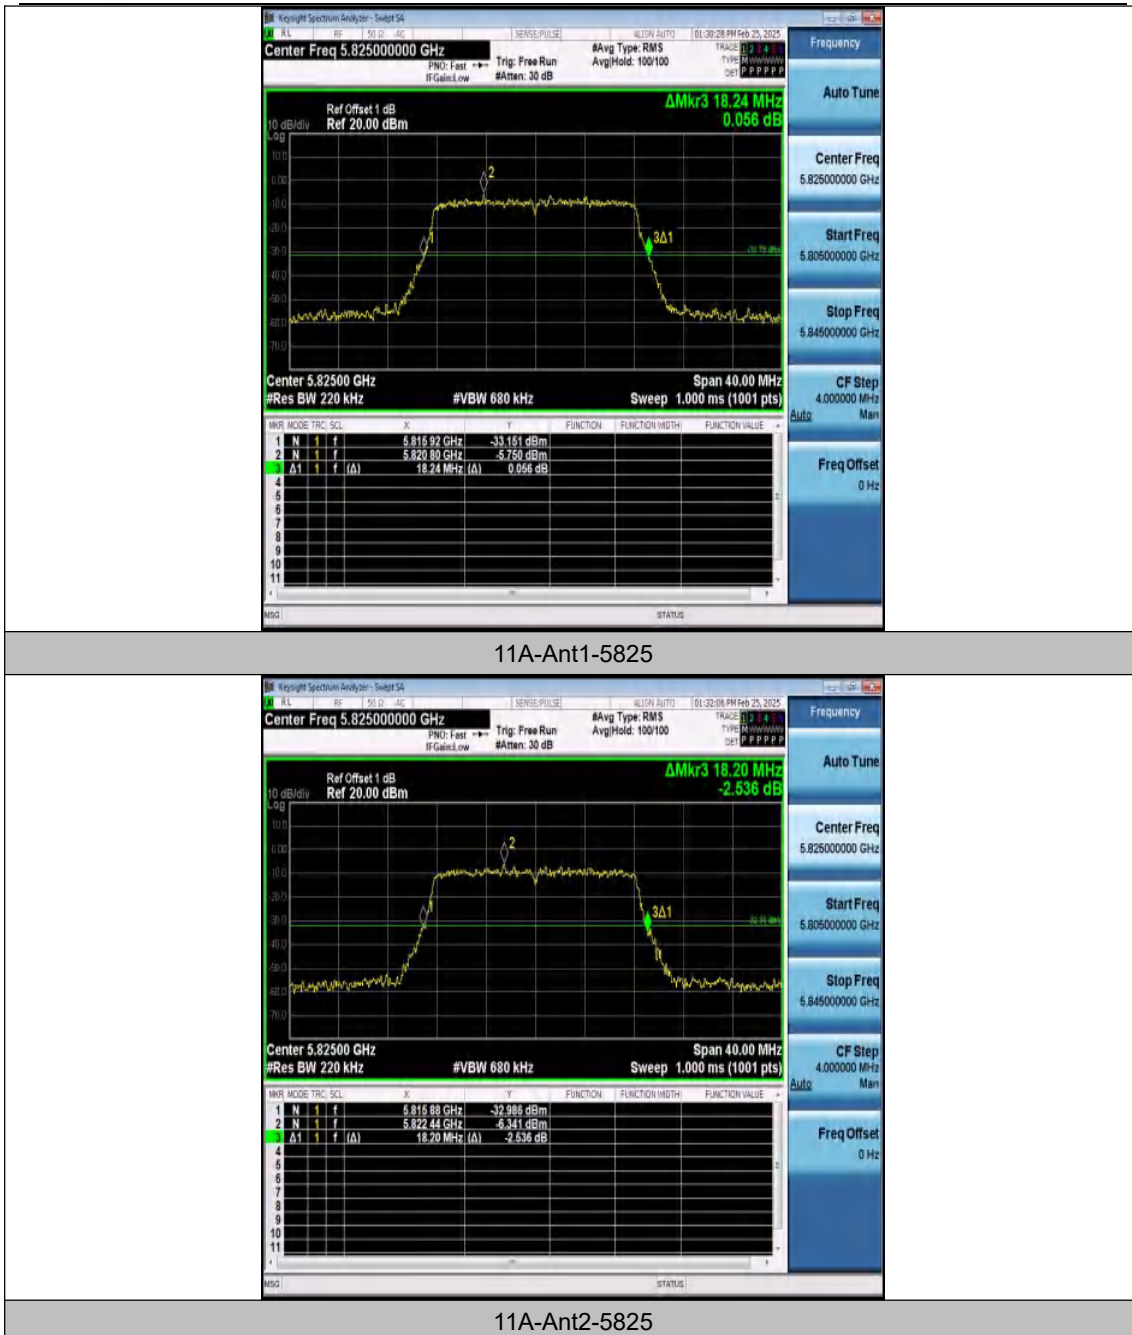


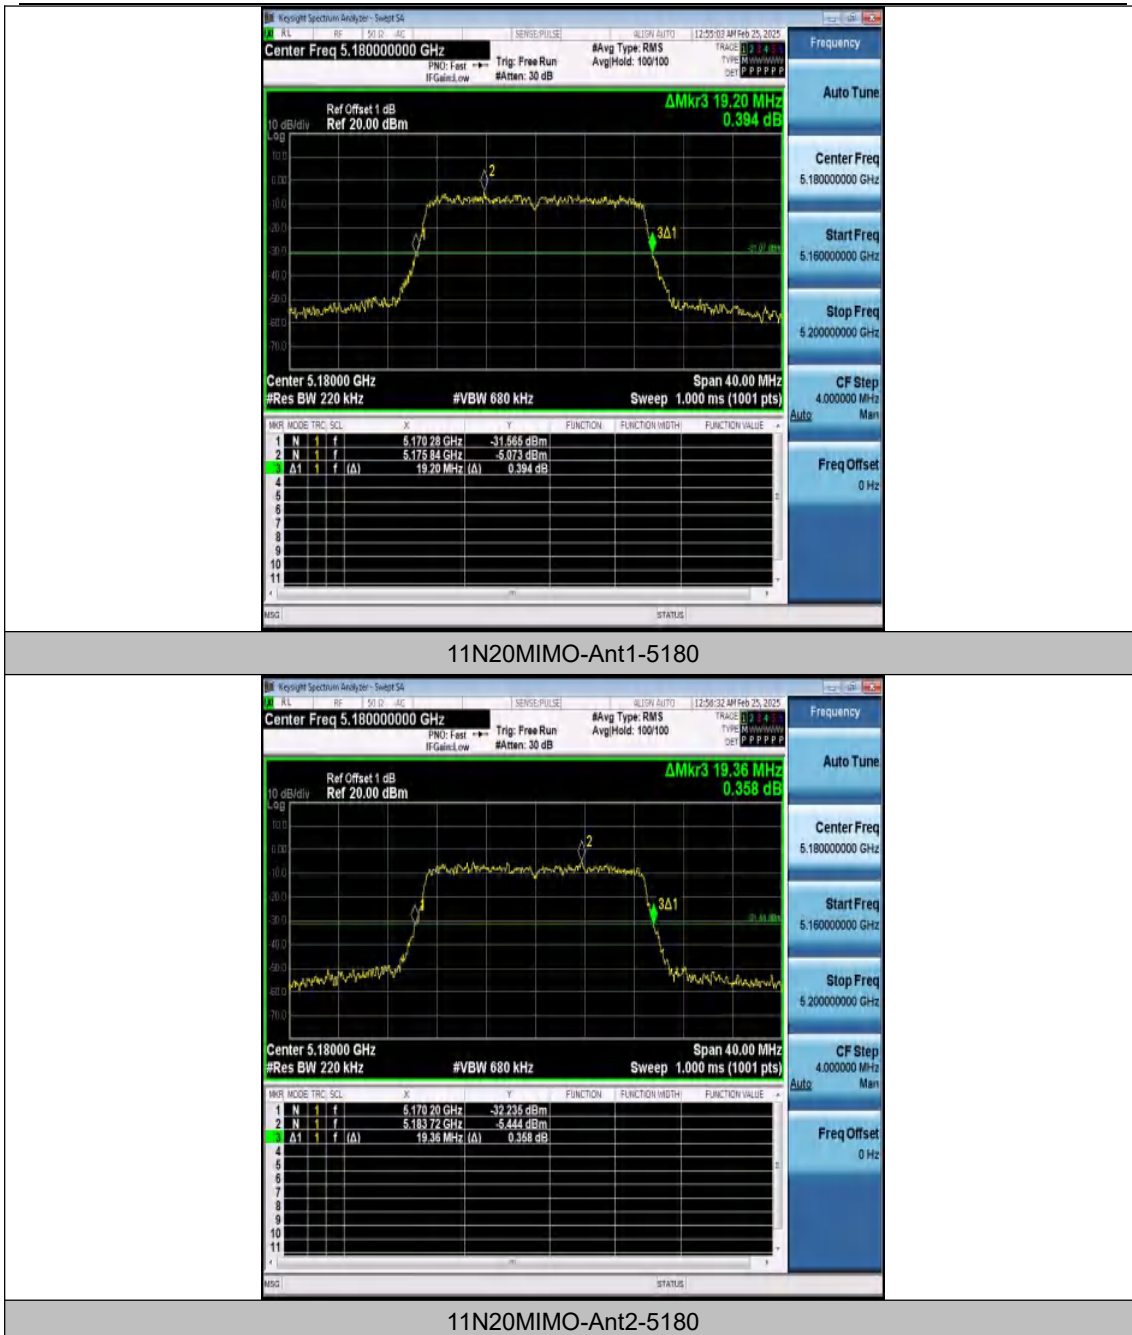



Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline 400-003-0500
www.anbotech.com

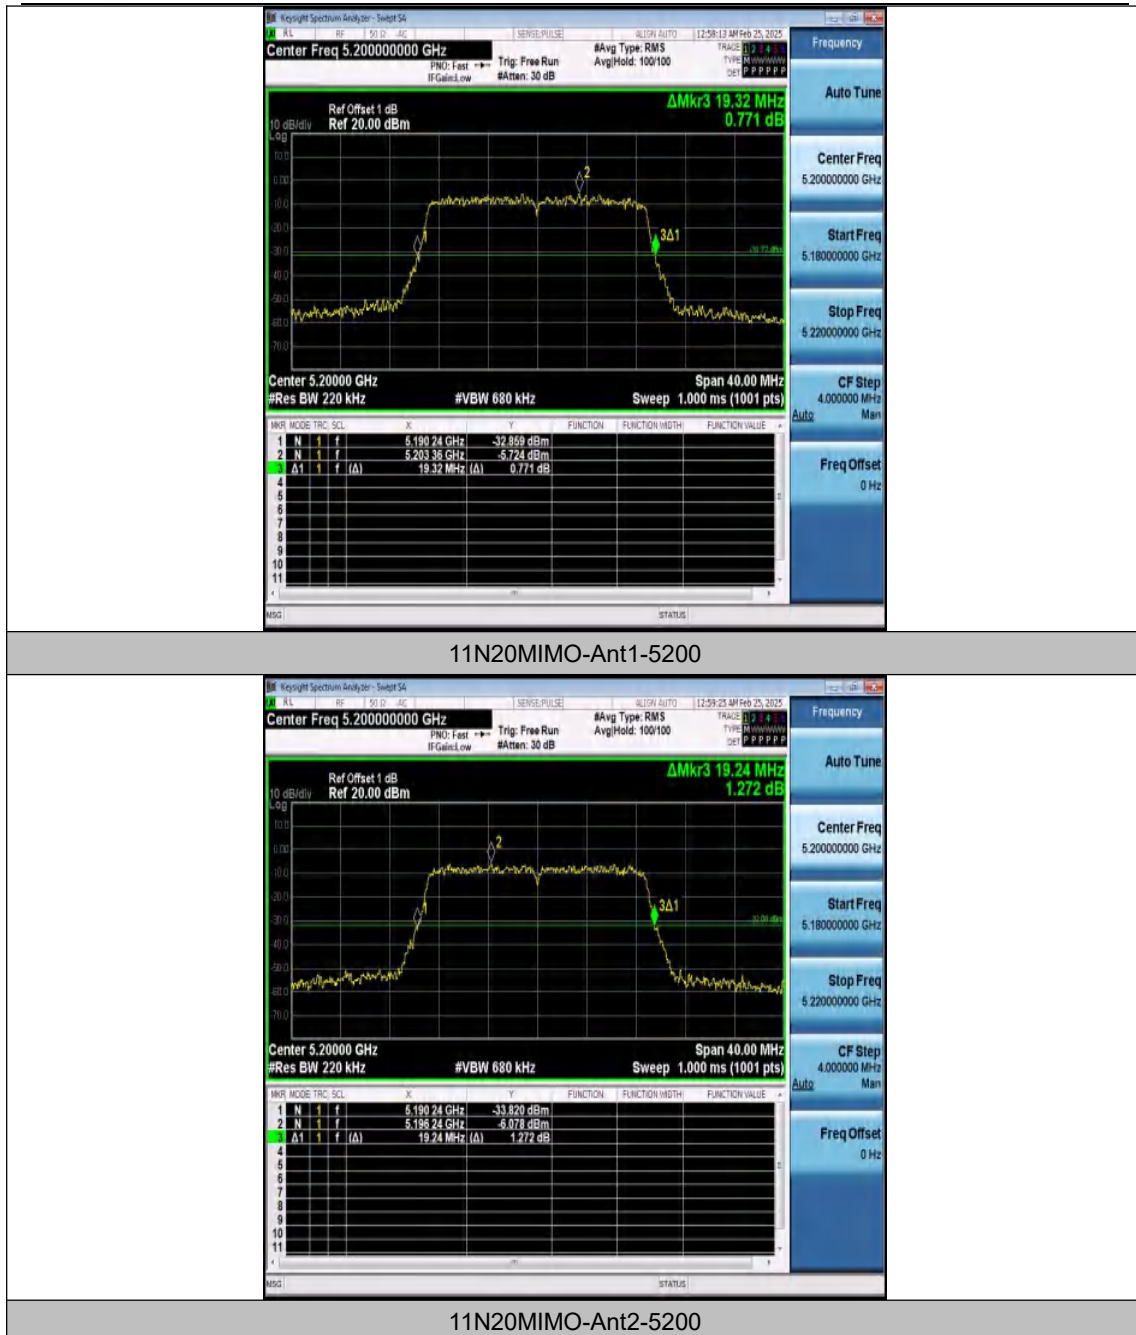

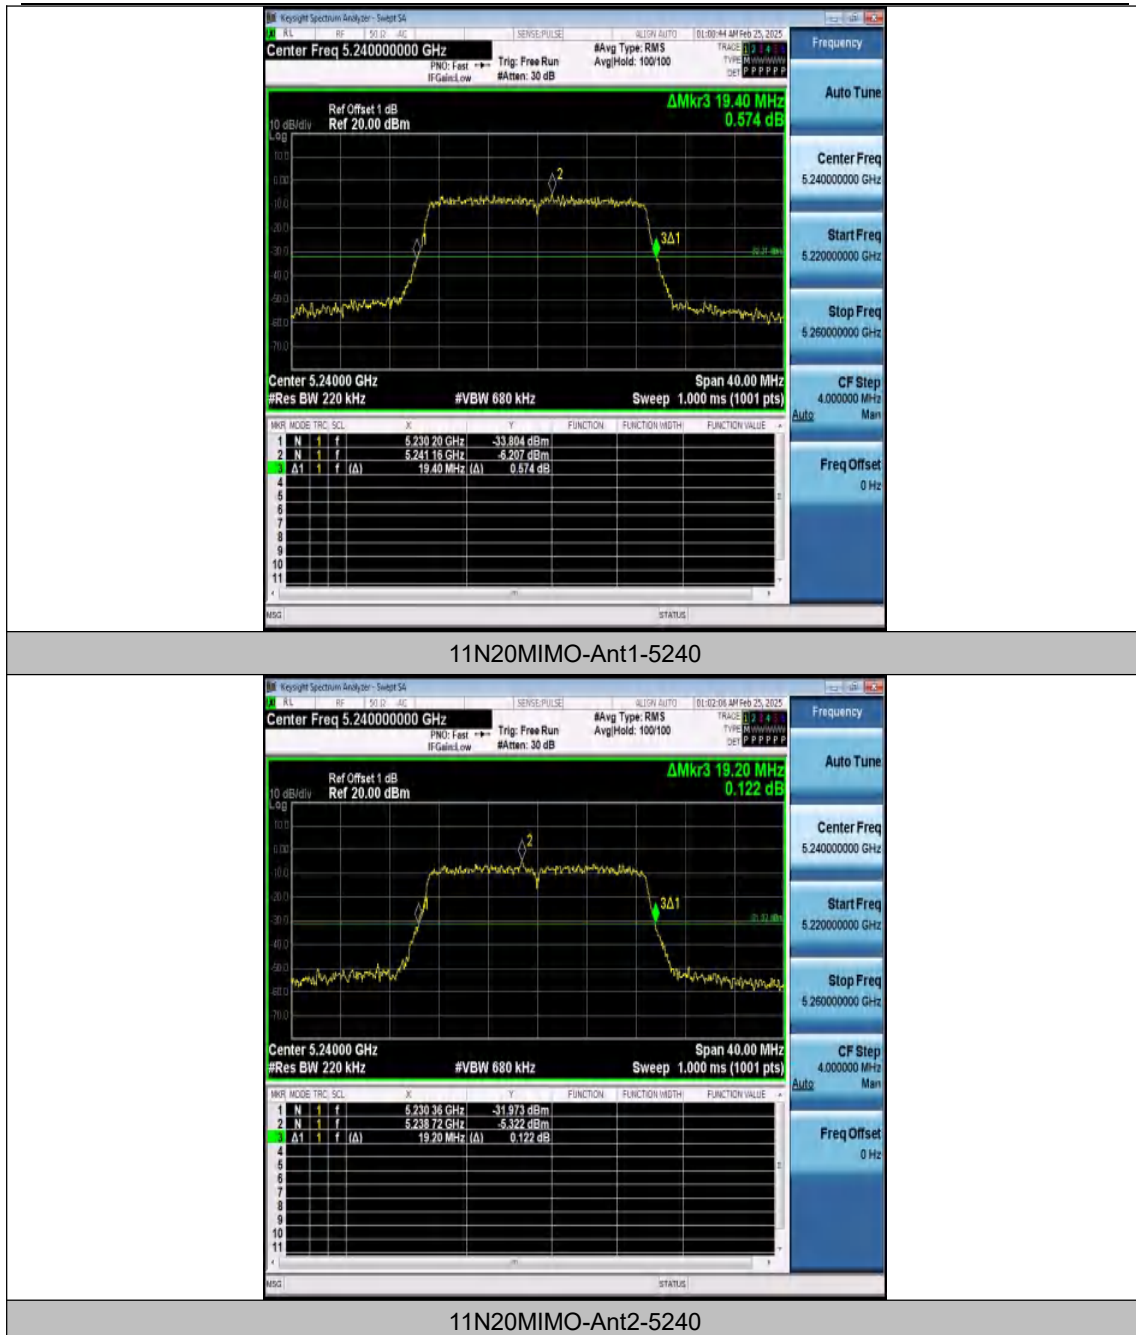


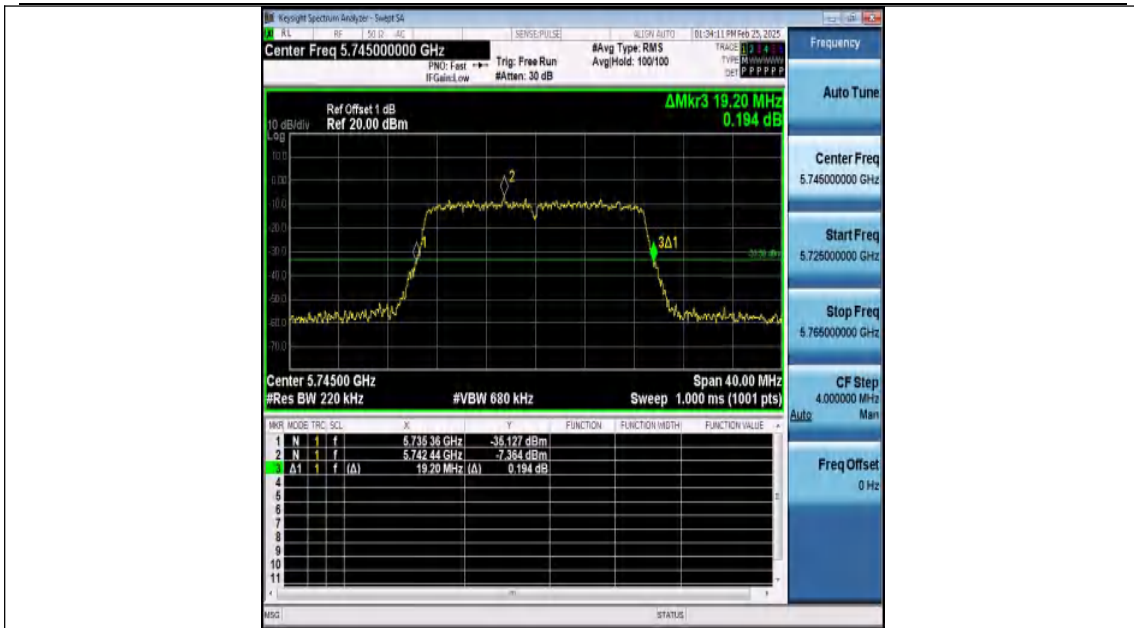


11N20MIMO-Ant1-5745

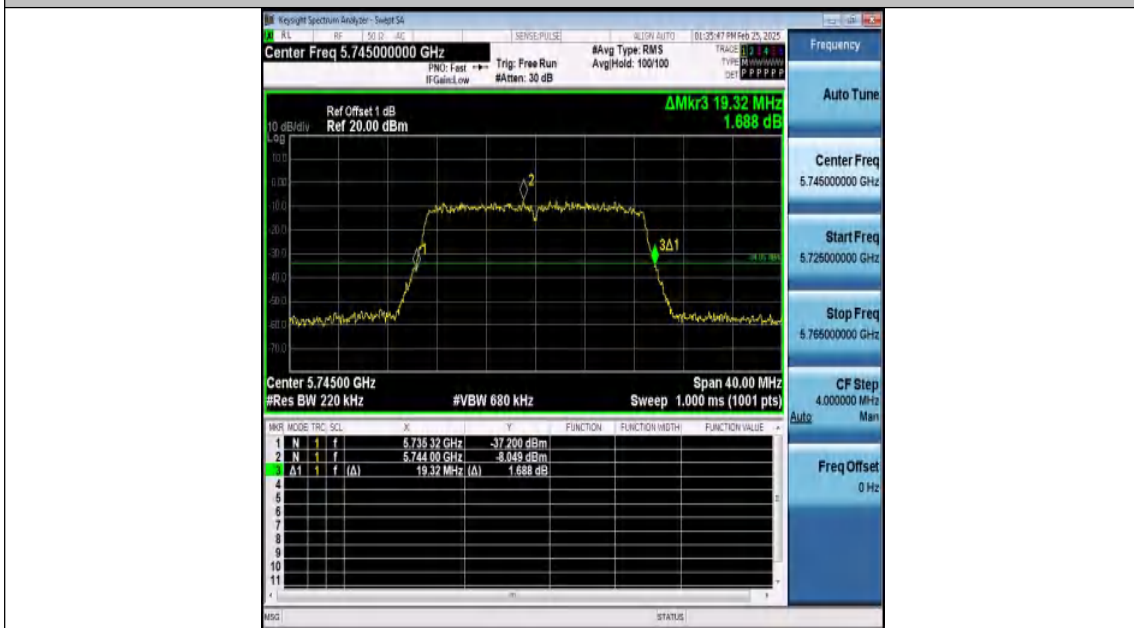


11N20MIMO-Ant2-5745

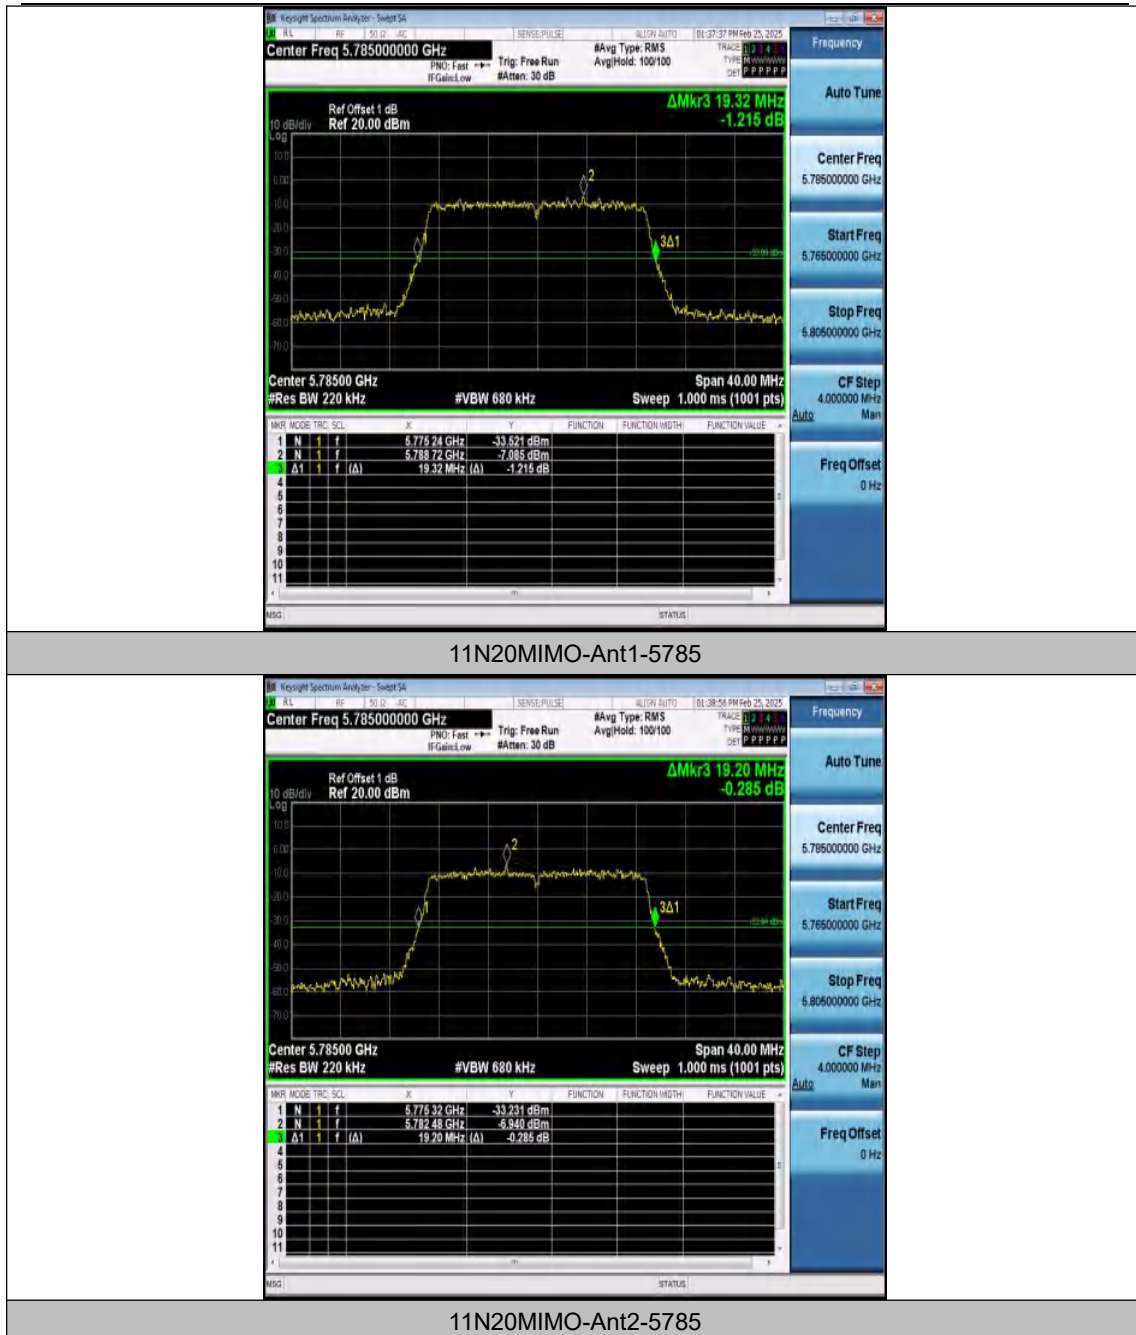


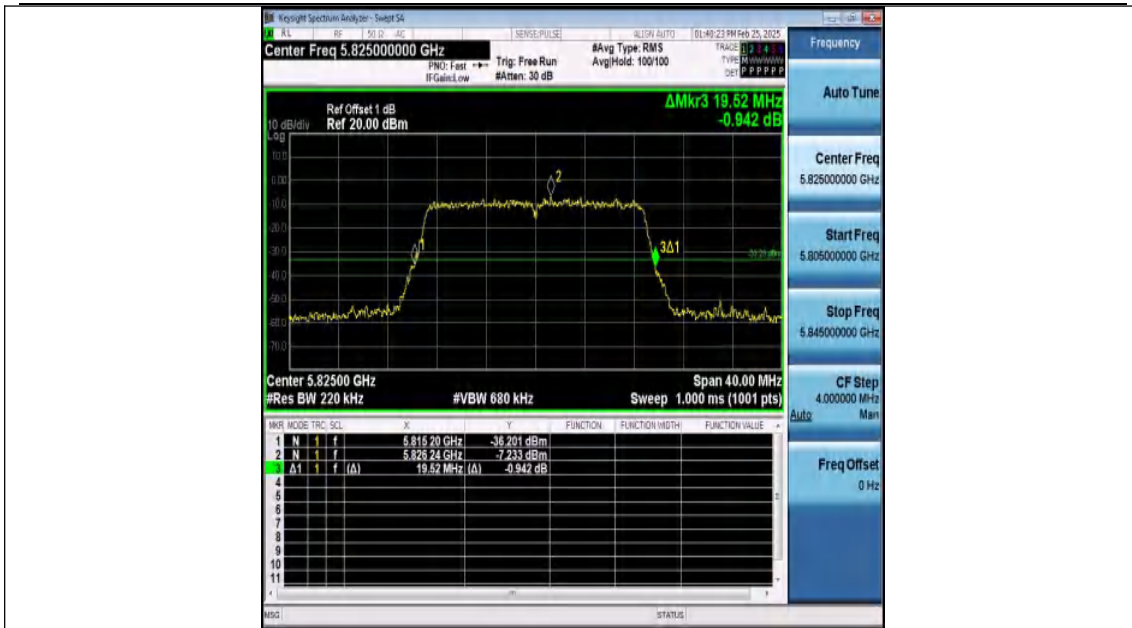


11N20MIMO-Ant1-5825

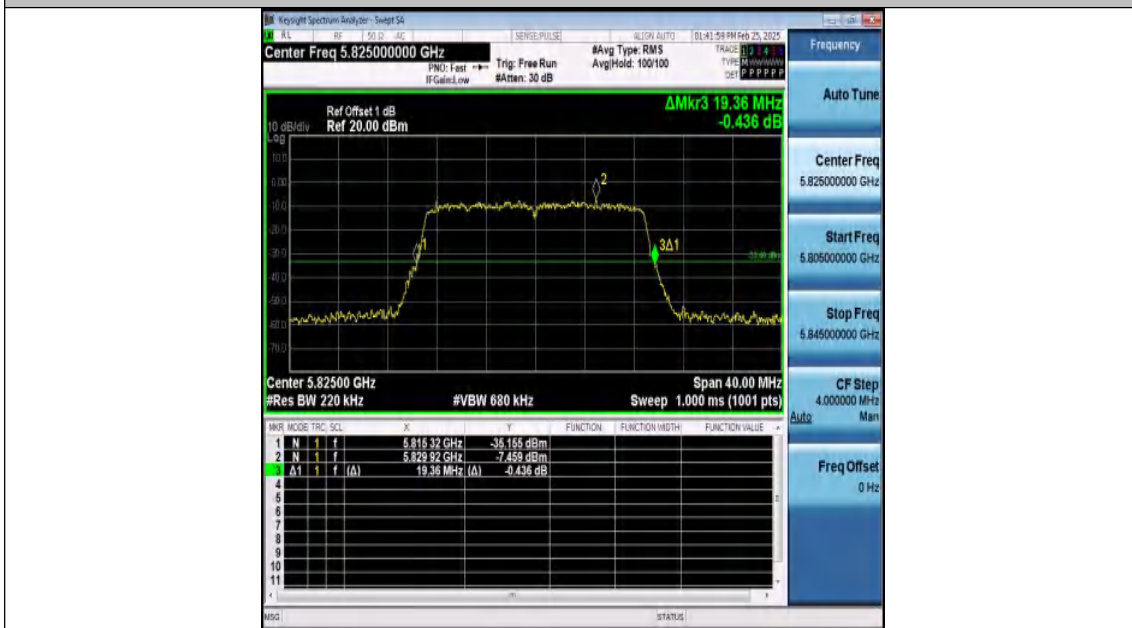

11N20MIMO-Ant2-5825

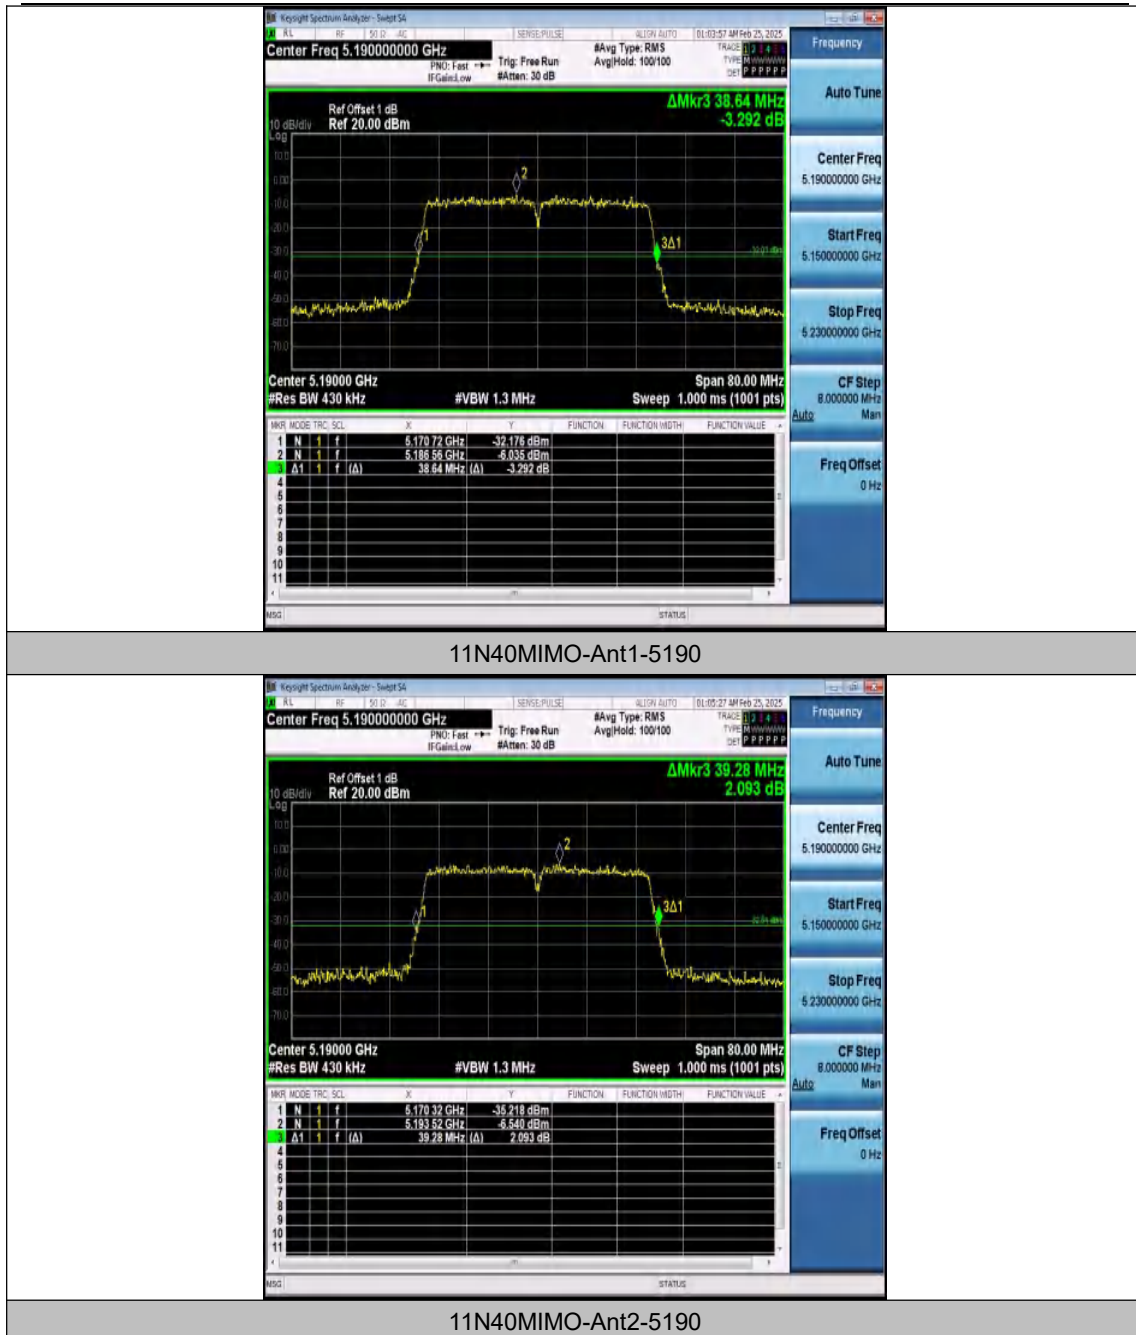


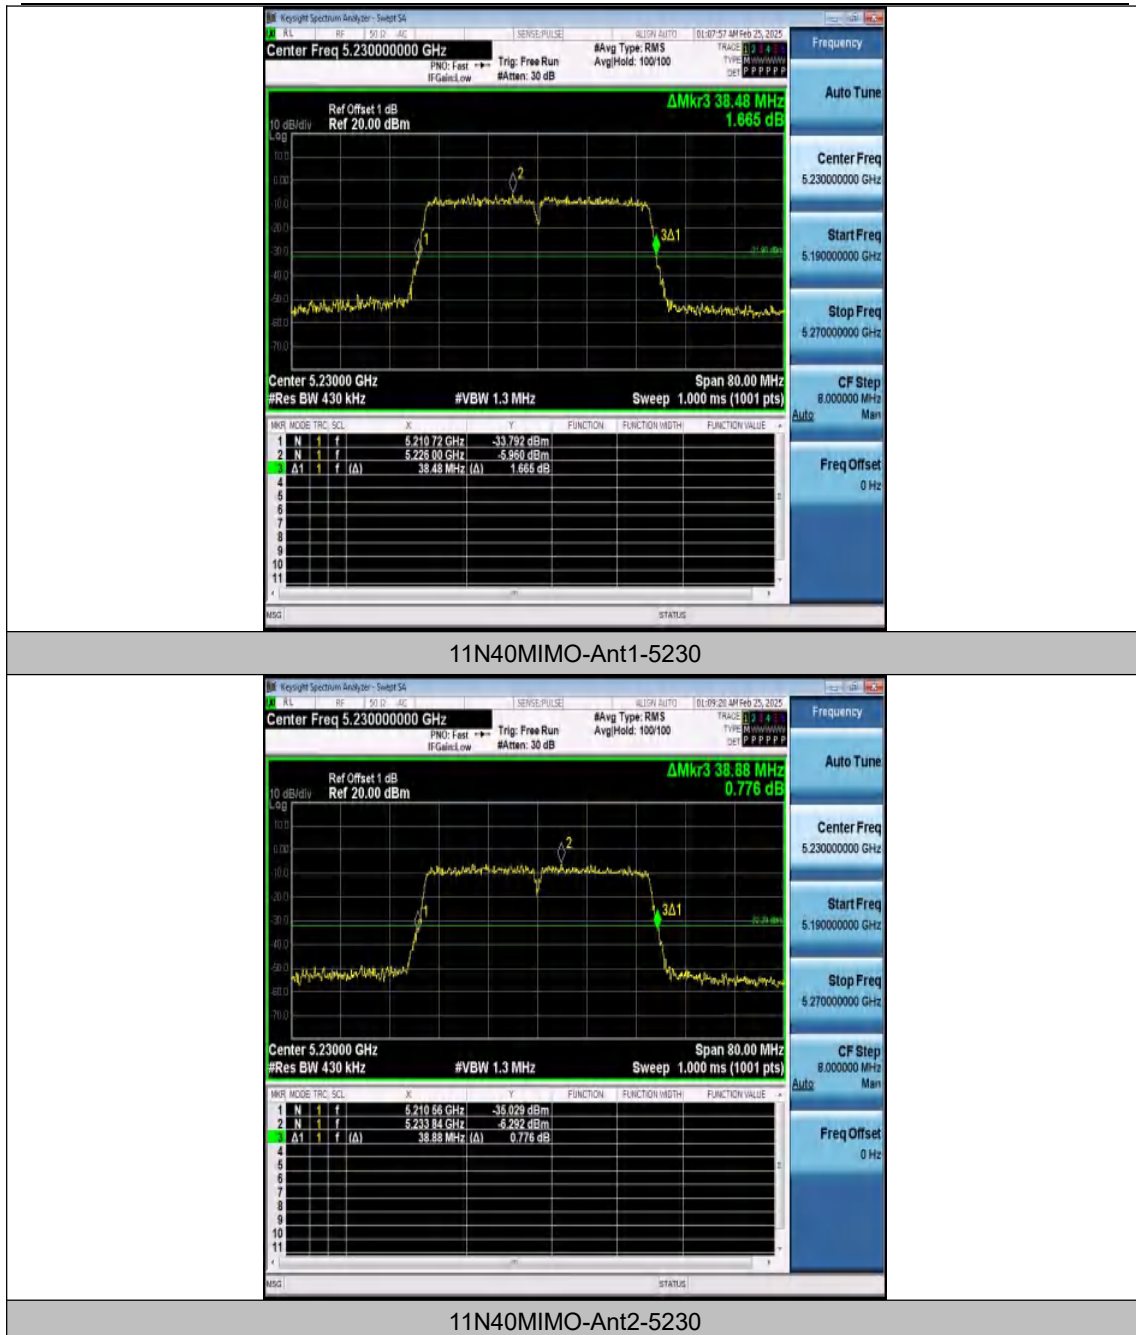


Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

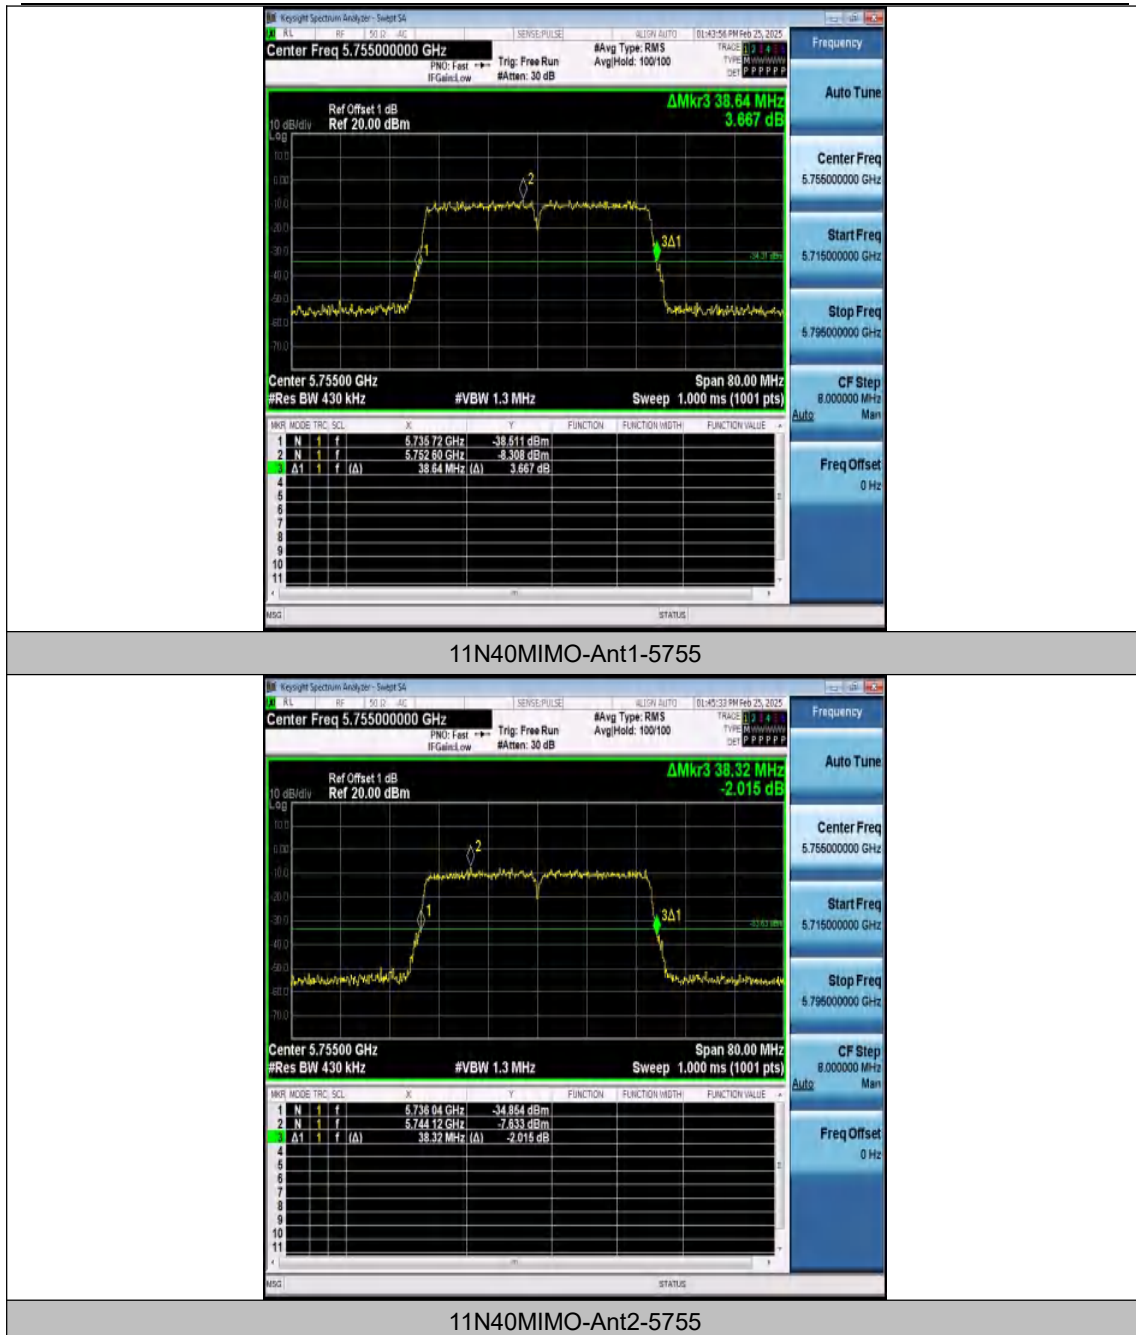


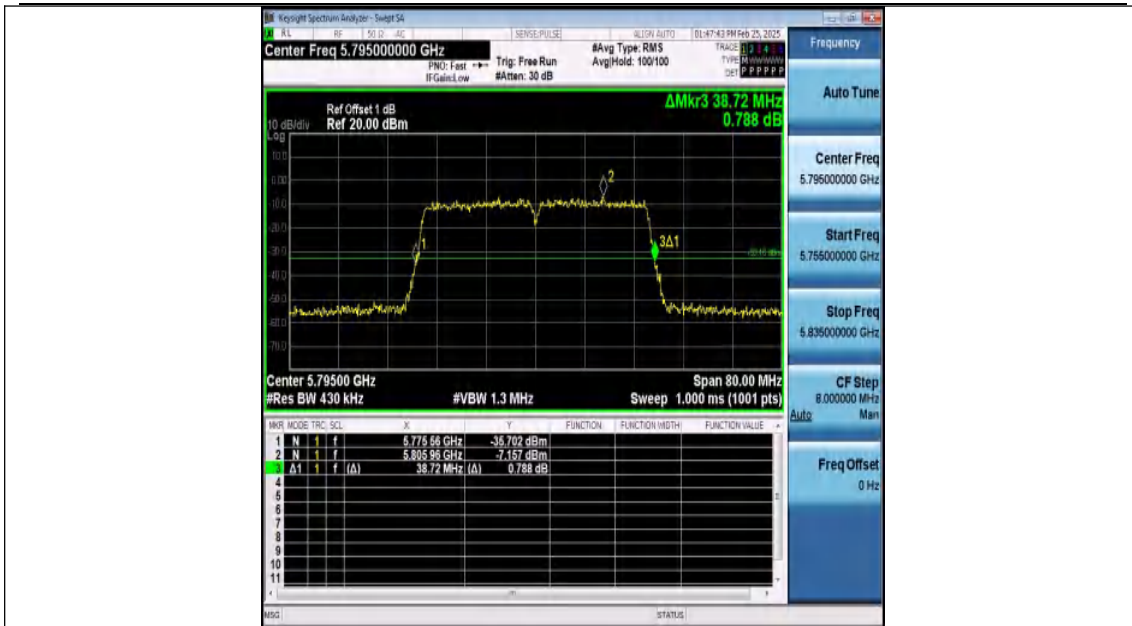



11N40MIMO-Ant1-5795

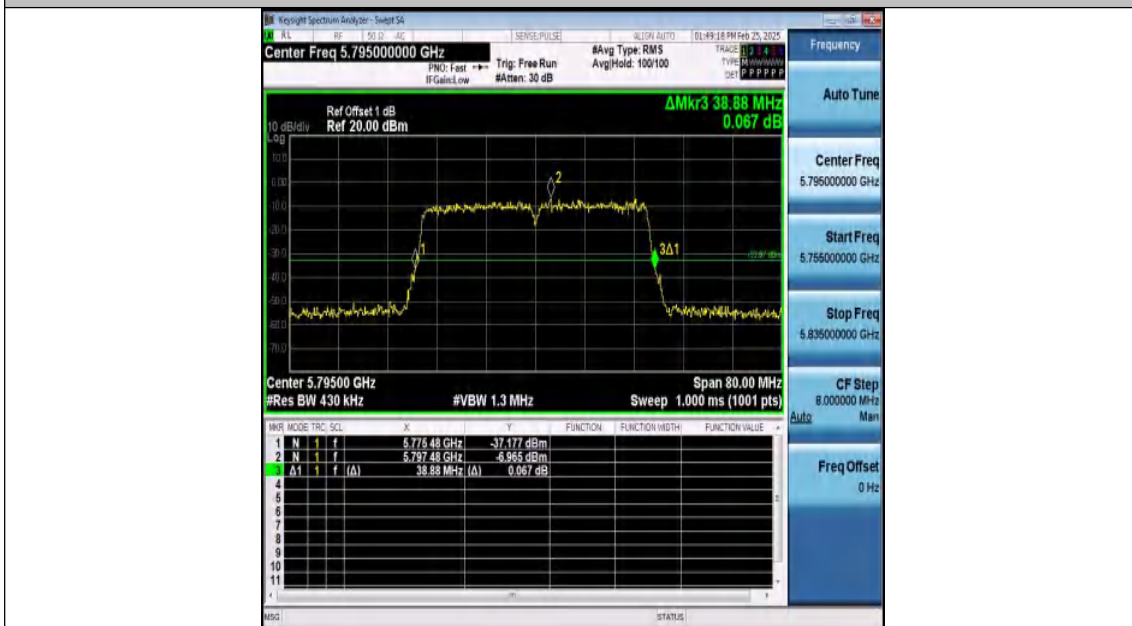

11N40MIMO-Ant2-5795

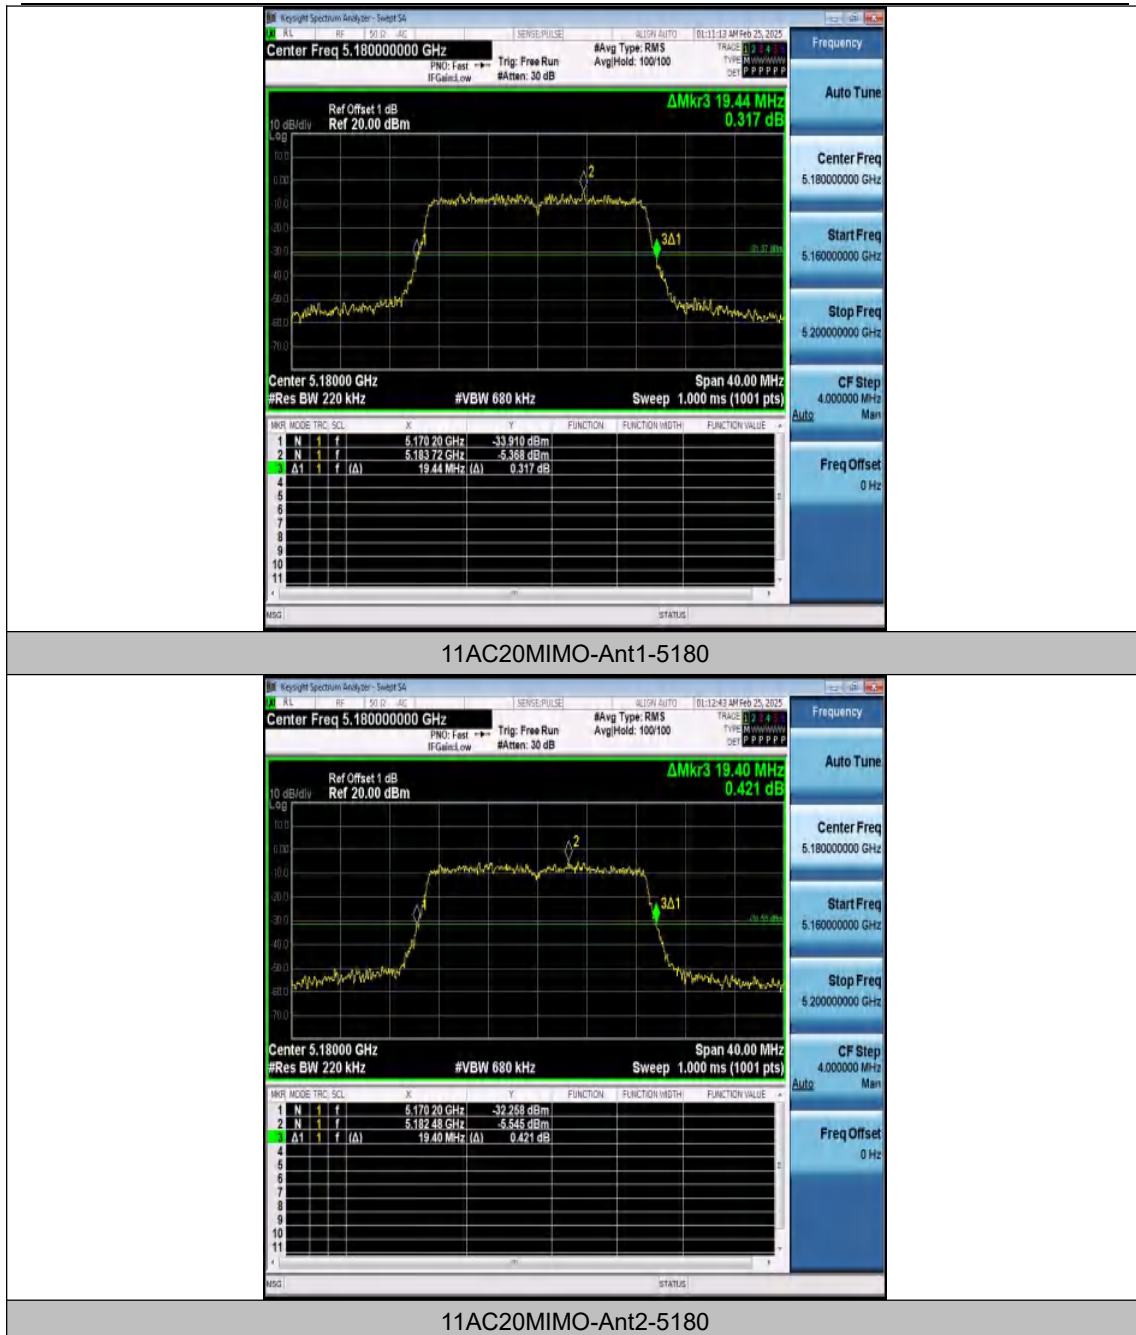

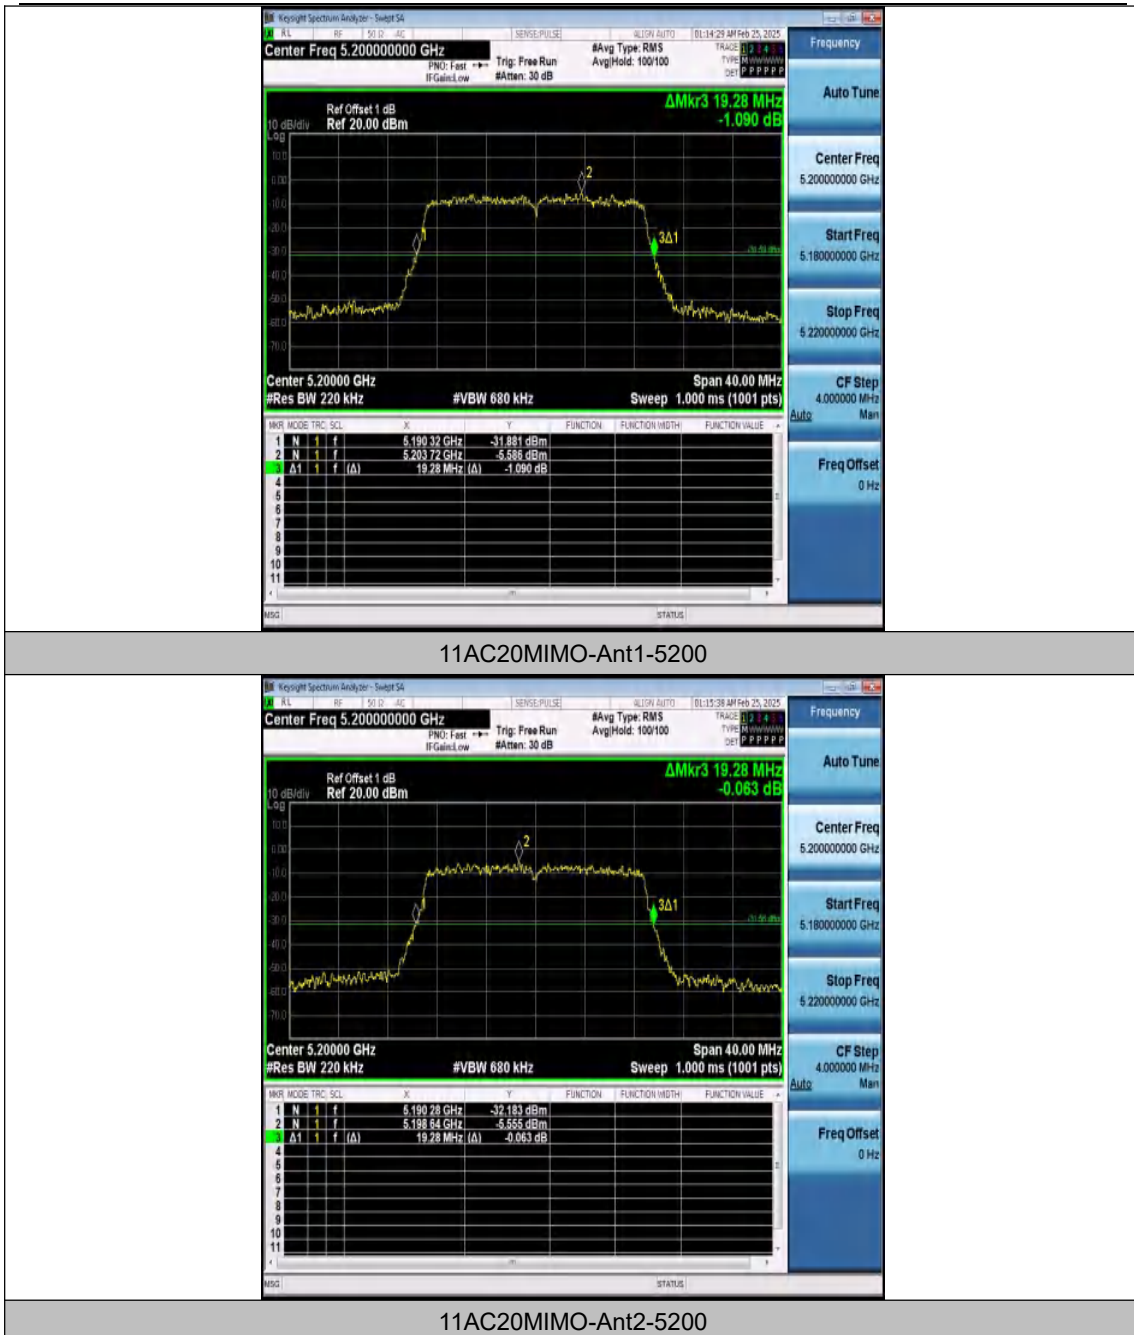


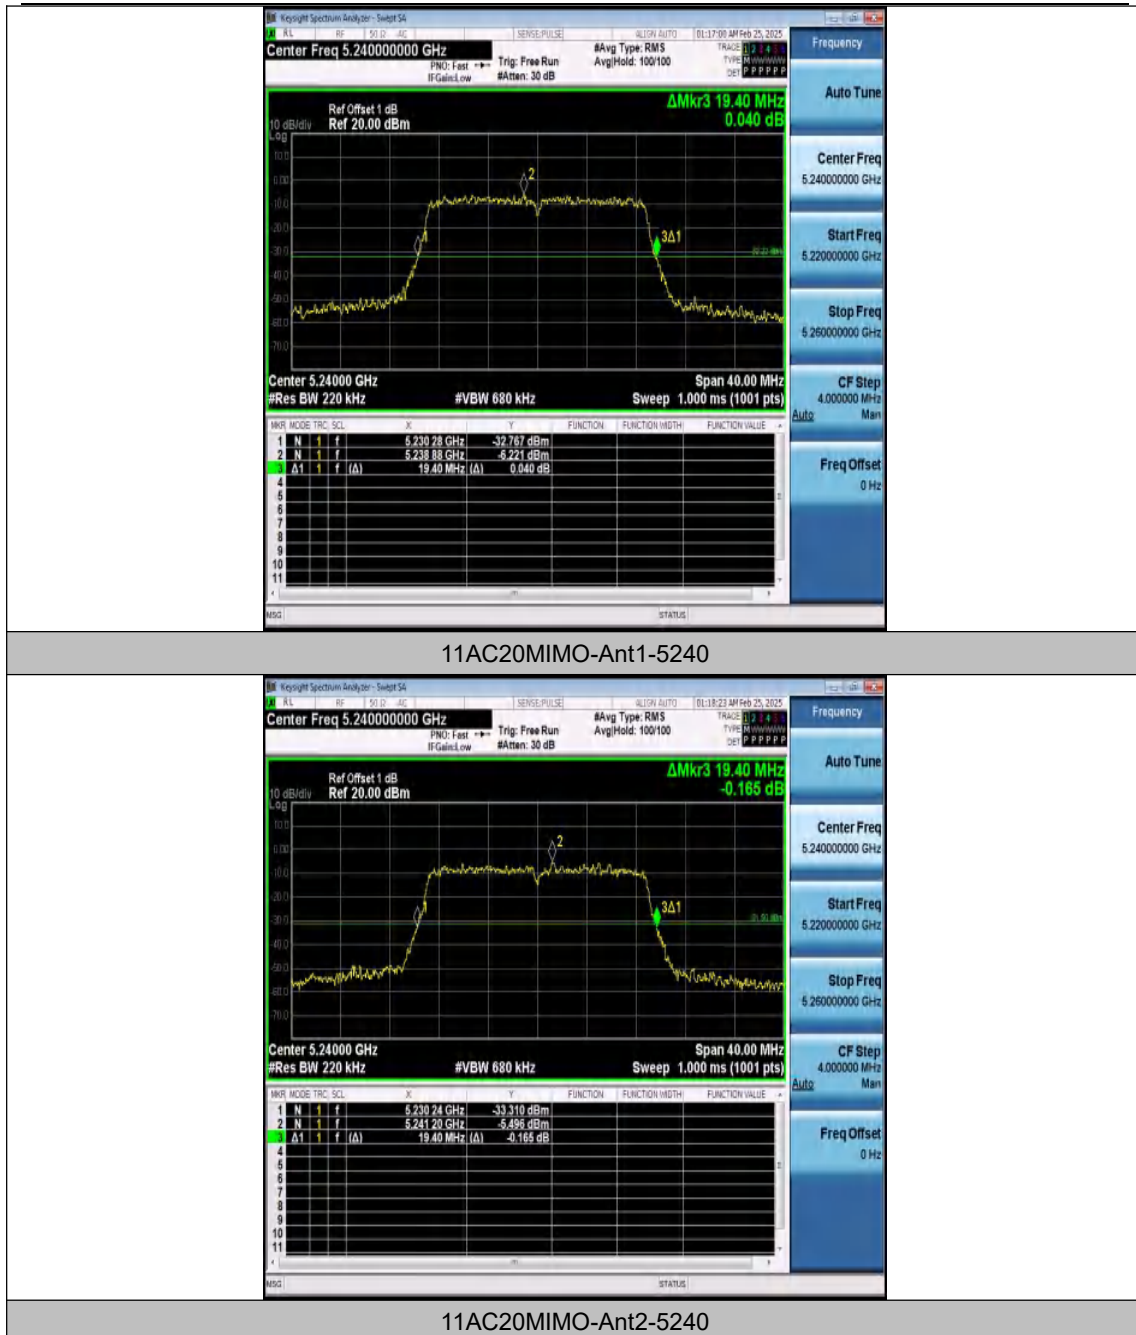



Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

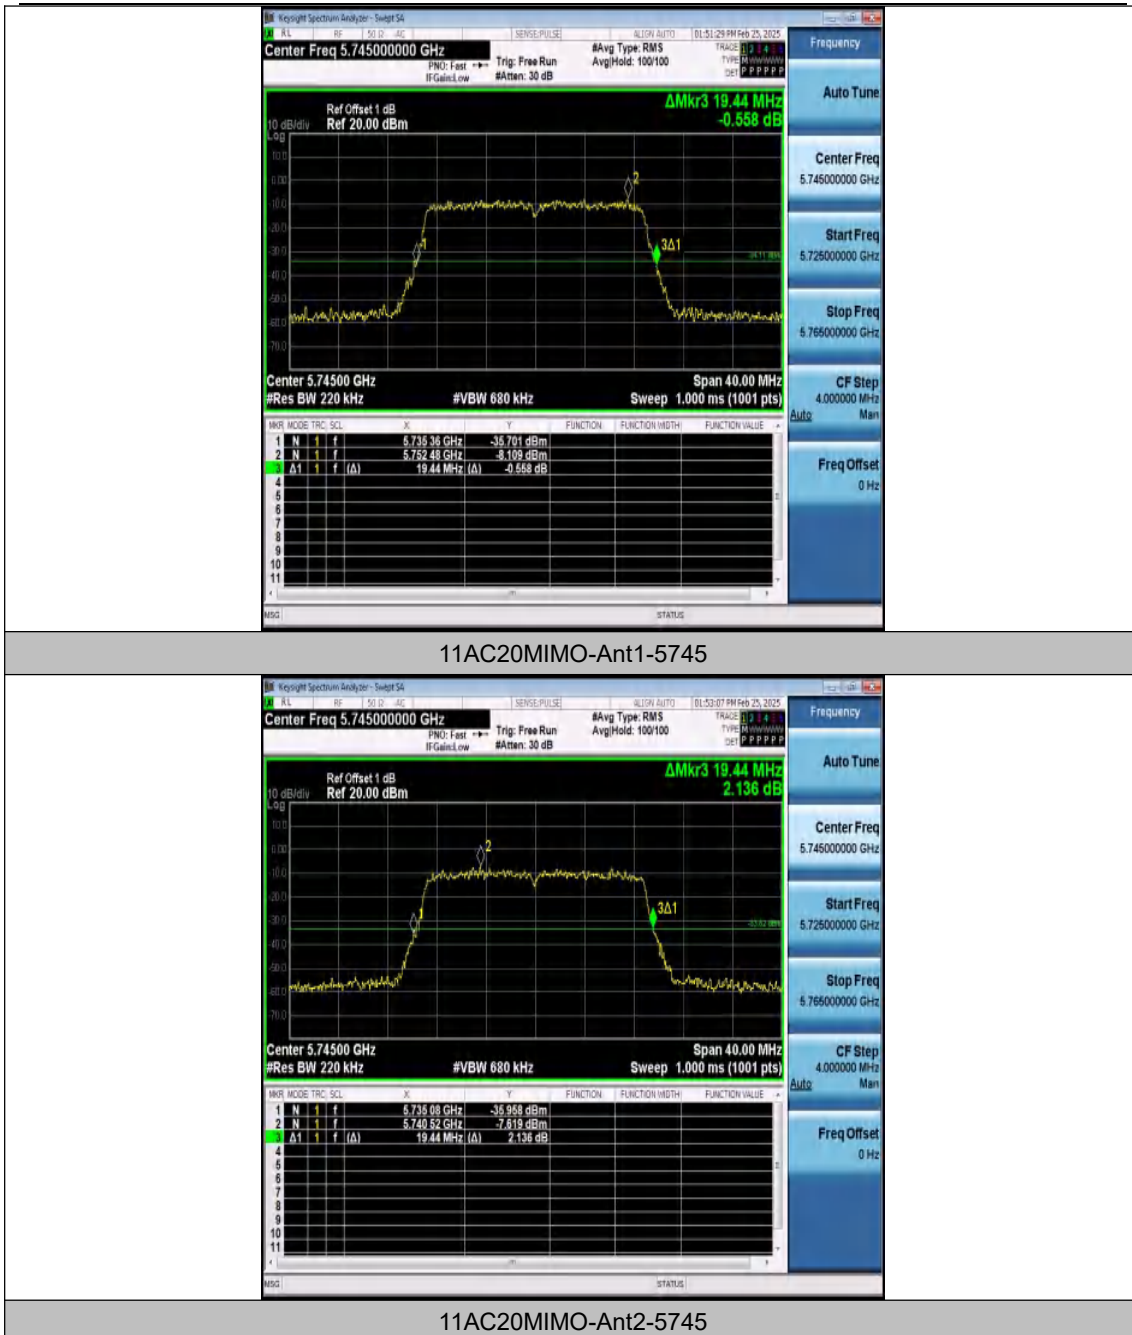


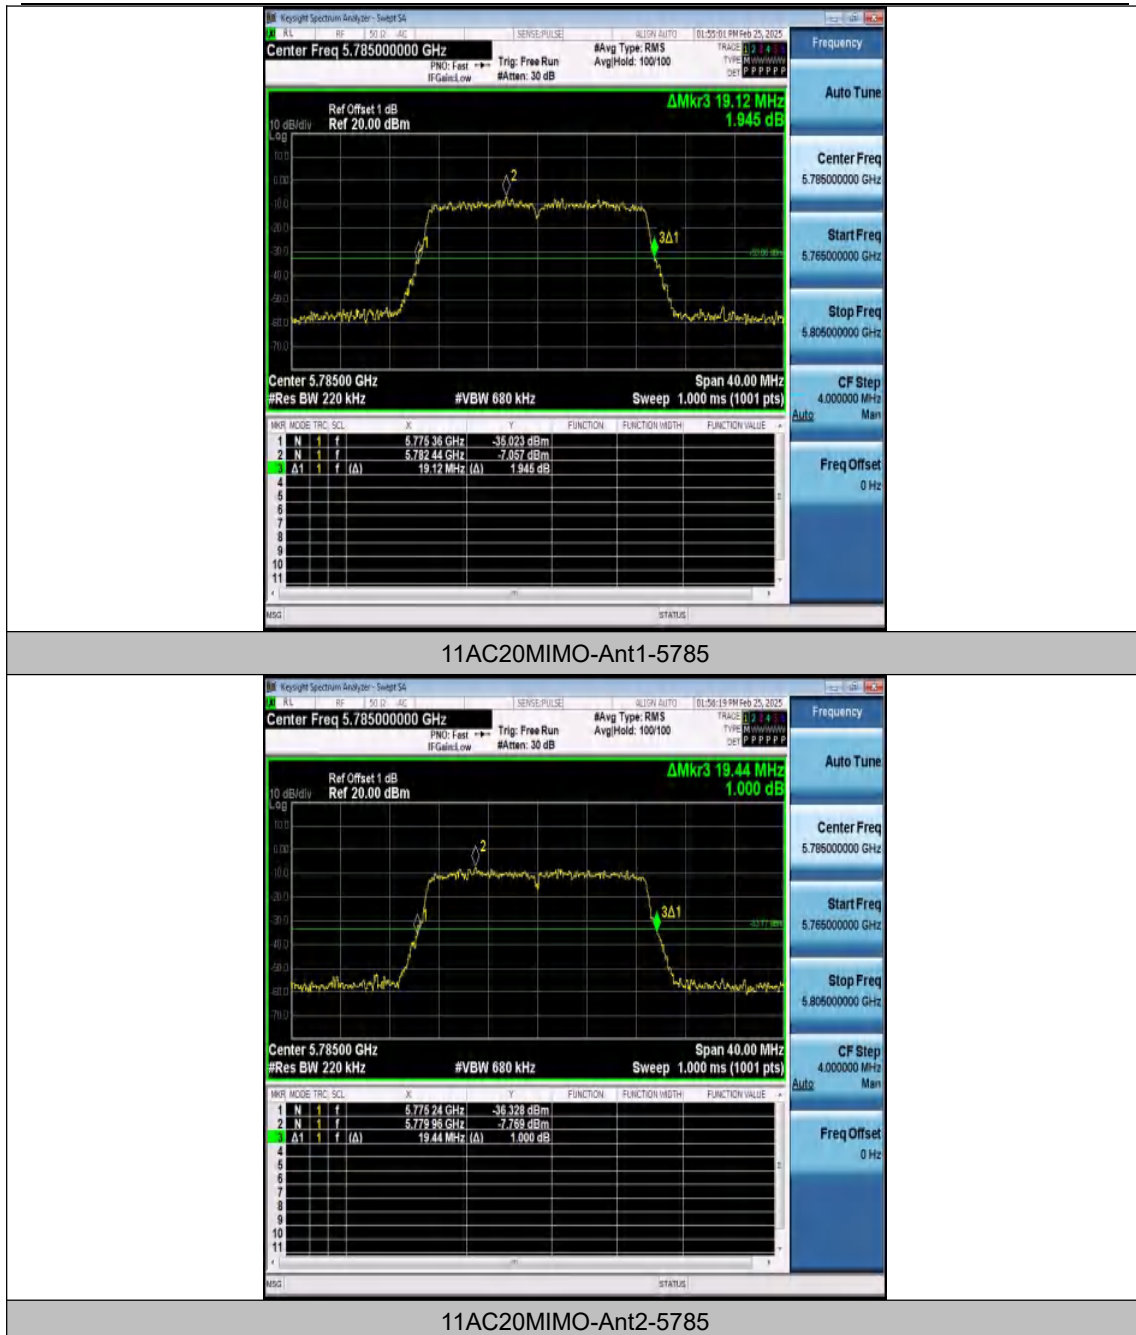


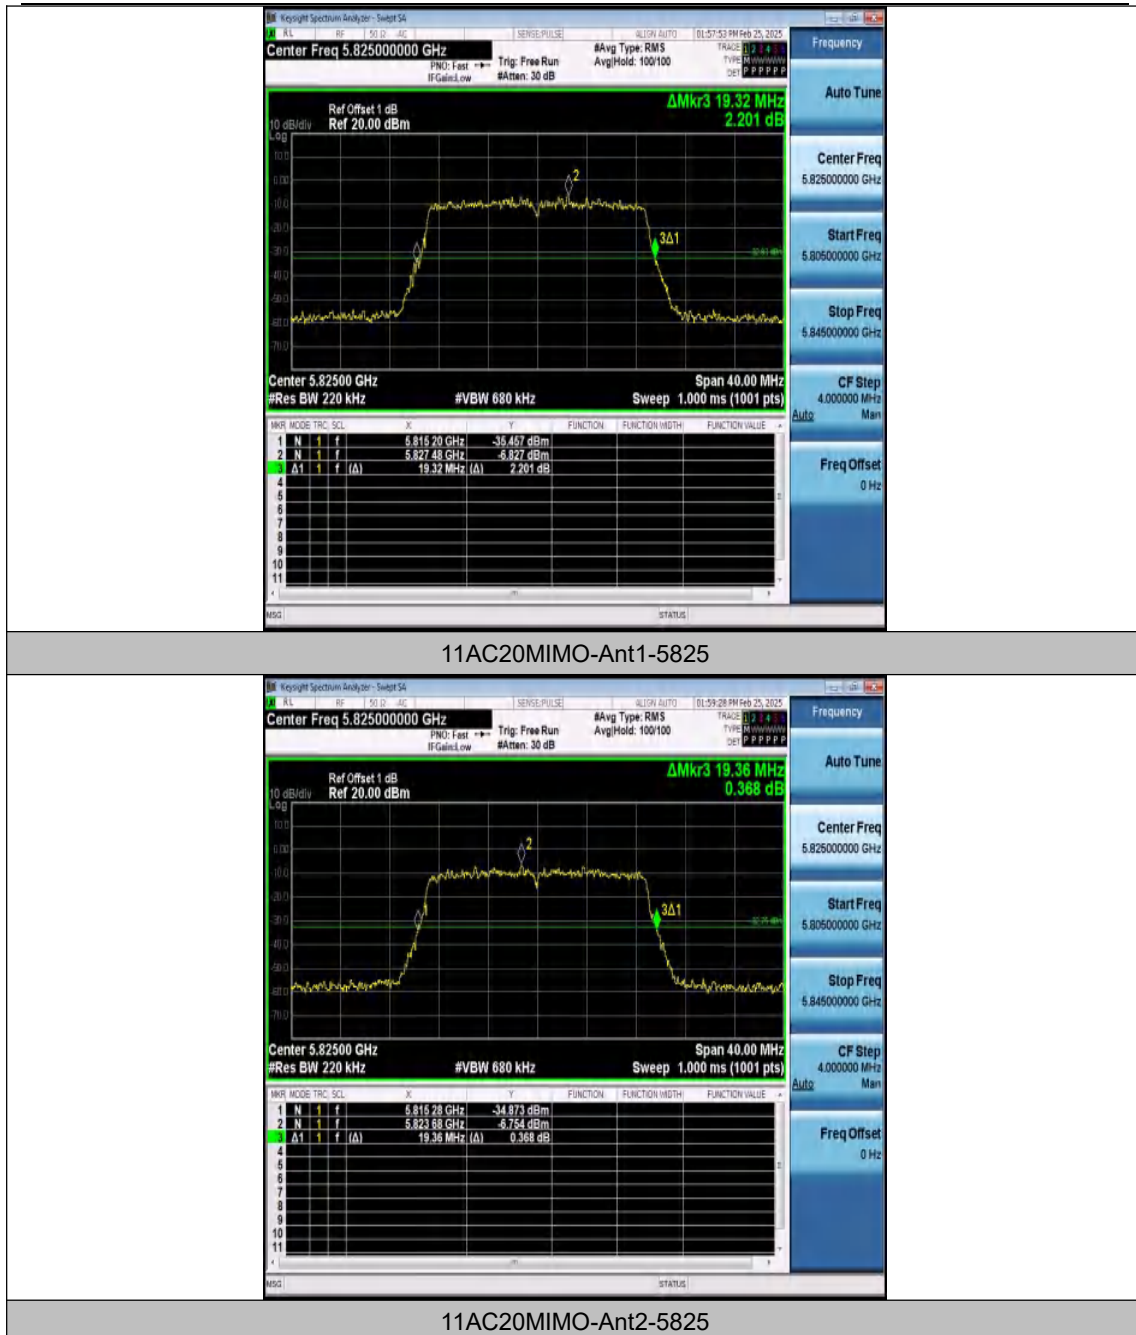


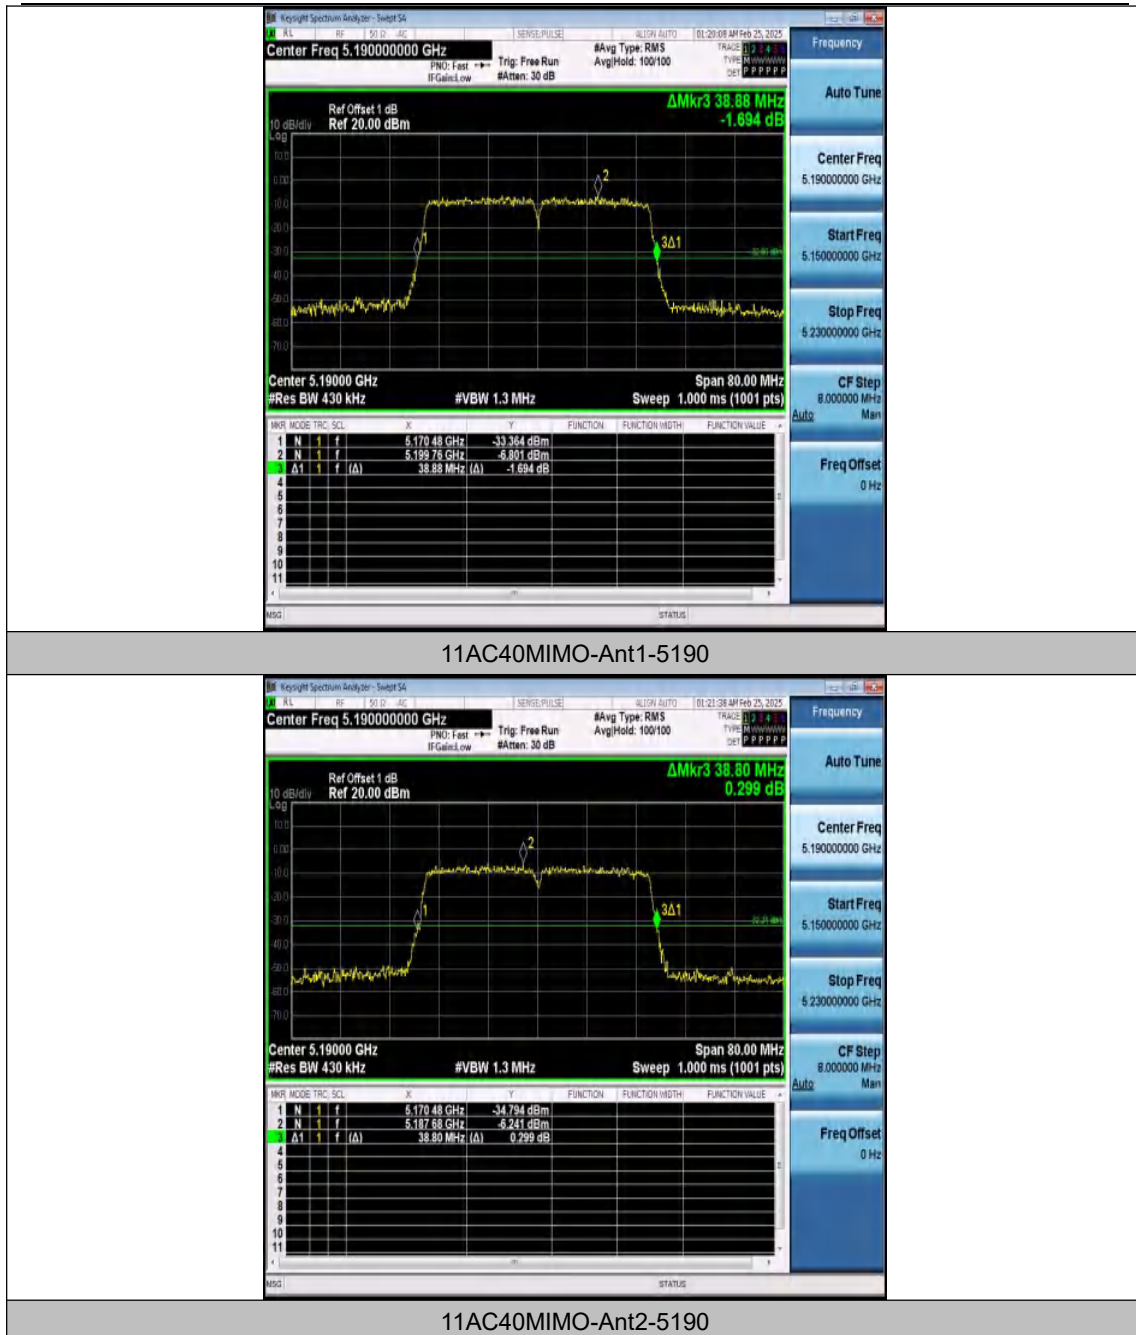


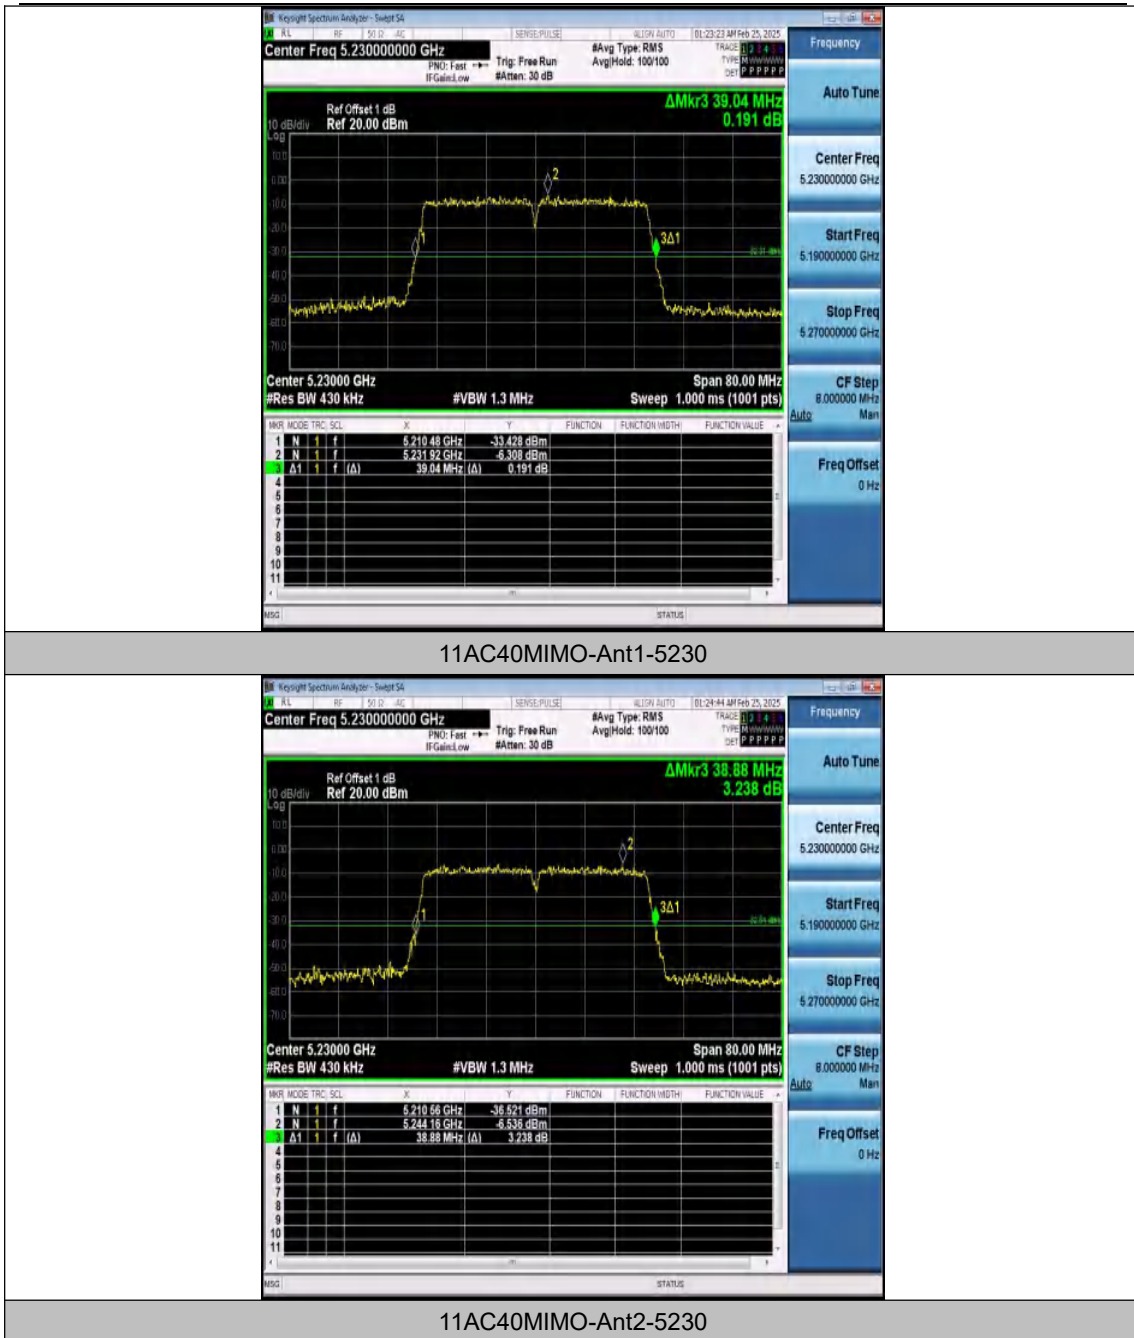


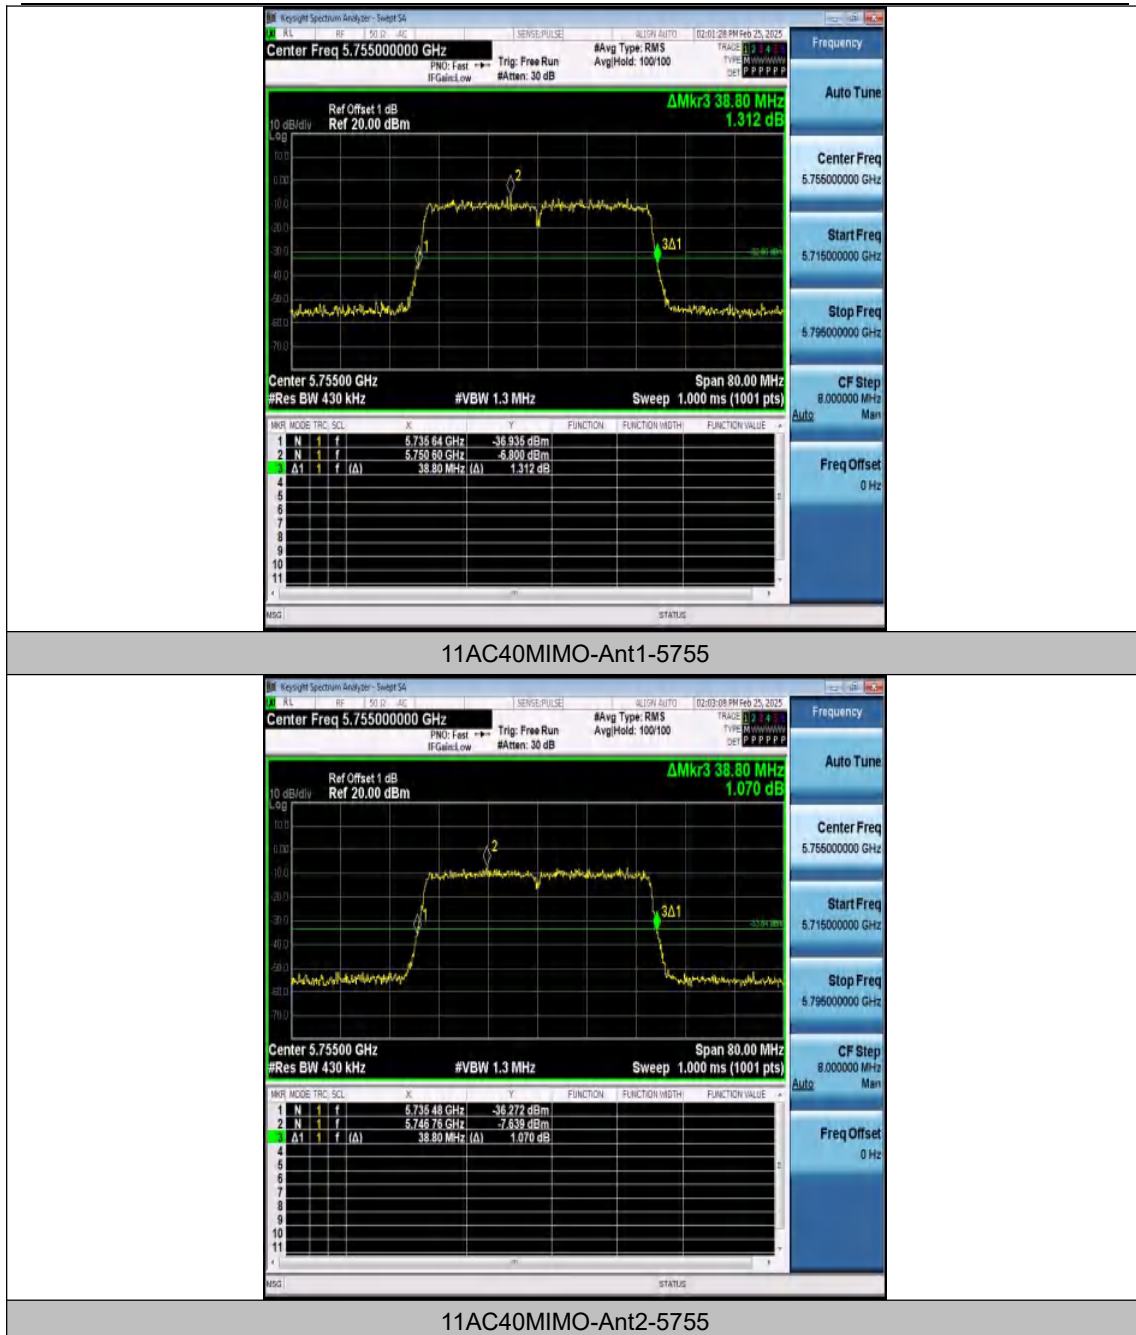


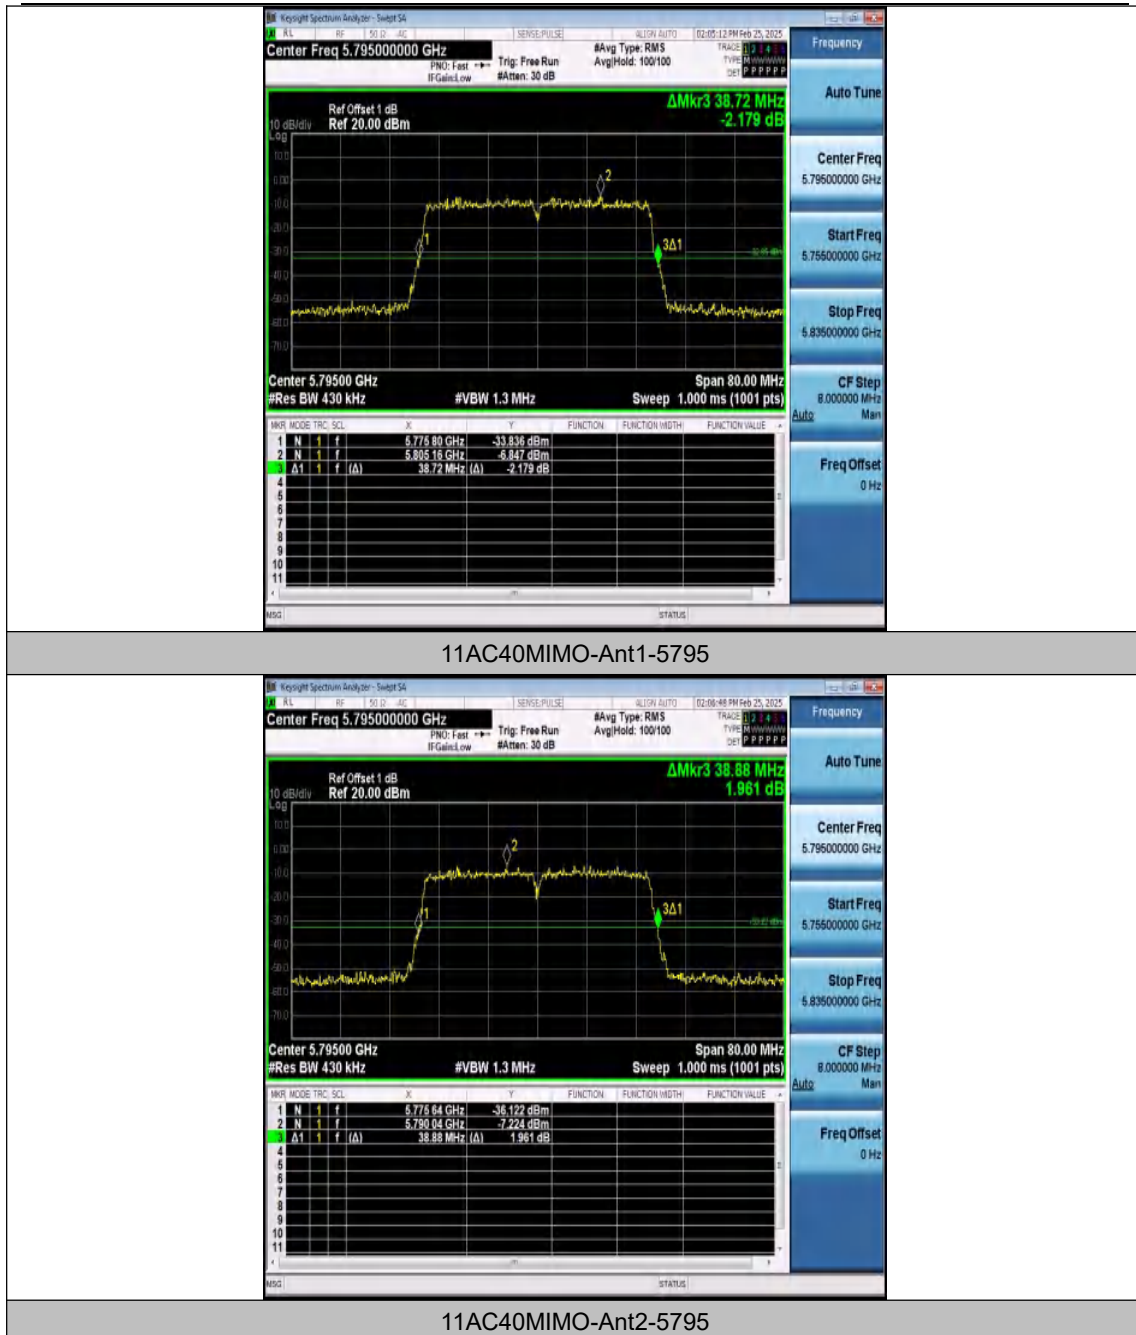


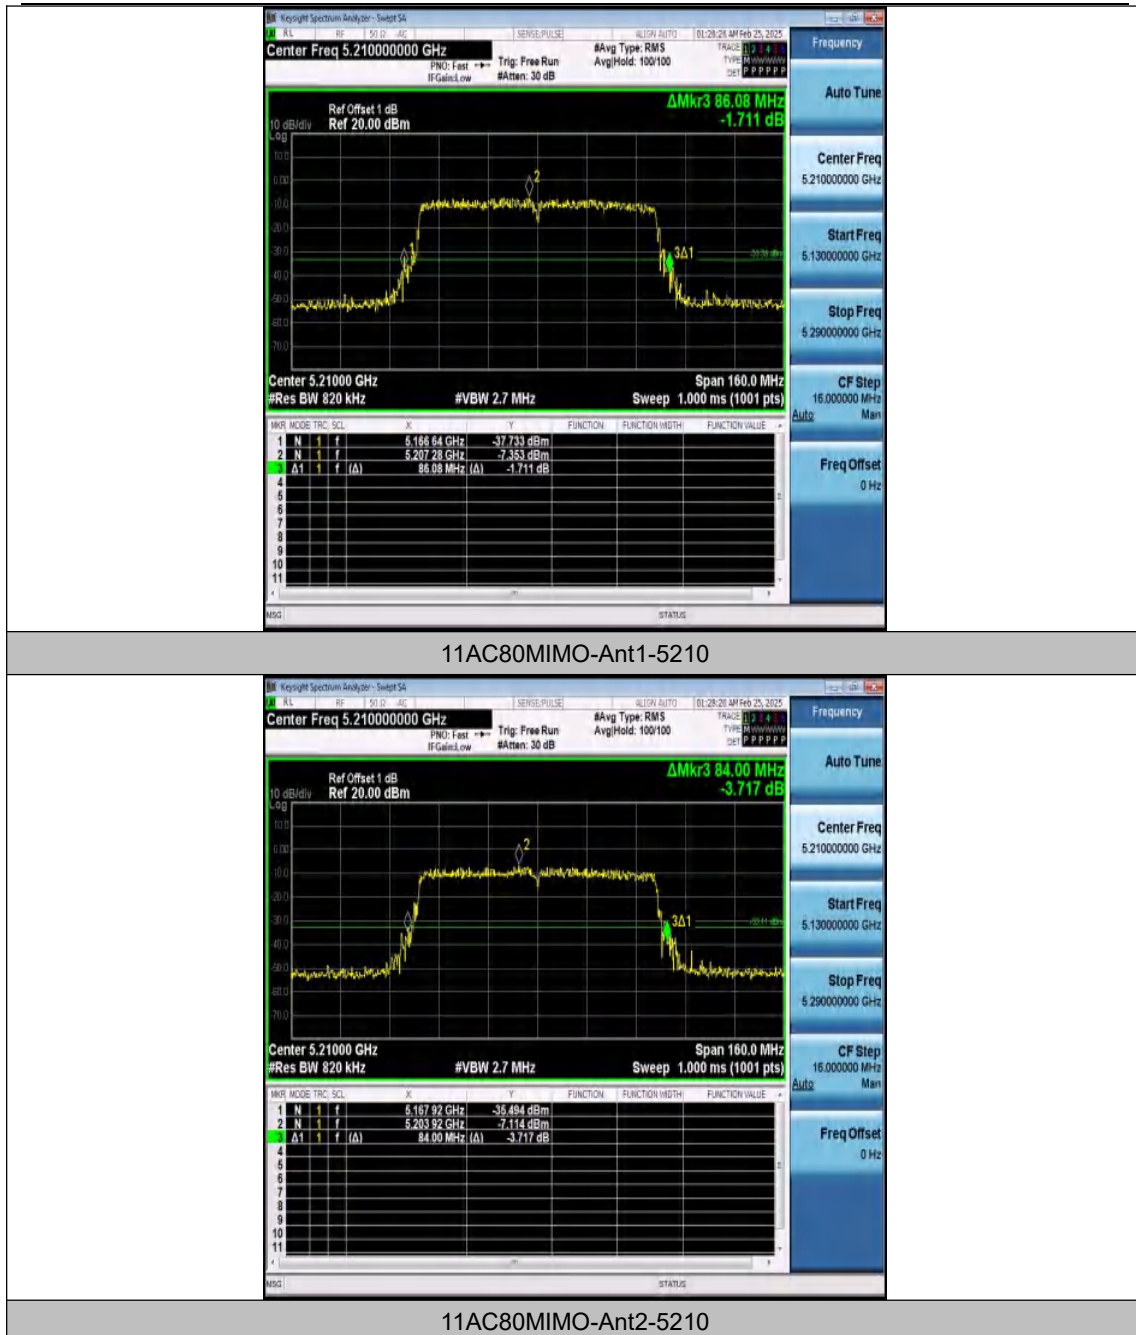


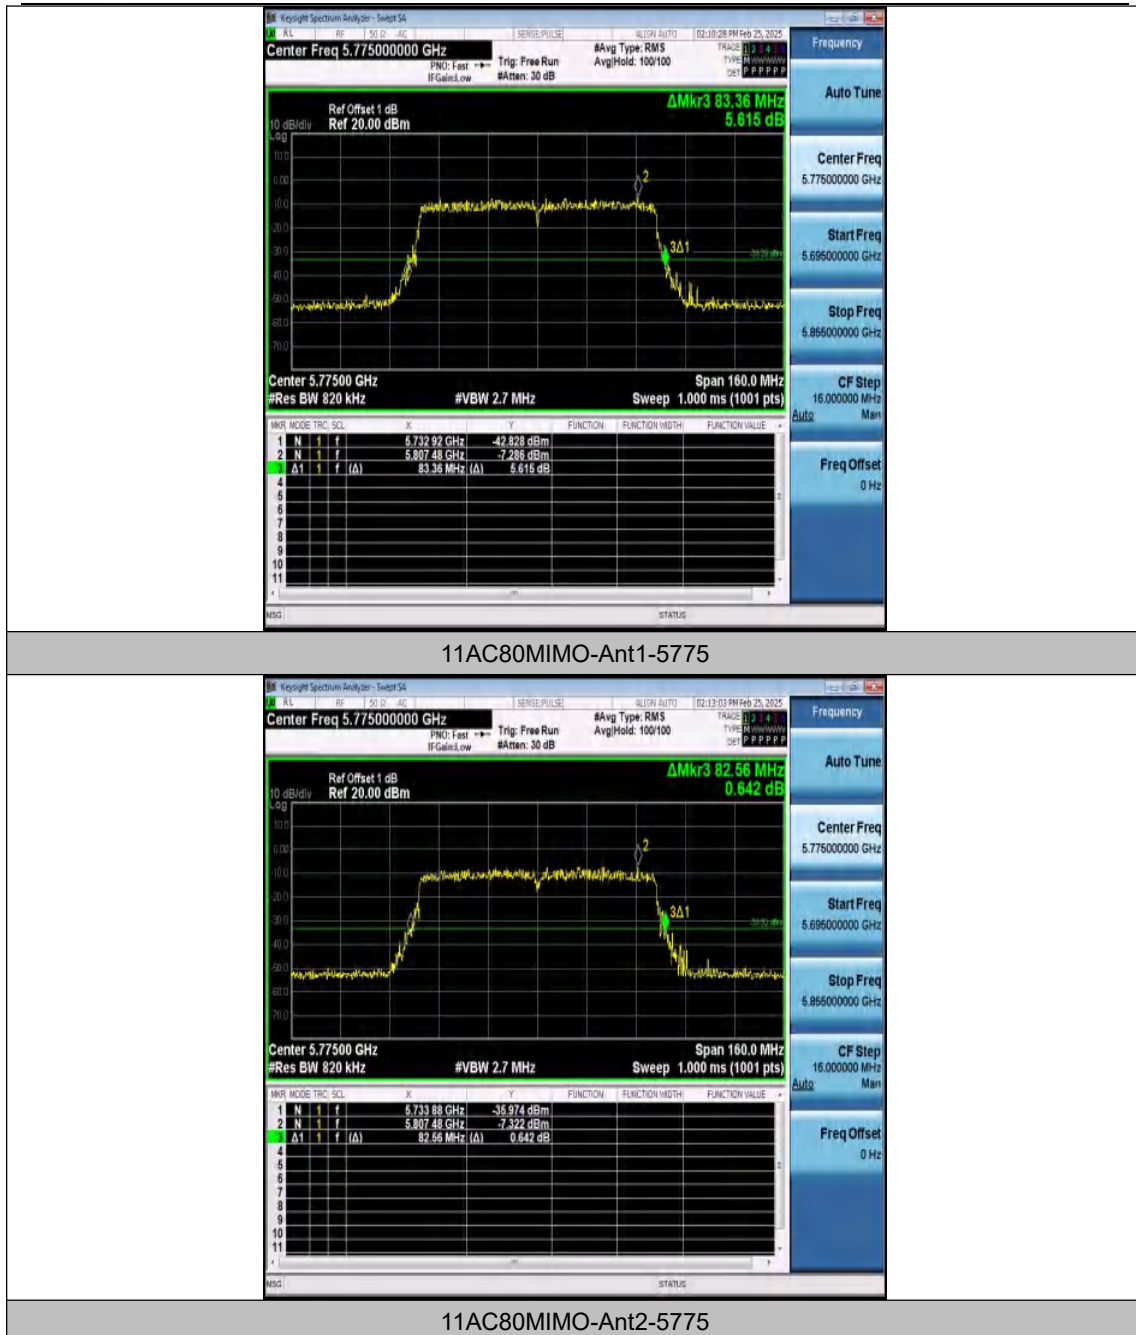


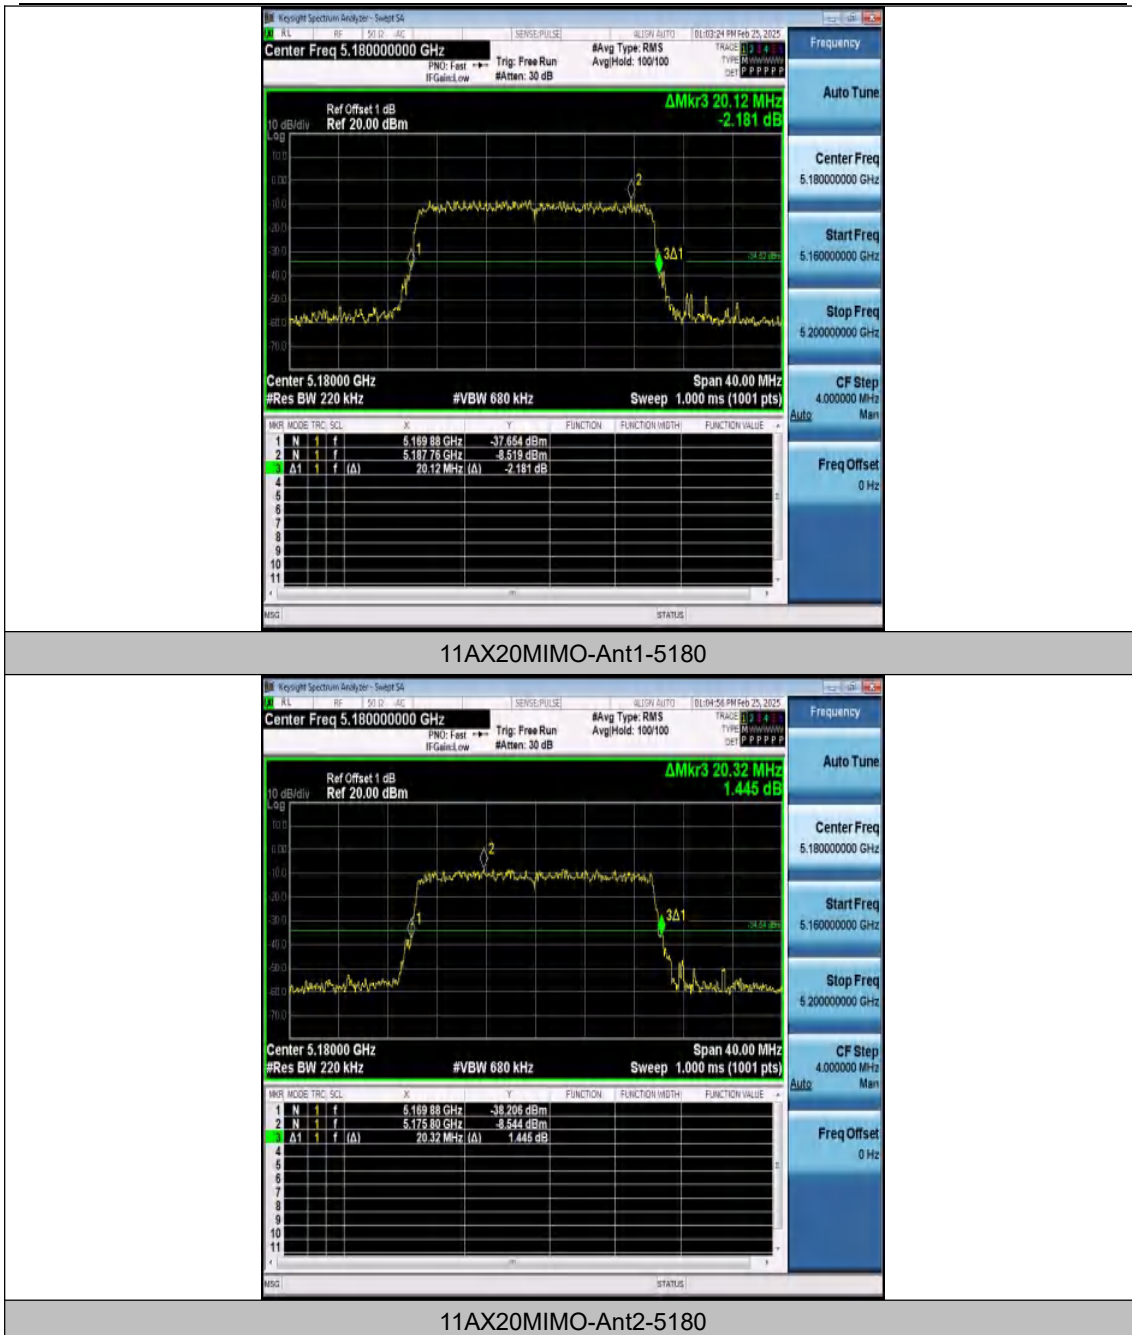


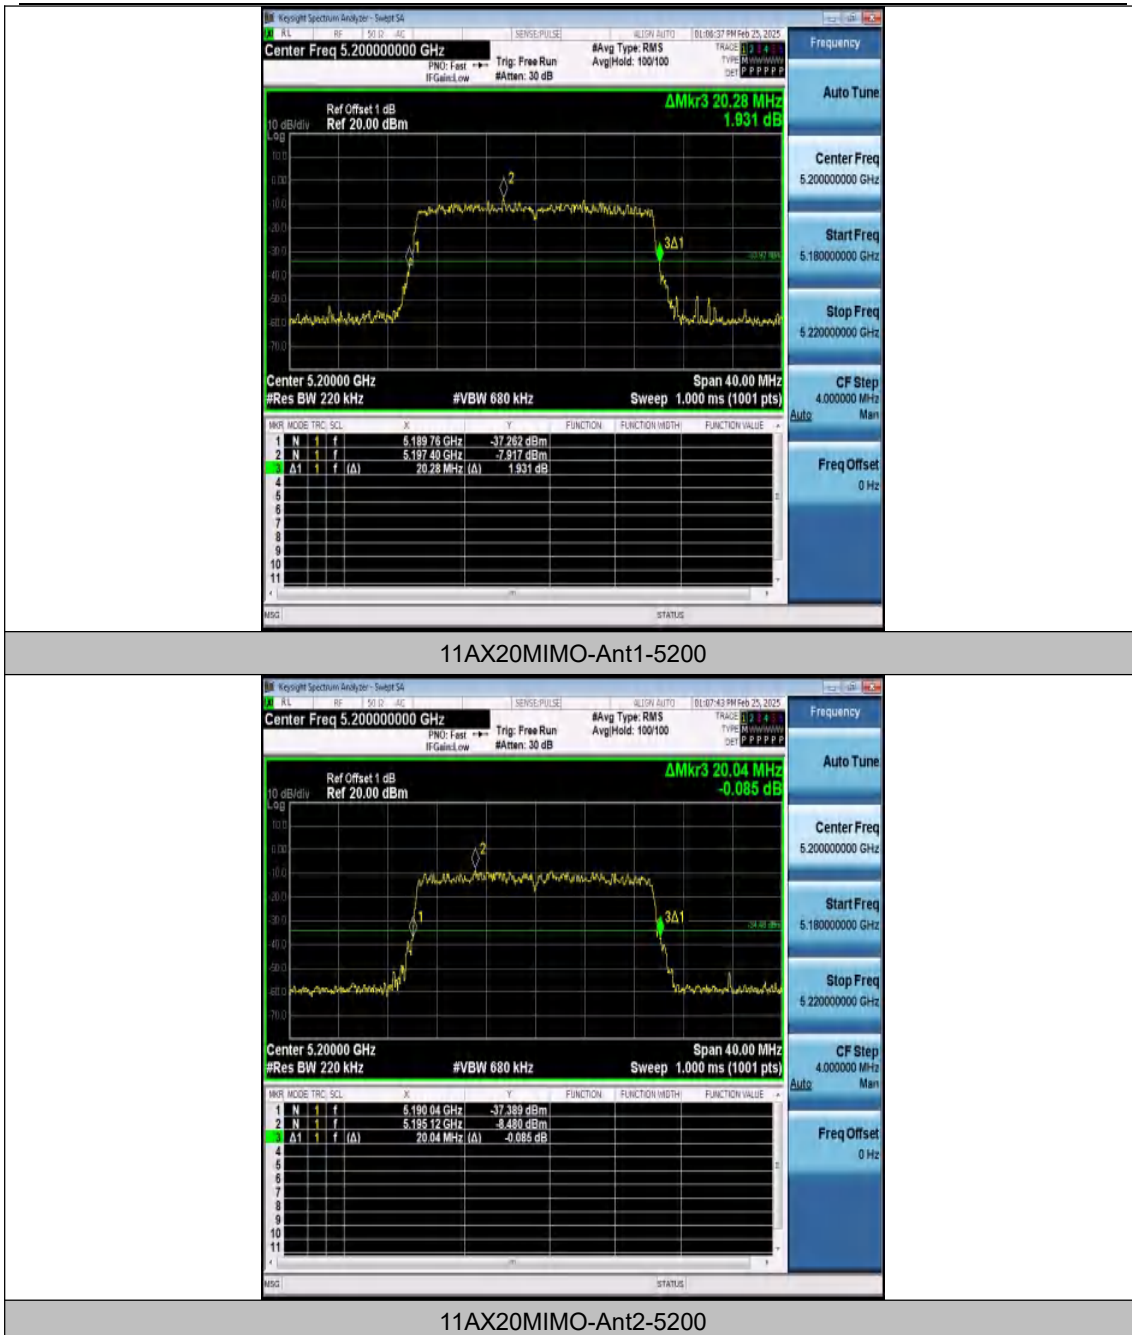


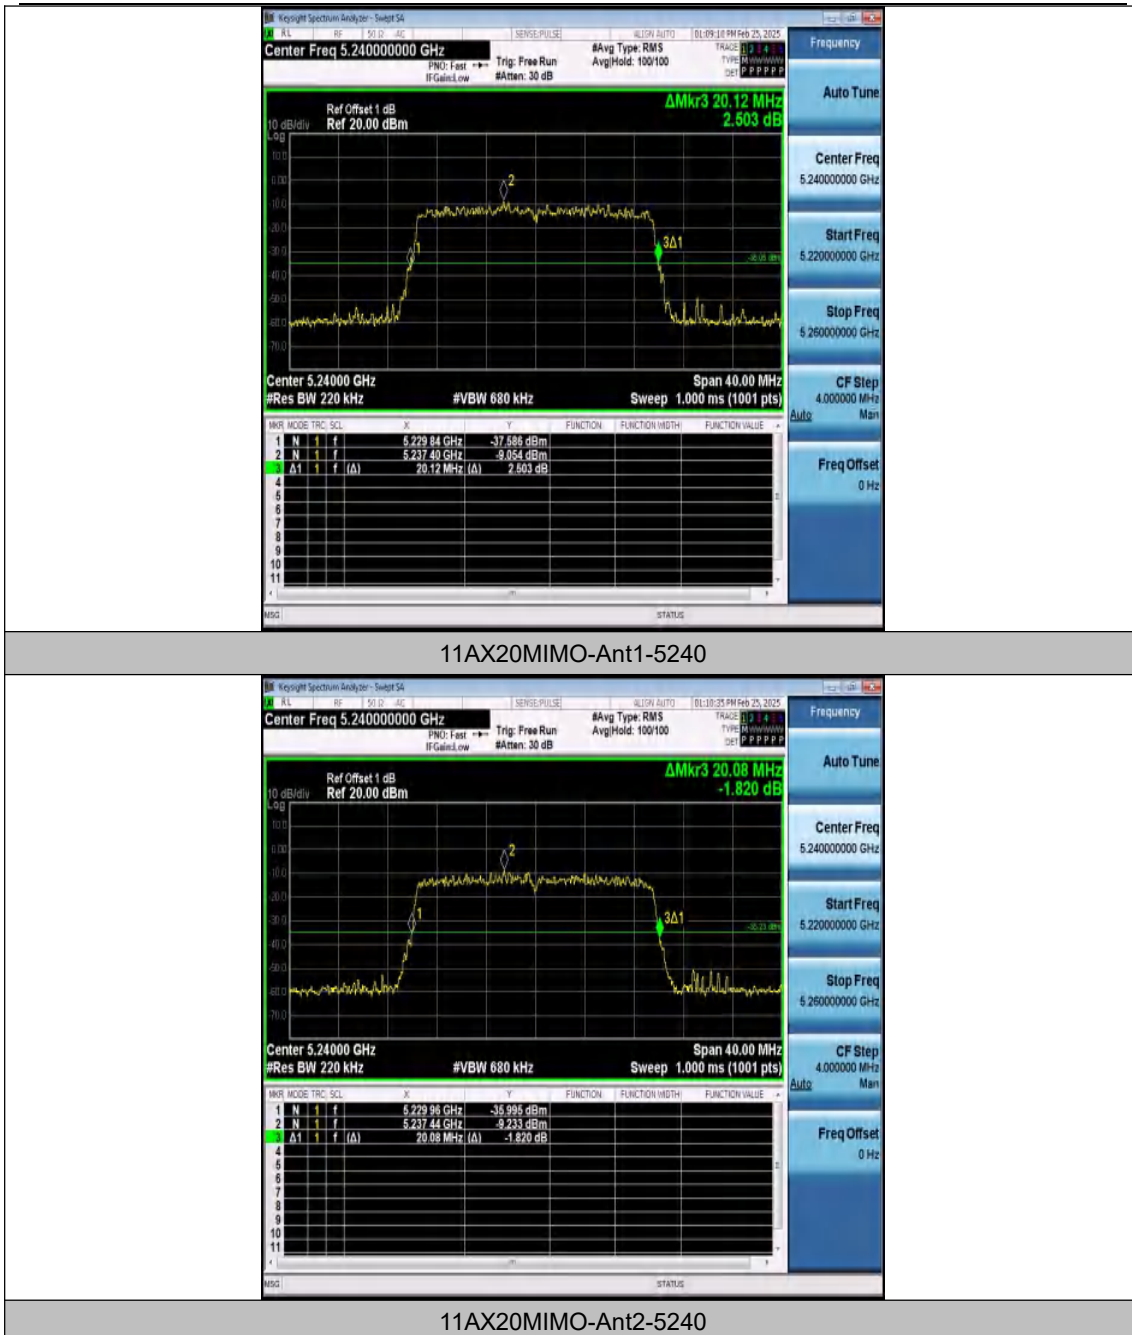


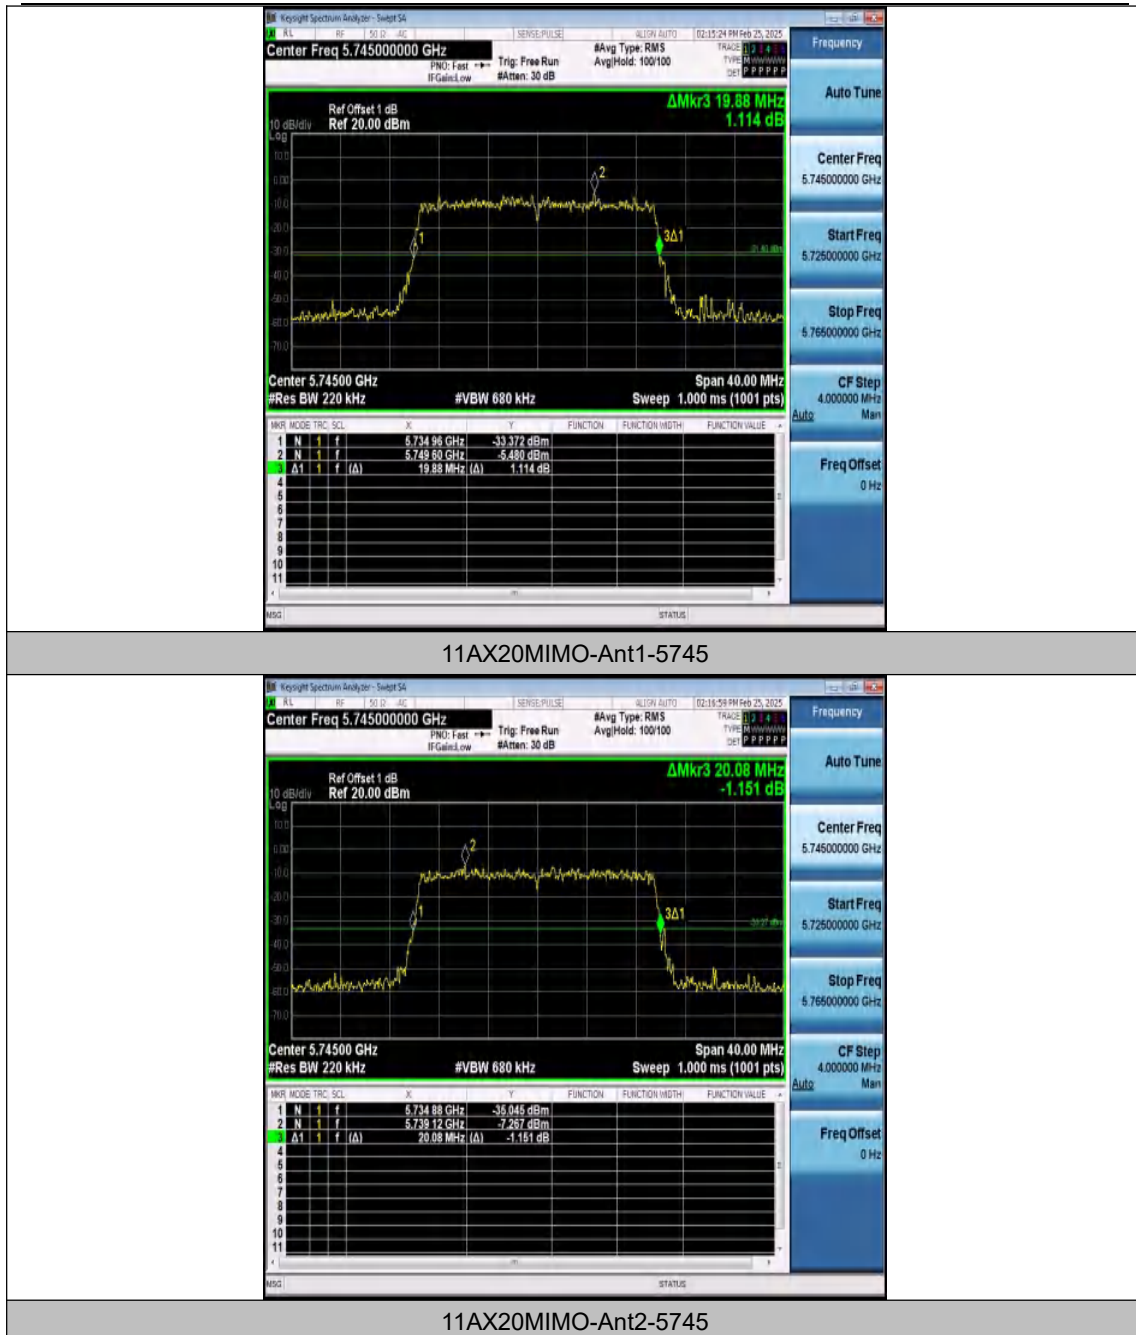


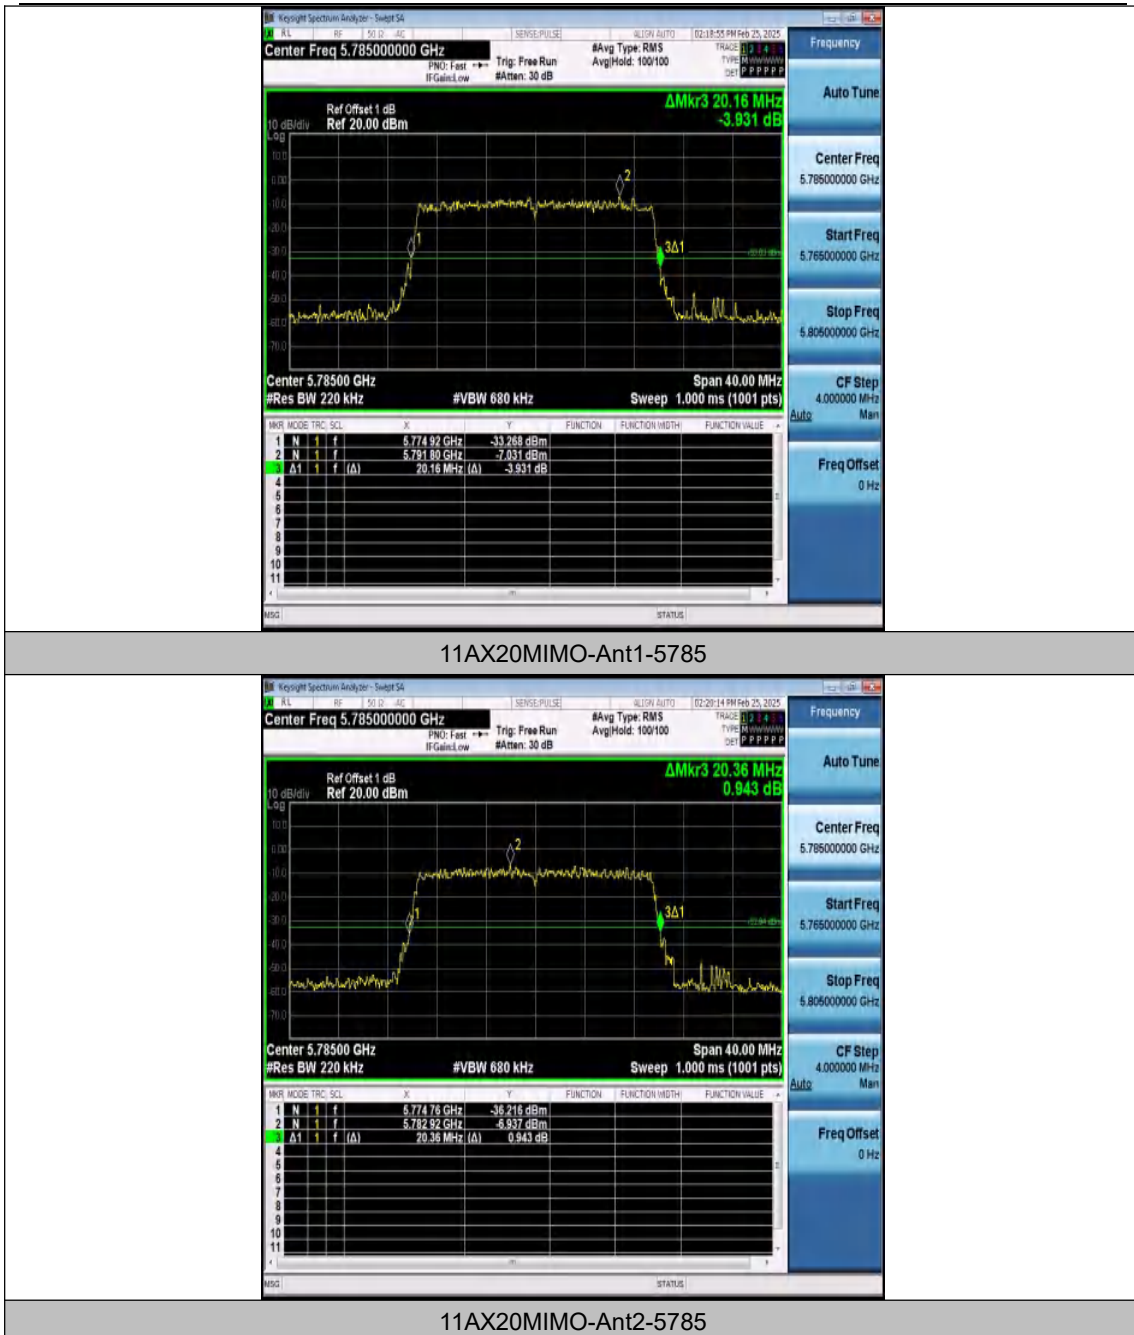


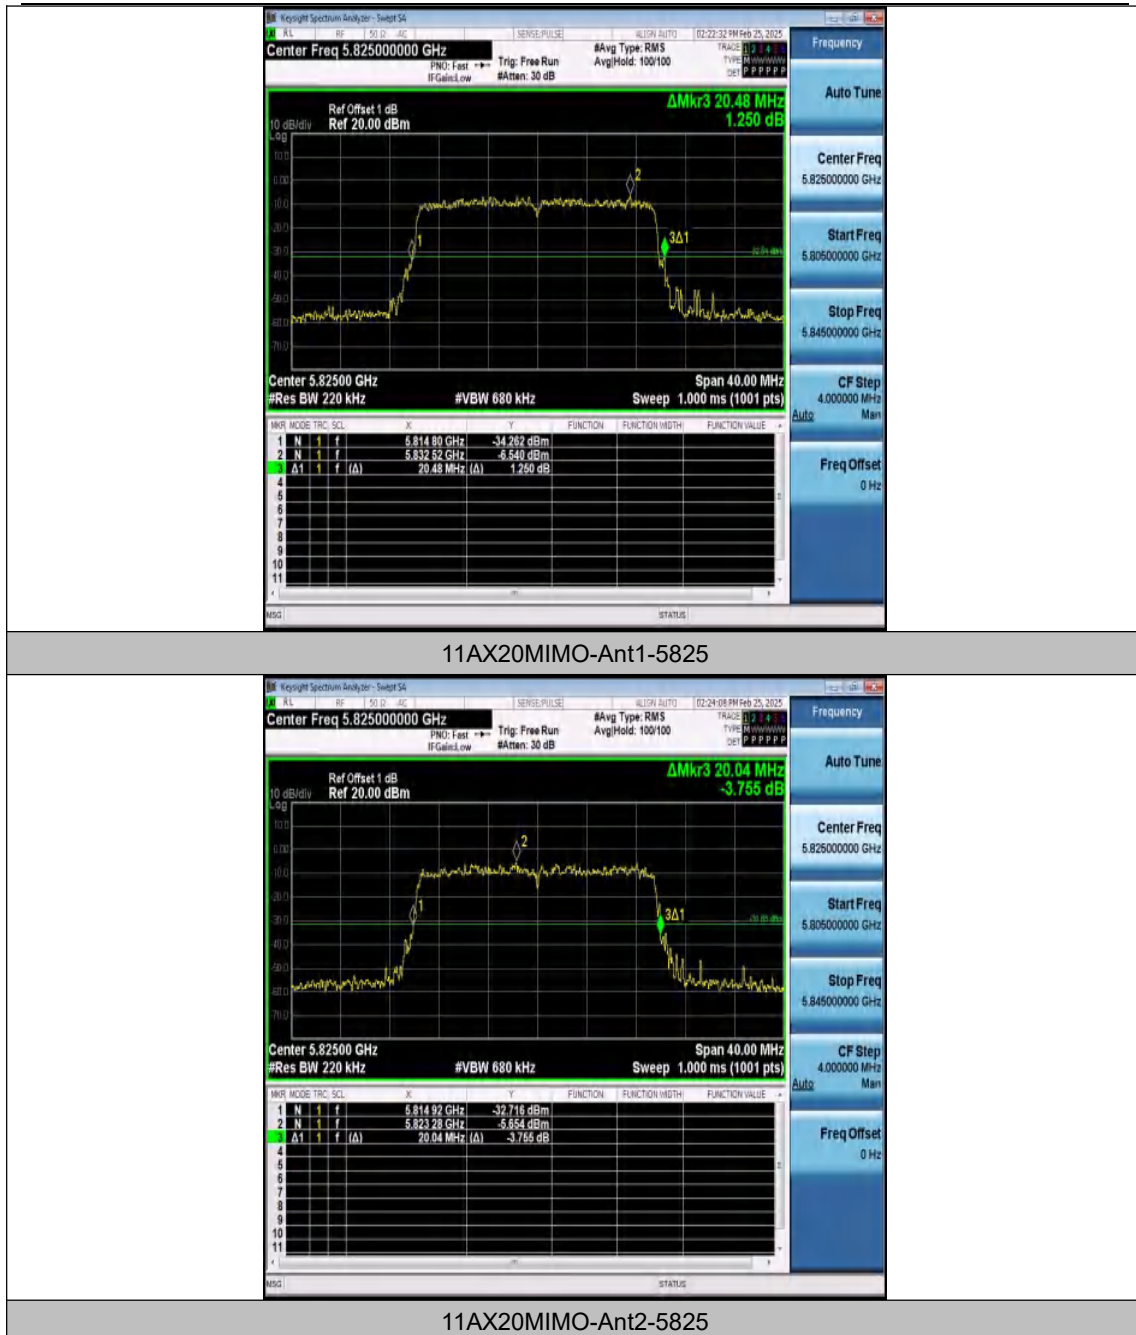


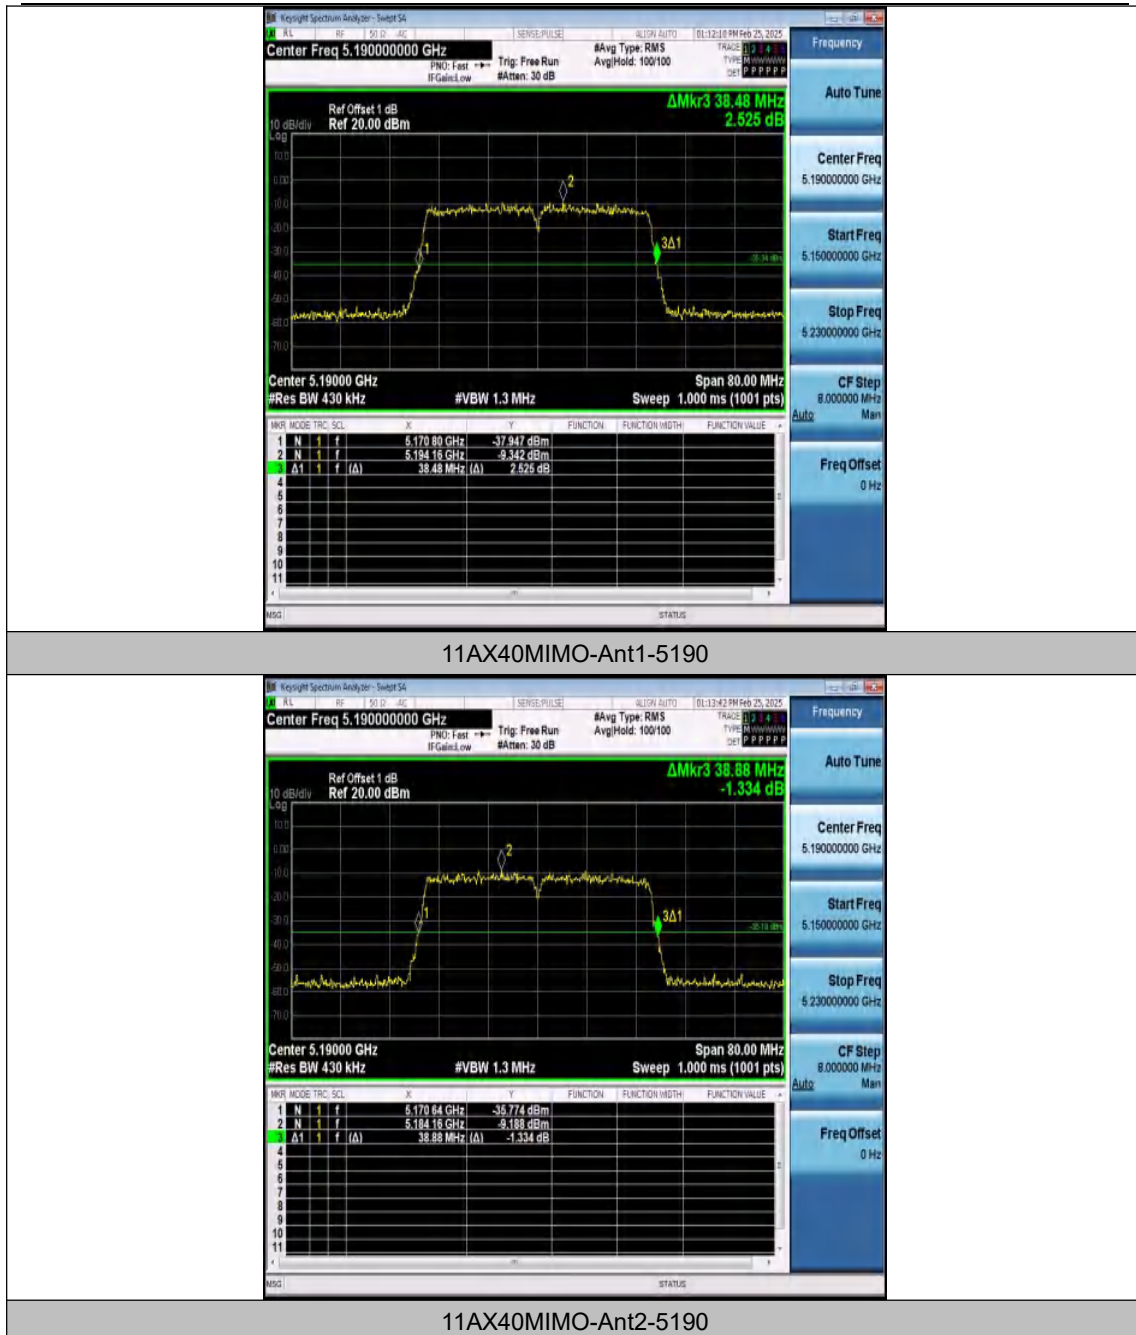


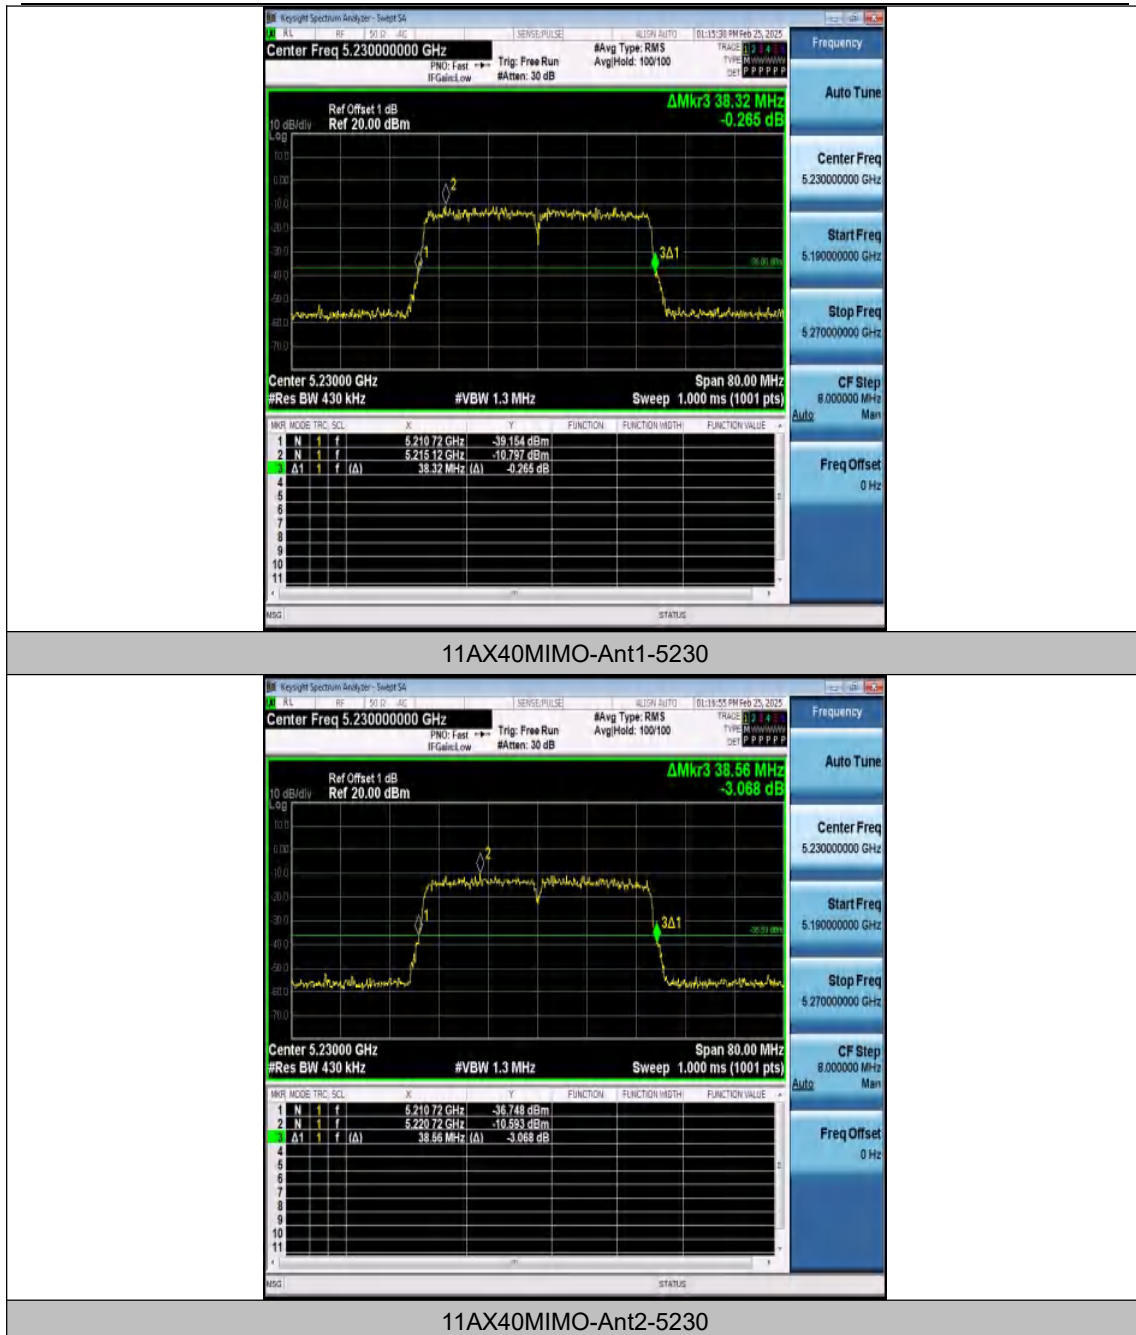

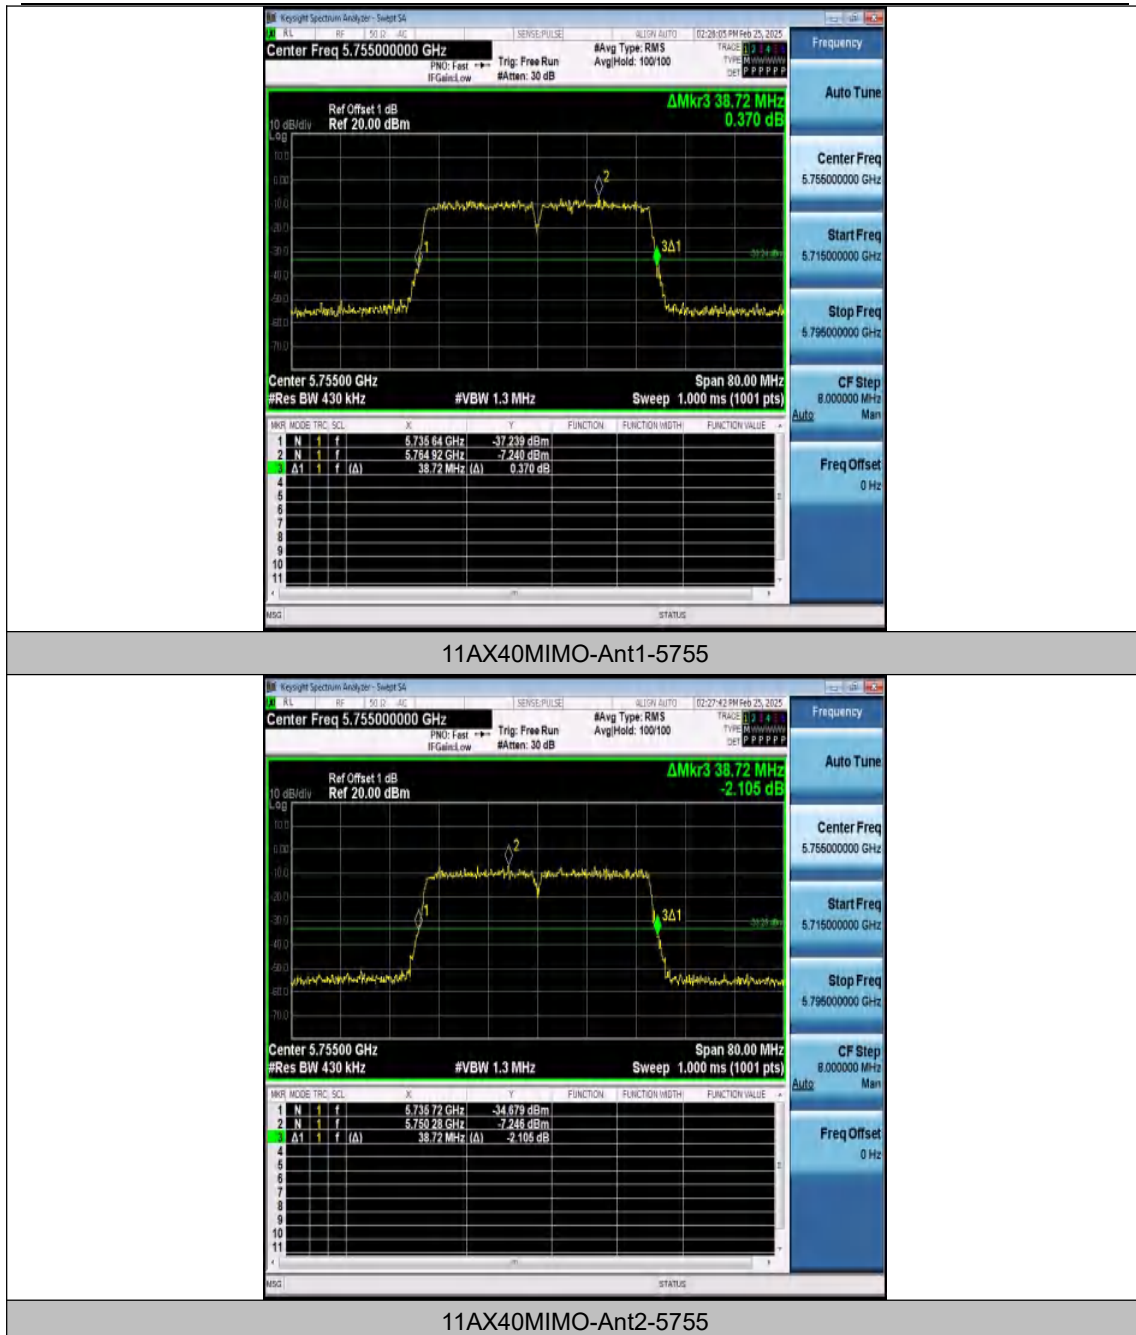

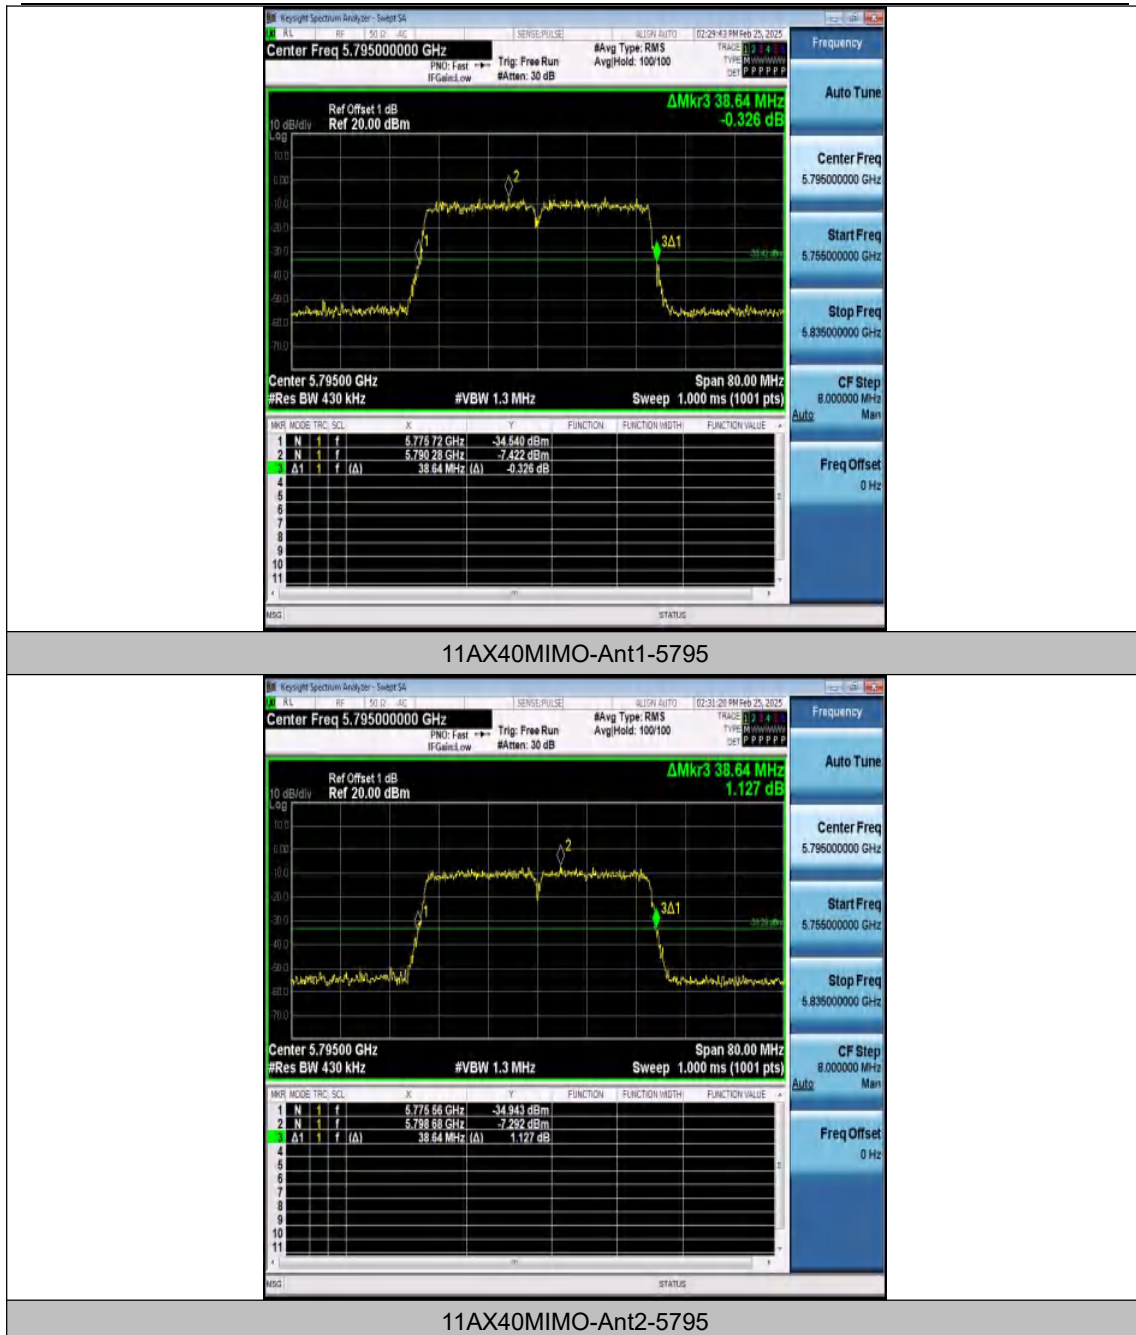

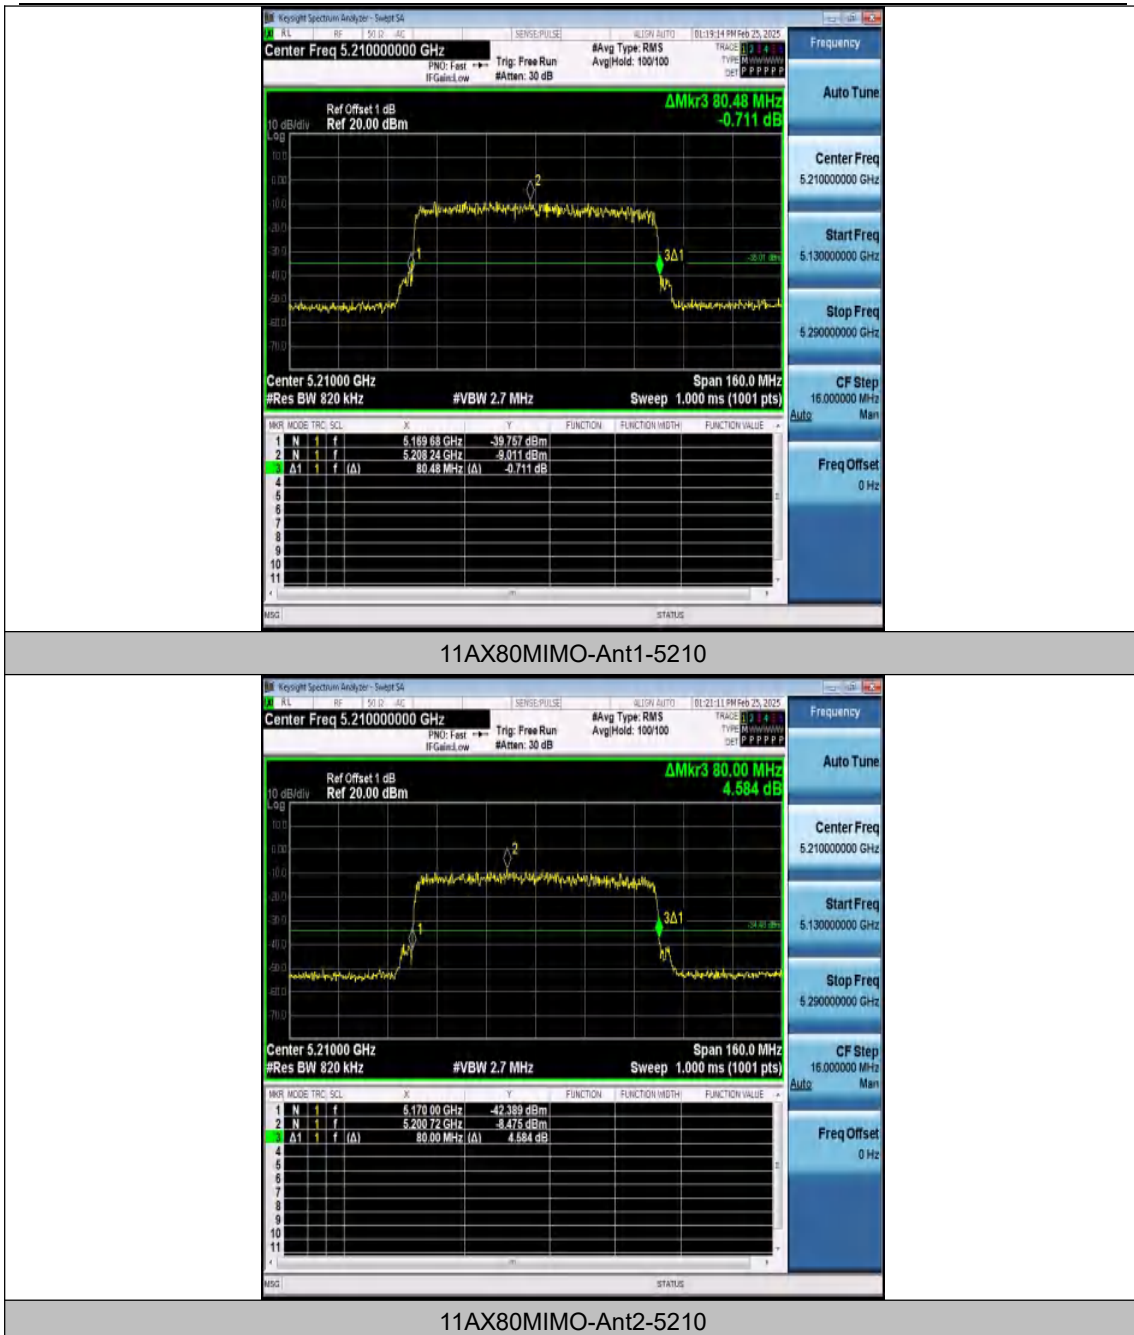

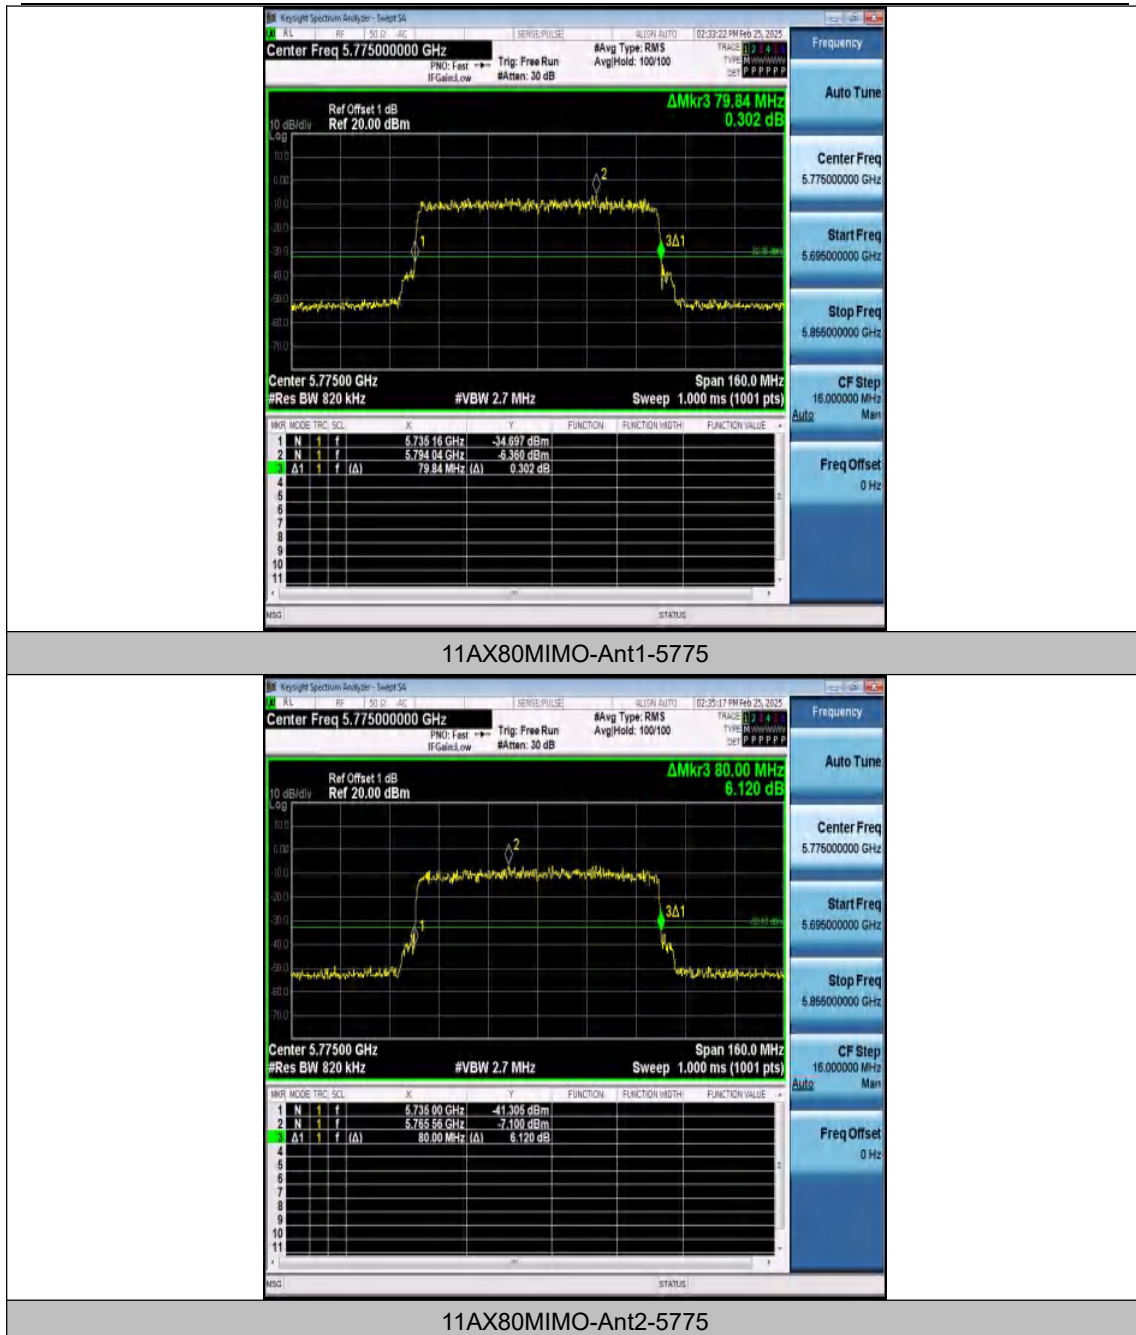

Appendix A2: 99% Occupied Bandwidth Test Result

Test Mode	Antenna	Frequency [MHz]	OCB [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5180	16.476	5171.7283	5188.2043	---	---
11A	Ant2	5180	16.491	5171.7012	5188.1922	---	---
11A	Ant1	5200	16.493	5191.7236	5208.2166	---	---
11A	Ant2	5200	16.480	5191.7237	5208.2037	---	---
11A	Ant1	5240	16.479	5231.7268	5248.2058	---	---
11A	Ant2	5240	16.481	5231.7255	5248.2065	---	---
11A	Ant1	5745	16.503	5736.7115	5753.2145	---	---
11A	Ant2	5745	16.510	5736.7159	5753.2259	---	---
11A	Ant1	5785	16.480	5776.7304	5793.2104	---	---
11A	Ant2	5785	16.512	5776.7147	5793.2267	---	---
11A	Ant1	5825	16.507	5816.7169	5833.2239	---	---
11A	Ant2	5825	16.496	5816.7271	5833.2231	---	---
11N20MIMO	Ant1	5180	17.588	5171.1531	5188.7411	---	---
11N20MIMO	Ant2	5180	17.608	5171.1313	5188.7393	---	---
11N20MIMO	Ant1	5200	17.610	5191.1234	5208.7334	---	---
11N20MIMO	Ant2	5200	17.595	5191.1398	5208.7348	---	---
11N20MIMO	Ant1	5240	17.610	5231.1359	5248.7459	---	---
11N20MIMO	Ant2	5240	17.612	5231.1379	5248.7499	---	---
11N20MIMO	Ant1	5745	17.595	5736.1540	5753.7490	---	---
11N20MIMO	Ant2	5745	17.606	5736.1491	5753.7551	---	---
11N20MIMO	Ant1	5785	17.602	5776.1565	5793.7585	---	---
11N20MIMO	Ant2	5785	17.596	5776.1430	5793.7390	---	---
11N20MIMO	Ant1	5825	17.603	5816.1590	5833.7620	---	---
11N20MIMO	Ant2	5825	17.596	5816.1602	5833.7562	---	---
11N40MIMO	Ant1	5190	36.107	5171.9341	5208.0411	---	---
11N40MIMO	Ant2	5190	36.059	5171.9421	5208.0011	---	---
11N40MIMO	Ant1	5230	36.069	5211.9391	5248.0081	---	---
11N40MIMO	Ant2	5230	36.063	5211.9576	5248.0206	---	---
11N40MIMO	Ant1	5755	36.126	5736.9246	5773.0506	---	---
11N40MIMO	Ant2	5755	36.082	5736.9953	5773.0773	---	---
11N40MIMO	Ant1	5795	36.054	5776.9975	5813.0515	---	---
11N40MIMO	Ant2	5795	36.089	5777.0059	5813.0949	---	---
11AC20MIMO	Ant1	5180	17.586	5171.1527	5188.7387	---	---
11AC20MIMO	Ant2	5180	17.617	5171.1444	5188.7614	---	---
11AC20MIMO	Ant1	5200	17.588	5191.1572	5208.7452	---	---
11AC20MIMO	Ant2	5200	17.605	5191.1328	5208.7378	---	---
11AC20MIMO	Ant1	5240	17.612	5231.1454	5248.7574	---	---
11AC20MIMO	Ant2	5240	17.625	5231.1398	5248.7648	---	---

Shenzhen Anbotek Compliance Laboratory Limited

11AC20MIMO	Ant1	5745	17.601	5736.1568	5753.7578	---	---
11AC20MIMO	Ant2	5745	17.590	5736.1565	5753.7465	---	---
11AC20MIMO	Ant1	5785	17.578	5776.1624	5793.7404	---	---
11AC20MIMO	Ant2	5785	17.592	5776.1493	5793.7413	---	---
11AC20MIMO	Ant1	5825	17.597	5816.1653	5833.7623	---	---
11AC20MIMO	Ant2	5825	17.585	5816.1672	5833.7522	---	---
11AC40MIMO	Ant1	5190	36.080	5171.9081	5207.9881	---	---
11AC40MIMO	Ant2	5190	36.081	5171.9073	5207.9883	---	---
11AC40MIMO	Ant1	5230	36.100	5211.9133	5248.0133	---	---
11AC40MIMO	Ant2	5230	36.093	5211.9182	5248.0112	---	---
11AC40MIMO	Ant1	5755	36.170	5736.9197	5773.0897	---	---
11AC40MIMO	Ant2	5755	36.115	5736.9620	5773.0770	---	---
11AC40MIMO	Ant1	5795	36.087	5776.9721	5813.0591	---	---
11AC40MIMO	Ant2	5795	36.159	5776.9640	5813.1230	---	---
11AC80MIMO	Ant1	5210	76.104	5171.9184	5248.0224	---	---
11AC80MIMO	Ant2	5210	76.083	5171.9555	5248.0385	---	---
11AC80MIMO	Ant1	5775	76.008	5737.0907	5813.0987	---	---
11AC80MIMO	Ant2	5775	75.757	5737.2620	5813.0190	---	---
11AX20MIMO	Ant1	5180	18.886	5170.5134	5189.3994	---	---
11AX20MIMO	Ant2	5180	18.899	5170.5108	5189.4098	---	---
11AX20MIMO	Ant1	5200	18.917	5190.4937	5209.4107	---	---
11AX20MIMO	Ant2	5200	18.898	5190.5193	5209.4173	---	---
11AX20MIMO	Ant1	5240	18.900	5230.5052	5249.4052	---	---
11AX20MIMO	Ant2	5240	18.905	5230.5088	5249.4138	---	---
11AX20MIMO	Ant1	5745	18.964	5735.4553	5754.4193	---	---
11AX20MIMO	Ant2	5745	18.967	5735.4594	5754.4264	---	---
11AX20MIMO	Ant1	5785	18.939	5775.4546	5794.3936	---	---
11AX20MIMO	Ant2	5785	19.001	5775.4526	5794.4536	---	---
11AX20MIMO	Ant1	5825	18.963	5815.4558	5834.4188	---	---
11AX20MIMO	Ant2	5825	18.981	5815.4608	5834.4418	---	---
11AX40MIMO	Ant1	5190	36.073	5171.9283	5208.0013	---	---
11AX40MIMO	Ant2	5190	36.097	5171.9077	5208.0047	---	---
11AX40MIMO	Ant1	5230	36.061	5211.9260	5247.9870	---	---
11AX40MIMO	Ant2	5230	36.096	5211.8919	5247.9879	---	---
11AX40MIMO	Ant1	5755	36.065	5736.9907	5773.0557	---	---
11AX40MIMO	Ant2	5755	36.087	5736.9850	5773.0720	---	---
11AX40MIMO	Ant1	5795	36.042	5776.9987	5813.0407	---	---
11AX40MIMO	Ant2	5795	36.024	5777.0251	5813.0491	---	---
11AX80MIMO	Ant1	5210	76.867	5171.5853	5248.4523	---	---
11AX80MIMO	Ant2	5210	76.699	5171.6860	5248.3850	---	---
11AX80MIMO	Ant1	5775	77.005	5736.7164	5813.7214	---	---
11AX80MIMO	Ant2	5775	77.025	5736.5886	5813.6136	---	---


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com



Hotline
400-003-0500
www.anbotek.com


Test Graphs

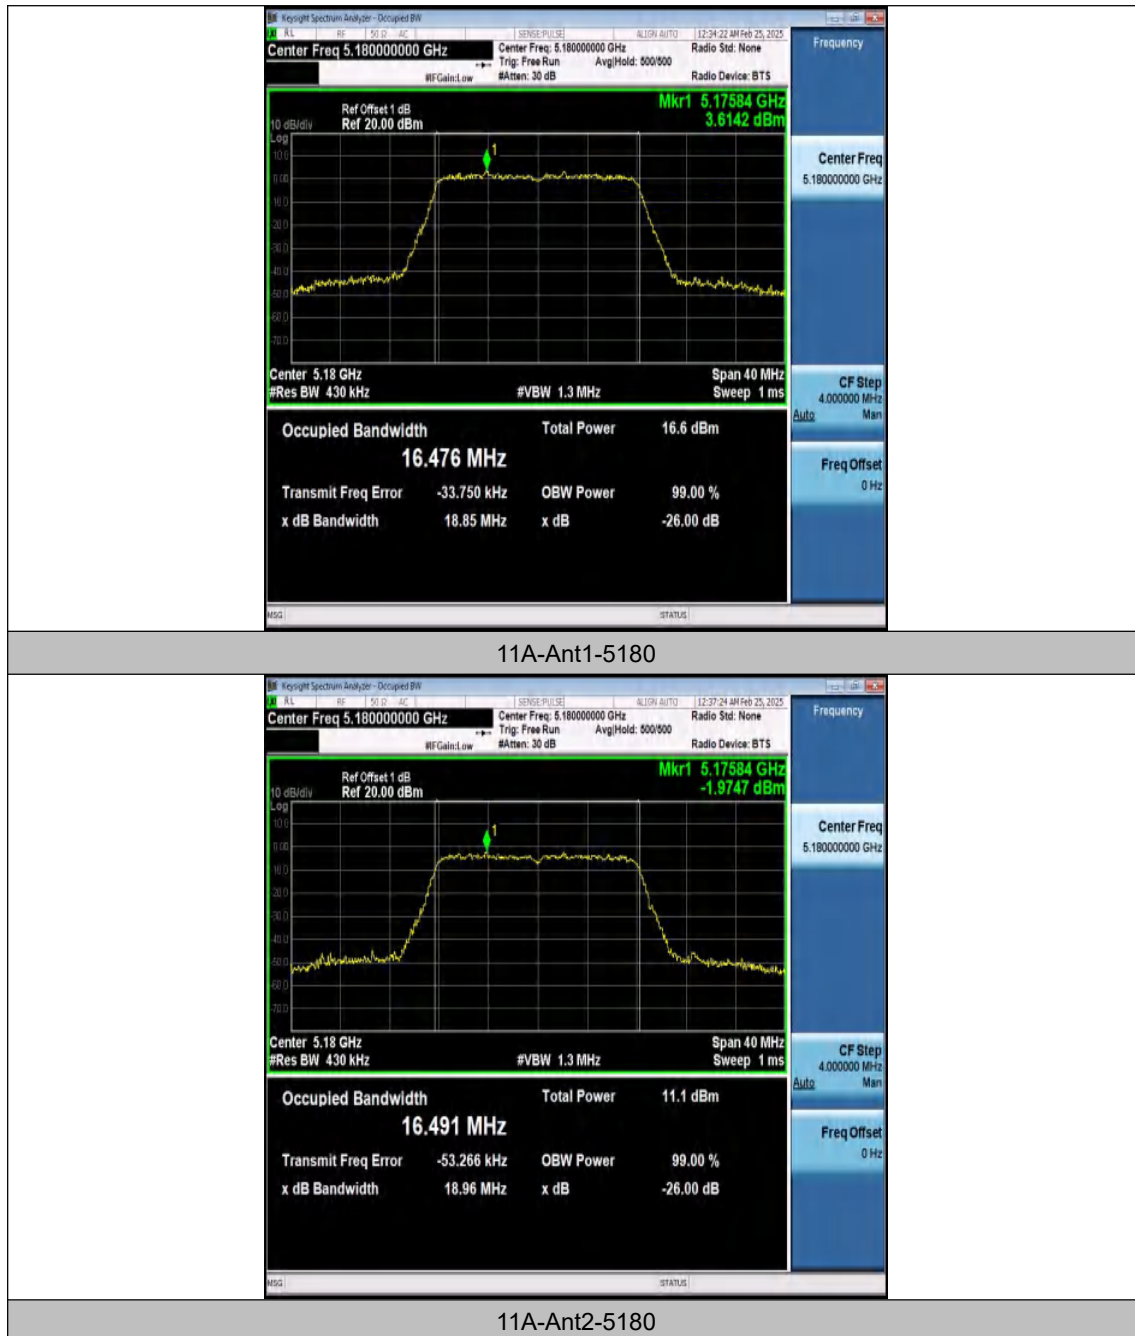

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

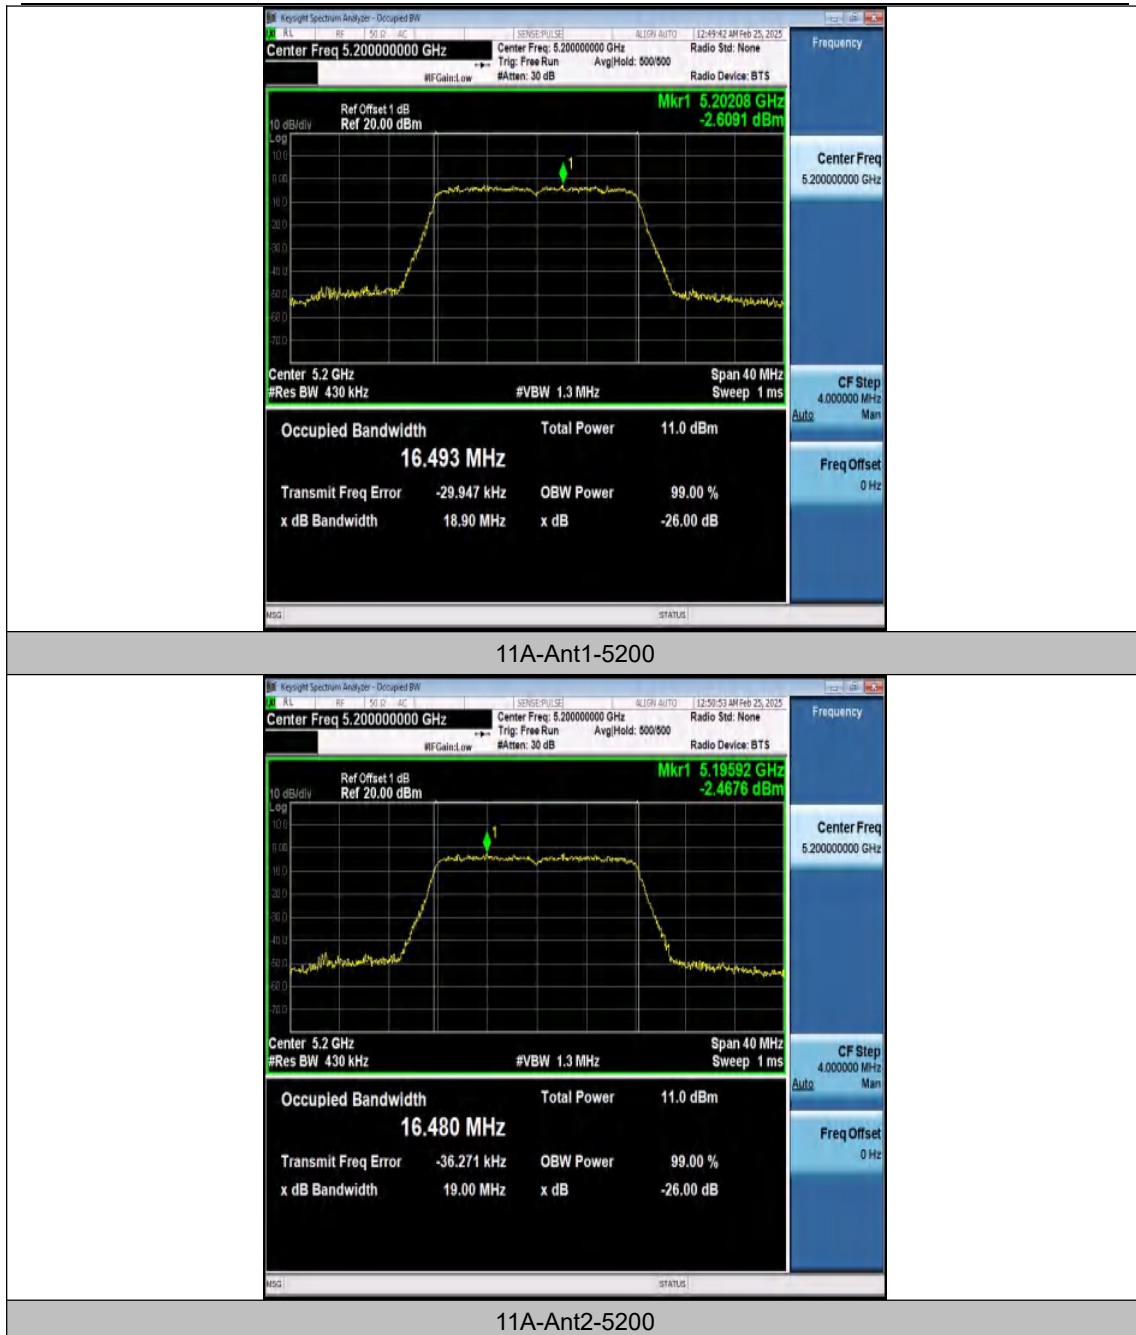



Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com



Hotline
400-003-0500
www.anbotech.com

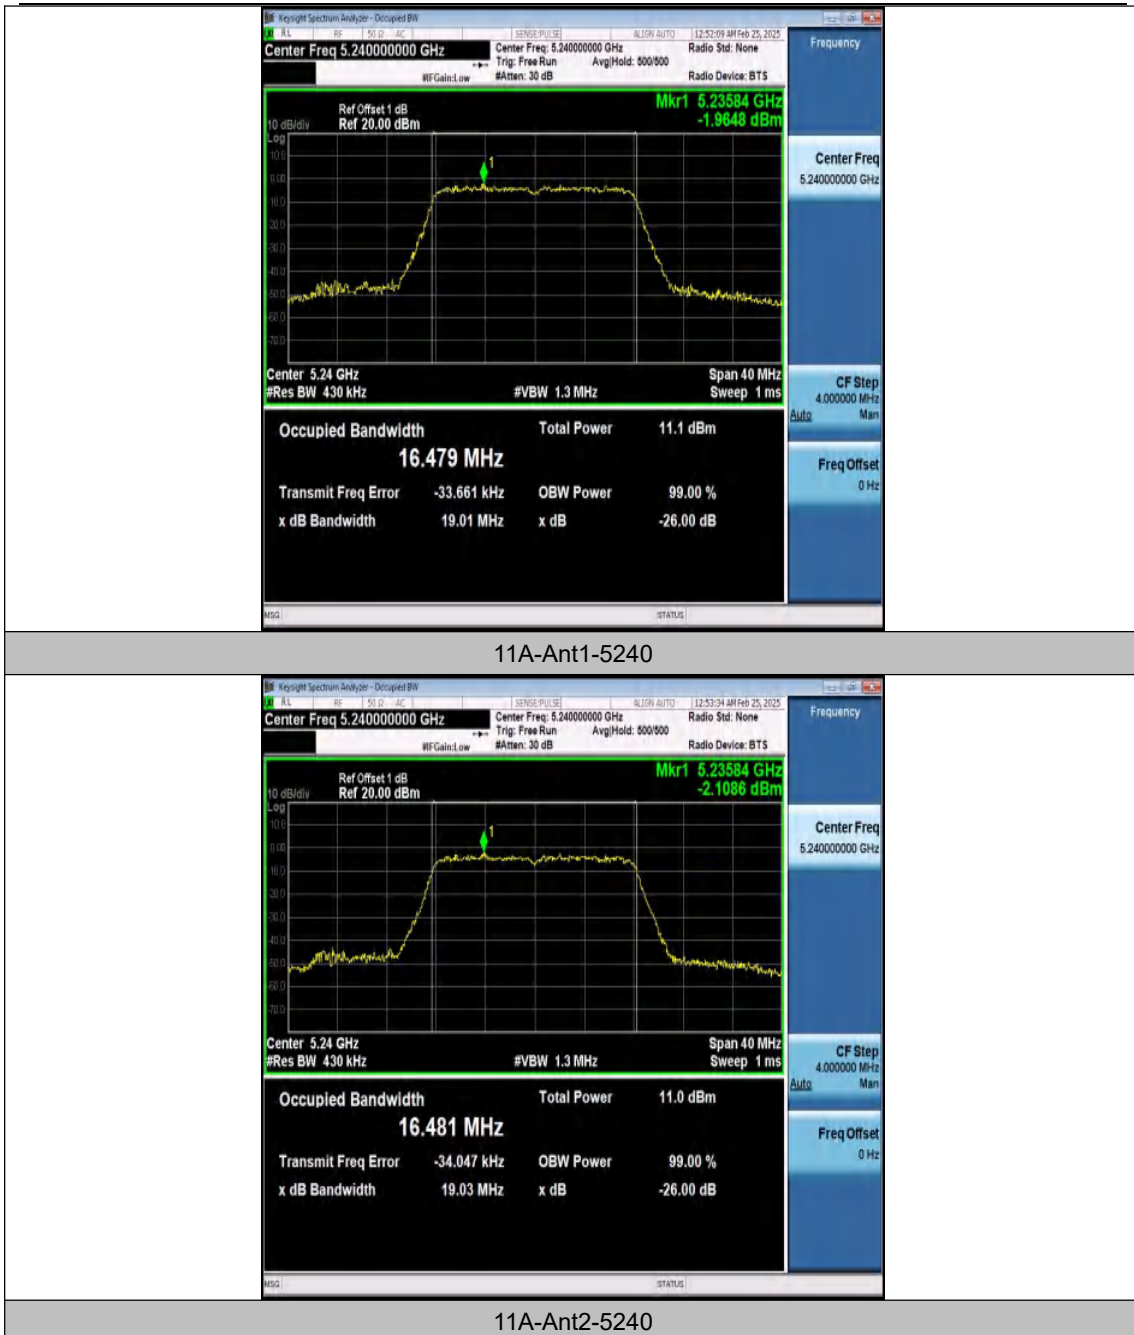

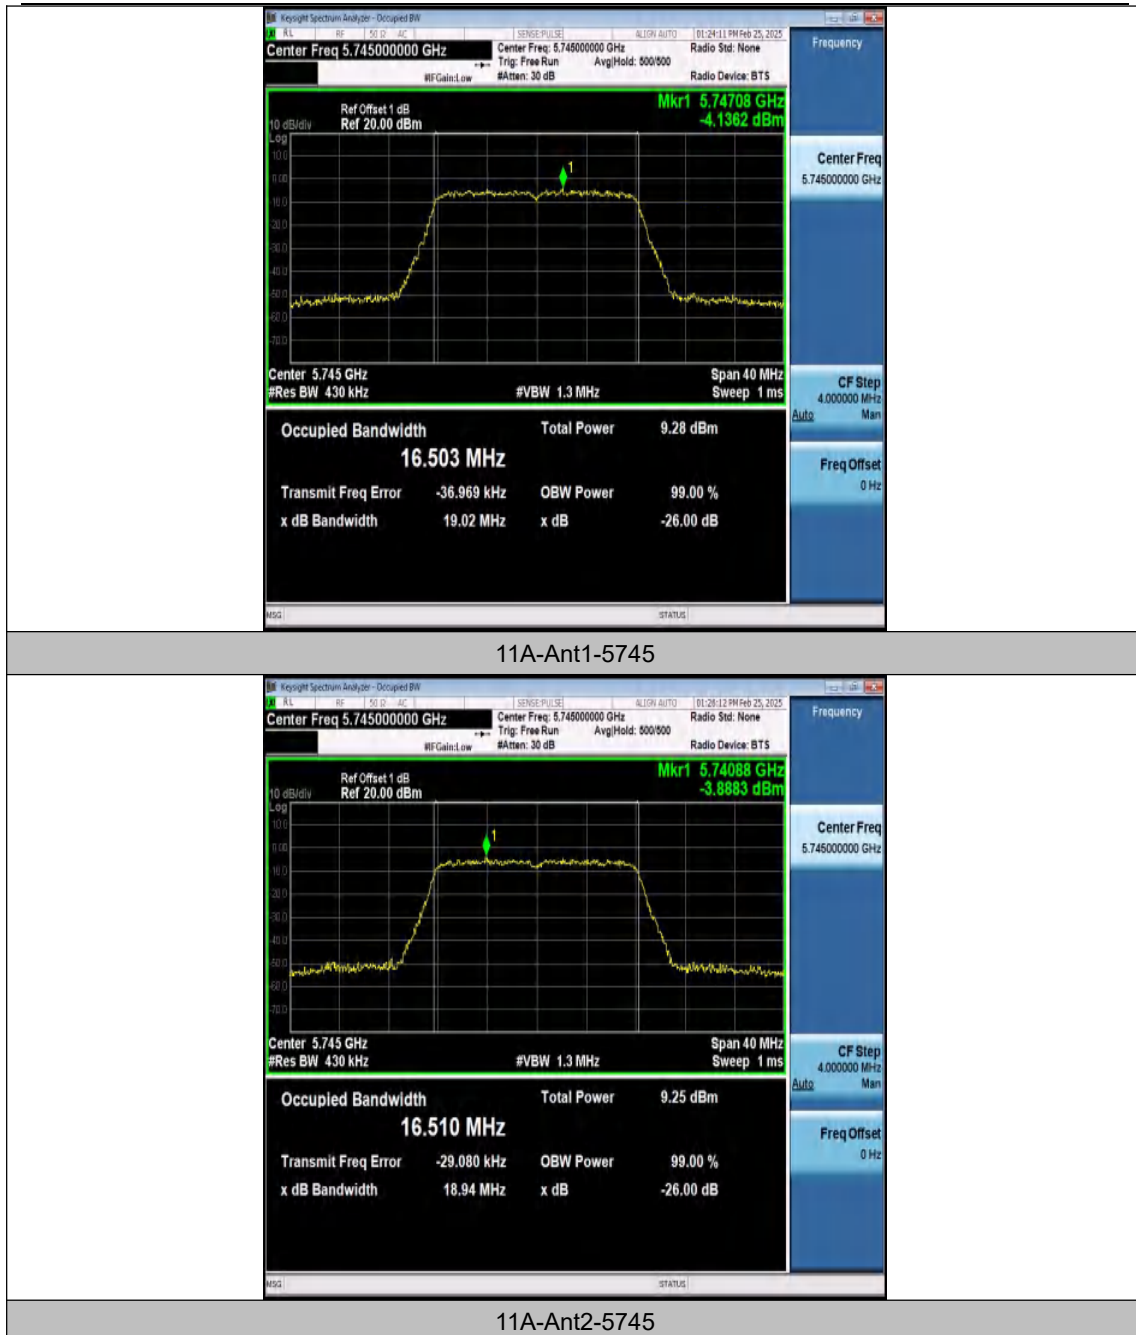


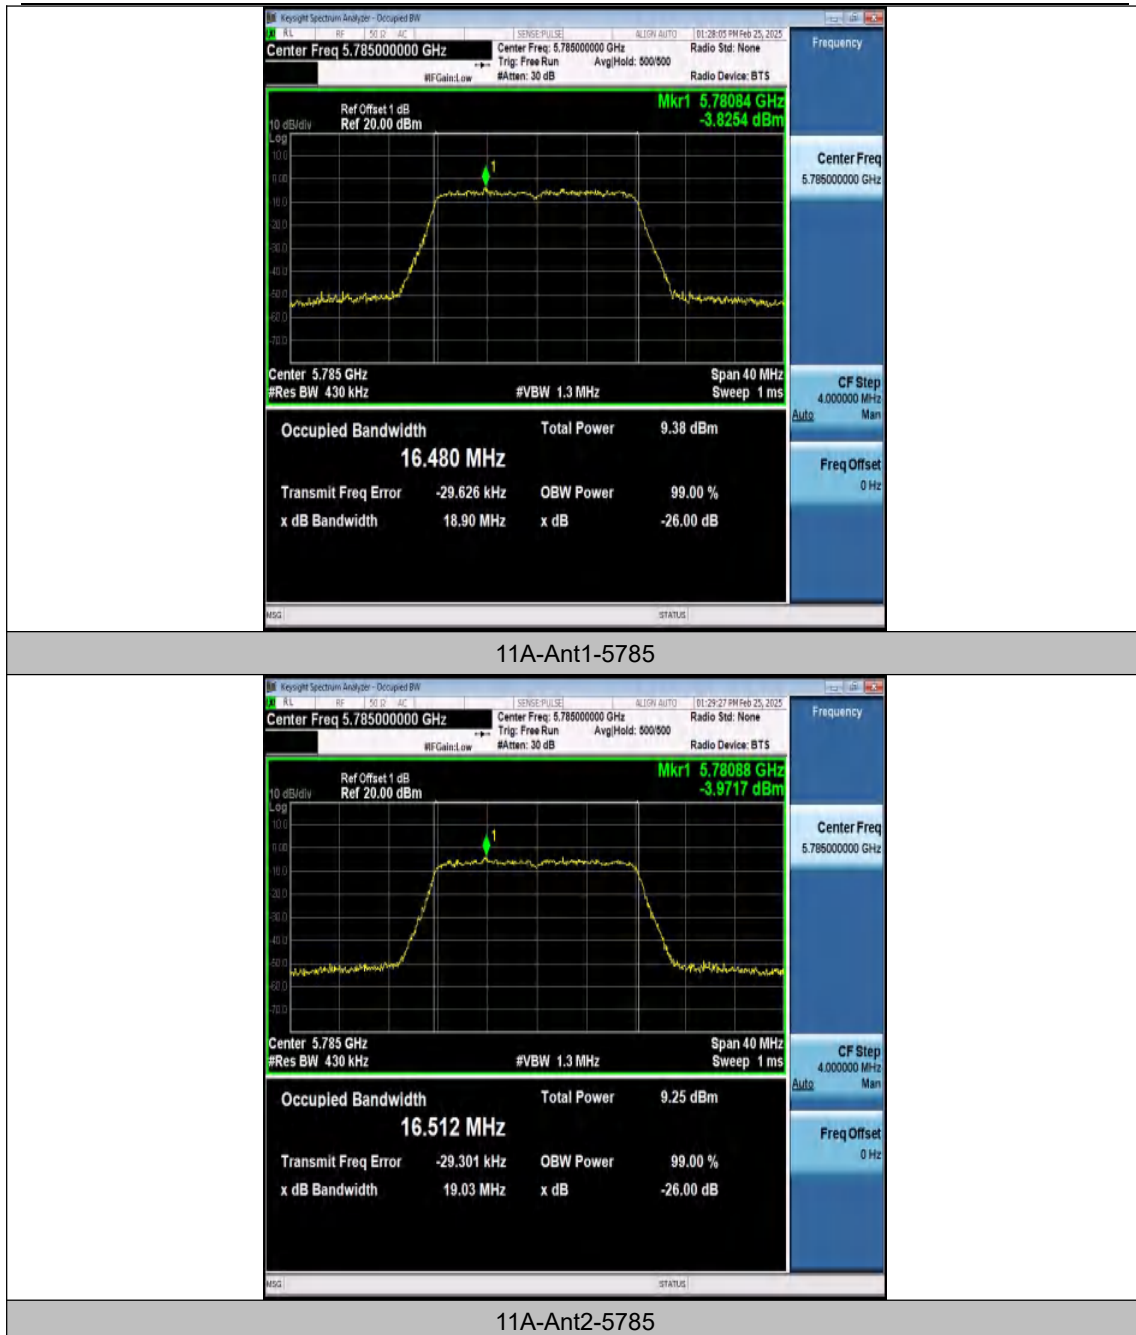

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

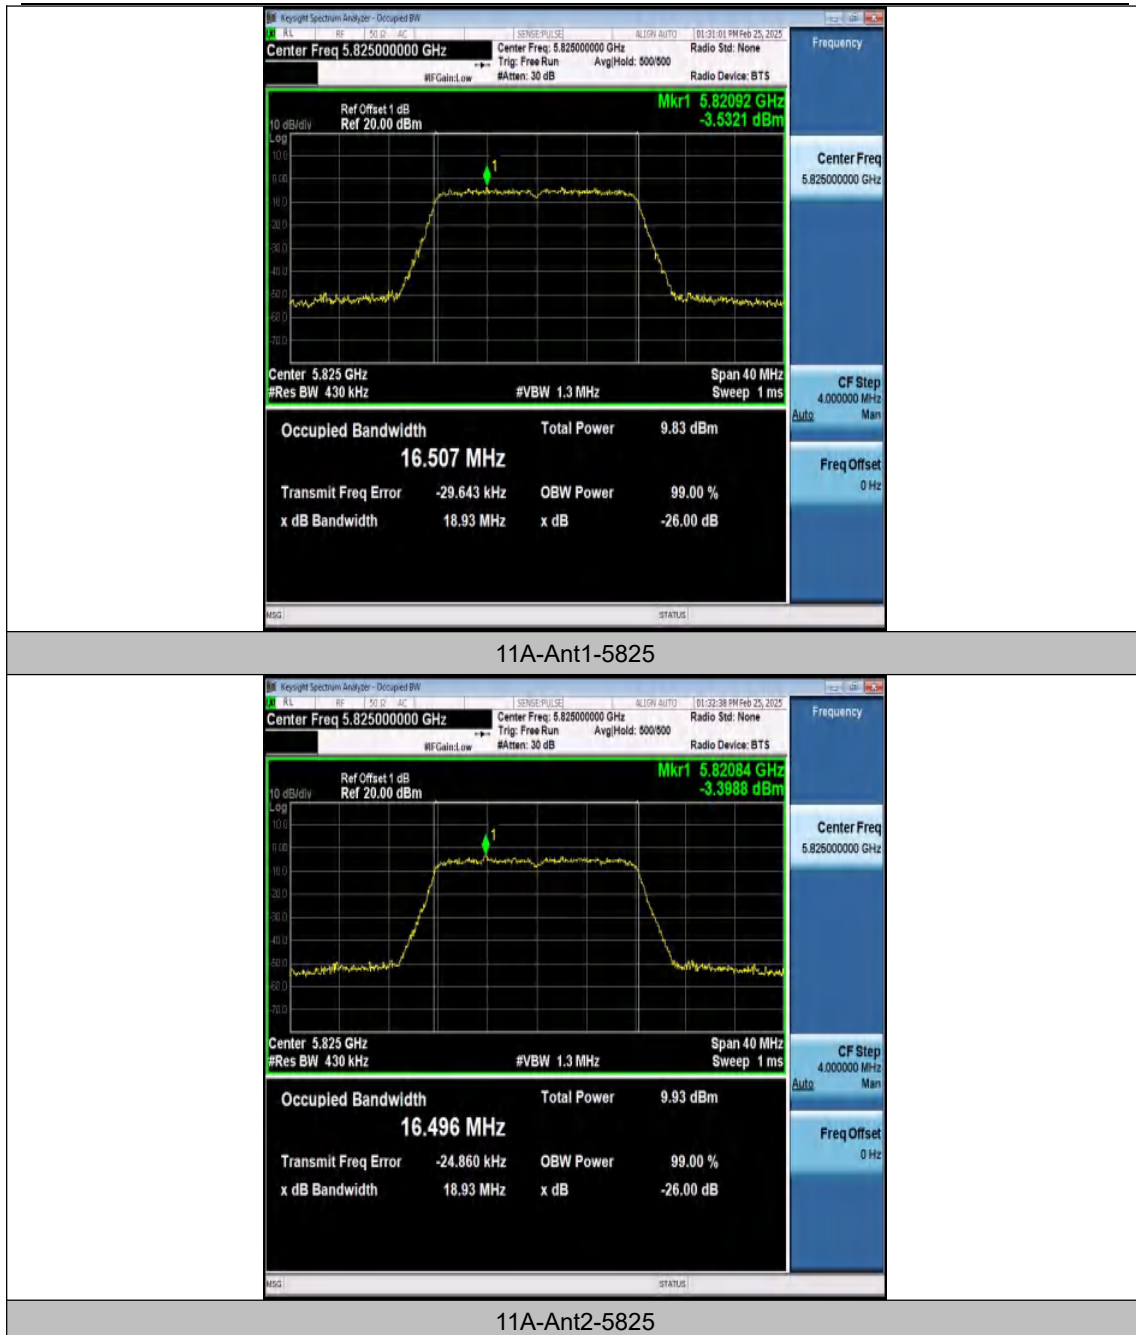


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

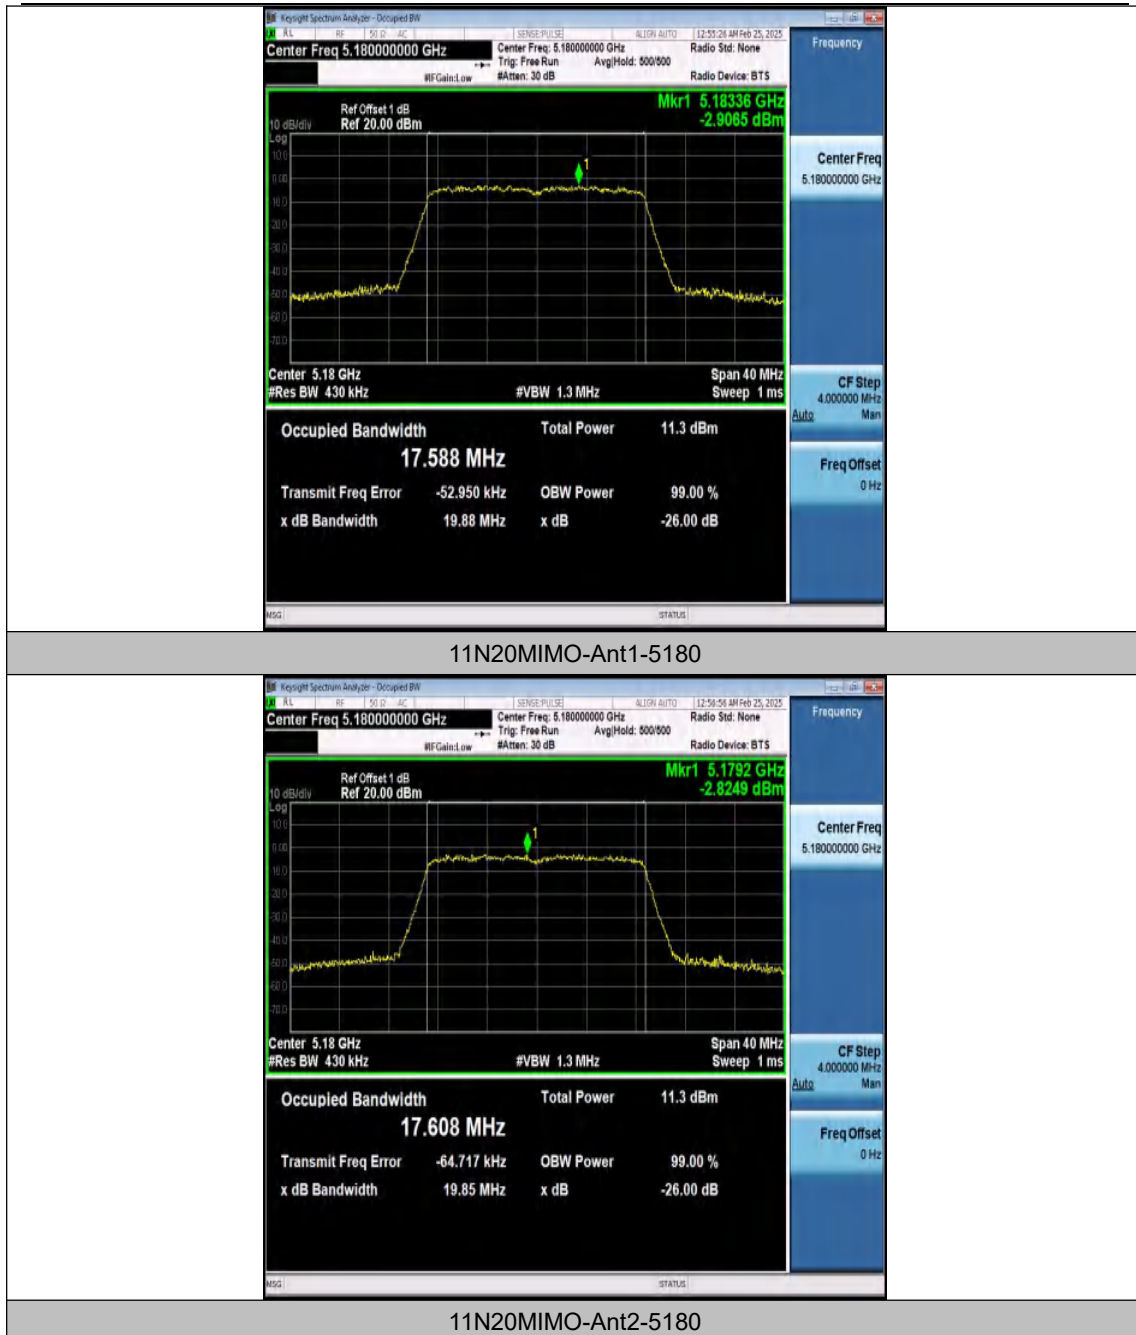


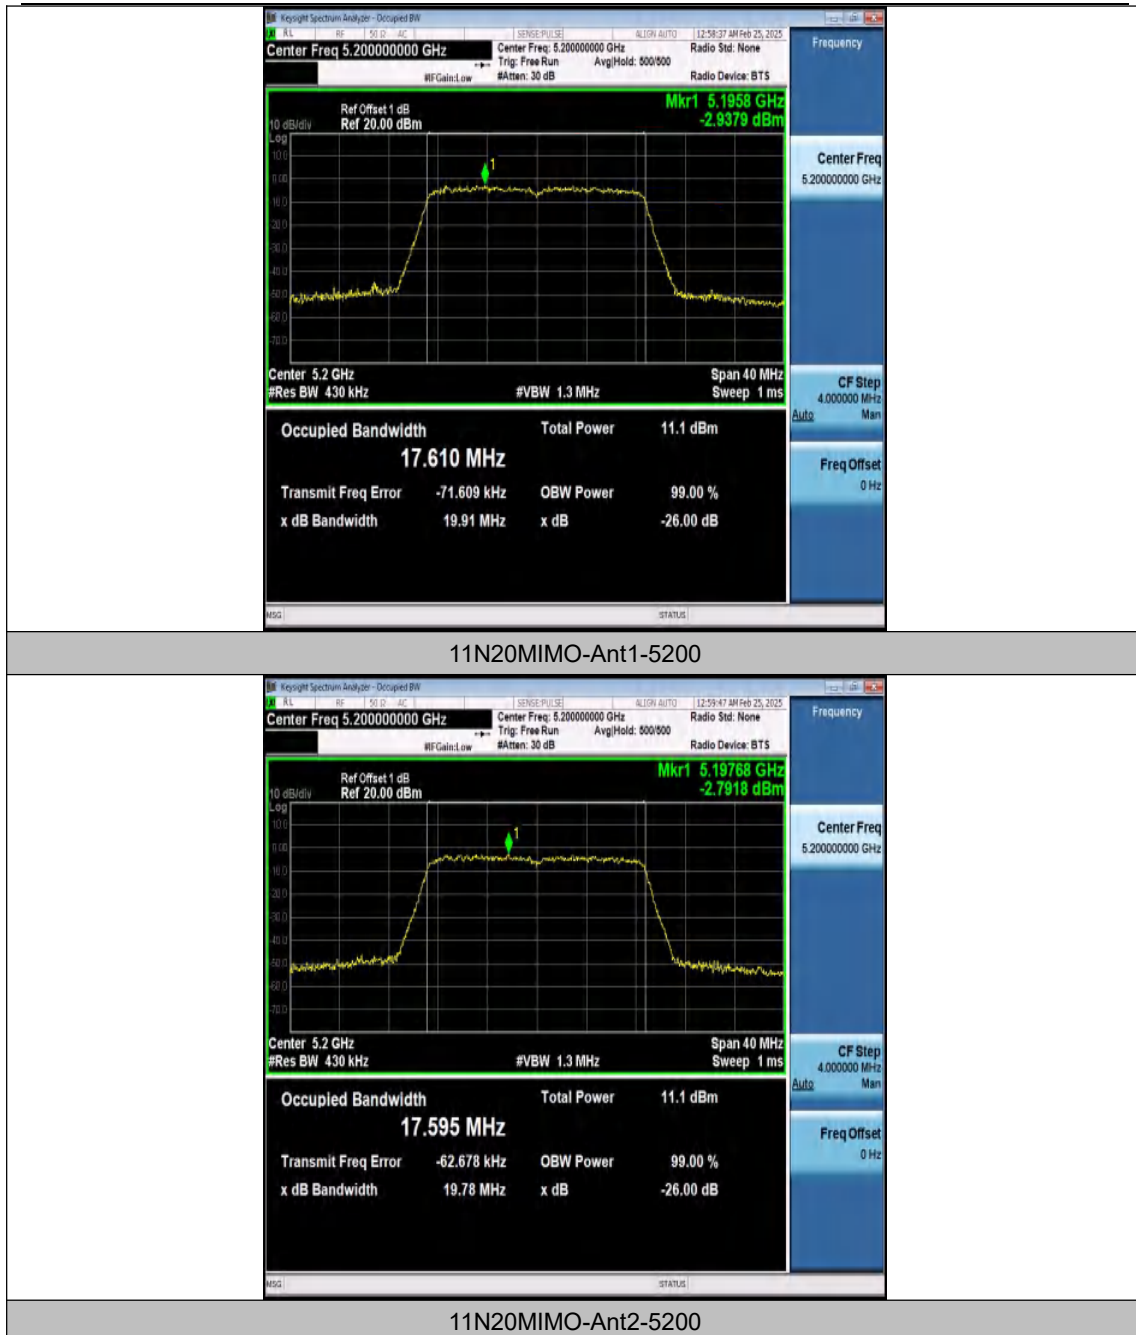

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

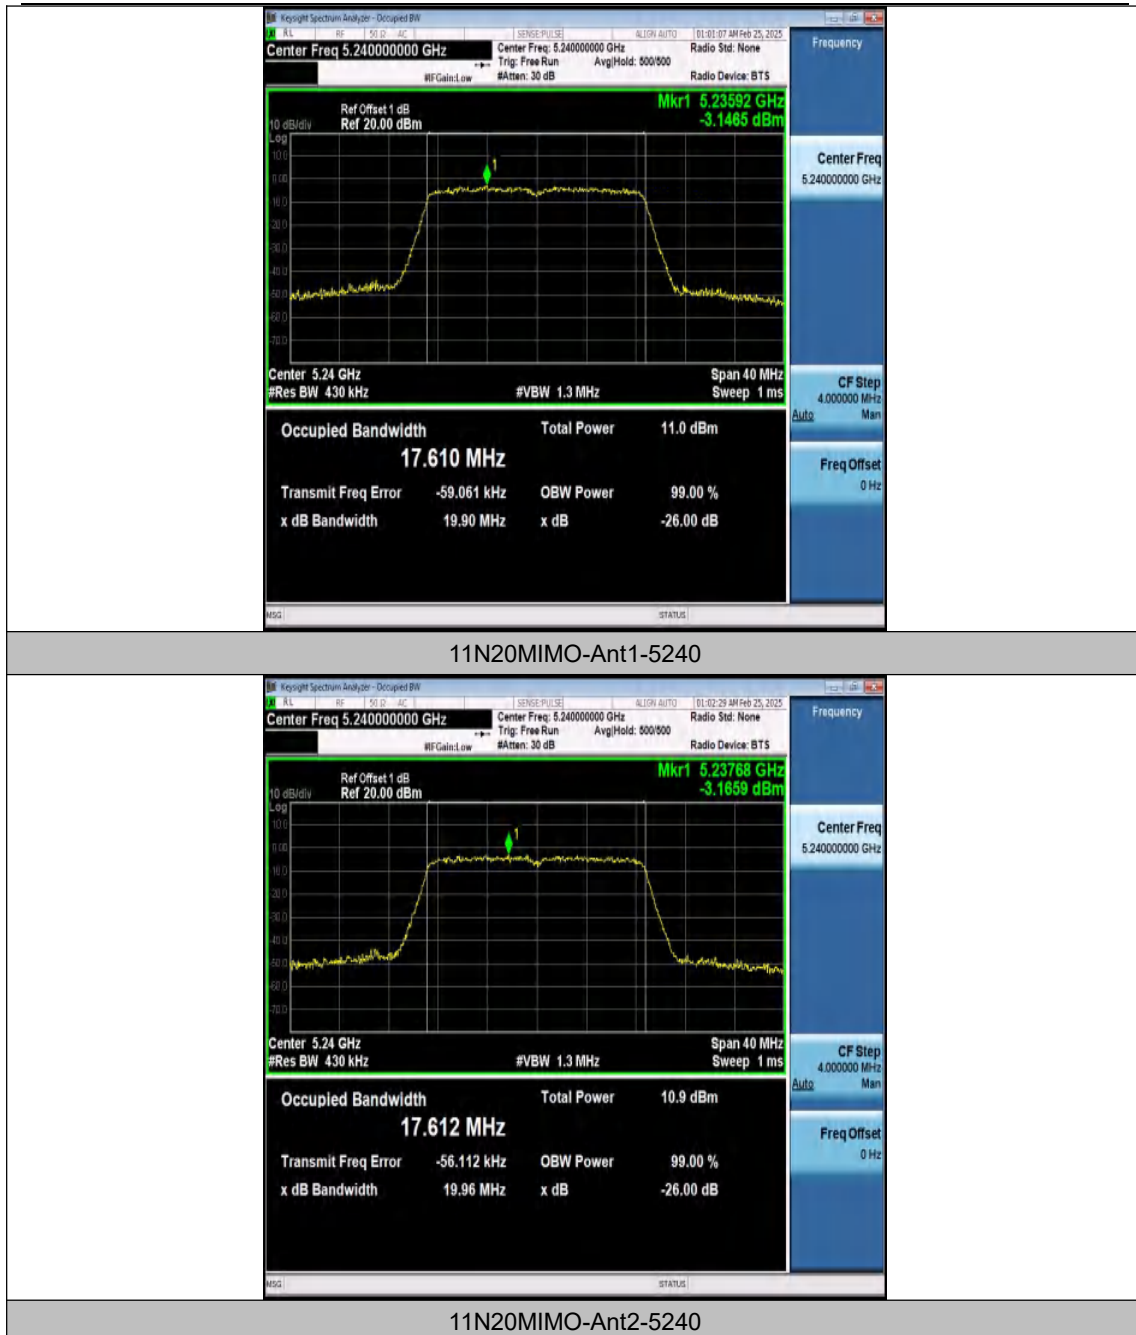

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

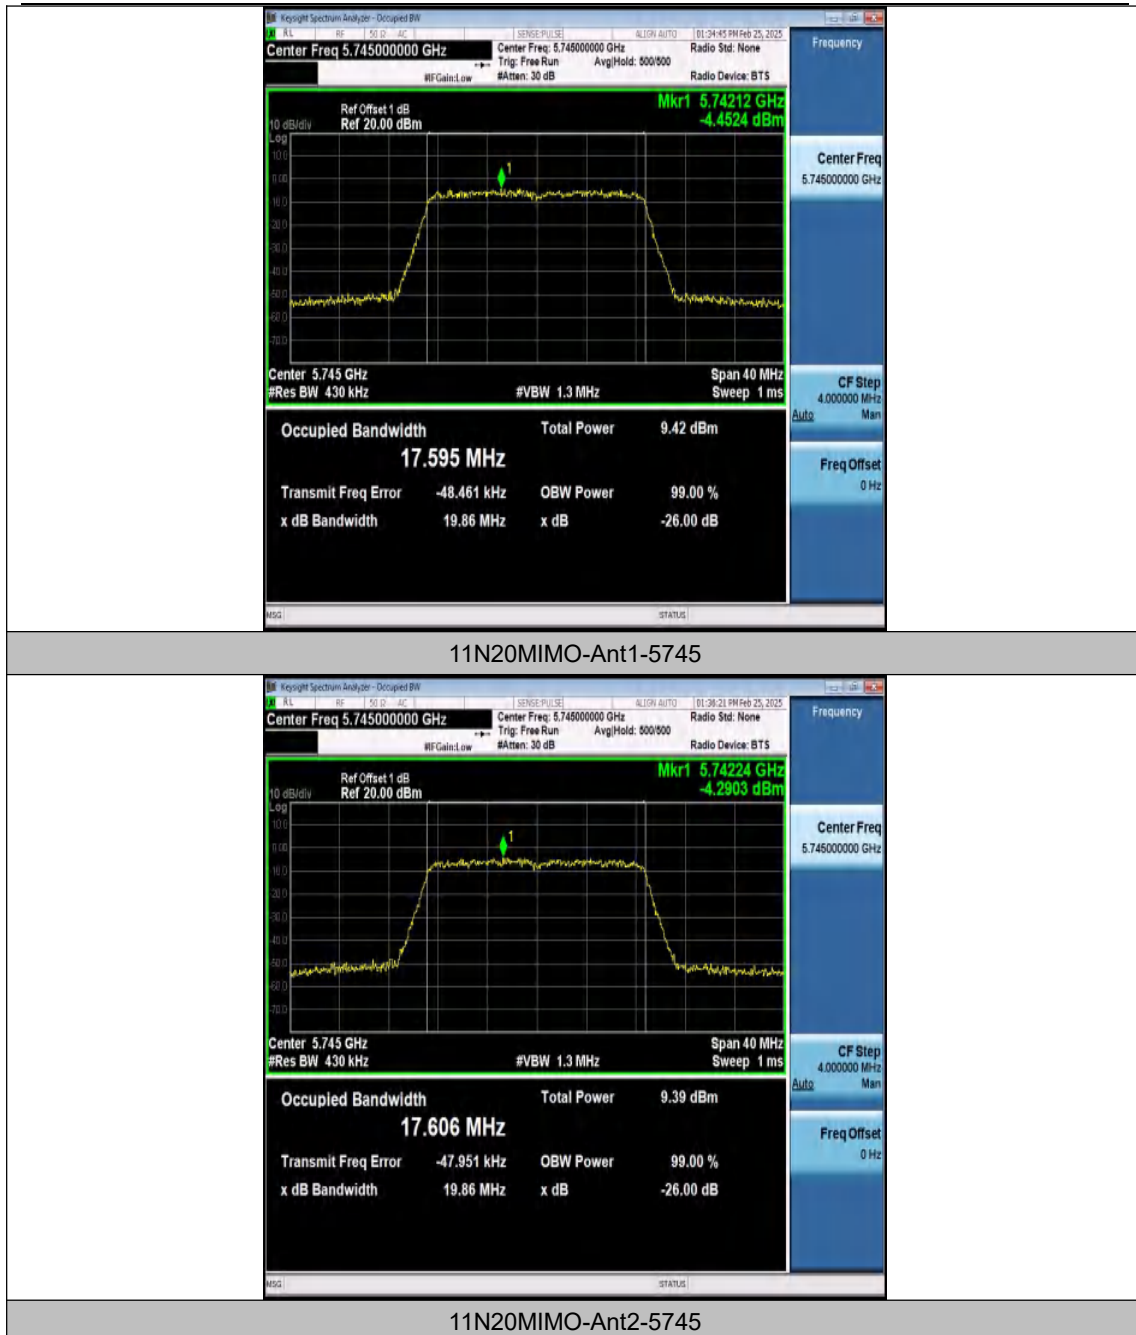

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

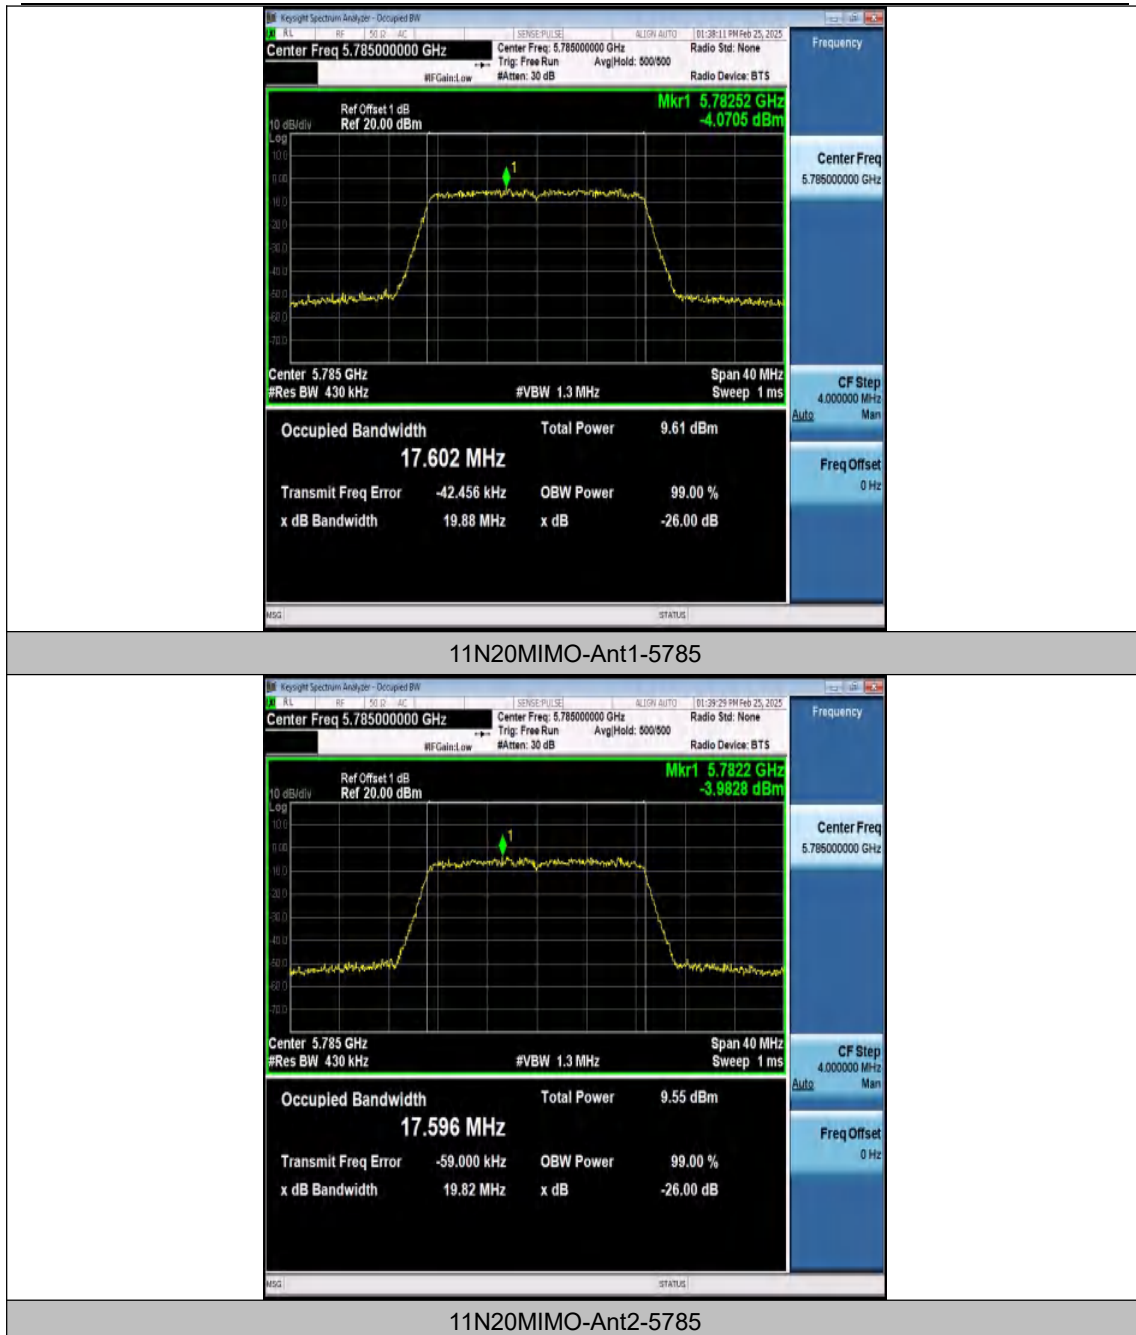

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com


Hotline
400-003-0500
www.anbotek.com

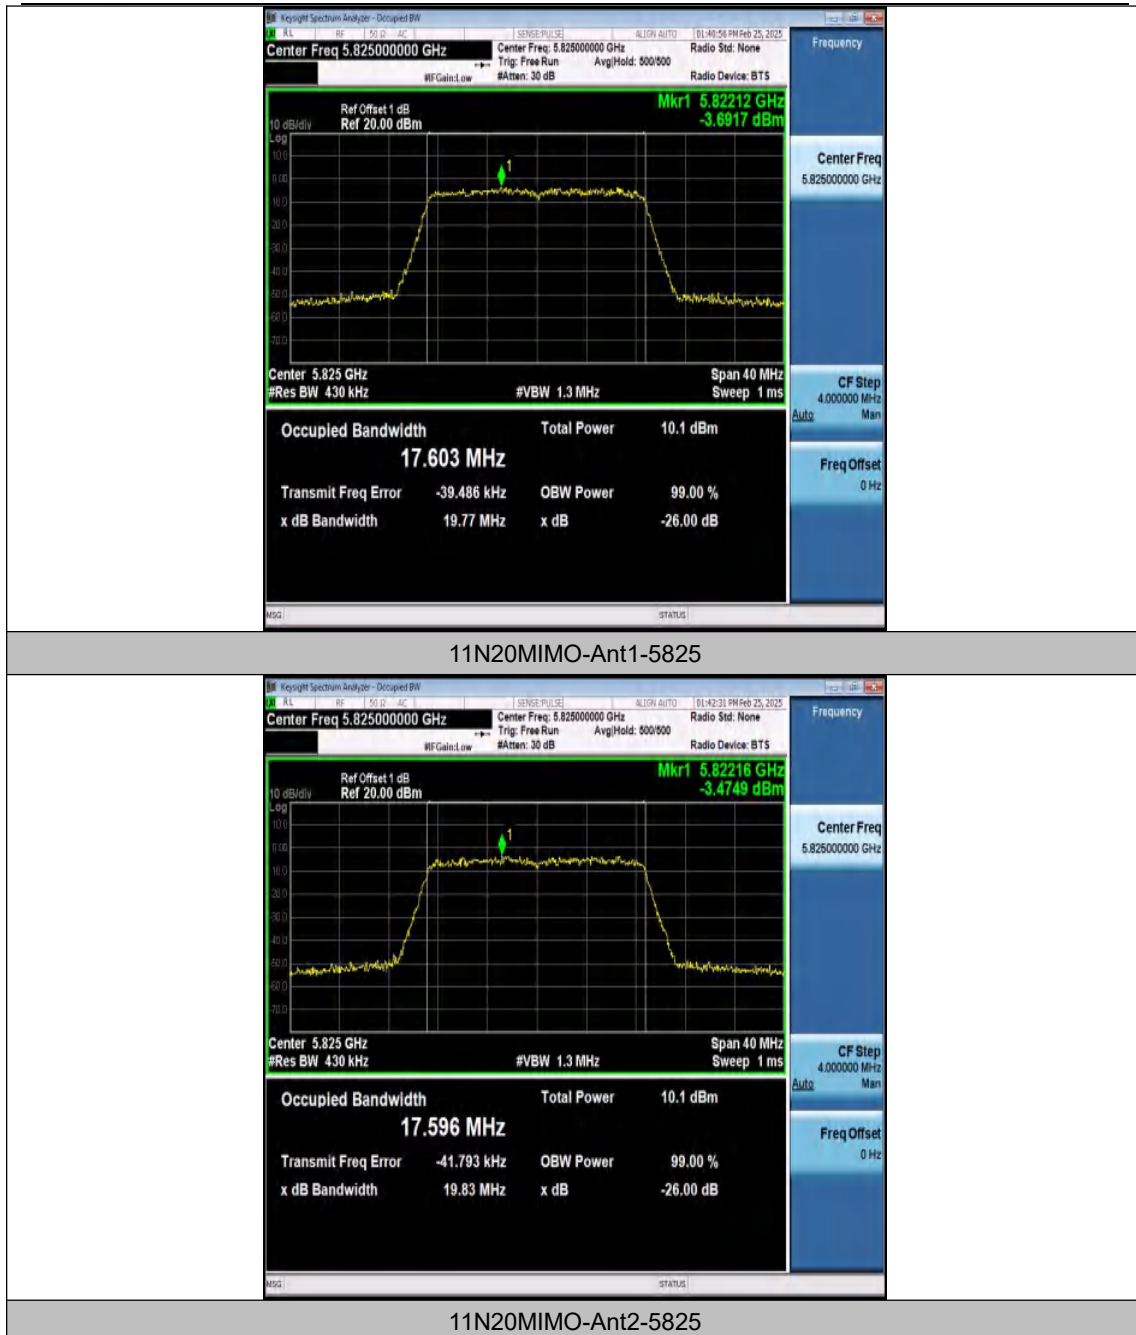


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

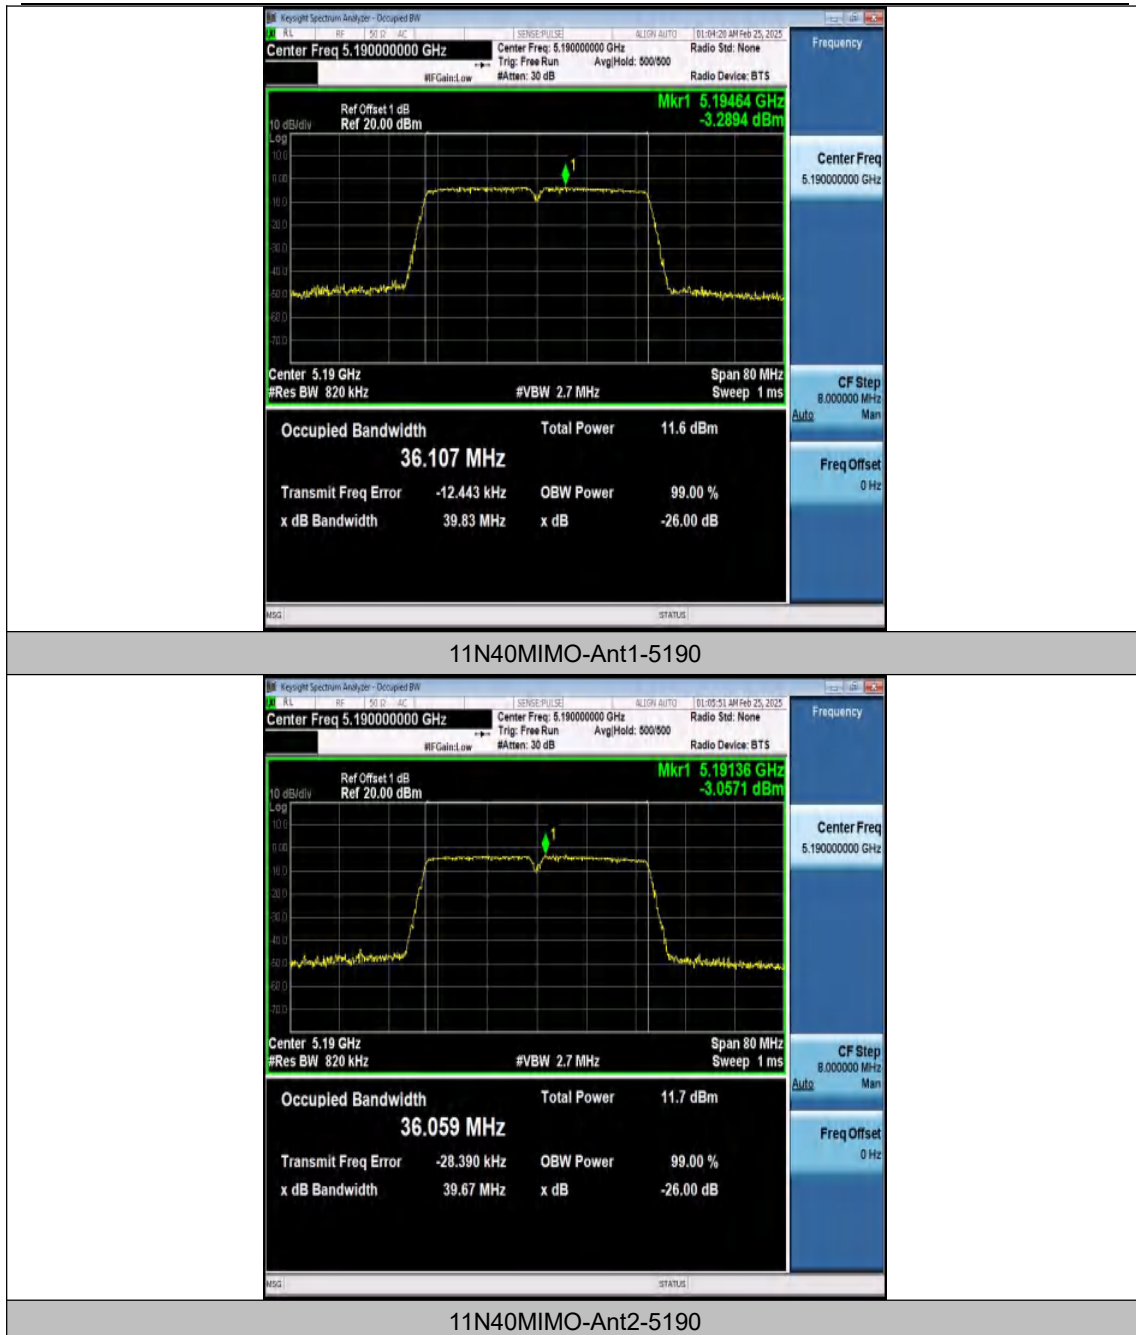


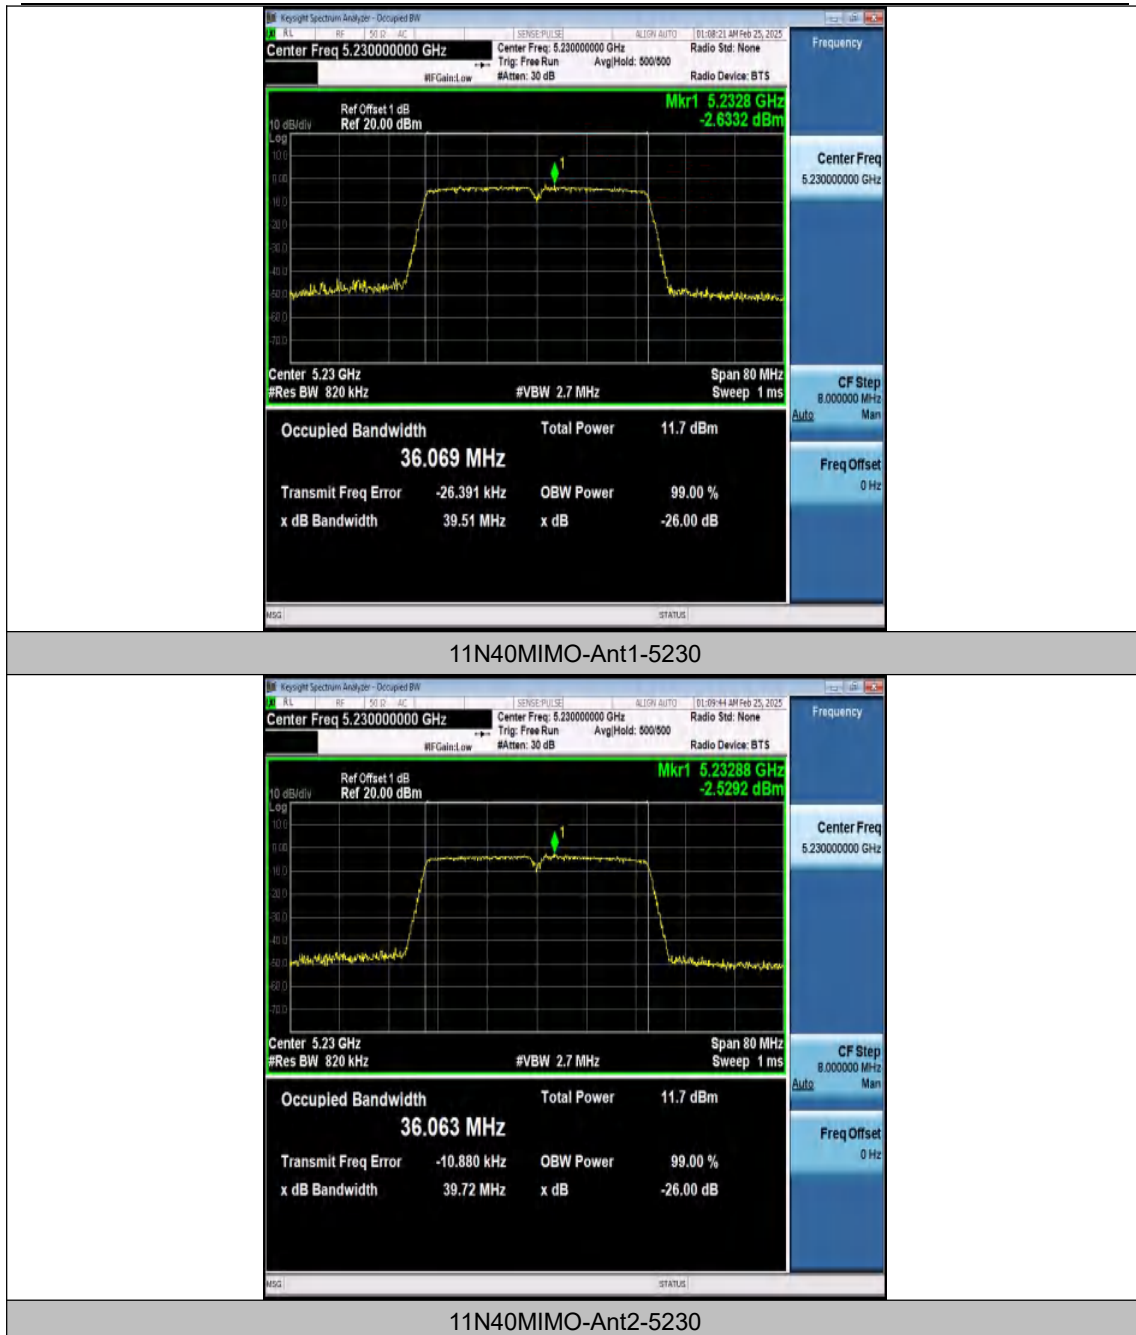

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

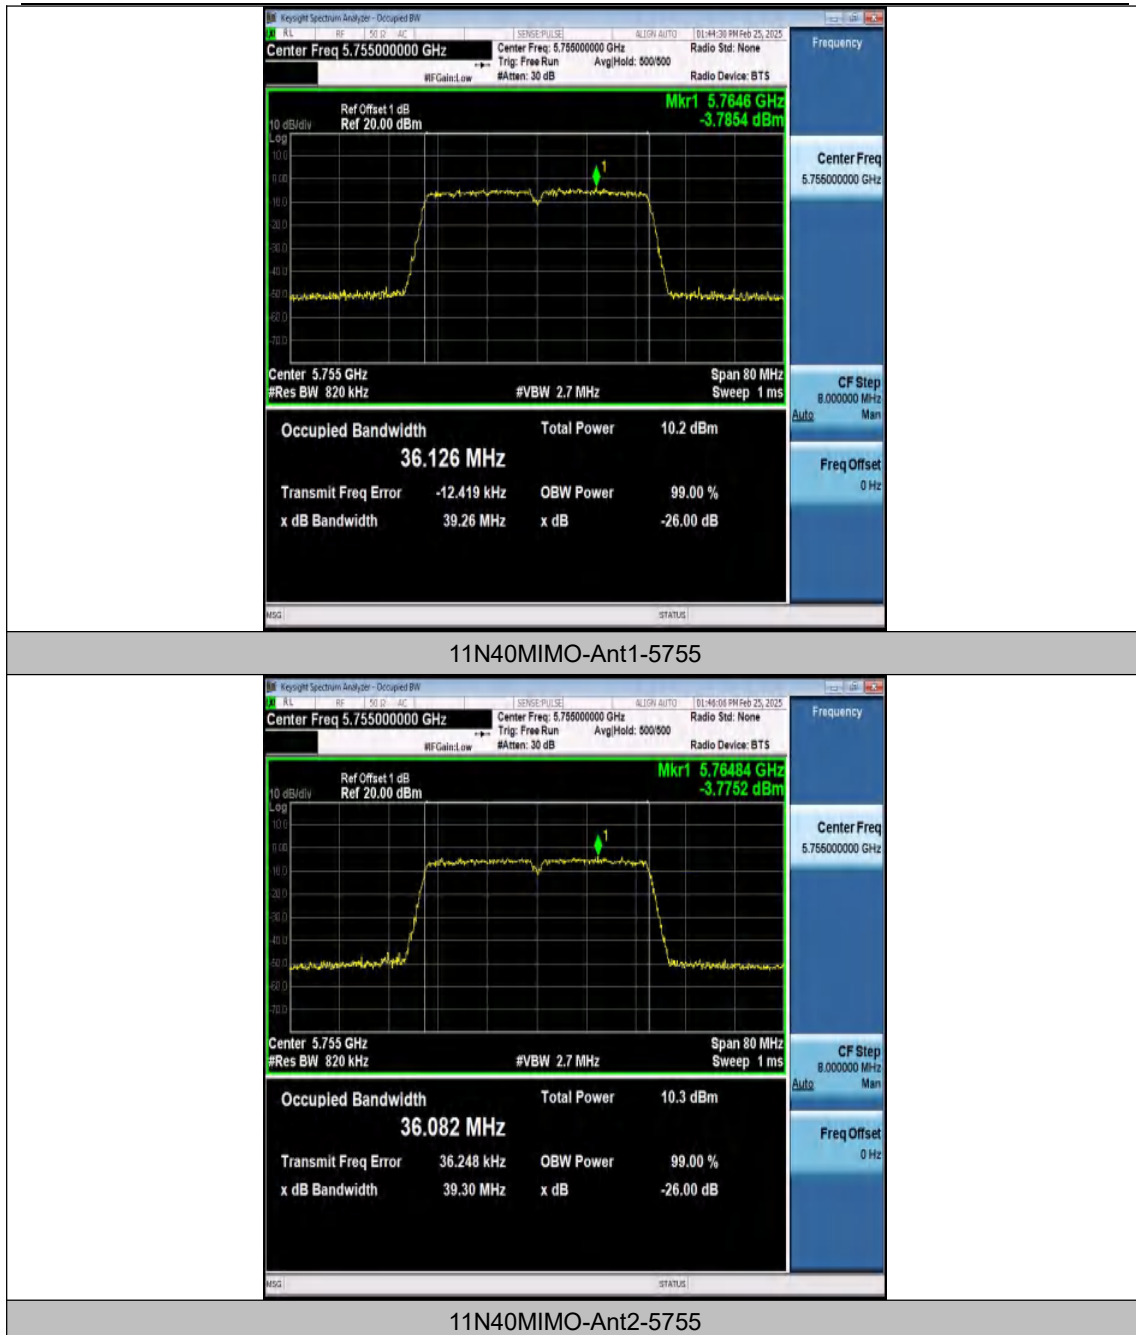

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

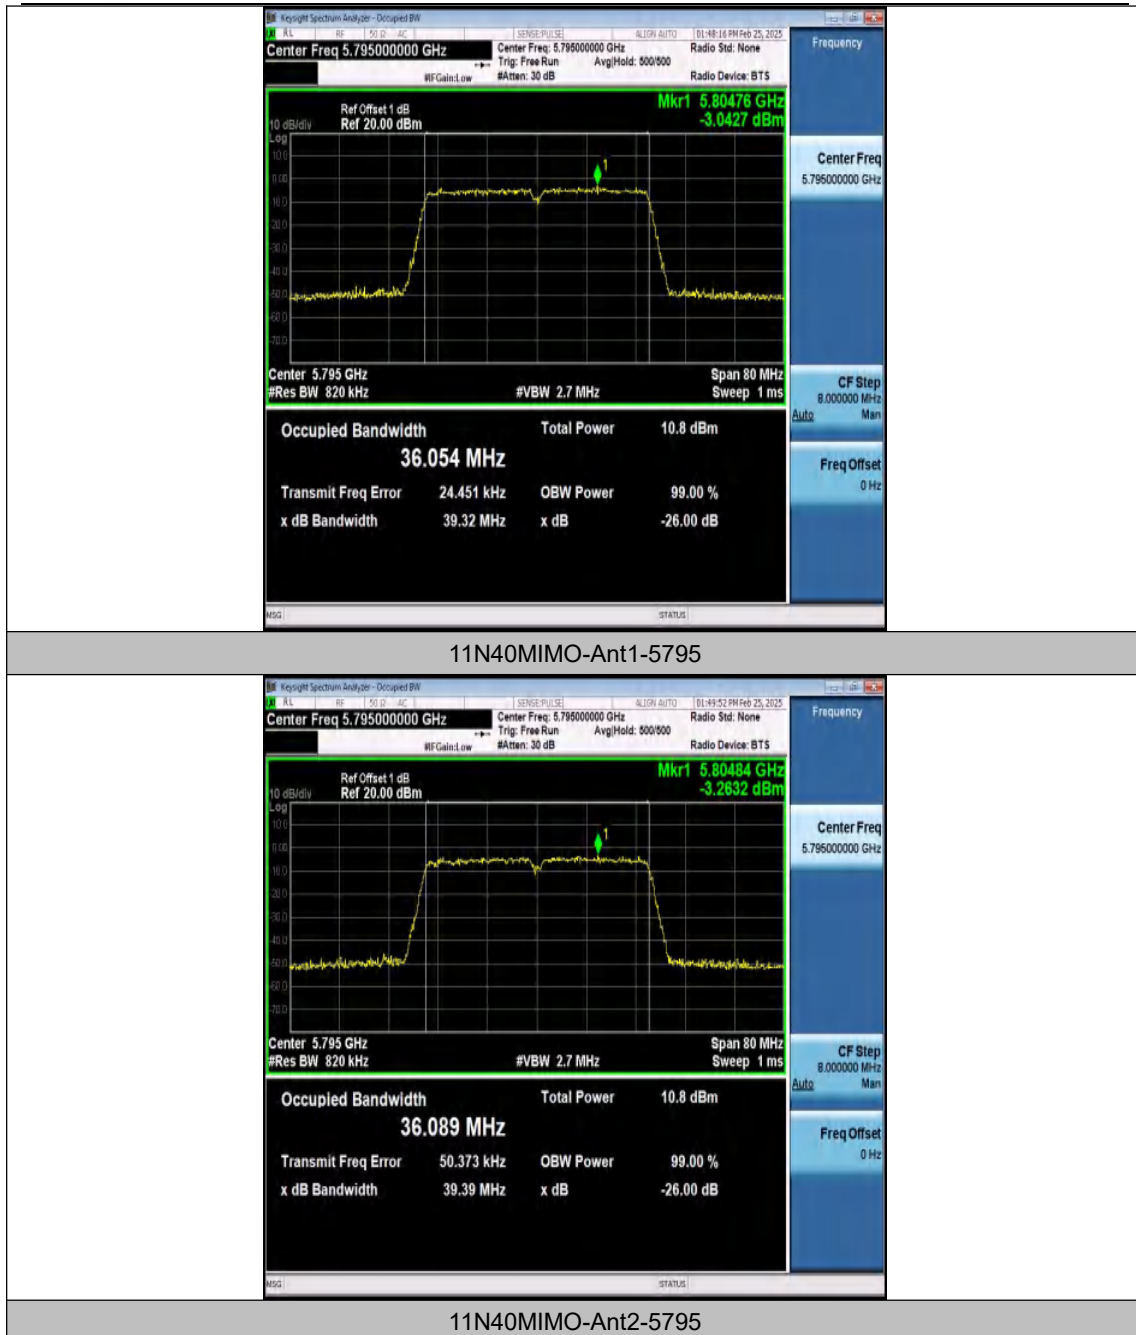

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

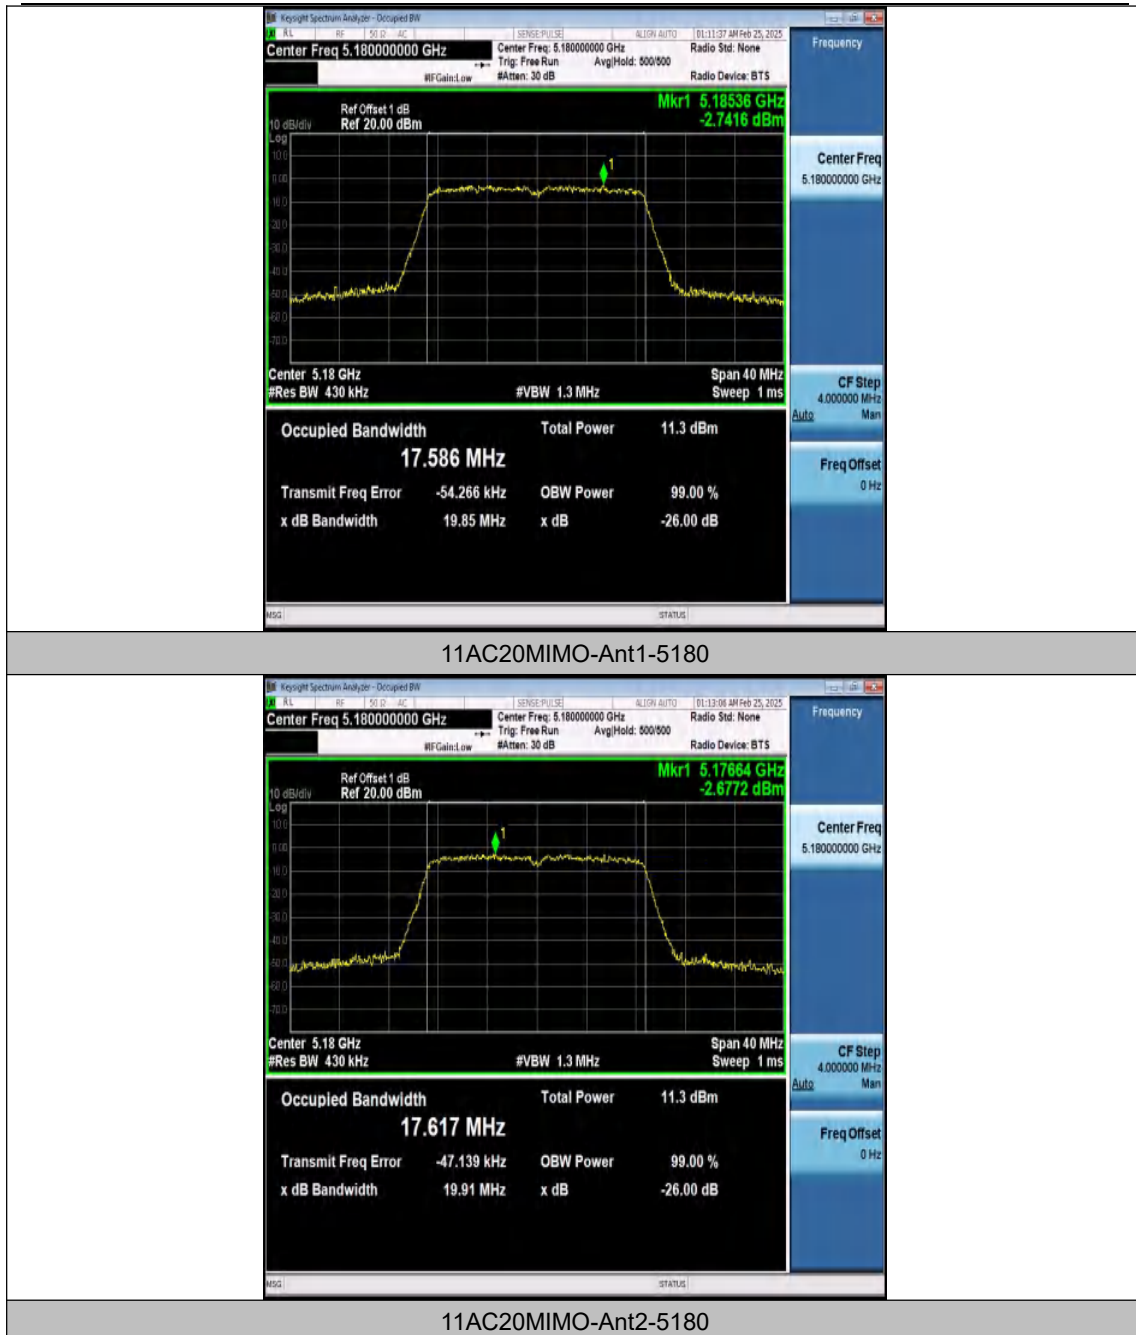

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

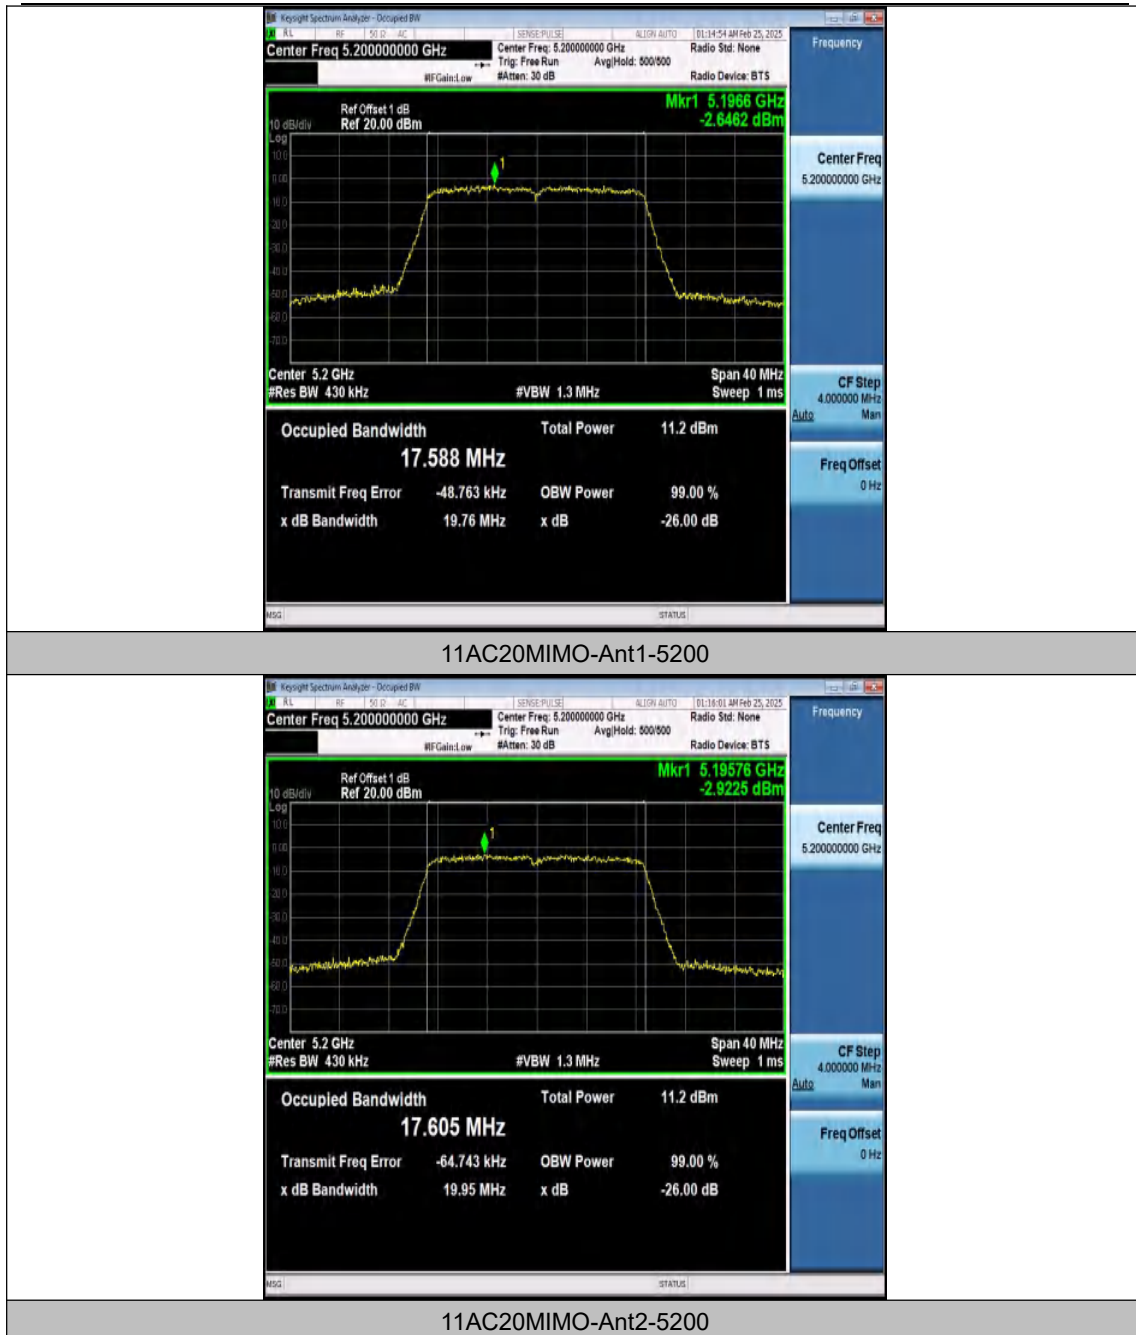

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

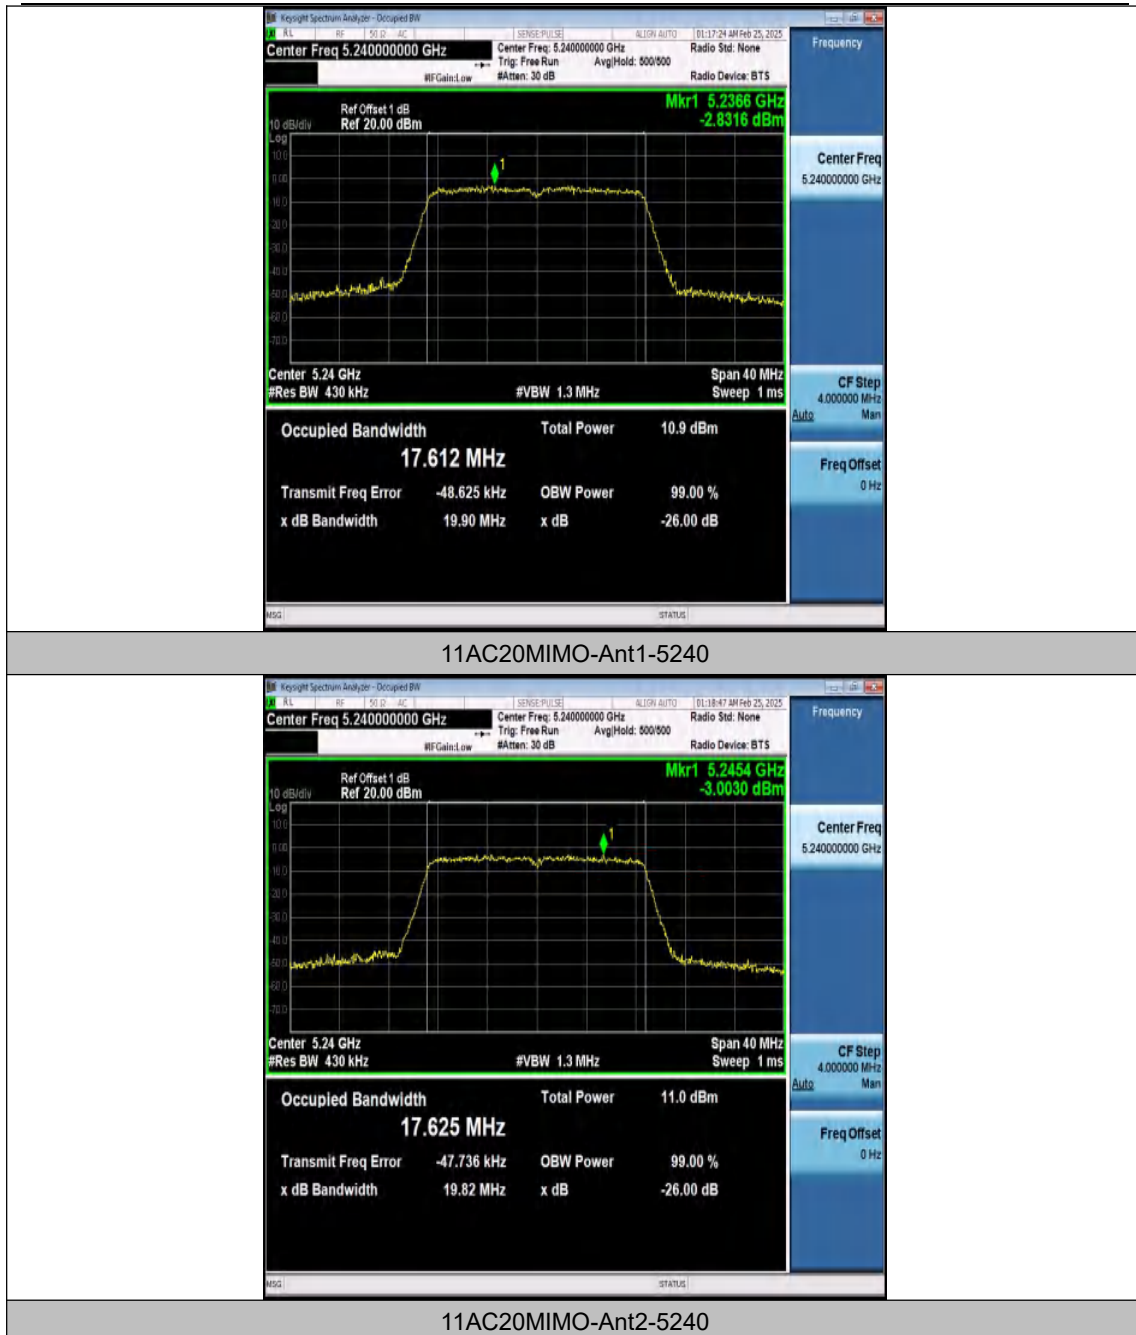

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

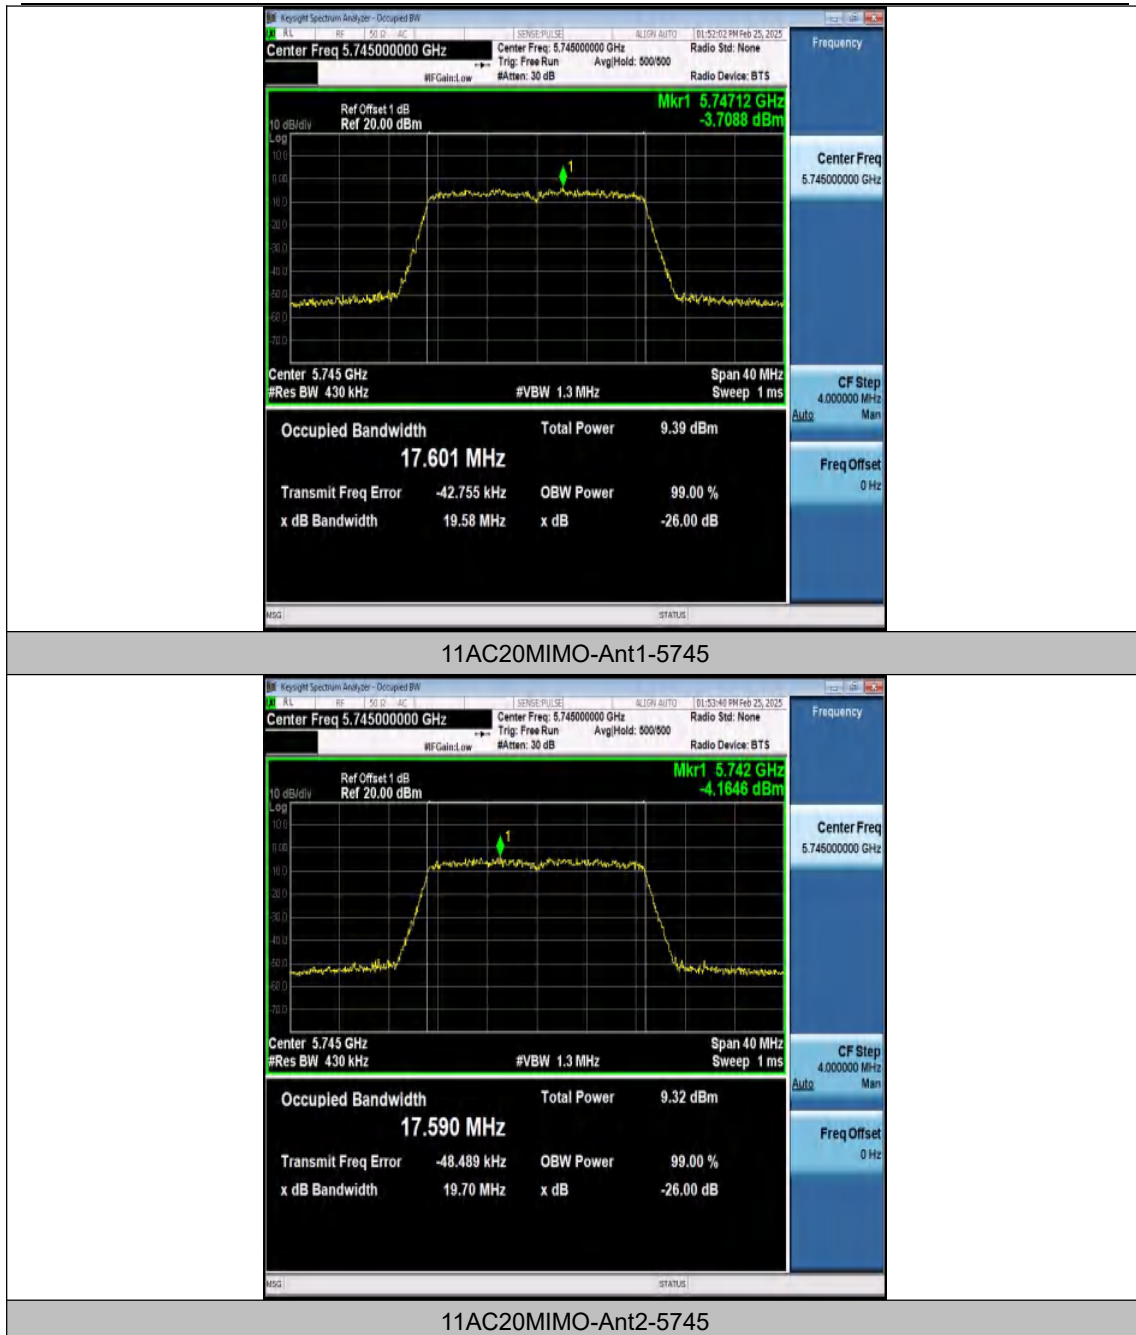



Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com

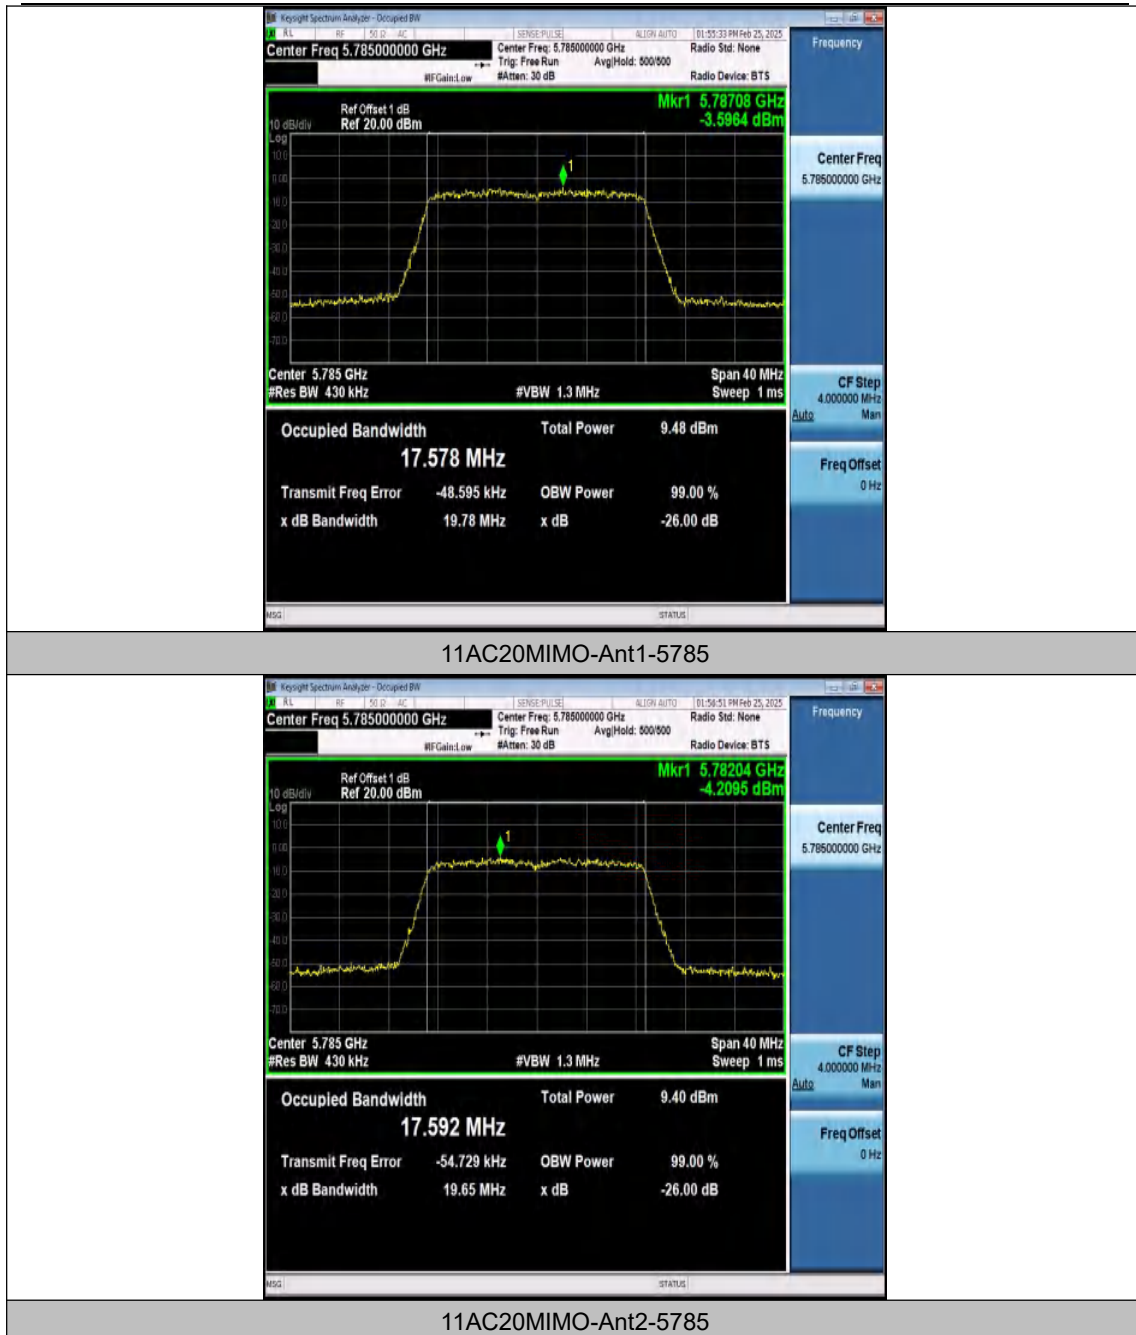

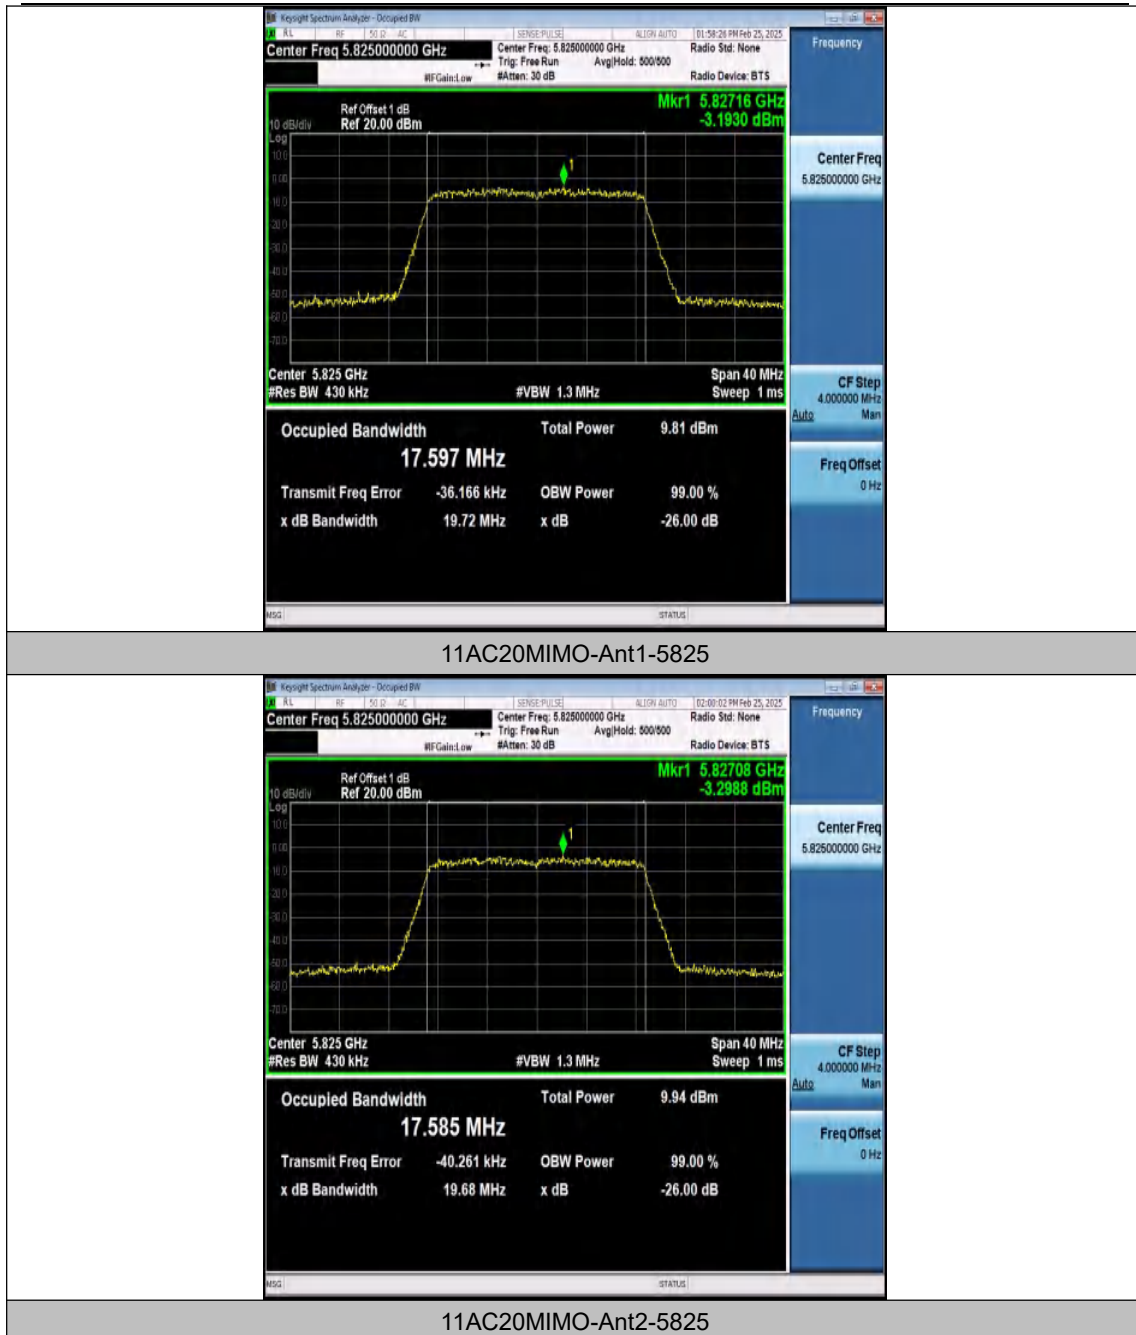

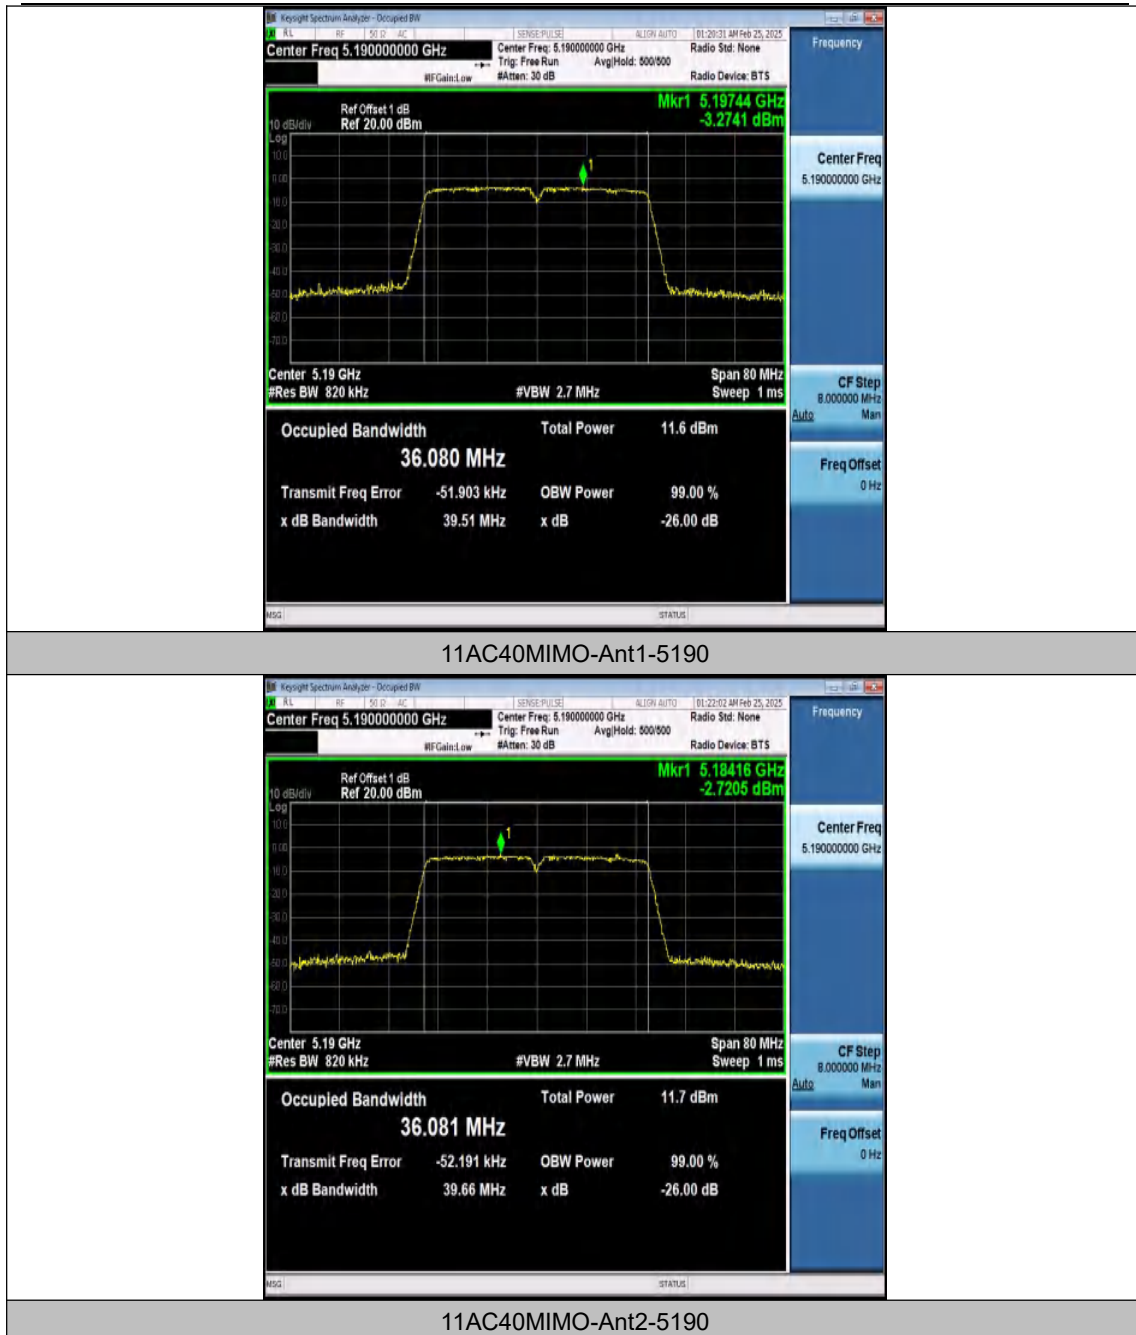


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com




Hotline
400-003-0500
www.anbotech.com

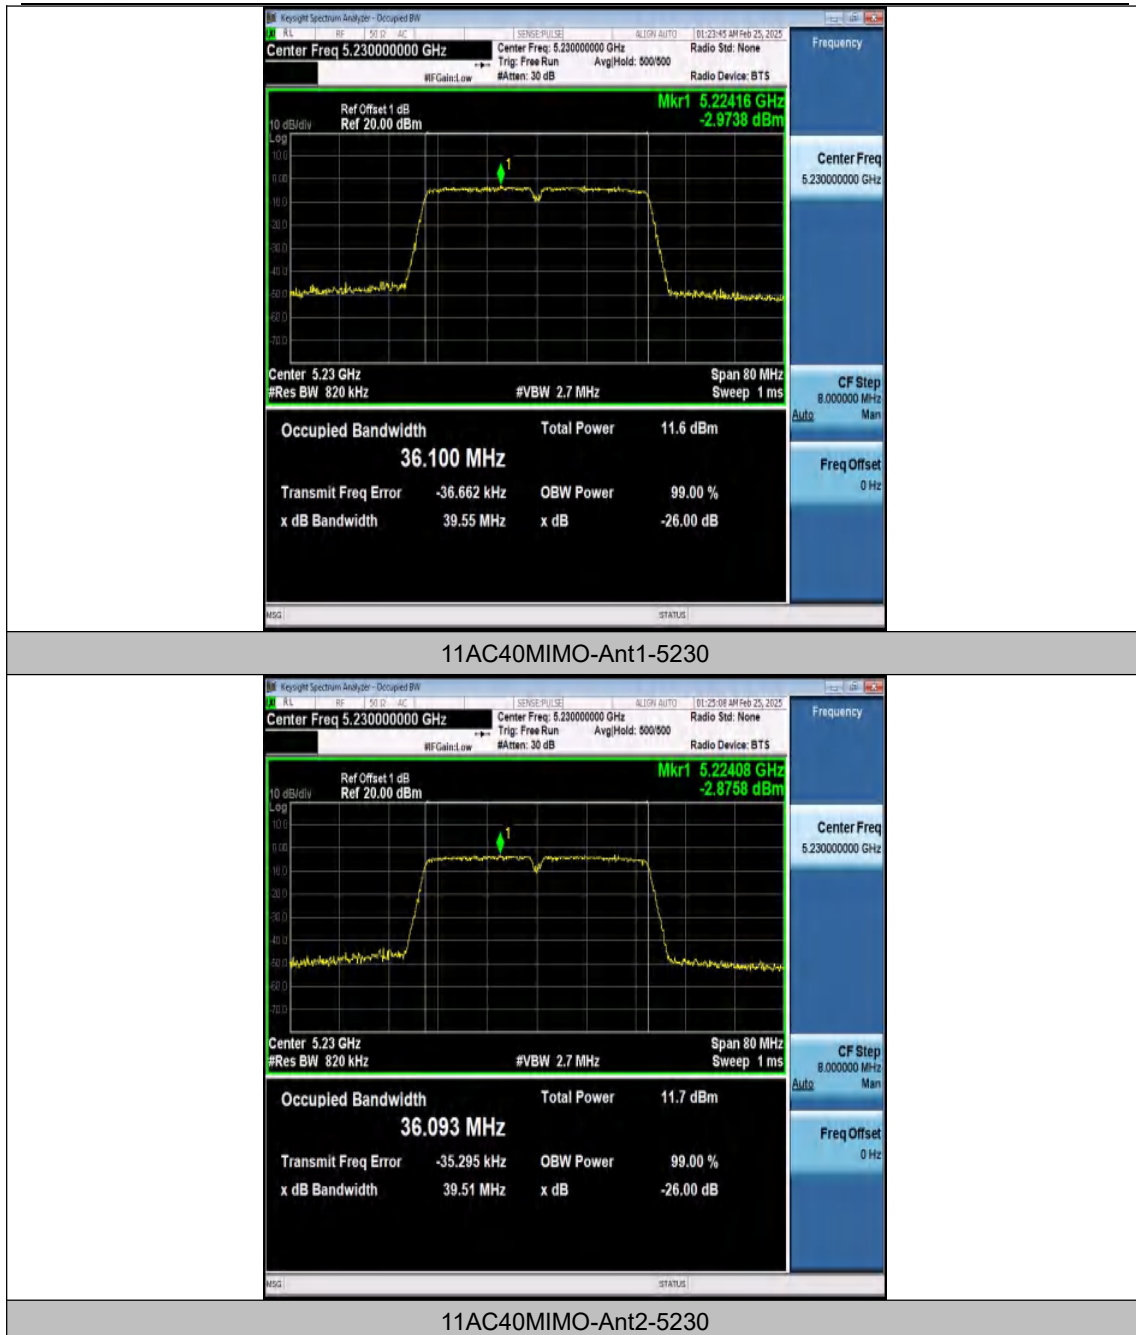

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

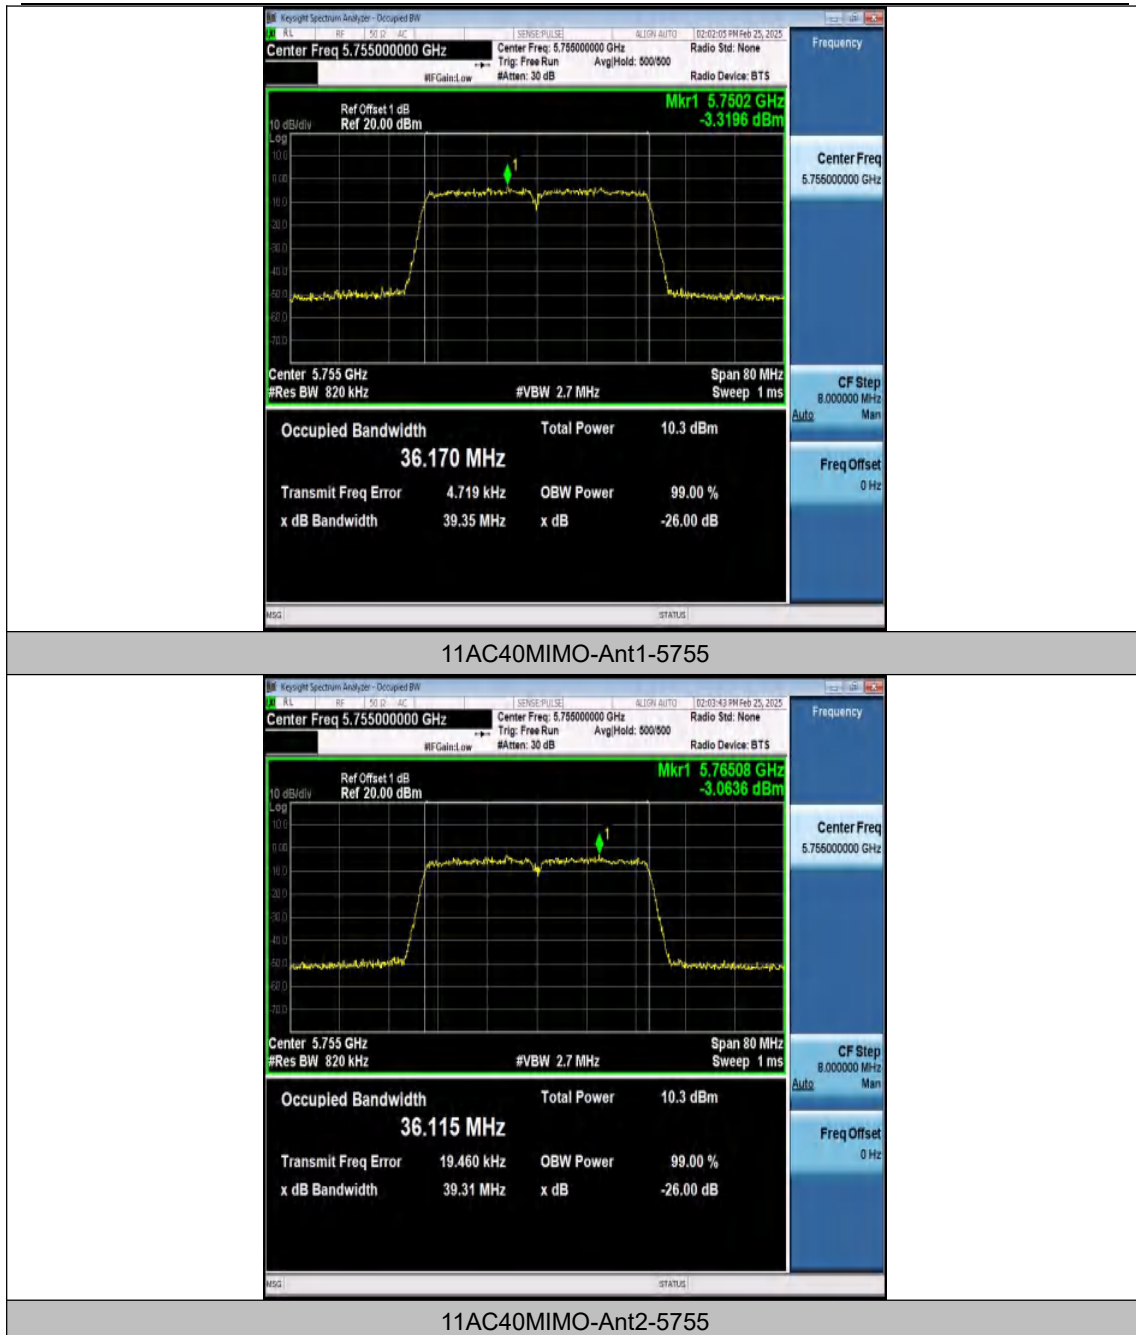



Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com



Hotline
400-003-0500
www.anbotech.com

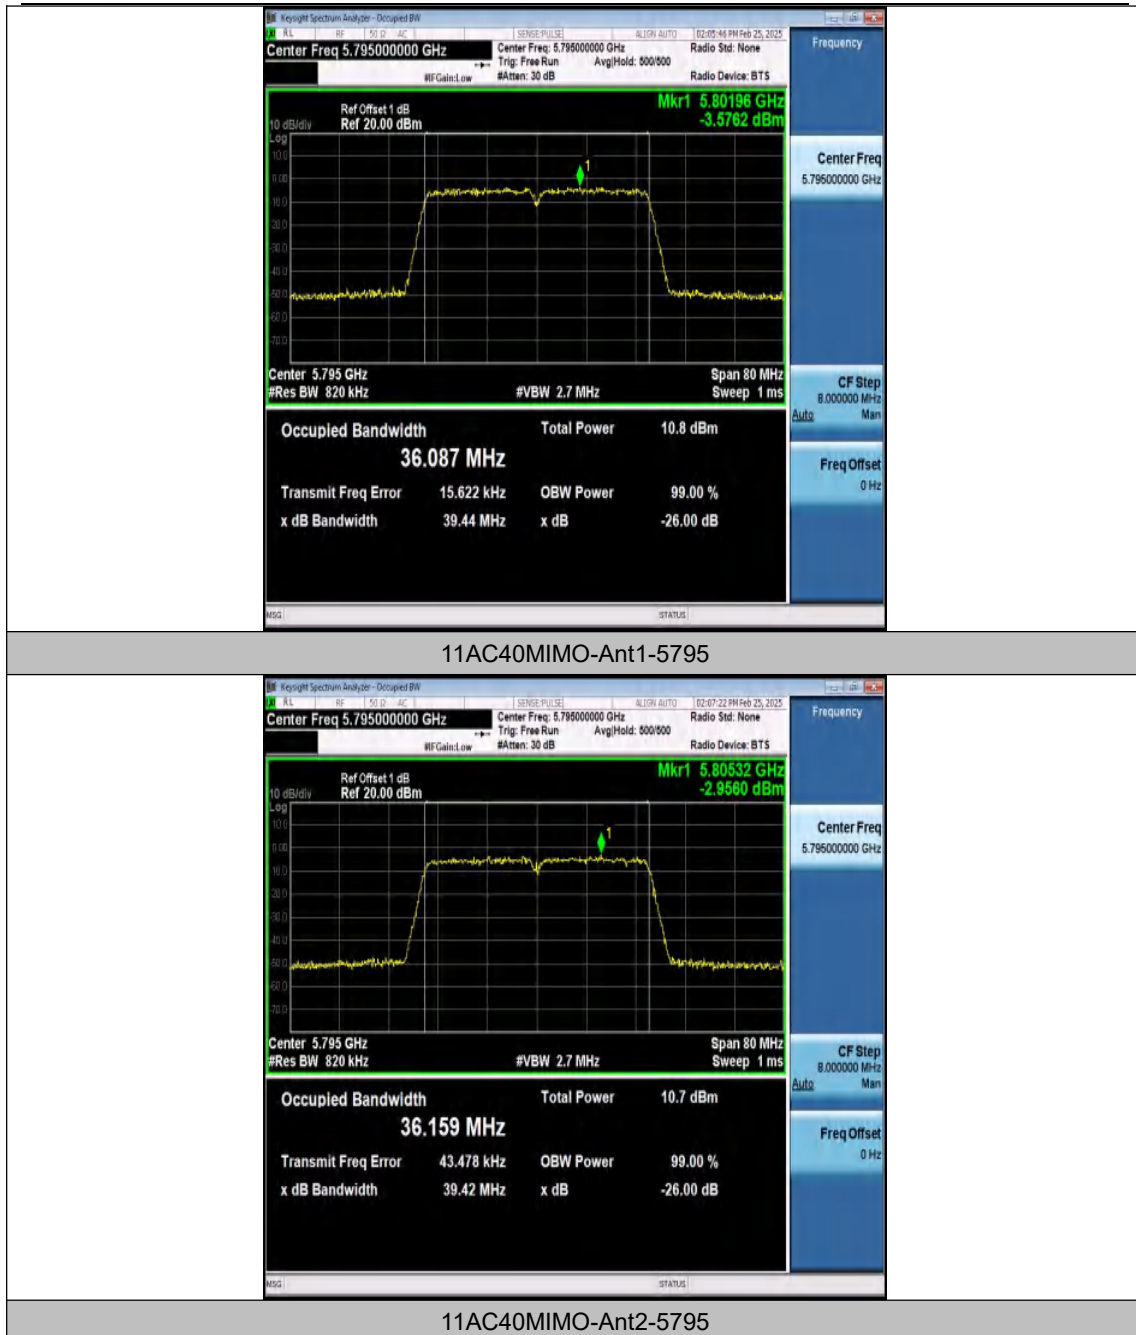

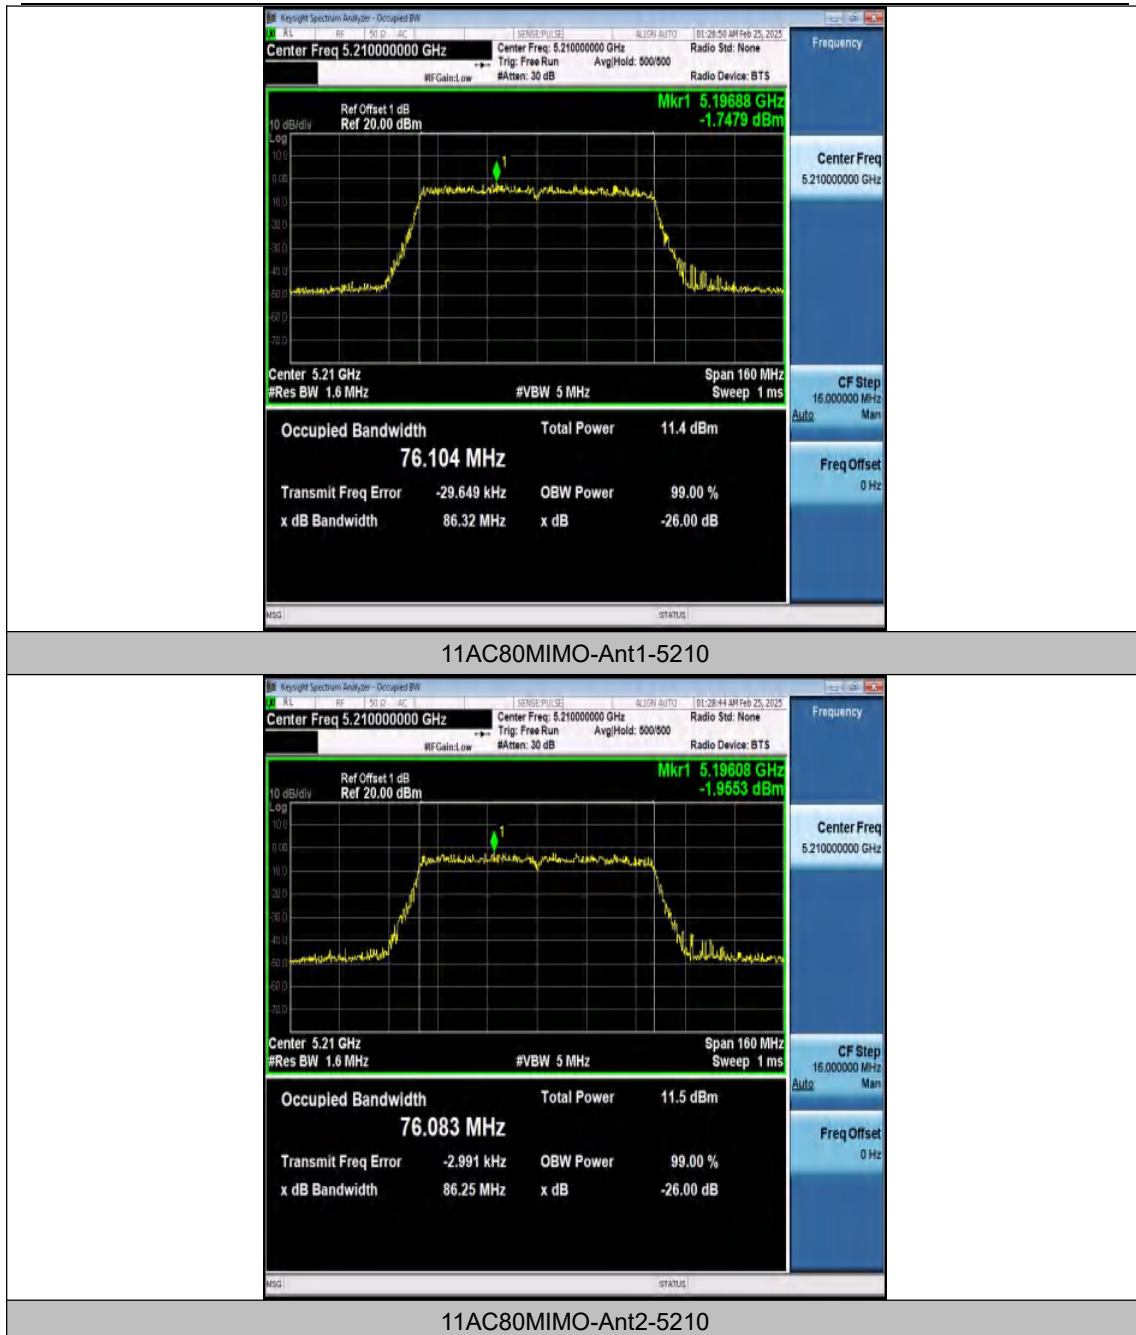


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com




Hotline
400-003-0500
www.anbotech.com

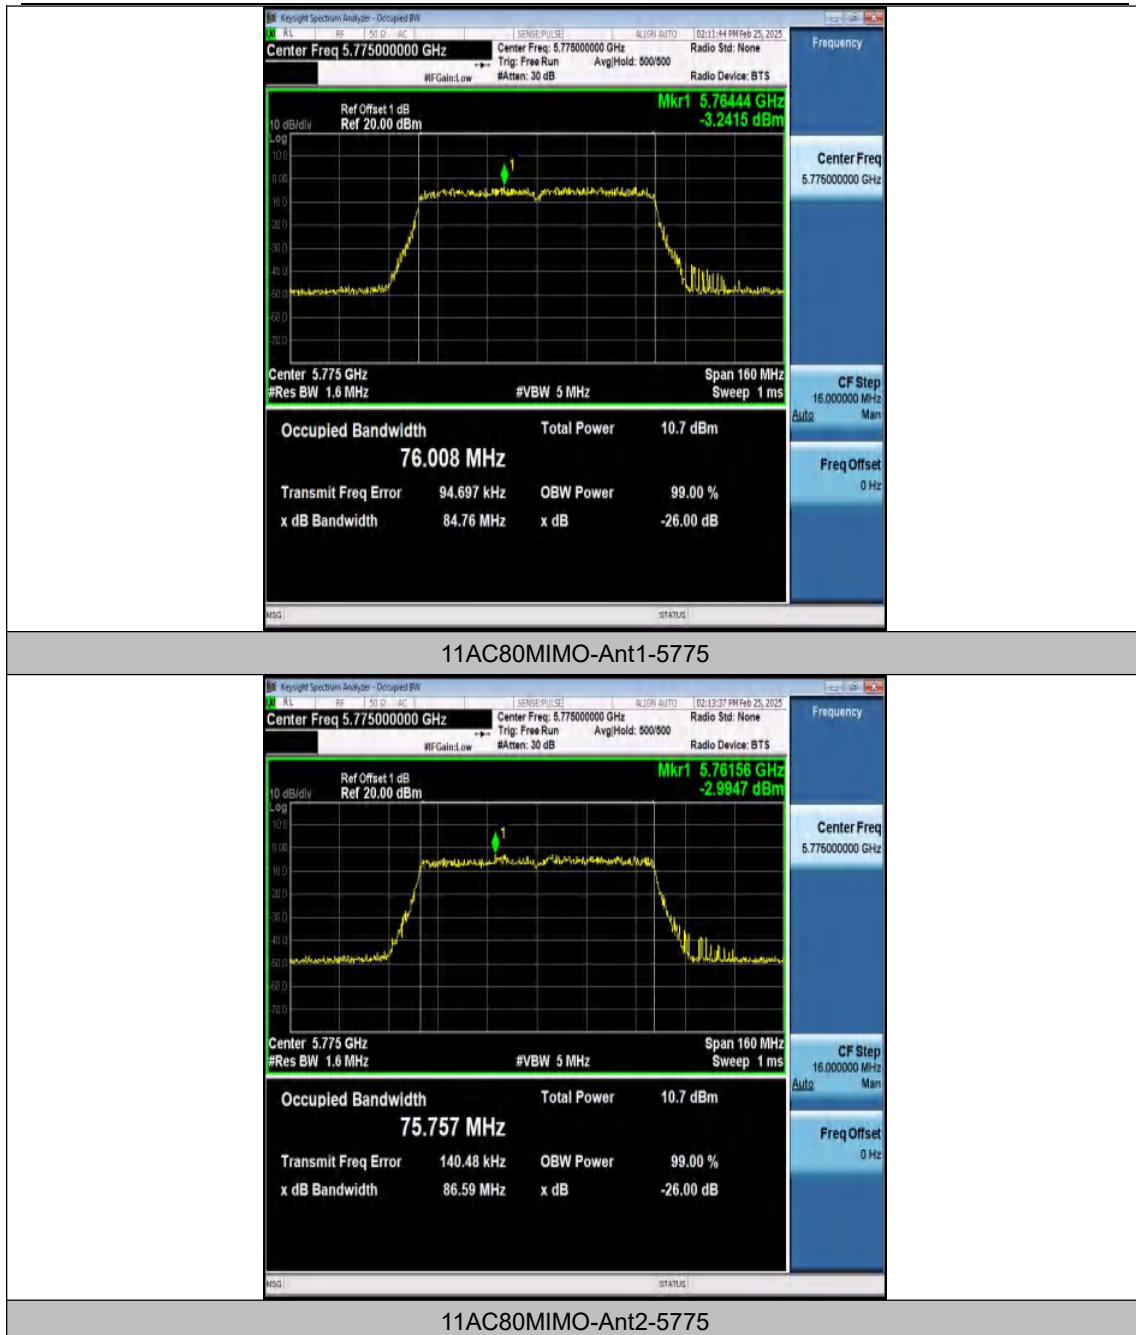


Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

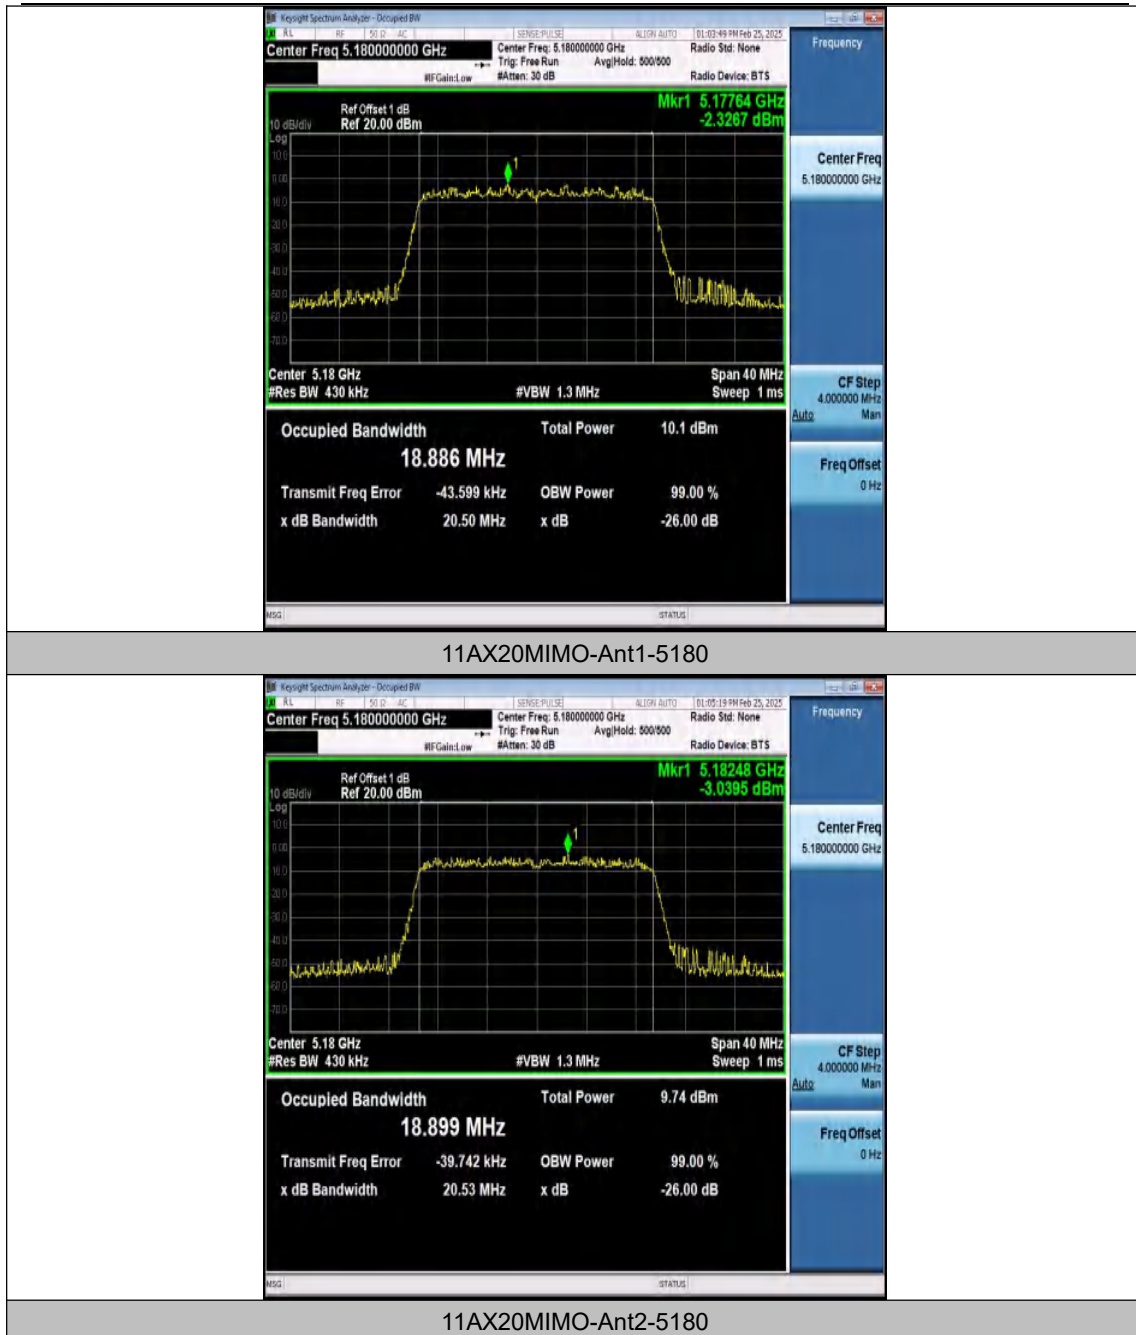


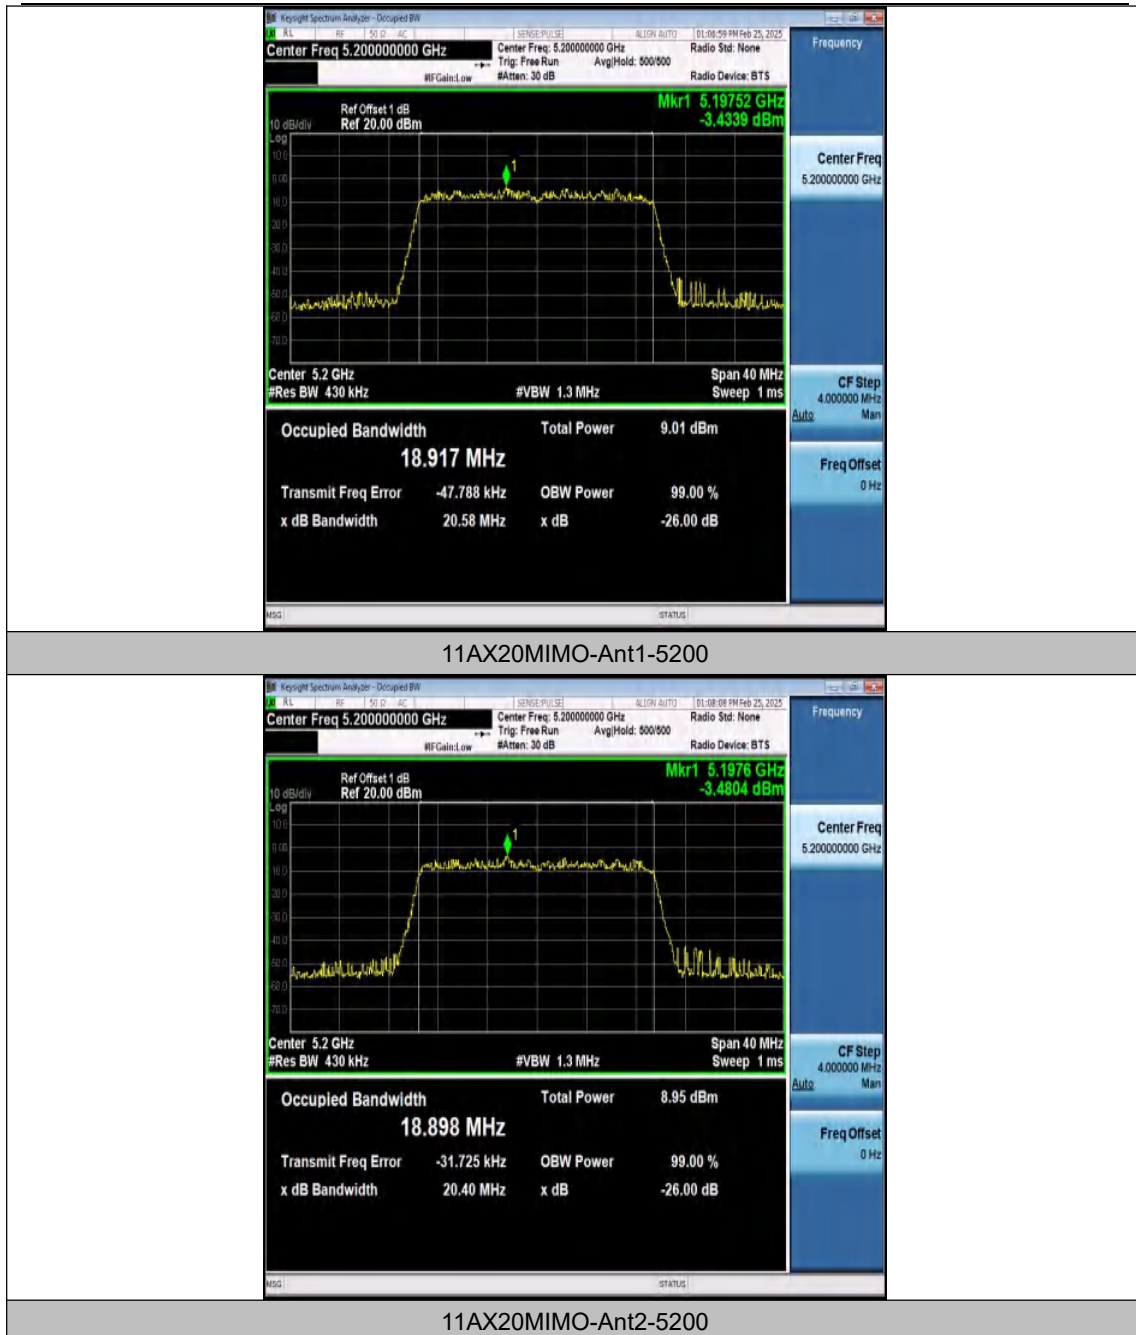


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

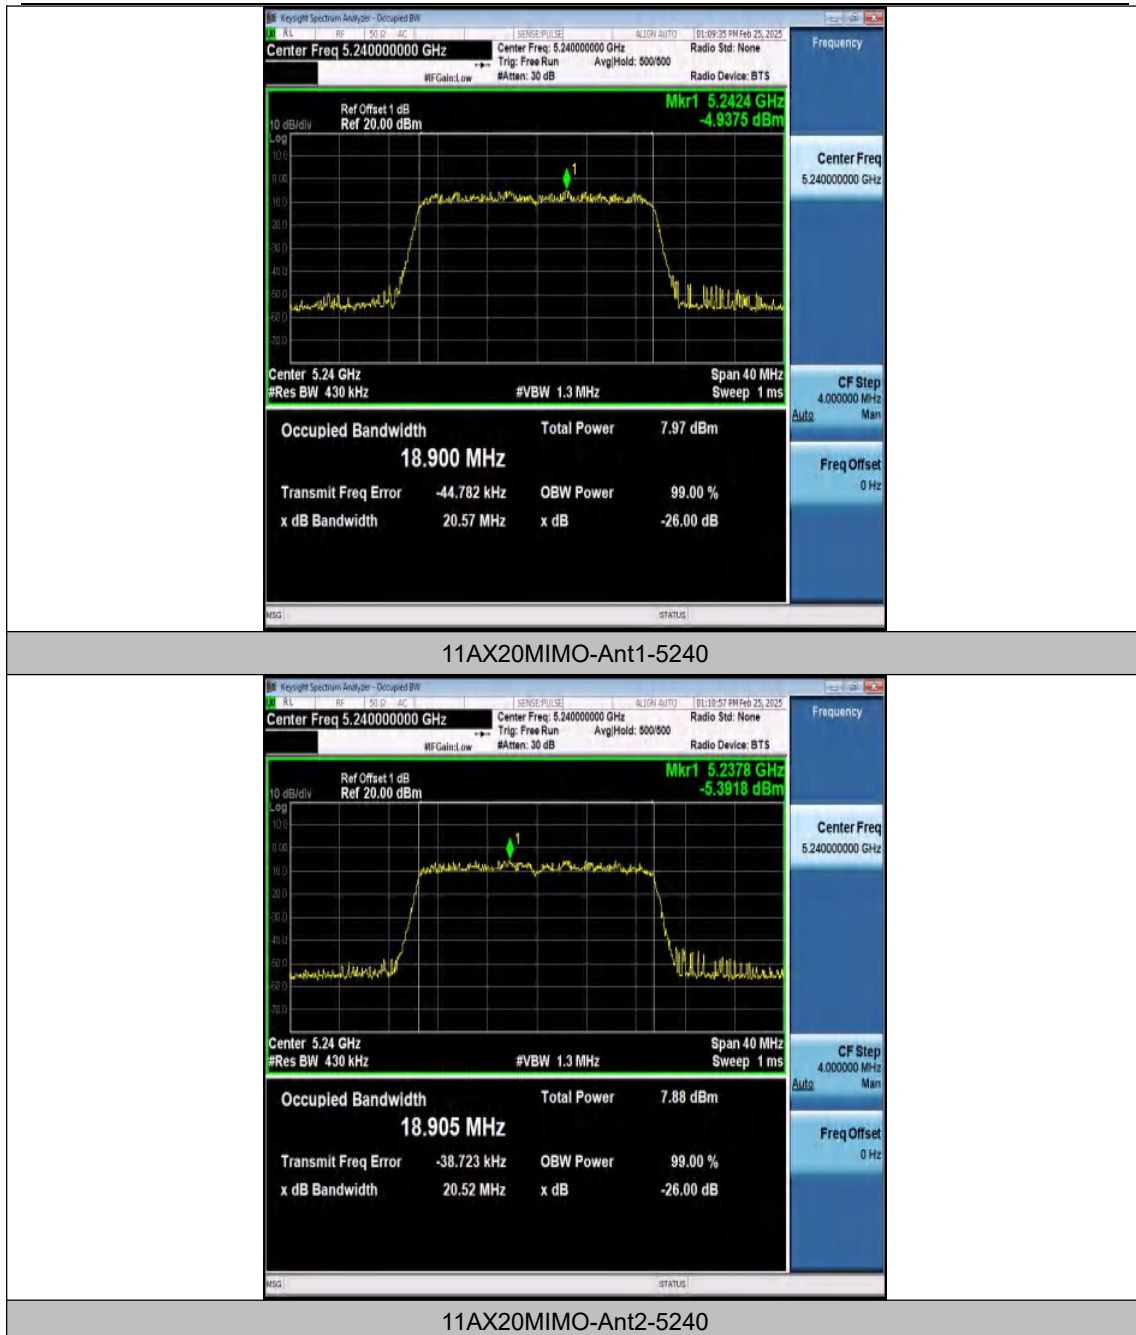


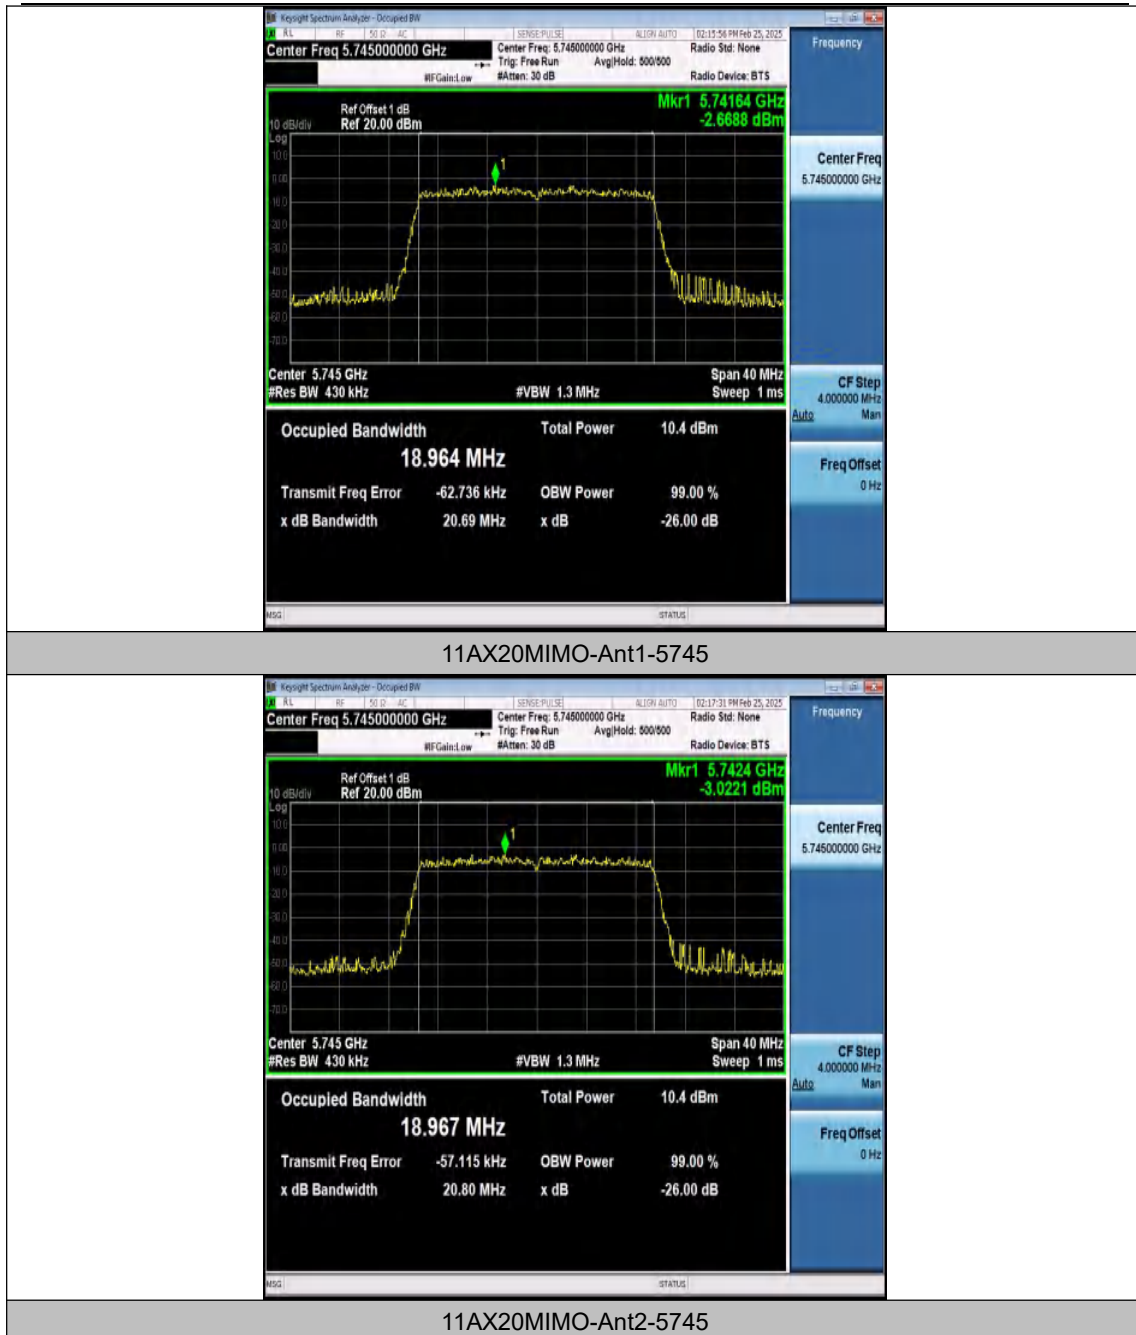

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

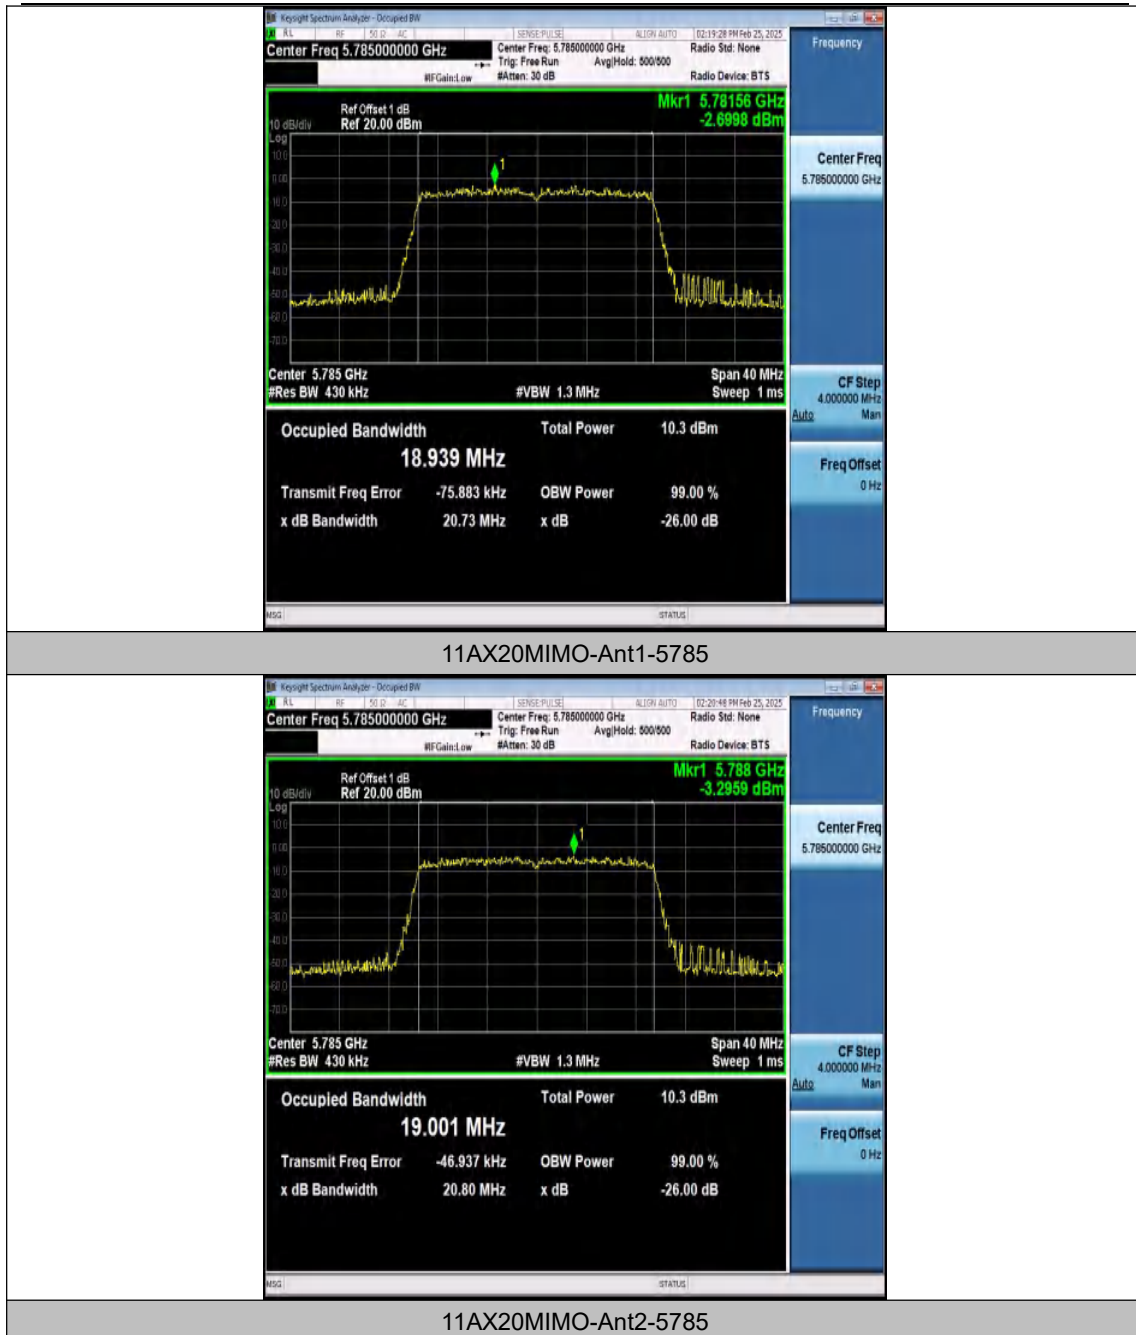

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

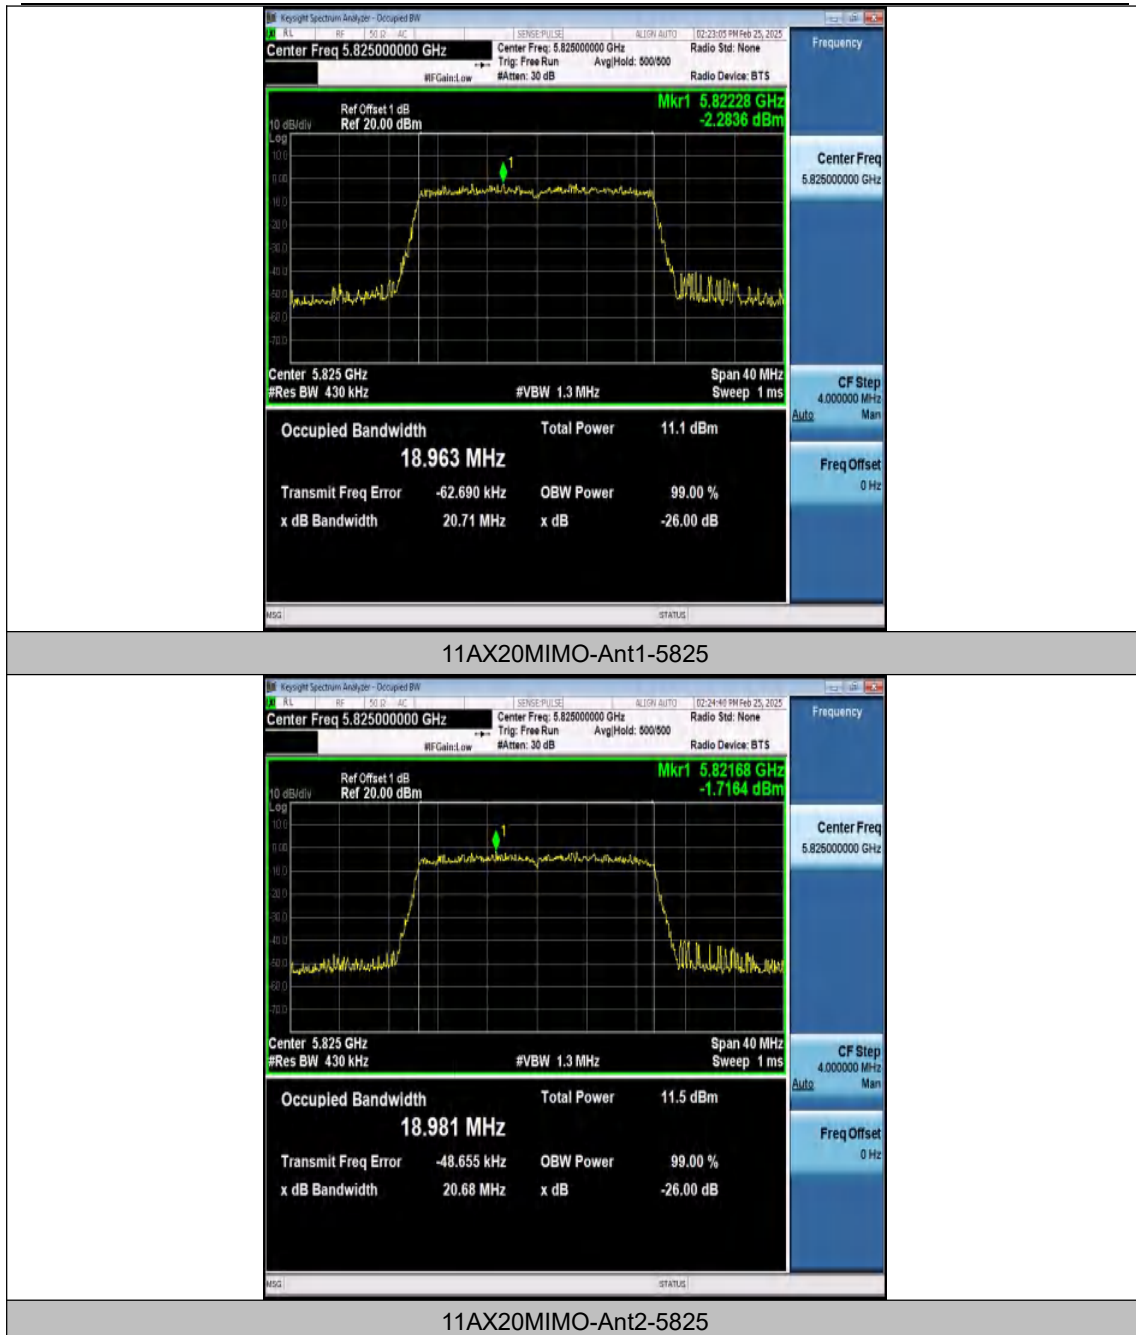

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

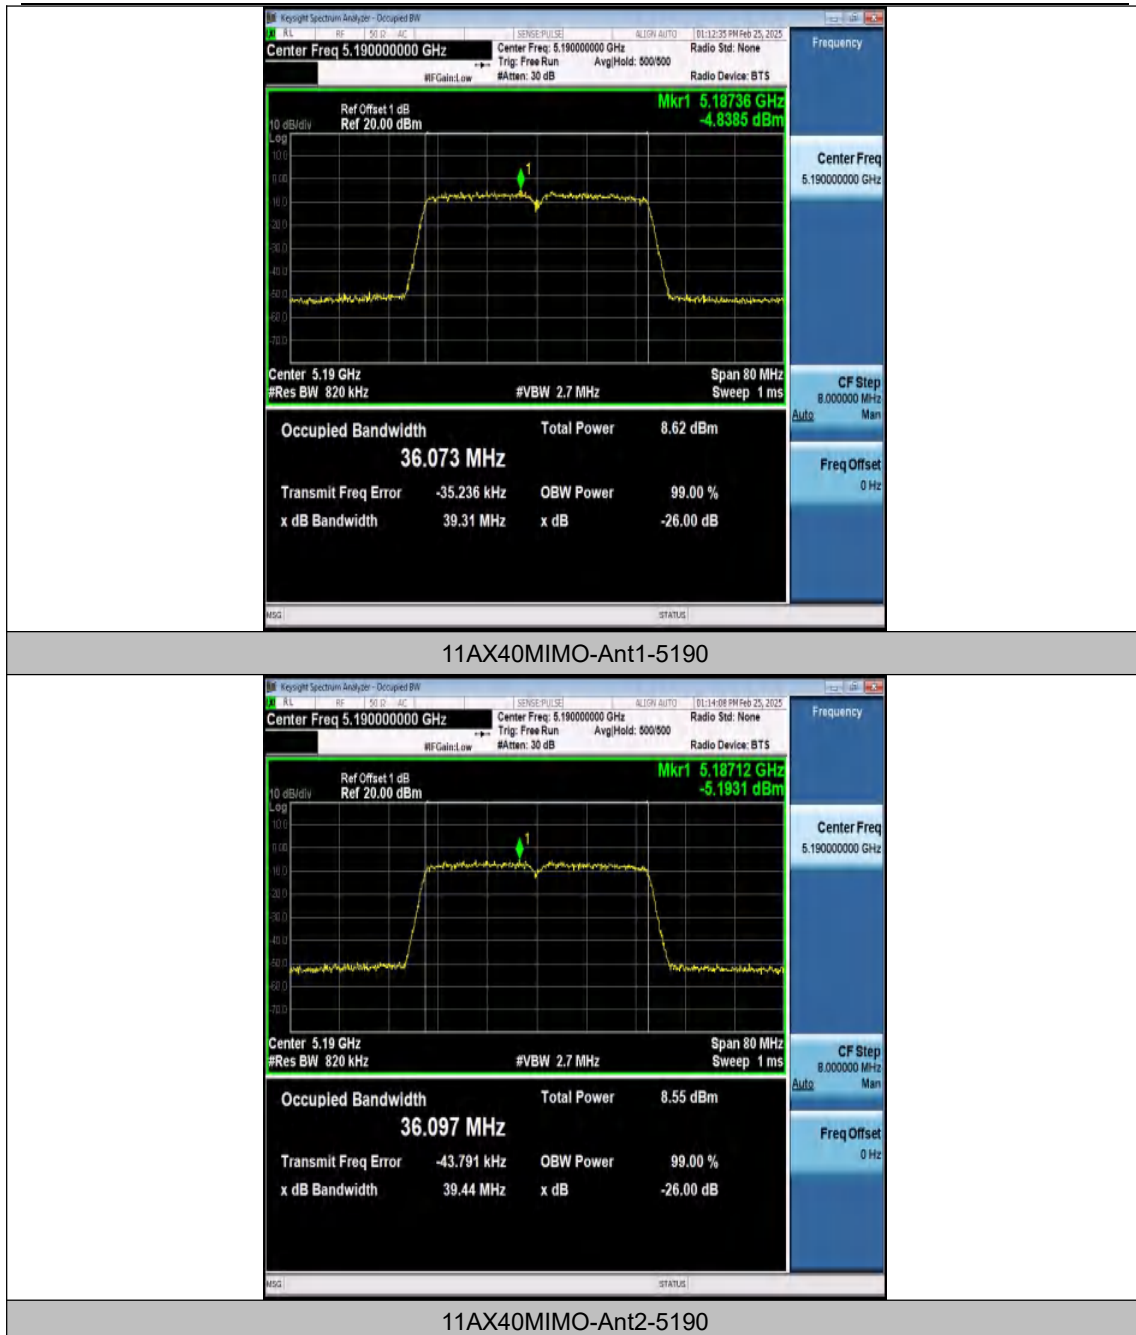

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

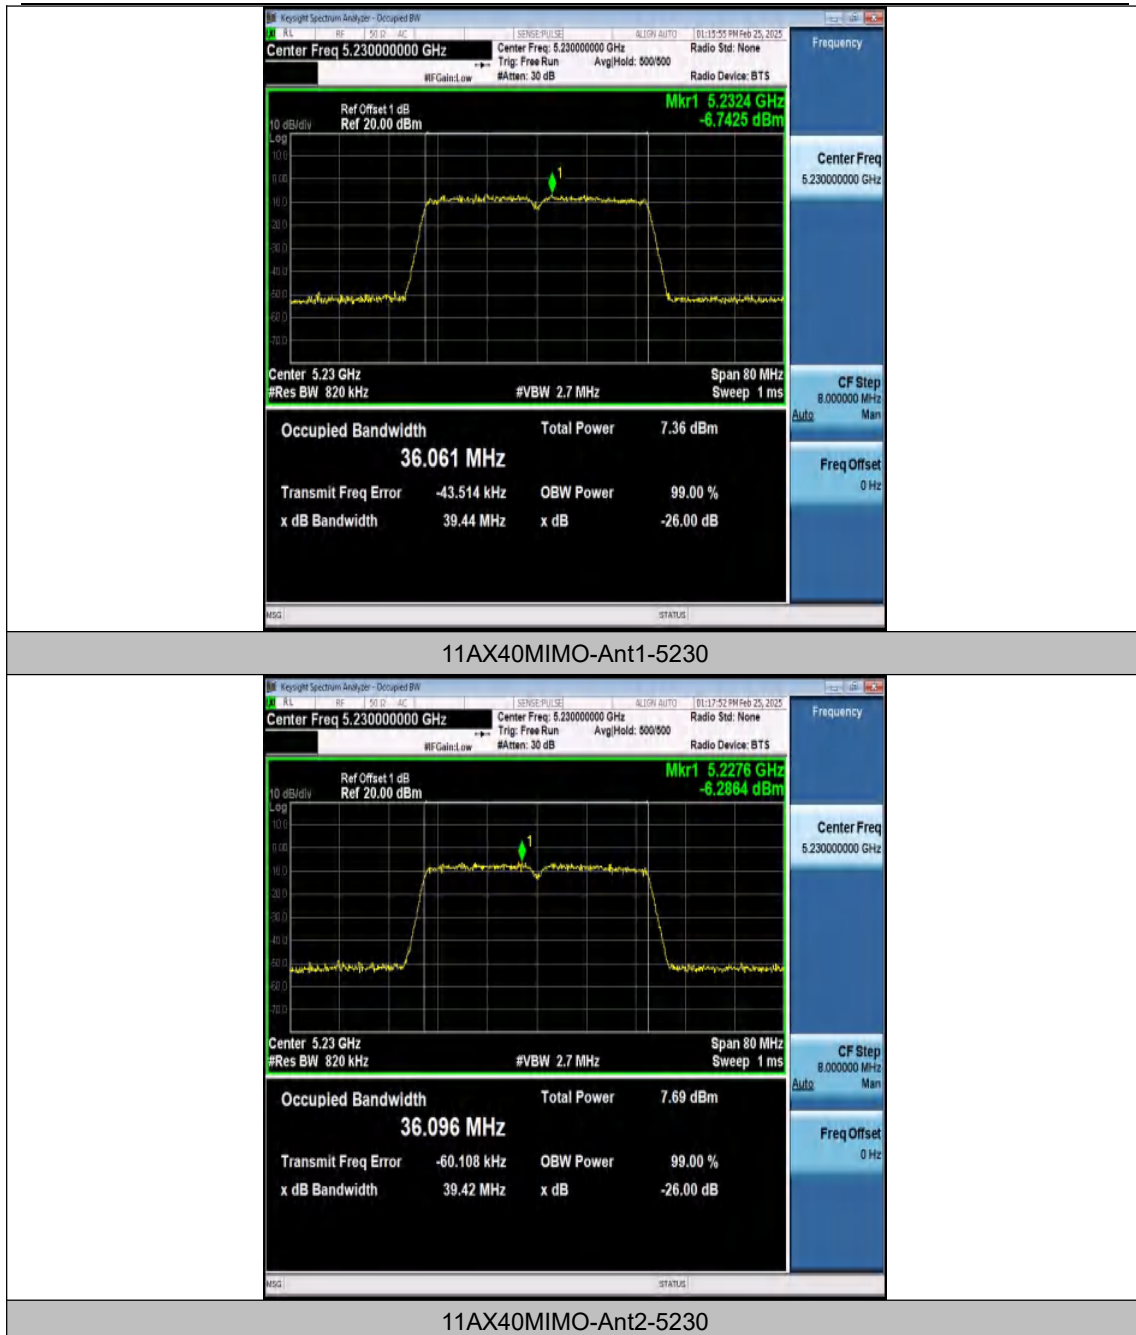

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline
400-003-0500
www.anbotech.com

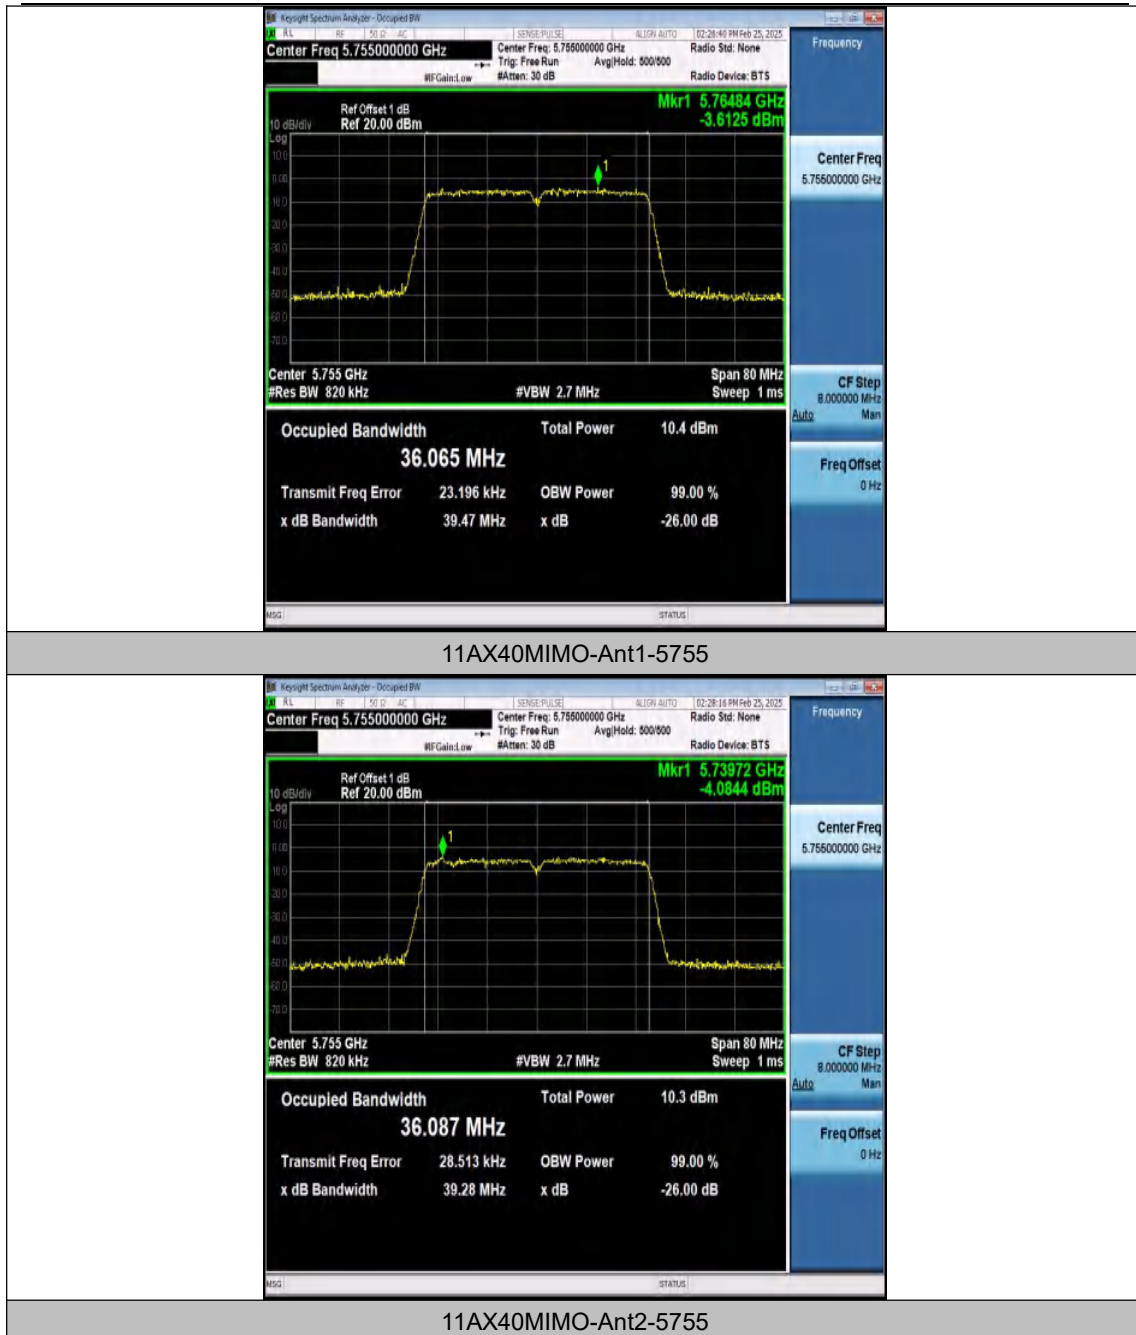



Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

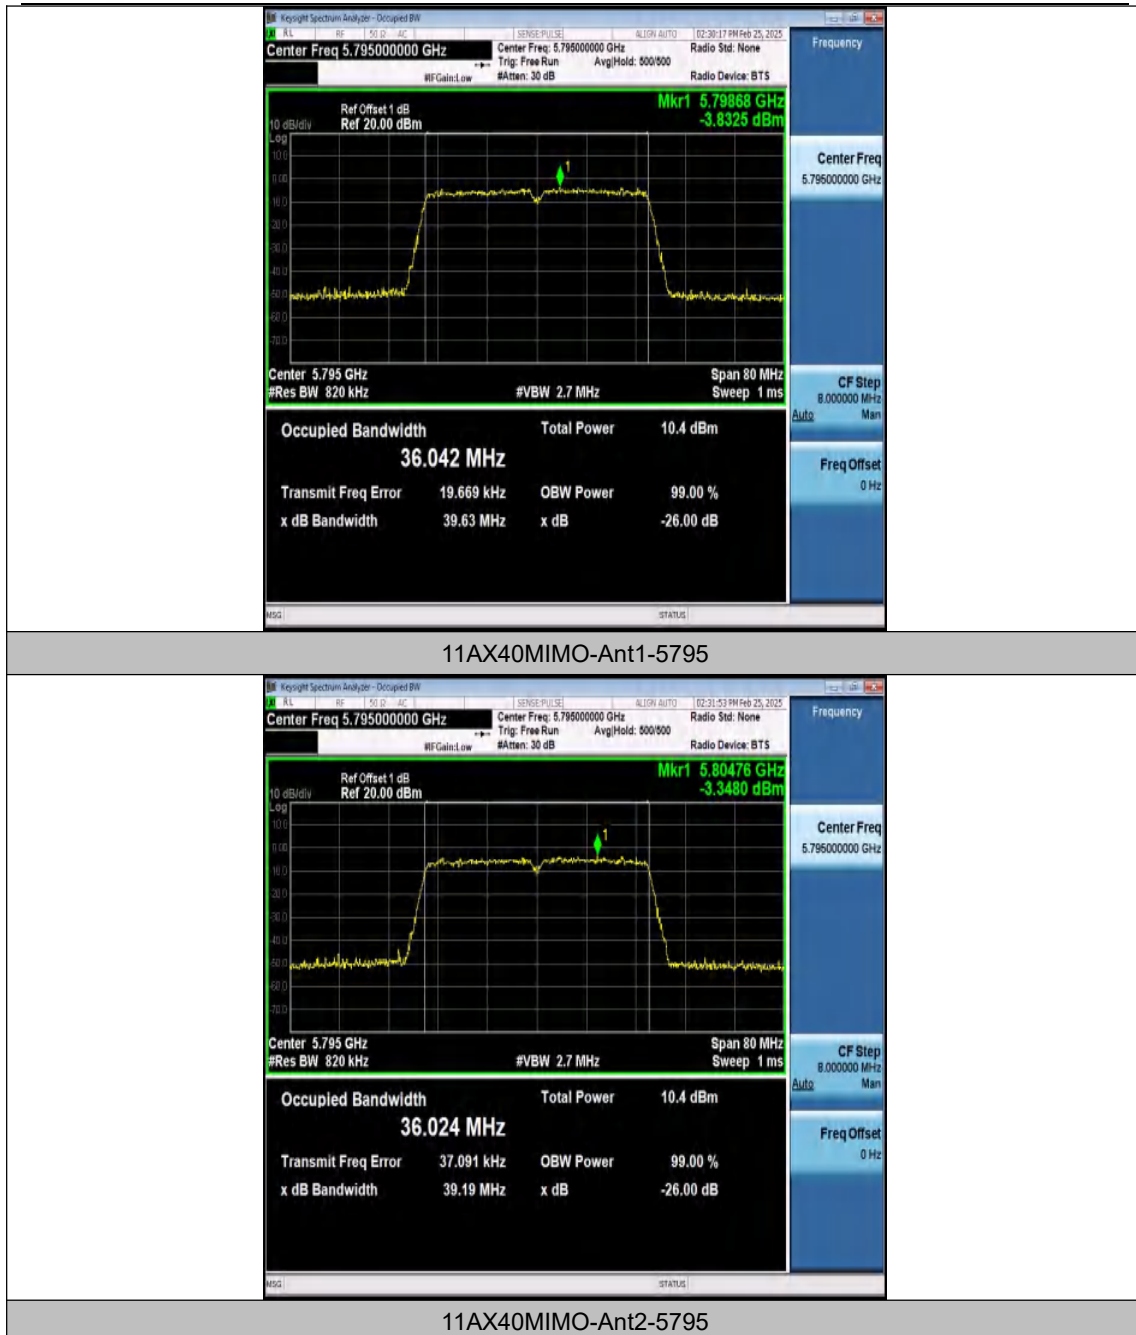

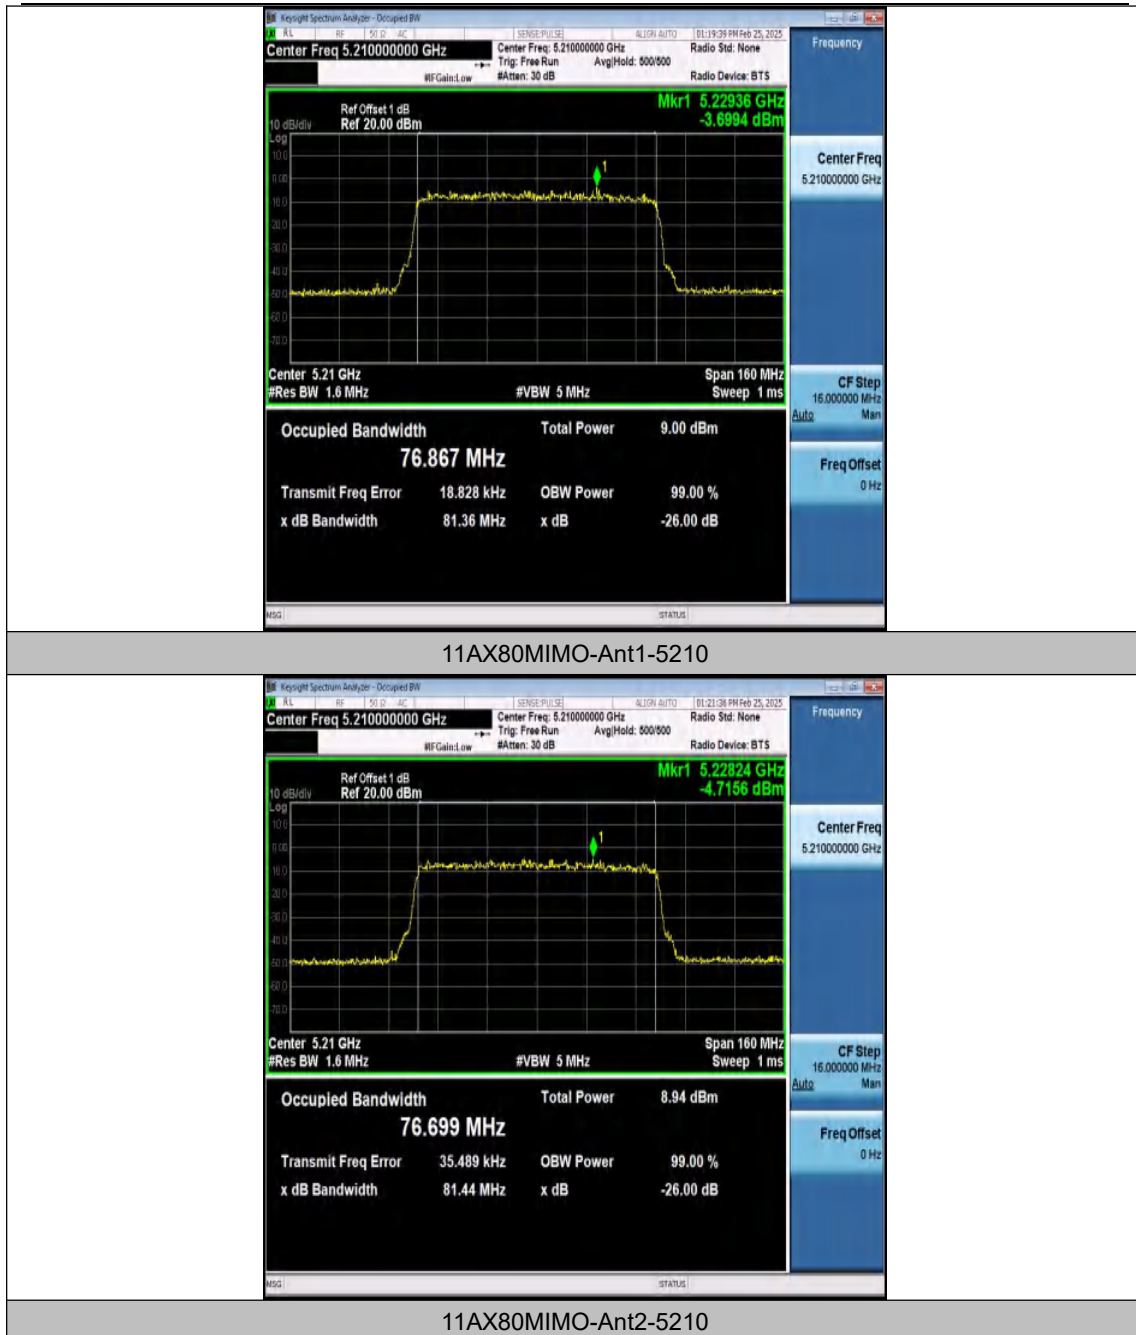

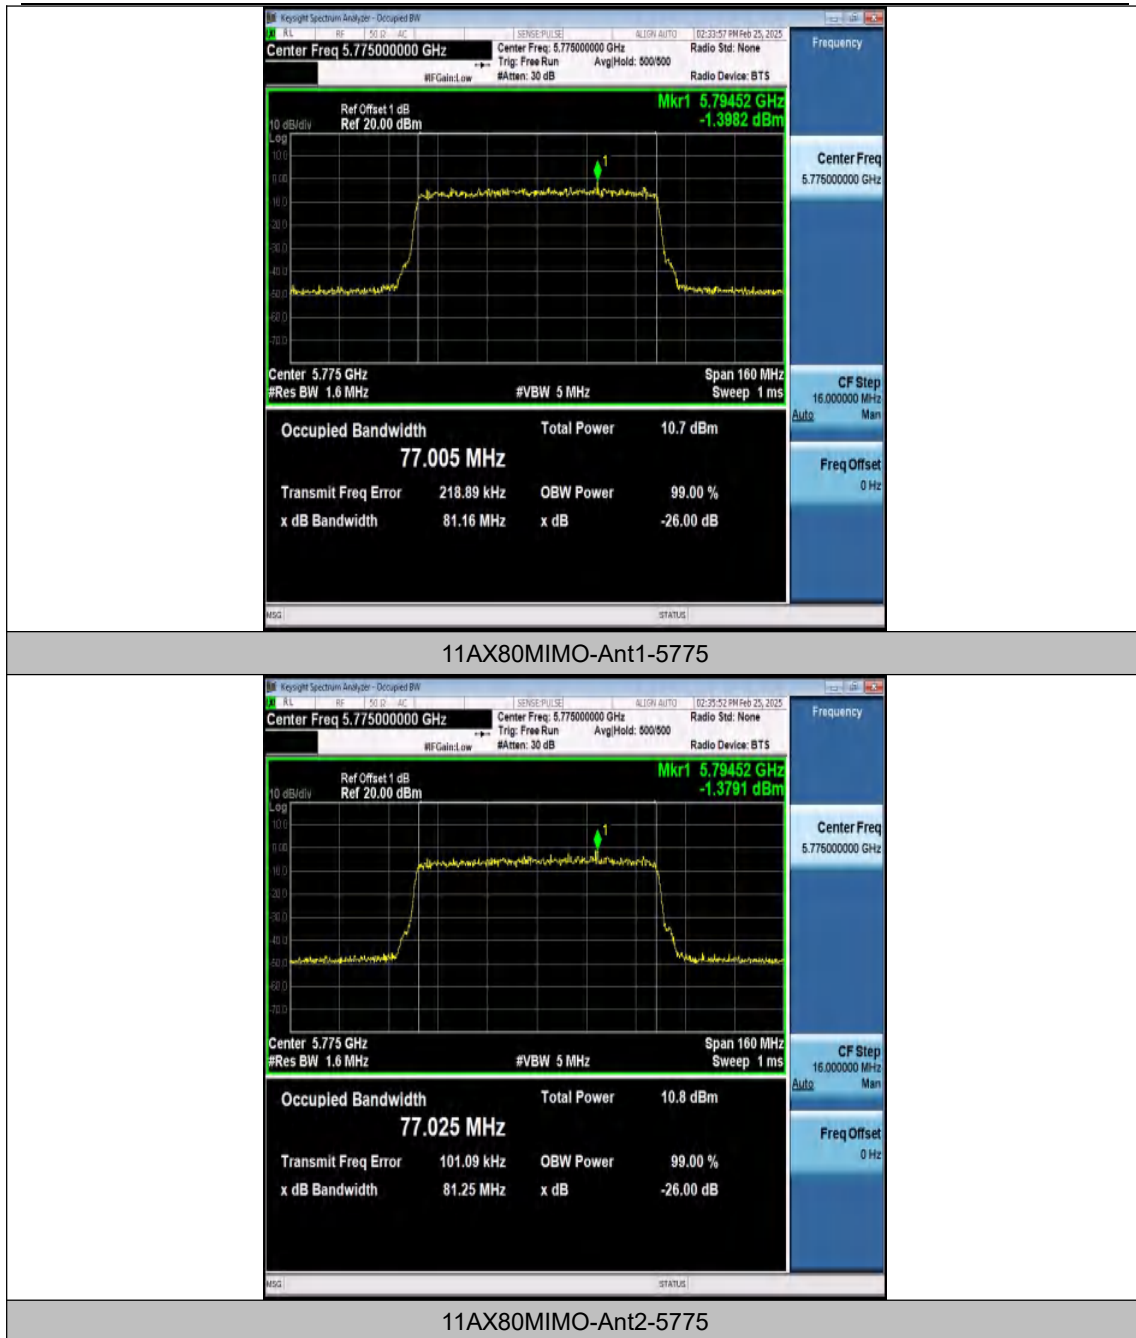

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com



Hotline
400-003-0500
www.anbotech.com

Appendix A3: Minimum 6dB Bandwidth

Test Result B4

Test Mode	Antenna	Frequency [MHz]	6db EBW [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5745	16.320	5736.760	5753.080	0.5	PASS
11A	Ant2	5745	16.320	5736.760	5753.080	0.5	PASS
11A	Ant1	5785	16.080	5777.000	5793.080	0.5	PASS
11A	Ant2	5785	16.320	5776.760	5793.080	0.5	PASS
11A	Ant1	5825	16.080	5817.000	5833.080	0.5	PASS
11A	Ant2	5825	16.320	5816.760	5833.080	0.5	PASS
11N20MIMO	Ant1	5745	17.040	5736.400	5753.440	0.5	PASS
11N20MIMO	Ant2	5745	17.560	5736.160	5753.720	0.5	PASS
11N20MIMO	Ant1	5785	17.320	5776.360	5793.680	0.5	PASS
11N20MIMO	Ant2	5785	16.840	5776.560	5793.400	0.5	PASS
11N20MIMO	Ant1	5825	17.280	5816.400	5833.680	0.5	PASS
11N20MIMO	Ant2	5825	17.360	5816.320	5833.680	0.5	PASS
11N40MIMO	Ant1	5755	35.760	5737.160	5772.920	0.5	PASS
11N40MIMO	Ant2	5755	36.160	5736.840	5773.000	0.5	PASS
11N40MIMO	Ant1	5795	36.320	5776.840	5813.160	0.5	PASS
11N40MIMO	Ant2	5795	33.840	5778.840	5812.680	0.5	PASS
11AC20MIMO	Ant1	5745	17.400	5736.280	5753.680	0.5	PASS
11AC20MIMO	Ant2	5745	17.000	5736.320	5753.320	0.5	PASS
11AC20MIMO	Ant1	5785	17.360	5776.320	5793.680	0.5	PASS
11AC20MIMO	Ant2	5785	17.120	5776.320	5793.440	0.5	PASS
11AC20MIMO	Ant1	5825	17.400	5816.280	5833.680	0.5	PASS
11AC20MIMO	Ant2	5825	17.600	5816.120	5833.720	0.5	PASS
11AC40MIMO	Ant1	5755	35.520	5737.160	5772.680	0.5	PASS
11AC40MIMO	Ant2	5755	35.600	5737.000	5772.600	0.5	PASS
11AC40MIMO	Ant1	5795	35.280	5777.400	5812.680	0.5	PASS
11AC40MIMO	Ant2	5795	36.160	5777.000	5813.160	0.5	PASS
11AC80MIMO	Ant1	5775	75.360	5737.400	5812.760	0.5	PASS
11AC80MIMO	Ant2	5775	74.560	5737.400	5811.960	0.5	PASS
11AX20MIMO	Ant1	5745	18.880	5735.480	5754.360	0.5	PASS
11AX20MIMO	Ant2	5745	18.160	5735.680	5753.840	0.5	PASS
11AX20MIMO	Ant1	5785	18.040	5776.000	5794.040	0.5	PASS
11AX20MIMO	Ant2	5785	17.520	5776.280	5793.800	0.5	PASS
11AX20MIMO	Ant1	5825	17.520	5816.040	5833.560	0.5	PASS
11AX20MIMO	Ant2	5825	18.200	5815.520	5833.720	0.5	PASS
11AX40MIMO	Ant1	5755	35.840	5737.000	5772.840	0.5	PASS
11AX40MIMO	Ant2	5755	36.000	5737.000	5773.000	0.5	PASS
11AX40MIMO	Ant1	5795	35.920	5777.000	5812.920	0.5	PASS

11AX40MIMO	Ant2	5795	35.200	5777.560	5812.760	0.5	PASS
11AX80MIMO	Ant1	5775	76.320	5736.440	5812.760	0.5	PASS
11AX80MIMO	Ant2	5775	75.040	5737.400	5812.440	0.5	PASS


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com


Test Graphs B4

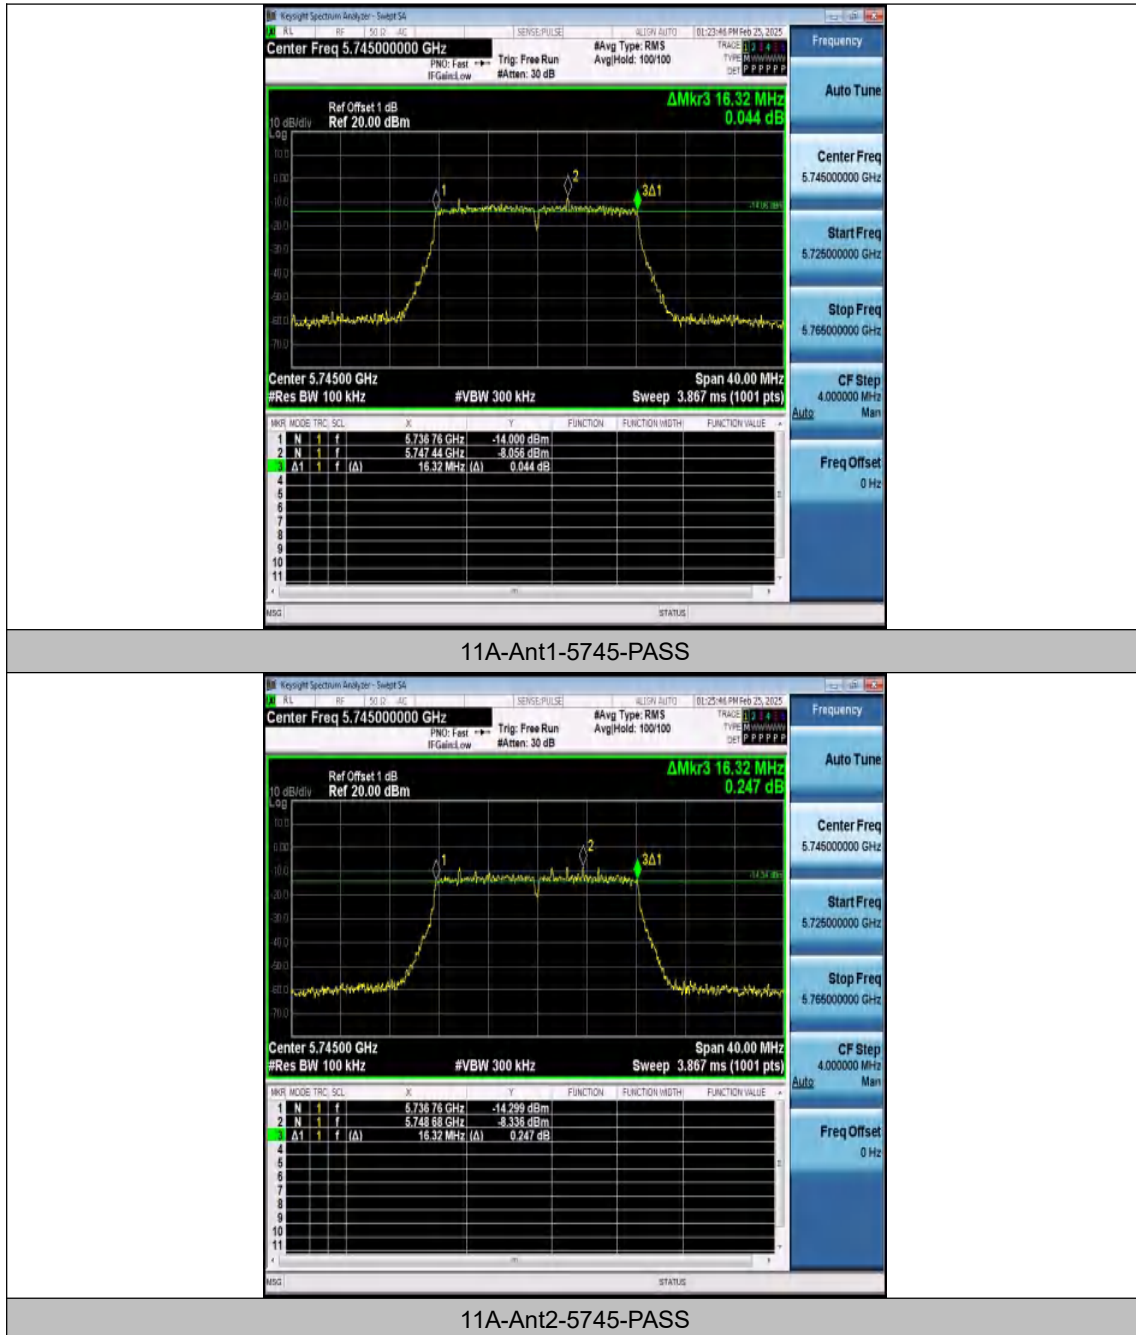


Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com

Hotline
400-003-0500
www.anbotech.com

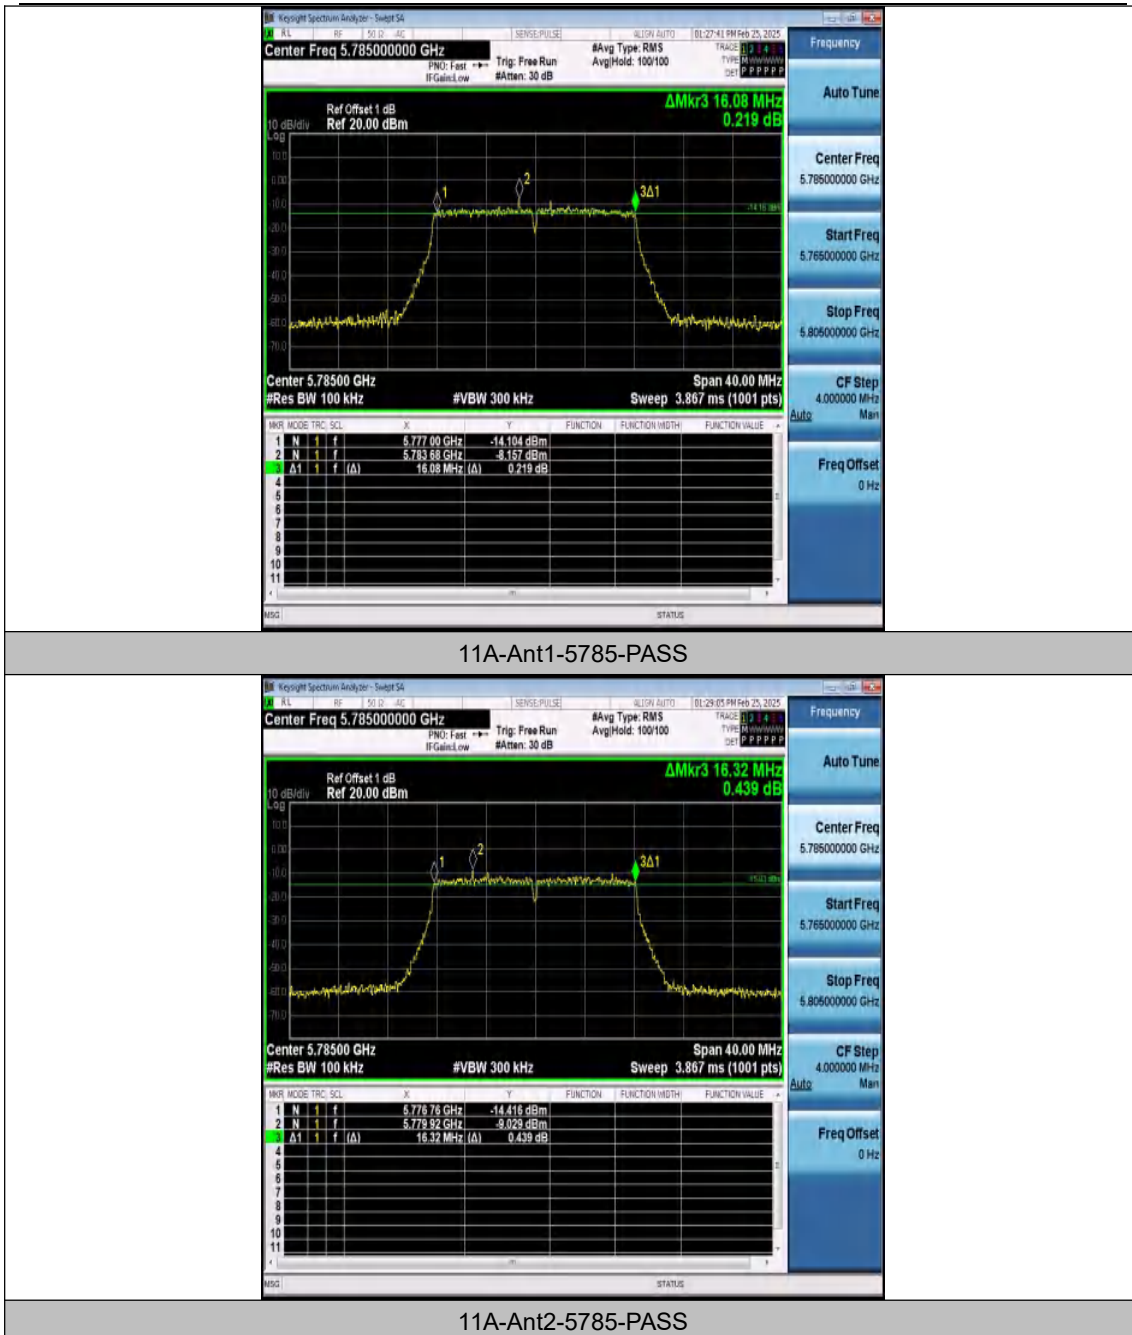


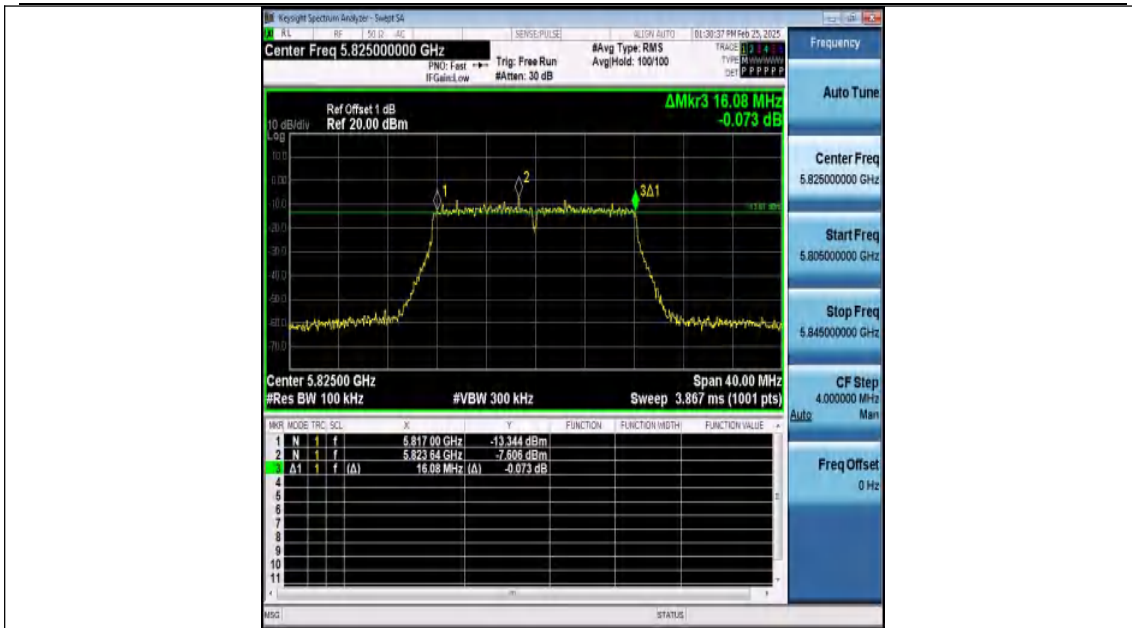



11A-Ant1-5825-PASS

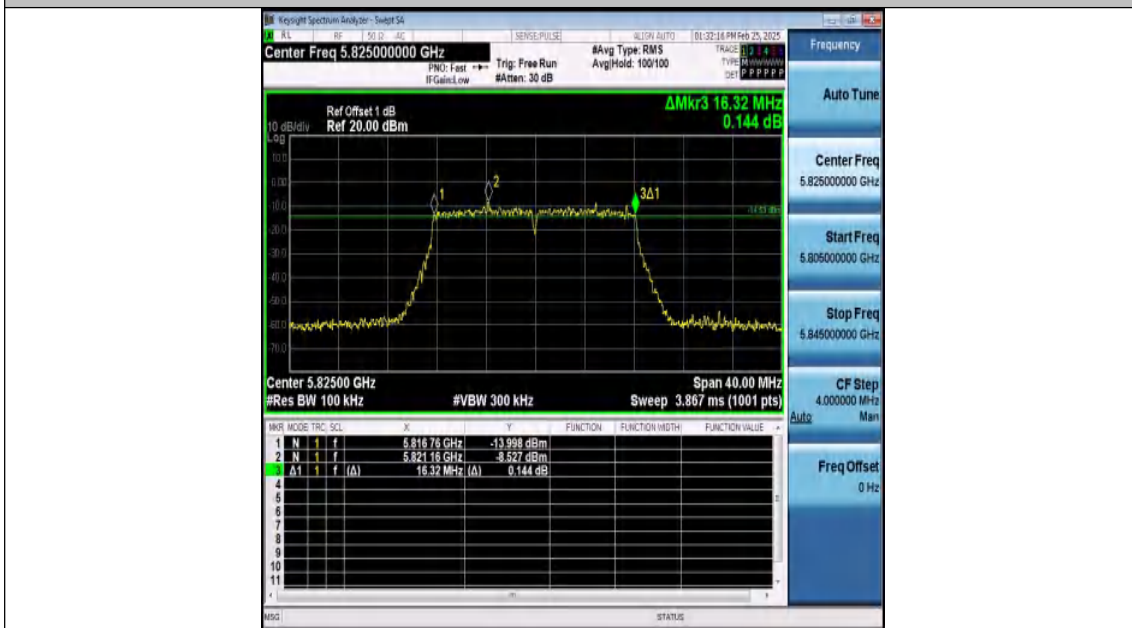


11A-Ant2-5825-PASS

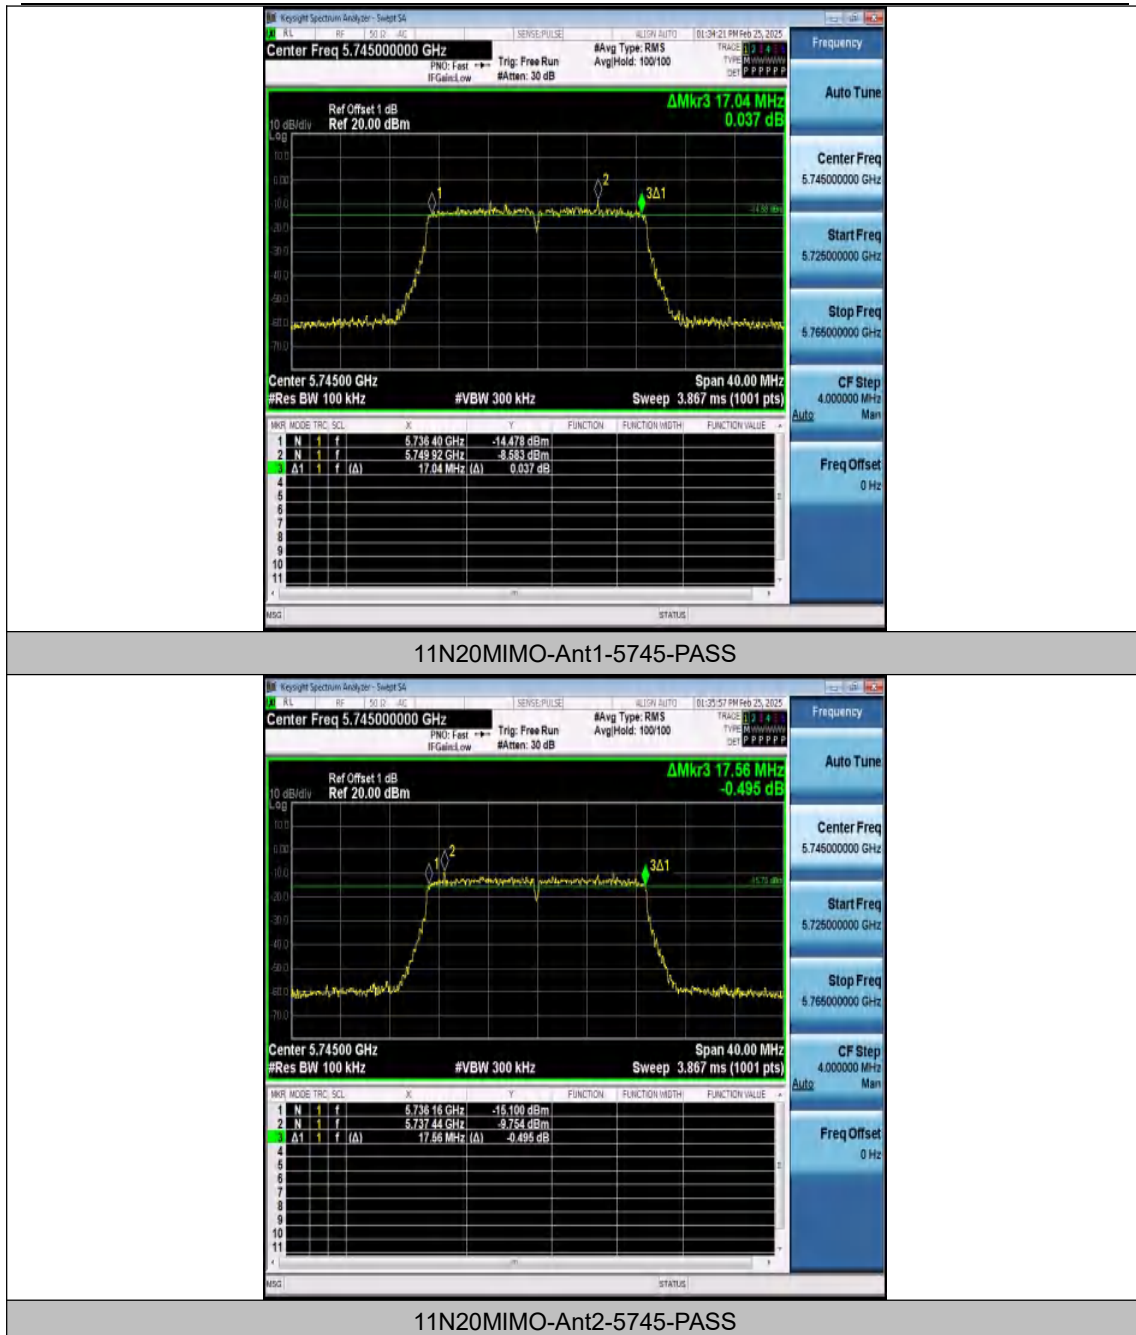


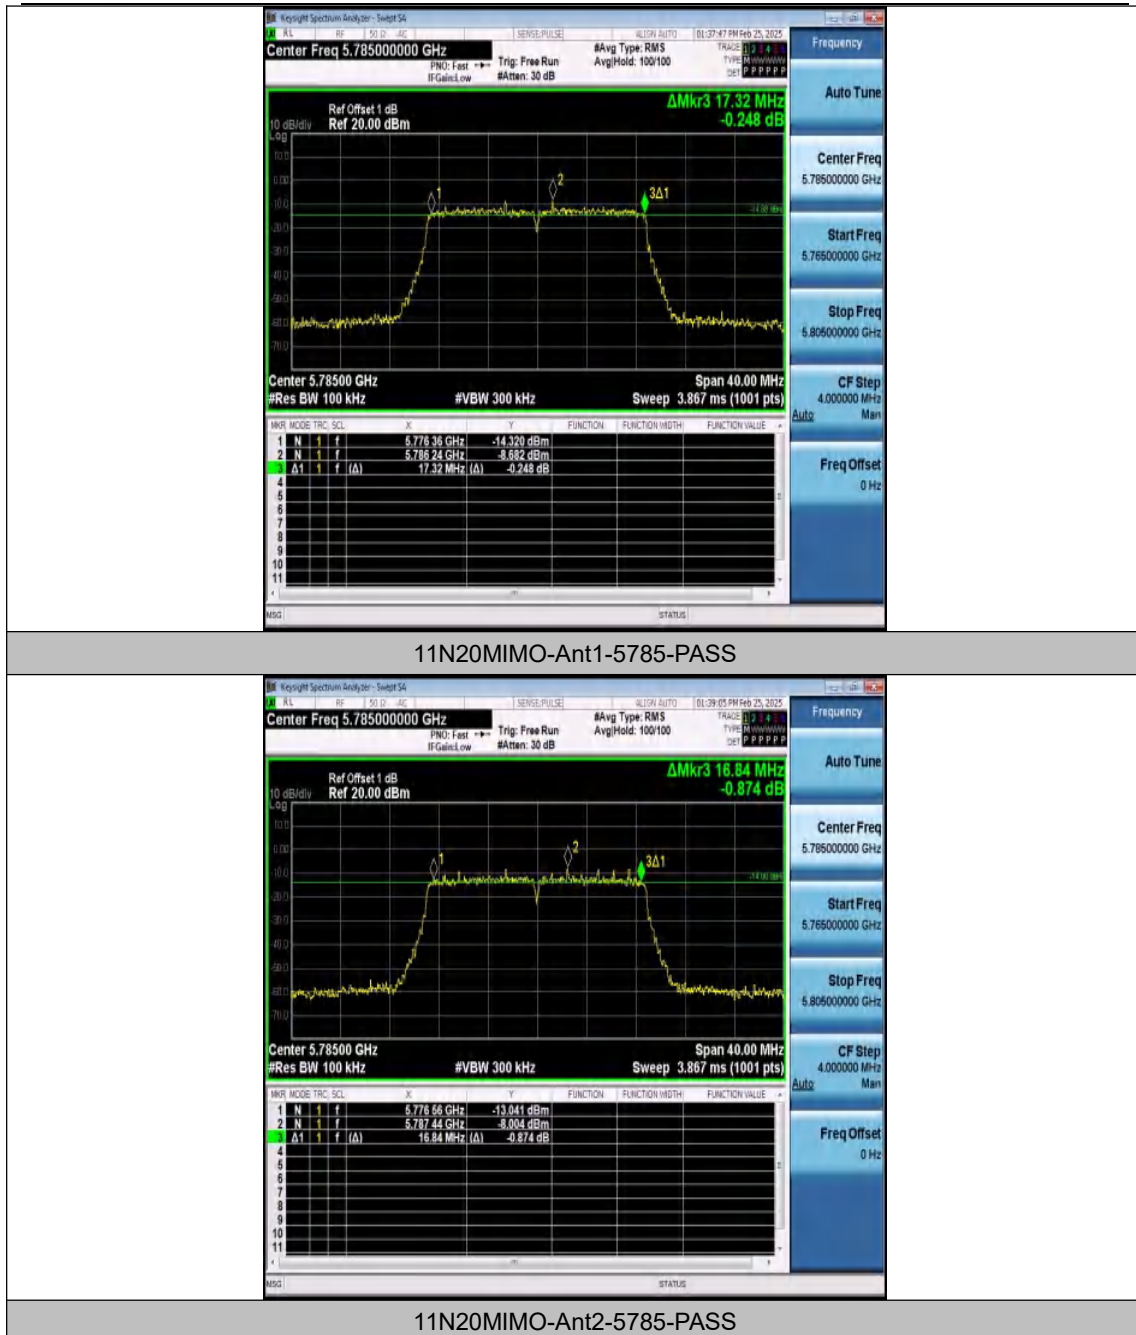

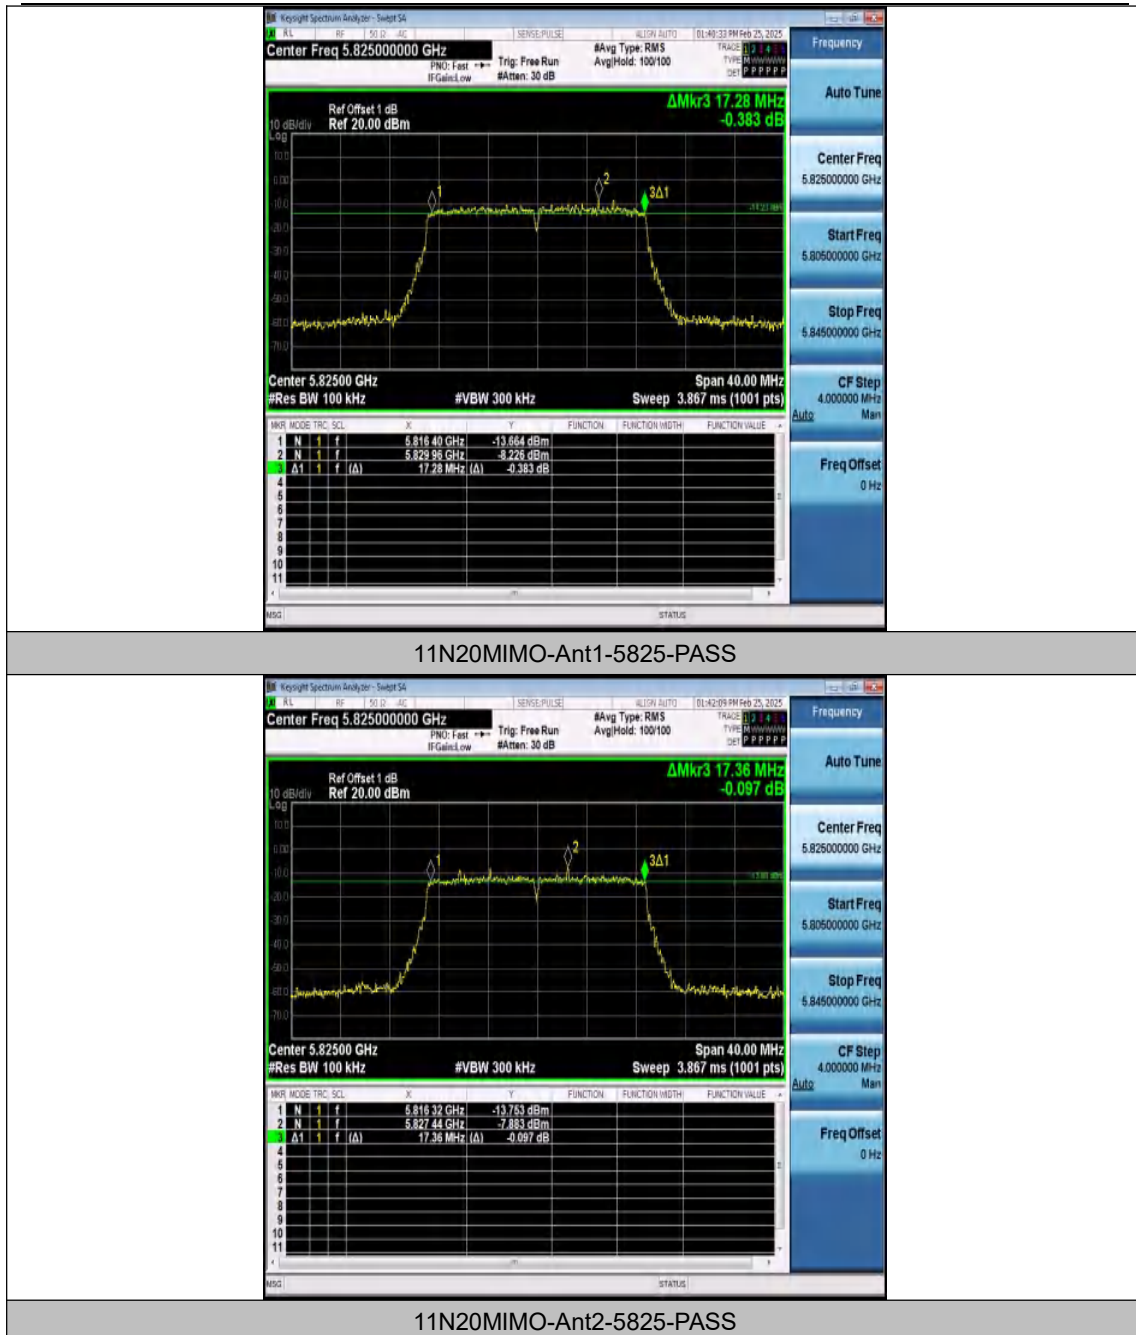


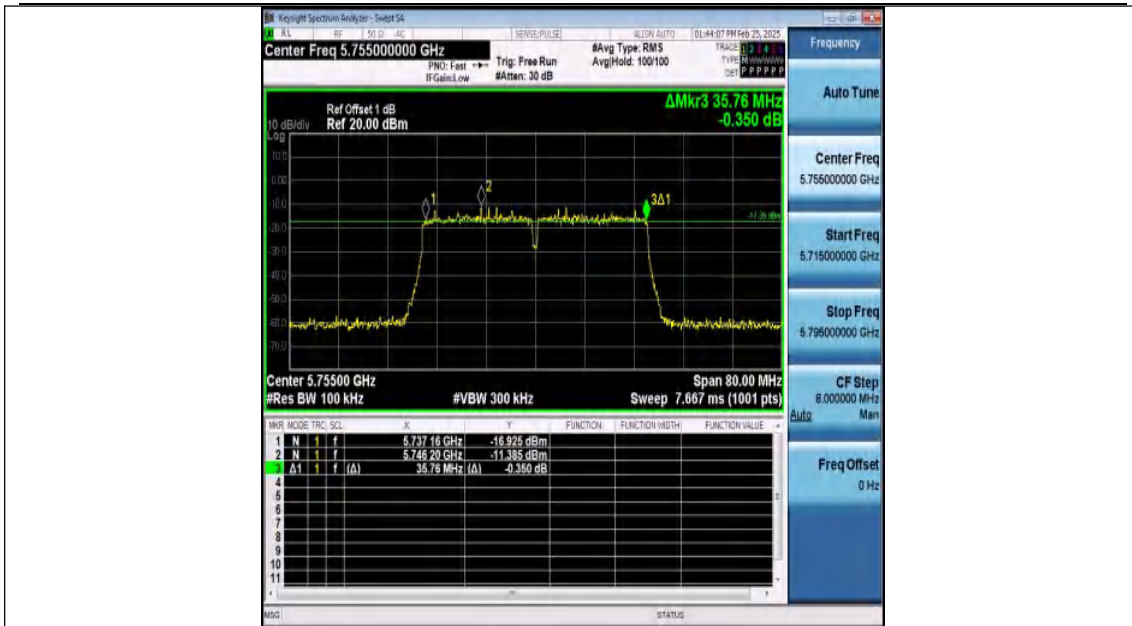


11N40MIMO-Ant1-5755-PASS

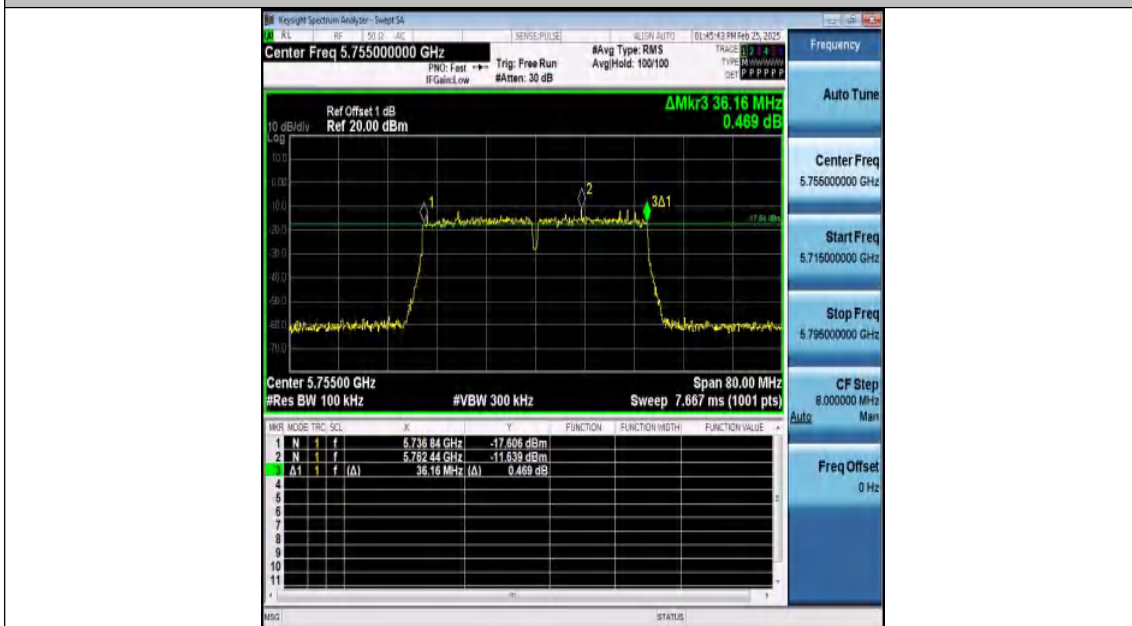


11N40MIMO-Ant2-5755-PASS

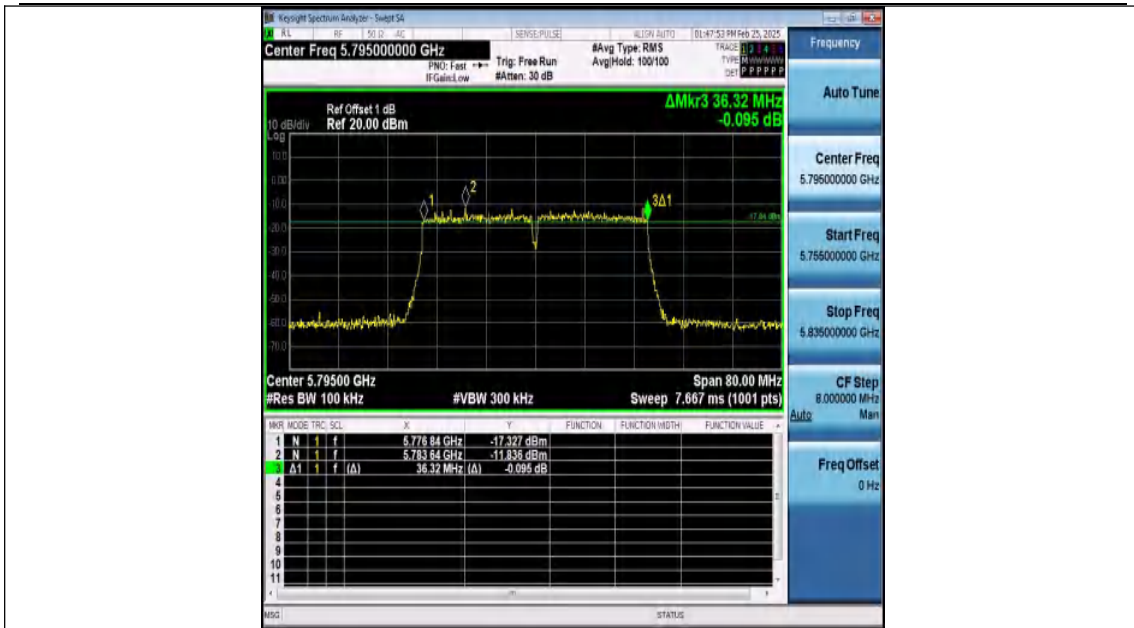



11N40MIMO-Ant1-5795-PASS

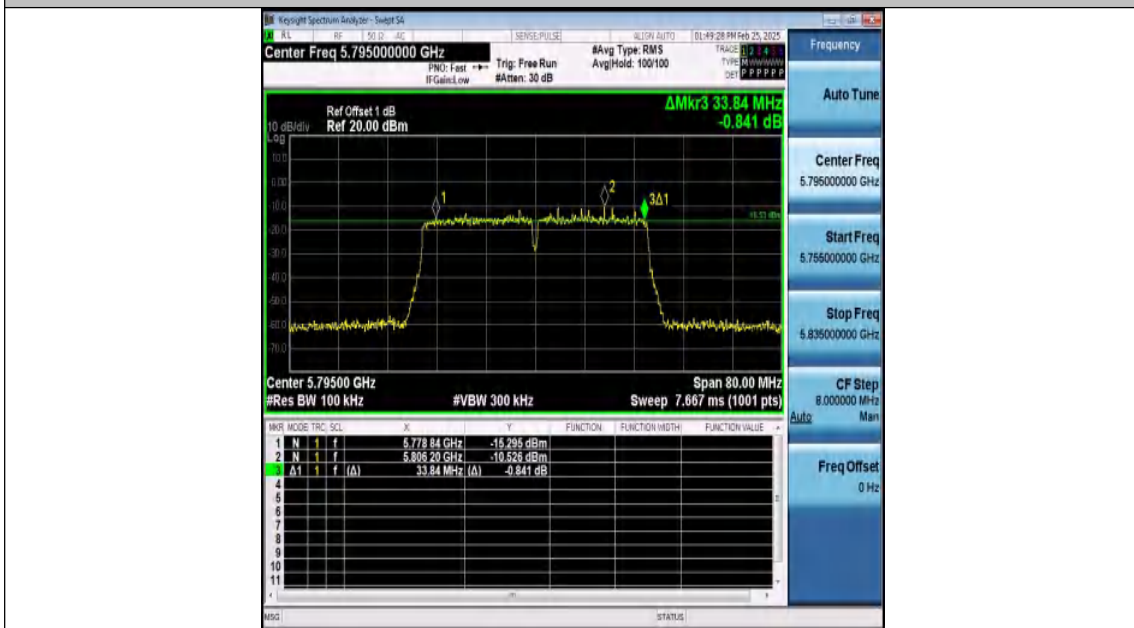



11N40MIMO-Ant2-5795-PASS

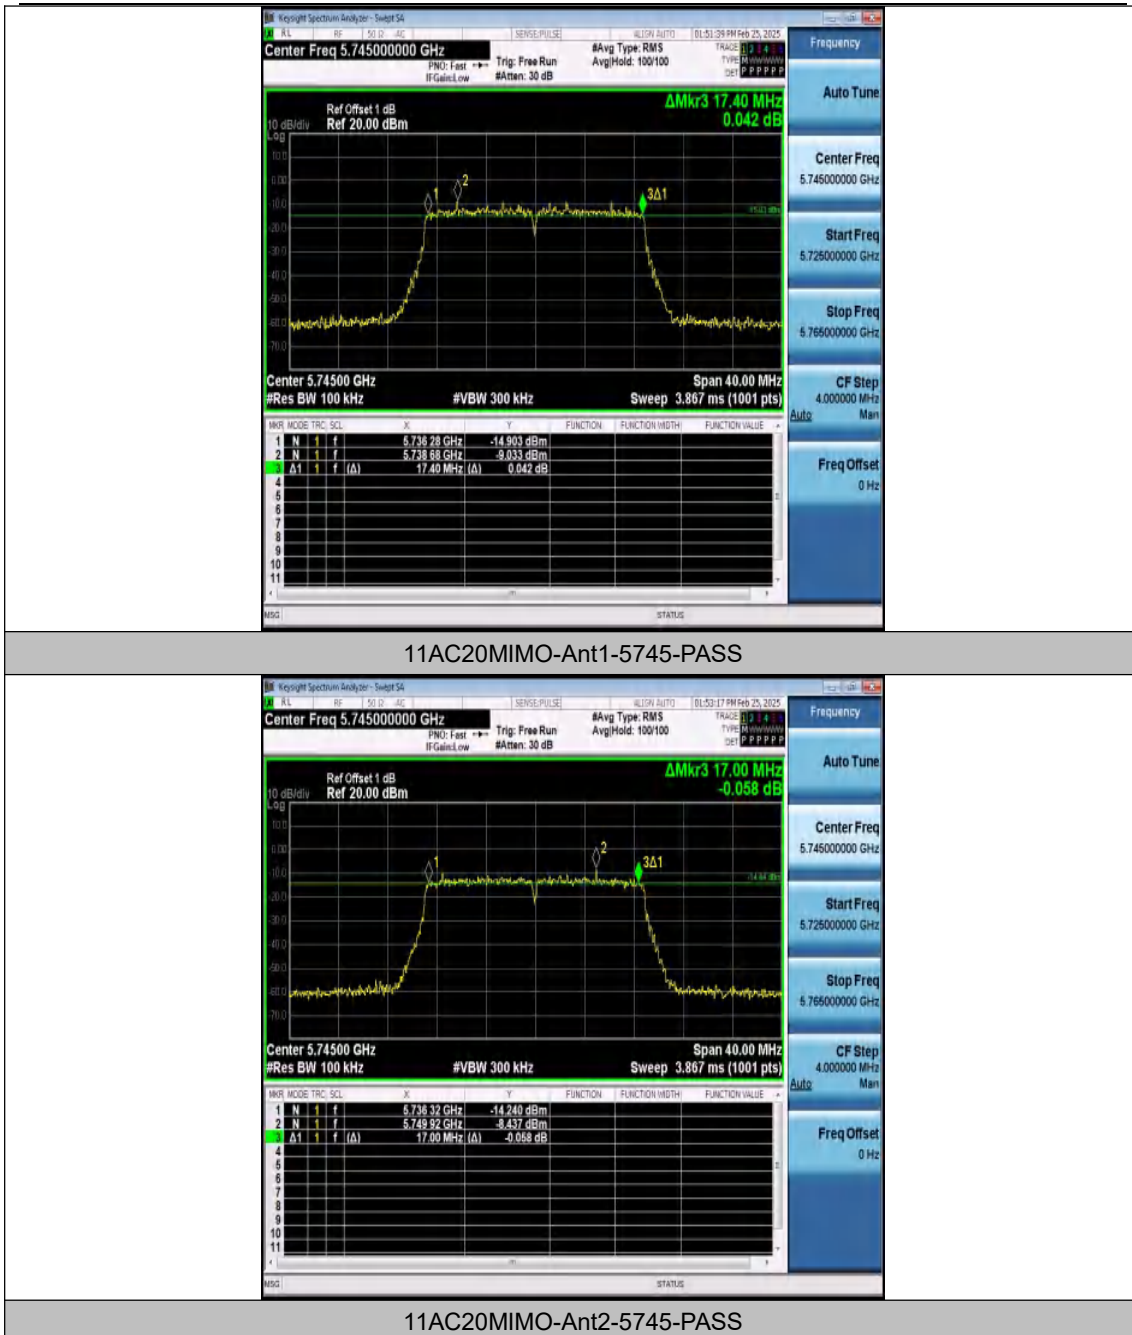


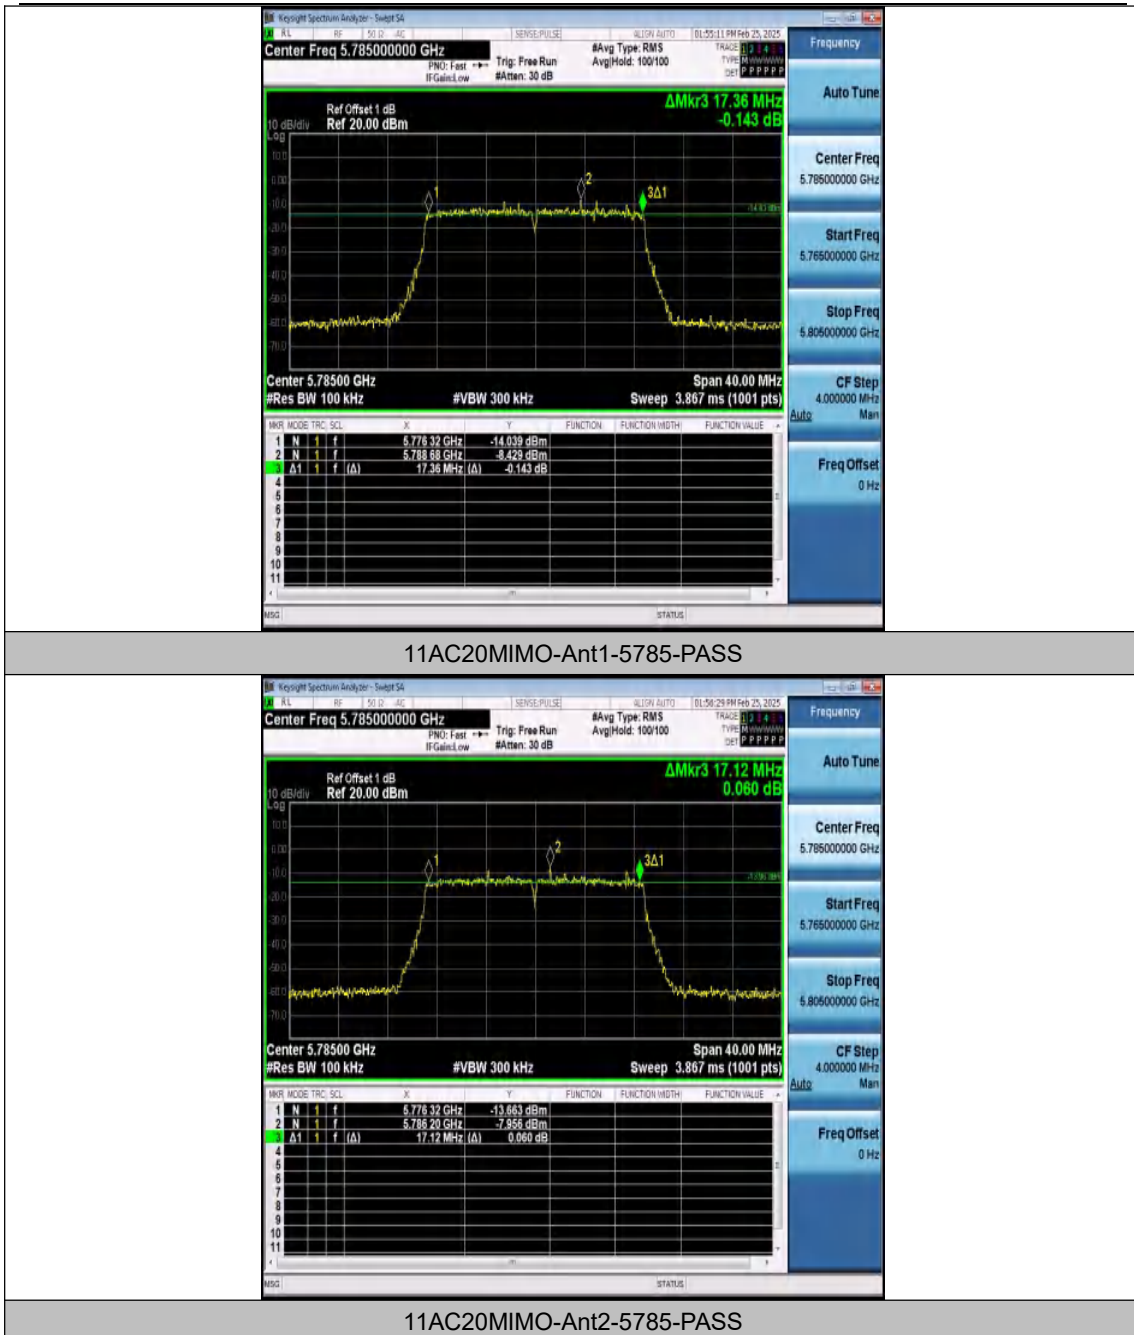


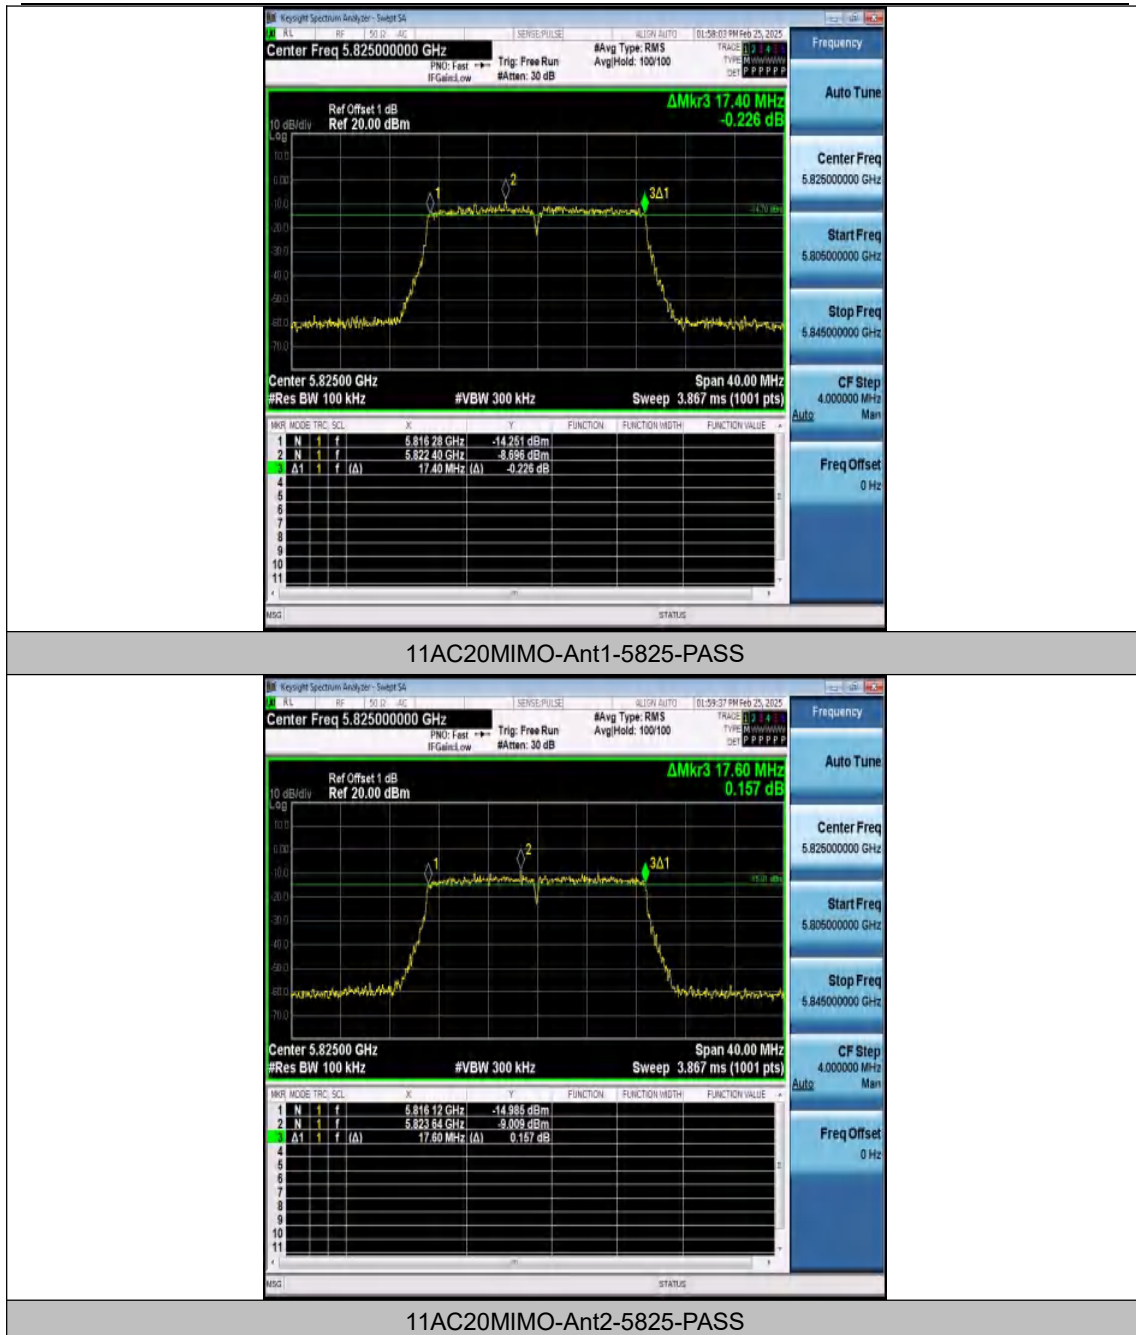


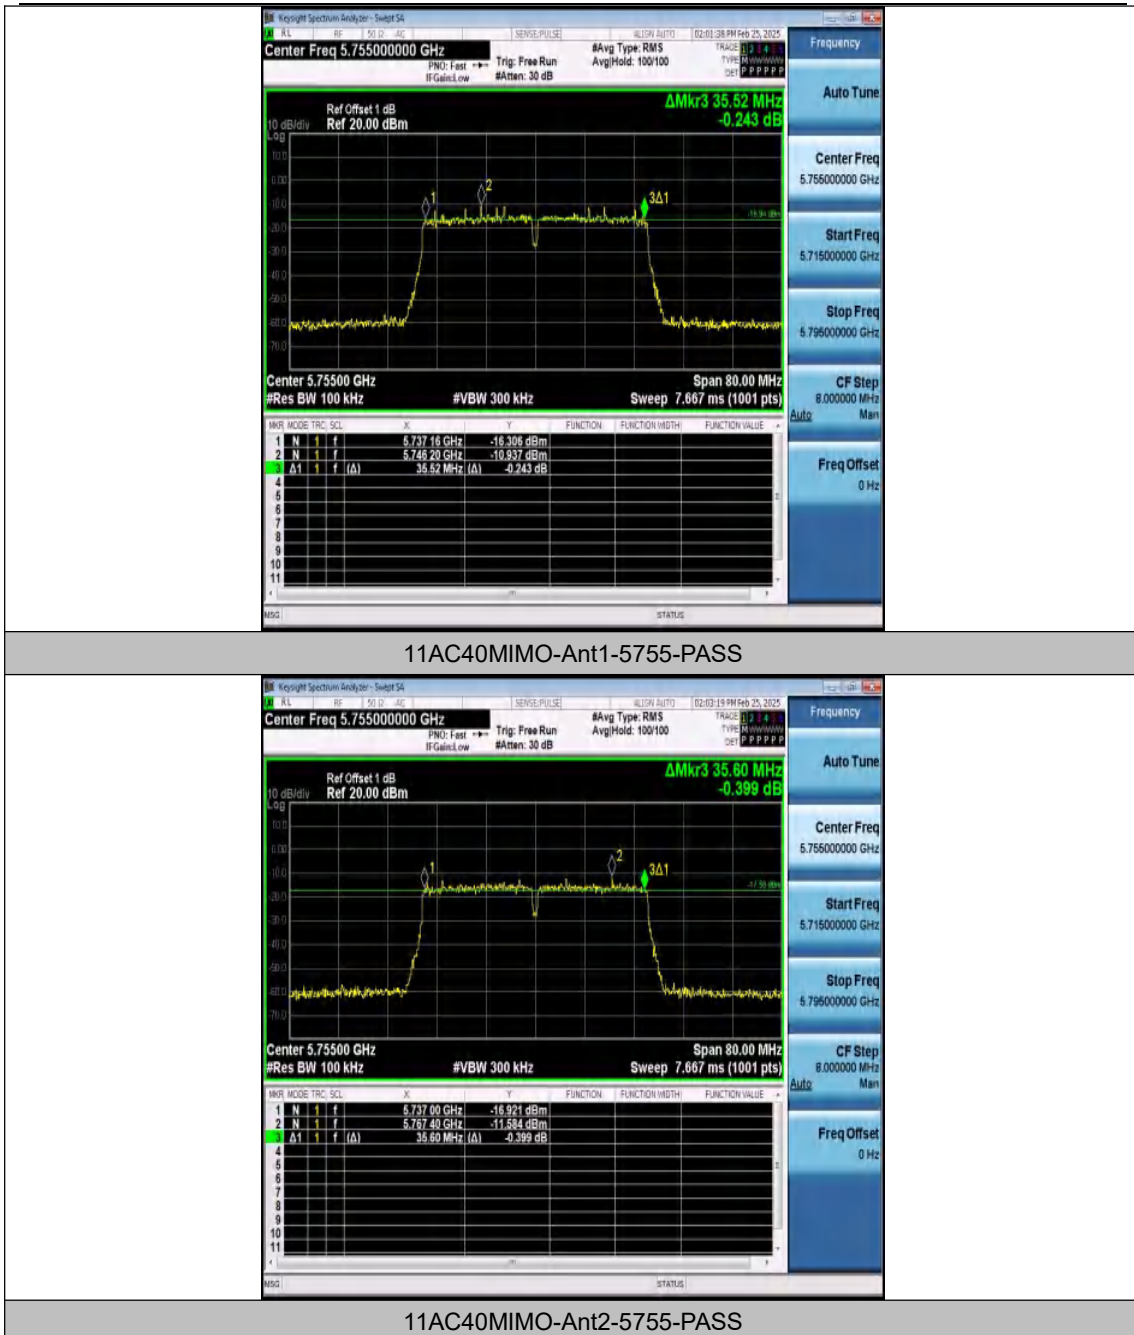


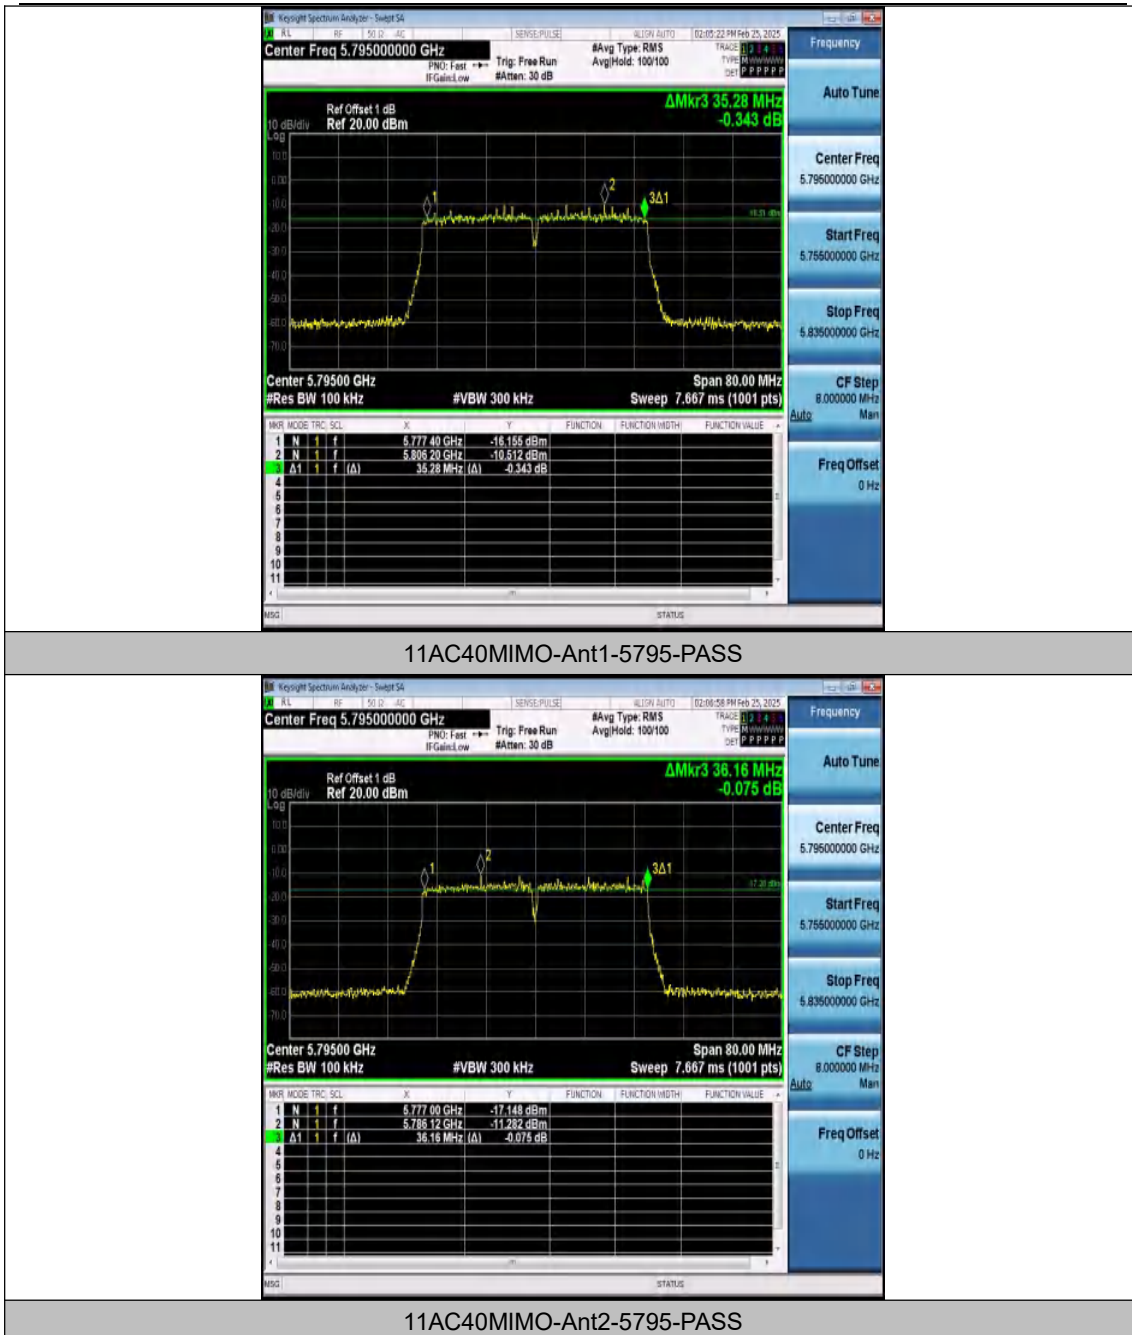


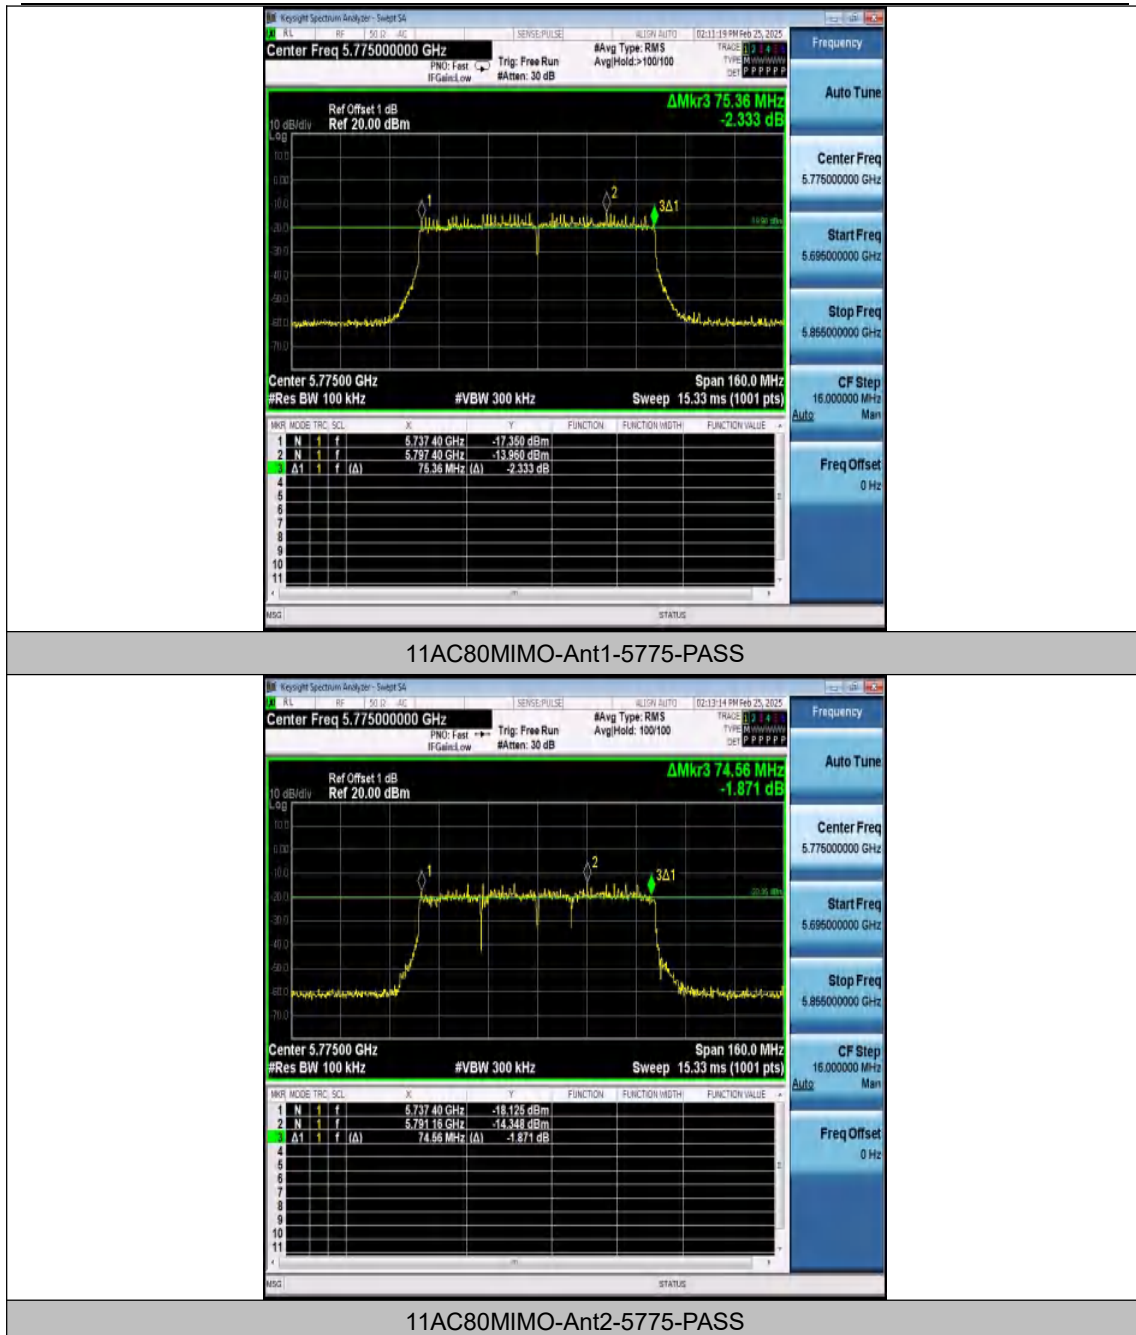


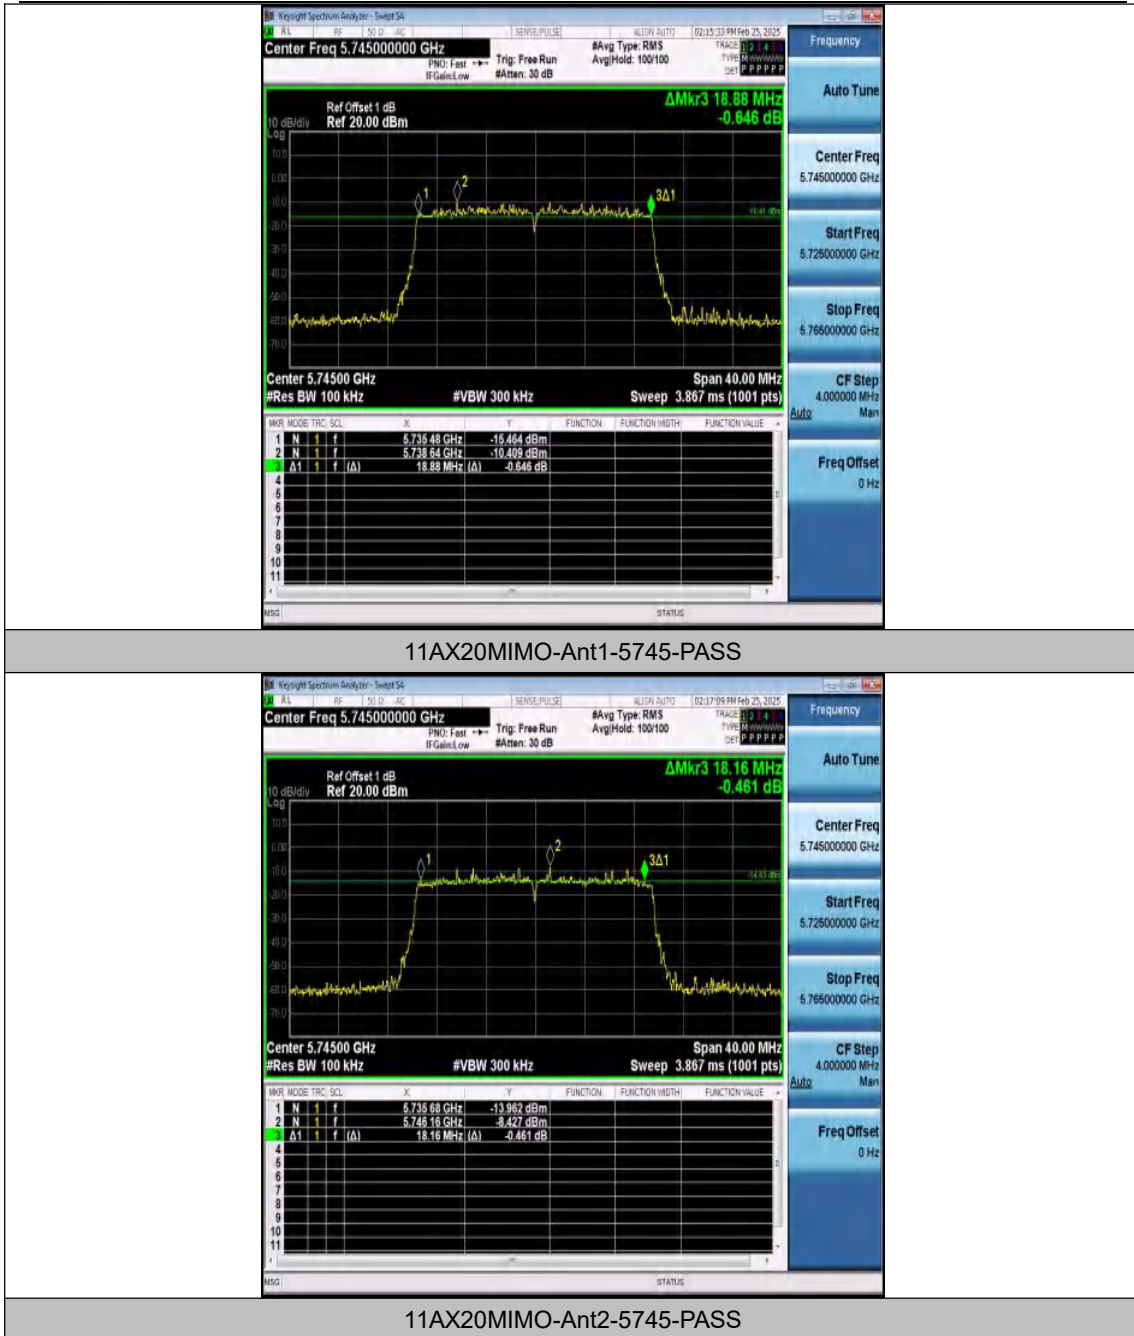

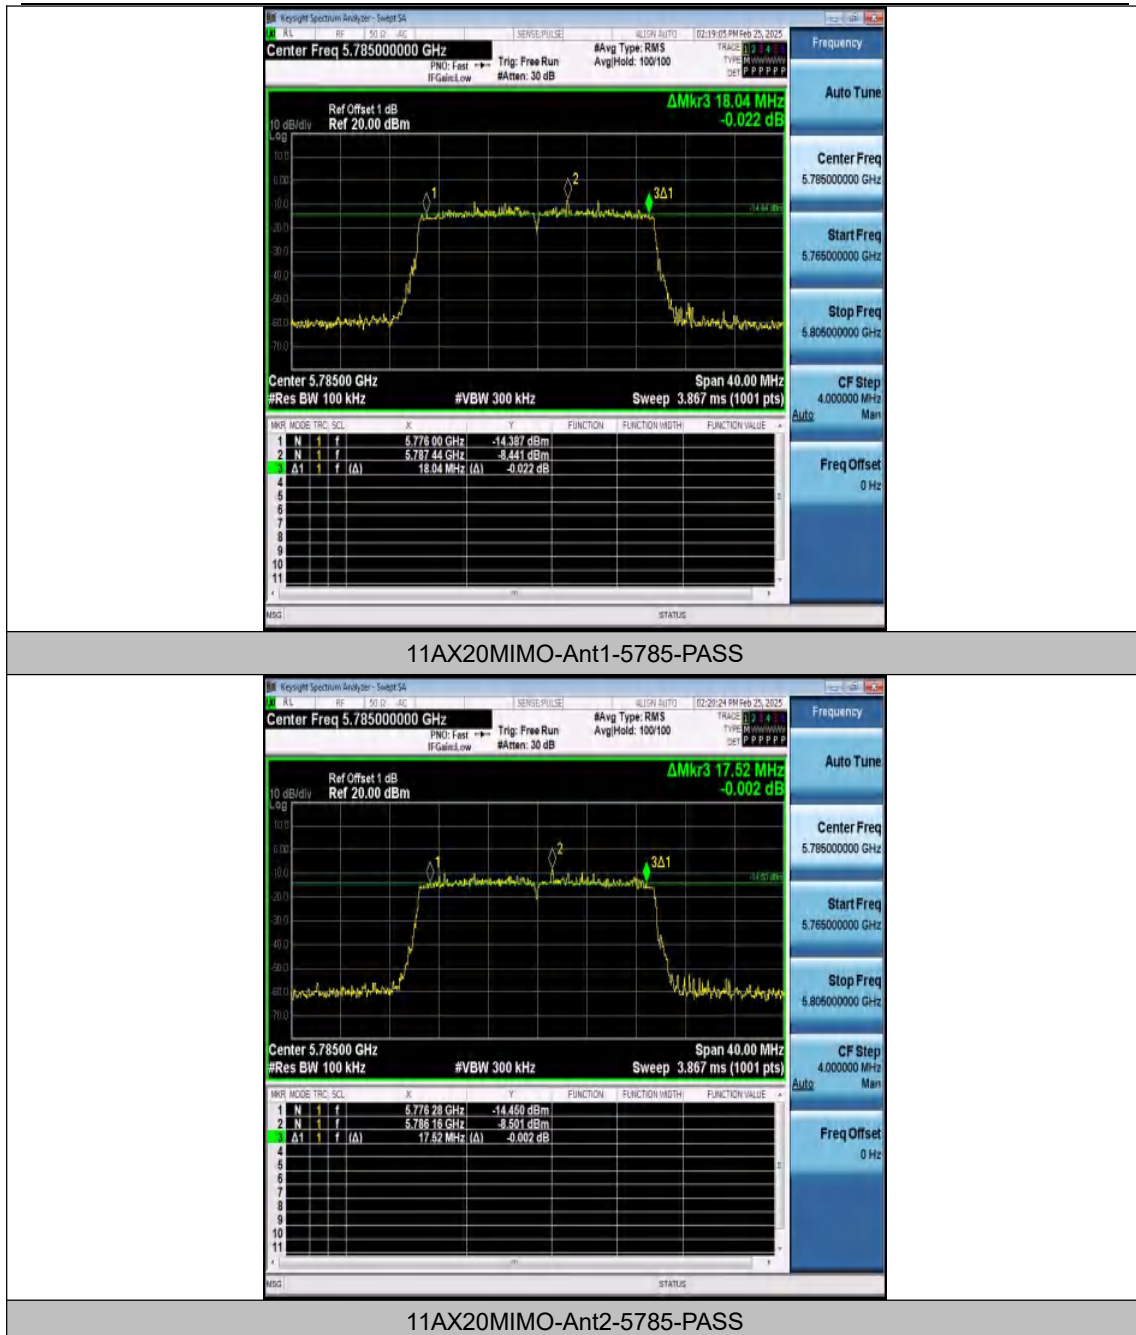


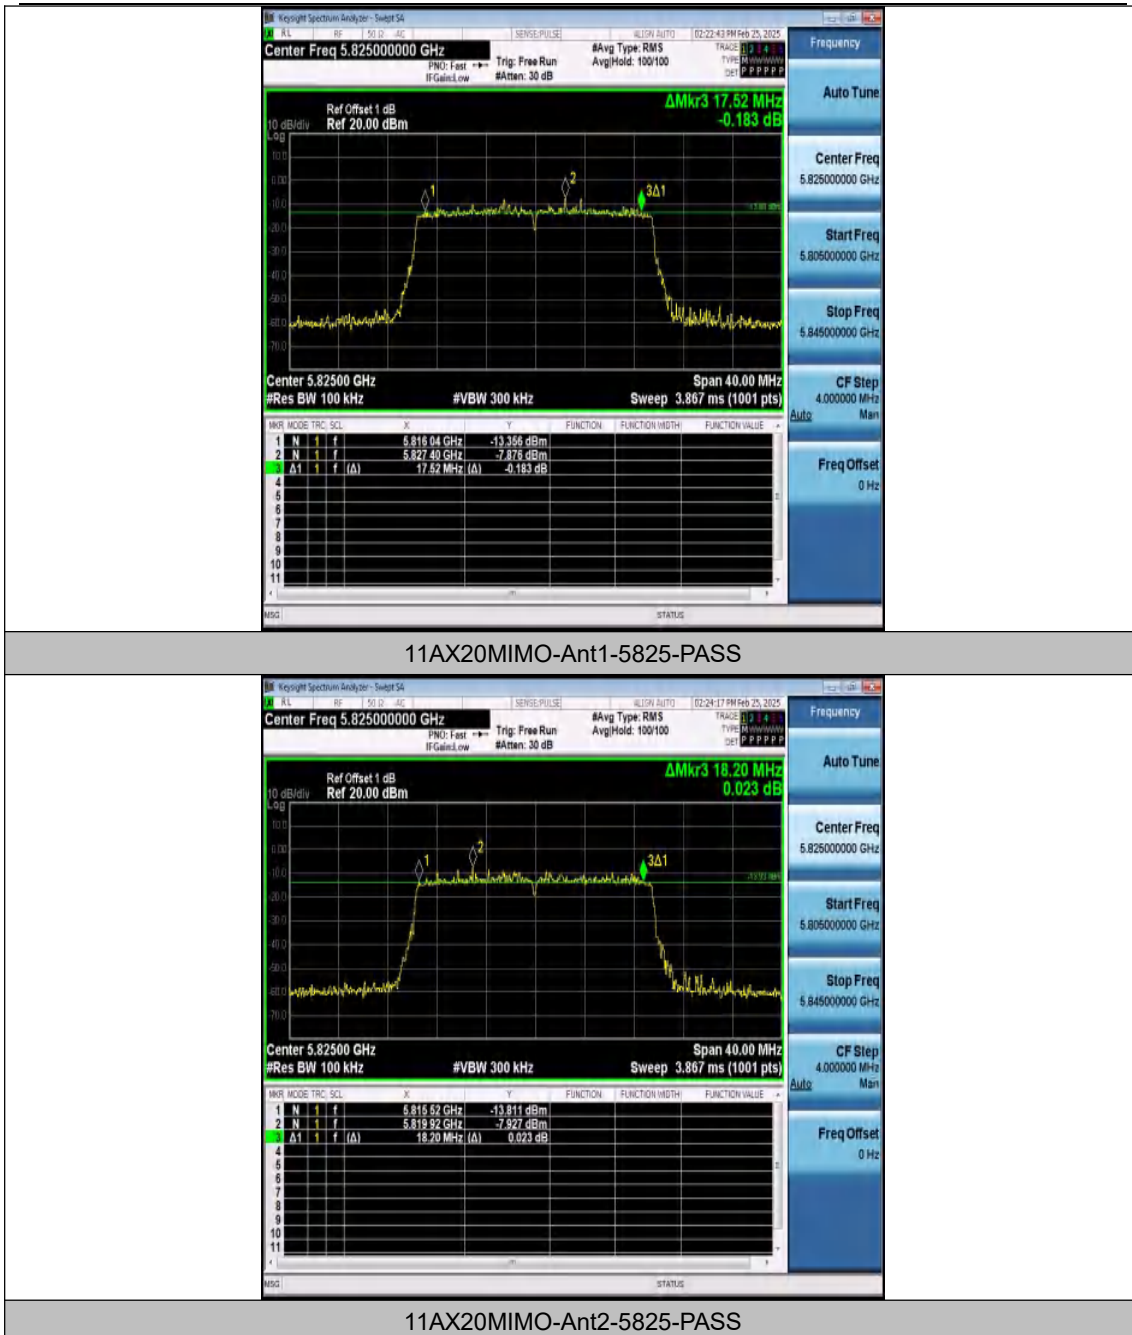

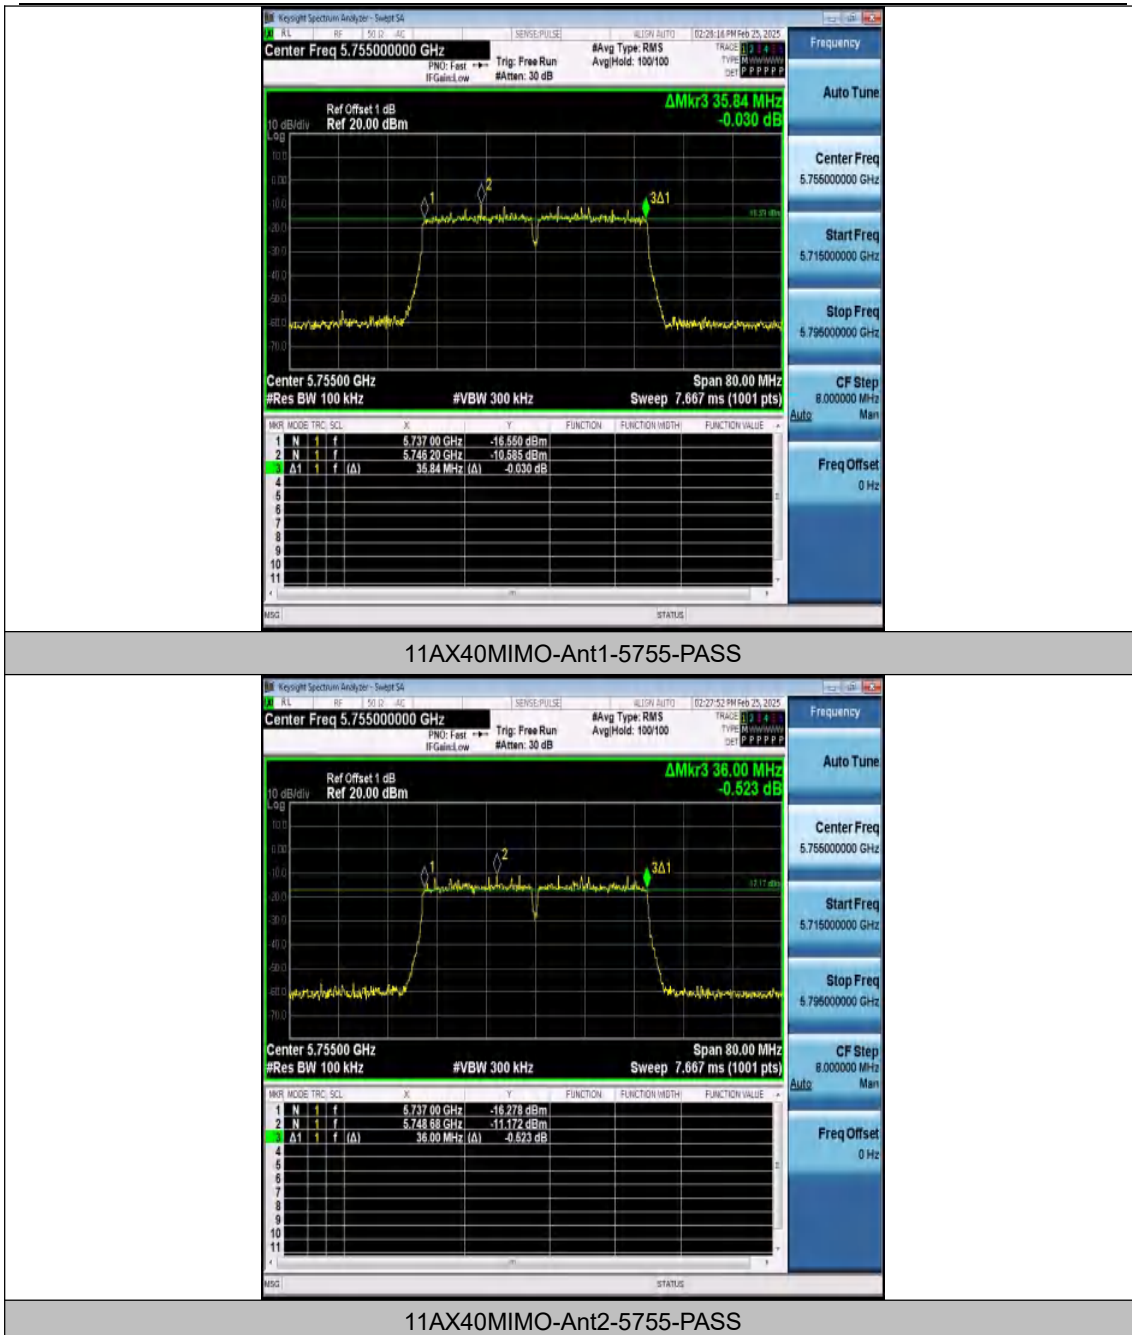


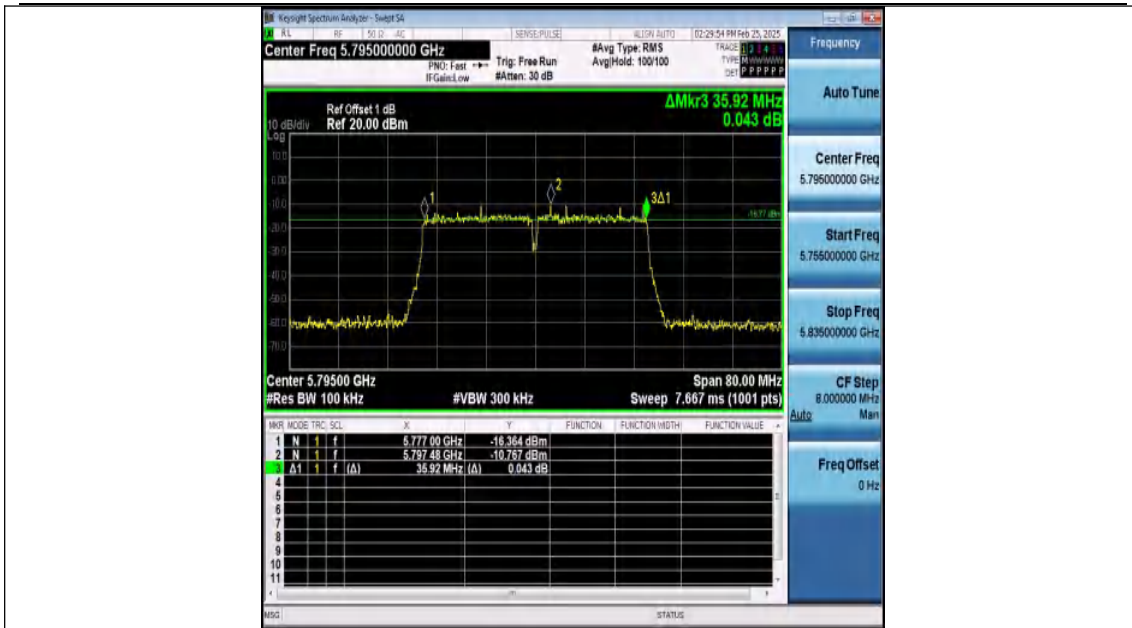

11AX40MIMO-Ant1-5795-PASS

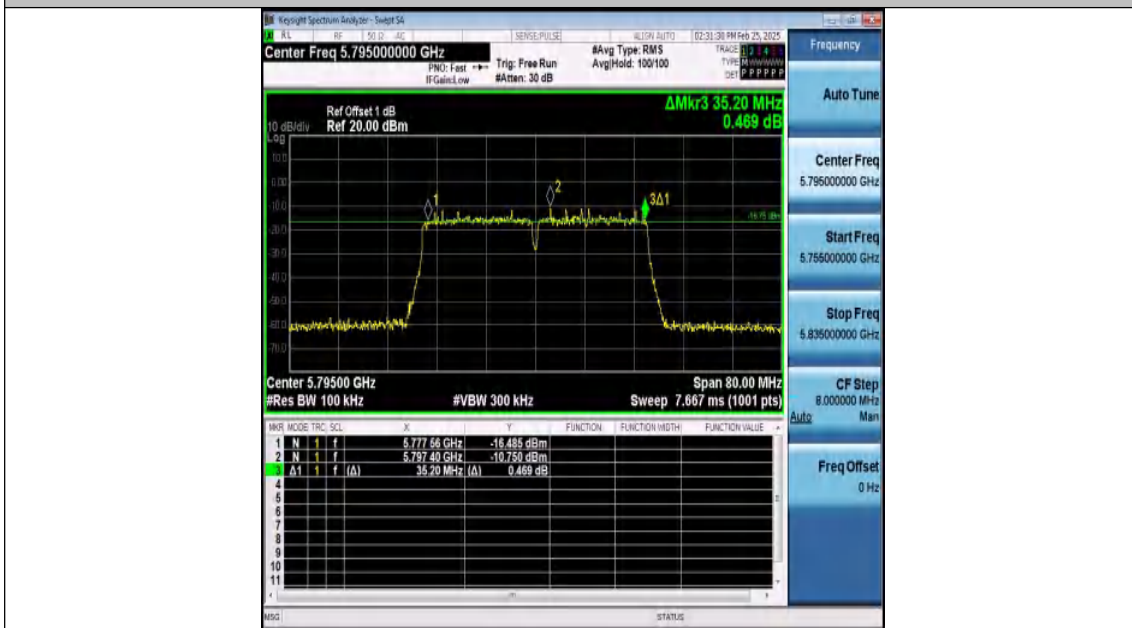

11AX40MIMO-Ant2-5795-PASS

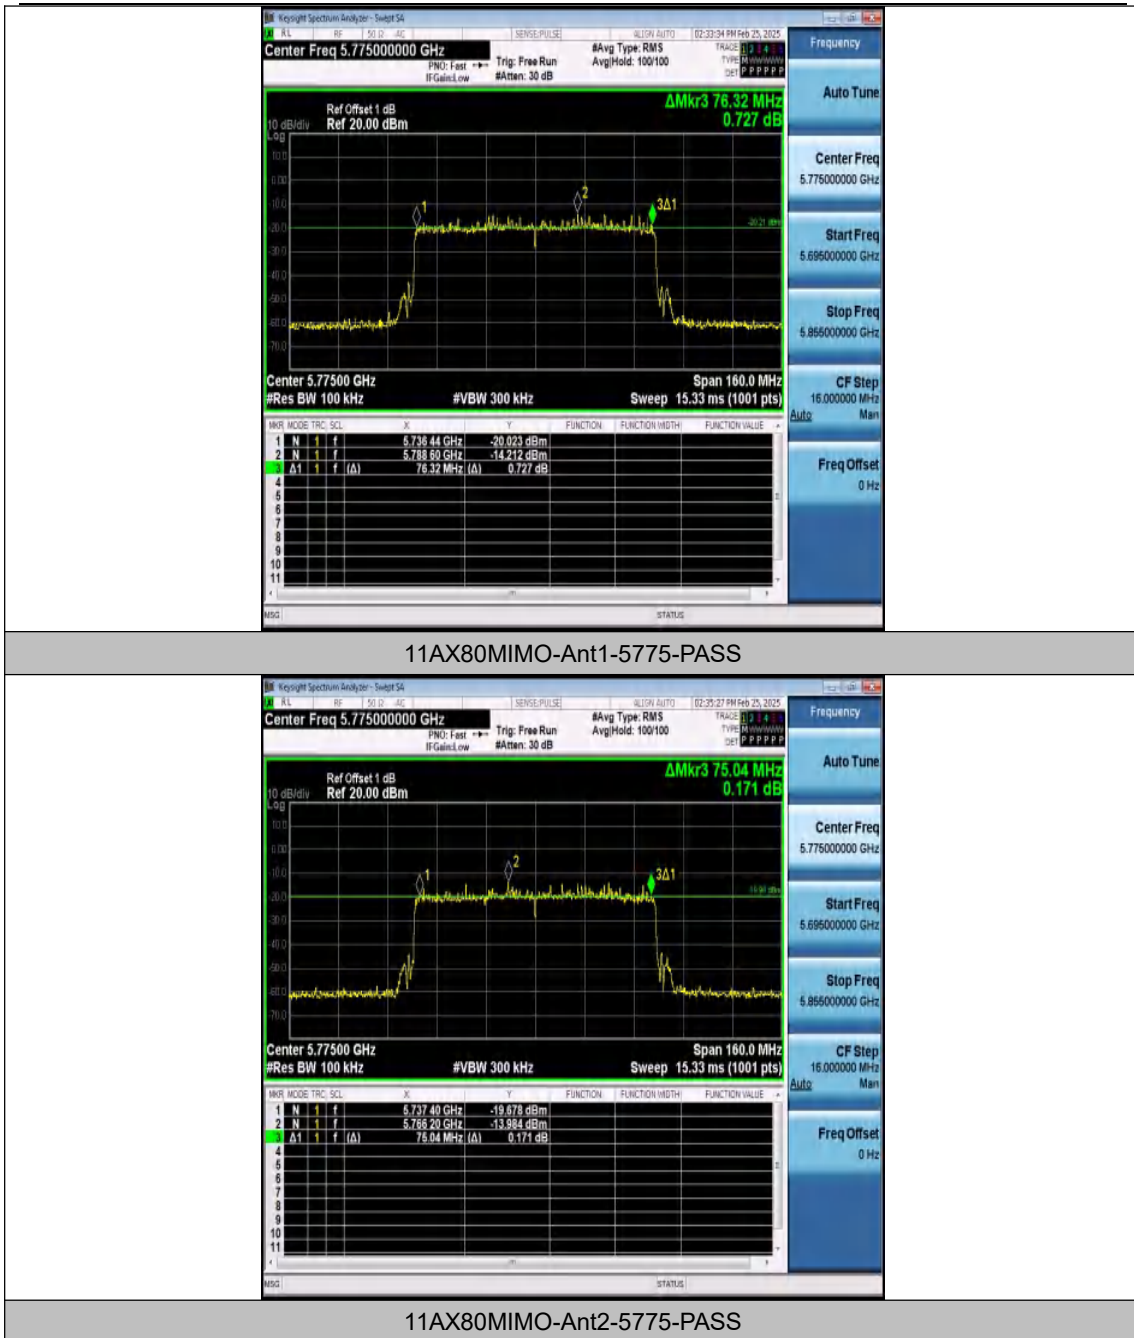

Appendix B: Duty Cycle

Test Result

Test Mode	Antenna	Frequency [MHz]	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]	Dc Factor [%]	1/T
11A	Ant1	5180	1.36	3.87	35.14	4.54	0.74
11A	Ant2	5180	1.36	3.86	35.23	4.53	0.74
11A	Ant1	5200	1.36	3.86	35.23	4.53	0.74
11A	Ant2	5200	1.36	3.86	35.23	4.53	0.74
11A	Ant1	5240	1.36	3.86	35.23	4.53	0.74
11A	Ant2	5240	1.36	3.86	35.23	4.53	0.74
11A	Ant1	5745	1.36	3.86	35.23	4.53	0.74
11A	Ant2	5745	1.36	3.86	35.23	4.53	0.74
11A	Ant1	5785	1.36	3.86	35.23	4.53	0.74
11A	Ant2	5785	1.36	3.86	35.23	4.53	0.74
11A	Ant1	5825	1.36	3.87	35.14	4.54	0.74
11A	Ant2	5825	1.36	3.86	35.23	4.53	0.74
11N20MIMO	Ant1	5180	1.27	3.78	33.60	4.74	0.79
11N20MIMO	Ant2	5180	1.27	3.77	33.69	4.72	0.79
11N20MIMO	Ant1	5200	1.27	3.77	33.69	4.72	0.79
11N20MIMO	Ant2	5200	1.27	3.77	33.69	4.72	0.79
11N20MIMO	Ant1	5240	1.27	3.77	33.69	4.72	0.79
11N20MIMO	Ant2	5240	1.28	3.78	33.86	4.70	0.78
11N20MIMO	Ant1	5745	1.15	3.65	31.51	5.02	0.87
11N20MIMO	Ant2	5745	1.15	3.65	31.51	5.02	0.87
11N20MIMO	Ant1	5785	1.15	3.65	31.51	5.02	0.87
11N20MIMO	Ant2	5785	1.15	3.65	31.51	5.02	0.87
11N20MIMO	Ant1	5825	1.15	3.65	31.51	5.02	0.87
11N20MIMO	Ant2	5825	1.15	3.65	31.51	5.02	0.87
11N40MIMO	Ant1	5190	0.64	3.14	20.38	6.91	1.56
11N40MIMO	Ant2	5190	0.63	3.13	20.13	6.96	1.59
11N40MIMO	Ant1	5230	0.63	3.13	20.13	6.96	1.59
11N40MIMO	Ant2	5230	0.63	3.13	20.13	6.96	1.59
11N40MIMO	Ant1	5755	0.57	3.08	18.51	7.33	1.75
11N40MIMO	Ant2	5755	0.57	3.08	18.51	7.33	1.75
11N40MIMO	Ant1	5795	0.57	3.08	18.51	7.33	1.75
11N40MIMO	Ant2	5795	0.57	3.08	18.51	7.33	1.75
11AC20MIMO	Ant1	5180	1.28	3.78	33.86	4.70	0.78
11AC20MIMO	Ant2	5180	1.28	3.78	33.86	4.70	0.78
11AC20MIMO	Ant1	5200	1.28	3.78	33.86	4.70	0.78
11AC20MIMO	Ant2	5200	1.27	3.78	33.60	4.74	0.79
11AC20MIMO	Ant1	5240	1.28	3.78	33.86	4.70	0.78

11AC20MIMO	Ant2	5240	1.28	3.78	33.86	4.70	0.78
11AC20MIMO	Ant1	5745	1.15	3.66	31.42	5.03	0.87
11AC20MIMO	Ant2	5745	1.15	3.65	31.51	5.02	0.87
11AC20MIMO	Ant1	5785	1.15	3.65	31.51	5.02	0.87
11AC20MIMO	Ant2	5785	1.15	3.65	31.51	5.02	0.87
11AC20MIMO	Ant1	5825	1.15	3.65	31.51	5.02	0.87
11AC20MIMO	Ant2	5825	1.15	3.66	31.42	5.03	0.87
11AC40MIMO	Ant1	5190	0.63	3.14	20.06	6.98	1.59
11AC40MIMO	Ant2	5190	0.64	3.14	20.38	6.91	1.56
11AC40MIMO	Ant1	5230	0.64	3.14	20.38	6.91	1.56
11AC40MIMO	Ant2	5230	0.64	3.14	20.38	6.91	1.56
11AC40MIMO	Ant1	5755	0.58	3.08	18.83	7.25	1.72
11AC40MIMO	Ant2	5755	0.58	3.08	18.83	7.25	1.72
11AC40MIMO	Ant1	5795	0.58	3.08	18.83	7.25	1.72
11AC40MIMO	Ant2	5795	0.58	3.08	18.83	7.25	1.72
11AC80MIMO	Ant1	5210	0.32	2.82	11.35	9.45	3.13
11AC80MIMO	Ant2	5210	0.32	2.82	11.35	9.45	3.13
11AC80MIMO	Ant1	5775	0.29	2.79	10.39	9.83	3.45
11AC80MIMO	Ant2	5775	0.29	2.79	10.39	9.83	3.45
11AX20MIMO	Ant1	5180	0.99	3.49	28.37	5.47	1.01
11AX20MIMO	Ant2	5180	0.99	3.50	28.29	5.48	1.01
11AX20MIMO	Ant1	5200	0.99	3.50	28.29	5.48	1.01
11AX20MIMO	Ant2	5200	0.99	3.50	28.29	5.48	1.01
11AX20MIMO	Ant1	5240	0.99	3.50	28.29	5.48	1.01
11AX20MIMO	Ant2	5240	0.99	3.49	28.37	5.47	1.01
11AX20MIMO	Ant1	5745	0.99	3.49	28.37	5.47	1.01
11AX20MIMO	Ant2	5745	0.99	3.49	28.37	5.47	1.01
11AX20MIMO	Ant1	5785	0.98	3.48	28.16	5.50	1.02
11AX20MIMO	Ant2	5785	0.98	3.49	28.08	5.52	1.02
11AX20MIMO	Ant1	5825	0.99	3.49	28.37	5.47	1.01
11AX20MIMO	Ant2	5825	0.98	3.49	28.08	5.52	1.02
11AX40MIMO	Ant1	5190	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant2	5190	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant1	5230	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant2	5230	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant1	5755	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant2	5755	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant1	5795	0.57	3.08	18.51	7.33	1.75
11AX40MIMO	Ant2	5795	0.57	3.08	18.51	7.33	1.75
11AX80MIMO	Ant1	5210	0.28	2.79	10.04	9.98	3.57
11AX80MIMO	Ant2	5210	0.28	2.78	10.07	9.97	3.57
11AX80MIMO	Ant1	5775	0.28	2.78	10.07	9.97	3.57

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com





Hotline
400-003-0500
www.anbotek.com


11AX80MIMO	Ant2	5775	0.27	2.78	9.71	10.13	3.70
------------	------	------	------	------	------	-------	------


Test Graphs

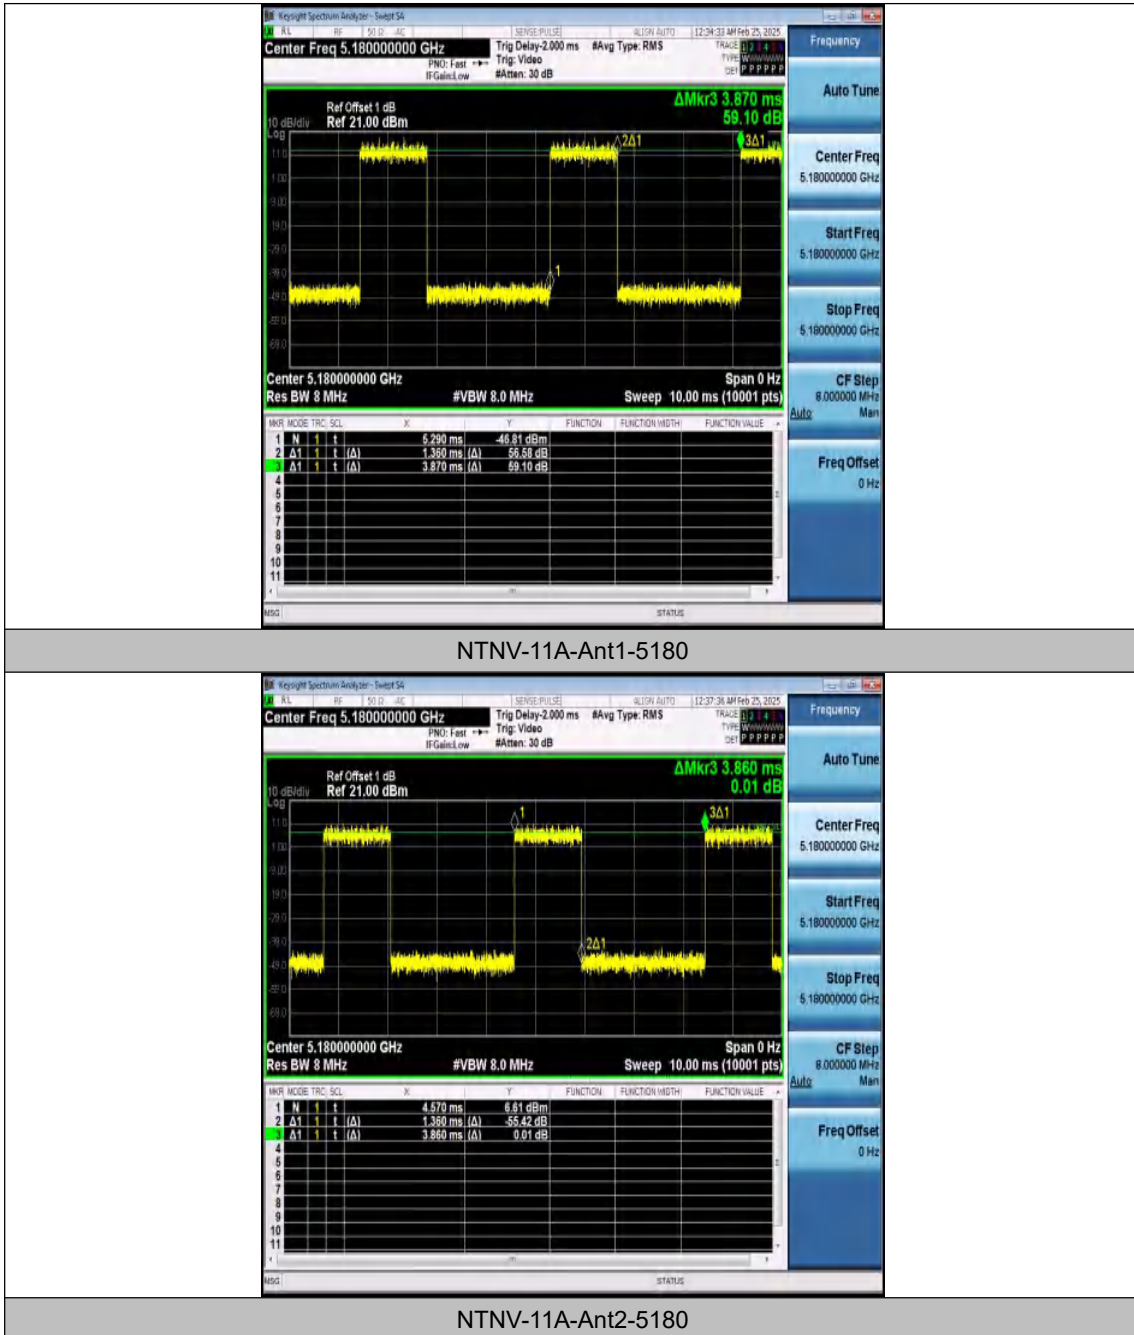


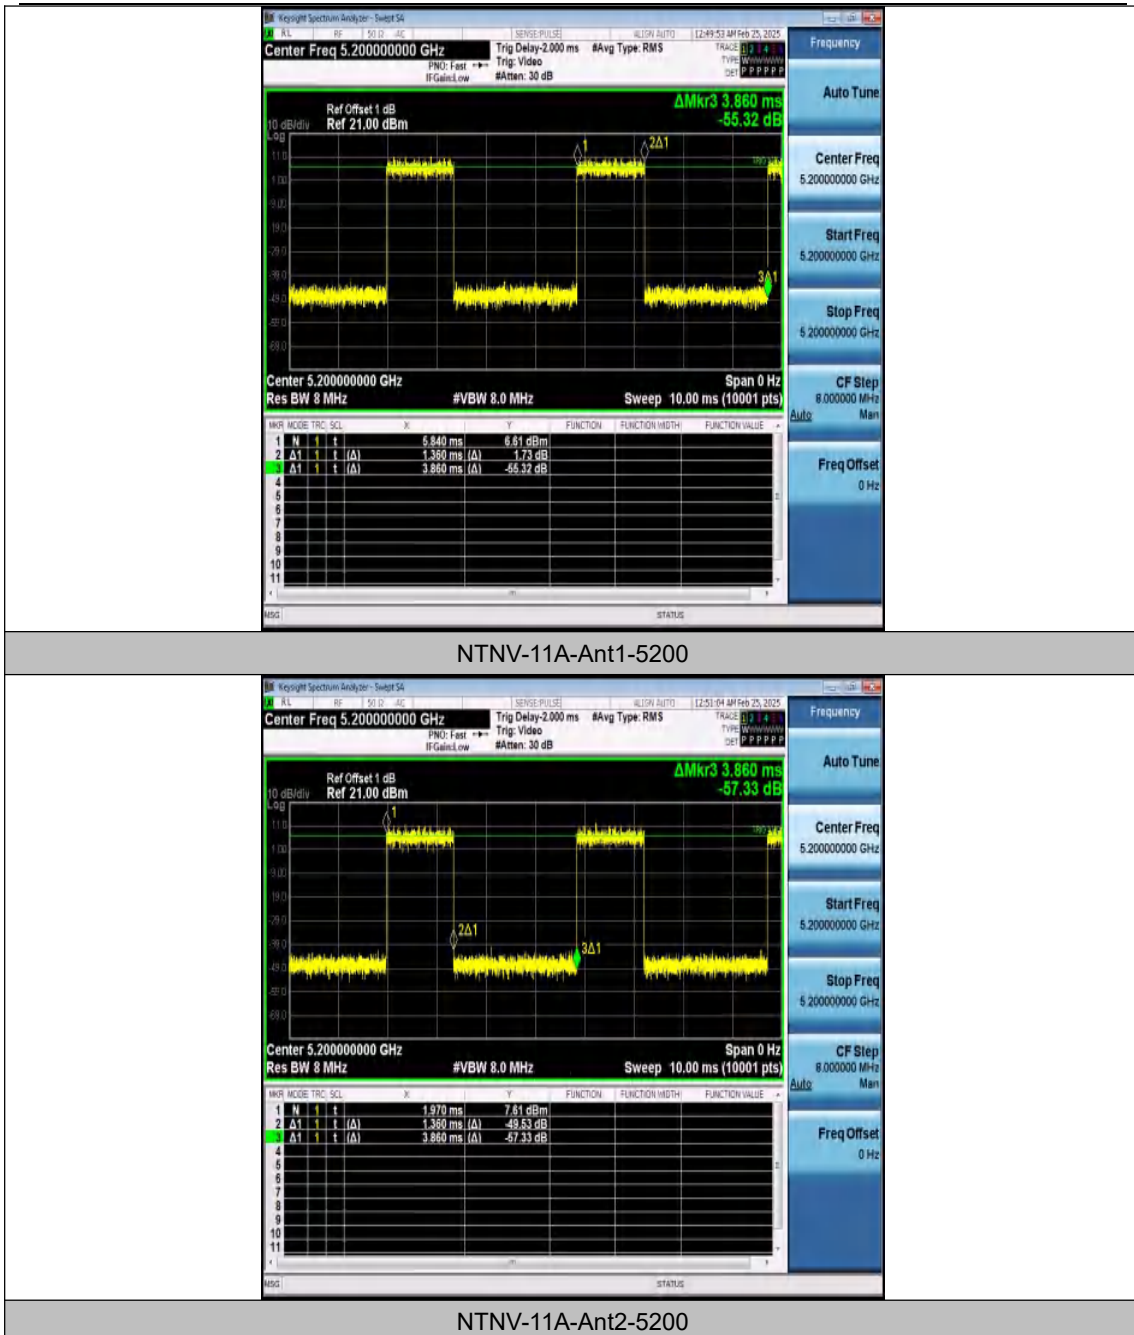


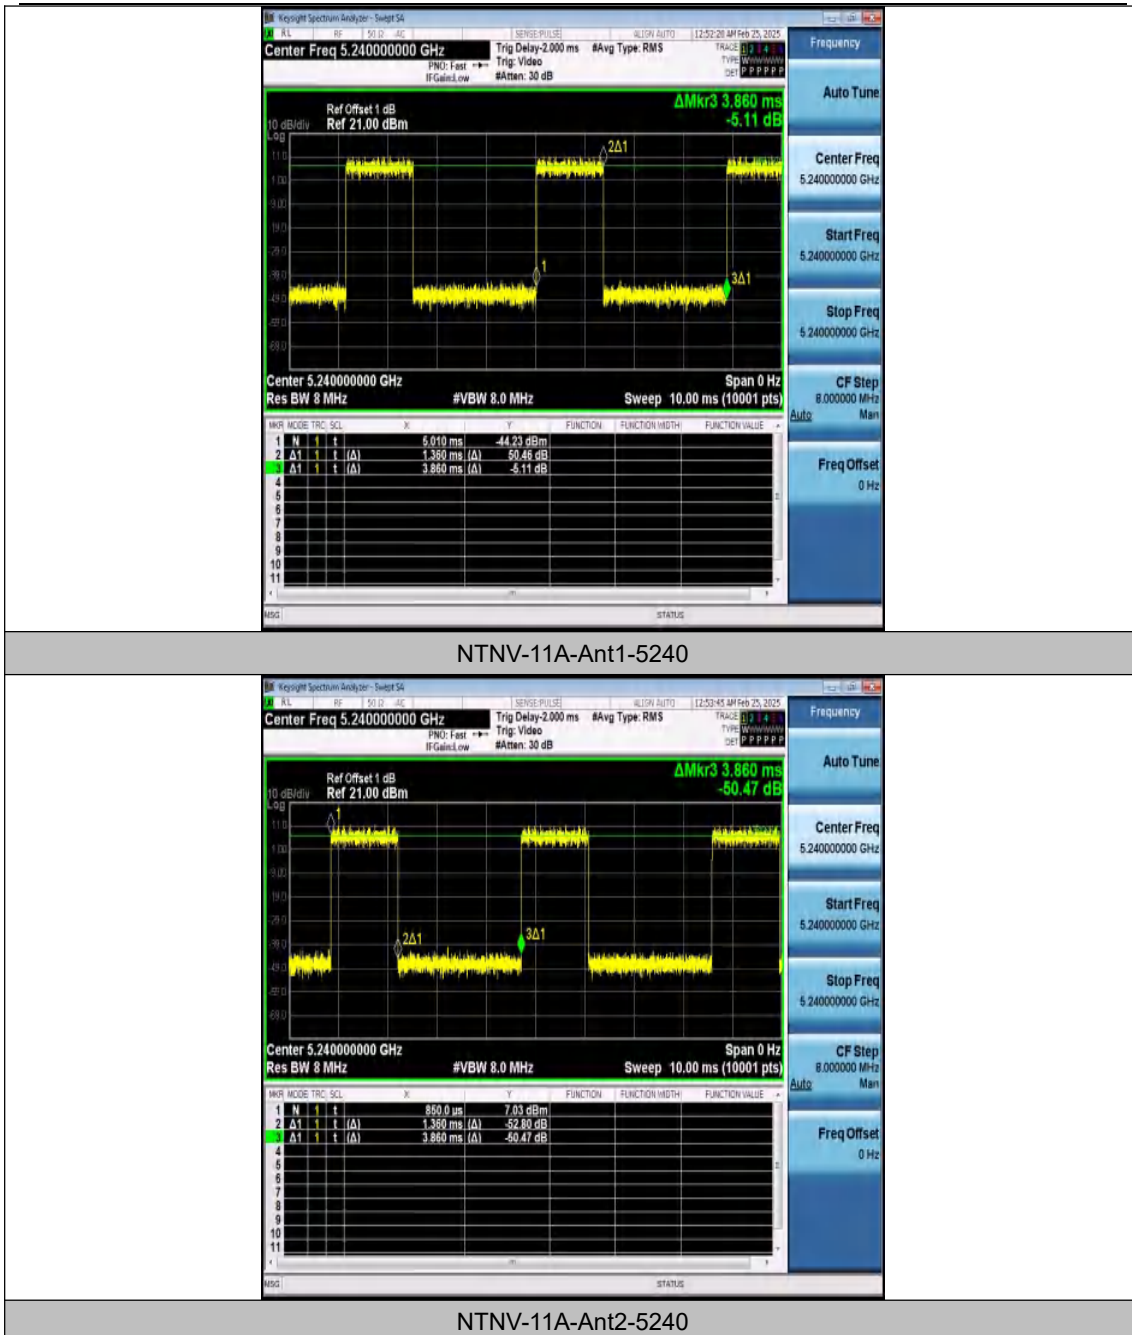


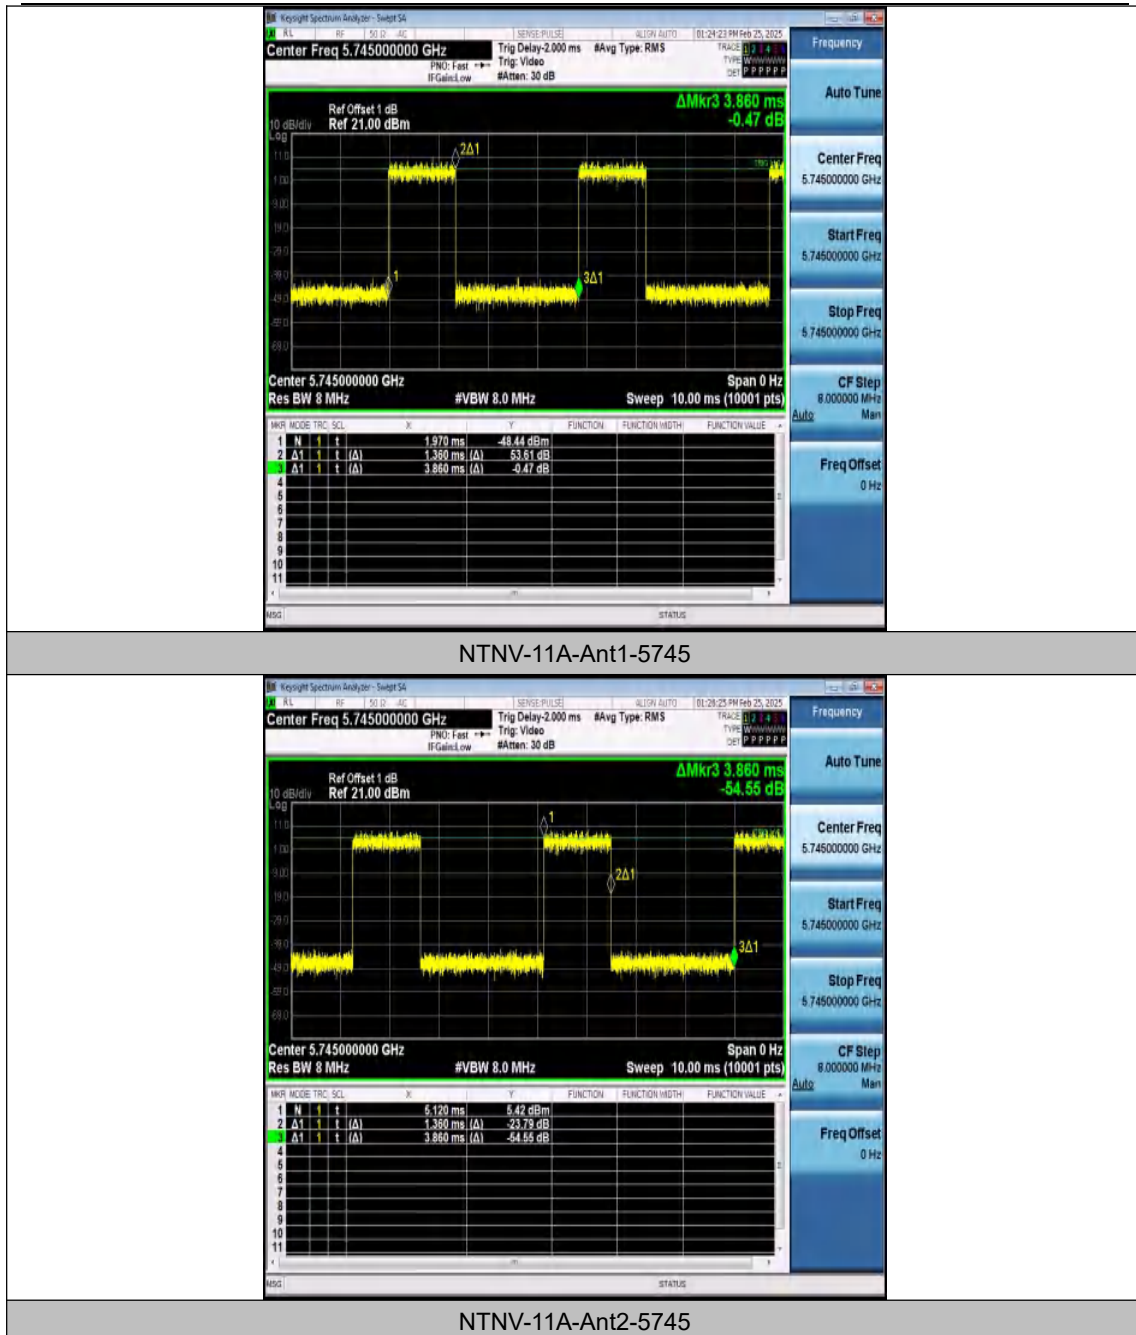

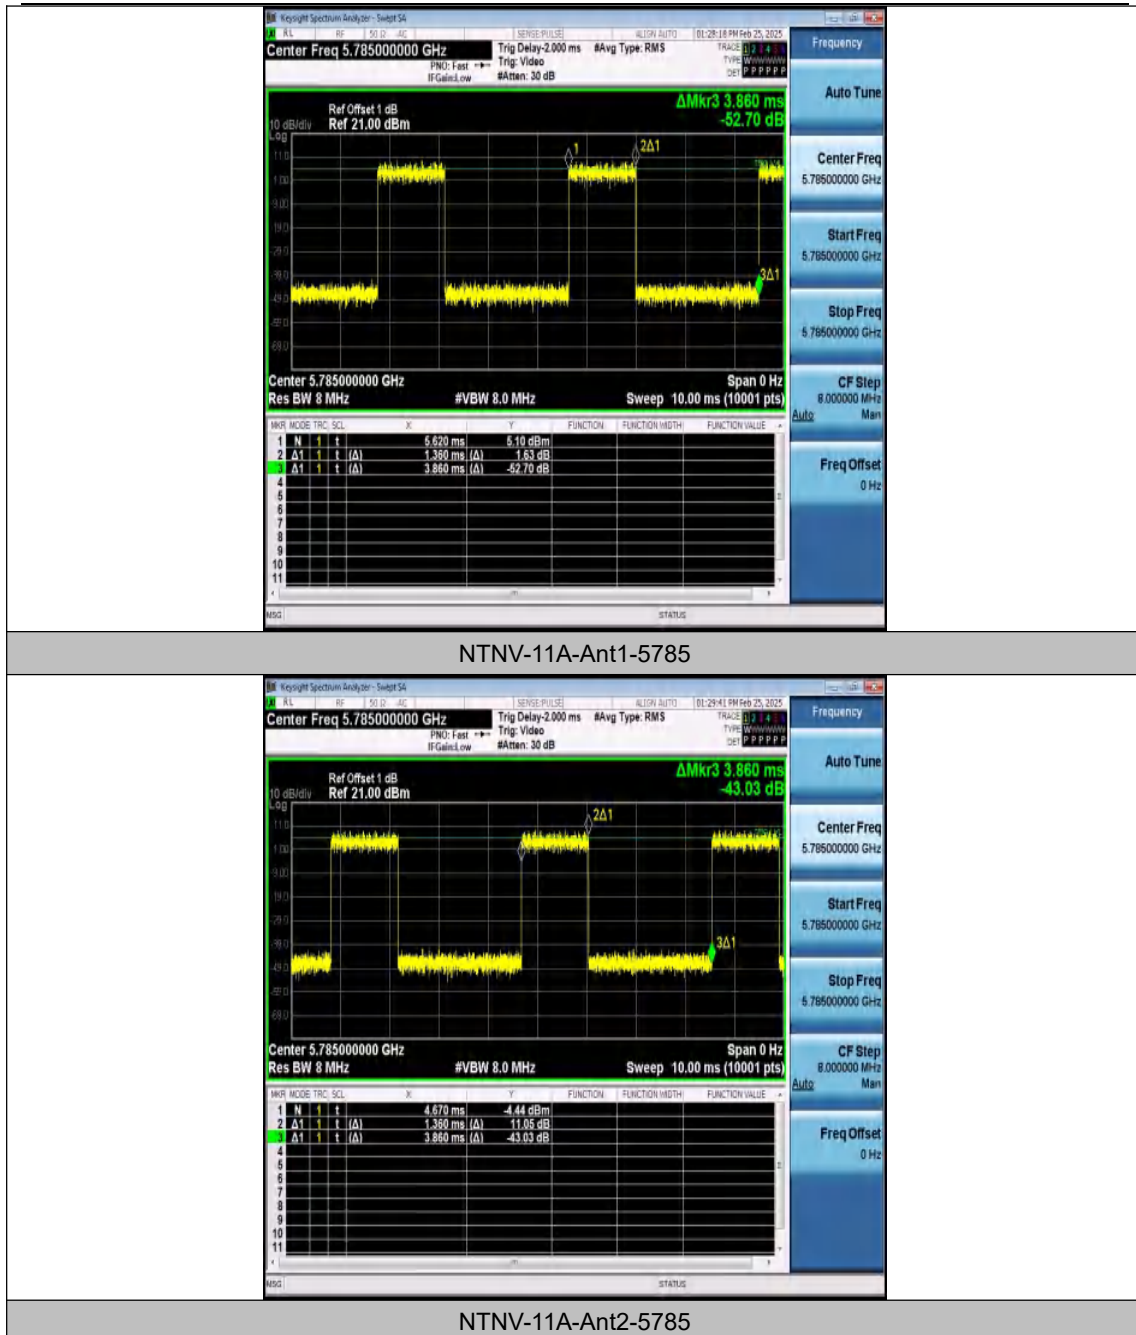


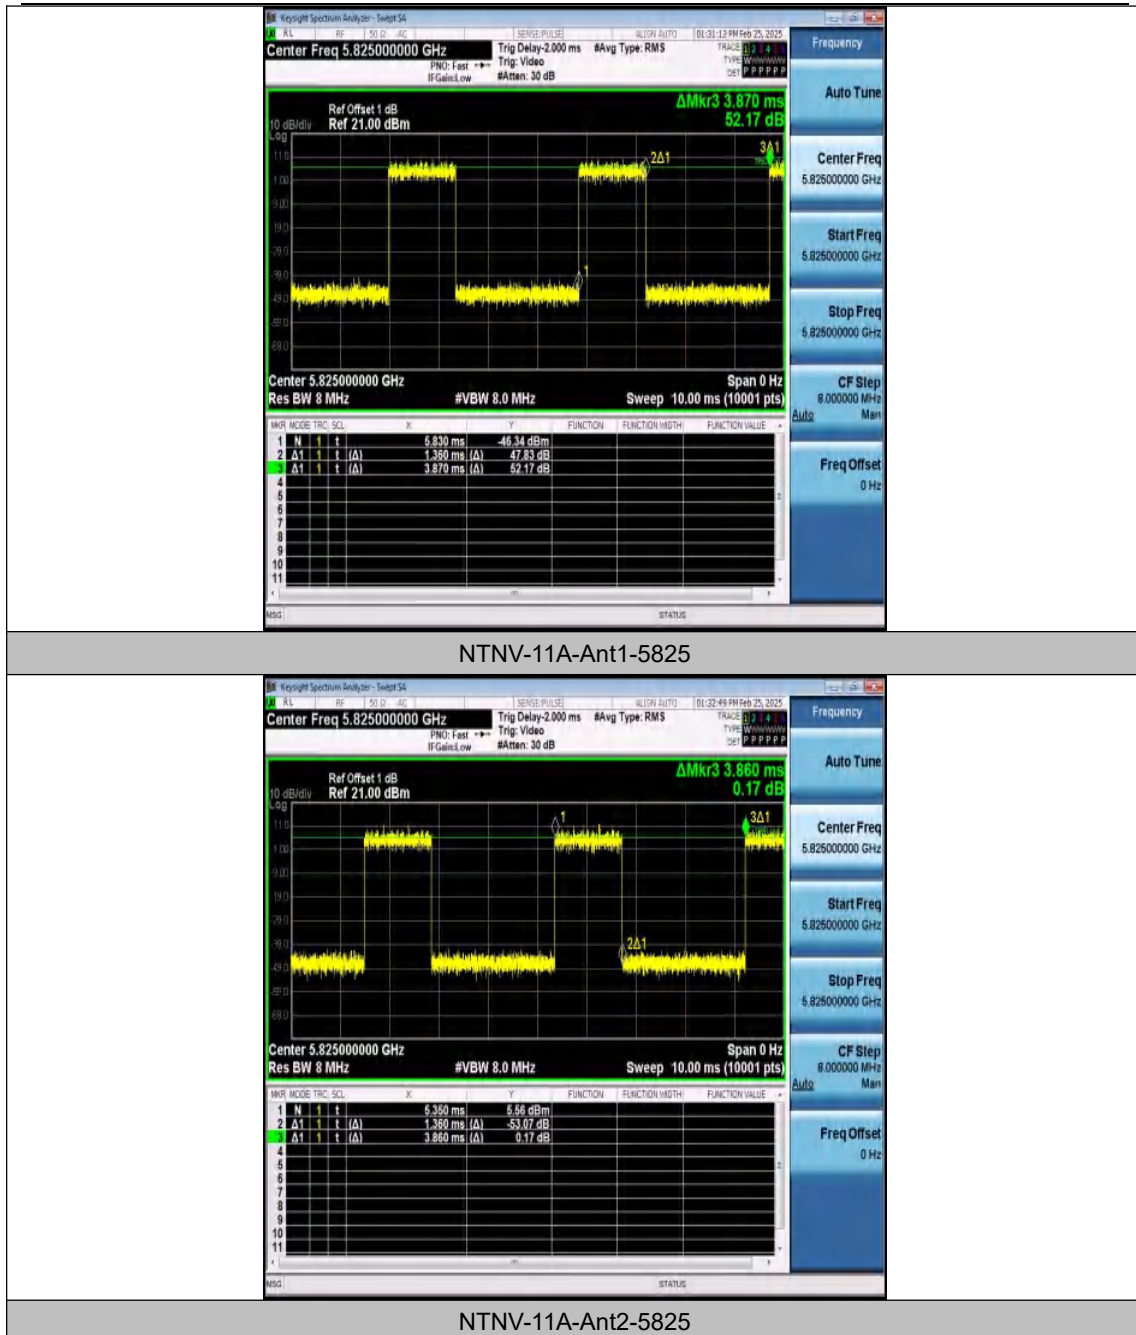

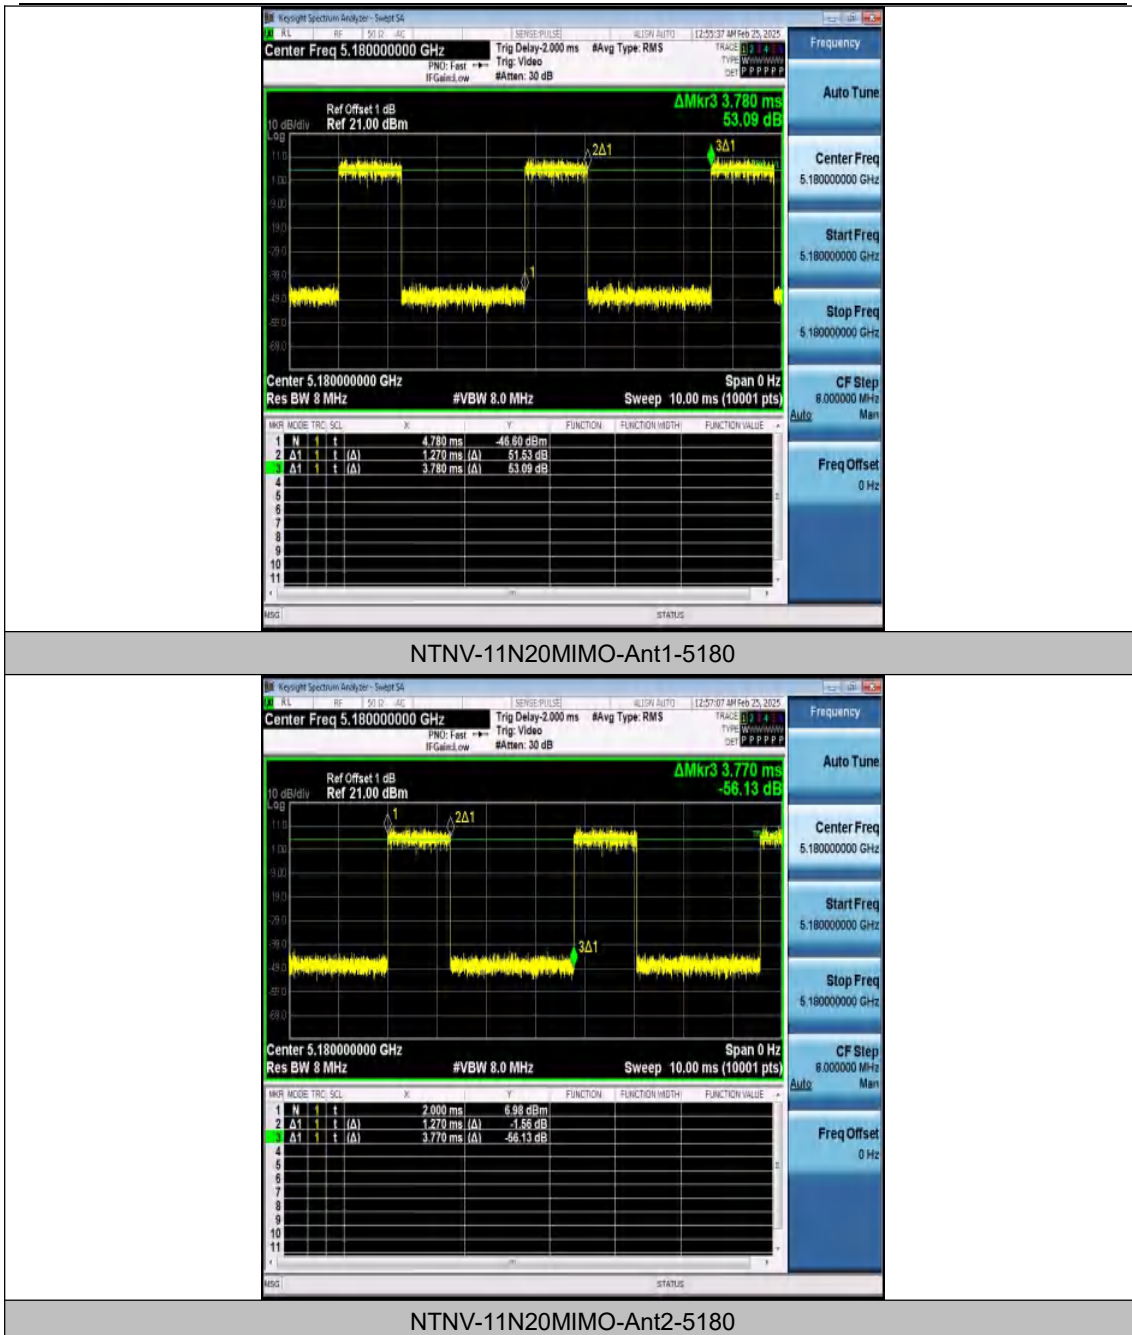


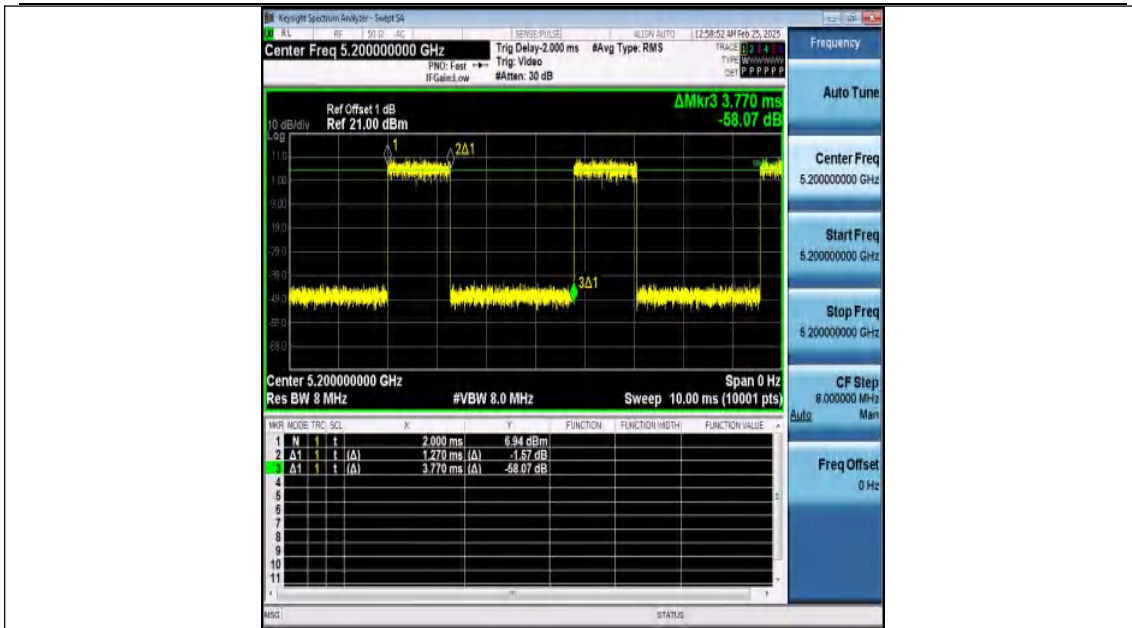


NTNV-11N20MIMO-Ant1-5200

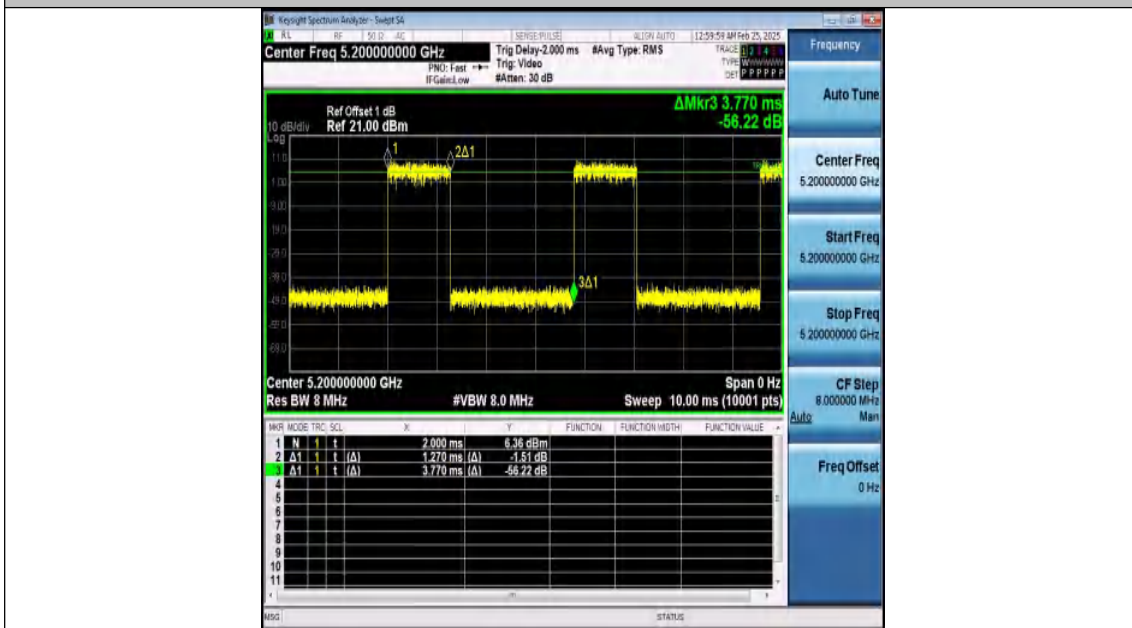


NTNV-11N20MIMO-Ant2-5200

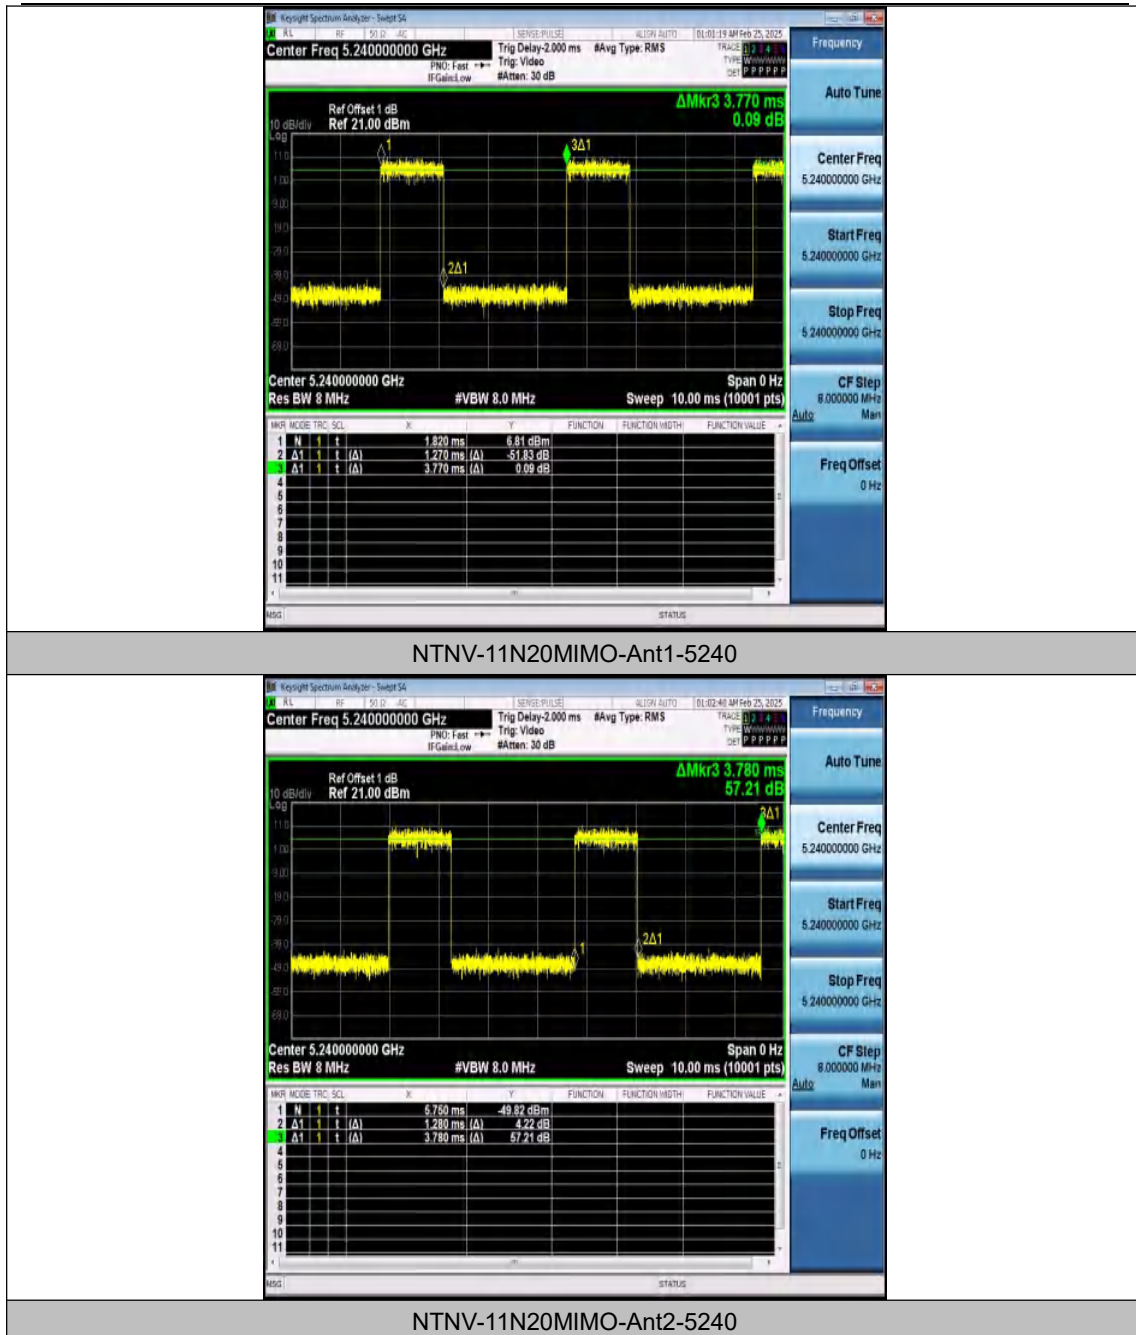

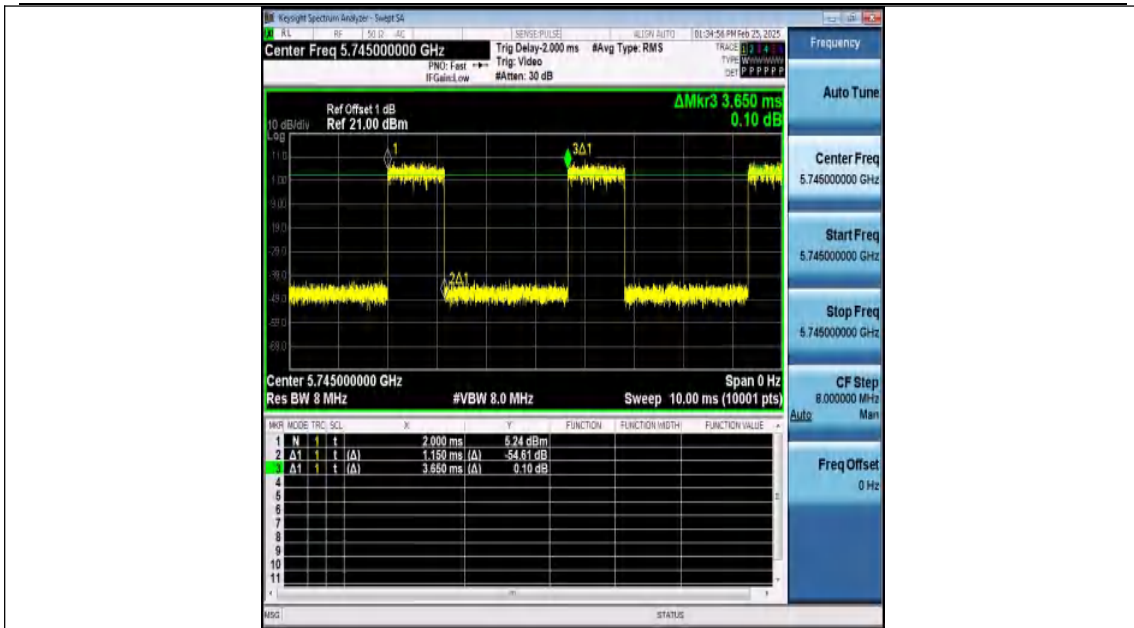

NTNV-11N20MIMO-Ant1-5745

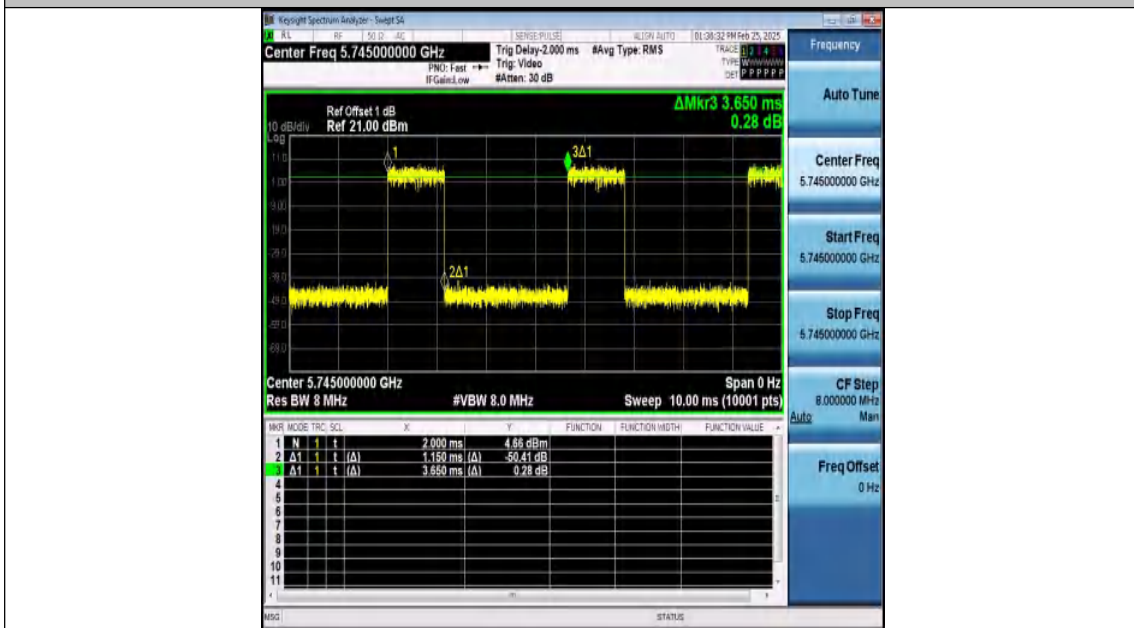

NTNV-11N20MIMO-Ant2-5745

