

The 24/7 Room Diffuser

BRD-001

English Manual



Scan the QR code above for additional images and videos, or to read the instructions in one of the available languages:

French, Spanish, Portuguese, Dutch, German, Danish, Swedish, Norwegian, Arabic, Chinese, or Japanese.

BRUME

Table of contents

1. Safety Instructions	3
General Safety Precautions	3
Battery Safety	3
Bluetooth & Wireless Safety	3
2. Product Overview	4
Main Components	4
Key Features	5
3. What's in the Box	5
4. Technical Specifications	5
5. Getting Started	6
6. Operating Instructions	7
Connecting via Bluetooth	7
Manual Mode	7
7. Maintenance and Cleaning	7
8. Troubleshooting	8
9. Warranty and Customer Support	8
10. Compliance and Regulatory Information	9
FCC Statement (For US Customers)	9
CE Compliance (For European Customers)	9
11. Disposal and Recycling Information	9

1. Safety Instructions

General Safety Precautions

- Read all instructions before use.
- Do not expose the diffuser to **water, extreme temperatures, or direct sunlight.**
- Do not use the diffuser near **flammable materials.**
- Do not modify or attempt to repair the device yourself.
- Only use accessories recommended by Brume
- **Do not drink or place liquid oil in the mouth. Keep out of reach of children.**


Battery Safety

- This product contains a **rechargeable battery.**
- Do not **short-circuit, disassemble, or puncture** the battery.
- Charge only using the **provided charger/cable.**
- Dispose of batteries **properly and according to local regulations.**
- If the battery is leaking, avoid contact with skin and seek medical advice.

Bluetooth & Wireless Safety

- Follow all **local regulations regarding Bluetooth and wireless communication.**
- Keep the device at a **safe distance from medical implants (e.g., pacemakers).**

2. Product Overview

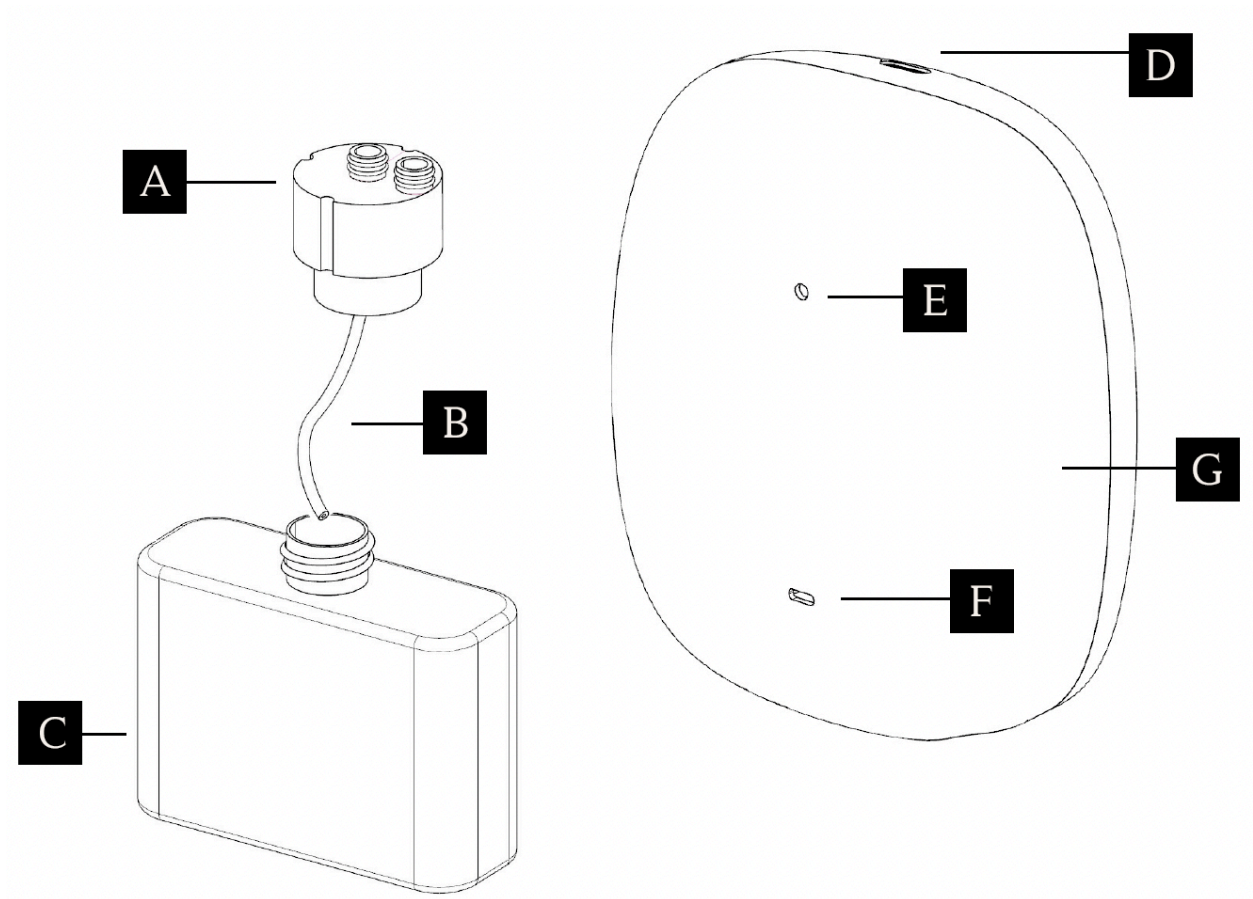

Main Components

- (A) Atomization unit
- (B) Pipe
- (C) Disposable Cartridge
- (D) Diffusion nozzle
- (E) LED Control Button
- (F) USB-C Charging Port
- (G) Device shell

Key Features

- **Bluetooth connectivity** for remote control via mobile app.
 - **Adjustable diffusion settings.**
 - **Generous cartridge capacity.**
 - **Discreet touch button.**
 - **Rechargeable battery** for wireless operation.
 - **Aesthetic and compact design** for easy placement.
-

3. What's in the Box

- The 24/7 Room Diffuser
 - USB-C Charging Cable & Power Supply
 - Disposable Cartridge
 - User Manual
-

4. Technical Specifications

Feature	Specification
Model Name	The 24/7 Room Diffuser
Model Number	BRD-001
Version	1.2.2.1
Battery Type	Lithium-Ion rechargeable battery 4000mAh 3.7V
Dimensions	21cm x 17.3cm x 7cm

5. Getting Started

1. Charging the Device

- Connect the USB-C charging cable to the charging port (F).

● RED indicator means the battery-level is below 20%.

● WARM WHITE indicator means the battery-level is above 20% - Only appears when not in charging mode

● GREEN indicator means the battery-level is above 90% - Only appears when in charging mode.

2. Inserting the Scent Cartridge

- Remove the Disposable cartridge (C), we recommend storing it safely as it may be helpful for maintenance and product cleaning later on.
- Insert a Brume cartridge securely from the bottom and make sure it is securely attached to the body.

3. Finding the perfect spot in the room

- Prefer placing the diffuser in a central area of the room to distribute the area evenly and cover the space ideally.
- Avoid corners as it will impact the scent distribution.

4. Turning the Device On/Off

- Short press the **power button** to turn on.
 - The LED indicator will light up.
 - Press and hold again to turn off.
-

6. Operating Instructions

Connecting via Bluetooth

1. Download the latest version of the Scent Tech app at **www.brume.me/setup** or scan the QR code on the front page.
2. Enable Bluetooth on your smartphone.
3. Open the app, then select Bluetooth.
4. Double tap the LED control button (E) until it flashes blue to enter **pairing mode**.
5. In the app, a **BRUME device** should appear in the list, tap it to pair.
6. Add **working modes** to schedule diffusion and adjust spray and pause times for desired aroma intensity.

Manual Mode

- Press the power button to start the device. If no program has been set up, the device will run in default mode, which is configured to operate at the highest intensity for 4 hours or until manually turned off.

Allow the diffuser to run for about 30 minutes to scent the room.

Factory reset

To reset to factory settings and activate the highest scent intensity in manual mode, press and hold the button for more than 5 seconds.

7. Maintenance and Cleaning

We recommended cleaning the device every 3 months or after long periods of disuse.

To do so, fill an empty cartridge with 95% alcohol and run it at maximum intensity for 30 minutes.

8. Troubleshooting

<u>Issue</u>	<u>Solution</u>
Device won't turn on	Ensure the battery is charged. Short press the power button.
Weak or no scent	Check diffuser placement. Adjust intensity settings. Make sure the pipe (B) isn't clogged.
Bluetooth won't connect	Restart the device pairing by double-tapping the power button and ensuring the light flashes. Then, re-pair it in the app.

9. Warranty and Customer Support

- This product is covered under a **12-month warranty** after purchase date.
 - The warranty is suitable for new devices but not resold or second hand products.
 - The warranty does not cover misuse, damage from drops or accidents, broken parts, unauthorized repairs, or any physical deterioration caused by the user.
 - For support, visit **www.brume.me** or contact **contact@brume.me**.
-

10. Compliance and Regulatory Information

FCC Statement (For US Customers)

This device complies with **Part 15 of the FCC Rules**. Operation is subject to the following conditions:

- This device must not cause **harmful interference**.
- This device must accept any **interference received**.

CE Compliance (For European Customers)

This product conforms to **CE standards** and complies with **RoHS, WEEE, and REACH** regulations.

11. Disposal and Recycling Information

- Do not dispose of electronic waste in household trash.
 - Follow local regulations for **battery disposal and recycling**.
-

Thank you for choosing Brume.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.