

## 4 RACK MOUNT

### 4.1 Installation Preparation

For attaching a single repeater

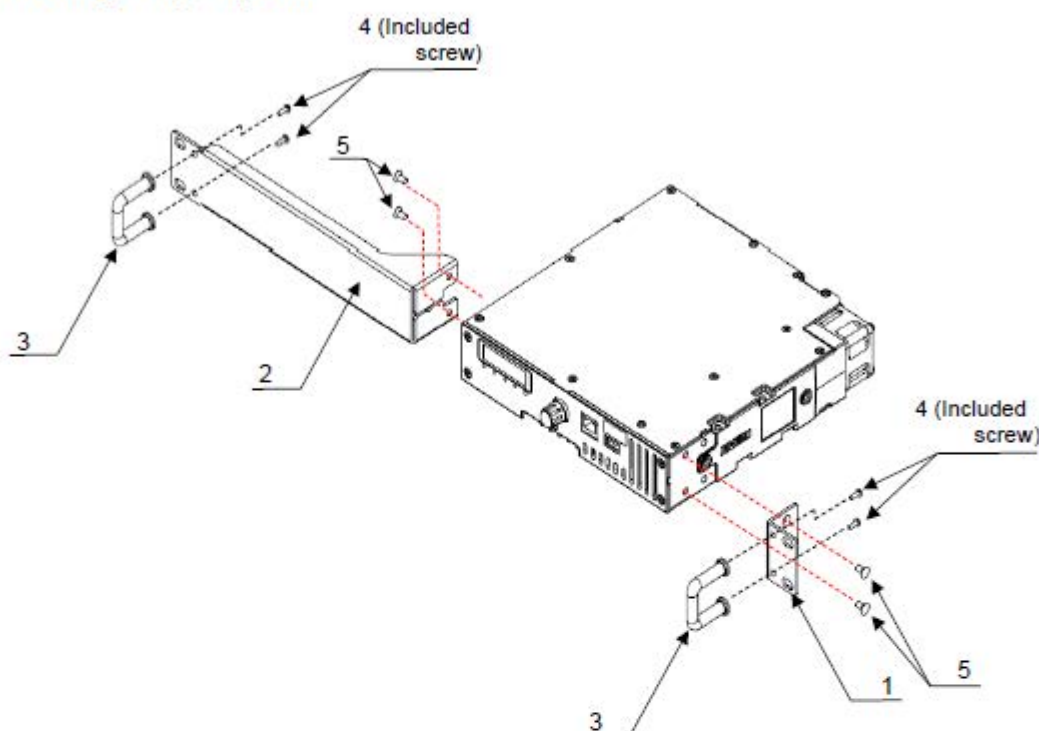


Figure 4-1 Overview for the Attachment of the Supplied Accessories to the Repeater (Single Repeater)

#### Procedure related to attachment (in the case of a single repeater)

1 Confirm that the supplied accessories required for the attachment to the repeater are accounted for.

The quantities in Table 4-1 indicate the quantities required for the attachment.

Table 4-1 Parts Required for the Attachment of the Repeater

No.	Part Name	Quantity	Remark
1	Bracket	1	Short type
2	Bracket	1	Long type
3	Handle	1 set	2 pcs
4	-	4	Included screw for No. 3
5	Flat Head Machine Screw	4	For Bracket

2 Ready the tool.

The tool required for the attachment of the supplied accessories (an M4 screwdriver) is readied.

3 Attach the Handle to the Bracket.

Use the screws included with the Handle for attachment.

4 Attach the Bracket assembly assembled in step 3 to the repeater.

### Note

- In the case of a single repeater, attachment to both the right side and left side is available. Although attachment is to the right side in the current illustration, the attachment can be to the left side of the body by turning "Bracket (Long type, Short type)" by 180 degrees in the opposite direction.

Confidential