

Instructions of RF29

1 appearance



2 Key function

Key value	Specification
PAIR	press and hold  and  button ,the remote enters pairing mode
HEAD UP	Press and hold  button, head actuator moves out, stop when released
HEAD DOWN	Press and hold  button, head actuator moves in, stop when released
FOOT UP	Press and hold  button, foot actuator moves out, stop when released
FOOTDOWN	Press and hold  button,foot actuator moves in, stop when released

HEAD UP&FOOT UP	Press and hold  button, head actuator and foot actuator moves out, stop when released
HEAD DOWN&FOOT DOWN	Press and hold  button, head actuator and foot actuator moves in, stop when released
FLAT	Press and hold  button, the bed goes flat
ZG	Click  button, the bed moves to zeroG position, press and hold zeroG button for 5s, until backlight flashes, the control set the current position as zeroG position
ANTI SNORE	Click  button, the bed moves to antisnore position, press and hold antisnore button for 5s until backlight flashes, the control set the current position as antisnore position
TV/PC	Click  button, the bed moves to TV/PC position, press and hold TV/PC button for 5s, until backlight flashes, the control set the current position as TV/PC position
FLASH LIGHT	Click  button, open or close flash light

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.


L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. Ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

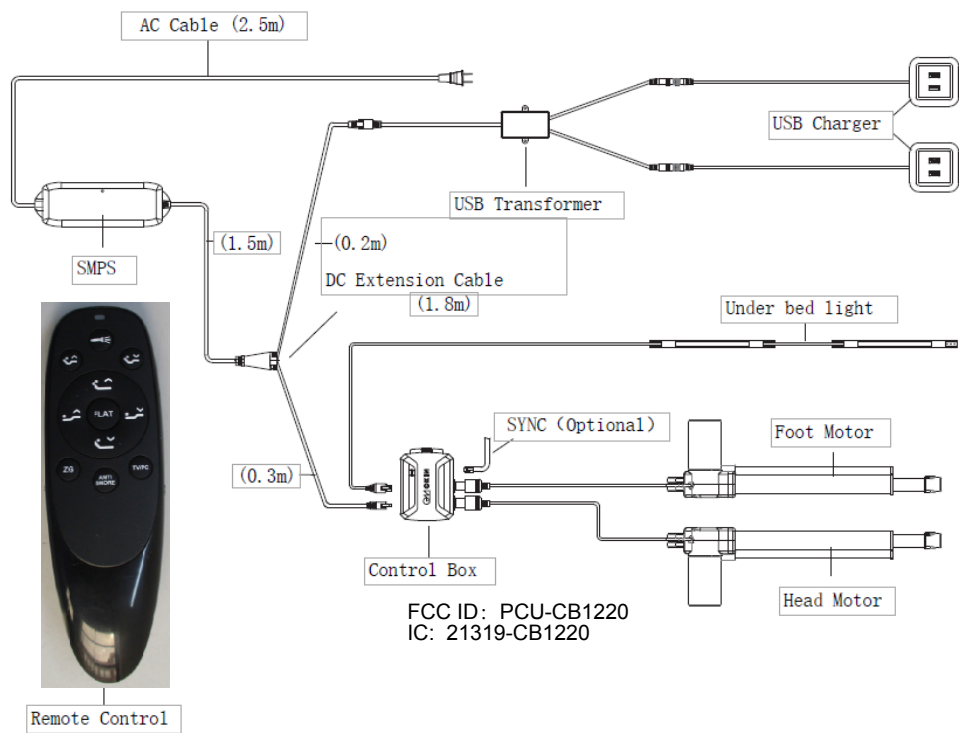

FCC ID:PCU-RF29
IC:21319-RF29