

Regulatory WLAN Antenna Information (Template)

English Language Required for Intel Regulatory Review / Approval

(OEM/ODM or antenna vendor is required to complete this document with platform antenna information.

Remove Intel references and make this your own document)

Platform information										
Brand	ODM		RMN	Intel platform (ex: Yes, No or NA)		Platform type (ex: regular NB, convertible PC, AIO...etc)		*SAR minimum separation (mm)		
HP Inc.	Compal		TPN-C159	Yes		Notebook PC		9.33mm		
*****Please fill in exact product model name and make sure the model name is visible on product cover or any parts for end users recognize for authority inspection.										
Antenna information										
Vendor		Type		Antenna Part number (Main/Tx2)			Antenna Part number (Aux/Tx1)			
WNC		PIFA		81EABP15.G19 (DC33002NZ00)			81EABP15.G20 (DC33002NZ10)			
Peak gain w/ cable loss (dBi)*										
	2.4GHz 2400-2483.5 MHz	5.2GHz 5150-5250MHz	5.3GHz 5250-5350MHz	5.6GHz 5470-5725MHz	5.8GHz 5725-5850MHz	5.9GHz 5850-5895MHz	6.2GHz 5925-6425MHz	6.5GHz 6425-6525MHz	6.7GHz 6525-6875MHz	7.0 GHz 6875-7125MHz
Main	2.27	2.07	2.29	2.91	2.91	2.64	2.82	2.79	2.42	2.79
Aux	2.08	2.56	2.56	2.36	2.70	2.55	2.72	2.72	2.23	2.23
Module Information										
Model		Form factor and suffixes								
AX211NGW		Intel Garfield Peak 2 AX211 Wi-Fi 6e +Bluetooth 5.2 M.2 2230 160MHz CNVi WW WLAN								

Table of contents

1. Applicable test method
2. Test & System Description
 - a. Test setup
 - b. Equipment list
3. Setup photo

[Section 1. Antenna Assembly Specifications](#)

[Section 2. Dimensioned Photos or Drawings of Antennas](#)

[Section 3. Radiation characteristics of antenna loaded in Host Platform](#)

[Section 4. Antenna Host Platform Location Information](#)

[Section 5. Antenna dimensional information for SAR evaluation](#)

[Section 6. Diagram Example of Co-Location Antenna Separation](#)

1. Applicable test methods

ETS-Lindgren AMS-8500 system is 3D fully anechoic chamber, it is applied to the “Conical Cut test method”, the detail description is described as below.


The Conical Cut method requires the ability of the Measurement Antenna to be physically rotated in the theta plane (overhead) of the EUT for implementations using a single Measurement Antenna, Eleven conical cuts are required to capture data at every 15 degrees from the EUT, with the top (0 degrees) and bottom (180 degrees) cuts not being measured. Typically, the EUT will remain affixed to a turntable during the entire measurement process. The Measurement Antenna will be positioned at a starting theta angle. The EUT will then be rotated around the full 360 degrees of phi rotation. The Measurement Antenna will then be positioned at the next theta angle, and the process repeated.

		θ -Axis	Φ -Axis
Passive	Step size	15°~165° step: 15°	0°~345° step: 15°
	N / M (Points)	12	24

2. Test & System Description

a. Test setup

Typical Setup for ETS-Lindgren AMS-8500:


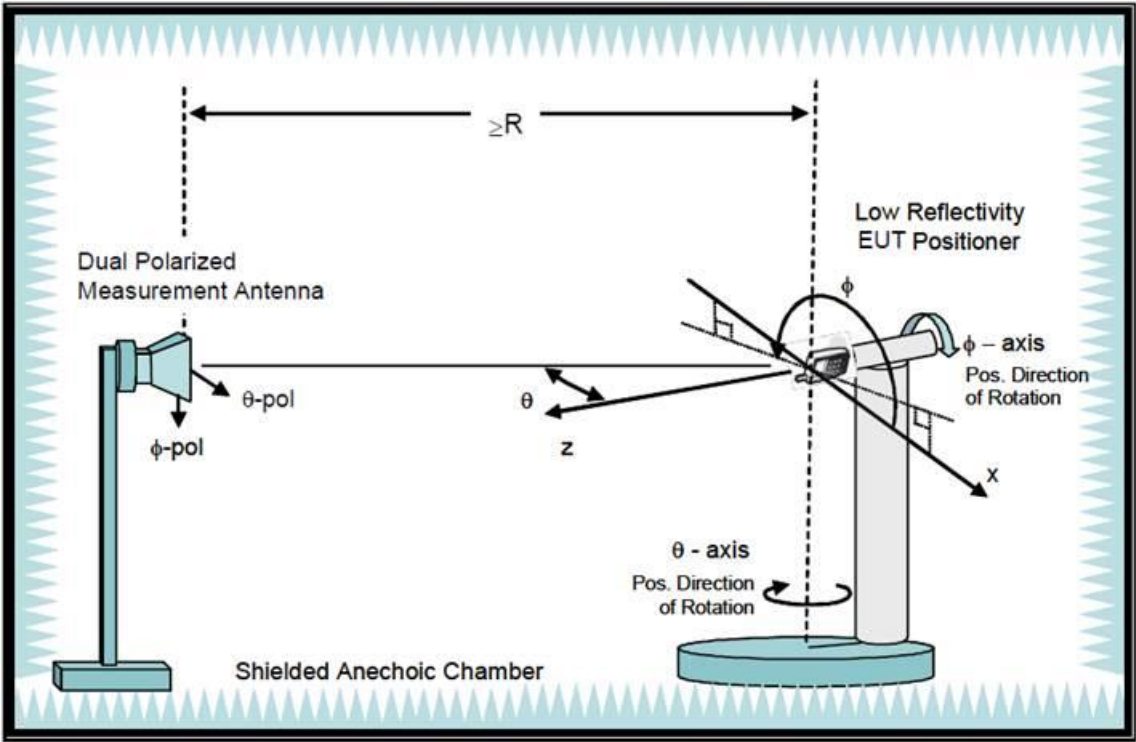


b. Equipment list

Equipment Description	Manufacturer	Identification No.	Current calibration Date	Next calibration Date
Network Analyzer	Agilent	E5071C	2022/1/7	2023/1/6
Measurement Software	ETS-Lindgren	EMQuest	N/A	N/A
Multi axis positioning System(MAPS™)	ETS-Lindgren	EMCO 2115	N/A	N/A
Multi axis positioning System(MAPS™)	ETS-Lindgren	EMCO 2110	N/A	N/A
MAPS™ Controller	ETS-Lindgren	EMCO 2090	N/A	N/A
ETS OTA Chamber	ETS-Lindgren	AMS8500	2022/3/3	2022/3/2
Horn Antenna	ETS-Lindgren	3164-10	2022/3/3	2022/3/2

N/A : Not Applicable
Note : Chamber calibration included full set of implement

3. Setup photo

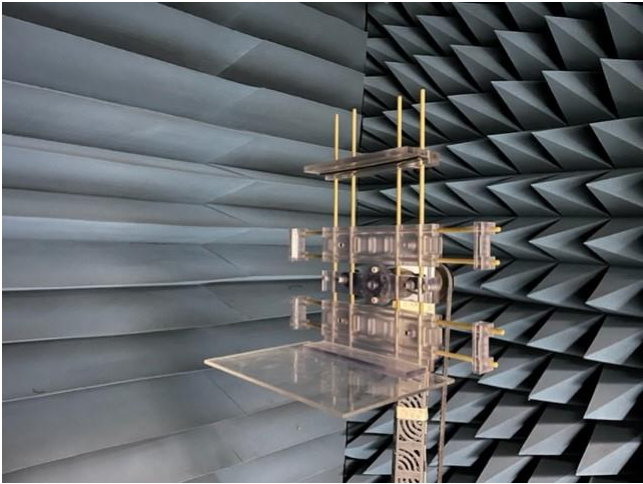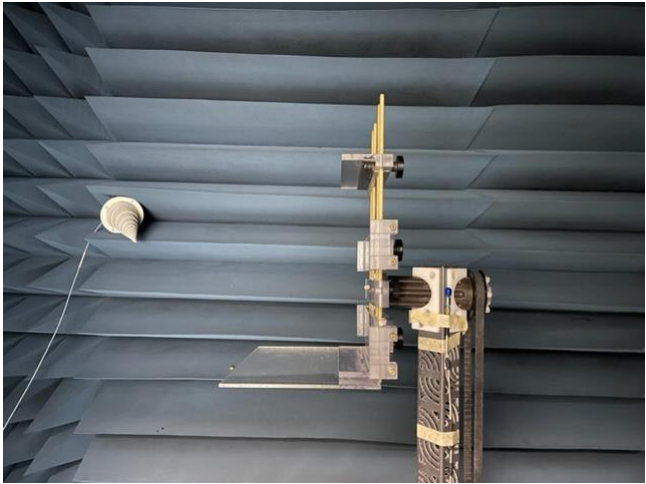

Antenna Information


Section 1. Antenna Assembly Specifications

1A	1B	1C	1D		1E	1F	1G	1H
Antenna Part Number	Manufacturer	Antenna Type	Cable Assembly Part Number and Information	Freq Range MHz	* Peak Gain W/ Cable loss (dBi)	Peak Gain w/o Cable Loss (dBi)	Max VSWR	Cable Loss (dB)
P/N: 81EABP15.G19 (DC33002NZ00) Main Antenna (TX2)	Wistron Neweb Corporation	PIFA	(P/N: 81EABP15.G19) 50 ohm Coaxial length: 187.0 mm diameter: 1.13 mm	2400-2495	2.27	2.85	3.0	0.58
				5150-5250	2.07	2.89	3.0	0.82
				5250-5350	2.29	3.11	3.0	0.82
				5470-5725	2.91	3.75	3.0	0.84
				5725-5850	2.91	3.77	3.0	0.86
				5850-5895	2.64	3.50	3.0	0.86
				5925-6425	2.82	3.71	3.0	0.89
				6425-6525	2.79	3.72	3.0	0.93
				6525-6875	2.42	3.39	3.0	0.97
				6875-7125	2.79	3.81	3.0	1.02
P/N: 81EABP15.G20 (DC33002NZ10) Aux Antenna (TX1)	Wistron Neweb Corporation	PIFA	(P/N: 81EABP15.G20) 50 ohm Coaxial length: 242 mm diameter: 1.13 mm	2400-2495	2.08	2.80	3.0	0.72
				5150-5250	2.56	3.58	3.0	1.02
				5250-5350	2.56	3.58	3.0	1.02
				5470-5725	2.36	3.41	3.0	1.05
				5725-5850	2.70	3.77	3.0	1.07
				5850-5895	2.55	3.62	3.0	1.07
				5925-6425	2.72	3.82	3.0	1.10
				6425-6525	2.72	3.86	3.0	1.14
				6525-6875	2.23	3.41	3.0	1.18
				6875-7125	2.23	3.46	3.0	1.23


Section 2. Dimensioned Photos and Drawings of Antennas

Include the dimensioned photo and drawing of Main antenna here.

Main Antenna Drawing:

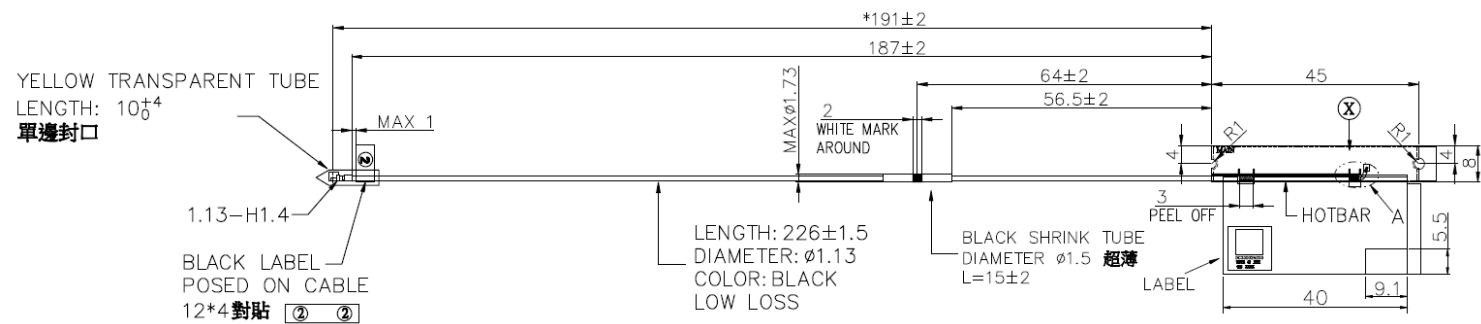

Main Antenna Photo (Front/Back):

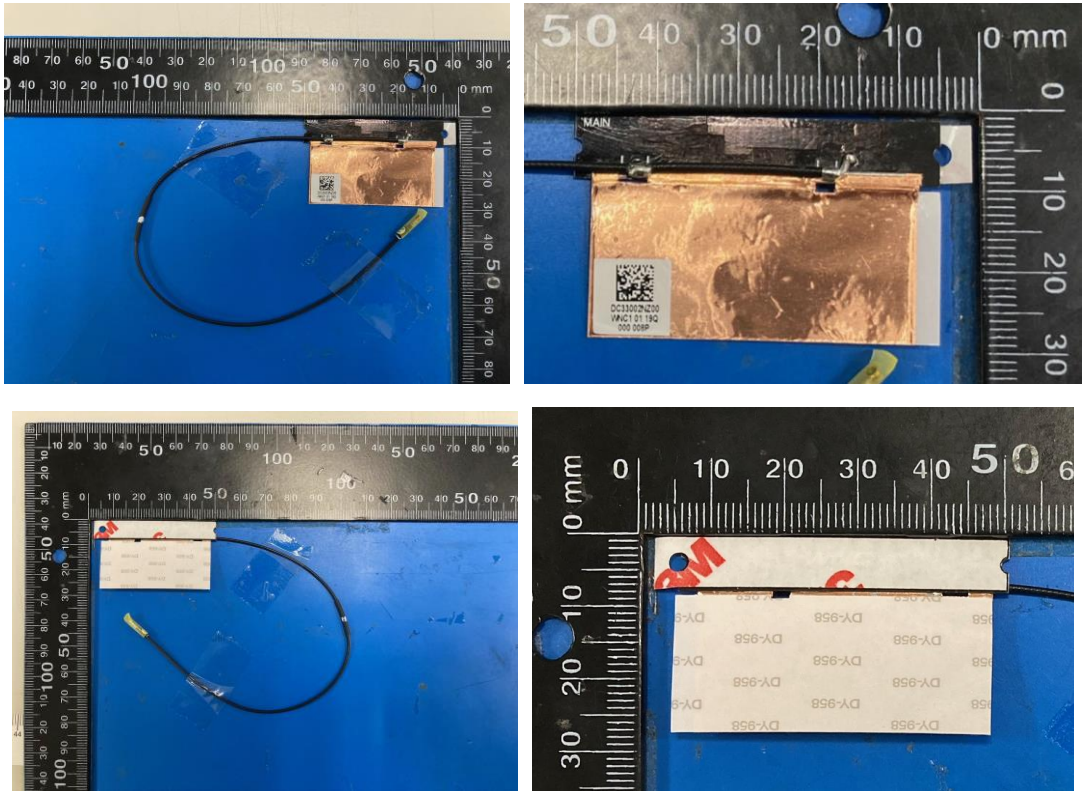

Note: antenna photo should include L type ruler

YELLOW TRANSPARENT TUBE
LENGTH: 10 ± 4
單邊封口

MAX 1

1.13-H1.4

WHITE LABEL
POSED ON CABLE
12*4 對貼 (1) (1)

LENGTH: 281 ± 1.5
DIAMETER: $\phi 1.13$
COLOR: BLACK
LOW LOSS

* 246 ± 2
 242 ± 2

MAX $\phi 1.73$

2 WHITE MARK AROUND

119 ± 2
 111.5 ± 2

BLACK SHRINK TUBE
DIAMETER $\phi 1.5$ 超薄
L= 15 ± 2

45

4

PEEL OFF

HOTBAR

A

20

40


LABEL

Note: antenna photo should include L type ruler


Section 3. Radiation characteristics of antenna loaded in Host Platform

Main Antenna


Max Antenna 2D Radiation Pattern 2400 – 2495 MHz

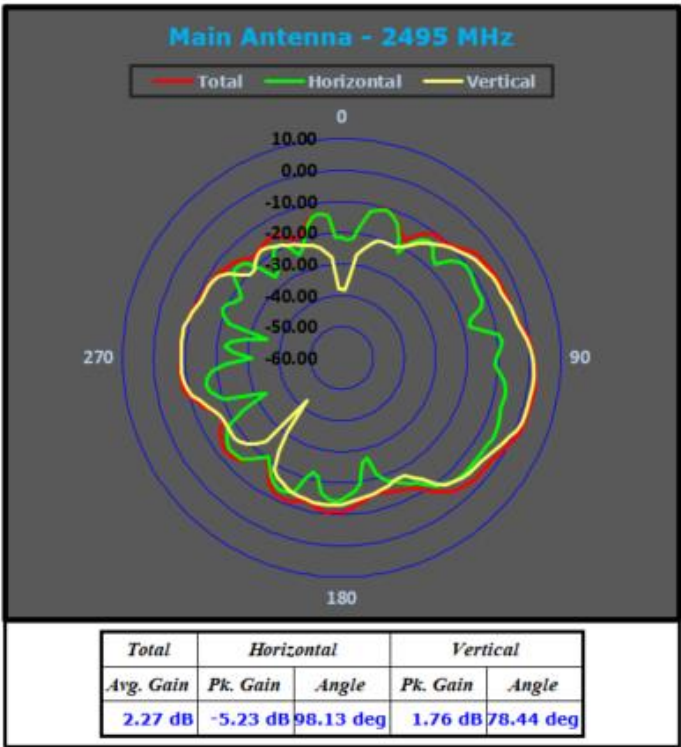


Max Antenna 2D Radiation Pattern 5150 – 5250 MHz

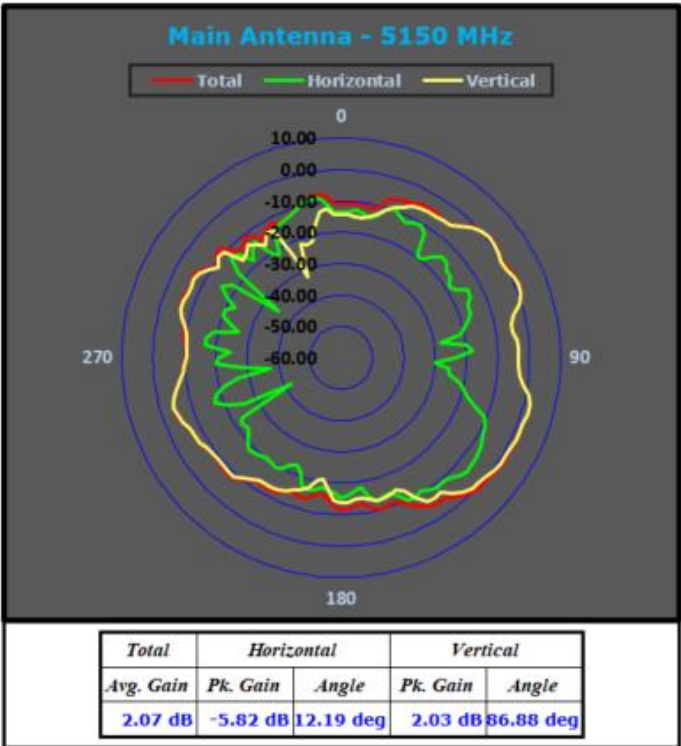


Max Antenna 2D Radiation Pattern 5250 – 5350 MHz

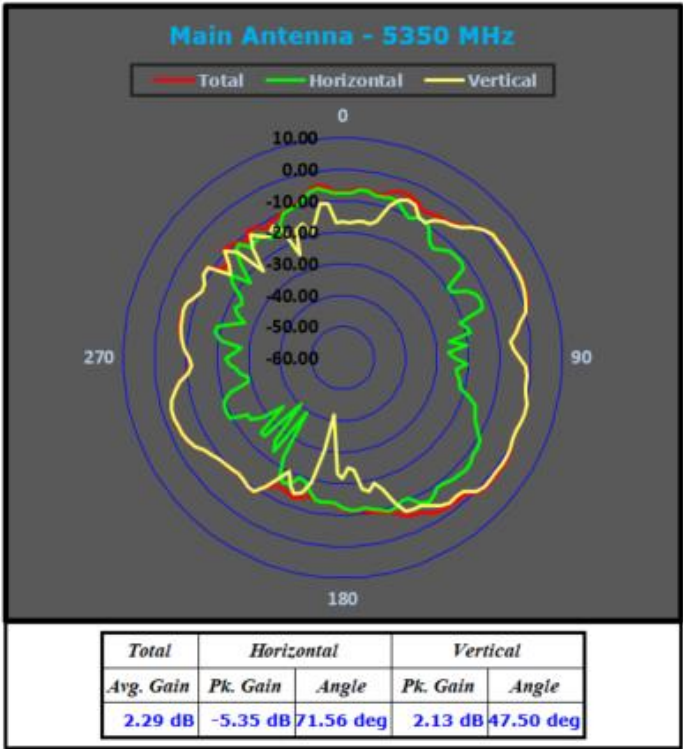


Max Antenna 2D Radiation Pattern 5470 – 5725 MHz

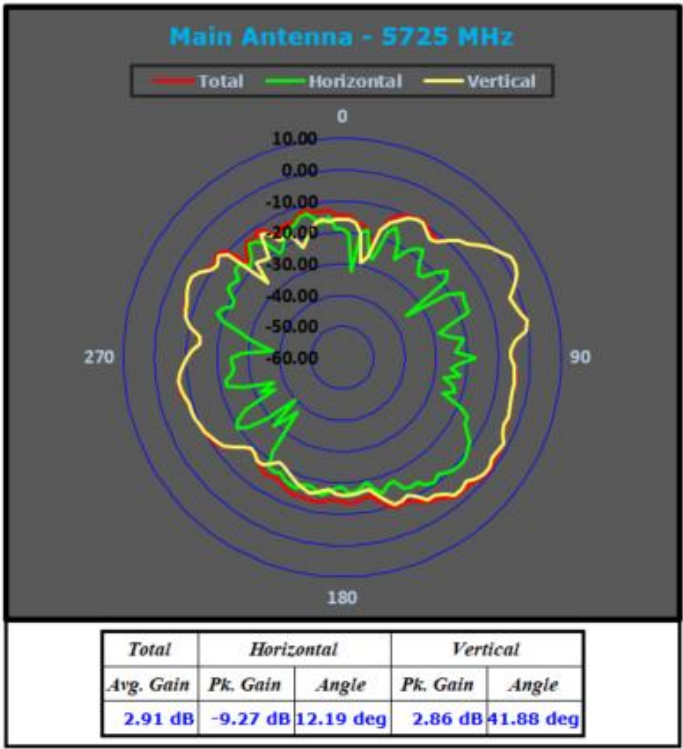


Max Antenna 2D Radiation Pattern 5725 – 5850 MHz

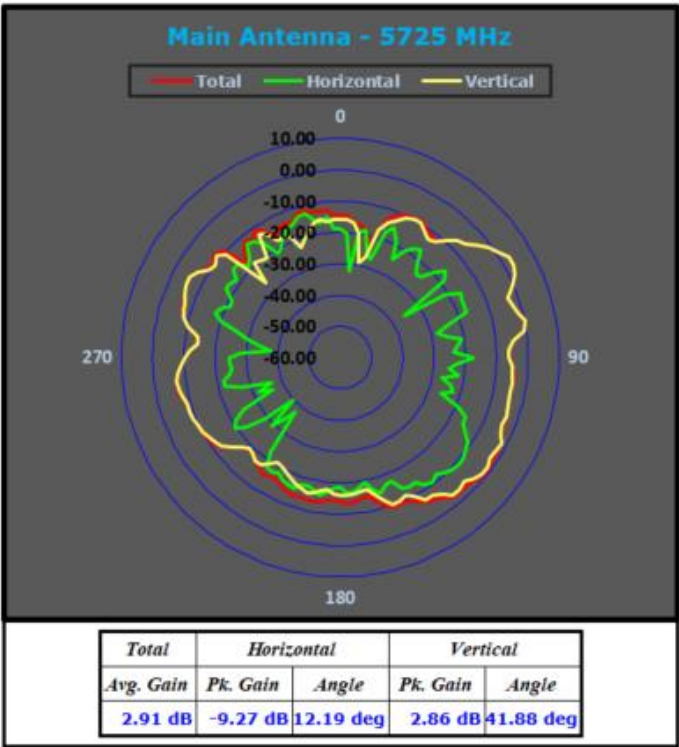


Max Antenna 2D Radiation Pattern 5850 – 5895 MHz

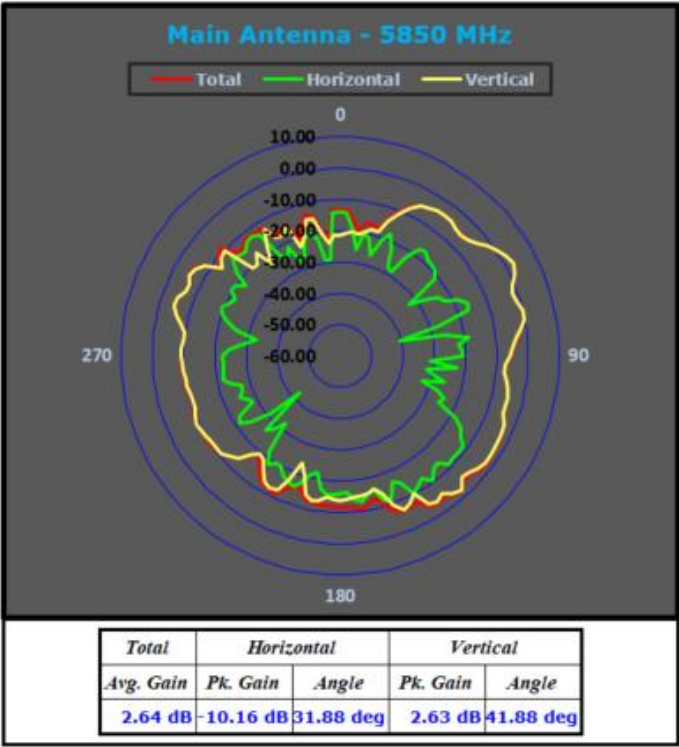


Max Antenna 2D Radiation Pattern 5925 – 6425 MHz

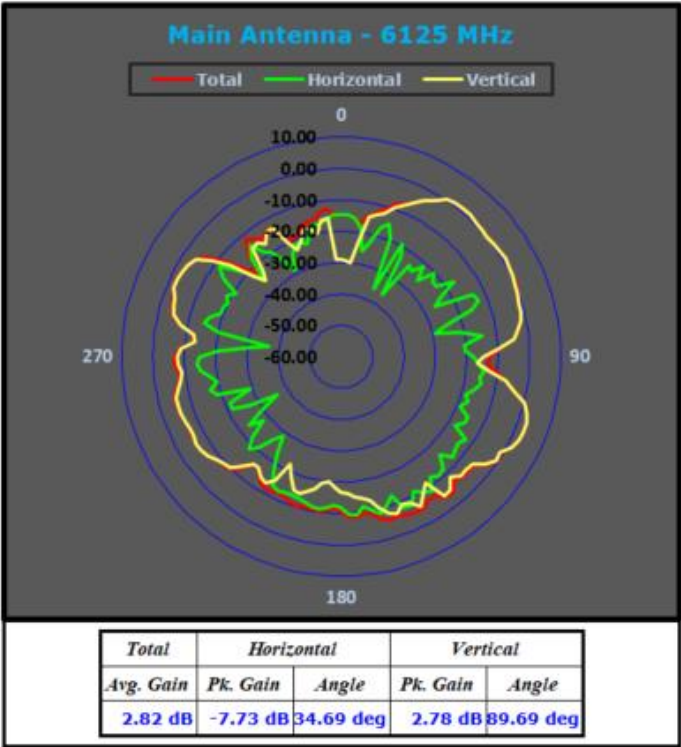


Max Antenna 2D Radiation Pattern 6425 – 6525 MHz

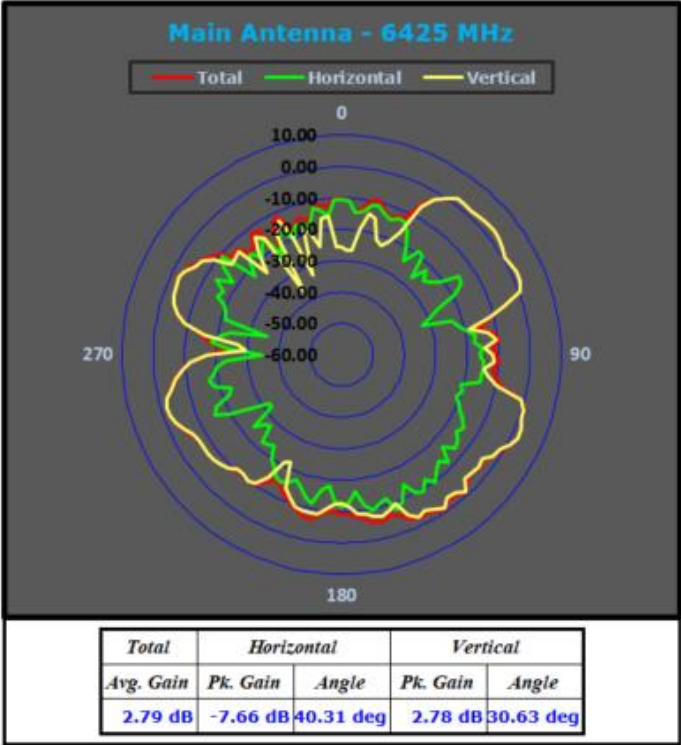

Max Antenna 2D Radiation Pattern 6525 – 6875 MHz

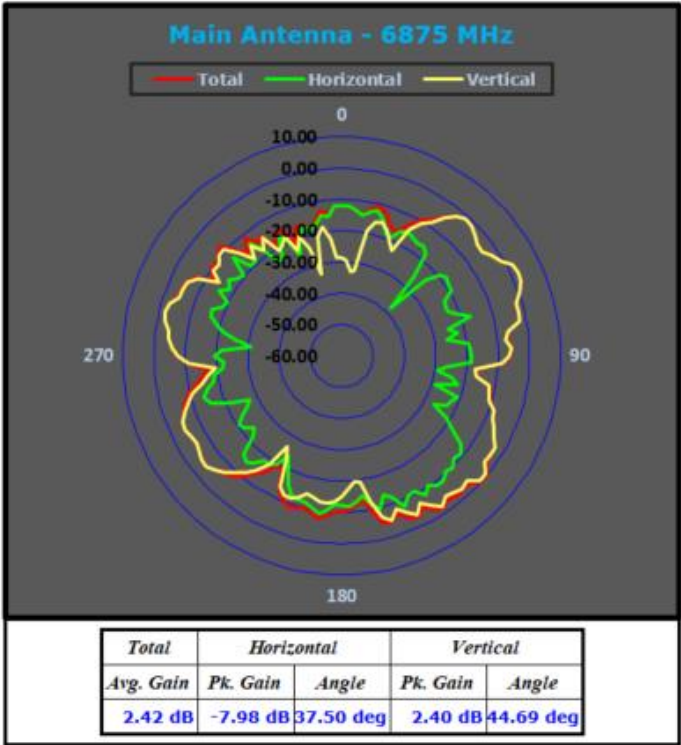


Max Antenna 2D Radiation Pattern 6875 – 7125 MHz

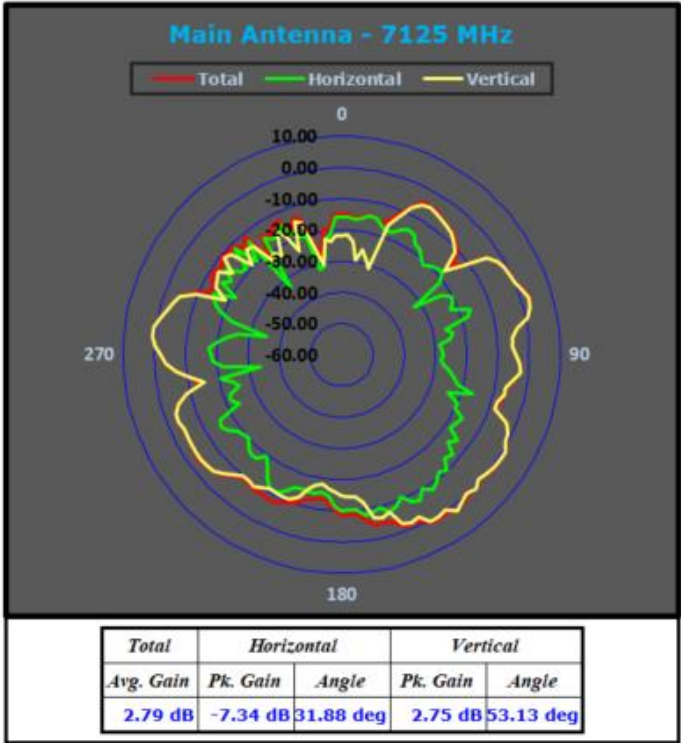


Auxiliary Antenna


Max Antenna 2D Radiation Pattern 2400 – 2483.5 MHz

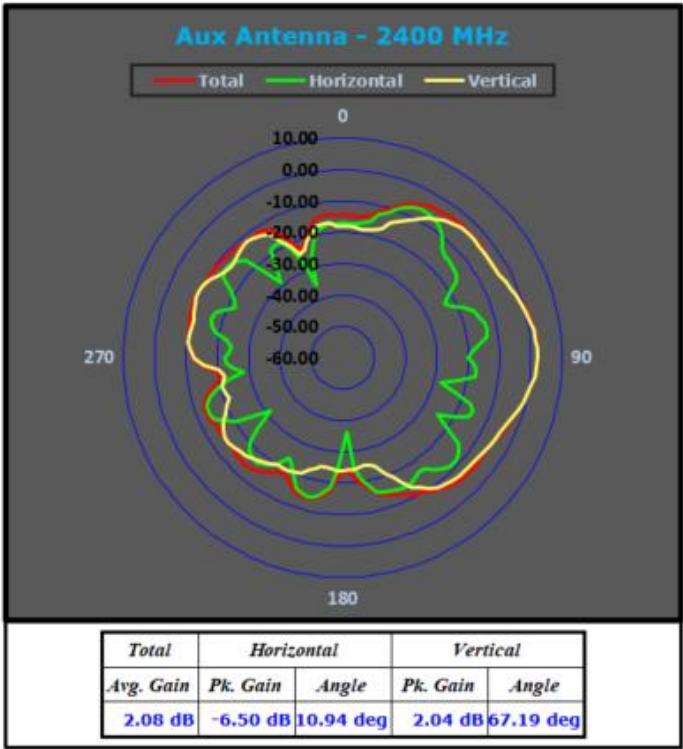


Max Antenna 2D Radiation Pattern 5150 – 5250 MHz

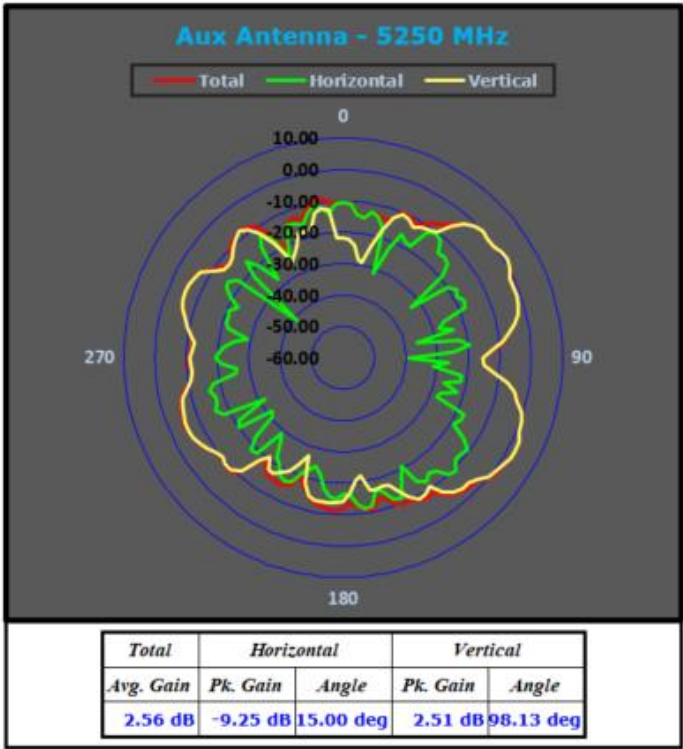


Max Antenna 2D Radiation Pattern 5250 – 5350 MHz

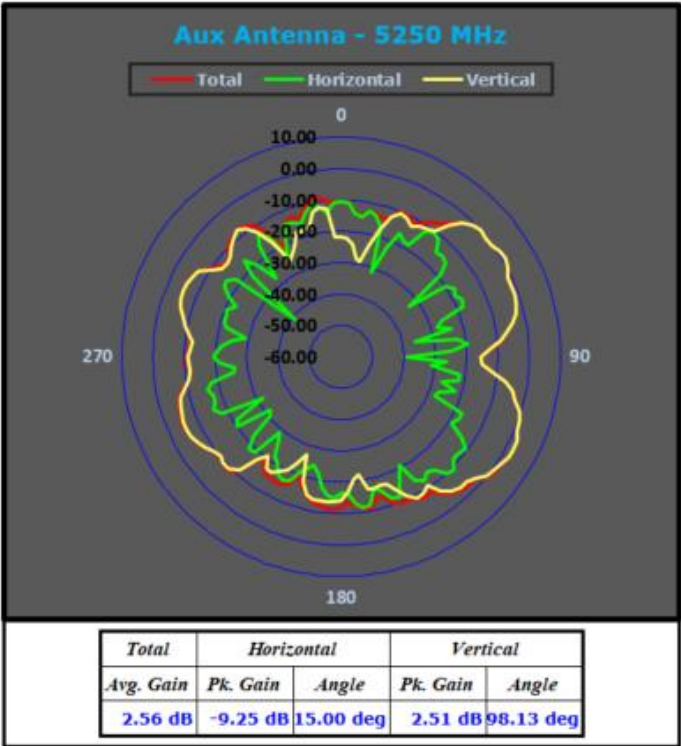


Max Antenna 2D Radiation Pattern 5470 – 5725 MHz

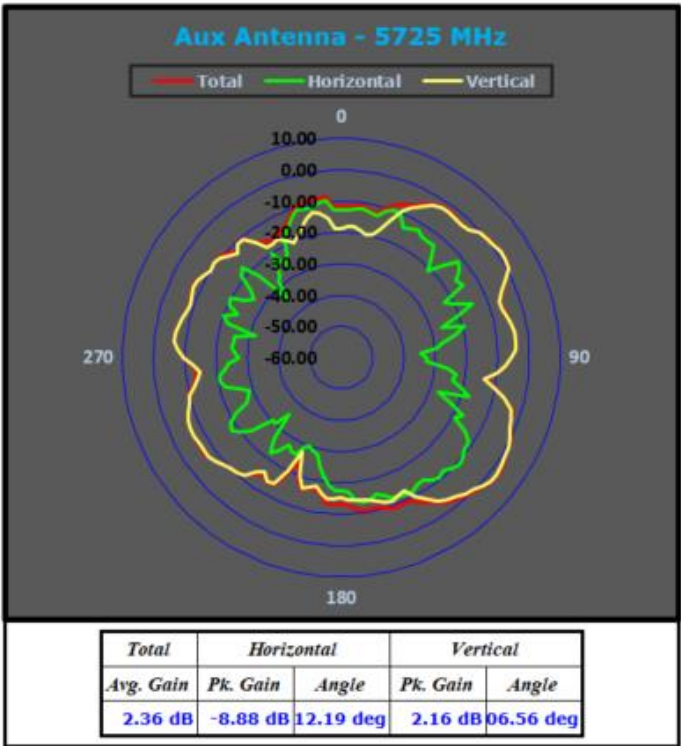


Max Antenna 2D Radiation Pattern 5725 – 5850 MHz

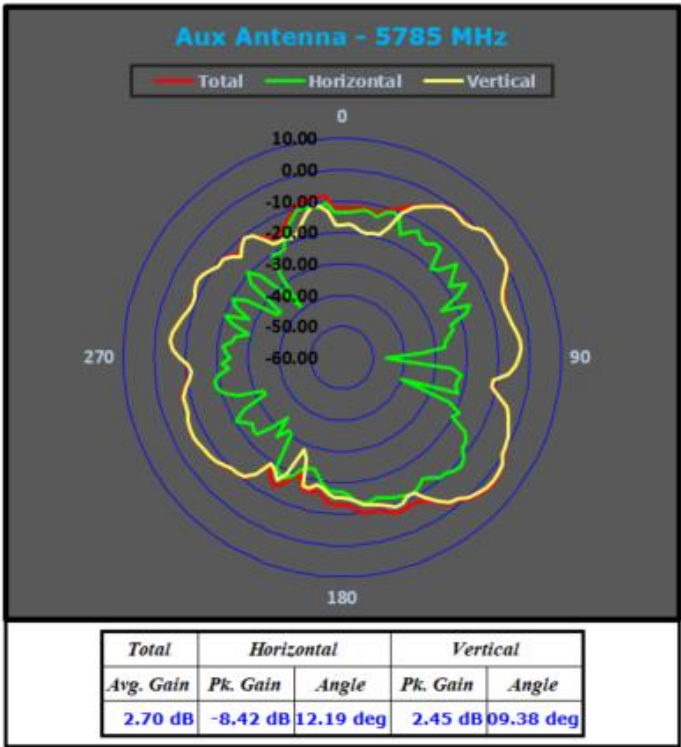


Max Antenna 2D Radiation Pattern 5850 – 5895 MHz

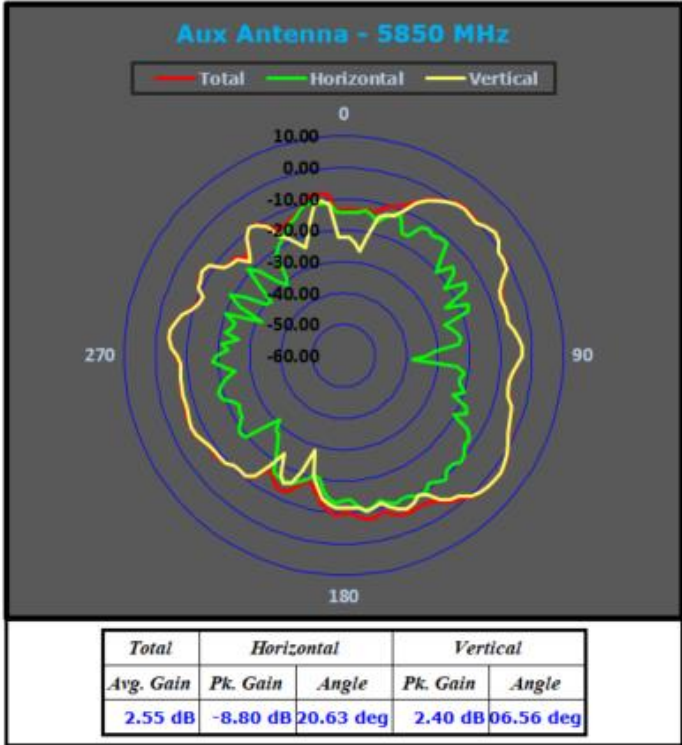


Max Antenna 2D Radiation Pattern 5925 – 6425 MHz

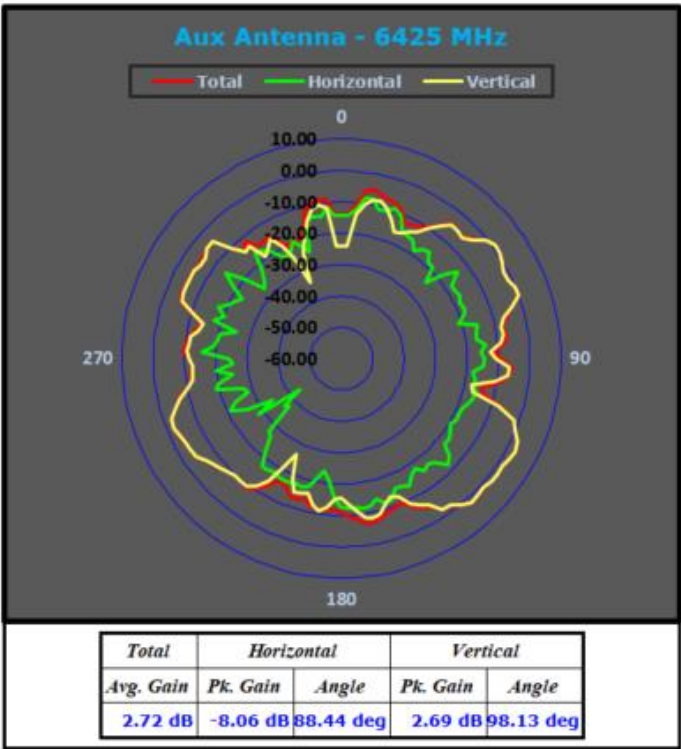


Max Antenna 2D Radiation Pattern 6425 – 6525 MHz

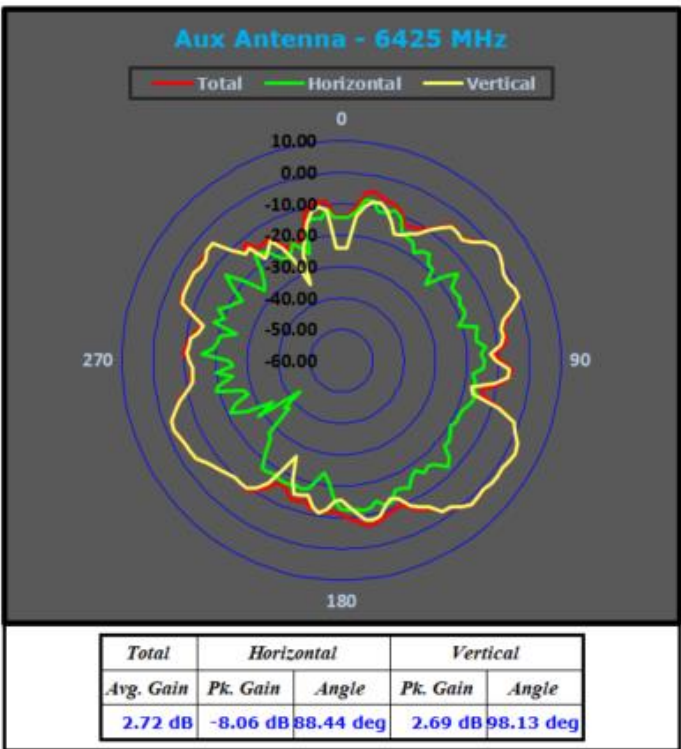

Max Antenna 2D Radiation Pattern 6525 – 6875 MHz

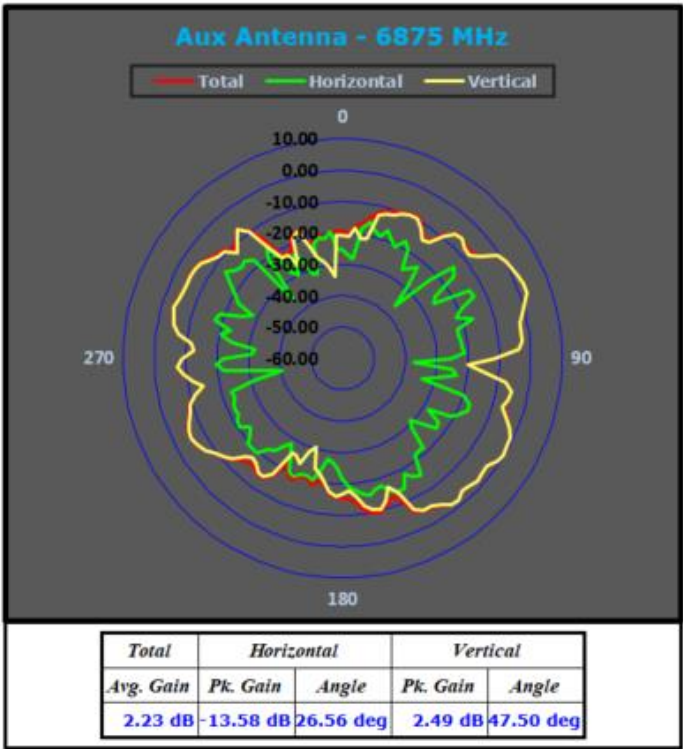

Max Antenna 2D Radiation Pattern 6875 – 7125 MHz

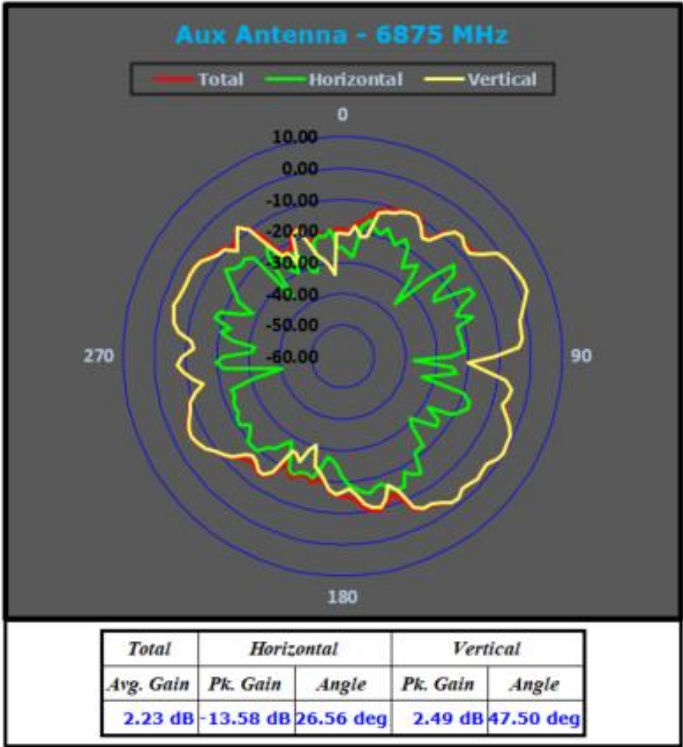


Section 4. Antenna Host Platform Location Information


Include a **dimensioned photo(s) or dimensioned drawing(s)** of Main and Aux antenna placements (measurements are not required for receive-only antenna).

Any antenna that transmits must show dimensions to bottom of laptop. Provide a description of the materials that are used for supporting or surrounding transmit antennas; for example, non-conductive plastics vs. conductive coated plastic or metallic materials.

SKU 60W (DG2)

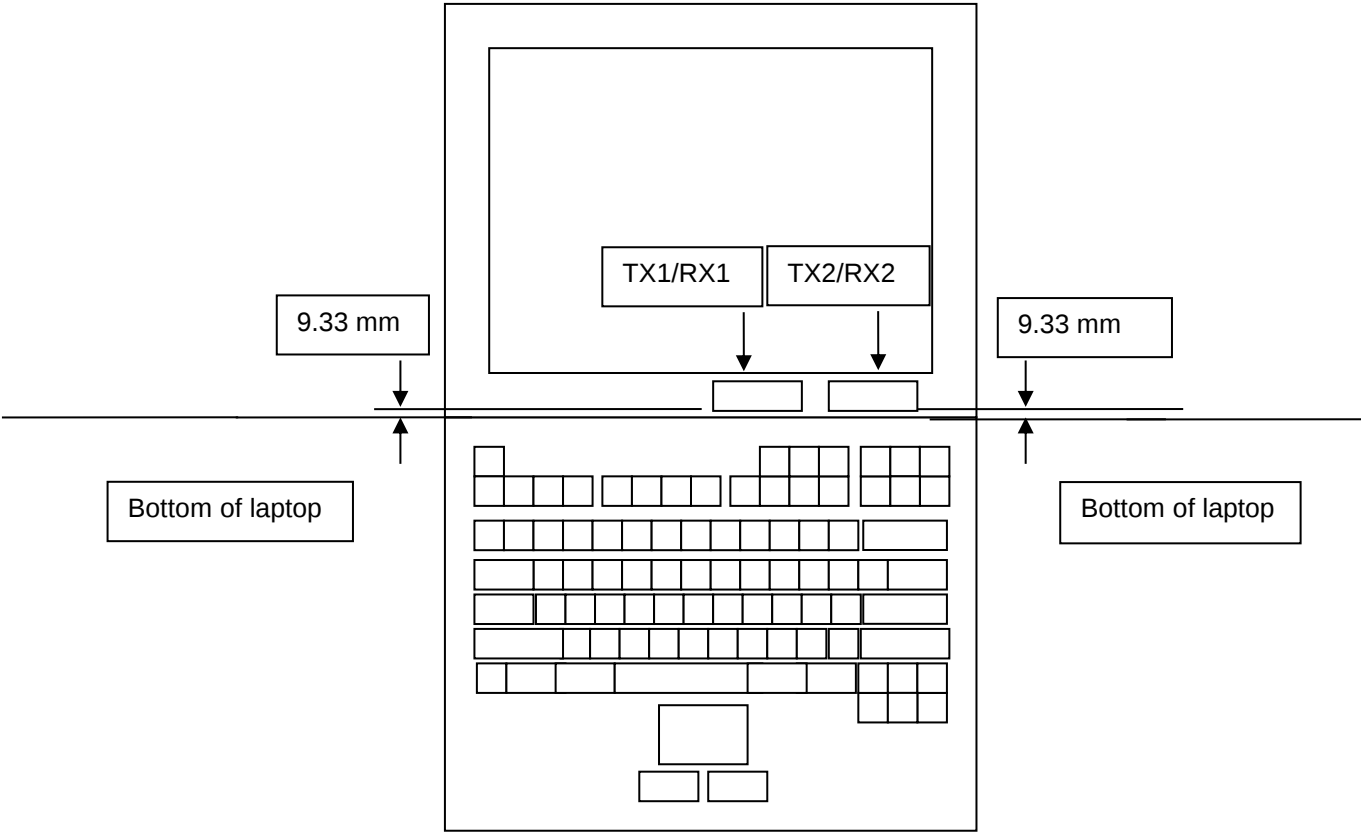


SKU 80W (GN20)

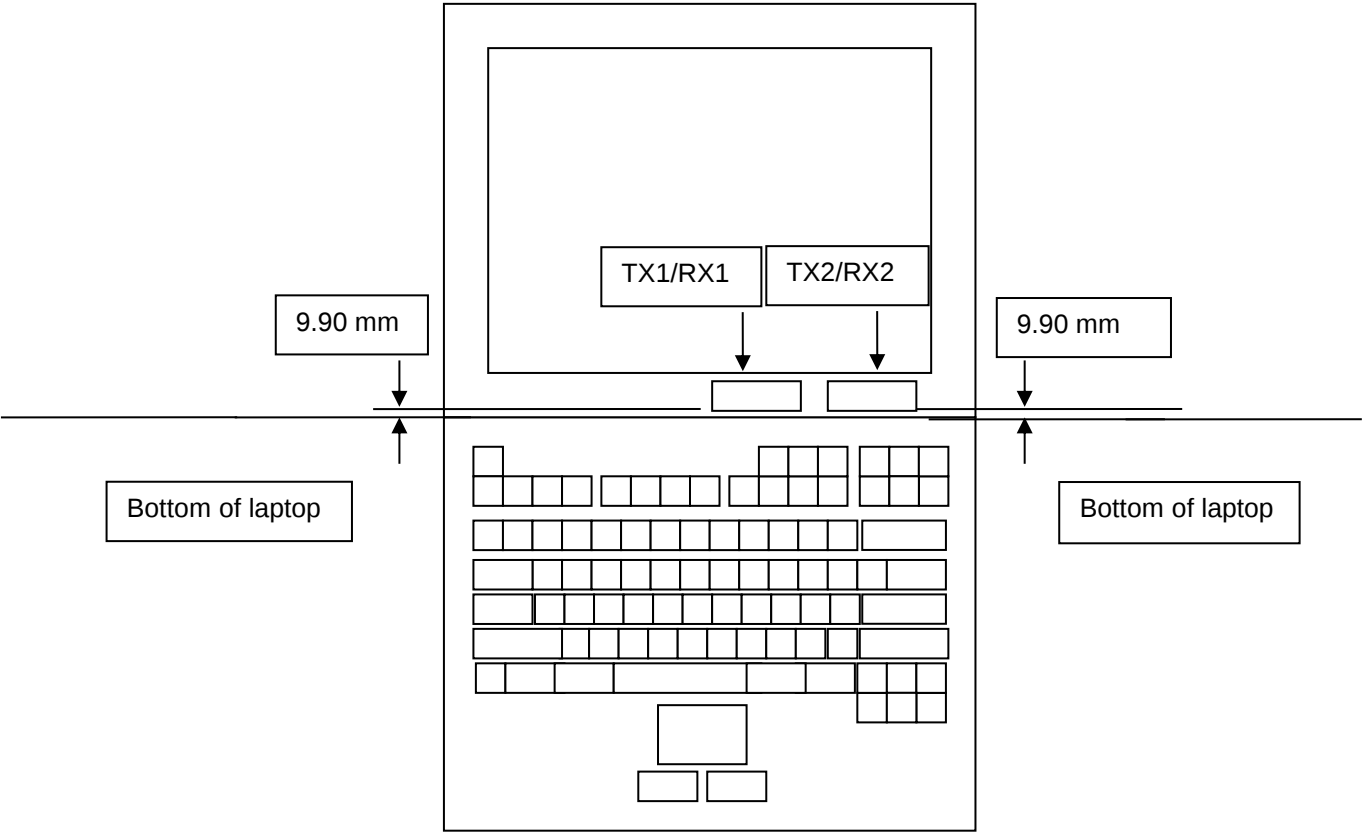


Section 5. Antenna dimensional information for SAR evaluation

Include a **dimensioned photo(s) or dimensioned drawing(s)** showing the distance (mm) between the transmit antennas and the user. For notebook/laptop hosts show lapheld position (example below). For tablet hosts show all orientations including lapheld, primary & secondary portrait, primary & secondary landscape positions. Include a description of any proximity sensors or power throttling implementations that limit or exclude use of any host orientation.

SKU 60W (DG2)

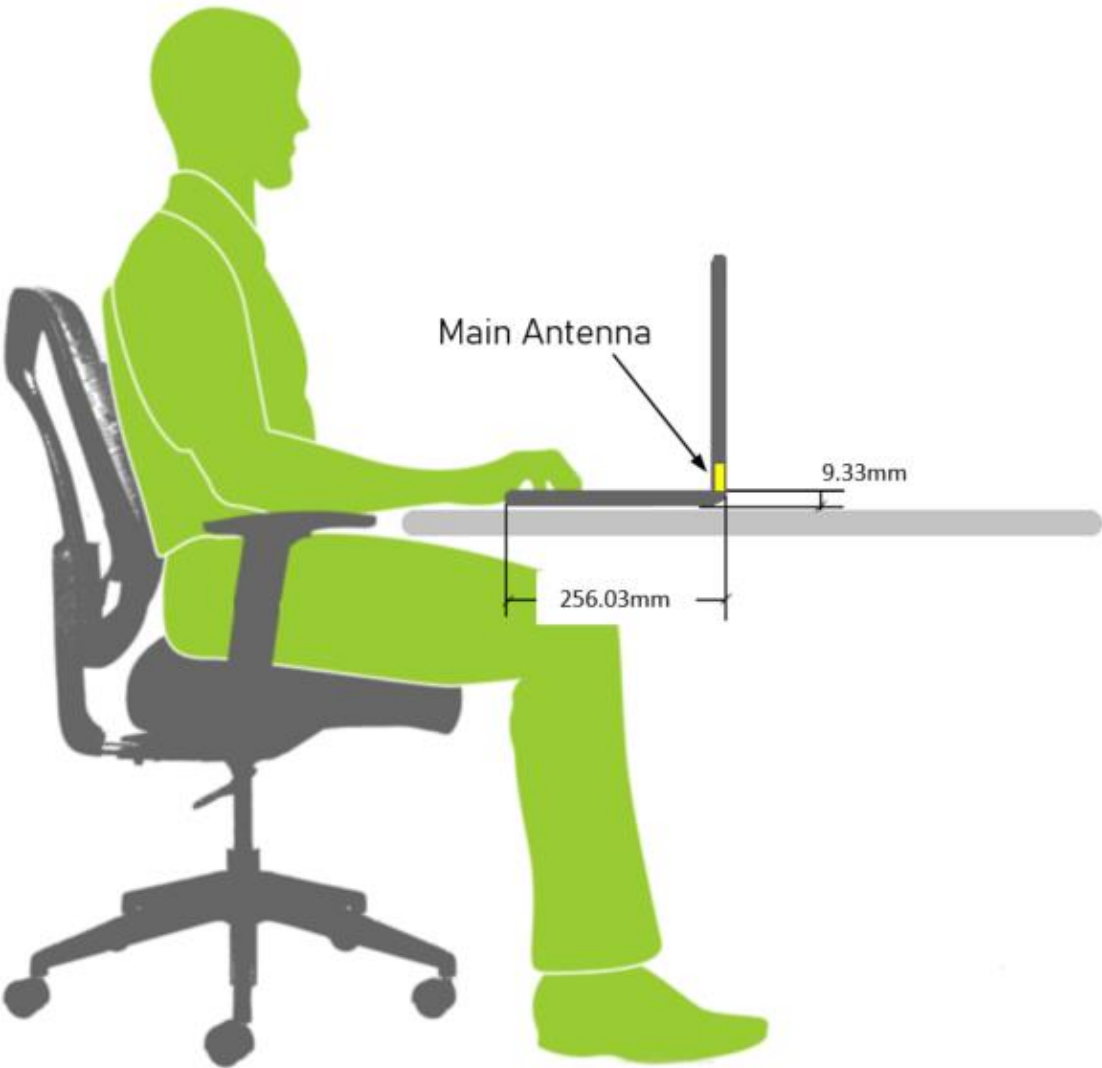

SKU 80W (GN20)

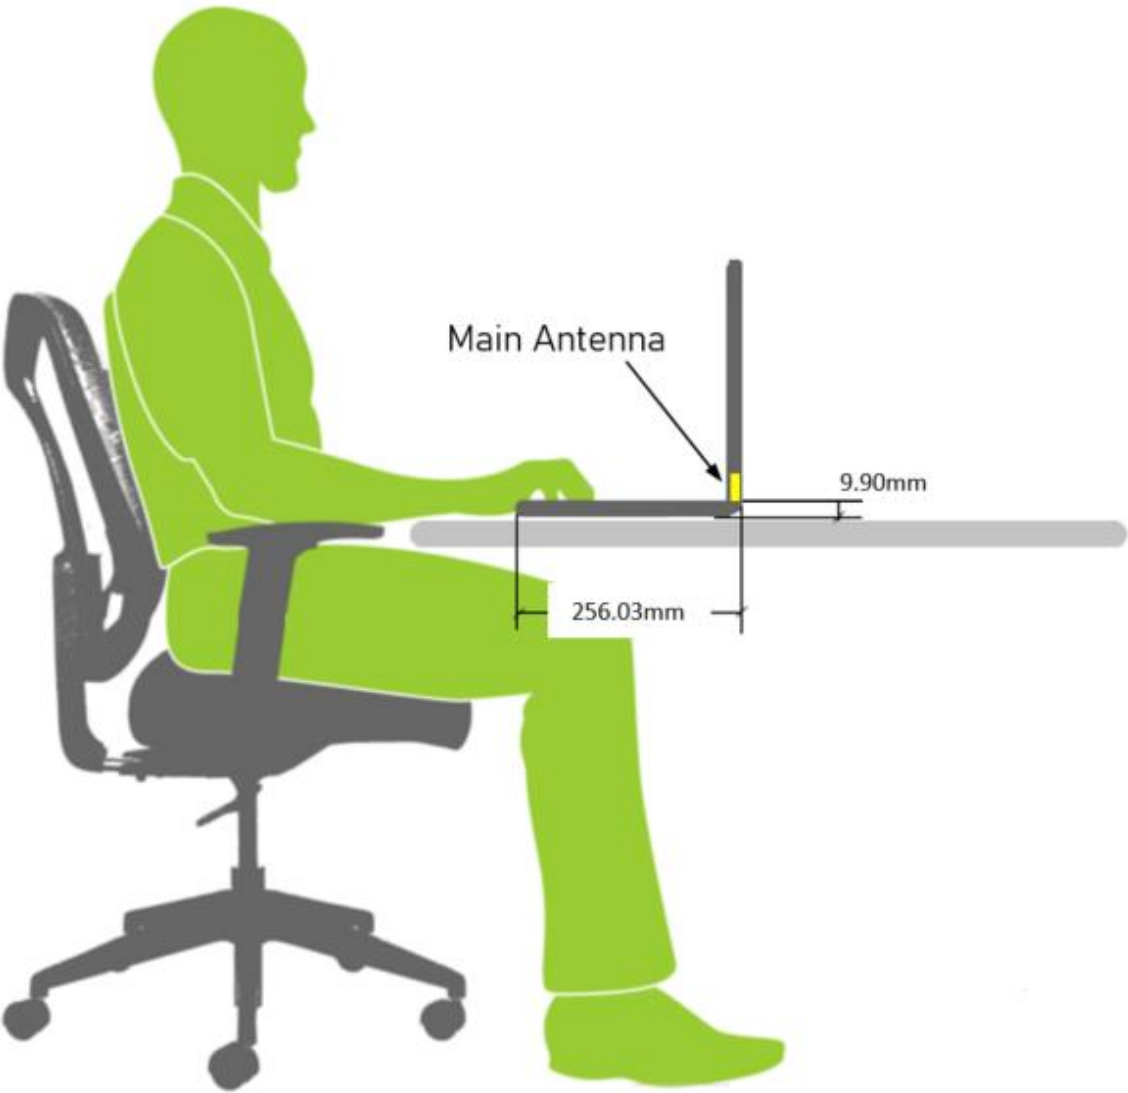


Section 6. Diagram Example of Co-Location Antenna Separation

Include a **dimensioned photo or dimensioned drawing** showing the distance (mm) between all WLAN transmit antennas and other co-located radiator transmit antenna such as Bluetooth, WWAN,..

(Note: Due to the evolving rules regarding co-location, each platform will need to be reviewed on a case by case basis)

SKU 60W (DG2)

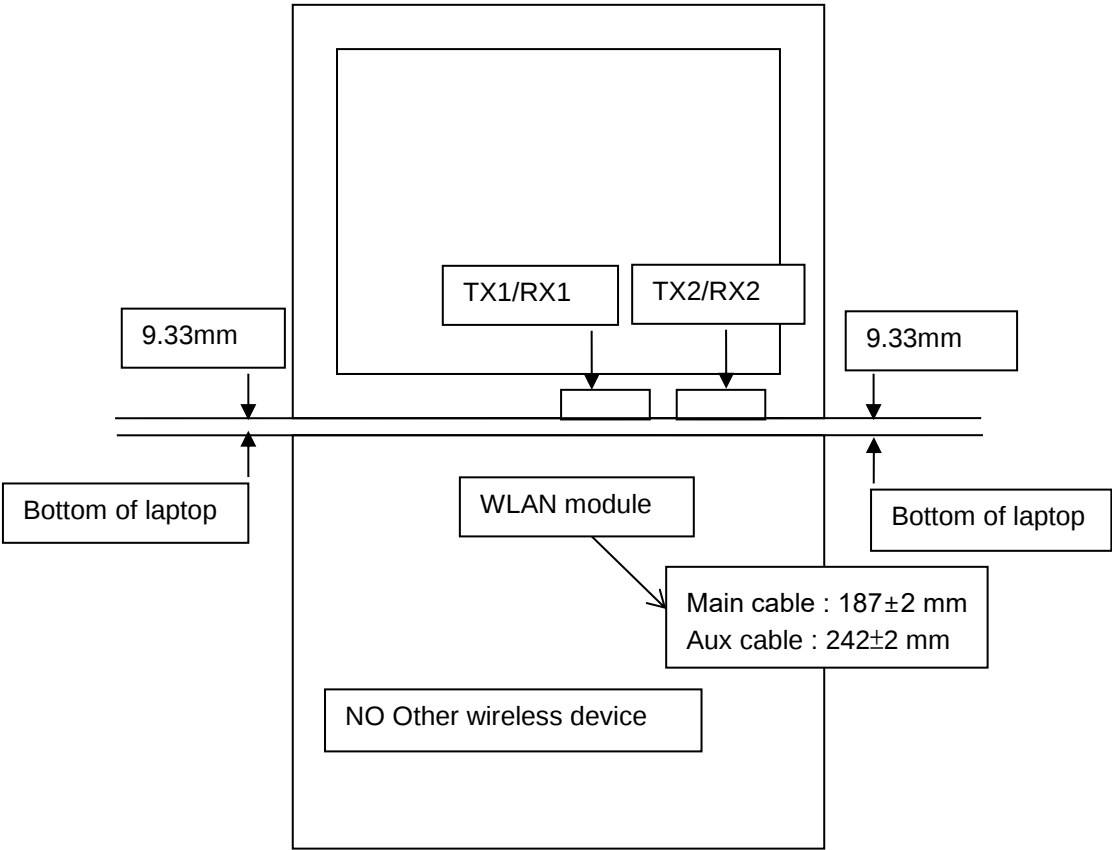

SKU 80W (GN20)

