




APPENDIX B – EUT TEST SETUP PHOTOGRAPHS



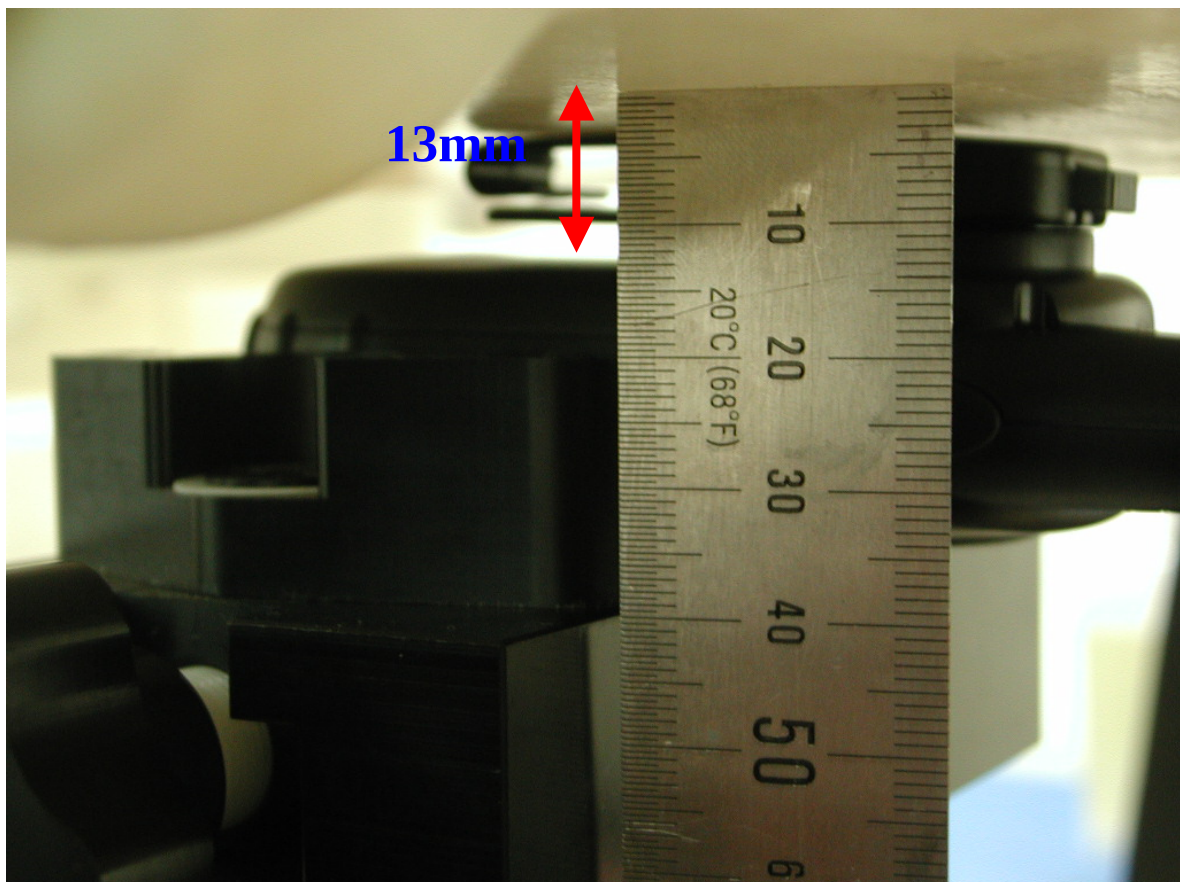

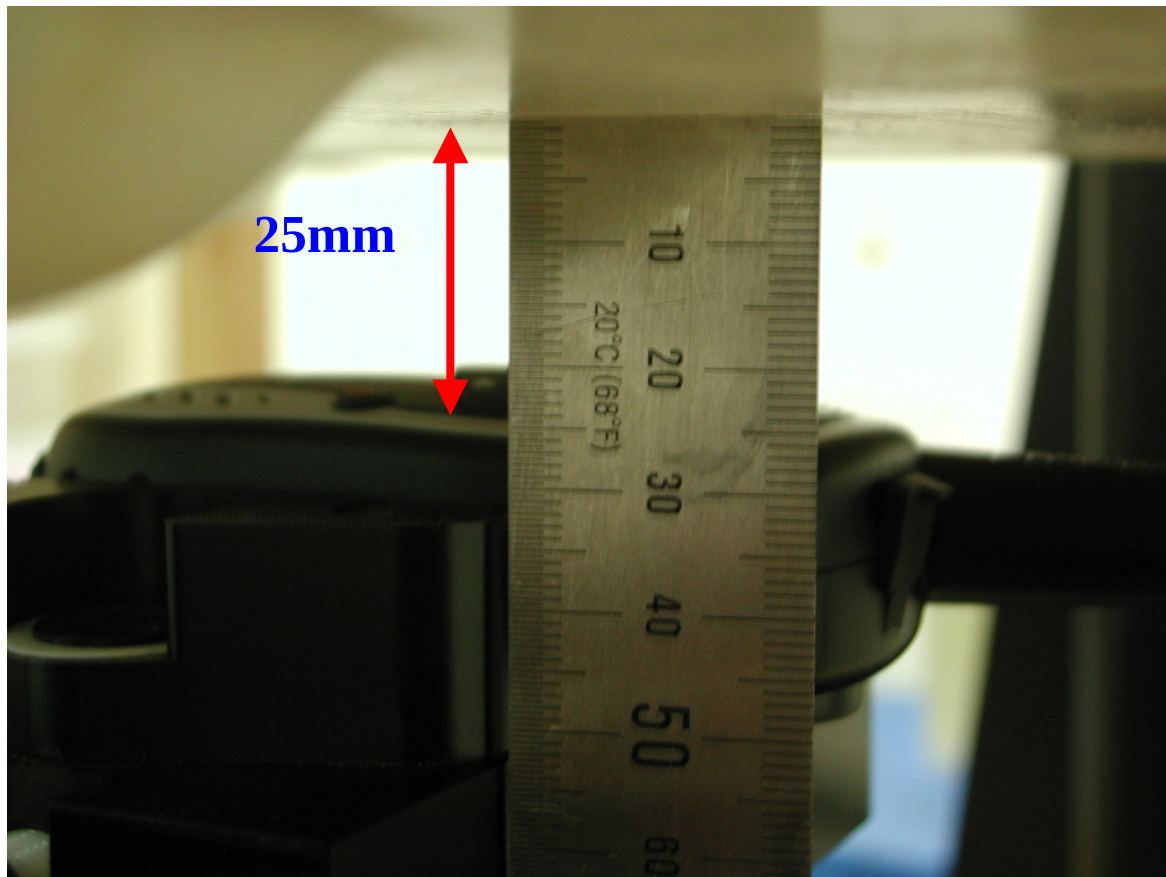


[Tissue Liquid Depth : 15cm]

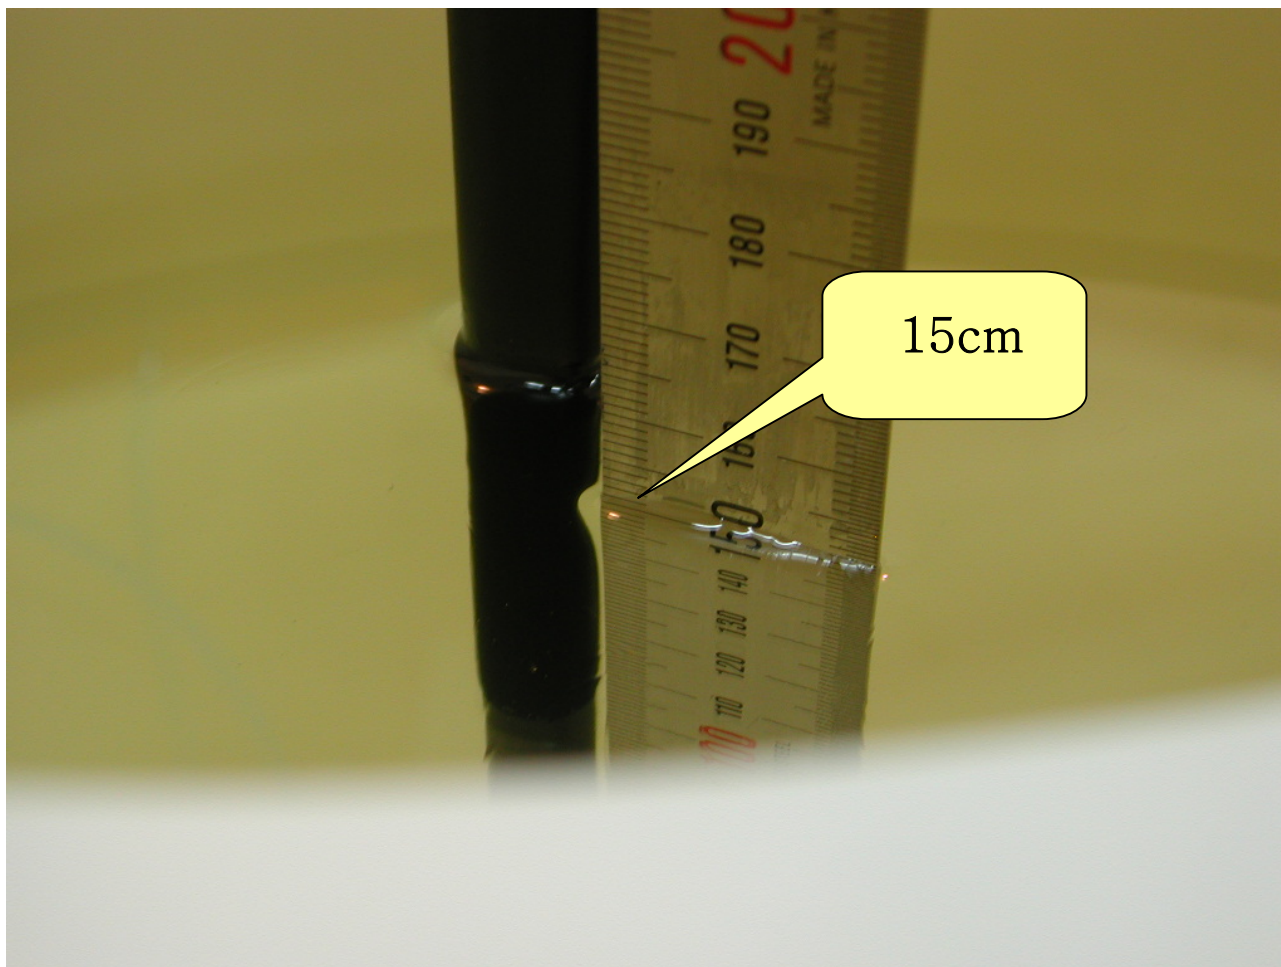


■ Battery Type: Rocket (Alkaline)

GMRS	
Time	Power Out
0	1.900
2	1.840
4	1.760
6	1.700
8	1.650
10	1.595
12	1.580
14	1.560
16	1.550
18	1.540
20	1.530
22	1.520
24	1.510
26	1.500
28	1.490
30	1.480
32	1.470
34	1.460
36	1.450
38	1.440
40	1.440

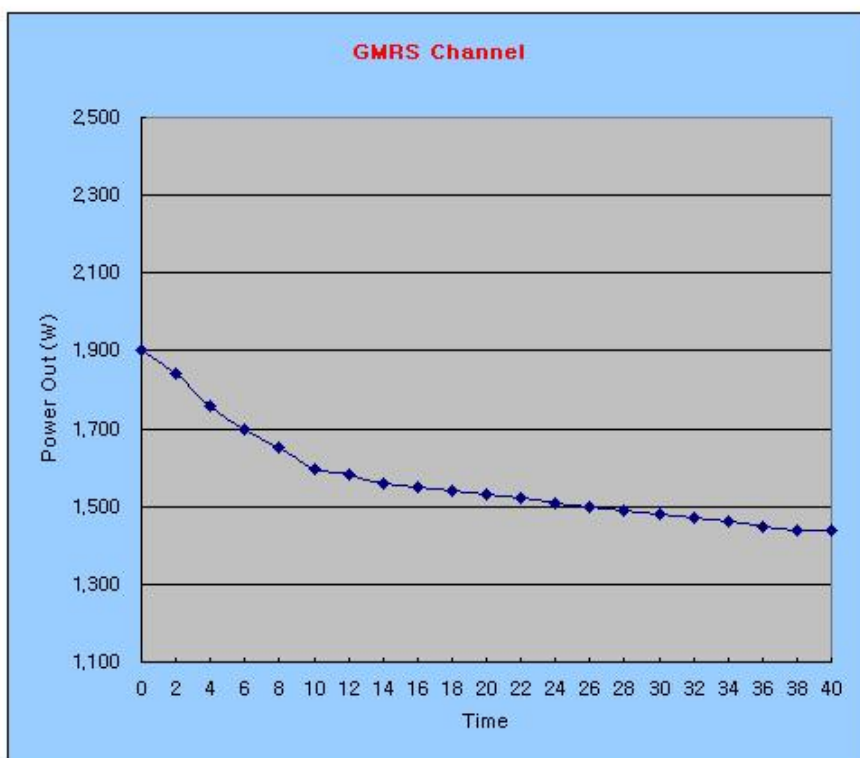

■ Battery Type: Duracell (Alkaline)

FRS	
Time	Power Out
0	0.870
2	0.850
4	0.830
6	0.820
8	0.810
10	0.804
12	0.800
14	0.798
16	0.796
18	0.794
20	0.792
22	0.789
24	0.786
26	0.783
28	0.782
30	0.779
32	0.777
34	0.775
36	0.774
38	0.772
40	0.769

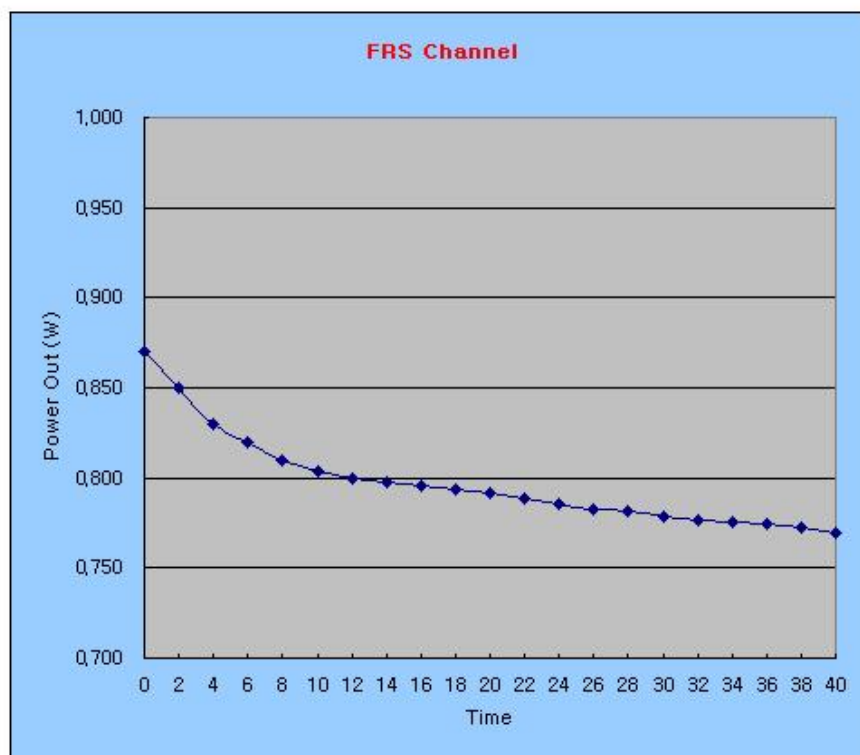

Date : December 31, 2003

Federal Communications Commission
Authorization and Evaluation Division
7435 Oskland Mills Road
Columbia, MD21046


Subject : GMRS 6000 Model Battery Type

To whom it may concern

Here we would like to confirm that the 'AAA' type batteries only should be used

For this subject model GMRS 6000.(FCC ID: PDHGMRS6000)

Sincerely Yours,
TTI tech Co., Ltd.



President / W. K. You