




APPENDIX B – EUT TEST SETUP PHOTOGRAPHS

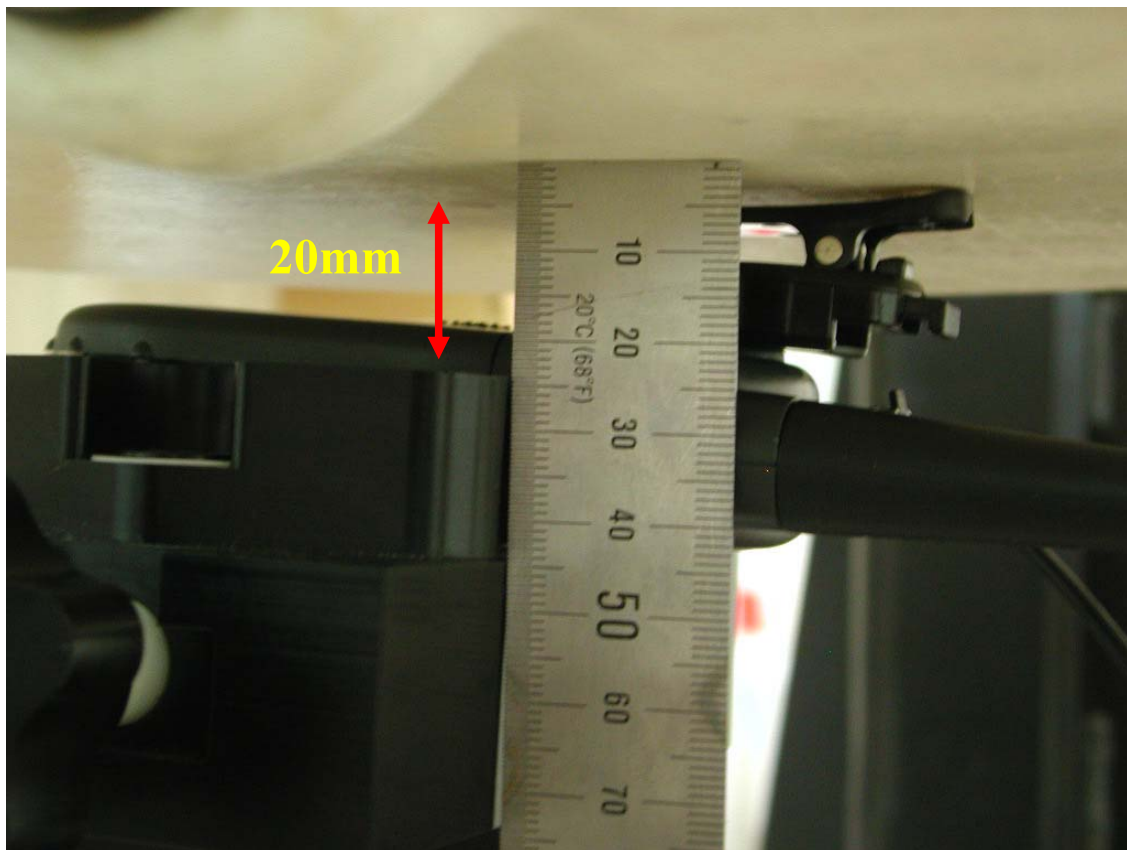

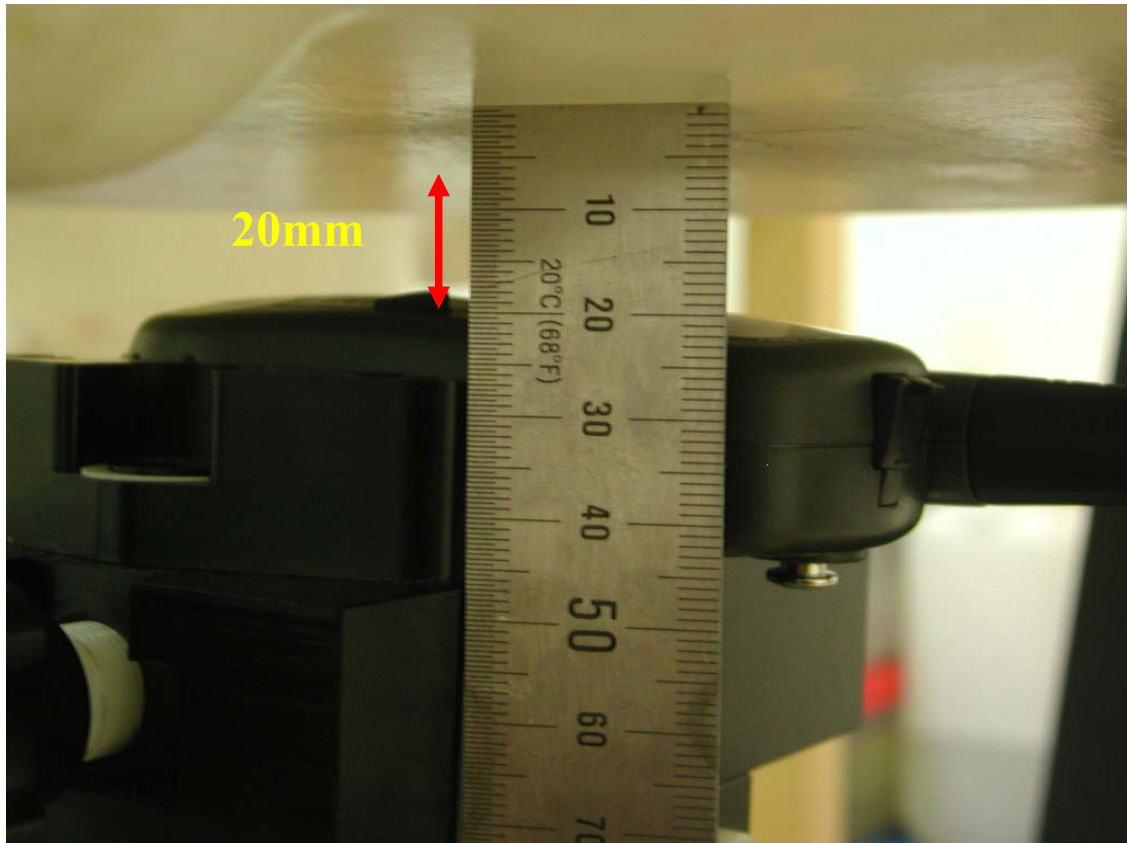

[Tissue Liquid Depth : 15cm]

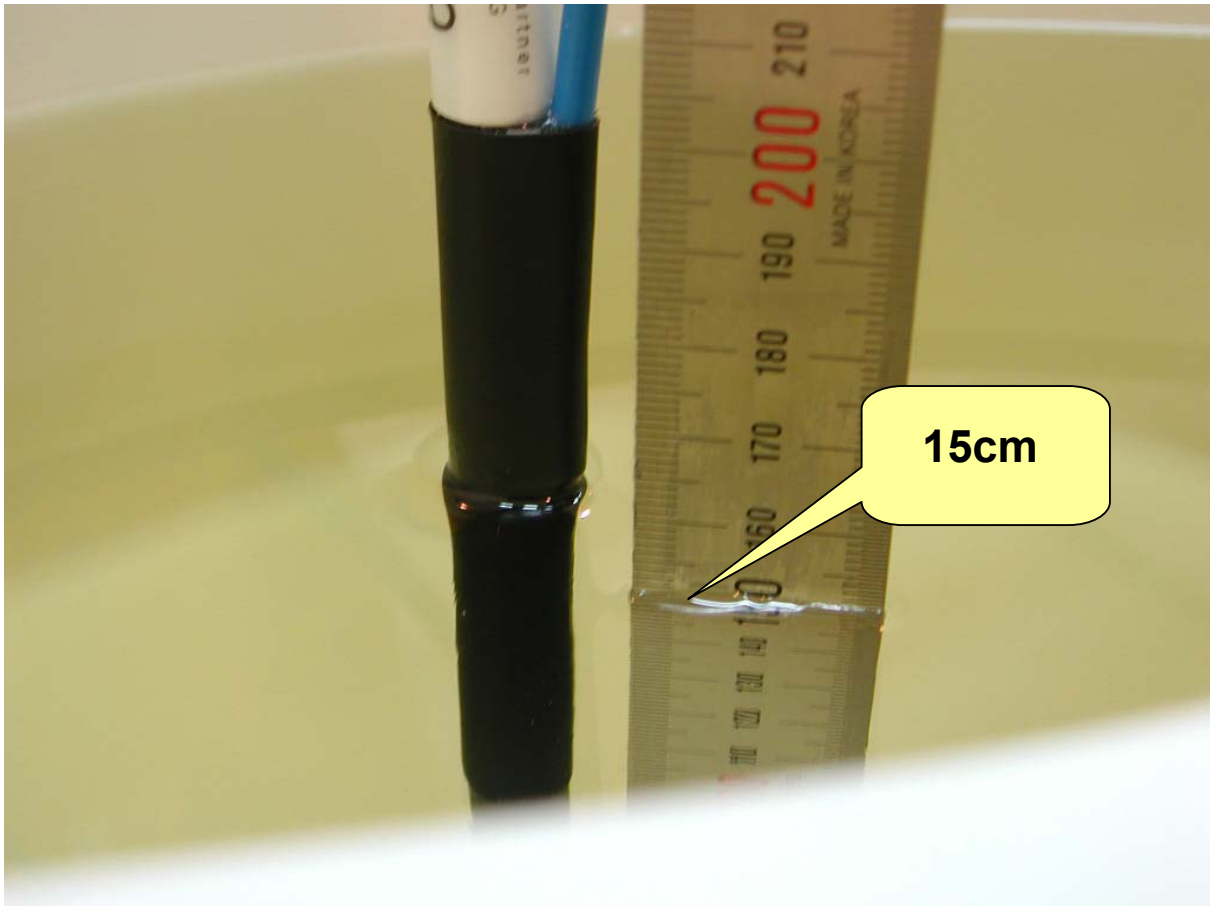


[Conducted Power Set-up Photographs]




■ Battery Type: Rocket (Alkaline)

GMRS	
Time	Power Out
0	3.180
2	2.970
4	2.752
6	2.549
8	2.276
10	2.060
12	2.097
14	2.018
16	1.989
18	1.965
20	1.942
22	1.921
24	1.909
26	1.889
28	1.864
30	1.848
32	1.829
34	1.801
36	1.785
38	1.762
40	1.787

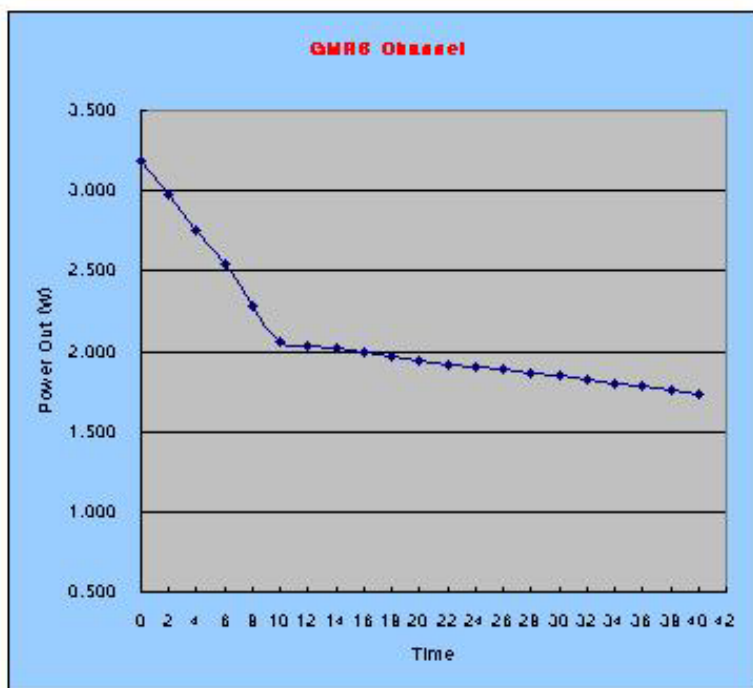

■ Battery Type: Rocket (Alkaline)

FRS	
Time	Power Out
0	0.940
2	0.881
4	0.826
6	0.768
8	0.708
10	0.650
12	0.631
14	0.618
16	0.594
18	0.579
20	0.558
22	0.538
24	0.517
26	0.499
28	0.476
30	0.459
32	0.428
34	0.402
36	0.388
38	0.367
40	0.345

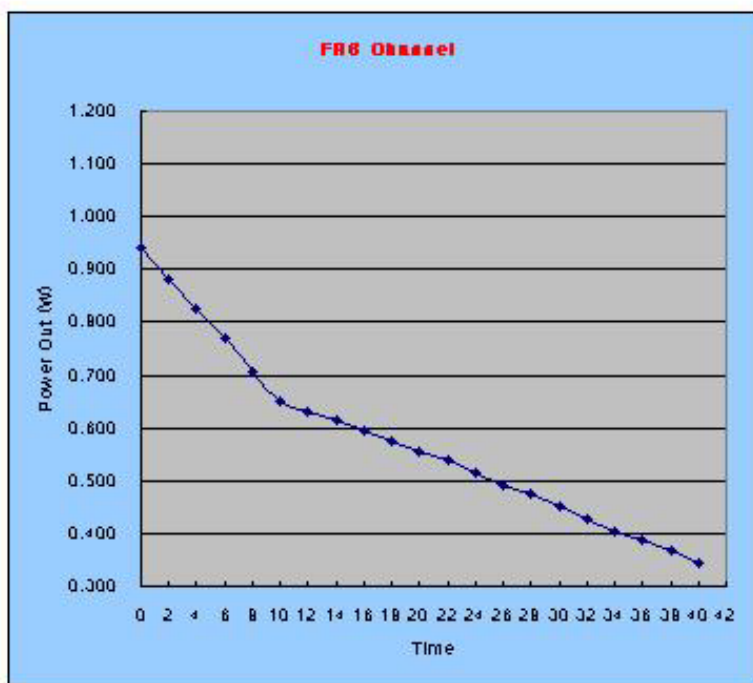

Date : March 07, 2003

Federal Communications Commission
Authorization and Evaluation Division
7435 Oskland Mills Road
Columbia, MD21046


Subject : GMRS7001 Model Battery Type

To whom it may concern

Here we would like to confirm that the 'AAA' type batteries only should be used

For this subject model GMRS7001.(FCC ID: PDHGMRS7001)

Sincerely Yours,
TTI tech Co., Ltd.



President / W. K. You