

breo

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

breo iDream 3

EYE & HEAD MASSAGER



User Manual

Thank you for purchasing iDream3.
Please read this manual carefully before using the product,
and keep it properly for future reference.

Contents

Introduction	2
Inside the Package	3
Function Deployment	4
Preparation	5
Operation	6
Precautions	8
Troubleshooting & Technical Parameters	9

Breo WEEE-Reg-Nr.DE51664358

Introduction, scope and groups of application

Introduction

IDream3 in virtue of humanized design and adjustable knobs, the product is applicable for heads in various circumferences. The massager performs kneading, vibrating and hot compress massage against special acupuncture points on head and eyes to assist in supplying more oxygen to brain and eyes, improve blood circulation of brain and eyes, and relieve pressure and fatigue of brain and eyes for promoting sleep and maintaining health. While performing massage, the product enables you to enjoy music for relaxing both your brain and soul.


Scope of application

Kneading and vibration massaging the specific acupuncture points on head and eye, so as to alleviate strained feeling and stress, release fatigue, channel massage improves sleeping, which can make you feel fresh, calm and relax completely.

Inside the Package

Your massager is composed of the main unit, remote, power adaptor, user manual, earphone, battery.

Massager

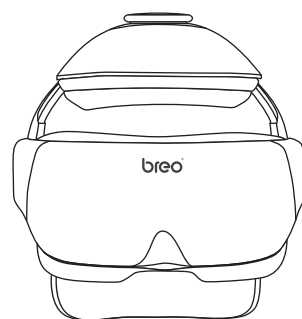


Main Unit



Remote

Basic components

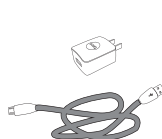

Adaptor



Earphone



User Manual




Battery(AAAx3)

3

Function Deployment

Main unit and Remote

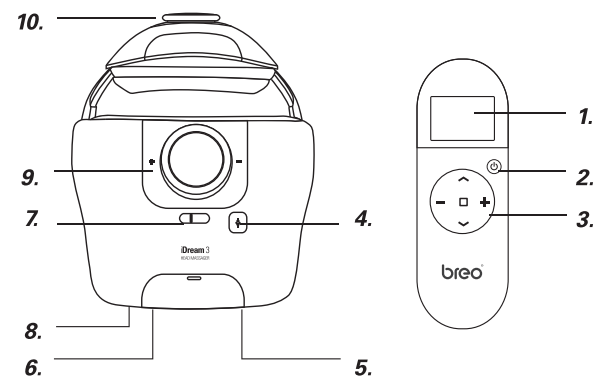

- | | |
|-------------------------|---------------------------------|
| 1. LCD Display | 6. Earphone Jack |
| 2. ON/Off Key | 7. Power Switch Key |
| 3. Operating Buttons | 8. Encoding Joint Operation Key |
| 4. Air Discharge Button | 9. Size Adjusting Knob |
| 5. DC Power Interface | 10. Tightness Adjusting Knob |

LCD Display

From top to bottom: time /air pressure/vibration/hot compress/music

Operating Buttons:

Clockwise: Up key/Mode+/Down key/Mode-, OK key in the center

Power Switch Key :

It's a must to push the Power Switch Key to be OFF after using.

4

Function Deployment

Attention :

If there was problem of receiving signal between the main unit and remote,you can perform encoding joint operation:

1. Turn off the main unit and remote, press and hold **【8】** encoding operation key of the main unit, then turn on the main unit until the LED blue indicator that on front of the main unit flashing.
 2. Release **【8】** encoding operation key of the main unit , synchronously press and hold  key of the remote and key  for 2-3 seconds, the LCD display of the remote flashes,in the meantime, the blue LED indicator of the main unit turns off,which means it successes for the code verification,(The operation needs to be finished within 6 seconds)
 3. Turn off the main unit. When turn on the product again, the remote works.
- Please make sure that one main unit is corresponding to one remote . The operation of encoding joint with multiply remote controller to one main unit is prohibited.

Preparation Before Use

1. Please check the machine and accessories whether complete.
2. Please check and make sure there is enough power.
3. Please check and make sure there is no damage of the adaptor

5


Operation

Charging The Unit

1. Open **【5】** DC Power Interface, and insert the adaptor
2. During charging, the power indicator on the front of the main unit indicate red and keep flashing, when it fully charged, it indicates blue.

Attention:

1. Keep the massager in off state while charging the main unit. Charging time is roughly 3-4 hours.
2. The main unit doesn't work while charging.
3. If voltage of the battery is lower than $3.2 \pm 0.1V$, the product will automatically power off. If LED indicator of the main unit flashes, and all functions shut down, please recharge the main unit.

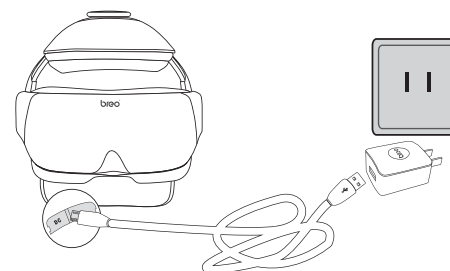

Power on

1. Remove the cover of battery pack on back of the remote controller, place 3 pieces of AAA batteries with correct pole, and then replace the battery pack cover; (Picture1)
2. The main unit of the product is powered by high performance environmental friendly lithium battery.

6

Operation

How to wear

1. Adjust the top and two sides to a proper state, and then to wear on the main unit.
2. Meanwhile adjust the top to a proper distance to head.

Operation

Power On/Off

Power-on — Push the power protection key on the main unit to Level "ON"


— Press and hold  Button

— preset air pressure + hot compress for 15 minutes' massage.


(Default air pressure: circulation; Default hot compress: High temperature; Music: Piano music)

Power-off — Short press  Button — Push **【7】** Power Switch Key on the main unit to Level "OFF" (picture 2)

If switchover of time, air pressure, music, hot compress and vibration mode is needed, please have it done by pressing the related functional keys manually.



(picture 1)

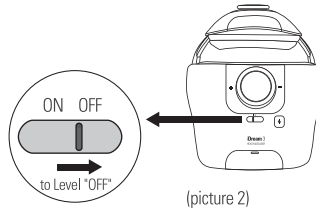

(picture 2)

Manual Mode

Short press  Button, Choose function mode

— Short press  Button

— Short press  Button to choose

7

Operation

Time

— Short press  Button to select "Time ", Short press  Button

— Short press  Button for time switchover among 15minutes/10 minutes/5 minutes

Air pressure

— Short press  Button to select "Air pressure ", Short press  Button

— Short press  Button to select five modes of air pressure (The default is circulation)

— Off/On, Short press  Button

Heat

— Short press  Button to select "Hot press ", Short press  Button

— Short press  Button: Low temperature/high temperature

— Off/On, Short press  Button

Music

— Short press  Button to select "Music", Short press  Button

— Short press  Button to select Next

— Short press  Button to select previous

8

Precautions

1. Using head massager while driving is prohibited.
2. Please do not use this product in the environment with excessively high temperature or humidity.
3. Make sure that no barrette, hair accessories and contact lens worn on before using the head massager.
4. Wear the device and then switch it on to avoid damaging the air bag due to overpressure.
5. This massager is applicable for adult with head in circumferences ranging 56cm-64cm.
6. Those with indisposed symptoms like inflammation and blood stasis or surgery on head are prohibited to use this product.
7. The persons suffering from apoplexy, hypertension and hypotension should not use this product.
8. Sluggish patients, or people with physical or mental or intellectual disability should not allowed to use this product.
9. Please use the stabilized DC 5V adaptor that provided by our company and use it properly.
10. Please remove the batteries from the remote when battery in low power or long time not using the massager to avoid damaging from the leakage of the battery.
11. It is a must to push the power switch key to Level "OFF" when stop using this product.
12. It is household electric health care product, thus can not be used for diagnosing or curing known disease or other commercial use.
13. If it requires cleaning, wipe it with cotton soaked in medicine alcohol. Do not use water to wash the device.
14. The massager has a hot compressing function, and temperature can reach at 42 °C, users not sensitive to change in temperature should be careful in use.

9

Troubleshooting

If there is any problem when you use the device, please follow the instructions below to check. Do not disassemble or repair the device yourself.

Fault	Possible Reasons	Solutions
Unable to boot	If power switch key is turned on	Push this key to Level ON
	If the lithium-battery of the main unit is low	If yes, please charge the main unit at once.
	If the battery in remote is low	Place new battery into the remote .
The air pressure or vibration is over low.	If the lithium-battery of the main unit is low	If yes, please charge the main unit at once.

Technical parameters

DC/Power:	DC: 5 V Power: 5 W
Ideal environment:	Temperature 5°C ~ 40°C Relative Humidity ≤80%
	Atmospheric pressure: 860hpa ~ 1060hpa
Dimension:	Main unit: L282mm × W206mm × H254mm
	Remote: L132mm × W44mm × H24mm
N.W.	1125g

Storage

1. If the storage period exceeds 6 months, please check and recharge it.
2. Do not store close to floor, wall or roof.
3. Keep in good ventilation condition and away from direct sunshine and corrosive gases.

10