

Report No.: FA9O1220

FCC SAR Test Report

APPLICANT : ZTE CORPORATION

EQUIPMENT: CDMA 1x-EVDO Wireless data terminal

BRAND NAME: ZTE

MODEL NAME : AC2766

FCC ID : Q78-AC2766

STANDARD : FCC 47 CFR Part 2 (2.1093)

IEEE C95.1-1999 IEEE 1528-2003

FCC OET Bulletin 65 Supplement C (Edition 01-01)

The product was received on Oct. 12, 2009 and completely tested on Oct. 14, 2009. We, SPORTON INTERNATIONAL INC., would like to declare that the tested sample has been evaluated in accordance with the procedures and shown the compliance with the applicable technical standards.

The test results in this report apply exclusively to the tested model / sample. Without written approval of SPORTON INTERNATIONAL INC., the test report shall not be reproduced except in full.

Reviewed by:

Roy Wu / Manager





SPORTON INTERNATIONAL INC.

No. 52, Hwa Ya 1st Rd., Hwa Ya Technology Park, Kwei-Shan Hsiang, Tao Yuan Hsien, Taiwan, R.O.C.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 1 of 30
Report Issued Date : Oct. 20, 2009

Table of Contents

| Rev | ision ł | History | 3 |
|-----|---------|--|----|
| 1. | | nent of Compliance | |
| 2. | | nistration Data | |
| | 2.1 | Testing Laboratory | |
| | 2.2 | Applicant | |
| | 2.3 | Manufacturer | 5 |
| | 2.4 | Application Details | |
| 3. | Gener | al Information | |
| | 3.1 | Description of Device Under Test (DUT) | 6 |
| | 3.2 | Product Photos | 6 |
| | 3.3 | Applied Standards | |
| | 3.4 | Device Category and SAR Limits | |
| | 3.5 | Test Conditions | |
| | | 3.5.1 Ambient Condition | |
| | | 3.5.2 Test Configuration | |
| 4. | Speci | fic Absorption Rate (SAR) | |
| | 4.1 | Introduction | |
| | 4.2 | SAR Definition | |
| 5. | | Neasurement System | |
| | 5.1 | E-Field Probe | |
| | | 5.1.1 E-Field Probe Specification | |
| | | 5.1.2 E-Field Probe Calibration | 11 |
| | 5.2 | Data Acquisition Electronics (DAE) | |
| | 5.3 | Robot | |
| | 5.4 | Measurement Server | |
| | 5.5 | Phantom | 13 |
| | 5.6 | Device Holder | |
| | 5.7 | Data Storage and Evaluation | |
| | | 5.7.1 Data Storage | |
| | | 5.7.2 Data Evaluation | |
| | 5.8 | Test Equipment List | |
| 6. | Tissu | e Simulating Liquids | 19 |
| 7. | | tainty Assessment | |
| 8. | | Measurement Evaluation | |
| | 8.1 | Purpose of System Performance check | 23 |
| | 8.2 | System Setup | |
| | 8.3 | Validation Results | 24 |
| 9. | DUT T | esting Position | |
| | | rement Procedures | |
| | 10.1 | Spatial Peak SAR Evaluation | |
| | 10.2 | Scan Procedures | 27 |
| | 10.3 | SAR Averaged Methods | 27 |
| 11. | SAR 1 | est Results | |
| | 11.1 | Conducted Power (Unit: dBm) | |
| | 11.2 | Test Records for Body SAR Test | |
| | 11.3 | Test Records for Back-Off SAR Test | 29 |
| 12 | Pofor | ance | 30 |

Appendix A. Plots of System Performance Check

Appendix B. Plots of SAR Measurement

Appendix C. DASY Calibration Certificate

Appendix D. Product Photos

Appendix E. Test Setup Photos

Appendix F. FCC 3G SAR Measurement Procedures

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 2 of 30

Report Issued Date: Oct. 20, 2009



Revision History

| REPORT NO. | VERSION | DESCRIPTION | ISSUED DATE |
|------------|---------|-------------------------|---------------|
| FA9O1220 | Rev. 01 | Initial issue of report | Oct. 20, 2009 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 3 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



1. Statement of Compliance

The maximum results of Specific Absorption Rate (SAR) were found during testing for ZTE CORPORATION CDMA 1x-EVDO Wireless data terminal ZTE AC2766, which are as follows (with expanded uncertainty 21.8 % for 300 MHz to 3 GHz).

| Band | Position | SAR _{1g} (W/kg) |
|--------------|----------|-----------------------------|
| CDMA2000 BC0 | Body | 0.874 |
| CDMA2000 BC1 | Body | 1.14 |

They are in compliance with Specific Absorption Rate (SAR) for general population/uncontrolled exposure limits (1.6 W/kg) specified in FCC 47 CFR part 2 (2.1093) and ANSI/IEEE C95.1-1999, and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528-2003 and FCC OET Bulletin 65 Supplement C (Edition 01-01).

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766

: 4 of 30 Page Number Report Issued Date: Oct. 20, 2009

Report No.: FA9O1220

2. Administration Data

2.1 Testing Laboratory

| Test Site | SPORTON INTERNATIONAL INC. | |
|--------------------|---|--|
| Test Site Location | No. 52, Hwa Ya 1 st Rd., Hwa Ya Technology Park, Kwei-Shan Hsiang, Tao Yuan Hsien, Taiwan, R.O.C. TEL: +886-3-327-3456 FAX: +886-3-328-4978 | |
| Test Site No. | Sporton Site No. : SAR01-HY | |

2.2 Applicant

| Company Name | ZTE CORPORATION |
|--------------|---|
| | ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park, Nanshan District, Shenzhen, Guangdong, P.R. China |

2.3 Manufacturer

| Company Name | ZTE CORPORATION |
|--------------|---|
| | ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park, Nanshan District, Shenzhen, Guangdong, P.R. China |

2.4 Application Details

| Date of Receipt of Application | Oct. 12, 2009 |
|--------------------------------|---------------|
| Date of Start during the Test | Oct. 14, 2009 |
| Date of End during the Test | Oct. 14, 2009 |

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 5 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



3. General Information

3.1 <u>Description of Device Under Test (DUT)</u>

| Product Feature & Specification | | | |
|--|------------------------------------|--|--|
| DUT Type CDMA 1x-EVDO Wireless data terminal | | | |
| Brand Name | ZTE | | |
| Model Name | AC2766 | | |
| FCC ID | Q78-AC2766 | | |
| Ty Fraguency | CDMA2000 BC0 : 824 MHz ~ 849 MHz | | |
| Tx Frequency | CDMA2000 BC1 : 1850 MHz ~ 1910 MHz | | |
| D. F | CDMA2000 BC0 : 869 MHz ~ 894 MHz | | |
| Rx Frequency | CDMA2000 BC1 : 1930 MHz ~ 1990 MHz | | |
| Marrian Ordand Barranda Andana | CDMA2000 BC0 : 19.45 dBm | | |
| Maximum Output Power to Antenna | CDMA2000 BC1 : 18.28 dBm | | |
| Antenna Type | Fixed Internal Antenna | | |
| HW Version | AC2726V2MD_B | | |
| SW Version | LU9AD404 | | |
| Type of Modulation | QPSK | | |
| DUT Stage | Production Unit | | |

3.2 Product Photos

Please refer to Appendix D.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 6 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



3.3 Applied Standards

The Specific Absorption Rate (SAR) testing specification, method and procedure for this CDMA 1x-EVDO Wireless data terminal is in accordance with the following standards:

- FCC 47 CFR Part 2 (2.1093)
- IEEE C95.1-1999
- IEEE 1528-2003
- FCC OET Bulletin 65 Supplement C (Edition 01-01)
- FCC KDB 447498 D01 v03r03
- FCC KDB 447498 D02 v01
- FCC KDB 941225 D01 v02

3.4 Device Category and SAR Limits

This device belongs to portable device category because its radiating structure is allowed to be used within 20 centimeters of the body of the user. Limit for General Population/Uncontrolled exposure should be applied for this device, it is 1.6 W/kg as averaged over any 1 gram of tissue.

3.5 Test Conditions

3.5.1 **Ambient Condition**

| Ambient Temperature | 20 to 24 ℃ |
|---------------------|------------|
| Humidity | < 60 % |

3.5.2 **Test Configuration**

The device was controlled by using a base station emulator. Communication between the device and the emulator was established by air link. The distance between the DUT and the antenna of the emulator is larger than 50 cm and the output power radiated from the emulator antenna is at least 30 dB smaller than the output power of DUT. The DUT was set from the emulator to radiate maximum output power during all tests.

For SAR testing, the DUT is in CDMA2000 link mode, and its crest factor is 1.

For swivel USB connector SAR test modes of this device, we got FCC suggestion on KDB 893086.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 7 of 30 Report Issued Date: Oct. 20, 2009

Report No. : FA9O1220



4. Specific Absorption Rate (SAR)

4.1 Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational/controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

4.2 SAR Definition

The SAR definition is the time derivative (rate) of the incremental energy (dW) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dv) of a given density (ρ). The equation description is as below:

$$SAR = \frac{d}{dt} \left(\frac{dW}{dm} \right) = \frac{d}{dt} \left(\frac{dW}{\rho dv} \right)$$

SAR is expressed in units of Watts per kilogram (W/kg)

SAR measurement can be either related to the temperature elevation in tissue by

$$SAR = C\left(\frac{\delta T}{\delta t}\right)$$

Where: C is the specific head capacity, δT is the temperature rise and δt is the exposure duration, or related to the electrical field in the tissue by

$$SAR = \frac{\sigma |E|^2}{\rho}$$

Where: σ is the conductivity of the tissue, ρ is the mass density of the tissue and E is the RMS electrical field strength.

However for evaluating SAR of low power transmitter, electrical field measurement is typically applied.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 8 of 30
Report Issued Date : Oct. 20, 2009

Report No.: FA9O1220



Report No. : FA9O1220

5. SAR Measurement System

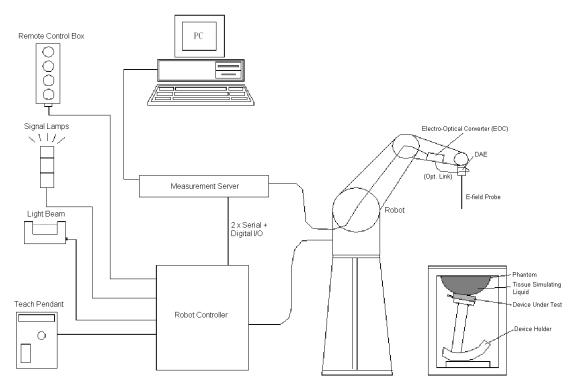


Fig 5.1 SPEAG DASY4 or DASY5 System Configurations

The DASY4 or DASY5 system for performance compliance tests is illustrated above graphically. This system consists of the following items:

- A standard high precision 6-axis robot with controller, a teach pendant and software
- A data acquisition electronic (DAE) attached to the robot arm extension
- > A dosimetric probe equipped with an optical surface detector system
- > The electro-optical converter (ECO) performs the conversion between optical and electrical signals
- A measurement server performs the time critical tasks such as signal filtering, control of the robot operation and fast movement interrupts.
- A probe alignment unit which improves the accuracy of the probe positioning
- A computer operating Windows XP
- DASY4 or DASY5 software
- Remove control with teach pendant and additional circuitry for robot safety such as warming lamps, etc.
- The SAM twin phantom
- A device holder
- > Tissue simulating liquid
- Dipole for evaluating the proper functioning of the system

Some of the components are described in details in the following sub-sections.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 9 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

5.1 E-Field Probe

The SAR measurement is conducted with the dosimetric probe (manufactured by SPEAG). The probe is specially designed and calibrated for use in liquid with high permittivity. The dosimetric probe has special calibration in liquid at different frequency. This probe has a built in optical surface detection system to prevent from collision with phantom.

5.1.1 E-Field Probe Specification

<ET3DV6>

| <e13dv6></e13dv6> | | |
|-------------------|---|-------------------------|
| Construction | Symmetrical design with triangular core Built-in optical fiber for surface detection system. Built-in shielding against static charges. PEEK enclosure material (resistant to organic solvents, e.g., DGBE) | 8 |
| Frequency | 10 MHz to 3 GHz; Linearity: ± 0.2 dB | |
| Directivity | ± 0.2 dB in HSL (rotation around probe axis) ± 0.4 dB in HSL (rotation normal to probe axis) | 170.00 |
| Dynamic Range | 5 μW/g to 100 mW/g; Linearity: ± 0.2 dB | |
| Dimensions | Overall length: 330 mm (Tip: 16 mm) Tip diameter: 6.8 mm (Body: 12 mm) Distance from probe tip to dipole centers: 2.7 mm | Fig 5.2 Photo of ET3DV6 |

<EX3DV3 Probe>

| Construction | Symmetrical design with triangular core | | |
|---------------|---|----------|--|
| Oonstruction | Built-in shielding against static charges | | |
| | | | |
| | PEEK enclosure material (resistant to | | |
| | organic solvents, e.g., DGBE) | | The second secon |
| Frequency | 10 MHz to 6 GHz; Linearity: ± 0.2 dB | | |
| Directivity | ± 0.3 dB in HSL (rotation around probe | | |
| | axis) | | |
| | ± 0.5 dB in tissue material (rotation | | 351 |
| | normal to probe axis) | | |
| Dynamic Range | 10 μW/g to 100 mW/g; Linearity: ± 0.2 dB | | |
| | (noise: typically < 1 μW/g) | | |
| Dimensions | Overall length: 330 mm (Tip: 20 mm) | 1 | |
| | Tip diameter: 2.5 mm (Body: 12 mm) | | |
| | Typical distance from probe tip to dipole | | |
| | centers: 1 mm | | |
| | Contoro. 1 mm | | T |
| | | | |
| | | Fig 5.3 | Photo of EX3DV3 |
| | | 1 19 110 | |

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 10 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



Report No. : FA9O1220

5.1.2 E-Field Probe Calibration

Each probe needs to be calibrated according to a dosimetric assessment procedure with accuracy better than \pm 10%. The spherical isotropy shall be evaluated and within \pm 0.25 dB. The sensitivity parameters (NormX, NormY, and NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested. The calibration data can be referred to appendix C of this report.

5.2 Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE) consists of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information as well as an optical uplink for commands and the clock.

The input impedance of the DAE is 200 MOhm; the inputs are symmetrical and floating. Common mode rejection is above 80 dB.



Fig 5.4 Photo of DAE

5.3 Robot

The SPEAG DASY system uses the high precision robots (DASY4: RX90BL; DASY5: TX90XL) type from Stäubli SA (France). For the 6-axis controller system, the robot controller version (DASY4: CS7MB; DASY5: CS8c) from Stäubli is used. The Stäubli robot series have many features that are important for our application:

- ➤ High precision (repeatability ±0.035 mm)
- > High reliability (industrial design)
- > Jerk-free straight movements
- Low ELF interference (the closed metallic construction shields against motor control fields)







Fig 5.6 Photo of DASY5

SPORTON INTERNATIONAL INC.


TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 11 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

5.4 Measurement Server

The measurement server is based on a PC/104 CPU board with CPU (DASY4: 166 MHz, Intel Pentium; DASY5: 400 MHz, Intel Celeron), chipdisk (DASY4: 32 MB; DASY5: 128 MB), RAM (DASY4: 64 MB, DASY5: 128 MB). The necessary circuits for communication with the DAE electronic box, as well as the 16 bit AD converter system for optical detection and digital I/O interface are contained on the DASY I/O board, which is directly connected to the PC/104 bus of the CPU board.

The measurement server performs all the real-time data evaluation for field measurements and surface detection, controls robot movements and handles safety operations.







Report No.: FA9O1220

Fig 5.8 Photo of Server for DASY5

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 12 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

5.5 Phantom

<SAM Twin Phantom>

| SAM I WIII I Halltonie | | | |
|------------------------|-------------------------------------|--|-----------|
| Shell Thickness | 2 ± 0.2 mm; | | |
| | Center ear point: 6 ± 0.2 mm | | |
| Filling Volume | Approx. 25 liters | THE THE | |
| Dimensions | Length: 1000 mm; Width: 500 mm; | | 3 [|
| | Height: adjustable feet | Y | |
| Measurement Areas | Left Hand, Right Hand, Flat Phantom | | |
| | | | |
| | | The state of the s | |
| | | | 1 |
| | | | |
| | | | |
| | | Fig 5.9 Photo of SAM | l Phantom |
| | | l . | |

The bottom plate contains three pair of bolts for locking the device holder. The device holder positions are adjusted to the standard measurement positions in the three sections. A white cover is provided to tap the phantom during off-periods to prevent water evaporation and changes in the liquid parameters. On the phantom top, three reference markers are provided to identify the phantom position with respect to the robot.

<ELI4 Phantom>

| Shell Thickness | 2 ± 0.2 mm (sagging: <1%) | |
|-----------------|--|--------------------------------|
| Filling Volume | Approx. 30 liters | |
| Dimensions | Major ellipse axis: 600 mm Minor axis: 400 mm | Fig 5.10 Photo of ELI4 Phantom |

The ELI4 phantom is intended for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI4 is fully compatible with standard and all known tissue simulating liquids.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 13 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



5.6 Device Holder

<Device Holder for SAM Twin Phantom>

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5 mm distance, a positioning uncertainty of \pm 0.5 mm would produce a SAR uncertainty of \pm 20 %. Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions in which the devices must be measured are defined by the standards.

The DASY device holder is designed to cope with different positions given in the standard. It has two scales for the device rotation (with respect to the body axis) and the device inclination (with respect to the line between the ear reference points). The rotation center for both scales is the ear reference point (EPR). Thus the device needs no repositioning when changing the angles.

The DASY device holder is constructed of low-loss POM material having the following dielectric parameters: relative permittivity ε = 3 and loss tangent δ = 0.02. The amount of dielectric material has been reduced in the closest vicinity of the device, since measurements have suggested that the influence of the clamp on the test results could thus be lowered.



Fig 5.11 Device Holder

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 14 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



Report No.: FA9O1220

<Laptop Extension Kit>

The extension is lightweight and made of POM, acrylic glass and foam. It fits easily on the upper part of the mounting device in place of the phone positioned. The extension is fully compatible with the SAM Twin and ELI phantoms.

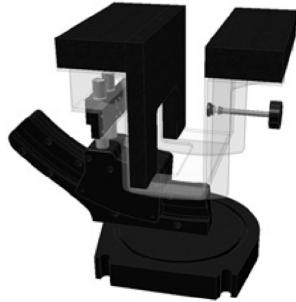


Fig 5.12 Laptop Extension Kit

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 15 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



5.7 Data Storage and Evaluation

5.7.1 Data Storage

The DASY software stores the assessed data from the data acquisition electronics as raw data (in microvolt readings from the probe sensors), together with all the necessary software parameters for the data evaluation (probe calibration data, liquid parameters and device frequency and modulation data) in measurement files. The post-processing software evaluates the desired unit and format for output each time the data is visualized or exported. This allows verification of the complete software setup even after the measurement and allows correction of erroneous parameter settings. For example, if a measurement has been performed with an incorrect crest factor parameter in the device setup, the parameter can be corrected afterwards and the data can be reevaluated.

The measured data can be visualized or exported in different units or formats, depending on the selected probe type (e.g., [V/m], [A/m], [mW/g]). Some of these units are not available in certain situations or give meaningless results, e.g., a SAR-output in a non-lose media, will always be zero. Raw data can also be exported to perform the evaluation with other software packages.

5.7.2 Data Evaluation

The DASY post-processing software (SEMCAD) automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters: - Sensitivity Norm_i, a_{i0}, a_{i1}, a_{i2}

> - Conversion factor ConvF_i - Diode compression point dcp_i - Frequency f

Device parameters: - Crest factor cf

- Conductivity Media parameters : σ - Density

ρ

These parameters must be set correctly in the software. They can be found in the component documents or they can be imported into the software from the configuration files issued for the DASY components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 16 of 30 Report Issued Date: Oct. 20, 2009

Report No.: FA9O1220

The formula for each channel can be given as :

$$V_{i} = U_{i} + U_{i}^{2} \cdot \frac{cf}{dcp_{i}}$$

Report No.: FA9O1220

with V_i = compensated signal of channel i, (i = x, y, z)

 U_i = input signal of channel i, (i = x, y, z)

cf = crest factor of exciting field (DASY parameter)

dcp_i = diode compression point (DASY parameter)

From the compensated input signals, the primary field data for each channel can be evaluated:

$$\text{E-field Probes}: E_i = \sqrt{\frac{v_i}{\text{Norm}_i \cdot \text{ConvF}}}$$

H-field Probes :
$$H_i = \sqrt{V_i} \cdot \frac{a_{i0} + a_{i1}f + a_{i2}f^2}{f}$$

with V_i = compensated signal of channel i, (i = x, y, z)

Norm_i = sensor sensitivity of channel i, (i = x, y, z), $\mu V/(V/m)^2$ for E-field Probes

ConvF = sensitivity enhancement in solution

a_{ij} = sensor sensitivity factors for H-field probes

f = carrier frequency [GHz]

E_i = electric field strength of channel i in V/m

H_i = magnetic field strength of channel i in A/m

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with SAR = local specific absorption rate in mW/g

E_{tot} = total field strength in V/m

 $\sigma = \text{conductivity in [mho/m] or [Siemens/m]}$

ρ = equivalent tissue density in g/cm³

Note that the density is set to 1, to account for actual head tissue density rather than the density of the tissue simulating liquid.

Page Number

Report Version

: 17 of 30

: Rev. 01

Report Issued Date: Oct. 20, 2009



5.8 Test Equipment List

| | | - " | 0 : 111 1 | Calib | ration |
|--------------|--------------------------------------|---------------|---------------|---------------|---------------|
| Manufacturer | Name of Equipment | Type/Model | Serial Number | Last Cal. | Due Date |
| SPEAG | Dosimetric E-Field Probe | ET3DV6 | 1787 | May 26, 2009 | May 25, 2010 |
| SPEAG | Dosimetric E-Field Probe | ET3DV6 | 1788 | Sep. 23, 2009 | Sep. 22, 2010 |
| SPEAG | Dosimetric E-Field Probe | EX3DV3 | 3514 | Jan. 21, 2009 | Jan. 20, 2010 |
| SPEAG | 835MHz System Validation Kit | D835V2 | 499 | Mar. 17, 2008 | Mar. 16, 2010 |
| SPEAG | 900MHz System Validation Kit | D900V2 | 190 | Jul. 21, 2009 | Jul. 20, 2011 |
| SPEAG | 1800MHz System Validation Kit | D1800V2 | 2d076 | Jul. 20, 2009 | Jul. 19, 2011 |
| SPEAG | 1900MHz System Validation Kit | D1900V2 | 5d041 | Mar. 28, 2008 | Mar. 27, 2010 |
| SPEAG | 2000MHz System Validation Kit | D2000V2 | 1010 | Sep. 17, 2008 | Sep. 16, 2010 |
| SPEAG | 2300MHz System Validation Kit | D2300V2 | 1006 | Sep. 24, 2009 | Sep. 23, 2011 |
| SPEAG | 2450MHz System Validation Kit | D2450V2 | 736 | Jul. 20, 2009 | Jul. 19, 2011 |
| SPEAG | 2600MHz System Validation Kit | D2600V2 | 1008 | Sep. 24, 2009 | Sep. 23, 2011 |
| SPEAG | 3500MHz System Validation Kit | D3500V2 | 1014 | Sep. 17, 2009 | Sep. 16, 2011 |
| SPEAG | 5GHz System Validation Kit | D5GHzV2 | 1006 | Jan. 24, 2008 | Jan. 23, 2010 |
| SPEAG | Data Acquisition Electronics | DAE3 | 577 | Aug. 24, 2009 | Aug. 23, 2010 |
| SPEAG | Data Acquisition Electronics | DAE4 | 778 | Sep. 18, 2009 | Sep. 17, 2010 |
| SPEAG | Device Holder | N/A | N/A | NCR | NCR |
| SPEAG | SAM Phantom | QD 000 P40 C | TP-1303 | NCR | NCR |
| SPEAG | SAM Phantom | QD 000 P40 C | TP-1383 | NCR | NCR |
| SPEAG | SAM Phantom | QD 000 P40 C | TP-1446 | NCR | NCR |
| SPEAG | SAM Phantom | QD 000 P40 C | TP-1477 | NCR | NCR |
| SPEAG | ELI4 Phantom | QD 0VA 001 BB | 1026 | NCR | NCR |
| SPEAG | ELI4 Phantom | QD 0VA 001 BA | 1029 | NCR | NCR |
| Agilent | PNA Series Network Analyzer | E8358A | US40260131 | Apr. 17, 2009 | Apr. 16, 2010 |
| Agilent | Wireless Communication Test Set | E5515C | MY48360820 | Dec. 15, 2008 | Dec. 14, 2010 |
| Agilent | Wireless Communication Test Set | E5515C | GB46311322 | Feb. 16, 2009 | Feb. 15, 2011 |
| R&S | Universal Radio Communication Tester | CMU200 | 105934 | Nov. 11, 2008 | Nov. 10, 2009 |
| Agilent | Dielectric Probe Kit | 85070D | US01440205 | NCR | NCR |
| Agilent | Dual Directional Coupler | 778D | 50422 | NCR | NCR |
| AR | Power Amplifier | 5S1G4M2 | 0328767 | NCR | NCR |
| R&S | Spectrum Analyzer | FSP7 | 101131 | Mar. 17, 2009 | Mar. 16, 2010 |

Table 5.1 Test Equipment List

Note: The calibration certificate of DASY can be referred to appendix C of this report.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766

: 18 of 30 Page Number Report Issued Date: Oct. 20, 2009

Report No.: FA9O1220



Report No.: FA9O1220

6. Tissue Simulating Liquids

For the measurement of the field distribution inside the SAM phantom with DASY, the phantom must be filled with around 25 liters of homogeneous body tissue simulating liquid. For head SAR testing, the liquid height from the ear reference point (ERP) of the phantom to the liquid top surface is larger than 15 cm, which is shown in Fig. 6.1. For body SAR testing, the liquid height from the center of the flat phantom to the liquid top surface is larger than 15 cm, which is shown in Fig. 6.2.





Fig 6.1 Photo of Liquid Height for Head SAR

Fig 6.2 Photo of Liquid Height for Body SAR

The following table gives the recipes for tissue simulating liquid.

| Frequency | Water | Sugar | Cellulose | Salt | Preventol | DGBE | Conductivity | Permittivity | | |
|------------------|-------|-------|-----------|----------|-----------|------|--------------|-------------------|--|--|
| (MHz) | (%) | (%) | (%) | (%) | (%) | (%) | (σ) | (ε _r) | | |
| For Head | | | | | | | | | | |
| 835 | 40.3 | 57.9 | 0.2 | 1.4 | 0.2 | 0 | 0.90 | 41.5 | | |
| 900 | 40.3 | 57.9 | 0.2 | 1.4 | 0.2 | 0 | 0.97 | 41.5 | | |
| 1800, 1900, 2000 | 55.2 | 0 | 0 | 0.3 | 0 | 44.5 | 1.40 | 40.0 | | |
| 2450 | 55.0 | 0 | 0 | 0 | 0 | 45.0 | 1.80 | 39.2 | | |
| | | | | For Body | | | | | | |
| 835 | 50.8 | 48.2 | 0 | 0.9 | 0.1 | 0 | 0.97 | 55.2 | | |
| 900 | 50.8 | 48.2 | 0 | 0.9 | 0.1 | 0 | 1.05 | 55.0 | | |
| 1800, 1900, 2000 | 70.2 | 0 | 0 | 0.4 | 0 | 29.4 | 1.52 | 53.3 | | |
| 2450 | 68.6 | 0 | 0 | 0 | 0 | 31.4 | 1.95 | 52.7 | | |

Table 6.1 Recipes of Tissue Simulating Liquid

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 19 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

| CC SAR Test Re | port | Report No.: FA9O1220 |
|----------------|------|----------------------|
| | | |

The following table gives the targets for tissue simulating liquid.

| Frequency (MHz) | Liquid Type | Conductivity (σ) | ±5% Range | Permittivity (ϵ_r) | ±5% Range |
|--------------------|-------------|---------------------|-------------|-----------------------------|-------------|
| 835 | Head | 0.90 | 0.86 ~ 0.95 | 41.5 | 39.4 ~ 43.6 |
| 900 | Head | 0.97 | 0.92 ~ 1.02 | 41.5 | 39.4 ~ 43.6 |
| 1800, 1900, 2000 | Head | 1.40 | 1.33 ~ 1.47 | 40.0 | 38.0 ~ 42.0 |
| 2450 | Head | 1.80 | 1.71 ~ 1.89 | 39.2 | 37.2 ~ 41.2 |
| 835 | Body | 0.97 | 0.92 ~ 1.02 | 55.2 | 52.4 ~ 58.0 |
| 900 | Body | 1.05 | 1.00 ~ 1.10 | 55.0 | 52.3 ~ 57.8 |
| 1800, 1900, 2000 | Body | 1.52 | 1.44 ~ 1.60 | 53.3 | 50.6 ~ 56.0 |
| 2450 | Body | 1.95 | 1.85 ~ 2.05 | 52.7 | 50.1 ~ 55.3 |

Table 6.2 Targets of Tissue Simulating Liquid

The dielectric parameters of the liquids were verified prior to the SAR evaluation using an Agilent 85070D Dielectric Probe Kit and an Agilent Network Analyzer.

The following table shows the measuring results for simulating liquid.

| Frequency (MHz) | Liquid Type | Temperature (°C) | Conductivity (σ) | Permittivity (ε _r) | Measurement Date |
|--------------------|----------------|---------------------|------------------|-----------------------------------|---------------------|
| 835 | Body | 21.5 | 0.978 | 53.4 | Oct. 14, 2009 |
| 1900 | Body | 21.6 | 1.55 | 52.1 | Oct. 14, 2009 |

Table 6.3 Measuring Results for Simulating Liquid

 SPORTON INTERNATIONAL INC.
 Page Number
 : 20 of 30

 TEL: 886-3-327-3456
 Report Issued Date
 : Oct. 20, 2009

 FAX: 886-3-328-4978
 Report Version
 : Rev. 01

FCC ID: Q78-AC2766

7. Uncertainty Assessment

The component of uncertainly may generally be categorized according to the methods used to evaluate them. The evaluation of uncertainly by the statistical analysis of a series of observations is termed a Type An evaluation of uncertainty. The evaluation of uncertainty by means other than the statistical analysis of a series of observation is termed a Type B evaluation of uncertainty. Each component of uncertainty, however evaluated, is represented by an estimated standard deviation, termed standard uncertainty, which is determined by the positive square root of the estimated variance.

A Type A evaluation of standard uncertainty may be based on any valid statistical method for treating data. This includes calculating the standard deviation of the mean of a series of independent observations; using the method of least squares to fit a curve to the data in order to estimate the parameter of the curve and their standard deviations; or carrying out an analysis of variance in order to identify and quantify random effects in certain kinds of measurement.

A type B evaluation of standard uncertainty is typically based on scientific judgment using all of the relevant information available. These may include previous measurement data, experience and knowledge of the behavior and properties of relevant materials and instruments, manufacture's specification, data provided in calibration reports and uncertainties assigned to reference data taken from handbooks. Broadly speaking, the uncertainty is either obtained from an outdoor source or obtained from an assumed distribution, such as the normal distribution, rectangular or triangular distributions indicated in Table 7.1

| Uncertainty Distributions | Normal | Rectangular | Triangular | U-Shape |
|------------------------------------|--------------------|-------------|------------|---------|
| Multi-plying Factor ^(a) | 1/k ^(b) | 1/√3 | 1/√6 | 1/√2 |

⁽a) standard uncertainty is determined as the product of the multiplying factor and the estimated range of variations in the measured quantity

Table 7.1 Standard Uncertainty for Assumed Distribution

The combined standard uncertainty of the measurement result represents the estimated standard deviation of the result. It is obtained by combining the individual standard uncertainties of both Type A and Type B evaluation using the usual "root-sum-squares" (RSS) methods of combining standard deviations by taking the positive square root of the estimated variances.

Expanded uncertainty is a measure of uncertainty that defines an interval about the measurement result within which the measured value is confidently believed to lie. It is obtained by multiplying the combined standard uncertainty by a coverage factor. Typically, the coverage factor ranges from 2 to 3. Using a coverage factor allows the true value of a measured quantity to be specified with a defined probability within the specified uncertainty range. For purpose of this document, a coverage factor two is used, which corresponds to confidence interval of about 95 %. The DASY uncertainty Budget is showed in Table 7.2.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 21 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

⁽b) κ is the coverage factor

| Error Description | Uncertainty Value (±%) | Probability Distribution | Divisor | Ci (1g) | Standard Uncertainty (1g) | | |
|------------------------------|-------------------------------|-----------------------------|---------|------------|---------------------------------|--|--|
| Measurement System | | | | | | | |
| Probe Calibration | 5.9 | Normal | 1 | 1 | ± 5.9 % | | |
| Axial Isotropy | 4.7 | Rectangular | √3 | 0.7 | ± 1.9 % | | |
| Hemispherical Isotropy | 9.6 | Rectangular | √3 | 0.7 | ± 3.9 % | | |
| Boundary Effects | 1.0 | Rectangular | √3 | 1 | ± 0.6 % | | |
| Linearity | 4.7 | Rectangular | √3 | 1 | ± 2.7 % | | |
| System Detection Limits | 1.0 | Rectangular | √3 | 1 | ± 0.6 % | | |
| Readout Electronics | 0.3 | Normal | 1 | 1 | ± 0.3 % | | |
| Response Time | 0.8 | Rectangular | √3 | 1 | ± 0.5 % | | |
| Integration Time | 2.6 | Rectangular | √3 | 1 | ± 1.5 % | | |
| RF Ambient Noise | 3.0 | Rectangular | √3 | 1 | ± 1.7 % | | |
| RF Ambient Reflections | 3.0 | Rectangular | √3 | 1 | ± 1.7 % | | |
| Probe Positioner | 0.4 | Rectangular | √3 | 1 | ± 0.2 % | | |
| Probe Positioning | 2.9 | Rectangular | √3 | 1 | ± 1.7 % | | |
| Max. SAR Eval. | 1.0 | Rectangular | √3 | 1 | ± 0.6 % | | |
| Test Sample Related | | | | | | | |
| Device Positioning | 2.9 | Normal | 1 | 1 | ± 2.9 % | | |
| Device Holder | 3.6 | Normal | 1 | 1 | ± 3.6 % | | |
| Power Drift | 5.0 | Rectangular | √3 | 1 | ± 2.9 % | | |
| Phantom and Setup | | | | | | | |
| Phantom Uncertainty | 4.0 | Rectangular | √3 | 1 | ± 2.3 % | | |
| Liquid Conductivity (Target) | 5.0 | Rectangular | √3 | 0.64 | ± 1.8 % | | |
| Liquid Conductivity (Meas.) | 2.5 | Normal | 1 | 0.64 | ± 1.6 % | | |
| Liquid Permittivity (Target) | 5.0 | Rectangular | √3 | 0.6 | ± 1.7 % | | |
| Liquid Permittivity (Meas.) | 2.5 | Normal | 1 | 0.6 | ± 1.5 % | | |
| Combined Standard Uncertai | Combined Standard Uncertainty | | | | | | |
| | | | | | | | |

Table 7.2 Uncertainty Budget of DASY for frequency range 300 MHz to 3 GHz

Coverage Factor for 95 %

Expanded Uncertainty

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 22 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

K = 2

± 21.8 %



Report No.: FA9O1220

8. SAR Measurement Evaluation

Each DASY system is equipped with one or more system validation kits. These units, together with the predefined measurement procedures within the DASY software, enable the user to conduct the system performance check and system validation. System validation kit includes a dipole, tripod holder to fix it underneath the flat phantom and a corresponding distance holder.

8.1 Purpose of System Performance check

The system performance check verifies that the system operates within its specifications. System and operator errors can be detected and corrected. It is recommended that the system performance check be performed prior to any usage of the system in order to guarantee reproducible results. The system performance check uses normal SAR measurements in a simplified setup with a well characterized source. This setup was selected to give a high sensitivity to all parameters that might fail or vary over time. The system check does not intend to replace the calibration of the components, but indicates situations where the system uncertainty is exceeded due to drift or failure.

8.2 System Setup

In the simplified setup for system evaluation, the DUT is replaced by a calibrated dipole and the power source is replaced by a continuous wave that comes from a signal generator. The calibrated dipole must be placed beneath the flat phantom section of the SAM twin phantom with the correct distance holder. The distance holder should touch the phantom surface with a light pressure at the reference marking and be oriented parallel to the long side of the phantom. The equipment setup is shown below:

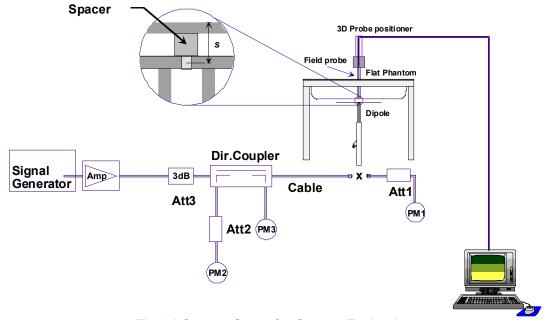


Fig 8.1 System Setup for System Evaluation

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 23 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01

- 1. Signal Generator
- 2. Amplifier
- 3. Directional Coupler
- 4. Power Meter
- 5. Calibrated Dipole

The output power on dipole port must be calibrated to 20 dBm (100 mW) before dipole is connected.

Report No.: FA9O1220



Fig 8.2 Photo of Dipole Setup

8.3 Validation Results

Comparing to the original SAR value provided by SPEAG, the validation data should be within its specification of 10 %. Table 8.1 shows the target SAR and measured SAR after normalized to 1W input power. The table below indicates the system performance check can meet the variation criterion and the plots can be referred to appendix A of this report.

| Measurement Date | Frequency (MHz) | Targeted SAR _{1g} (W/kg) | Measured SAR _{1g} (W/kg) | Deviation (%) |
|---------------------|--------------------|--------------------------------------|--------------------------------------|------------------|
| Oct. 14, 2009 | 835 | 9.52 | 9.09 | -4.52 |
| Oct. 14, 2009 | 1900 | 40.10 | 39.40 | -1.75 |

Table 8.1 Target and Measurement SAR after Normalized

 SPORTON INTERNATIONAL INC.
 Page Number
 : 24 of 30

 TEL: 886-3-327-3456
 Report Issued Date
 : Oct. 20, 2009

 FAX: 886-3-328-4978
 Report Version
 : Rev. 01

FCC ID: Q78-AC2766



Report No. : FA9O1220

9. **DUT Testing Position**

This DUT was tested in four different USB configurations. They are "direct laptop plug-in for configuration 1 and 4" and "USB cable plug-in for configuration 2 and 3" shown as below. Both direct laptop plug-in and USB cable plug-in test configurations were tested with 5 mm separation between the particular dongle orientation and the flat phantom. For Configuration 1, 3 and 4, the DUT was also tested in different angles because of the rotated USB connector.

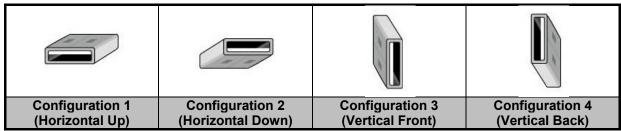


Illustration for USB Connector Orientations Fig 9.1

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766

: 25 of 30 Page Number Report Issued Date: Oct. 20, 2009

10. Measurement Procedures

The measurement procedures are as follows:

- (a) For WWAN function, link DUT with base station emulator in middle channel
- (b) Set base station emulator to allow DUT to radiate maximum output power
- (c) Measure output power through RF cable and power meter
- (d) Place the DUT in the positions described in the last section
- (e) Set scan area, grid size and other setting on the DASY software
- (f) Taking data for the middle channel on each testing position
- (g) Find out the largest SAR result on these testing positions of each band
- (h) Measure SAR results for the lowest and highest channels in worst SAR testing position

According to the test standard, the recommended procedure for assessing the peak spatial-average SAR value consists of the following steps:

- (a) Power reference measurement
- (b) Area scan
- (c) Zoom scan
- (d) Power drift measurement

10.1 Spatial Peak SAR Evaluation

The procedure for spatial peak SAR evaluation has been implemented according to the test standard. It can be conducted for 1g and 10g, as well as for user-specific masses. The DASY software includes all numerical procedures necessary to evaluate the spatial peak SAR value.

The base for the evaluation is a "cube" measurement. The measured volume must include the 1g and 10g cubes with the highest averaged SAR values. For that purpose, the center of the measured volume is aligned to the interpolated peak SAR value of a previously performed area scan.

The entire evaluation of the spatial peak values is performed within the post-processing engine (SEMCAD). The system always gives the maximum values for the 1g and 10g cubes. The algorithm to find the cube with highest averaged SAR is divided into the following stages:

- (a) Extraction of the measured data (grid and values) from the Zoom Scan
- (b) Calculation of the SAR value at every measurement point based on all stored data (A/D values and measurement parameters)
- (c) Generation of a high-resolution mesh within the measured volume
- (d) Interpolation of all measured values form the measurement grid to the high-resolution grid
- (e) Extrapolation of the entire 3-D field distribution to the phantom surface over the distance from sensor to surface
- (f) Calculation of the averaged SAR within masses of 1g and 10g

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 26 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



10.2 Scan Procedures

First Area Scan is used to locate the approximate location(s) of the local peak SAR value(s). The measurement grid within an Area Scan is defined by the grid extent, grid step size and grid offset. Next, in order to determine the EM field distribution in a three-dimensional spatial extension, Zoom Scan is required. The Zoom Scan measures 5x5x7 points with step size 8, 8 and 5 mm for 300 MHz to 3 GHz. The Zoom Scan is performed around the highest E-field value to determine the averaged SAR-distribution over 10 g.

10.3 SAR Averaged Methods

In DASY, the interpolation and extrapolation are both based on the modified Quadratic Shepard's method. The interpolation scheme combines a least-square fitted function method and a weighted average method which are the two basic types of computational interpolation and approximation.

Extrapolation routines are used to obtain SAR values between the lowest measurement points and the inner phantom surface. The extrapolation distance is determined by the surface detection distance and the probe sensor offset. The uncertainty increases with the extrapolation distance. To keep the uncertainty within 1% for the 1 g and 10 g cubes, the extrapolation distance should not be larger than 5 mm.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 27 of 30
Report Issued Date : Oct. 20, 2009

Report No.: FA9O1220



11. SAR Test Results

11.1 Conducted Power (Unit: dBm)

| Band | CI | CDMA2000 BC0 | | | DMA2000 B | C1 |
|-------------------|--------|--------------|--------|---------|-----------|---------|
| Channel | 1013 | 384 | 777 | 25 | 600 | 1175 |
| Frequency (MHz) | 824.70 | 836.52 | 848.31 | 1851.25 | 1880.00 | 1908.75 |
| RC1+SO55 | 19.02 | 19.07 | 19.15 | 17.65 | 17.86 | 17.97 |
| RC3+SO55 | 18.82 | 19.45 | 18.53 | 17.56 | 17.74 | 18.28 |
| RC3+SO32 | 18.97 | 18.70 | 18.91 | 17.49 | 17.59 | 17.66 |
| RTAP 9.6 | 19.22 | 19.41 | 19.44 | 17.98 | 18.14 | 18.19 |
| RTAP 38.4 | 18.94 | 19.30 | 19.42 | 17.65 | 17.73 | 17.82 |
| RTAP 153.6 | 18.79 | 19.27 | 19.15 | 17.55 | 17.65 | 17.69 |
| RETAP 128 | 19.43 | 19.41 | 19.42 | 18.18 | 18.23 | 18.26 |
| RETAP 2048 | 19.29 | 19.30 | 19.39 | 17.70 | 18.00 | 18.10 |
| RETAP 4096 | 18.53 | 19.25 | 19.41 | 17.89 | 17.87 | 18.16 |
| RETAP 12288 | 19.37 | 19.44 | 19.42 | 17.97 | 18.09 | 18.24 |

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 28 of 30 Report Issued Date: Oct. 20, 2009

Report No.: FA9O1220



11.2 Test Records for Body SAR Test

| Plot No. | Band | Mode | USB Configuration | Separation Distance (cm) | Channel | Dongle Status | SAR _{1g} (W/kg) |
|-------------|------|----------|---------------------------------------|--------------------------------|---------|------------------|-----------------------------|
| #01 | BC0 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 384 | Straight | 0.791 |
| #02 | BC0 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 384 | Vertical | 0.013 |
| #03 | BC0 | RC3+SO55 | 2 (Horizontal Down) With USB Cable | 0.5 | 384 | Straight | 0.433 |
| #04 | BC0 | RC3+SO55 | 3 (Vertical Front) With USB Cable | 0.5 | 384 | Straight | 0.482 |
| #05 | BC0 | RC3+SO55 | 4 (Vertical Back) With Laptop | 0.5 | 384 | Straight | 0.298 |
| #06 | BC0 | RC3+SO55 | 3 (Vertical Front) With USB Cable | 0.5 | 384 | Vertical | 0.43 |
| #07 | BC0 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 1013 | Straight | 0.801 |
| #08 | BC0 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 777 | Straight | 0.874 |
| #10 | BC1 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 600 | Straight | 1.12 |
| #11 | BC1 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 600 | Vertical | 0.023 |
| #12 | BC1 | RC3+SO55 | 2 (Horizontal Down) With USB Cable | 0.5 | 600 | Straight | 0.982 |
| #13 | BC1 | RC3+SO55 | 3 (Vertical Front) With USB Cable | 0.5 | 600 | Straight | 0.56 |
| #14 | BC1 | RC3+SO55 | 4 (Vertical Back) With Laptop | 0.5 | 600 | Straight | 0.618 |
| #15 | BC1 | RC3+SO55 | 4 (Vertical Back) With Laptop | 0.5 | 600 | Vertical | 0.752 |
| #16 | BC1 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 25 | Straight | 1.04 |
| #17 | BC1 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 0.5 | 1175 | Straight | 1.14 |
| #18 | BC1 | RC3+SO55 | 2 (Horizontal Down) With USB Cable | 0.5 | 25 | Straight | 0.965 |
| #19 | BC1 | RC3+SO55 | 2 (Horizontal Down) With USB Cable | 0.5 | 1175 | Straight | 1.07 |

11.3 Test Records for Back-Off SAR Test

| Plot No. | Band | Mode | USB Configuration | Separation Distance (cm) | Channel | Dongle Status | SAR _{1g} (W/kg) |
|-------------|------|----------|----------------------------------|--------------------------------|---------|------------------|-----------------------------|
| #09 | BC0 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 1.0 | 777 | Straight | 0.432 |
| #20 | BC1 | RC3+SO55 | 1 (Horizontal Up) With Laptop | 1.0 | 1175 | Straight | 0.567 |

Test Engineer : Robert Liu and A-Rod Chen

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : 29 of 30
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01



12. References

[1] FCC 47 CFR Part 2 "Frequency Allocations and Radio Treaty Matters; General Rules and Regulations"

Report No.: FA9O1220

: 30 of 30

: Rev. 01

Report Version

- [2] IEEE Std. C95.1-1999, "IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz", 1999
- IEEE Std. 1528-2003, "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", December 2003
- FCC OET Bulletin 65 (Edition 97-01) Supplement C (Edition 01-01), "Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields", June 2001
- SPEAG DASY System Handbook [5]
- [6] FCC KDB 248227 D01 v01r02, "SAR Measurement Procedures for 802.11 a/b/g Transmitters",
- [7] FCC KDB 447498 D01 v03r03, "Mobile and Portable Device RF Exposure Procedures and Equipment Authorization Policies", January 2009
- FCC KDB 447498 D02 v01, "SAR Measurement Procedures for USB Dongle Transmitters", December 2008
- [9] FCC KDB 616217 D01 v01, "SAR Evaluation Considerations for Laptop Computers with Antennas Built-in on Display Screens", December 2007
- [10] FCC KDB 648474 D01 v01r05, "SAR Evaluation Considerations for Handsets with Multiple Transmitters and Antennas", September 2008
- [11] FCC KDB 941225 D01 v02, "SAR Measurement Procedures for 3G Devices CDMA 2000 / Ev-Do / WCDMA / HSDPA / HSPA", October 2007
- [12] FCC KDB 941225 D03 v01, "Recommended SAR Test Reduction Procedures for GSM / GPRS / EDGE", December 2008

SPORTON INTERNATIONAL INC. Page Number Report Issued Date: Oct. 20, 2009 TEL: 886-3-327-3456

FAX: 886-3-328-4978 FCC ID: Q78-AC2766



Appendix A. Plots of System Performance Check

The plots are shown as follows.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766

: A1 of A1 Page Number Report Issued Date: Oct. 20, 2009

Report No.: FA9O1220



Appendix B. Plots of SAR Measurement

The plots are shown as follows.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766

: B1 of B1 Page Number Report Issued Date: Oct. 20, 2009

Report No.: FA9O1220



Appendix C. DASY Calibration Certificate

The DASY calibration certificates are shown as follows.

SPORTON INTERNATIONAL INC.

TEL: 886-3-327-3456 FAX: 886-3-328-4978 FCC ID: Q78-AC2766 Page Number : C1 of C1
Report Issued Date : Oct. 20, 2009
Report Version : Rev. 01