

Appendix B – System Check Plots

Test Date : 2025-06-12 | Ambient Temp : 22.1 °C | Tissue Temp : 21.6 °C

System Performance Check**System Performance Check at 13.56 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	CLA13	1047	30.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	13.560	18.17	0.728	52.5

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe / Calibration Date	DAE / Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	0.543	0.512
psSAR-10g [W/kg]	0.435	0.315
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

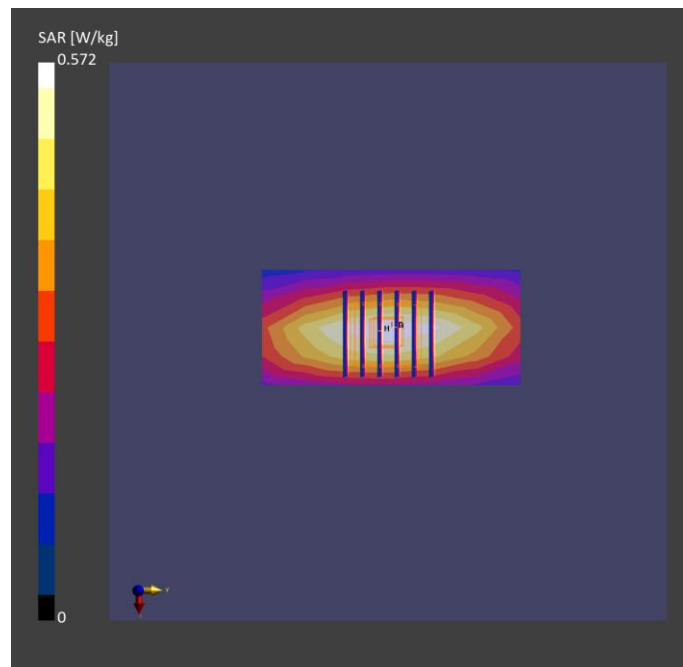

Test Date : 2025-06-21 | Ambient Temp : 22.2 °C | Tissue Temp : 21.8 °C

System Performance Check**System Performance Check at 750 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D750V3	1222	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	750.000	10.04	0.939	40.9

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe / Calibration Date	DAE / Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	0.440	0.437
psSAR-10g [W/kg]	0.294	0.289
Power Drift [dB]		0.02
TSL Correction	Positive only	Positive only

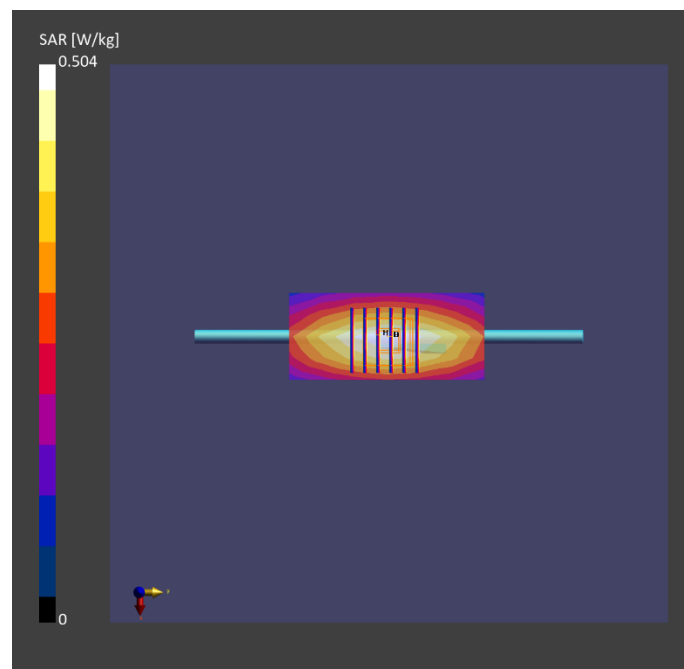

Test Date : 2025-06-23 | Ambient Temp : 22.1 °C | Tissue Temp : 21.6 °C

System Performance Check**System Performance Check at 750 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D750V3	1222	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	750.000	10.04	0.918	41.5

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	0.433	0.429
psSAR-10g [W/kg]	0.289	0.284
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

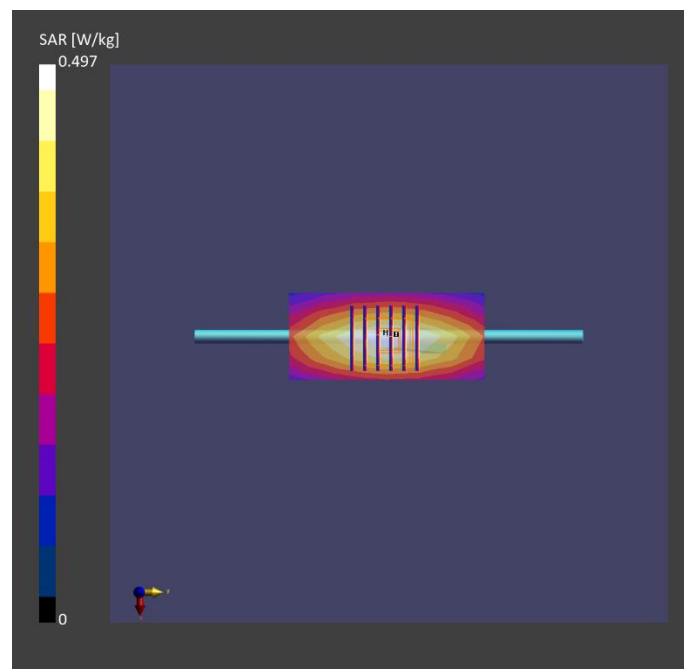

Test Date : 2025-06-25 | Ambient Temp : 22.2 °C | Tissue Temp : 21.6 °C

System Performance Check**System Performance Check at 835 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D835V2	4d291	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	835.000	9.73	0.946	41.2

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe / Calibration Date	DAE / Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	0.507	0.506
psSAR-10g [W/kg]	0.335	0.331
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

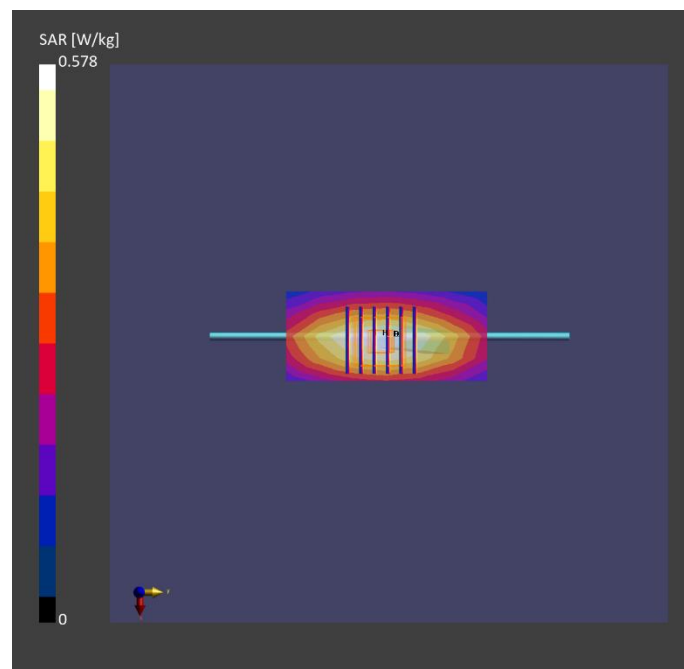

Test Date : 2025-06-13 | Ambient Temp : 22.1 °C | Tissue Temp : 21.6 °C

System Performance Check

System Performance Check at 835 MHz

Verification Source Properties

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D835V2	4d291	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	835.000	9.73	0.935	39.5

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe / Calibration Date	DAE / Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	0.526	0.520
psSAR-10g [W/kg]	0.346	0.340
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

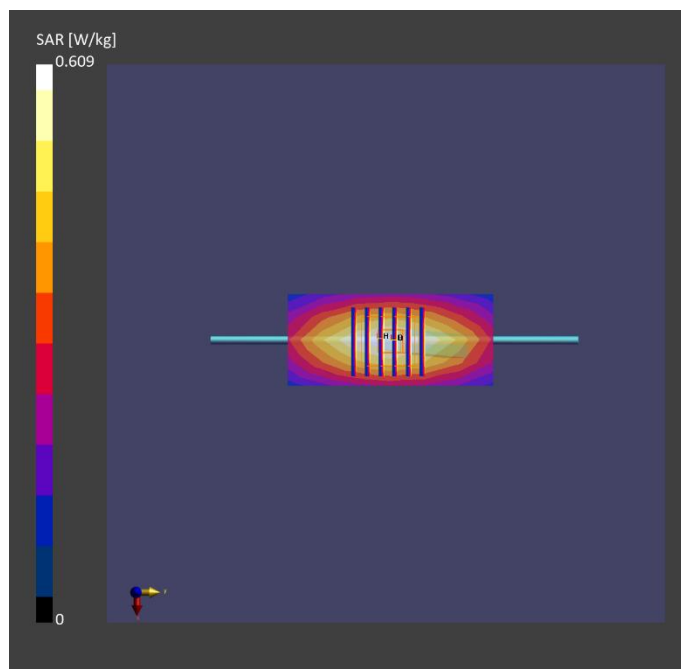

Test Date : 2025-06-14 | Ambient Temp : 21.8 °C | Tissue Temp : 21.5 °C

System Performance Check**System Performance Check at 835 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D835V2	4d291	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	835.000	9.73	0.958	41.7

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	0.540	0.533
psSAR-10g [W/kg]	0.355	0.349
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

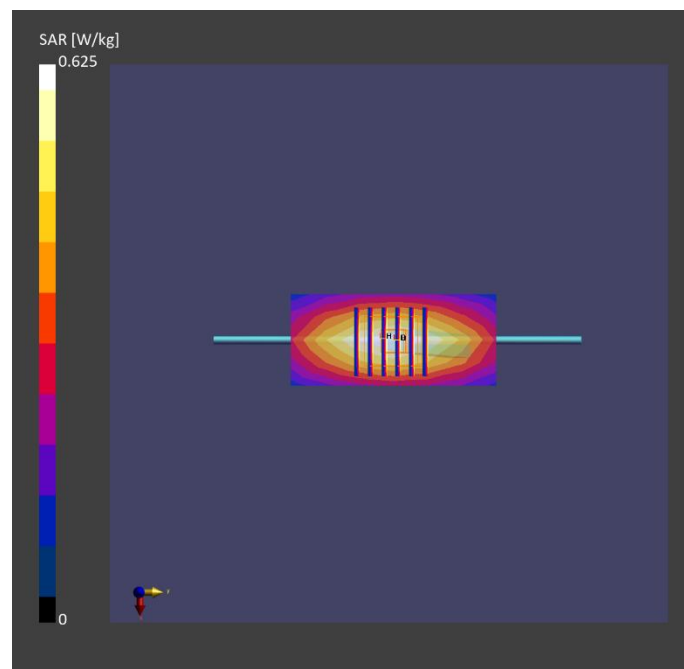

Test Date : 2025-06-24 | Ambient Temp : 22.4 °C | Tissue Temp : 21.8 °C

System Performance Check**System Performance Check at 1800 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D1800V2	2d167	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	1800.000	8.02	1.39	39.2

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	1.92	1.89
psSAR-10g [W/kg]	1.01	0.998
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

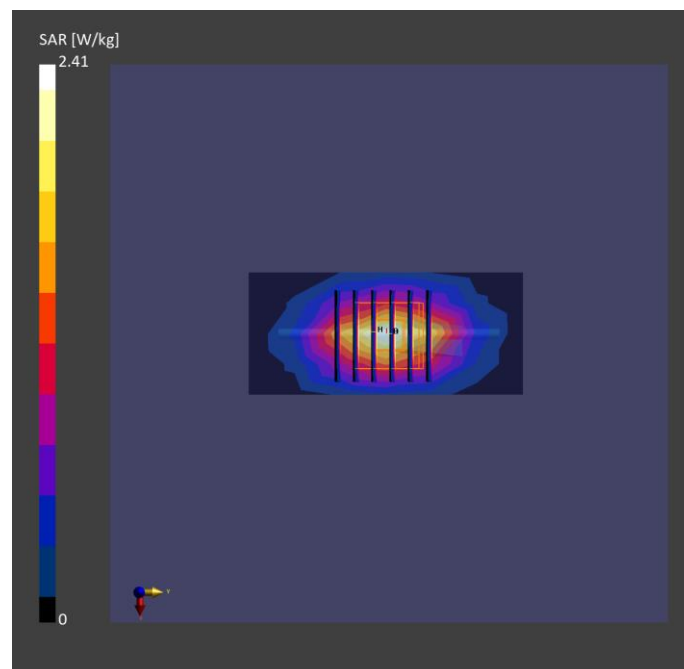

Test Date : 2025-06-22 | Ambient Temp : 22.4 °C | Tissue Temp : 22.1 °C

System Performance Check**System Performance Check at 1900 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D1900V2	5d111	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	1900.000	7.85	1.45	38.9

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 90.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 15.0	6.0 x 6.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	1.94	1.92
psSAR-10g [W/kg]	1.02	1.00
Power Drift [dB]		0.02
TSL Correction	Positive only	Positive only

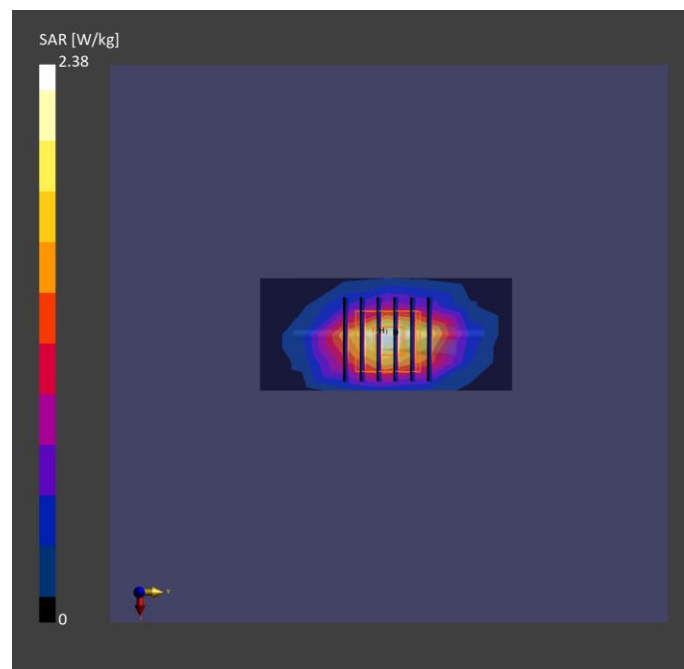

Test Date : 2025-06-10 | Ambient Temp : 22.1 °C | Tissue Temp : 21.6 °C

System Performance Check**System Performance Check at 2450 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D2450V2	1087	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	2450.000	7.18	1.81	38.2

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	2.74	2.69
psSAR-10g [W/kg]	1.26	1.25
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

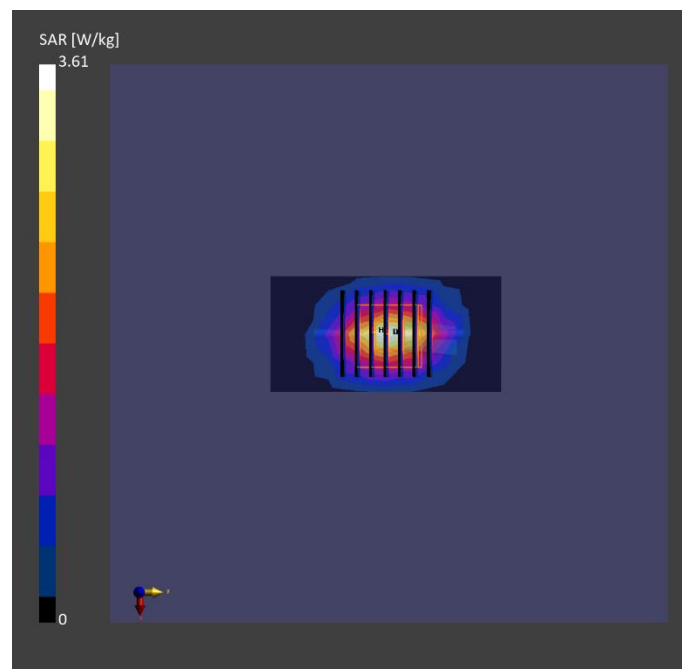

Test Date : 2025-06-23 | Ambient Temp : 22.1 °C | Tissue Temp : 21.6 °C

System Performance Check**System Performance Check at 2600 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D2600V2	1197	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	2600.000	7.31	1.70	38.4

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	2.55	2.66
psSAR-10g [W/kg]	1.16	1.23
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

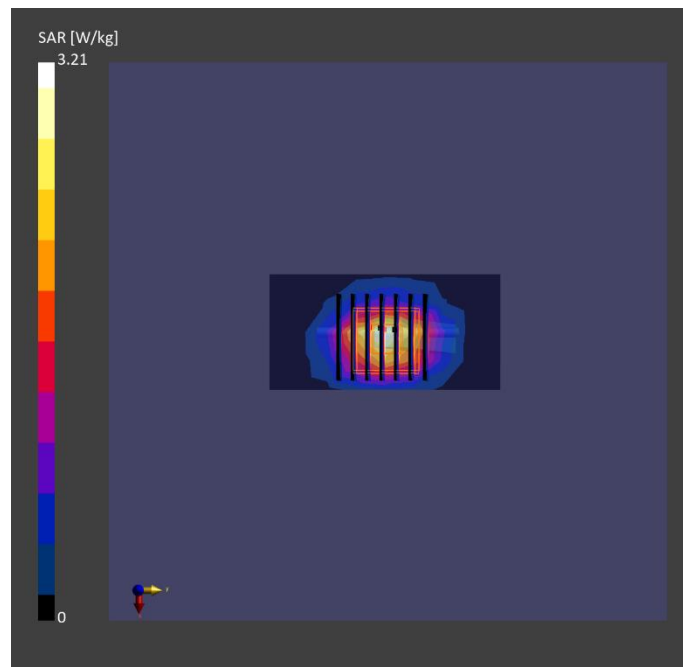

Test Date : 2025-06-26 | Ambient Temp : 21.9 °C | Tissue Temp : 21.8 °C

System Performance Check**System Performance Check at 2600 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D2600V2	1197	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	2600.000	7.31	1.98	36.9

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	2.75	2.76
psSAR-10g [W/kg]	1.26	1.28
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

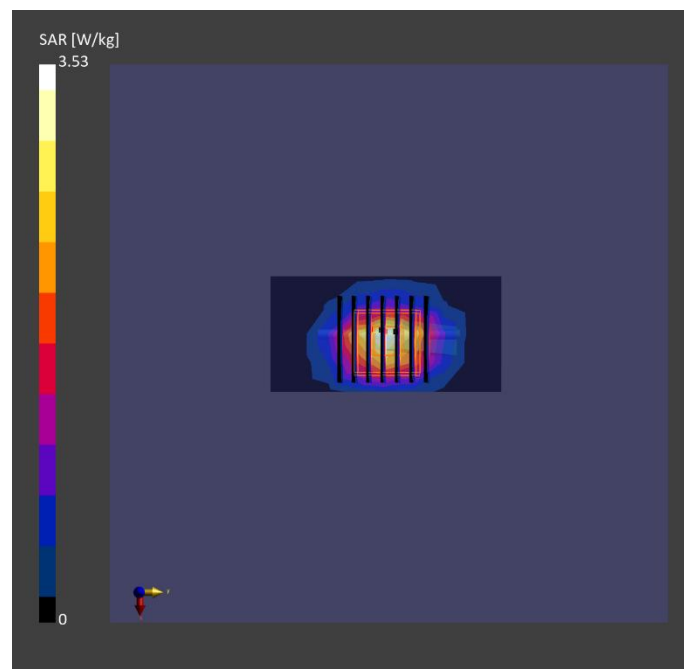

Test Date : 2025-06-28 | Ambient Temp : 22.5 °C | Tissue Temp : 22.1 °C

System Performance Check**System Performance Check at 2600 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D2600V2	1197	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	2600.000	7.31	1.97	36.2

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe / Calibration Date	DAE / Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	30.0 x 30.0 x 30.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.5
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	2.74	2.71
psSAR-10g [W/kg]	1.22	1.25
Power Drift [dB]		0.02
TSL Correction	Positive only	Positive only

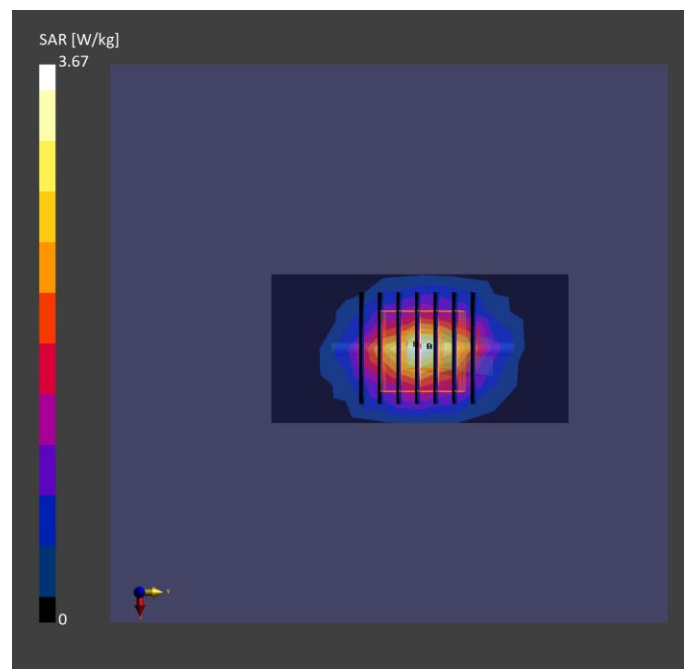

Test Date : 2025-06-27 | Ambient Temp : 22.3 °C | Tissue Temp : 21.7 °C

System Performance Check**System Performance Check at 3500 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3500V2	1013	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3500.000	6.74	2.84	37.9

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.26	3.26
psSAR-10g [W/kg]	1.25	1.25
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

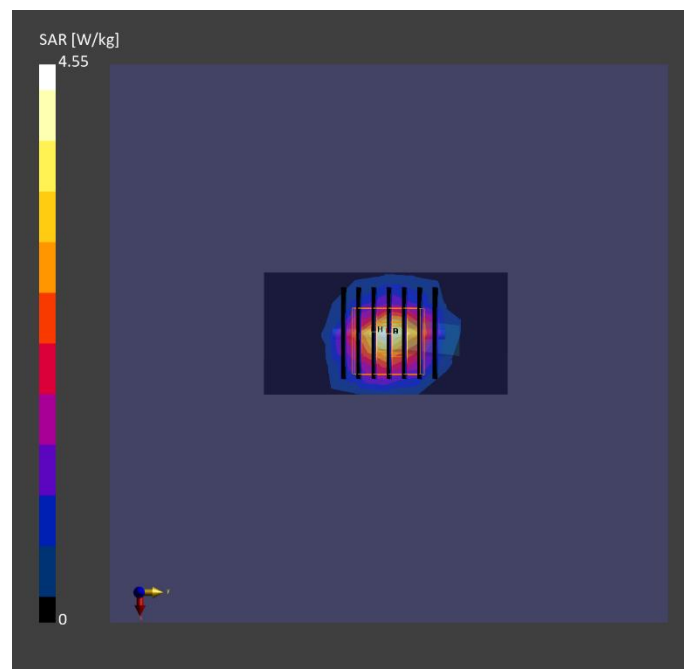

Test Date : 2025-06-28 | Ambient Temp : 22.5 °C | Tissue Temp : 22.1 °C

System Performance Check**System Performance Check at 3500 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3500V2	1013	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3500.000	6.74	2.77	38.1

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.21	3.21
psSAR-10g [W/kg]	1.23	1.23
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

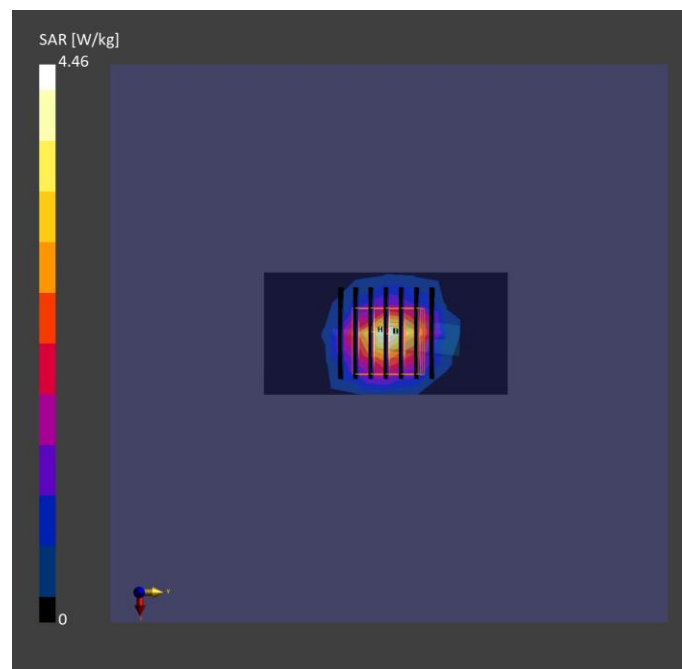

Test Date : 2025-06-29 | Ambient Temp : 22.3 °C | Tissue Temp : 21.8 °C

System Performance Check**System Performance Check at 3500 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3500V2	1013	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3500.000	6.74	2.78	37.9

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.23	3.22
psSAR-10g [W/kg]	1.24	1.24
Power Drift [dB]		0.00
TSL Correction	Positive only	Positive only

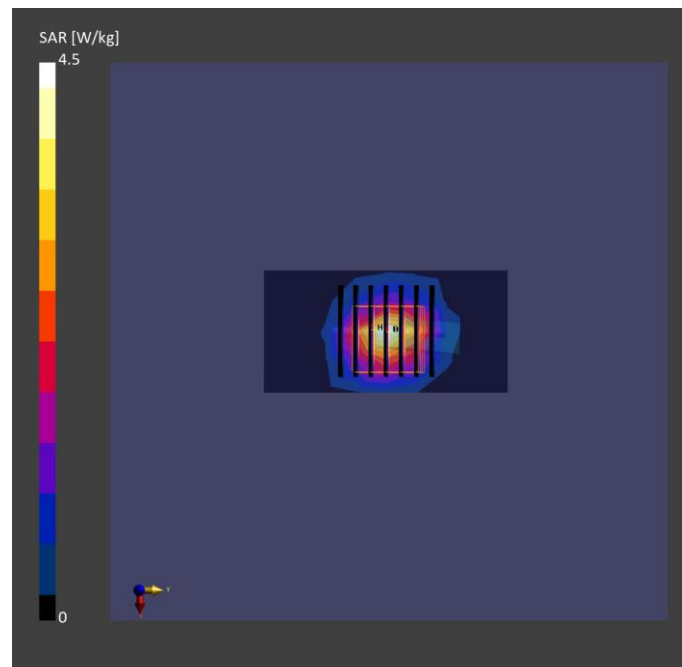

Test Date : 2025-06-27 | Ambient Temp : 22.3 °C | Tissue Temp : 21.7 °C

System Performance Check**System Performance Check at 3700 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3700V2	1034	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3700.000	6.66	3.03	37.6

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.28	3.28
psSAR-10g [W/kg]	1.21	1.22
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

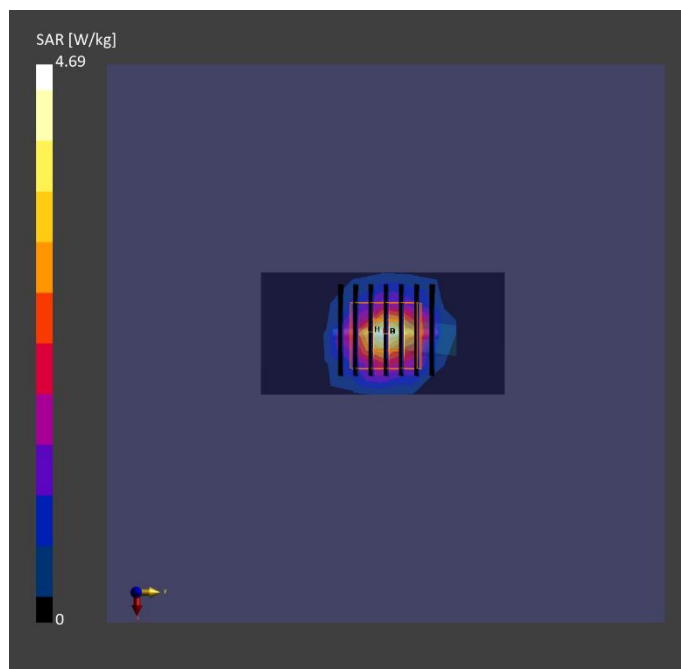

Test Date : 2025-06-28 | Ambient Temp : 22.5 °C | Tissue Temp : 22.1 °C

System Performance Check**System Performance Check at 3700 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3700V2	1034	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3700.000	6.66	2.94	37.7

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.20	3.20
psSAR-10g [W/kg]	1.17	1.18
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

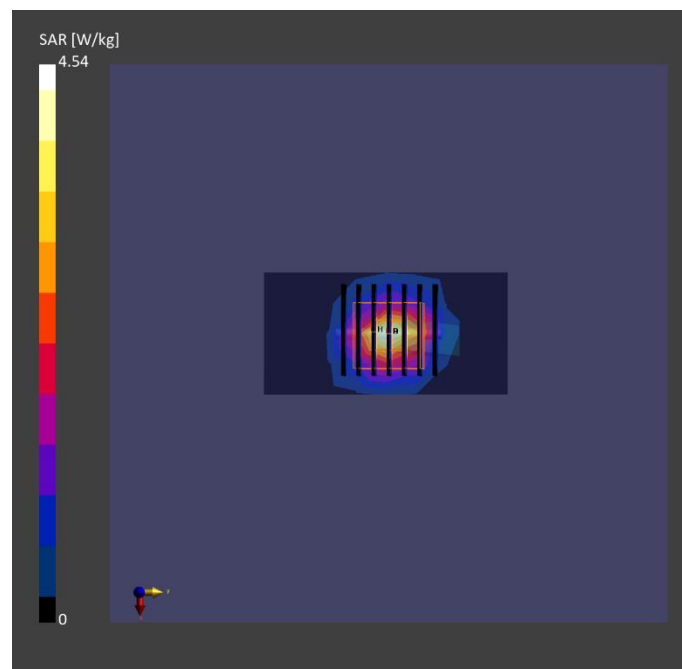

Test Date : 2025-06-29 | Ambient Temp : 22.3 °C | Tissue Temp : 21.8 °C

System Performance Check**System Performance Check at 3700 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3700V2	1034	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3700.000	6.66	2.96	37.6

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.20	3.21
psSAR-10g [W/kg]	1.18	1.19
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

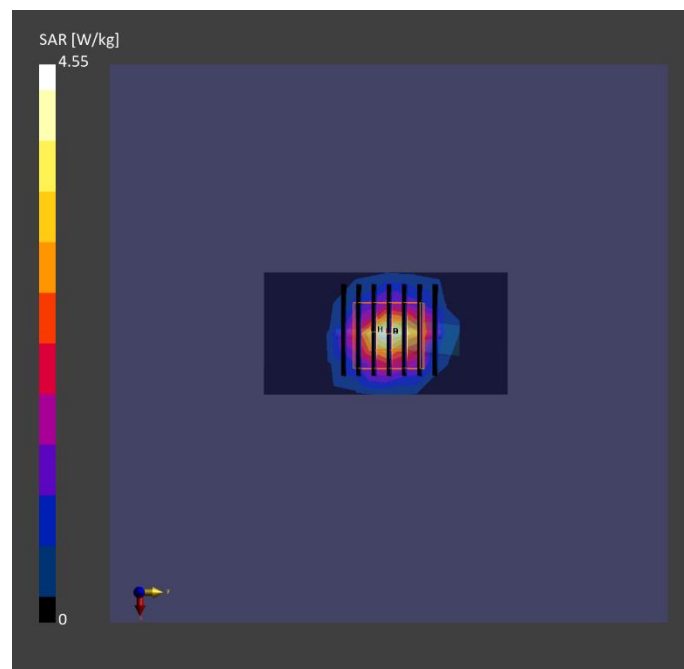

Test Date : 2025-06-29 | Ambient Temp : 22.3 °C | Tissue Temp : 21.8 °C

System Performance Check**System Performance Check at 3900 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D3900V2	1014	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	3900.000	6.64	3.15	36.7

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	28.0 x 28.0 x 28.0
Grid Steps [mm]	10.0 x 10.0	5.0 x 5.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.5

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.27	3.28
psSAR-10g [W/kg]	1.17	1.16
Power Drift [dB]		-0.03
TSL Correction	Positive only	Positive only

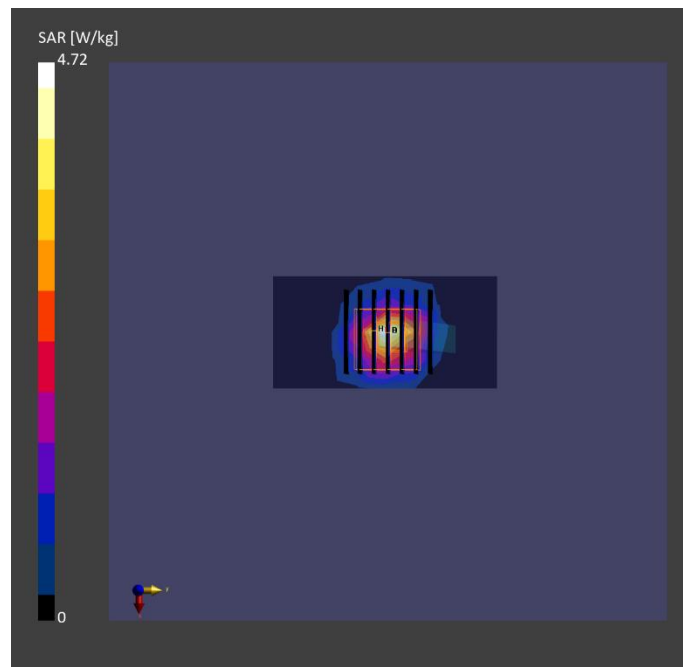

Test Date : 2025-06-11 | Ambient Temp : 22.3 °C | Tissue Temp : 21.9 °C

System Performance Check**System Performance Check at 5250 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D5GHzV2	1358	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	5250.000	5.67	4.26	34.9

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	22.0 x 22.0 x 22.0
Grid Steps [mm]	10.0 x 10.0	4.0 x 4.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.4

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.52	3.73
psSAR-10g [W/kg]	1.01	1.07
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

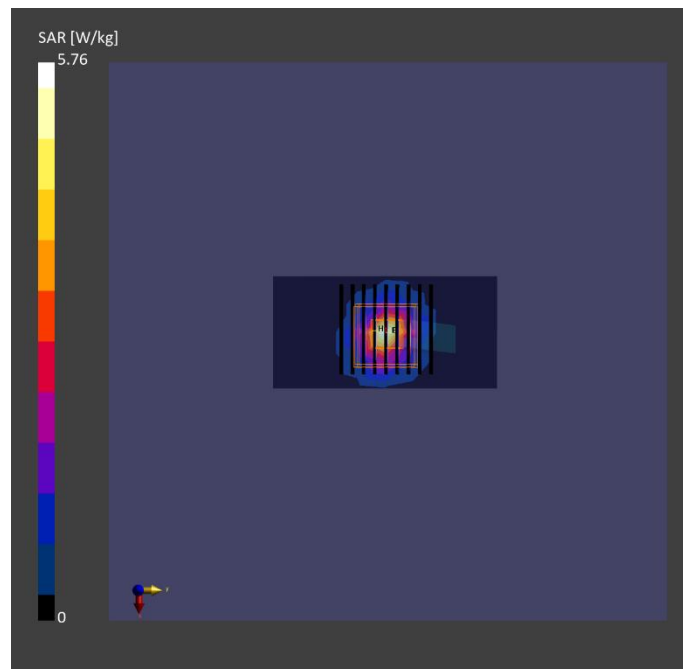

Test Date : 2025-06-11 | Ambient Temp : 22.3 °C | Tissue Temp : 21.9 °C

System Performance Check**System Performance Check at 5600 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D5GHzV2	1358	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	5600.000	5.31	4.62	34.4

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	22.0 x 22.0 x 22.0
Grid Steps [mm]	10.0 x 10.0	4.0 x 4.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.4

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	4.19	4.45
psSAR-10g [W/kg]	1.18	1.26
Power Drift [dB]		0.01
TSL Correction	Positive only	Positive only

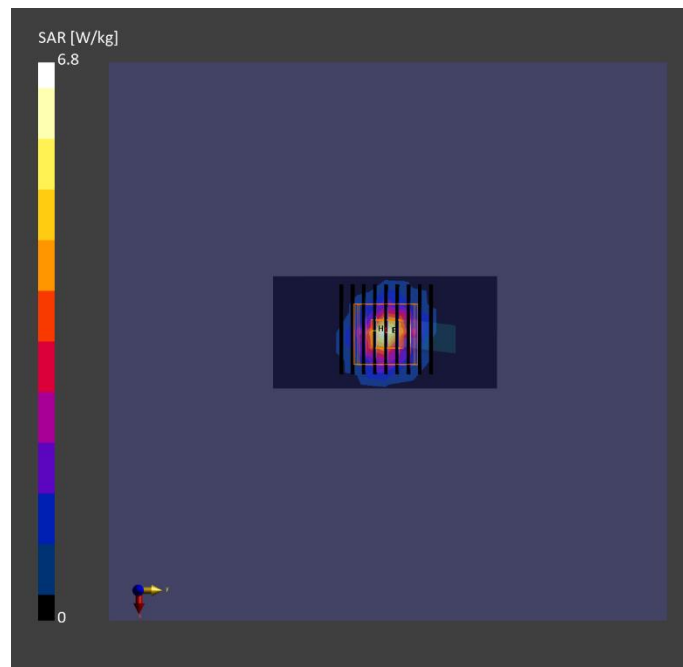

Test Date : 2025-06-12 | Ambient Temp : 21.9 °C | Tissue Temp : 21.7 °C

System Performance Check**System Performance Check at 5800 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D5GHzV2	1358	17.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	5800.000	5.18	4.82	34.1

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	40.0 x 80.0	22.0 x 22.0 x 22.0
Grid Steps [mm]	10.0 x 10.0	4.0 x 4.0 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.4

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	3.68	3.94
psSAR-10g [W/kg]	1.03	1.11
Power Drift [dB]		-0.01
TSL Correction	Positive only	Positive only

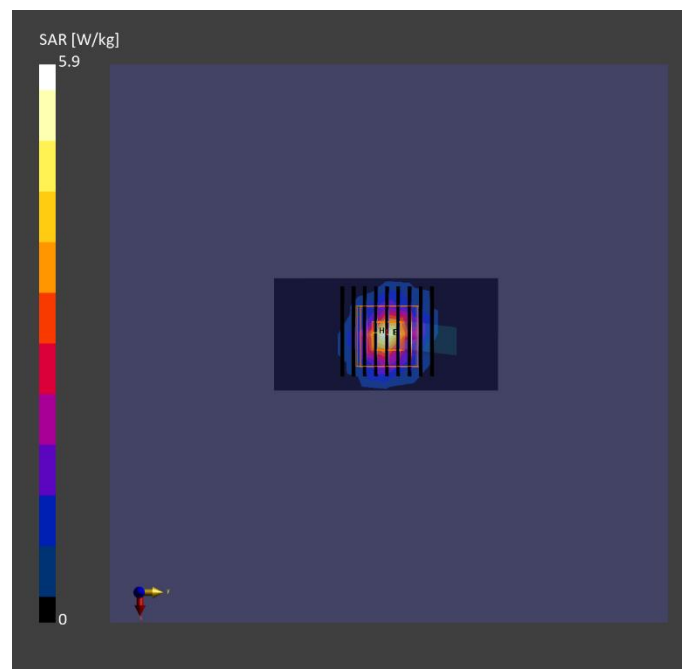

Test Date : 2025-06-12 | Ambient Temp : 21.9 °C | Tissue Temp : 21.7 °C

System Performance Check**System Performance Check at 6500 MHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.	Input Power [dBm]
SPEAG	D6.5GHzV2	1081	20.0

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor	TSL Conductivity [S/m]	TSL Permittivity
Flat	CW	6500.000	5.57	5.57	33.1

Hardware Setup


Phantom	Tissue Simulating Liquid	Probe Calibration Date	DAE Calibration Date
ELI V8.0 (20deg probe tilt) - 2180	HBBL-600-10000	EX3DV4 - SN7650 / 2025-06-10	DAE4 Sn1669 / 2025-05-19
Measurement Software Version		16.4.0.5005	

Scan Setup

	Area Scan	Zoom Scan
Grid Extents [mm]	51.0 x 85.0	22.0 x 22.0 x 22.0
Grid Steps [mm]	8.5 x 8.5	3.4 x 3.4 x 1.4
Sensor Surface [mm]	3.0	1.4
Graded Grid	N/A	Yes
Grading Ratio	N/A	1.4

Measurement Results

	Area Scan	Zoom Scan
psSAR-1g [W/kg]	23.7	29.5
psSAR-8g [W/kg]	5.97	6.62
psSAR-10g [W/kg]	4.95	5.47
psAPD (1.0 cm ² , sq) [W/m ²]		295
psAPD (4.0 cm ² , sq) [W/m ²]		135
Power Drift [dB]		0.04
TSL Correction	Positive only	Positive only

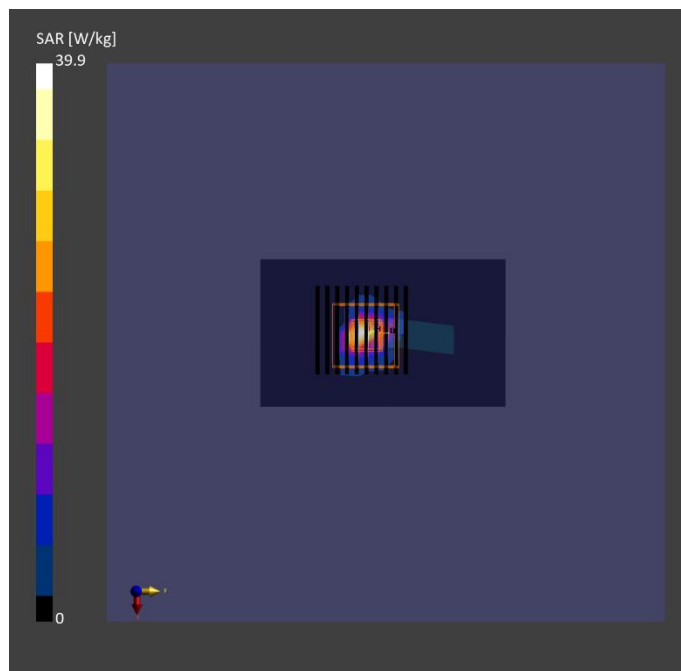

Test Date : 2025-06-18 | Ambient Temp : 22.6 °C

System Performance Check**System Performance Check at 10GHz****Verification Source Properties**

Manufacturer	Model No.	Serial No.
SPEAG	H10GVx	1060

Exposure Conditions

Phantom Section	Group	Frequency [MHz]	Conversion Factor
5G	CW	10000.0	1.0

Hardware Setup

Phantom	Medium	Probe / Calibration Date	DAE / Calibration Date
mmWave - 1102	Air	EUmmWV4 - SN9639_F1- 55GHz / 2024-09-16	DAE4 Sn1742 / 2024-08-15
Measurement Software Version		3.2.2.2358	

Scan Setup

	5G Scan
Grid Extents [mm]	60.0 x 60.0
Grid Steps [mm]	0.125 x 0.125
Sensor Surface [mm]	10.0

Measurement Results

	5G Scan
Avg. Area [cm ²]	4.00
psPD n+ [W/m ²]	54.2
psPD tot+ [W/m ²]	54.6
psPD mod+ [W/m ²]	55.1
E max [V/m]	159
Power Drift [dB]	0.01

