

SAR EVALUATION REPORT


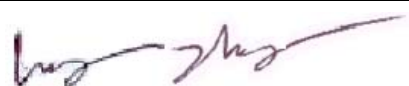
For

HUNETEC CO., LTD

10 Fl, Hungkook Bldg, 6-7 Sunae-Dong, Bundang-Ku
Kyunggi-Do, South KOREA 463-020

FCC ID: RNGH200RFX

2003-11-20

This Report Concerns: <input checked="" type="checkbox"/> Original Report	Equipment Type: Two Way Personal Communicator
Test Engineer: Eric Hong	
Report No.: R0310093S	
Test Date: 2003-11-08	
Reviewed By: Ling Zhang	
Prepared By: Bay Area Compliance Laboratory Corporation 230 Commercial Street Sunnyvale, CA 94085 Tel: (408) 732-9162 Fax: (408) 732 9164	

Note: This test report is specially limited to the above client company and the product model only. It may not be duplicated without prior written consent of Bay Area Compliance Laboratory Corporation. This report **must not** be used by the client to claim product endorsement by NVLAP or any agency of the U.S. Government.

TABLE OF CONTENTS

SUMMARY.....	3
1 - REFERENCE	5
2 - TESTING EQUIPMENT.....	6
2.1 EQUIPMENT LIST & CALIBRATION INFO	6
2.2 EQUIPMENT CALIBRATION CERTIFICATE	6
3 - EUT DESCRIPTION	18
4 - SYSTEM TEST CONFIGURATION.....	19
4.1 JUSTIFICATION	19
4.2 EUT EXERCISE PROCEDURE	19
4.3 SPECIAL ACCESSORIES	19
4.4 EQUIPMENT MODIFICATIONS	19
5 - CONDUCTED OUTPUT POWER MEASUREMENT	20
5.1 MEASUREMENT PROCEDURE.....	20
5.2 TEST RESULTS	20
6 - DOSIMETRIC ASSESSMENT SETUP.....	22
6.1 MEASUREMENT SYSTEM DIAGRAM	23
6.2 SYSTEM COMPONENTS.....	24
6.3 MEASUREMENT UNCERTAINTY	28
7 - SYSTEM EVALUATION	29
7.1 SIMULATED TISSUE LIQUID PARAMETER CONFIRMATION	29
7.2 EVALUATION PROCEDURES.....	29
7.3 SYSTEM ACCURACY VERIFICATION	30
7.4 SAR EVALUATION PROCEDURE.....	34
7.5 EXPOSURE LIMITS.....	35
8 - TEST RESULTS	36
8.1 SAR TEST DATA.....	36
8.2 PLOTS OF TEST RESULT	36
EXHIBIT A - SAR SETUP PHOTOGRAPHS	40
FACE IN TOUCH WITH PHANTOM.....	40
BACK IN TOUCH WITH PHANTOM.....	40
PERPENDICULAR TO PHANTOM	41
EXHIBIT B - EUT PHOTOGRAPHS.....	42
CHASSIS - FRONT VIEW	42
CHASSIS – REAR VIEW.....	42
CHASSIS – COVER OFF VIEW	43
EUT – COMPONENT VIEW	43
EUT – SOLDER VIEW	44
EUT – PORT VIEW.....	44
POWER ADAPTER VIEW	45
EXHIBIT C – Z-AXIS.....	46

SUMMARY

The US Federal Communications Commission has released the report and order "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996 [1].

The order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g as recommended by the ANSI/IEEE standard C95.1-1992 [6] for an uncontrolled environment (Paragraph 65). According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guide-lines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.

This report describes the methodology and results of experiments performed on wireless data terminal. The objective was to determine if there is RF radiation and if radiation is found, what is the extent of radiation with respect to safety limits. SAR (Specific Absorption Rate) is the measure of RF exposure determined by the amount of RF energy absorbed by human body (or its parts) – to determine how the RF energy couples to the body or head which is a primary health concern for body worn devices. The limit below which the exposure to RF is considered safe by regulatory bodies in North America is 1.6 mW/g average over 1 gram of tissue mass.

The test configurations were laid out on a specially designed test fixture to ensure the reproducibility of measurements. Each configuration was scanned for SAR. Analysis of each scan was carried out to characterize the above effects in the device.

The investigation was limited to the worst-case scenario from the device usage point of view. For the clarity of data analysis, and clarity of presentation, only one tissue simulation was used for the head and body simulation. This means that if SAR was found at the headset position, the magnitude of SAR would be overestimated comparing to SAR to a headset placed in the ear region.

There was no SAR of any concern measured on the device for any of the investigated configurations, please see following table for testing result summary:

Ambient Temperature (°C): 23.0

Relative Humidity (%): 51.1

Worst case SAR reading

EUT position	Frequency (MHz)	Conducted Power (W)	Test Type	Antenna Type	Liquid	Phantom	Notes / Accessories	Measured (mW/g)	Limit (mW/g)	Plot #
Face in touch with phantom	900	0.383	Body worn	Built-in	body	flat	None	0.182	1.6	1
back in touch with phantom	901	0.383	Body worn	Built-in	body	flat	None	0.782	1.6	2
Perpendicular to phantom	900	0.383	Body worn	Built-in	body	flat	None	0.689	1.6	3

1 - REFERENCE

- [1] Federal Communications Commission, \Report and order: Guidelines for evaluating the environmental effects of radiofrequency radiation", Tech. Rep. FCC 96-326, FCC, Washington, D.C. 20554, 1996.
- [2] David L. Means Kwok Chan, Robert F. Cleveland, \Evaluating compliance with FCC guidelines for human exposure to radiofrequency electromagnetic fields", Tech. Rep., Federal Communication Commission, Office of Engineering & Technology, Washington, DC, 1997.
- [3] Thomas Schmid, Oliver Egger, and Niels Kuster, \Automated E-field scanning system for dosimetric assessments", IEEE Transactions on Microwave Theory and Techniques, vol. 44, pp. 105{113, Jan. 1996.
- [4] Niels Kuster, Ralph Kastle, and Thomas Schmid, \Dosimetric evaluation of mobile communications equipment with known precision", IEEE Transactions on Communications, vol. E80-B, no. 5, pp. 645{652, May 1997.
- [5] CENELEC, \Considerations for evaluating of human exposure to electromagnetic fields (EMFs) from mobile telecommunication equipment (MTE) in the frequency range 30MHz - 6GHz", Tech. Rep., CENELEC, European Committee for Electrotechnical Standardization, Brussels, 1997.
- [6] ANSI, ANSI/IEEE C95.1-1992: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz, The Institute of Electrical and Electronics Engineers, Inc., New York, NY 10017, 1992.
- [7] Katja Pokovic, Thomas Schmid, and Niels Kuster, \Robust setup for precise calibration of E-field probes in tissue simulating liquids at mobile communications frequencies", in ICECOM _ 97, Dubrovnik, October 15{17, 1997, pp. 120-24.
- [8] Katja Pokovic, Thomas Schmid, and Niels Kuster, \E-field probe with improved isotropy in brain simulating liquids", in Proceedings of the ELMAR, Zadar, Croatia, 23{25 June, 1996, pp. 172-175.
- [9] Volker Hombach, Klaus Meier, Michael Burkhardt, Eberhard Kuhn, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 900 MHz", IEEE Transactions on Microwave Theory and Techniques, vol. 44, no. 10, pp. 1865-1873, Oct. 1996.
- [10] Klaus Meier, Ralf Kastle, Volker Hombach, Roger Tay, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 1800 MHz", IEEE Transactions on Microwave Theory and Techniques, Oct. 1997, in press.
- [11] W. Gander, Computermathematik, Birkhaeuser, Basel, 1992.
- [12] W. H. Press, S. A. Teukolsky, W. T. Vetterling, and B. P. Flannery, Numerical Recipes in C, The Art of Scientific Computing, Second Edition, Cambridge University Press, 1992. Dosimetric Evaluation of Sample device, month 1998 9
- [13] NIS81 NAMAS, \The treatment of uncertainty in EMC measurement", Tech. Rep., NAMAS Executive, National Physical Laboratory, Teddington, Middlesex, England, 1994.
- [14] Barry N. Taylor and Christ E. Kuyatt, \Guidelines for evaluating and expressing the uncertainty of NIST measurement results", Tech. Rep., National Institute of Standards and Technology, 1994. Dosimetric Evaluation of Sample device, month 1998 10

2 - TESTING EQUIPMENT

2.1 Equipment List & Calibration Info

Type / Model	Cal. Date	S/N:
DASY3 Professional Dosimetric System	N/A	N/A
Robot RX60L	N/A	F00/5H31A1/A/01
Robot Controller	N/A	F01/5J72A1/A/01
Dell Computer Optiplex GX110	N/A	N/A
Pentium III, Windows NT	N/A	N/A
SPEAG EDC3	N/A	N/A
SPEAG DAE3	6/02	456
SPEAG E-Field Probe ET3DV6	9/7/02	1604
SPEAG Dummy Probe	N/A	N/A
SPEAG Generic Twin Phantom	N/A	N/A
SPEAG Light Alignment Sensor	N/A	278
Apprel Validation Dipole D-1800-S-2	11/6/01	BCL-049
SPEAG Validation Dipole D900V2	9/3/02	122
Brain Equivalent Matter (800MHz)	Daily	N/A
Brain Equivalent Matter (1900MHz)	Daily	N/A
Brain Equivalent Matter (2450MHz)	Daily	N/A
Muscle Equivalent Matter (800MHz)	Daily	N/A
Muscle Equivalent Matter (1900MHz)	Daily	N/A
Muscle Equivalent Matter (2450MHz)	Daily	N/A
Robot Table	N/A	N/A
Phone Holder	N/A	N/A
Phantom Cover	N/A	N/A
HP Spectrum Analyzer HP8593GM	6/20/02	3009A00791
Microwave Amp. 8349B	N/A	2644A02662
Power Meter HP436A	4/2/02	2709A29209
Power Sensor HP8482A	4/2/02	2349A08568
Signal Generator RS SMIQ O3	2/10/02	1084800403
Network Analyzer HP-8753ES	7/30/02	820079
Dielectric Probe Kit HP85070A	N/A	N/A
Apprel Validation Dipole D-2450-S-1	10/1/02	BCL-141
Dipole Antenna AD-100 (450MHz)	5/7/02	02220

2.2 Equipment Calibration Certificate

Please see the attached file.

Calibration Laboratory of
Schmid & Partner
Engineering AG
 Zeughausstrasse 43, 8004 Zurich, Switzerland

Client Bay Area Comp. Lab (BACL)

CALIBRATION CERTIFICATE

Object(s) E33DV2 - SN:3019

Calibration procedure(s) QA CAL-01.v2
 Calibration procedure for dosimetric E-field probes

Calibration date: October 9, 2003

Condition of the calibrated item In Tolerance (according to the specific calibration document)

This calibration statement documents traceability of M&TE used in the calibration procedures and conformity of the procedures with the ISO/IEC 17025 international standard.

All calibrations have been conducted in the closed laboratory facility: environment temperature 22 +/- 2 degrees Celsius and humidity < 75%.

Calibration Equipment used (M&TE critical for calibration)

Model Type	ID #	Cal Date (Calibrated by, Certificate No.)	Scheduled Calibration
Power meter EPM E4419B	GB41293874	2-Apr-03 (METAS, No 252-0250)	Apr-04
Power sensor E4412A	MY41495277	2-Apr-03 (METAS, No 252-0250)	Apr-04
Reference 20 dB Attenuator	SN: 5066 (20b)	3-Apr-03 (METAS No. 251-0340)	Apr-04
Fluke Process Calibrator Type 702	SN: 6295803	8-Sep-03 (Sintrel SCS No. E-030020)	Sep-04
Power sensor HP 8461A	MY41092180	18-Sep-02 (Agilent, No. 20020918)	In house check: Oct 03
RF generator HP 8684C	US3642U01700	4-Aug-99 (SPEAG, in house check Aug-02)	In house check: Aug-05
Network Analyzer HP 8753E	US37390585	18-Oct-01 (Agilent, No. 24BR1033101)	In house check: Oct 03

Calibrated by: Name Nico Vetter Function Technician Signature 

Approved by: Name Katja Rokova Function Laboratory Director Signature 

Date issued: October 9, 2003

This calibration certificate is issued as an intermediate solution until the accreditation process (based on ISO/IEC 17025 International Standard) for Calibration Laboratory of Schmid & Partner Engineering AG is completed.

880-KP0301061-A

Page 1 (1)

Leugnausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, <http://www.speag.com>

Probe ES3DV2

SN:3019

Additional Conversion Factors

Manufactured:	December 5, 2002
Last calibration:	July 12, 2003
Add. calibration:	October 9, 2003

Calibrated for DASY Systems

(Note: non-compatible with DASY2 system!)

DASY - Parameters of Probe: ES3DV2 SN:3019**Sensitivity in Free Space**

NormX	1.05 $\mu\text{V}/(\text{V}/\text{m})^2$
NormY	1.14 $\mu\text{V}/(\text{V}/\text{m})^2$
NormZ	0.98 $\mu\text{V}/(\text{V}/\text{m})^2$


Diode Compression

DCP X	99
DCP Y	99
DCP Z	99

Sensor Offset

Probe Tip to Sensor Center	2.1	mm
----------------------------	------------	-----------

Conversion Factor Assessment

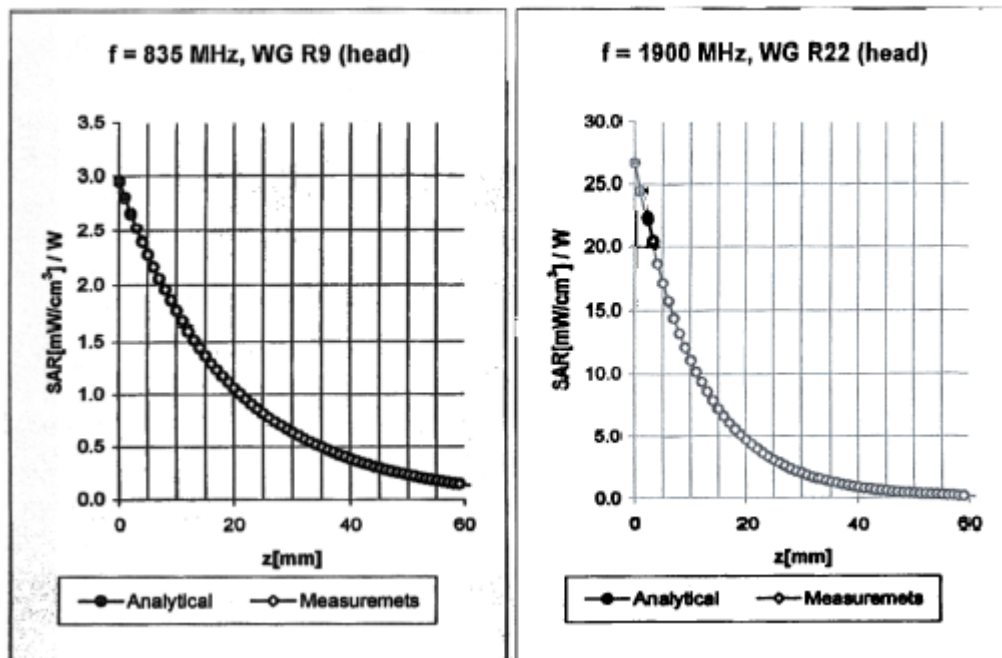

Head **835 MHz** $\epsilon_r = 41.5 \pm 5\%$ $\sigma = 0.90 \pm 5\%$ mho/m

Valid for f=793-877 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X


ConvF X	6.5 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	6.5 $\pm 9.5\%$ (k=2)	Alpha	0.35
ConvF Z	6.5 $\pm 9.5\%$ (k=2)	Depth	1.46

Head **1900 MHz** $\epsilon_r = 40.0 \pm 5\%$ $\sigma = 1.40 \pm 5\%$ mho/m

Valid for f=1805-1995 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	4.7 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	4.7 $\pm 9.5\%$ (k=2)	Alpha	0.22
ConvF Z	4.7 $\pm 9.5\%$ (k=2)	Depth	3.48

Conversion Factor Assessment

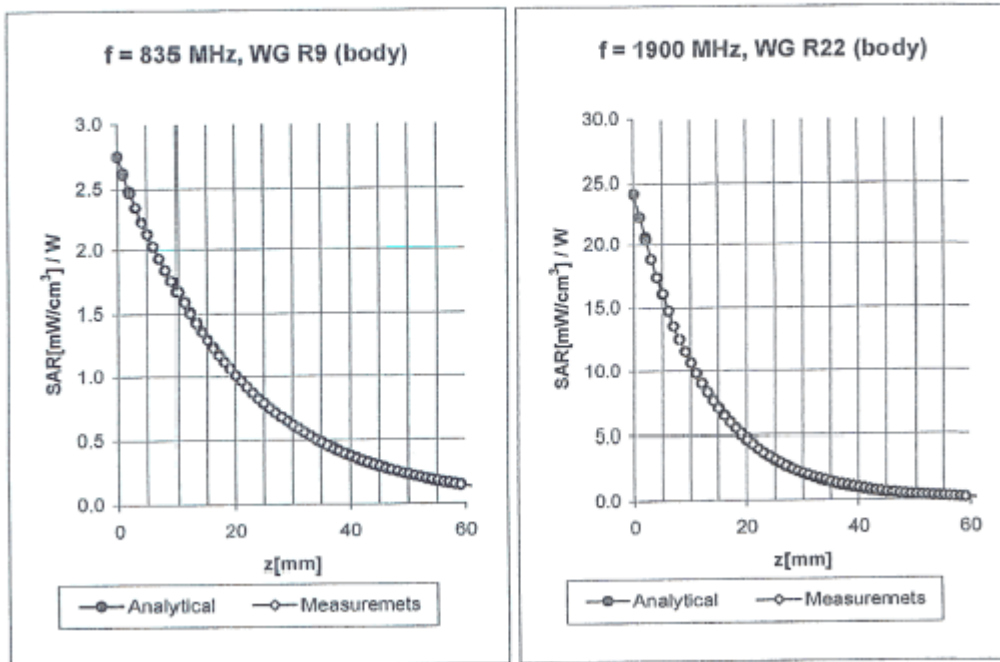

Body **835 MHz** $\epsilon_r = 55.2 \pm 5\%$ $\sigma = 0.97 \pm 5\% \text{ mho/m}$

Valid for $f=793\text{-}877 \text{ MHz}$ with Body Tissue Simulating Liquid according to OET 65 Suppl. C


ConvF X	6.1 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	6.1 $\pm 9.5\%$ (k=2)	Alpha 0.24
ConvF Z	6.1 $\pm 9.5\%$ (k=2)	Depth 2.00

Body **1900 MHz** $\epsilon_r = 53.3 \pm 5\%$ $\sigma = 1.52 \pm 5\% \text{ mho/m}$

Valid for $f=1805\text{-}1995 \text{ MHz}$ with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.6 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	4.6 $\pm 9.5\%$ (k=2)	Alpha 0.24
ConvF Z	4.6 $\pm 9.5\%$ (k=2)	Depth 2.64

Conversion Factor Assessment

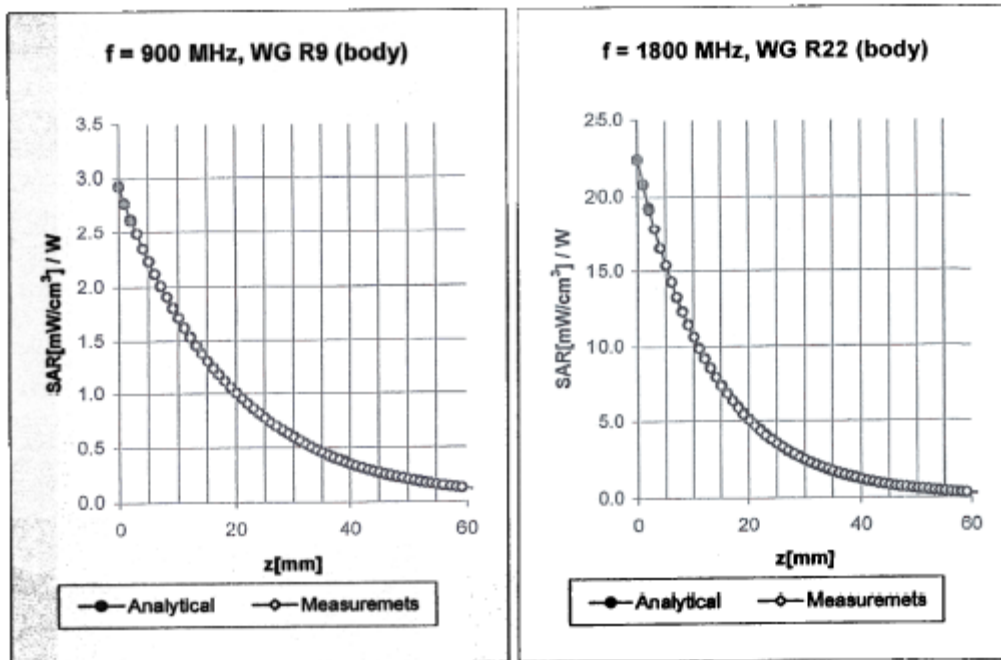

Body 900 MHz $\epsilon_r = 55.0 \pm 5\%$ $\sigma = 1.05 \pm 5\%$ mho/m

Valid for f=855-945 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C


ConvF X	6.1 \pm 9.5% (k=2)	Boundary effect:
ConvF Y	6.1 \pm 9.5% (k=2)	Alpha 0.27
ConvF Z	6.1 \pm 9.5% (k=2)	Depth 1.82

Body 1800 MHz $\epsilon_r = 53.3 \pm 5\%$ $\sigma = 1.52 \pm 5\%$ mho/m

Valid for f=1710-1890 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.7 \pm 9.5% (k=2)	Boundary effect:
ConvF Y	4.7 \pm 9.5% (k=2)	Alpha 0.23
ConvF Z	4.7 \pm 9.5% (k=2)	Depth 2.99

Conversion Factor Assessment

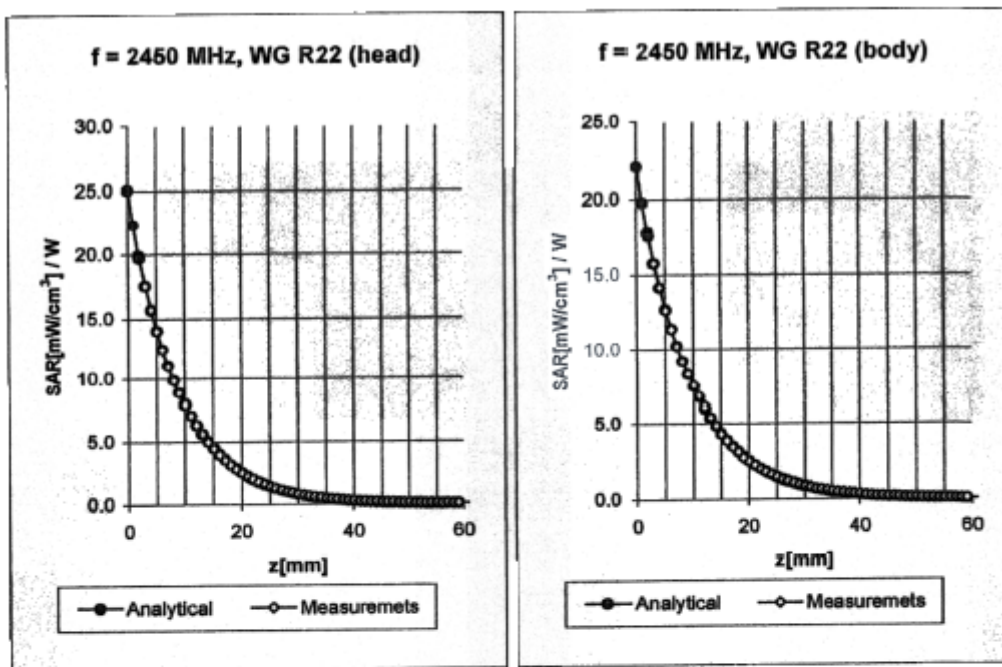

Head **2450 MHz** $\epsilon_r = 39.2 \pm 5\%$ $\sigma = 1.80 \pm 5\%$ mho/m

Valid for f=2400-2500 MHz with Head Tissue Simulating Liquid according to EN 60381, P1528-200X

ConvF X	4.5 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	4.5 $\pm 9.5\%$ (k=2)	Alpha 0.40
ConvF Z	4.5 $\pm 9.5\%$ (k=2)	Depth 1.62

Body **2450 MHz** $\epsilon_r = 52.7 \pm 5\%$ $\sigma = 1.95 \pm 5\%$ mho/m

Valid for f=2400-2500 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.2 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	4.2 $\pm 9.5\%$ (k=2)	Alpha 0.32
ConvF Z	4.2 $\pm 9.5\%$ (k=2)	Depth 1.98

Zeughausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, http://www.speag.com

Additional Conversion Factors

for Dosimetric E-Field Probe

Type:

ES3DV2

Serial Number:

3019

Place of Assessment:

Zurich

Date of Assessment:

October 13, 2003

Probe Calibration Date:

October 9, 2003

Schmid & Partner Engineering AG hereby certifies that conversion factor(s) of this probe have been evaluated on the date indicated above. The assessment was performed using the FDTD numerical code SEMCAD of Schmid & Partner Engineering AG. Since the evaluation is coupled with measured conversion factors, it has to be recalculated yearly, i.e., following the re-calibration schedule of the probe. The uncertainty of the numerical assessment is based on the extrapolation from measured value at 900 MHz or at 1800 MHz.

Assessed by:



ES3DV2-SN:3019

October 13, 2003

Zeughausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, http://www.speag.com

Dosimetric E-Field Probe ES3DV2 SN:3019

Conversion factor (\pm standard deviation)

150 MHz	ConvF	8.7 \pm 8 %	$\epsilon_r = 52.3 \pm 5\%$ $\sigma = 0.76 \pm 5\%$ mho/m (head tissue)
150 MHz	ConvF	8.3 \pm 8 %	$\epsilon_r = 61.9 \pm 5\%$ $\sigma = 0.80 \pm 5\%$ mho/m (body tissue)
450 MHz	ConvF	7.4 \pm 8 %	$\epsilon_r = 43.5 \pm 5\%$ $\sigma = 0.87 \pm 5\%$ mho/m (head tissue)
450 MHz	ConvF	7.3 \pm 8 %	$\epsilon_r = 56.7 \pm 5\%$ $\sigma = 0.94 \pm 5\%$ mho/m (body tissue)

ES3DV2-SN:3019

October 13, 2003

Body 900MHz Liquid Validation, 11/08/03

850000000.0000	56.0847	21.4311
852000000.0000	56.0462	21.3971
854000000.0000	56.0489	21.4054
856000000.0000	55.8592	21.5045
858000000.0000	55.7624	21.5233
860000000.0000	55.6551	21.5254
862000000.0000	55.5732	21.5585
864000000.0000	55.5379	21.5633
866000000.0000	55.5692	21.5814
868000000.0000	55.5966	21.5981
870000000.0000	55.6135	21.5928
872000000.0000	55.5987	21.4509
874000000.0000	55.6441	21.4333
876000000.0000	55.6652	21.4011
878000000.0000	55.6868	21.4902
880000000.0000	55.6578	21.4645
882000000.0000	55.6286	21.4394
884000000.0000	55.6137	21.4003
886000000.0000	55.6237	21.4504
888000000.0000	55.5977	21.3958
890000000.0000	55.6227	21.3707
892000000.0000	55.6167	21.3715
894000000.0000	55.6147	21.4853
896000000.0000	55.5967	21.4781
898000000.0000	55.5997	21.4652
900000000.0000	55.5736	21.5065
902000000.0000	55.5625	21.4561
904000000.0000	55.5891	21.4183
906000000.0000	55.6121	21.4737
908000000.0000	55.5661	21.3928
910000000.0000	55.5716	21.3412
912000000.0000	55.5722	21.3461
914000000.0000	55.5238	21.3026
916000000.0000	55.5342	21.3065
918000000.0000	55.5510	21.2963
920000000.0000	55.5299	21.2509
922000000.0000	55.5461	21.2354
924000000.0000	55.5290	21.1552
926000000.0000	55.5513	21.1781
928000000.0000	55.5479	21.1546
930000000.0000	55.5468	21.1334
932000000.0000	55.5744	21.1422
934000000.0000	55.5698	21.0966
936000000.0000	55.6109	21.0877
938000000.0000	55.6810	21.0348
940000000.0000	55.5374	21.0845
942000000.0000	55.5534	21.0262
944000000.0000	55.5523	21.0701
946000000.0000	55.5620	21.0063
948000000.0000	55.5381	21.0848
950000000.0000	55.5500	21.0404

$$\sigma = \omega \epsilon_0 \epsilon'' = 2 \pi f \epsilon_0 \epsilon'' = 1.07$$

where $f = 900$
 $\epsilon_0 = 8.854 \times 10^{-12}$
 $\epsilon'' = 21.5065$

Head 900MHz Liquid Validation, 11/08/03

frequency	e'	e''	
850000000.0000	41.4328	18.9575	
852000000.0000	41.4111	18.9465	
854000000.0000	41.4478	18.9658	
856000000.0000	41.4884	18.9133	
858000000.0000	41.5253	18.9241	
860000000.0000	41.5292	18.9052	
862000000.0000	41.5595	18.9025	
864000000.0000	41.5039	18.9185	
866000000.0000	41.5917	18.8936	
868000000.0000	41.5805	18.8733	
870000000.0000	42.0024	18.8575	
872000000.0000	42.0162	18.9163	
874000000.0000	41.5433	18.8530	
876000000.0000	41.5839	18.8084	
878000000.0000	41.5367	18.8475	
880000000.0000	41.5379	18.8079	
882000000.0000	41.5053	18.7935	
884000000.0000	41.5101	18.7854	
886000000.0000	41.5273	18.7887	
888000000.0000	41.4776	18.7780	
890000000.0000	41.4471	18.7475	
892000000.0000	41.3654	18.7089	
894000000.0000	41.2509	18.6432	
896000000.0000	41.0967	18.5861	
898000000.0000	41.1698	18.5751	
900000000.0000	41.1263	18.5870	
902000000.0000	41.0573	18.6284	
904000000.0000	41.0721	18.6040	
906000000.0000	40.8572	18.4979	
908000000.0000	40.9484	18.5080	
910000000.0000	40.9618	18.5213	
912000000.0000	40.9976	18.4737	
914000000.0000	40.8843	18.4785	
916000000.0000	40.8952	18.4656	
918000000.0000	40.8057	18.4065	
920000000.0000	40.8619	18.3844	
922000000.0000	41.7954	18.2972	
924000000.0000	40.9753	18.4173	
926000000.0000	40.9621	18.4019	
928000000.0000	40.9652	18.5091	
930000000.0000	40.9617	18.4612	
932000000.0000	40.8938	18.4867	
934000000.0000	40.8657	18.4924	
936000000.0000	40.8193	18.5153	
938000000.0000	40.7669	18.4875	
940000000.0000	40.6875	18.5089	
942000000.0000	40.7077	18.5037	
944000000.0000	40.7403	18.5112	
946000000.0000	40.7181	18.5034	
948000000.0000	40.6392	18.5320	
950000000.0000	40.6578	18.5160	

$$\sigma = \omega \epsilon_0 \epsilon'' = 2 \pi f \epsilon_0 \epsilon'' = 0.93$$

where $f = 900$

$$\epsilon_0 = 8.854 \times 10^{-12}$$

$$\epsilon'' = 18.5870$$

3 - EUT DESCRIPTION

Serial Number:	0003
Applicant:	HUNETEC CO., LTD
Product Description:	Two-way Personal Communicator
FCC ID:	RNGH200RFX
Transmitter Frequency:	896 – 902 MHz
Maximum Output Power:	0.369W
Dimension:	4.20”L x 2.75”W x 0.60”H approximately
RF Exposure environment:	Population / Uncontrolled
Applicable Standard	FCC CFR 47, Part 24 & 90
Application Type:	Certification

¹Specific Absorption Rate (SAR) is a measure of the rate of energy absorption due to exposure to an RF transmitting source (wireless portable device).

²IEEE/ANSI Std. C95.1-1992 limits are used to determine compliance with FCC ET Docket 93-62.

Note: The test data was good for test sample only. It may have deviation for other test samples.

4 - SYSTEM TEST CONFIGURATION

4.1 Justification

The system was configured for testing in a typical fashion (as normally used by a typical user).

4.2 EUT Exercise Procedure

The EUT exercising program used during SAR testing was designed to exercise the various system components in a manner similar to a typical use. The EUT was tested by pushing the PTT bottom during the testing.

4.3 Special Accessories

All interface cables used for compliance testing are shielded as normally supplied by INMAC, Monster Cable and their respective support equipment manufacturer. The EUT is featured shielded metal connectors.


4.4 Equipment Modifications

No modification(s) were made to ensure that the EUT complies with the applicable limits.

5 - CONDUCTED OUTPUT POWER MEASUREMENT

5.1 Measurement Procedure




1. Place the EUT on a bench and set it in transmitting mode.
2. Remove the antenna from the EUT and then connect a low loss RF cable from the antenna port to a spectrum analyzer.
3. Add a correction factor to the display.



5.2 Test Results

Channel	Output Power in dBm	Output Power in W
895.97	25.67	0.369
900.95	25.83	0.383
901.92	25.67	0.369

Note: The power output may depend on the intended use of the EUT. For all tests, the EUT was set to maximum conditions.

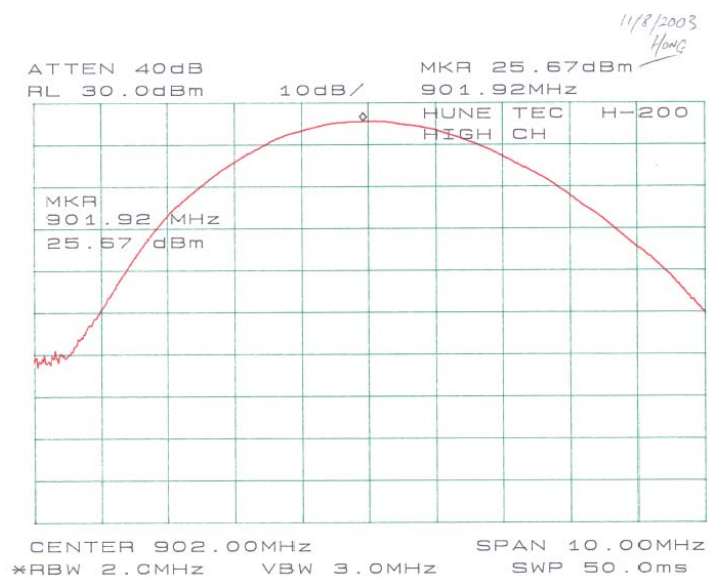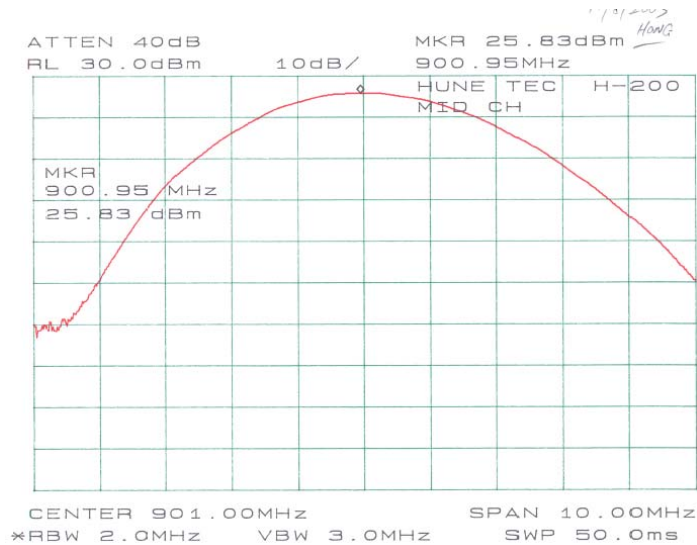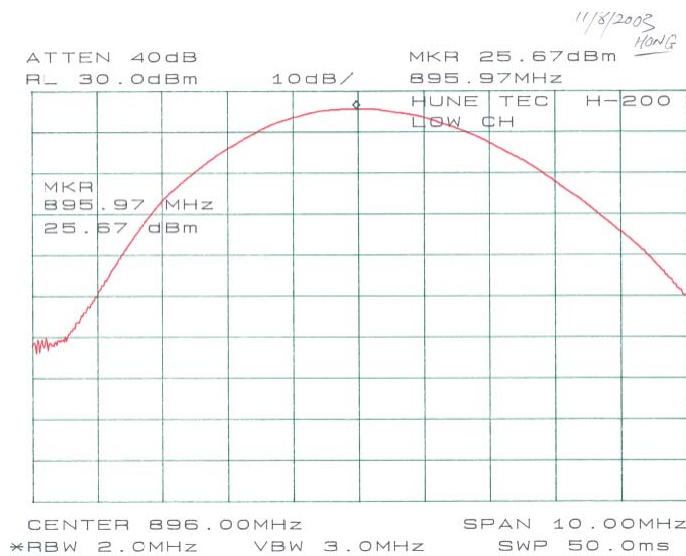

6 - DOSIMETRIC ASSESSMENT SETUP


These measurements were performed with the automated near-field scanning system DASY3 from Schmid & Partner Engineering AG (SPEAG). The system is based on a high precision robot (working range greater than 0.9m) which positions the probes with a positional repeatability of better than $\pm 0.02\text{mm}$. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The system is described in detail in [3].

The SAR measurements were conducted with the dosimetric probe ET3DV2 SN: 3019 (manufactured by SPEAG), designed in the classical triangular configuration [3] and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure described in [7] with accuracy of better than $\pm 10\%$. The spherical isotropy was evaluated with the procedure described in [8] and found to be better than $\pm 0.25\text{dB}$.

The phantom used was the "Generic Twin Phantom" described in [4]. The ear was simulated as a spacer of 4 mm thickness between the earpiece of the phone and the tissue simulating liquid. The Tissue simulation liquid used for each test is in according with the FCC OET65 supplement C as listed below.

Target Frequency (MHz)	Head		Body	
	ϵ_r	σ (S/m)	ϵ_r	σ (S/m)
150	52.3	0.76	61.9	0.80
300	45.3	0.87	58.2	0.92
450	43.5	0.87	56.7	0.94
835	41.5	0.90	55.2	0.97
900	41.5	0.97	55.0	1.05
915	41.5	0.98	55.0	1.06
1450	40.5	1.20	54.0	1.30
1610	40.3	1.29	53.8	1.40
1800 – 2000	40.0	1.40	53.3	1.52
2450	39.2	1.80	52.7	1.95
3000	38.5	2.40	52.0	2.73
5800	35.3	5.27	48.2	6.00

6.1 Measurement System Diagram

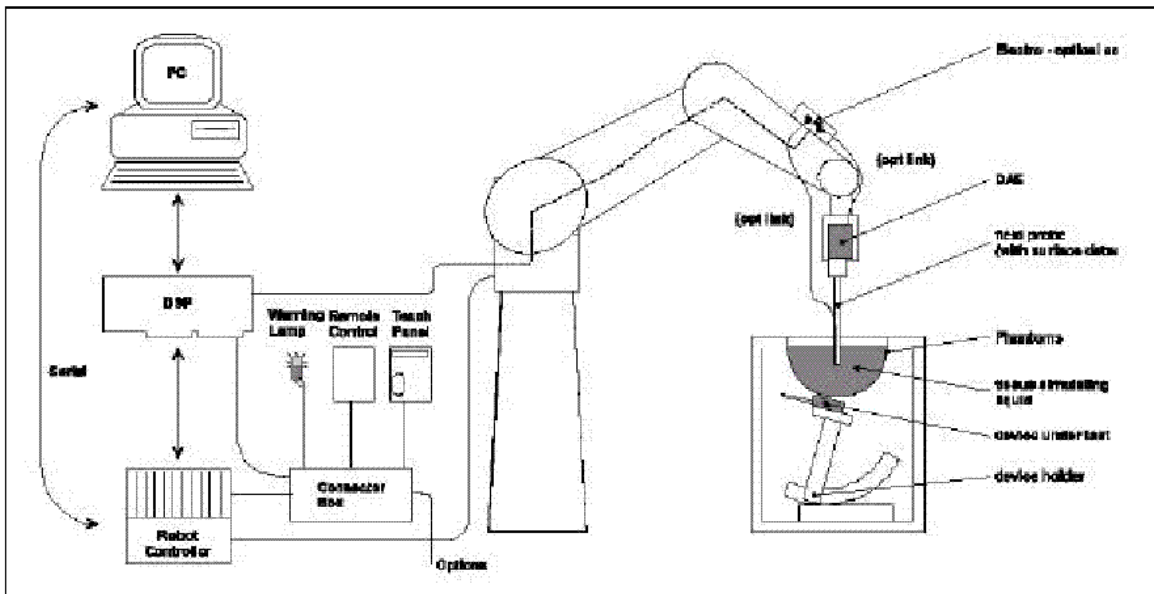

The DAS3 system for performing compliance tests consist of the following items:

1. A standard high precision 6-axis robot (Stäubli RX family) with controller and software.
2. An arm extension for accommodating the data acquisition electronics (DAE).
3. A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
4. A data acquisition electronic (DAE), which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
5. A unit to operate the optical surface detector, which is connected to the EOC. The Electro-optical coupler (EOC) performs the conversion from the optical into a digital electric signal of the DAE. The EOC is connected to the PC plug-in card. The functions of the PC plug-in card based on a DSP is to perform the time critical task such as signal filtering, surveillance of the robot operation fast movement interrupts.
6. A computer operating Windows 95 or larger
7. DAS3 software
8. Remote control with teaches pendant and additional circuitry for robot safety such as warning lamps, etc.
9. The generic twin phantom enabling testing left-hand and right-hand usage.
10. The device holder for handheld EUT.
11. Tissue simulating liquid mixed according to the given recipes (see Application Note).
12. System validation dipoles to validate the proper functioning of the system.

6.2 System Components

ET3DV6 Probe Specification

Construction Symmetrical design with triangular core

Built-in optical fiber for surface detection System

Built-in shielding against static charges

Calibration In air from 10 MHz to 2.5 GHz

In brain and muscle simulating tissue at

Frequencies of 450 MHz, 900 MHz and

1.8 GHz (accuracy $\pm 8\%$)

Frequency 10 MHz to > 6 GHz; Linearity: ± 0.2 dB

(30 MHz to 3 GHz)

Directivity ± 0.2 dB in brain tissue (rotation around probe axis)

± 0.4 dB in brain tissue (rotation normal probe axis)

Dynamic 5 mW/g to > 100 mW/g;

Range Linearity: ± 0.2 dB

Surface ± 0.2 mm repeatability in air and clear liquids

Detection over diffuse reflecting surfaces.

Dimensions Overall length: 330 mm

Tip length: 16 mm

Body diameter: 12 mm


Tip diameter: 6.8 mm

Distance from probe tip to dipole centers: 2.7 mm


Application General dosimetric up to 3 GHz

Compliance tests of mobile phones

Fast automatic scanning in arbitrary phantoms

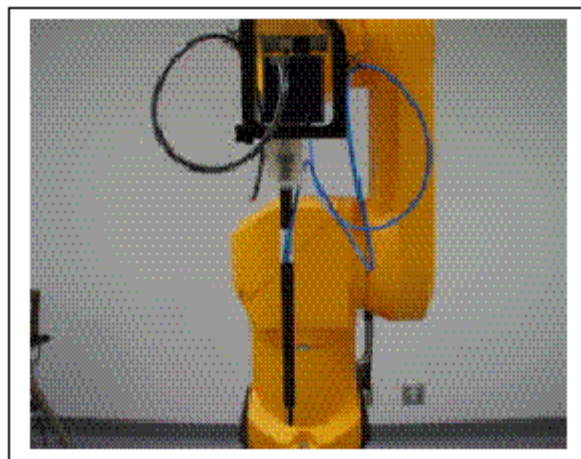

Photograph of the probe

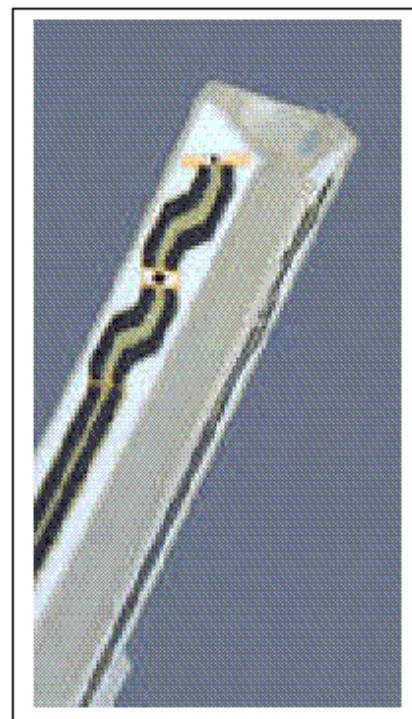

Inside view of
ET3DV6 E-field Probe

The SAR measurements were conducted with the dosimetric probe ET3DV6 designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multi-fiber line ending at the front of the probe tip. It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY3 software reads the reflection during a software approach and looks for the maximum using a 2nd order fitting. The approach is stopped when reaching the maximum.

E-Field Probe Calibration Process

Each probe is calibrated according to a dosimetric assessment procedure described in [6] with accuracy better than +/- 10%. The spherical isotropy was evaluated with the procedure described in [7] and found to be better than +/-0.25dB. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested.

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz, and in a waveguide above 1 GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity and at the proper orientation with the field. The probe is then rotated 360 degrees.

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe.

Data Evaluation

The DASY3 software automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe Parameter:	-Sensitivity	Norm _i , a _{i0} , a _{i1} , a _{i2}
	-Conversion Factor	ConvFi
	-Diode compression point	Dcp _i
Device parameter:	-Frequency	f
	-Crest Factor	cf
Media parameter:	-Conductivity	σ
	-Density	ρ

These parameters must be set correctly in the software. They can either be found in the component documents or be imported into the software from the configuration files issued for the DASY3 components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + (U_i)^2 \text{ cf} / \text{dcp}_i$$

With V_i = compensated signal of channel i (i=x, y, z)
 U_i = input signal of channel i (i=x, y, z)
 cf = crest factor of exciting field (DASY parameter)
 dcp_i = diode compression point (DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

$$\begin{aligned} \text{E-field probes:} \quad E_i &= \sqrt{\frac{V_i}{\text{Norm}_i \cdot \text{ConvF}}} \\ \text{H-field probes:} \quad H_i &= \sqrt{V_i} \cdot \frac{a_{i0} + a_{i1}f + a_{i2}f^2}{f} \end{aligned}$$

With V_i = compensated signal of channel i (i=x, y, z)
 Norm_i = sensor sensitivity of channel i (i=x, y, z)
 $\mu\text{V}/(\text{V/m})^2$ for E-field probes
 ConvF = sensitivity enhancement in solution
 a_{ij} = sensor sensitivity factors for H-field probes
 f = carrier frequency [GHz]
 E_i = electric field strength of channel i in V/m
 H_i = diode compression point (DASY parameter)

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{\text{tot}} = \text{Square Root} [(E_x)^2 + (E_y)^2 + (E_z)^2]$$

The primary field data are used to calculate the derived field units.

$$\text{SAR} = (E_{\text{tot}})^2 \cdot \sigma / (\rho \cdot 1000)$$

With SAR = local specific absorption rate in mW/g
 E_{tot} = total field strength in V/m
 σ = conductivity in [mho/m] or [Siemens/m]
 ρ = equivalent tissue density in g/cm^3

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{\text{pwe}} = (E_{\text{tot}})^2 / 3770 \text{ or } P_{\text{pwe}} = (H_{\text{tot}})^2 \cdot 37.7$$

With P_{pwe} = equivalent power density of a plane wave in mW/cm³
 E_{tot} = total electric field strength in V/m
 H_{tot} = total magnetic field strength in V/m


Generic Twin Phantom

The Generic Twin Phantom is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is based on data from an anatomical study designed to determine the maximum exposure in at least 90% of all users [9][10]. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allows the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot.

Shell Thickness 2 ± 0.1 mm

Filling Volume Approx. 20 liters

Dimensions 810 x 1000 x 500 mm (H x L x W)

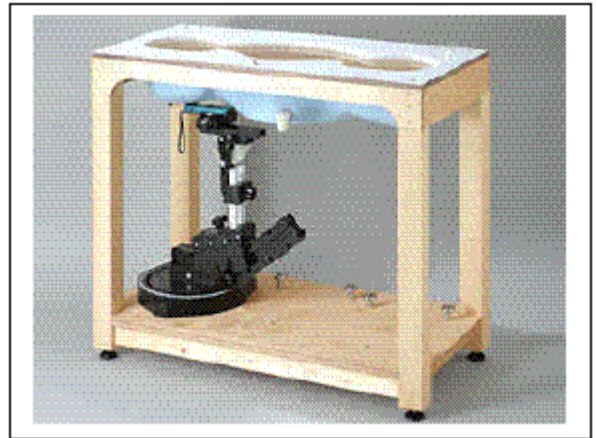


Generic Twin Phantom

Device Holder

In combination with the Generic Twin Phantom V3.0, the Mounting Device enables the rotation of the mounted transmitter in spherical coordinates whereby the rotation points is the ear opening. The devices can be easily, accurately, and repeatedly positioned according to the FCC and CENELEC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

* Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produced infinite number of configurations [10]. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.

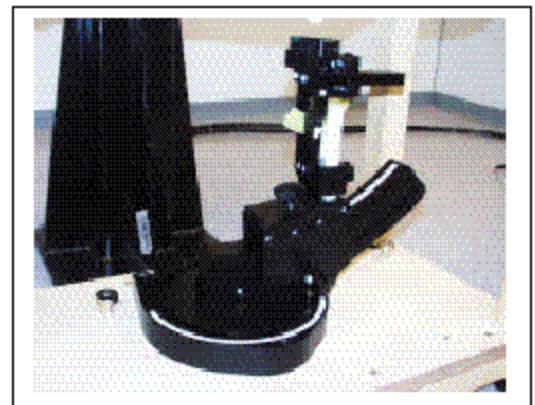

Device Holder

6.3 Measurement Uncertainty

The uncertainty budget has been determined for the DASY3 measurement system according to the NIS81 [13] and the NIST1297 [14] documents and is given in the following Table.

Measurement Uncertainty Analysis per IEEE P1528-2002								
Description	Section	Reported Variance (%)	Probability Distribution type	Divisor	Ci (1g)	Ui (1g)	Vi	welc/satt series term
Probe Calibration	E.2.1	4.80	N	1	1	4.80	1.00E+09	5.30842E-07
Axial isotropy	E.2.2	4.70	R	1.732	0.707107	1.92	1.00E+09	1.35563E-08
Hemispherical isotropy	E.2.2	9.60	R	1.732	0.707107	3.92	1.00E+09	2.35957E-07
Boundary effects	E.2.3	8.30	R	1.732	1	4.79	1.00E+09	5.27377E-07
Linearity	E.2.4	4.70	R	1.732	1	2.71	1.00E+09	5.4225E-08
System Detection Limit	E.2.5	1.00	R	1.732	1	0.58	1.00E+09	1.11124E-10
Readout Electronics	E.2.6	0.00	N	1	1	0.00	1.00E+09	0
Response time	E.2.7	0.00	R	1.732	1	0.00	1.00E+09	0
Integration time	E.2.8	0.00	R	1.732	1	0.00	1.00E+09	0
RF Ambient conditions	E.6.1	3.00	R	1.732	1	1.73	1.00E+09	9.00106E-09
Probe positioning mechanical tolerance	E.6.2	0.40	R	1.732	1	0.23	1.00E+09	2.84478E-12
Probe positioning wrt phantom shell	E.6.3	2.90	R	1.732	1	1.67	1.00E+09	7.8596E-09
Extra/inter-polation & integration algorithms for max SAR evaluation	E.5.2	3.90	R	1.732	1	2.25	1.00E+09	2.57079E-08
Test sample positioning	8, E.4.2	6.00	R	1.732	1	3.46	1.00E+09	1.44017E-07
Device holder distance tolerance	E.4.1	5.00	N	1	1	5.00	1.00E+09	0.000000625
Output power and SAR drift measurement	8, E.6.6.2	5.00	R	1.732	1	2.89	1.00E+09	6.94526E-08
Phantom uncertainty, shell thickness tolerance	E.3.1	4.00	R	1.732	1	2.31	1.00E+09	2.84478E-08
Liquid conductivity, deviation from target values	E.3.2	5.00	R	1.732	0.64	1.85	1.00E+09	1.16522E-08
Liquid conductivity, measurement uncertainty	E.3.3	5.00	N	1	0.64	3.20	5	20.97152
Liquid permittivity, deviation from target values	E.3.2	5.00	R	1.732	0.6	1.73	1.00E+09	9.00106E-09
Liquid permittivity, measurement uncertainty	E.3.3	5.00	N	1	0.6	3.00	5	16.2
								689
Probe isotropy sensitivity coefficient	0.5							
Combined Standard Uncertainty						12.65 %		
Expanded Uncertainty, 95% confidence		k=	2.004			25.34 %		

7 - SYSTEM EVALUATION

7.1 Simulated Tissue Liquid Parameter Confirmation

The dielectric parameters were checked prior to assessment using the HP85070A dielectric probe kit. The dielectric parameters measured are reported in each correspondent section:

7.2 Evaluation Procedures

Maximum Search

The maximum search is automatically performed after each coarse scan measurement. It is based on splines in two or three dimensions. The procedure can find the maximum for most SAR distributions even with relatively large grid spacings. After the coarse scan measurement, the probe is automatically moved to a position at the interpolated maximum. The following scan can directly use this position for reference, e.g., for a finer resolution grid or the cube evaluations.

Extrapolation

The extrapolation can be used in z-axis scans with automatic surface detection. The SAR values can be extrapolated to the inner phantom surface. The extrapolation distance is the sum of the probe sensor offset, the surface detection distance and the grid offset. The extrapolation is based on fourth order polynomial functions. The extrapolation is only available for SAR values.

Boundary Corrections

The correction of the probe boundary effect in the vicinity of the phantom surface can be done in two different ways. In the standard (worse case) evaluation, the boundary effect is reduced by different weights for the lowest measured points in the extrapolation routine. The result is a slight overestimation of the extrapolated SAR values (2% to 8%) depending on the SAR distribution and gradient. The advanced evaluation makes a full compensation of the boundary effect before doing the extrapolation. This is only possible of probes with specifications on the boundary effect.

Peak Search for 1g and 10g cube averaged SAR

The 1g and 10g peak evaluations are only available for the predefined cube 4x4x7 and cube 5x5x7 scans. The routine are verified and optimized for the grid dimensions used in these cube measurements. The measured volume of 32x32x35mm contains about 35g of tissue. The first procedure is an extrapolation (incl. Boundary correction) to get the points between the lowest measured plane and the surface. The next step uses 3D interpolation get all points within the measured volume in a 1mm grid (35000 points). In the last step, a 1g cube is place numerically into the volume and its averaged SAR is calculated. This cube is the moved around until the highest averaged SAR is found. This last procedure is repeated for a 10g cube. If the highest SAR is found at the edge of the measured volume, the system will issue a warning,; higher SAR values might be found outside of the measured volume. In that case the cube measurement can be repeated, using the new interpolated maximum as the center.

7.3 System Accuracy Verification

Prior to the assessment, the system validation kit was used to test whether the system was operating within its specifications of $\pm 10\%$. The validation results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.

IEEE P1528 recommended reference value

Frequency (MHz)	1 g SAR	10 g SAR	Local SAR at surface (above feed point)	Local SAR at surface (v=2cm offset from feed point)
300	3.0	2.0	4.4	2.1
450	4.9	3.3	7.2	3.2
835	9.5	6.2	14.1	4.9
900	10.8	6.9	16.4	5.4
1450	29.0	16.0	50.2	6.5
1800	38.1	19.8	69.5	6.8
1900	39.7	20.5	72.1	6.6
2000	41.1	21.1	74.6	6.5
2450	52.4	24.0	104.2	7.7
3000	63.8	25.7	140.2	9.5

Validation Dipole SAR Reference Test Result for Body (900 MHz)

Validation Measurement	SAR @ 0.025W Input averaged over 1g	SAR @ 1W Input averaged over 1g	SAR @ 0.025W Input averaged over 10g	SAR @ 1W Input averaged over 10g
Test 1	0.299	11.96	0.149	5.96
Test 2	0.296	11.84	0.148	5.92
Test 3	0.297	11.88	0.149	5.96
Test 4	0.294	11.74	0.147	5.88
Test 5	0.291	11.64	0.148	5.92
Test 6	0.285	11.4	0.143	5.72
Test 7	0.300	12.01	0.151	6.04
Test 8	0.295	11.85	0.147	5.88
Test 9	0.286	11.44	0.148	5.92
Test 10	0.295	11.78	0.147	5.88
Average	0.294	11.76	0.148	5.91

System validation result

11/08/03

Ambient Temperature (°C): 23.0

Relative Humidity (%): 49.3

Simulant	Freq [MHz]	Parameters	Liquid Temp [°C]	Target Value	Measured Value	Deviation [%]	Limits [%]
Body	900	ϵ	21	55.0	55.6	1.09	± 5
		σ	21	1.05	1.07	1.90	± 5
		1g SAR	21	11.76	11.70	-0.51	± 10
Head	900	ϵ	21	41.5	41.1	-0.96	± 5
		σ	21	0.97	0.93	-4.12	± 5
		1g SAR	21	10.8	9.76	-9.63	± 10

 ϵ = relative permittivity, σ = conductivity and $\rho=1000\text{kg/m}^3$

Note: Forward power = 117mW

Forward Power = 123 mW

900 MHz Body Liquid System Validation (Ambient Temp = 23 Deg C, Liquid Temp = 21 Deg C, Forward Power = 20.9 dBm, 11/8/03)


SAM Phantom; Flat Section; Position: (90°,90°); Frequency: 900 MHz

Probe: ES3DV2 - SN3019; ConvF(6.10,6.10,6.10); Crest factor: 1.0; Body 900 MHz: $\sigma = 1.07$ mho/m $\epsilon_r = 55.6$ $\rho = 1.00$ g/cm³

Cube 5x5x7: SAR (1g): 1.44 mW/g, SAR (10g): 0.808 mW/g, (Worst-case extrapolation)

Coarse: Dx = 12.0, Dy = 12.0, Dz = 10.0

Powerdrift: -0.01 dB

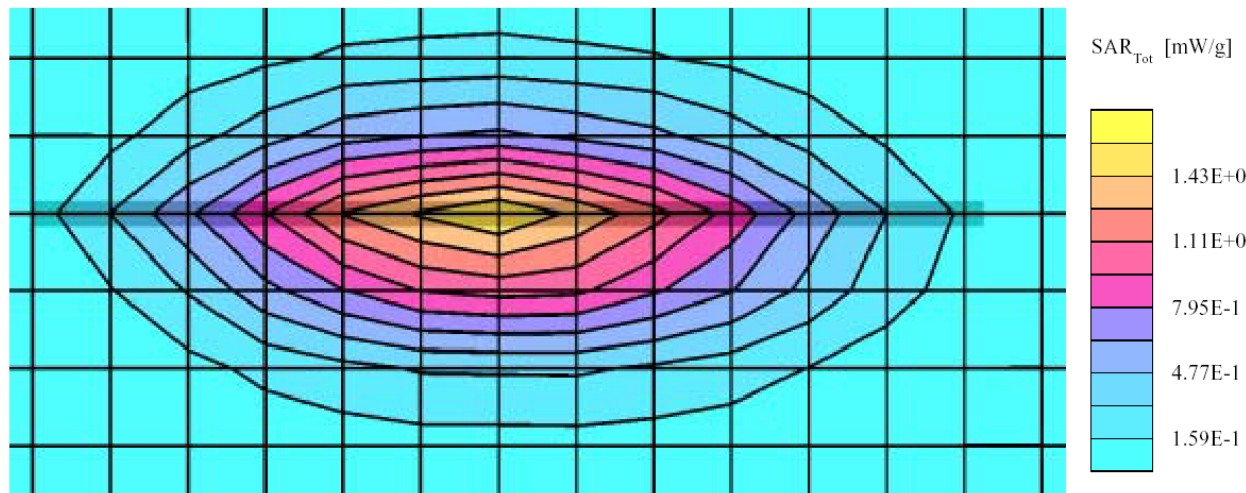

900 MHz Head Liquid System Validation (Ambient Temp = 23 Deg C, Liquid Temp = 21 Deg C, Forward Power = 20.45 dBm, 11/8/03)


SAM Phantom; Flat Section; Position: (90°,90°); Frequency: 900 MHz

Probe: ES3DV2 - SN3019; ConvF(6.40,6.40,6.40); Crest factor: 1.0; Head 900 MHz: $\sigma = 0.93$ mho/m $\epsilon_r = 41.1$ $\rho = 1.00$ g/cm³

Cube 5x5x7: SAR (1g): 1.20 mW/g, SAR (10g): 0.671 mW/g, (Worst-case extrapolation)

Coarse: Dx = 12.0, Dy = 12.0, Dz = 10.0

Powerdrift: -0.03 dB

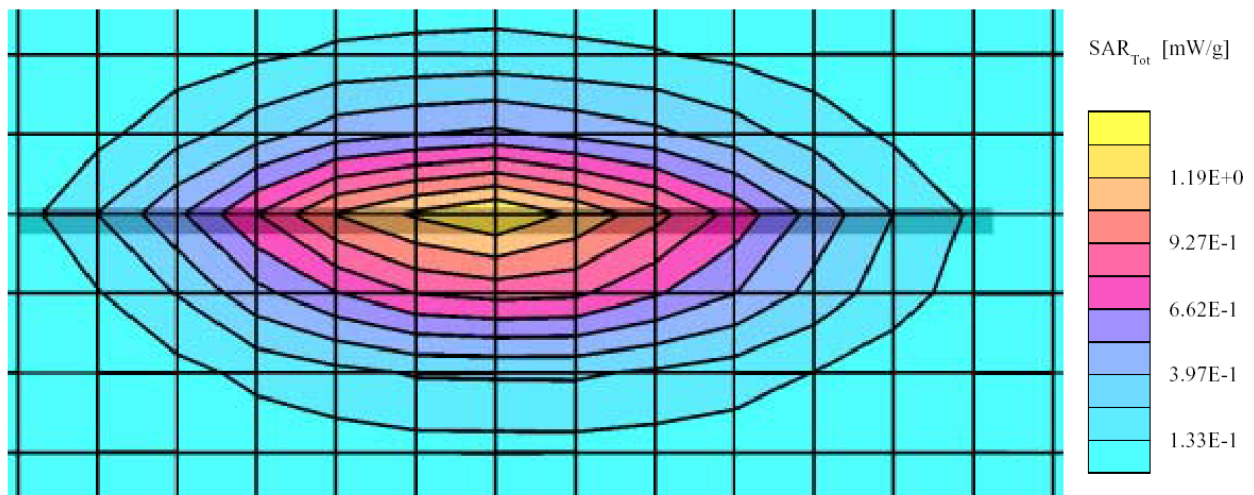

7.4 SAR Evaluation Procedure

- a. The evaluation was performed in the applicable area of the phantom depending on the type of device being tested. For device held to the head during normal operation, both the left and right ear positions were evaluated in accordance with FCC OET Bulletin 65, Supplement C (Edition 01-01) using the SAM phantom. For body-worn and face-held devices a planar phantom was used. The EUT in the test setup for body-worn and face-held devices was placed in three different positions (relative to the phantom): with belt clip, without belt clip and 2.5cm facing left head side and 2.5cm facing right head side.
- b. The SAR was determined by a pre-defined procedure within the DASY3 software. Upon completion of a reference and optical surface check, the exposed region of the phantom was scanned near the inner surface with a grid spacing of 20mm x 20mm.
- c. A 5x5x7 matrix was performed around the greatest special SAR distribution found during the area scan of the applicable exposed region. SAR values were then calculated using a 3-D spline interpolation algorithm and averaged over spatial volumes of 1 and 10 grams.
- d. The depth of the simulating tissue in the planar used for the SAR evaluation and system validation was no less than 15.0cm.
- e. For this particular evaluation, a stack of low-density, low-loss dielectric foamed polystyrene was used in place of the device holder.
- f. Re-measurement of the SAR value at the same location as in a. If the value changed by more than 5%, the evaluation was repeated.

7.5 Exposure Limits

Table 1: Limits for Occupational/Controlled Exposure (W/kg)

Whole-Body	Partial-Body	Hands. Wrists. Feet and Ankles
0.4	8.0	20.0

Table 2: Limits for General Population/Uncontrolled Exposure (W/kg)

Whole-Body	Partial-Body	Hands. Wrists. Feet and Ankles
0.08	1.6	4.0

Note: Whole-body SAR is averaged over the entire body, partial-body SAR is averaged over any 1 gram of tissue defined as a tissue volume in the shape of a cube SAR for hands, wrists, feet and ankles is averaged over any 10 grams of tissue defined as a tissue volume in the shape of a cube.

Population/Uncontrolled Environments are defined as locations where there is the exposure of individual who have no knowledge or control of their exposure.

Occupational/Controlled Environments are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure (i.e. as a result of employment or occupation).

Population/uncontrolled environments Partial-body limit 1.6W/kg applied to the EUT.

8 - TEST RESULTS

This page summarizes the results of the performed dosimetric evaluation. The plots with the corresponding SAR distributions, which reveal information about the location of the maximum SAR with respect to the device could be found in the following pages.

According to the data in section 8.1, the EUT complied with the FCC 2.1093 RF Exposure standards, with worst case of **0.782mW/g**.

8.1 SAR Test Data

Ambient Temperature (°C): 23.0

Relative Humidity (%): 51.1

Worst case SAR reading

EUT position	Frequency (MHz)	Conducted Power (W)	Test Type	Antenna Type	Liquid	Phantom	Notes / Accessories	Measured (mW/g)	Limit (mW/g)	Plot #
Face in touch with phantom	900	0.383	Body worn	Built-in	body	flat	None	0.182	1.6	1
back in touch with phantom	901	0.383	Body worn	Built-in	body	flat	None	0.782	1.6	2
Perpendicular to phantom	900	0.383	Body worn	Built-in	body	flat	None	0.689	1.6	3

8.2 Plots of Test Result

The plots of test result were attached as reference.

HuneTec. Co, Model: H200 (Body worn, Face touching to flat phantom, Mid channel,
Ambient Temp = 23 DegC, Liquid Temp = 21 Deg C, 11/08/2003)


SAM Phantom; Flat Section; Position: (90°,90°); Frequency: 901 MHz

Probe: ES3DV2 - SN3019; ConvF(6.10,6.10,6.10); Crest factor: 1.0; (Body) 900 MHz: $\sigma = 1.08$ mho/m $\epsilon_r = 55.6$ $\rho = 1.31$ g/cm³

Cube 5x5x7: SAR (1g): 0.182 mW/g, SAR (10g): 0.131 mW/g, (Worst-case extrapolation)

Coarse: Dx = 12.0, Dy = 12.0, Dz = 10.0

Powerdrift: -0.00 dB

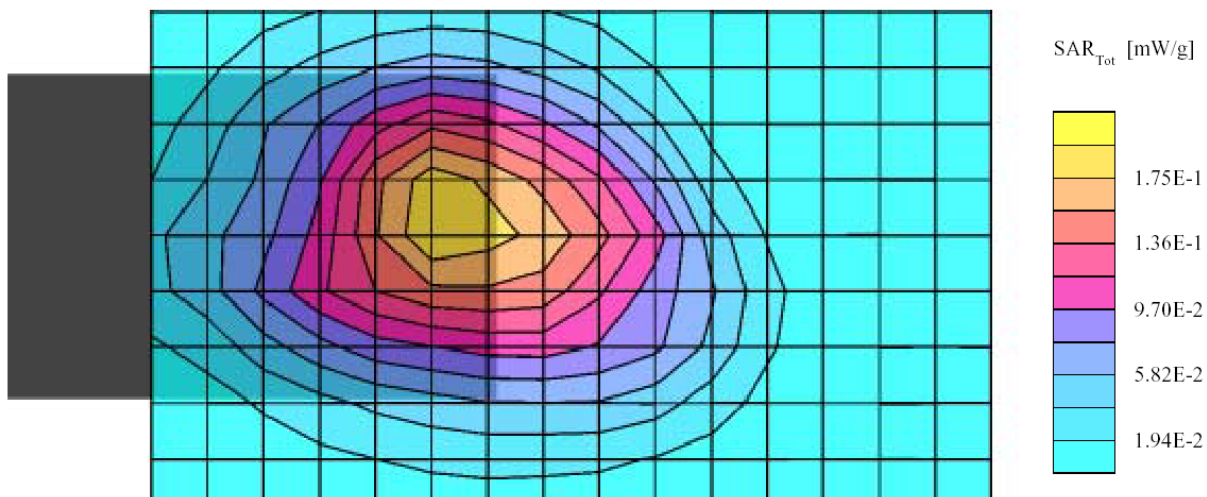

Plot #1

HuneTec. Co, Model: H200 (Body worn, Back touching to flat phantom, Mid channel,
Ambient Temp = 23 DegC, Liquid Temp = 21 Deg C, 11/08/2003)


SAM Phantom; Flat Section; Position: (90°,90°); Frequency: 901 MHz

Probe: ES3DV2 - SN3019; ConvF(6.10,6.10,6.10); Crest factor: 1.0; (Body) 900 MHz: $\sigma = 1.08$ mho/m $\epsilon_r = 55.6$ $\rho = 1.31$ g/cm³

Cube 5x5x7: SAR (1g): 0.782 mW/g, SAR (10g): 0.394 mW/g, (Worst-case extrapolation)

Coarse: Dx = 12.0, Dy = 12.0, Dz = 10.0

Powerdrift: 0.04 dB

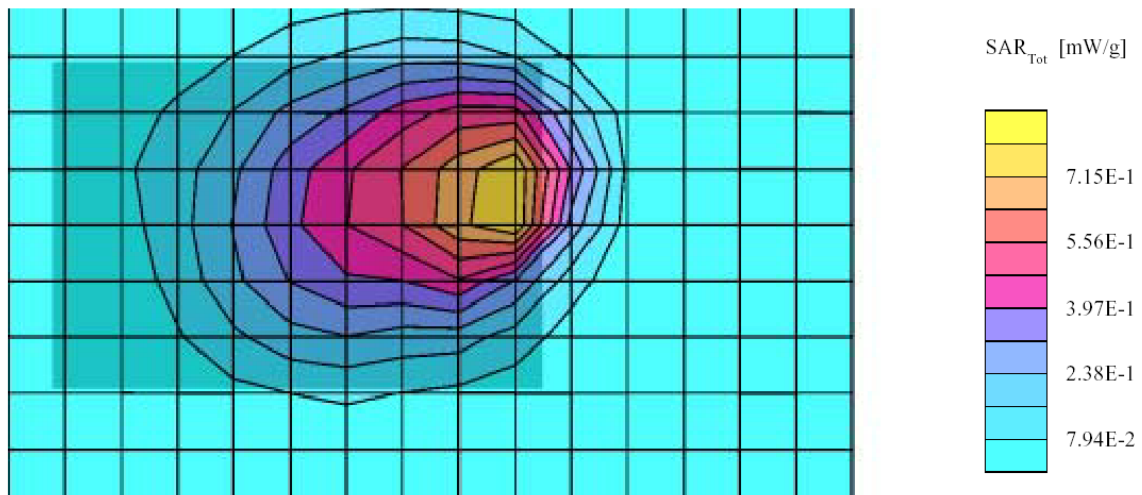

Plot #2

HuneTec. Co, Model: H200 (Body worn, Perpendicular to flat phantom, Mid channel,
Ambient Temp = 23 DegC, Liquid Temp = 21 Deg C, 11/08/2003)


SAM Phantom; Flat Section; Position: (90°,90°); Frequency: 901 MHz

Probe: ES3DV2 - SN3019; ConvF(6.10,6.10,6.10); Crest factor: 1.0; (Body) 900 MHz: $\sigma = 1.08$ mho/m $\epsilon_r = 55.6$ $\rho = 1.31$ g/cm³

Cube 5x5x7: SAR (1g): 0.689 mW/g, SAR (10g): 0.290 mW/g, (Worst-case extrapolation)

Coarse: Dx = 12.0, Dy = 12.0, Dz = 10.0


Powerdrift: 0.00 dB

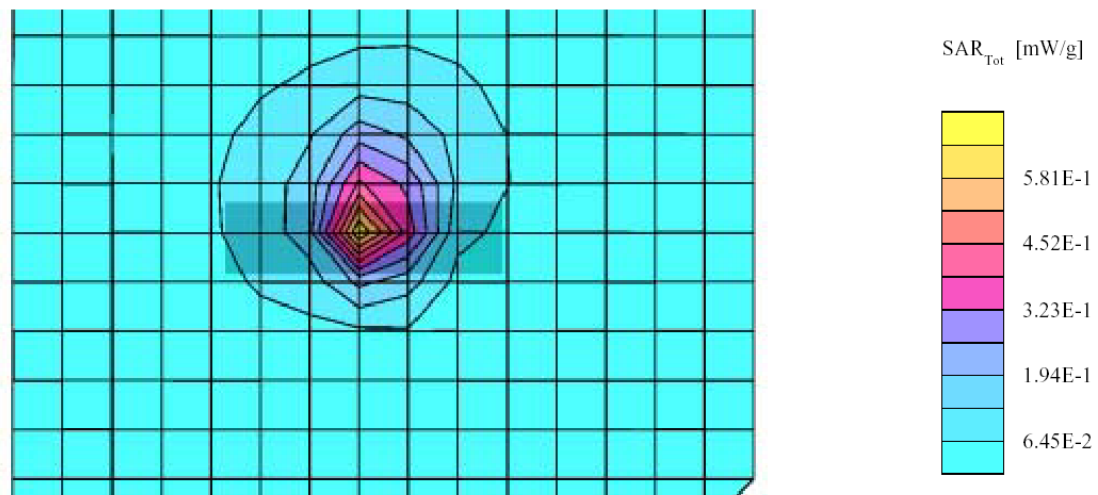


Plot #3

EXHIBIT A - SAR SETUP PHOTOGRAPHS

Face in Touch with Phantom

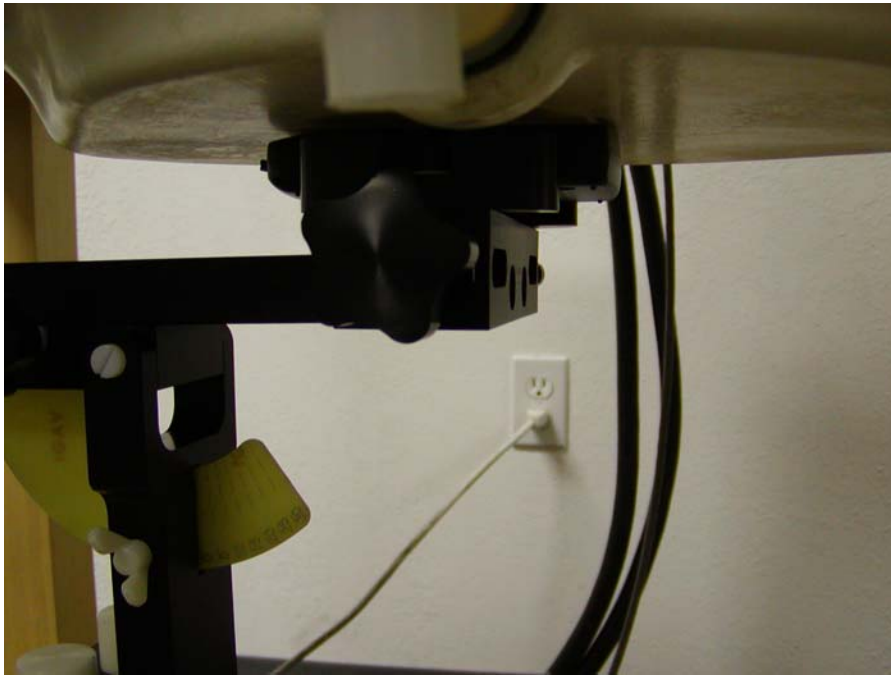



Back in Touch with Phantom


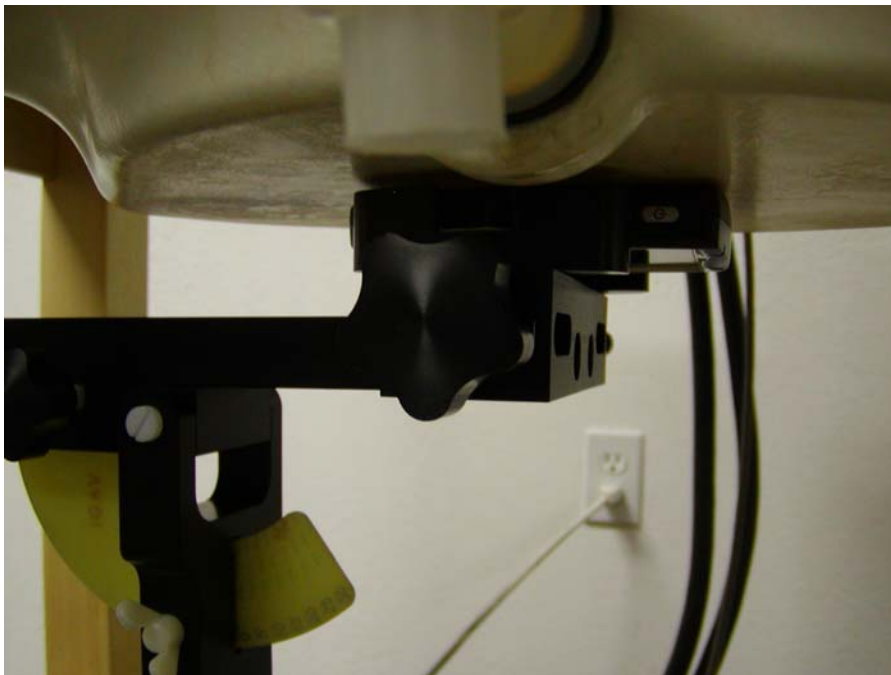


Perpendicular to Phantom



EXHIBIT B - EUT PHOTOGRAPHS**Chassis - Front View****Chassis – Rear View**

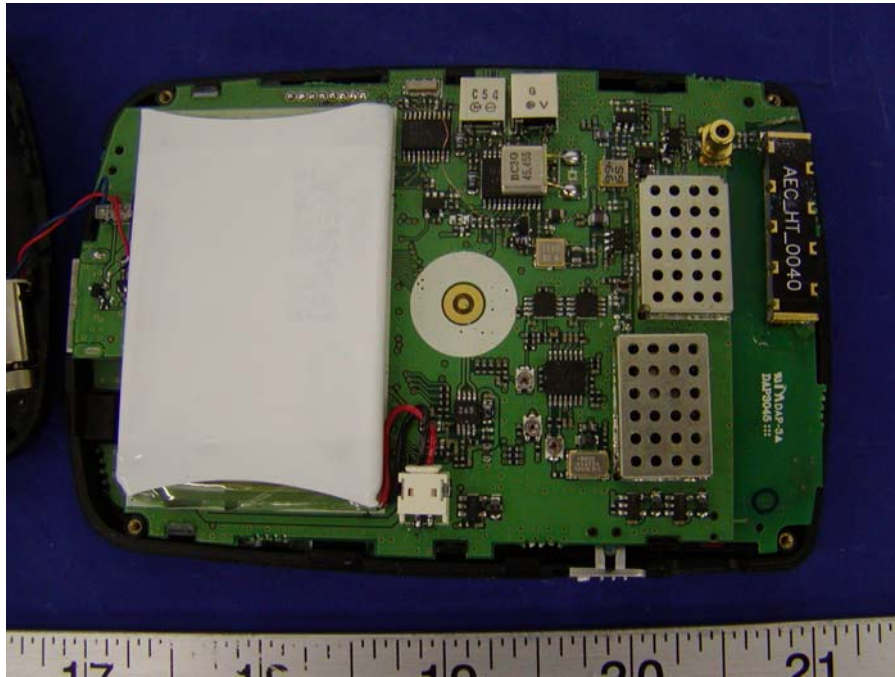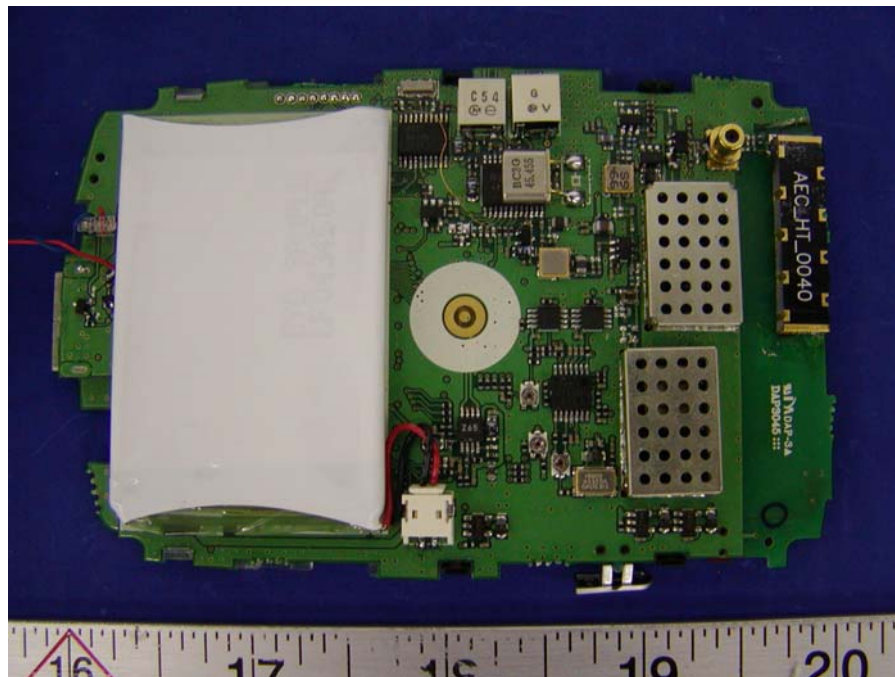Chassis – Cover Off View**EUT – Component View**

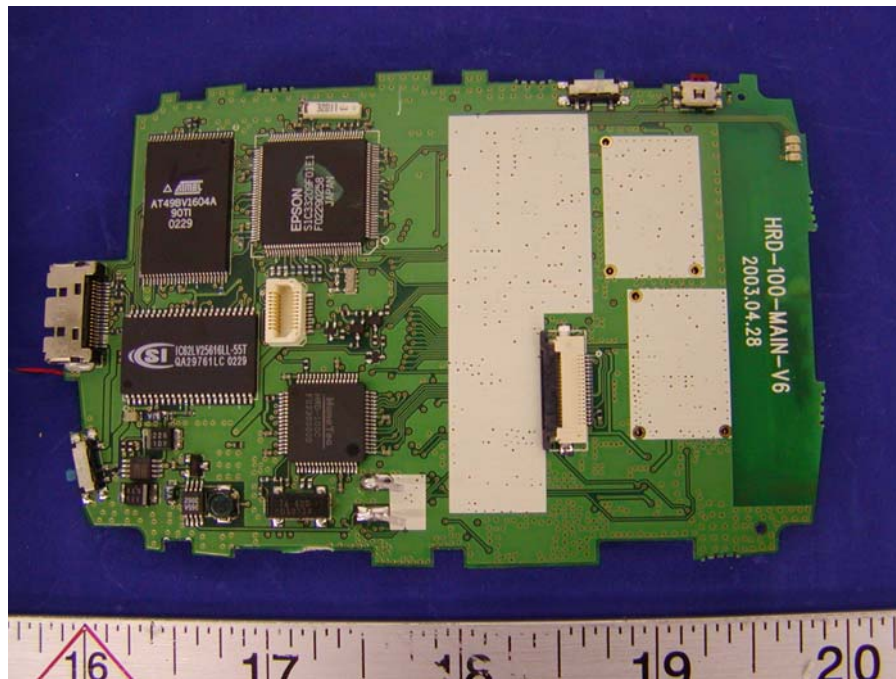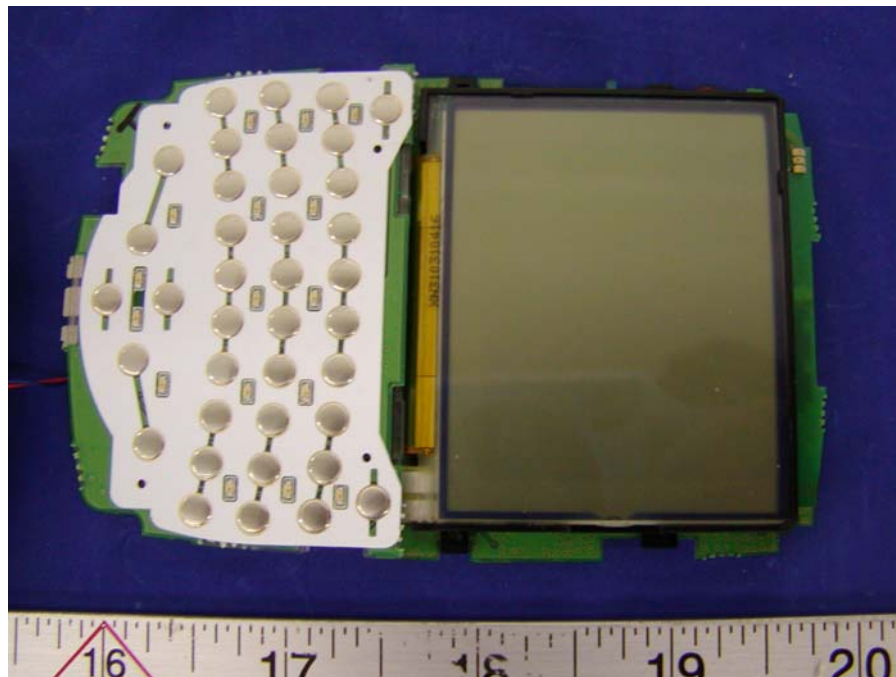EUT – Solder View**EUT – Port View**

Power Adapter View

EXHIBIT C – Z-Axis

HuneTec. Co, Model: H200 (Body worn, Back touching to flat phantom, Mid channel,
Ambient Temp = 23 DegC, Liquid Temp = 21 Deg C, 11/08/2003)

SAM Phantom; Section; Position: ; Frequency: 901 MHz

Probe: ES3DV2 - SN3019; ConvF(6.10,6.10,6.10); Crest factor: 1.0; (Body) 900 MHz: $\sigma = 1.08 \text{ mho/m}$, $\epsilon_r = 55.6$ $\rho = 1.31 \text{ g/cm}^3$

; 0

Z-Axis: Dx = 0.0, Dy = 0.0, Dz = 2.0

