

SAR EVALUATION REPORT

For

BBK COMMUNICATION EQUIPMENT CORP., LTD

23#, BBK Road, Wusha, Chang'an, Dongguan, Guangdong, China

FCC ID: SV5BBK302GM

This Report Concerns: ☒ Original Report	Equipment Type: GSM Fixed wireless phone
Test Engineer: <u>Eric Hong</u> 	
Report No.: <u>R0501054S</u>	
Test Date: <u>2005-1-10</u>	
Reviewed By: <u>Daniel Deng</u> 	
Prepared By: Bay Area Compliance Laboratory Corporation (BACL) 230 Commercial Street Sunnyvale, CA 94085 Tel: (408) 732-9162 Fax: (408) 732 9164	

Note: This test report is specially limited to the above client company and the product model only. It may not be duplicated without prior written consent of Bay Area Compliance Laboratory Corporation. This report **must not** be used by the client to claim product certification, approval, or endorsement by NVLAP, NIST or any agency of the U.S. Government.

DECLARATION OF COMPLIANCE SAR EVALUATION

Rule Part(s):	FCC §2.1093
Test Procedure(s):	FCC OET Bulletin 65 Supplement C
Device Classification:	Licensed Portable Transmitter Held to Ear (PCE)
Device Type:	GSM Fixed wireless phone
FCC ID:	SV5BBK302GM
Model Number:	BKGP-302
Modulation:	GMSK
TX Frequency Range:	1850 – 1910MHz
Max. Conducted Power Tested:	GSM1900: 28.68dBm
Antenna Type(s):	Integral Antenna
Battery Type(s):	Rechargeable
Max. SAR Level(s) Measured: 0.178 W/kg (Body-Worn)	

BACL Corp. declares under its sole responsibility that this device was found to be in compliance with the Specific Absorption Rate (SAR) RF exposure requirements specified in the relevant regulatory rules, e.g. FCC §2.1093 and Health Canada's Safety Code 6.

The device was tested in accordance with the measurement standards and procedures specified in the appropriate directives, e.g. FCC OET Bulletin 65, Supplement C, Edition 01-01 and Industry Canada RSS-102 Issue 1 (Occupational Environment/Controlled Exposure).

I attest to the accuracy of data. All measurements were performed by me or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.

The results and statements contained in this report pertain only to the device(s) evaluated.

/signature/



Daniel Deng
Bay Area Compliance Laboratory Corp.



TABLE OF CONTENTS

INTRODUCTION AND OVERVIEW	5
REFERENCE, STANDARDS, AND GUIDELINES	6
SAR LIMITS	6
EUT DESCRIPTION	7
DESCRIPTION OF TEST SYSTEM	8
MEASUREMENT SYSTEM DIAGRAM	9
SYSTEM COMPONENTS	10
TESTING EQUIPMENT	14
EQUIPMENTS LIST & CALIBRATION INFO	14
SAR MEASUREMENT SYSTEM VERIFICATION	15
LIQUID VALIDATION	15
SYSTEM ACCURACY VERIFICATION	17
EUT TEST STRATEGY AND METHODOLOGY	18
SAR EVALUATION PROCEDURE	18
CONCLUSION	19
SAR BODY AND HEAD WORST-CASE TEST DATA	19
APPENDIX A – MEASUREMENT UNCERTAINTY	20
APPENDIX B – PROBE CALIBRATION CERTIFICATES	21
APPENDIX C – DIPOLE CALIBRATION CERTIFICATES	47
APPENDIX D - TEST SYSTEM VERIFICATIONS SCANS	54
LIQUID MEASUREMENT RESULT	54
APPENDIX E - EUT SCANS	57
APPENDIX F – CONDUCTED OUTPUT POWER MEASUREMENT	58
PROVISION APPLICABLE	58
TEST PROCEDURE	58
TEST EQUIPMENT	58
TEST RESULTS	58
APPENDIX G – Z-AXIS PLOT	60
APPENDIX H – EUT TEST POSITION PHOTOS	61
BOTTOM TOUCHING FLAT PHANTOM	61
APPENDIX I – EUT & ACCESSORIES PHOTOS	62
EUT – FRONT VIEW	62
EUT – REAR VIEW	62
EUT – PORT VIEW	63
EUT –HEADSET VIEW	63
EUT –CHARGER VIEW	64
EUT –UNCOVER VIEW	65
EUT –HEADSET UNCOVER VIEW	65
EUT –KEYBOARD COMPONENT VIEW	66
EUT –KEYBOARD SOLDER VIEW	66
EUT –MAIN BOARD SOLDER VIEW	67
EUT –MAIN BOARD VIEW	67
EUT –MAIN BOARD WITHOUT SHIELDING VIEW	68
EUT –DISPLAY VIEW	68
EUT –DISPLAY COMPONENTS VIEW	69
EUT –BATTERY VIEW	69
RF BOARD TOP VIEW	70
RF BOARD BOTTOM VIEW	70

APPENDIX J - INFORMATIVE REFERENCES71

INTRODUCTION AND OVERVIEW

The US Federal Communications Commission has released report and order; "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996 [1]. Furthermore, in accordance with Part 2 rules on RF exposure, testing for compliance is required for certain products.

The test configurations were laid out on a specially designed test fixture to ensure reproducibility of measurements. Each configuration was scanned and measurements recorded for SAR. Analysis of each scan was carried out to characterize the device under test.

SAR readings for this device tested in the described configurations, were found to be in compliance with applicable rules

REFERENCE, STANDARDS, AND GUIDELINES

The Report and Order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g as recommended by the ANSI/IEEE standard C95.1-1992 [6] for an uncontrolled environment (Paragraph 65). According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guide-lines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.

This report describes the methodology and results of experiments performed on wireless data terminal. The objective was to determine if there is RF radiation and if radiation is found, what is the extent of radiation with respect to safety limits. SAR (Specific Absorption Rate) is the measure of RF exposure determined by the amount of RF energy absorbed by human body (or its parts) – to determine how the RF energy couples to the body or head which is a primary health concern for body worn devices. The limit below which the exposure to RF is considered safe by regulatory bodies in North America is 1.6 mW/g average over 1 gram of tissue mass.

SAR Limits

EXPOSURE LIMITS	SAR (W/kg)	
	(General Population / Uncontrolled Exposure Environment)	(Occupational / Controlled Exposure Environment)
Spatial Average (averaged over the whole body)	0.08	0.4
Spatial Peak (averaged over any 1 g of tissue)	1.60	8.0
Spatial Peak (hands/wrists/feet/ankles averaged over 10 g)	4.0	20.0

Population/Uncontrolled Environments are defined as locations where there is the exposure of individual who have no knowledge or control of their exposure.

Occupational/Controlled Environments are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure (i.e. as a result of employment or occupation).

Population/uncontrolled environments Spatial Peak limit 1.6 w/kg applied to the EUT.

EUT DESCRIPTION

The *BBK COMMUNICATION EQUIPMENT CORP., LTD*'s product, model no.: BKGP-302 or the "EUT" as referred to this report is a GSM Fixed wireless phone which measures approximately 190mmL x 200mmW x 80mmH.

** The test data gathered are from typical production sample, serial number: 001, provided by the manufacturer.*

DESCRIPTION OF TEST SYSTEM


These measurements were performed with the automated near-field scanning system DASY3 from Schmid & Partner Engineering AG (SPEAG). The system is based on a high precision robot (working range greater than 0.9m), which positions the probes with a positional repeatability of better than $\pm 0.02\text{mm}$. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The system is described in detail in [3].

The SAR measurements were conducted with the dosimetric probe ET3DV6 SN: 1604 (manufactured by SPEAG), designed in the classical triangular configuration [3] and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure described in [7] with accuracy of better than $\pm 10\%$. The spherical isotropy was evaluated with the procedure described in [8] and found to be better than $\pm 0.25\text{dB}$.

The phantom used was the "Generic Twin Phantom" described in [4]. The ear was simulated as a spacer of 4 mm thickness between the earpiece of the phone and the tissue simulating liquid. The Tissue simulation liquid used for each test is in according with the FCC OET65 supplement C as listed below.

Ingredients (% by weight)	Frequency (MHz)									
	450		835		915		1900		2450	
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (Nacl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton x-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (s/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78

Measurement System Diagram

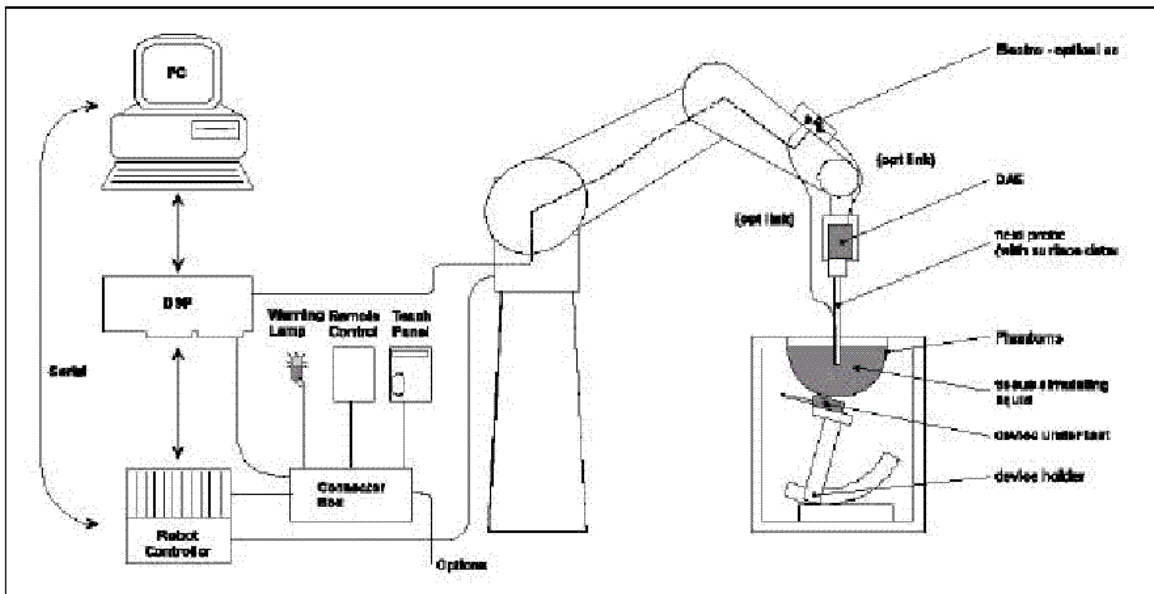

The DASY3 system for performing compliance tests consist of the following items:

1. A standard high precision 6-axis robot (Stäubli RX family) with controller and software.
2. An arm extension for accommodating the data acquisition electronics (DAE).
3. A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
4. A data acquisition electronic (DAE), which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
5. A unit to operate the optical surface detector, which is connected to the EOC. The Electro-optical coupler (EOC) performs the conversion from the optical into a digital electric signal of the DAE. The EOC is connected to the PC plug-in card. The functions of the PC plug-in card based on a DSP is to perform the time critical task such as signal filtering, surveillance of the robot operation fast movement interrupts.
6. A computer operating Windows 95 or larger
7. DASY3 software
8. Remote control with teaches pendant and additional circuitry for robot safety such as warning lamps, etc.
9. The generic twin phantom enabling testing left-hand and right-hand usage.
10. The device holder for handheld EUT.
11. Tissue simulating liquid mixed according to the given recipes (see Application Note).
12. System validation dipoles to validate the proper functioning of the system.

System Components

ES3DV2 Probe Specification

Construction	Symmetrical design with triangular core Interleafed sensors Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., glycol)
Calibration	In air from 10 MHz to 3 GHz In brain and muscle simulating tissue at frequencies of 450 MHz, 900 MHz and 1.8 GHz (accuracy $\pm 8\%$) Calibratin for other liquids and frequencies upon request
Frequency	10 MHz to > 6GHz; Linearity: ± 0.2 dB (30 MHz to 3 GHz)
Directivity	± 0.2 dB in brain tissue (rotation around probe axis) ± 0.3 dB in brain tissue (rotation normal to probe axis)
Dynamic Range	$5\mu\text{W/g}$ to > 100 mW/g; Linearity: ± 0.2 dB
Dimensions	Overall length: 330 mm Tip length: 20 mm Body diameter: 12 mm Tip diameter: 3.9 mm Distance from probe tip to dipole centers: 2.7 mm
Application:	General dosimetry up to 5 GHz Dosimetry in strong gradient fields Compliance tests of mobile phones

The SAR measurements were conducted with the dosimetric probe ET3DV2 designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multi-fiber line ending at the front of the probe tip. It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY3 software reads the reflection during a software approach and looks for the maximum using a 2 nd order fitting. The approach is stopped when reaching the maximum.



Photograph of the probe



**Inside view of
ES3DV2 E-field Probe**

E-Field Probe Calibration Process

Each probe is calibrated according to a dosimetric assessment procedure described in [6] with accuracy better than +/- 10%. The spherical isotropy was evaluated with the procedure described in [7] and found to be better than +/-0.25dB. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested.

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz, and in a waveguide above 1 GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity and at the proper orientation with the field. The probe is then rotated 360 degrees.

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe.

Data Evaluation

The DASY3 software automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe Parameter:	-Sensitivity	Norm _i , a _{i0} , a _{i1} , a _{i2}
	-Conversion Factor	ConvFi
	-Diode compression point	Dcp _i
Device parameter:	-Frequency	f
	-Crest Factor	cf
Media parameter:	-Conductivity	σ
	-Density	ρ

These parameters must be set correctly in the software. They can either be found in the component documents or be imported into the software from the configuration files issued for the DASY3 components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + (U_i)^2 \text{ cf} / \text{dcp}_i$$

With V_i = compensated signal of channel i (i=x, y, z)
 U_i = input signal of channel i (i=x, y, z)
 cf = crest factor of exciting field (DASY parameter)
 dcp_i = diode compression point (DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

$$\begin{aligned} \text{E-field probes:} \quad E_i &= \sqrt{\frac{V_i}{\text{Norm}_i \cdot \text{ConvF}}} \\ \text{H-field probes:} \quad H_i &= \sqrt{V_i} \cdot \frac{a_{i0} + a_{i1}f + a_{i2}f^2}{f} \end{aligned}$$

With V_i = compensated signal of channel i (i=x, y, z)
 Norm_i = sensor sensitivity of channel i (i=x, y, z)
 $\mu\text{V}/(\text{V/m})^2$ for E-field probes
 ConvF = sensitivity enhancement in solution
 a_{ij} = sensor sensitivity factors for H-field probes
 f = carrier frequency [GHz]
 E_i = electric field strength of channel i in V/m
 H_i = diode compression point (DASY parameter)

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{\text{tot}} = \text{Square Root} [(E_x)^2 + (E_y)^2 + (E_z)^2]$$

The primary field data are used to calculate the derived field units.

$$\text{SAR} = (E_{\text{tot}})^2 \cdot \sigma / (\rho \cdot 1000)$$

With SAR = local specific absorption rate in mW/g
 E_{tot} = total field strength in V/m
 σ = conductivity in [mho/m] or [Siemens/m]
 ρ = equivalent tissue density in g/cm^3

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{\text{pwe}} = (E_{\text{tot}})^2 / 3770 \text{ or } P_{\text{pwe}} = (H_{\text{tot}})^2 \cdot 37.7$$

With P_{pwe} = equivalent power density of a plane wave in mW/cm³
 E_{tot} = total electric field strength in V/m
 H_{tot} = total magnetic field strength in V/m


Generic Twin Phantom

The Generic Twin Phantom is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is based on data from an anatomical study designed to determine the maximum exposure in at least 90% of all users [9][10]. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allows the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot.

Shell Thickness 2 ± 0.1 mm

Filling Volume Approx. 20 liters

Dimensions 810 x 1000 x 500 mm (H x L x W)

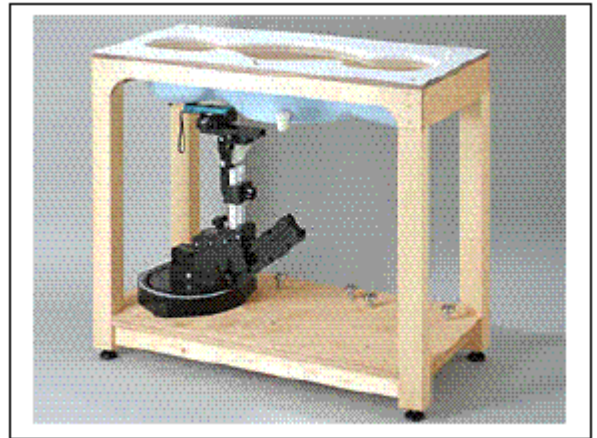


Generic Twin Phantom

Device Holder

In combination with the Generic Twin Phantom V3.0, the Mounting Device enables the rotation of the mounted transmitter in spherical coordinates whereby the rotation points is the ear opening. The devices can be easily, accurately, and repeatedly positioned according to the FCC and CENELEC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

* Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produced infinite number of configurations [10]. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.

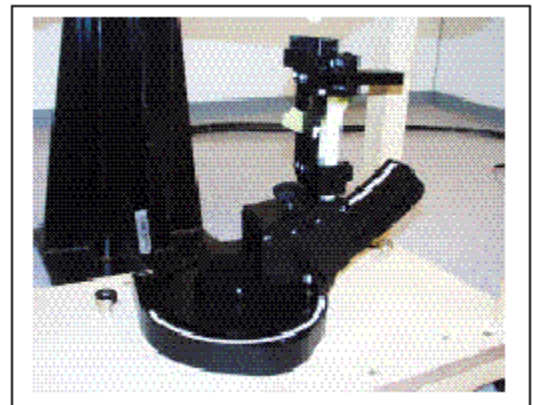

Device Holder

TESTING EQUIPMENT

Equipments List & Calibration Info

Type / Model	Cal. Date	S/N:
DASY3 Professional Dosimetric System	N/A	N/A
Robot RX60L	N/A	F00/5H31A1/A/01
Robot Controller	N/A	F01/5J72A1/A/01
Dell Computer Optiplex GX110	N/A	N/A
Pentium III, Windows NT	N/A	N/A
SPEAG EDC3	N/A	N/A
SPEAG DAE3	2004-06-01	456
SPEAG E-Field Probe ES3DV2	2003-10-09	3019
SPEAG E-Field Probe ET3DV6	2004-06-10	1604
Antenna, Dipole, D900V2	2003-10-03	122
SPEAG Generic Twin Phantom	N/A	N/A
SPEAG Light Alignment Sensor	N/A	278
April Validation Dipole D-1800-S-2	2004-04-09	BCL-049
Brain Equivalent Matter (1900MHz)	Each Use	N/A
Muscle Equivalent Matter (1900MHz)	Each Use	N/A
Robot Table	Each Use	N/A
Phone Holder	Each Use	N/A
Phantom Cover	Each Use	N/A
HP Spectrum Analyzer HP8566A	N/A	2240A01930
Microwave Amp. 8349A	N/A	2644A02662
Power Meter Agilent E4919B	2004-04-29	MY4121511
Power Sensor Agilent E4412A	2004-05-07	US38488542
Network Analyzer HP-8752C	2002-08-11	820079
Dielectric Probe Kit HP85070A	Each Use	US99360201
Signal Generator HP-83650B	2004-02-29	3614A002716
Amplifier, ST181-20	N/R	E012-0101
Antenna, Horn DRG-118A	2004-02-06	A052704
Analyzer, Communication, Agilent E5515C	2004-04-05	GB44051221

SAR MEASUREMENT SYSTEM VERIFICATION

Liquid Validation

1900 MHZ Body Liquid Validation

Ambient Temp = 23 Deg C, Liquid Temp = 22 Deg C, 01/10/2005

Frequency	ϵ'	ϵ''
1850000000.0000	53.6364	14.1271
1852000000.0000	53.6032	14.1336
1854000000.0000	53.5811	14.1552
1856000000.0000	53.5755	14.1818
1858000000.0000	53.5671	14.1043
1860000000.0000	53.5467	14.1902
1862000000.0000	53.5254	14.1861
1864000000.0000	53.5146	14.1456
1866000000.0000	53.5033	14.1384
1868000000.0000	53.4927	14.1462
1870000000.0000	53.4814	14.1531
1872000000.0000	53.4305	14.1658
1874000000.0000	53.4212	14.1790
1876000000.0000	53.3883	14.1982
1878000000.0000	53.3702	14.2047
1880000000.0000	53.3621	14.2968
1882000000.0000	53.3574	14.3039
1884000000.0000	53.3486	14.3440
1886000000.0000	53.3350	14.3521
1888000000.0000	53.3429	14.3578
1890000000.0000	53.3272	14.3625
1892000000.0000	53.3141	14.3822
1894000000.0000	53.3018	14.3774
1896000000.0000	53.3175	14.3650
1898000000.0000	53.3232	14.2836
1900000000.0000	53.3184	14.2579
1902000000.0000	53.3596	14.2923
1904000000.0000	53.3180	14.3568
1906000000.0000	53.3252	14.3670
1908000000.0000	53.3186	14.3664
1910000000.0000	53.3149	14.3590
1912000000.0000	53.3080	14.3642
1914000000.0000	53.2821	14.3561
1916000000.0000	53.2768	14.4582
1918000000.0000	53.2874	14.4774
1920000000.0000	53.2569	14.4886
1922000000.0000	53.2678	14.4709
1924000000.0000	53.2360	14.4635
1926000000.0000	53.2249	14.5513
1928000000.0000	53.2152	14.5360
1930000000.0000	53.2068	14.5289
1932000000.0000	53.1982	14.5324
1934000000.0000	53.1936	14.5180
1936000000.0000	53.1885	14.5243
1938000000.0000	53.1719	14.5168
1940000000.0000	53.1859	14.5242
1942000000.0000	53.1940	14.5351
1944000000.0000	53.2008	14.5145
1946000000.0000	53.2161	14.5236
1948000000.0000	53.2253	14.5318
1950000000.0000	53.2201	14.5376

$$\sigma = \omega \epsilon_0 \epsilon'' = 2 \pi f \epsilon_0 \epsilon'' = 1.5071$$

where $f = 1900 \times 10^6$
 $\epsilon_0 = 8.854 \times 10^{-12}$
 $\epsilon'' = 14.2579$

1900 MHZ Head Liquid Validation

Ambient Temp = 23 Deg C, Liquid Temp = 22 Deg C, 01/10/2005

Frequency	ϵ'	ϵ''
1850000000.0000	39.6525	13.1521
1852000000.0000	39.6489	13.1664
1854000000.0000	39.6134	13.1495
1856000000.0000	39.6359	13.1573
1858000000.0000	39.6478	13.1954
1860000000.0000	39.6484	13.1860
1862000000.0000	39.6475	13.2085
1864000000.0000	39.6332	13.1927
1866000000.0000	39.6548	13.2034
1868000000.0000	39.6265	13.2159
1870000000.0000	39.6146	13.2068
1872000000.0000	39.6423	13.2173
1874000000.0000	39.5806	13.2357
1876000000.0000	39.5768	13.2268
1878000000.0000	39.5629	13.2154
1880000000.0000	39.5561	13.2271
1882000000.0000	39.5149	13.2339
1884000000.0000	39.4852	13.2487
1886000000.0000	39.4794	13.2550
1888000000.0000	39.4607	13.2782
1890000000.0000	39.4563	13.2841
1892000000.0000	39.4435	13.2965
1894000000.0000	39.3883	13.3008
1896000000.0000	39.3606	13.3242
1898000000.0000	39.3528	13.3495
1900000000.0000	39.3209	13.3568
1902000000.0000	39.3193	13.3383
1904000000.0000	39.2669	13.3059
1906000000.0000	39.2535	13.2616
1908000000.0000	39.2312	13.2747
1910000000.0000	39.1927	13.2826
1912000000.0000	39.1275	13.2957
1914000000.0000	39.1863	13.3023
1916000000.0000	39.1765	13.3063
1918000000.0000	39.0324	13.3294
1920000000.0000	39.0203	13.3469
1922000000.0000	39.0522	13.3758
1924000000.0000	39.0761	13.3672
1926000000.0000	39.0832	13.3781
1928000000.0000	39.0960	13.3847
1930000000.0000	39.0355	13.3959
1932000000.0000	39.1282	13.3936
1934000000.0000	39.1338	13.4052
1936000000.0000	39.1805	13.4298
1938000000.0000	39.1928	13.4470
1940000000.0000	39.2283	13.4512
1942000000.0000	39.2545	13.5161
1944000000.0000	39.3374	13.5257
1946000000.0000	39.3653	13.5458
1948000000.0000	39.4068	13.5640
1950000000.0000	39.4570	13.5828

$$\sigma = \omega \epsilon_0 \epsilon'' = 2 \pi f \epsilon_0 \epsilon'' = 1.4118$$

$$\text{where } f = 1900 \times 10^6$$

$$\epsilon_0 = 8.854 \times 10^{-12}$$

$$\epsilon'' = 13.3568$$

System Accuracy Verification

Prior to the assessment, the system validation kit was used to test whether the system was operating within its specifications of $\pm 10\%$. The validation results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.

IEEE P1528 recommended reference value for head

Frequency (MHz)	1 g SAR	10 g SAR	Local SAR at surface (above feed point)	Local SAR at surface (v=2cm offset from feed point)
300	3.0	2.0	4.4	2.1
450	4.9	3.3	7.2	3.2
835	9.5	6.2	14.1	4.9
900	10.8	6.9	16.4	5.4
1450	29.0	16.0	50.2	6.5
1800	38.1	19.8	69.5	6.8
1900	39.7	20.5	72.1	6.6
2000	41.1	21.1	74.6	6.5
2450	52.4	24.0	104.2	7.7
3000	63.8	25.7	140.2	9.5

Validation Dipole SAR Reference Test Result for Body (1900 MHz)

Validation Measurement	SAR @ 0.126W Input averaged over 1g	SAR @ 1W Input averaged over 1g	SAR @ 0.126W Input averaged over 10g	SAR @ 1W Input averaged over 10g
Test 1	3.1	24.61	1.42	11.27
Test 2	3.1	24.61	1.41	11.20
Test 3	3.2	25.41	1.43	11.35
Test 4	3.2	25.41	1.42	11.27
Test 5	3.1	24.61	1.42	11.27
Test 6	3.2	25.61	1.41	11.20
Test 7	3.2	25.61	1.43	11.35
Test 8	3.1	24.61	1.42	11.27
Test 9	3.1	24.61	1.42	11.27
Test 10	3.1	24.61	1.43	11.35
Average	3.14	24.97	1.421	11.28

EUT TEST STRATEGY AND METHODOLOGY

SAR Evaluation Procedure

The evaluation was performed with the following procedure:

Step 1: Measurement of the SAR value at a fixed location above the ear point or central position was used as a reference value for assessing the power drop.

Step 2: The SAR distribution at the exposed side of the head was measured at a distance of 3.9 mm from the inner surface of the shell. The area covered the entire dimension of the head or EUT and the horizontal grid spacing was 20 mm x 20 mm. Based on these data, the area of the maximum absorption was determined by spline interpolation.

Step 3: Around this point, a volume of 32 mm x 32 mm x 34 mm was assessed by measuring 5 x 5 x 7 points. On the basis of this data set, the spatial peak SAR value was evaluated under the following procedure:

1. The data at the surface were extrapolated, since the center of the dipoles is 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measuring point is 1.2 mm. The extrapolation was based on a least square algorithm [11]. A polynomial of the fourth order was calculated through the points in z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.
2. The maximum interpolated value was searched with a straightforward algorithm. Around this maximum the SAR values averaged over the spatial volumes (1 g or 10 g) were computed by the 3D-Spline interpolation algorithm. The 3D-Spline is composed of three onedimensional splines with the "Not a knot"-condition (in x, y and z-directions) [11], [12]. The volume was integrated with the trapezoidal-algorithm. One thousand points (10 x 10 x 10) were interpolated to calculate the average.
3. All neighboring volumes were evaluated until no neighboring volume with a higher average value was found.

Step 4: Re-measurement of the SAR value at the same location as in Step 1. If the value changed by more than 5%, the evaluation was repeated.

CONCLUSION

This page summarizes the results of the performed dosimetric evaluation. The plots with the corresponding SAR distributions, which reveal information about the location of the maximum SAR with respect to the device could be found in Appendix E.

SAR Body and Head Worst-Case Test Data

Environmental Conditions

Ambient Temperature:	18° C
Relative Humidity:	48%
ATM Pressure:	1018 mbar

Mobile Phone	Position	Frequency (MHz)	Output Power (dBm)	Test Type	Liquid	Phantom	Accessory	Measured (mW/g)	Limit (mW/g)	Plot #
GSM 1900	Bottom touching flat phantom, Middle Channel	1880	28.68	Body Worn	Body	Flat	No accessory	0.178	1.6	8

APPENDIX A – MEASUREMENT UNCERTAINTY

The uncertainty budget has been determined for the DASY3 measurement system according to the NIS81 [13] and the NIST1297 [14] documents and is given in the following Table.

Uncertainty Description	Error	Distribution	Weight	Std. Dev.	Offset
Probe Uncertainty					
Axial isotropy	± 0.2 dB	U-shape	0.5	±2.4 %	/
Spherical isotropy	±0.4 dB	U-shape	0.5	±4.8 %	/
Isotropy from gradient	±0.5 dB	U-shape	0	/	/
Spatial resolution	±0.5 %	Normal	1	±0.5 %	/
Linearity error	±0.2 dB	Rectangle	1	±2.7 %	/
Calibration error	±3.3 %	Normal	1	± 3.3 %	/
SAR Evaluation Uncertainty					
Data acquisition error	±1%	Rectangle	1	±0.6 %	/
ELF and RF disturbances	±0.25 %	Normal	1	±0.25 %	/
Conductivity assessment	±10 %	Rectangle	1	± 5.8 %	/
Spatial Peak SAR Evaluation Uncertainty					
Extrapol boundary effect	±3%	Normal	1	±3%	± 5%
Probe positioning error	±0.1 mm	Normal	1	± 1%	/
Integrat. and cube orient	±3%	Normal	1	±3%	/
Cube shape inaccuracies	±2%	Rectangle	1	±1.2 %	/
Device positioning	±6%	Normal	1	± 6%	/
Combined Uncertainties	/	/	1	±11.7 %	± 5%
Extended uncertainty (K = 2)	/	/	/	± 23.5 %.	/

APPENDIX B – PROBE CALIBRATION CERTIFICATES

Calibration Laboratory of
Schmid & Partner
Engineering AG
 Zeughausstrasse 43, 8004 Zurich, Switzerland

Client **Bay Area (BACL)**

CALIBRATION CERTIFICATE

Object(s) **ET3DV6 - SN:1604**

Calibration procedure(s) **QA CAL-01.v2**
Calibration procedure for dosimetric E-field probes

Calibration date: **June 10, 2004**


Condition of the calibrated item **In Tolerance (according to the specific calibration document)**

This calibration certificate documents the traceability to national standards, which realize the physical units of measurements (SI).
 The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility; environment temperature 22 ± 2 degrees Celsius and humidity < 75%.

Calibration Equipment used (M&TE critical for calibration)

Model Type	ID #	Cal Date (Calibrated by, Certificate No.)	Scheduled Calibration
Power meter EPM E4419B	GB41293874	5-May-04 (METAS, No 251-00388)	May-05
Power sensor E4412A	MY41495277	5-May-04 (METAS, No 251-00388)	May-05
Reference 20 dB Attenuator	SN: 5086 (20b)	3-May-04 (METAS, No 251-00389)	May-05
Fluke Process Calibrator Type 702	SN: 6295803	8-Sep-03 (Sintrel SCS No. E-030020)	Sep-04
Power sensor HP 8481A	MY41092180	18-Sep-02 (SPEAG, in house check Oct-03)	In house check: Oct 05
RF generator HP 8684C	US3642U01700	4-Aug-99 (SPEAG, in house check Aug-02)	In house check: Aug-05
Network Analyzer HP 8753E	US37390585	18-Oct-01 (SPEAG, in house check Oct-03)	In house check: Oct 05

	Name	Function	Signature
Calibrated by:	Nico Vetterli	Technician	
Approved by:	Katja Polkovic	Laboratory Director	

Date issued: June 10, 2004

This calibration certificate is issued as an intermediate solution until the accreditation process (based on ISO/IEC 17025 International Standard) for Calibration Laboratory of Schmid & Partner Engineering AG is completed.

Probe ET3DV6

SN:1604

Manufactured:	July 30, 2001
Last calibrated:	August 26, 2002
Repaired:	June 3, 2004
Recalibrated:	June 10, 2004

Calibrated for DASY Systems

(Note: non-compatible with DASY2 system!)

ET3DV6 SN:1604

June 10, 2004

DASY - Parameters of Probe: ET3DV6 SN:1604**Sensitivity in Free Space**

NormX	1.90 $\mu\text{V}/(\text{V}/\text{m})^2$
NormY	1.82 $\mu\text{V}/(\text{V}/\text{m})^2$
NormZ	1.92 $\mu\text{V}/(\text{V}/\text{m})^2$

Diode Compression^A

DCP X	94	mV
DCP Y	94	mV
DCP Z	94	mV

Sensitivity in Tissue Simulating Liquid (Conversion Factors)

Please see Page 7.

Boundary Effect**Head 900 MHz Typical SAR gradient: 5 % per mm**

Sensor Center to Phantom Surface Distance	3.7 mm	4.7 mm
SAR _{tc} [%] Without Correction Algorithm	8.9	4.6
SAR _{tc} [%] With Correction Algorithm	0.1	0.2

Head 1800 MHz Typical SAR gradient: 10 % per mm

Sensor Center to Phantom Surface Distance	3.7 mm	4.7 mm
SAR _{tc} [%] Without Correction Algorithm	13.0	8.7
SAR _{tc} [%] With Correction Algorithm	0.2	0.1

Sensor Offset

Probe Tip to Sensor Center	2.7 mm
Optical Surface Detection	in tolerance

The reported uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor k=2, which for a normal distribution corresponds to a coverage probability of approximately 95%.


^A numerical linearization parameter: uncertainty not required

ET3DV6 SN:1604

June 10, 2004




Frequency Response of E-Field

(TEM-Cell:ifi110, Waveguide R22)

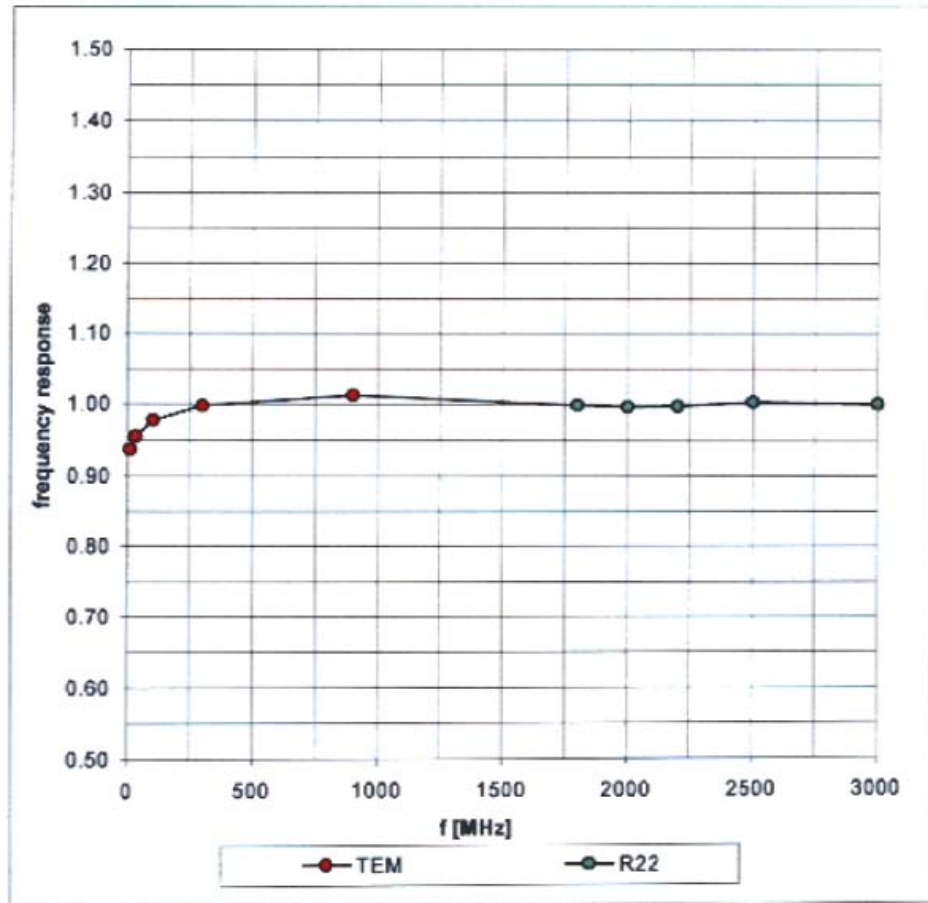

ET3DV6 SN:1604



June 10, 2004

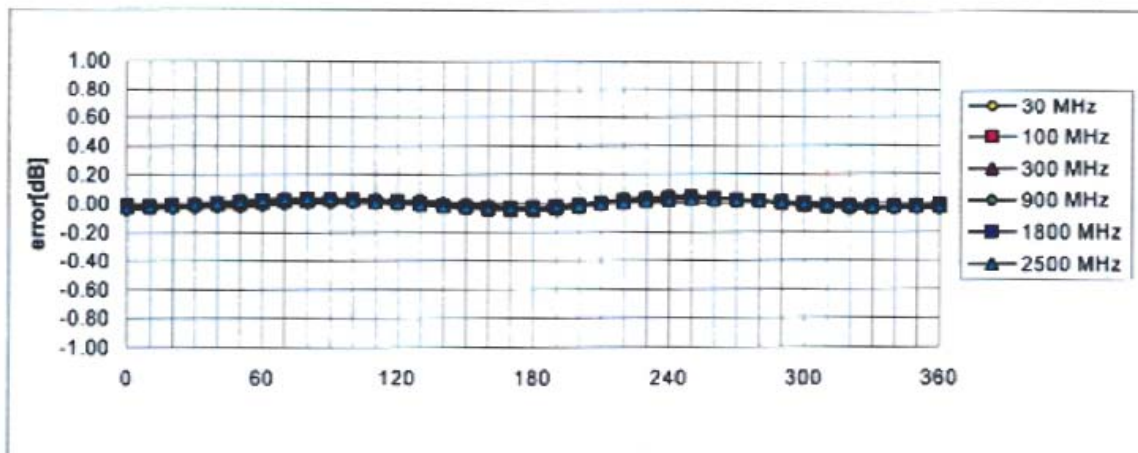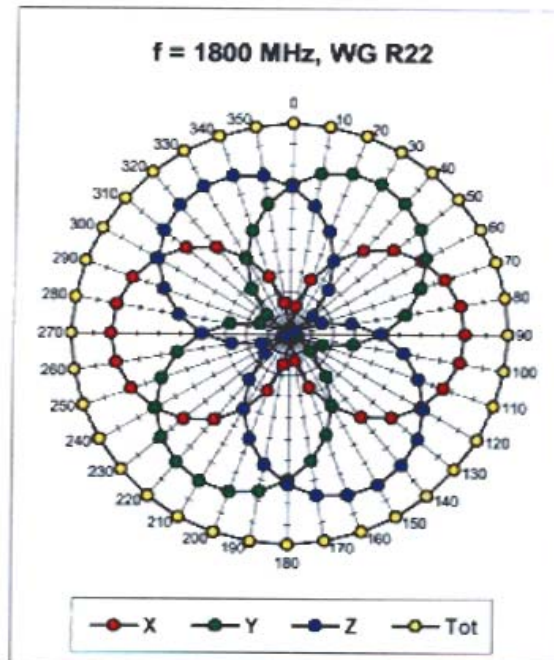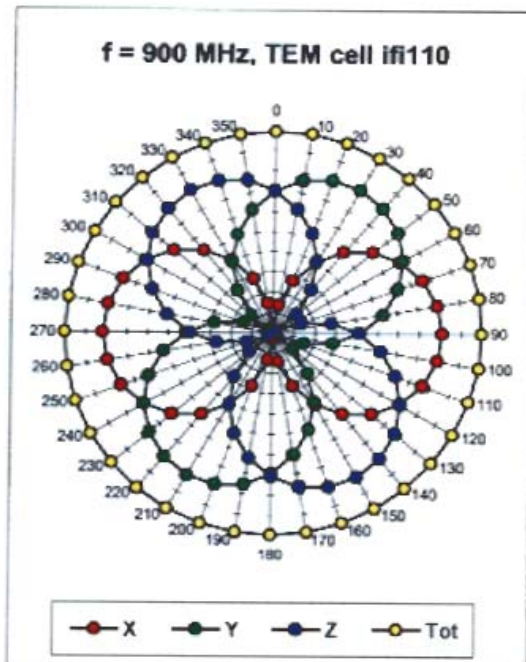Receiving Pattern (ϕ), $\theta = 0^\circ$ **Axial Isotropy Error $< \pm 0.2$ dB**

ET3DV6 SN:1604

June 10, 2004



Dynamic Range $f(\text{SAR}_{\text{head}})$ (Waveguide R22)

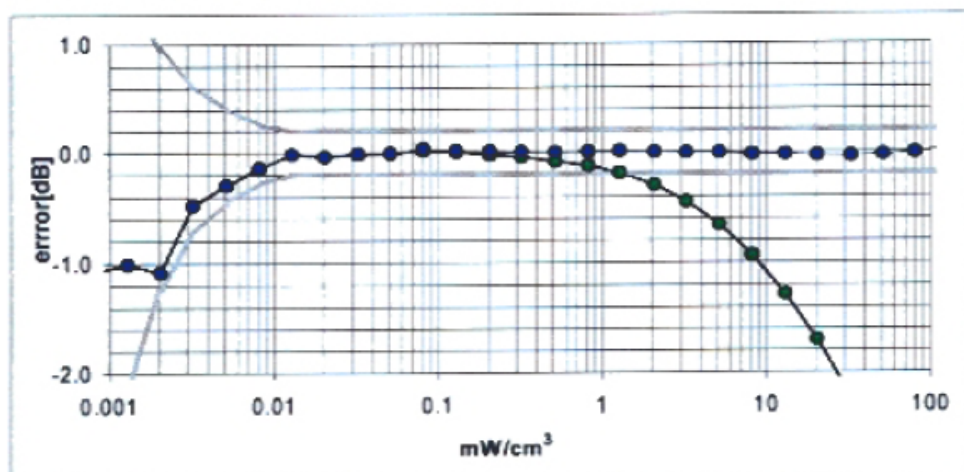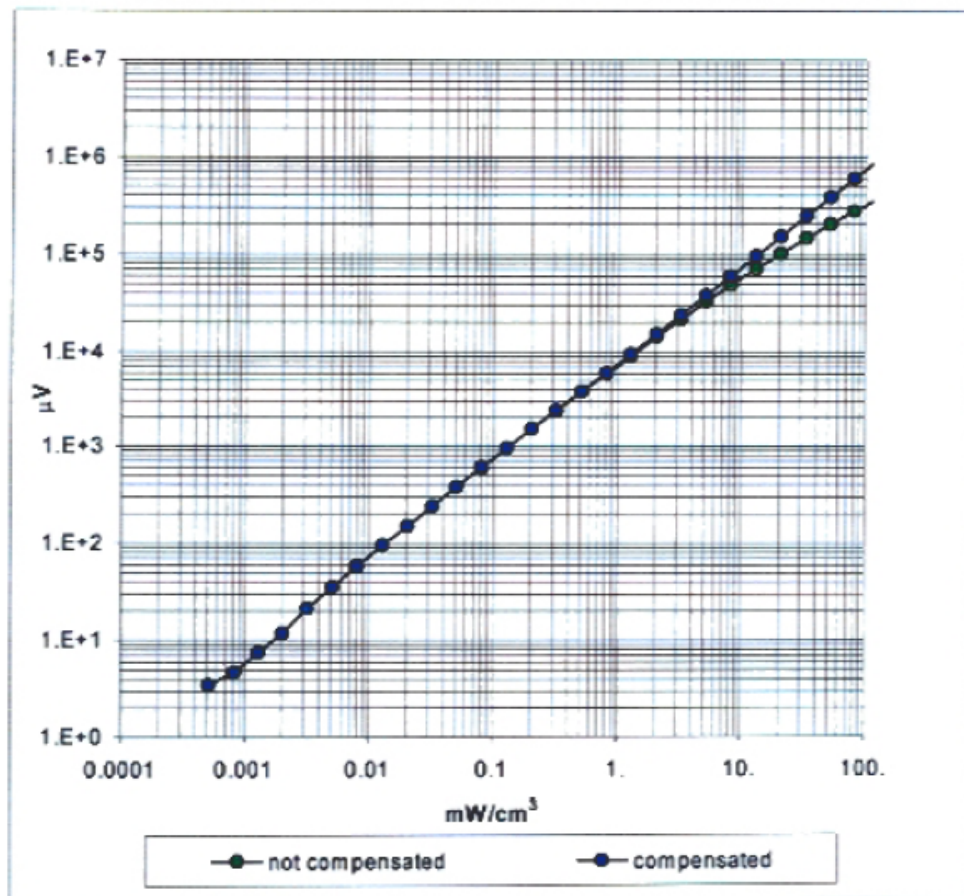**Probe Linearity Error $< \pm 0.2$ dB**

ET3DV6 SN:1604

June 10, 2004

Conversion Factor Assessment

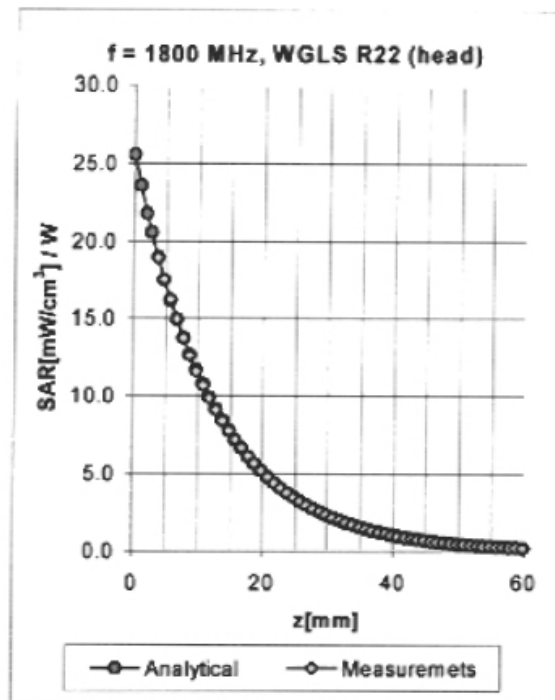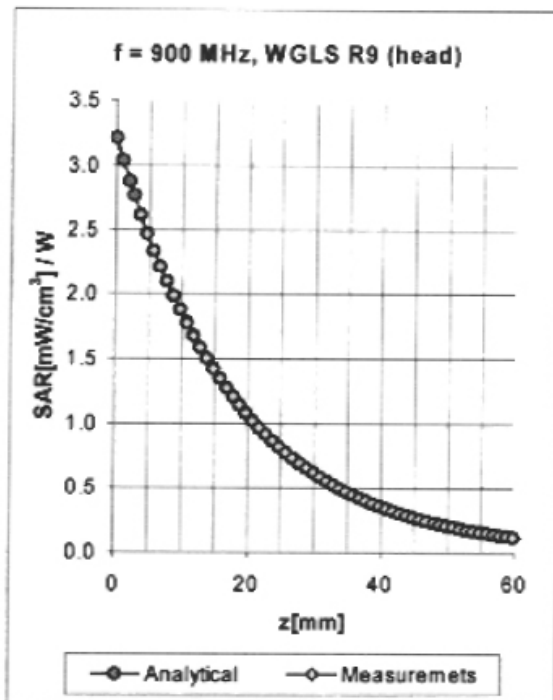


f [MHz]	Validity [MHz] ^B	Tissue	Permittivity	Conductivity	Alpha	Depth	ConvF Uncertainty
900	800-1000	Head	41.5 ± 5%	0.97 ± 5%	0.67	1.75	6.45 ± 11.3% (k=2)
1800	1710-1910	Head	40.0 ± 5%	1.40 ± 5%	0.47	2.64	5.23 ± 11.7% (k=2)

ET3DV6 SN:1604

June 10, 2004

Deviation from Isotropy in HSL

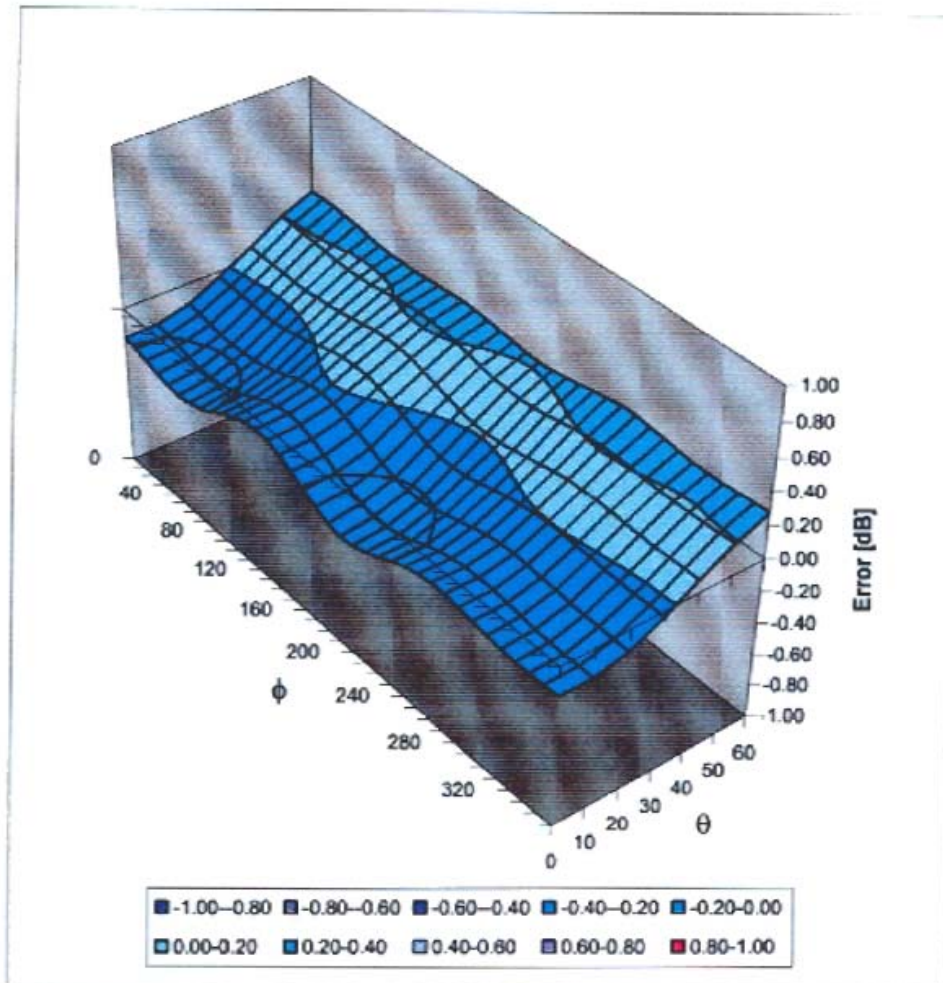Error (θ, ϕ), $f = 900$ MHz**Spherical Isotropy Error < ± 0.4 dB**

Schmid & Partner Engineering AG

s p e a g

Zeughausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, <http://www.speag.com>

Probe ES3DV2

SN: 3019

Manufactured: December 5, 2002
Last calibration: July 12, 2003

Calibrated for DASY Systems

(Note: non-compatible with DASY2 system!)

ES3DV2 SN: 3019

July 12, 2003

DASY - Parameters of Probe: ES3DV2 SN: 3019**Sensitivity in Free Space****Diode Compression**

NormX	1.03 $\mu\text{V}/(\text{V}/\text{m})^2$	DCP X	99
NormY	1.12 $\mu\text{V}/(\text{V}/\text{m})^2$	DCP Y	99
NormZ	0.98 $\mu\text{V}/(\text{V}/\text{m})^2$	DCP Z	99

Sensitivity in Tissue Simulating Liquid

Head **900 MHz** $\epsilon_r = 41.5 \pm 5\%$ $\sigma = 0.97 \pm 5\%$ mho/m
Valid for f=800-1000 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	6.4 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	6.4 $\pm 9.5\%$ (k=2)	Alpha	0.68
ConvF Z	6.4 $\pm 9.5\%$ (k=2)	Depth	1.11

Head **1800 MHz** $\epsilon_r = 40.0 \pm 5\%$ $\sigma = 1.40 \pm 5\%$ mho/m
Valid for f=1710-1910 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	5.0 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	5.0 $\pm 9.5\%$ (k=2)	Alpha	0.21
ConvF Z	5.0 $\pm 9.5\%$ (k=2)	Depth	2.78

Boundary Effect

Head **900 MHz** Typical SAR gradient: 5 % per mm

Probe Tip to Boundary		1 mm	2 mm
SAR _{be} [%] Without Correction Algorithm		4.3	1.8
SAR _{be} [%] With Correction Algorithm		0.0	0.1

Head **1800 MHz** Typical SAR gradient: 10 % per mm


Probe Tip to Boundary		1 mm	2 mm
SAR _{be} [%] Without Correction Algorithm		7.4	5.0
SAR _{be} [%] With Correction Algorithm		0.0	0.1

Sensor Offset

Probe Tip to Sensor Center	2.1	mm
----------------------------	------------	-----------



ES3DV2 SN: 3019

July 12, 2003

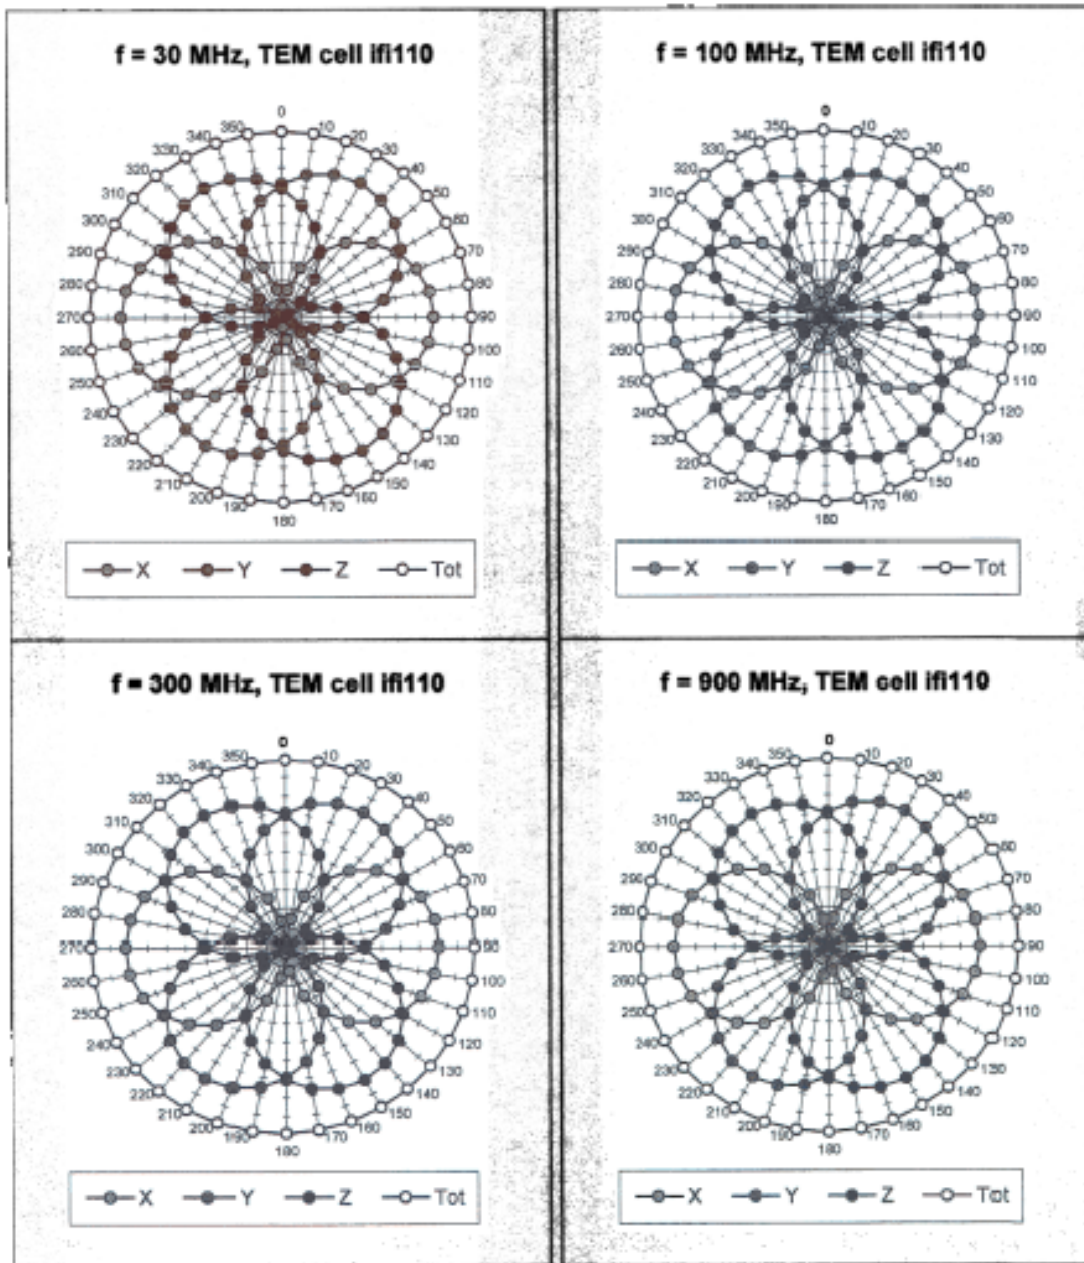Receiving Pattern (ϕ , $\theta = 0^\circ$)

ES3DV2 SN: 3019

July 2003

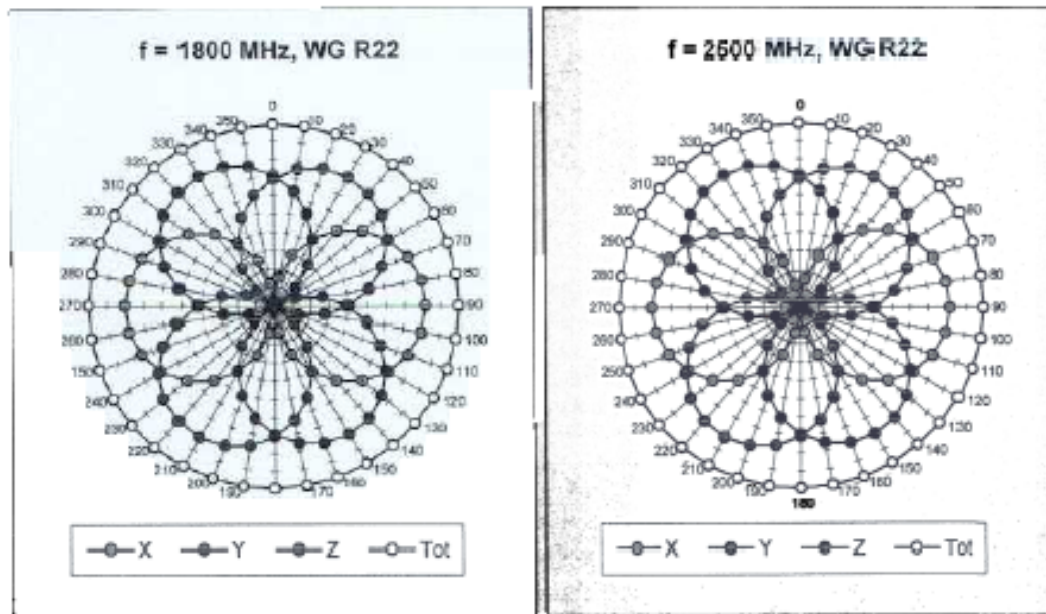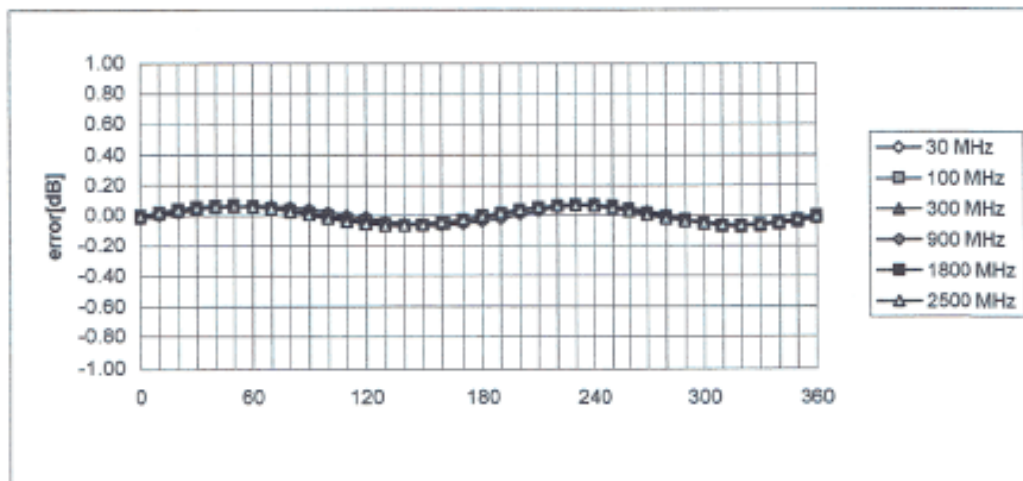Isotropy Error (ϕ), $\theta = 0^\circ$ 


Page

ES3DV2 SN: 3019

July 12, 2003

Frequency Response of E-Field



(TEM-Cell:Ifi110, Waveguide R22)

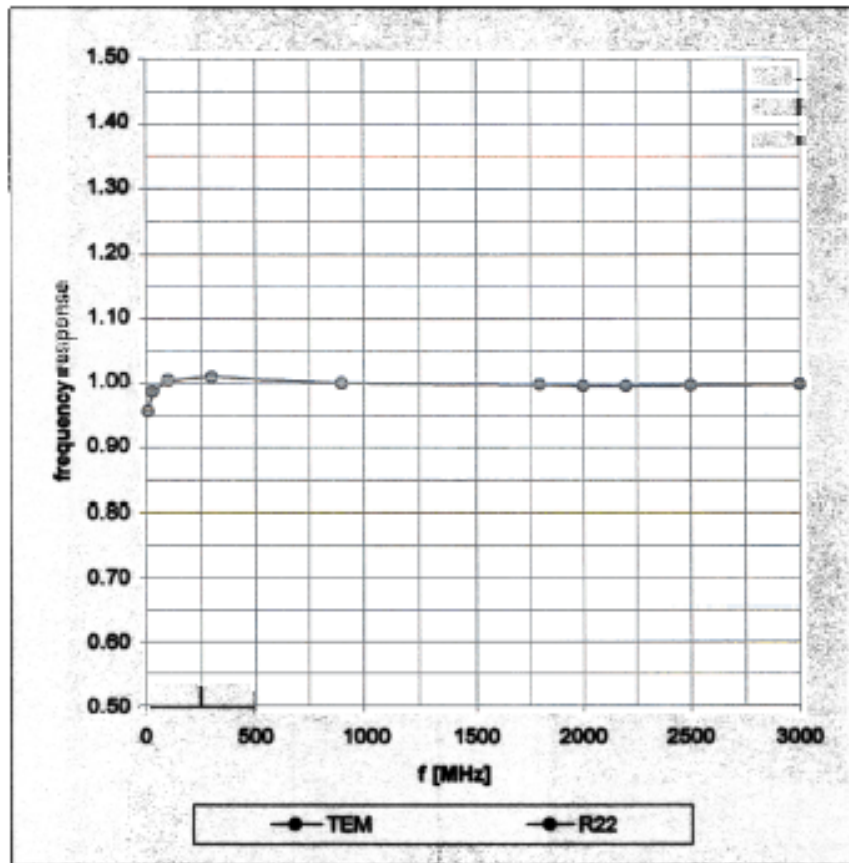

ES3DV2 SN: 3019

July 12, 2003


Dynamic Range $f(\text{SAR}_{\text{brain}})$ (Waveguide R22)

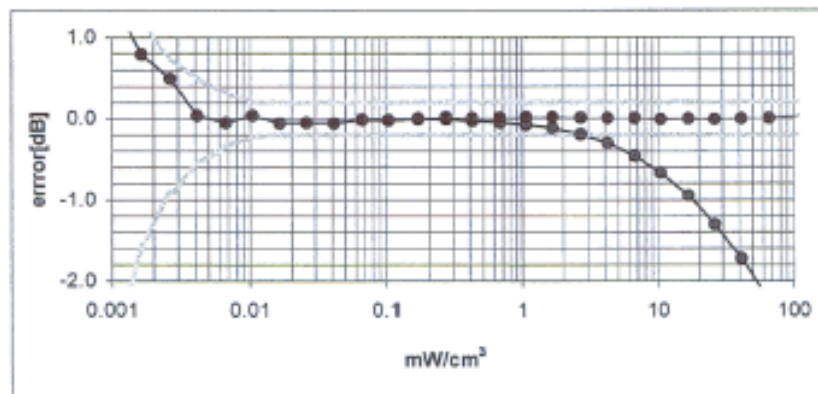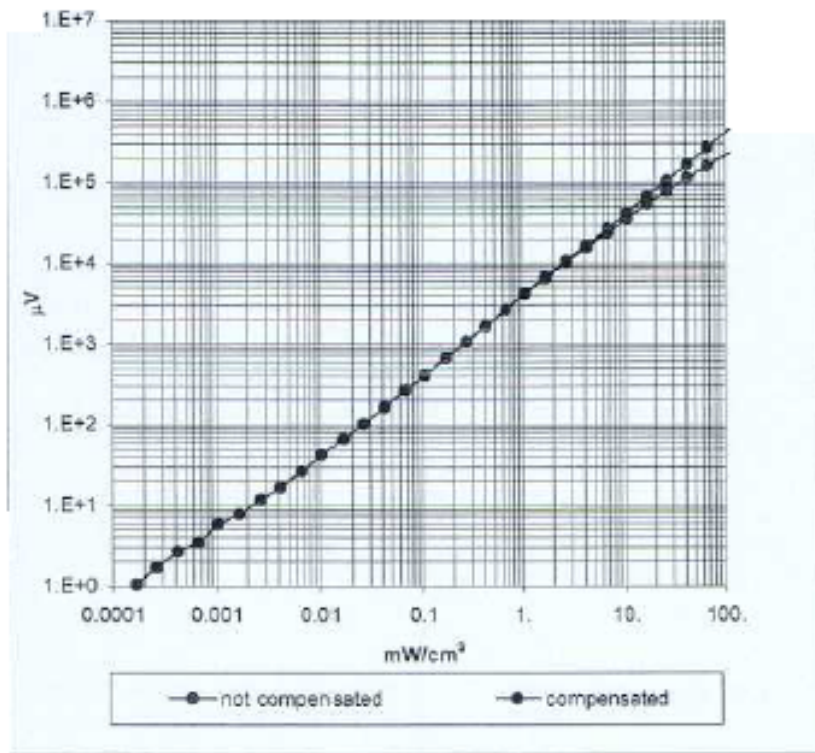

ES3DV2 SN: 3019

July 12, 2003

Conversion Factor Assessment

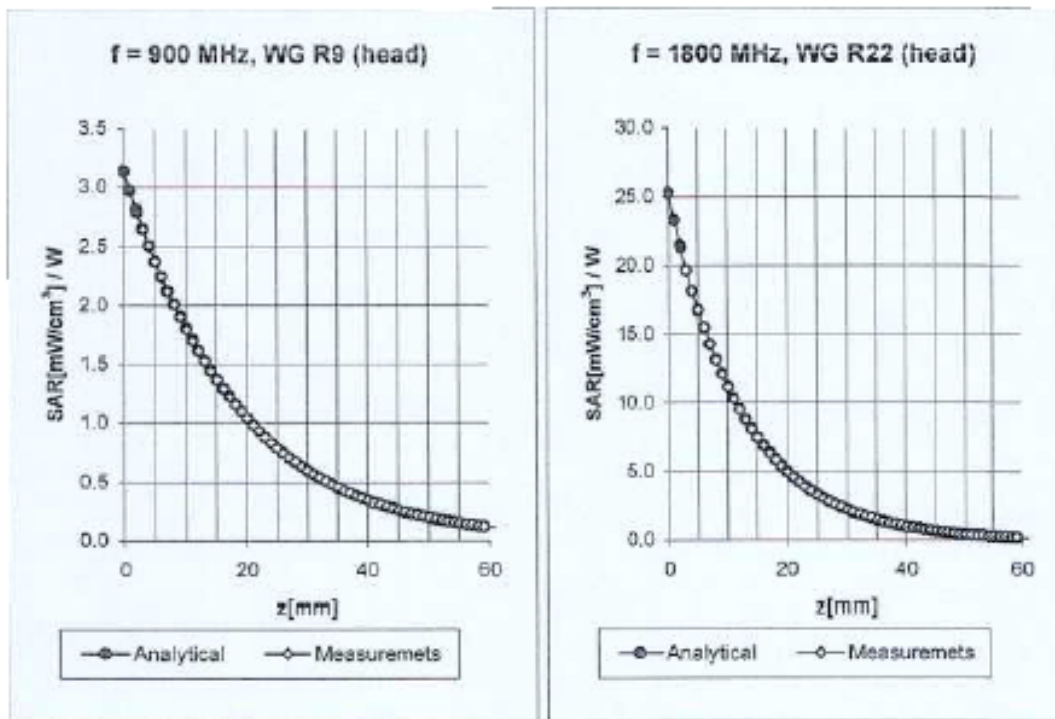

900 MHz $\epsilon_r = 41.5 \pm 5\%$ $\sigma = 0.97 \pm 5\%$ mho/m

Valid for f=800-1000 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	6.4 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	6.4 $\pm 9.5\%$ (k=2)	Alpha 0.68
ConvF Z	6.4 $\pm 9.5\%$ (k=2)	Depth 1.11

1800 MHz $\epsilon_r = 40.0 \pm 5\%$ $\sigma = 1.40 \pm 5\%$ mho/m


Valid for f=1710-1910 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	5.0 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	5.0 $\pm 9.5\%$ (k=2)	Alpha 0.21
ConvF Z	5.0 $\pm 9.5\%$ (k=2)	Depth 2.78

ES3DV2 SN: 3019

July 12, 2003

Conversion Factor Assessment

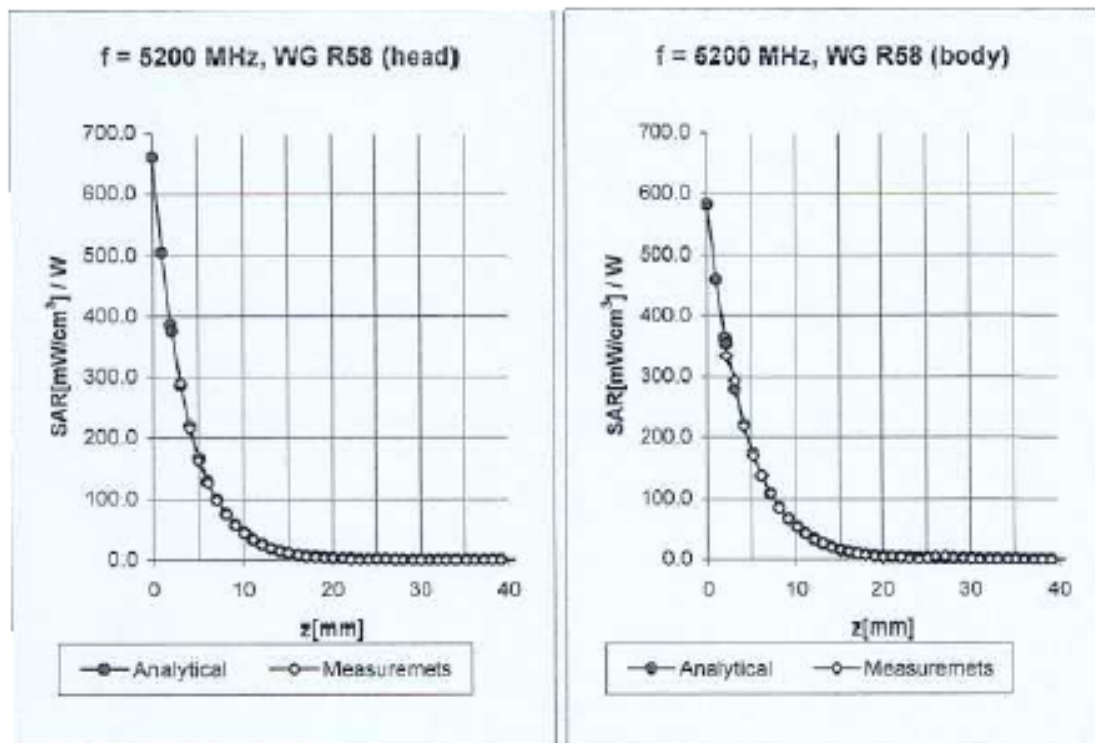

Head 5200 MHz $\epsilon_r = 36.0 \pm 5\%$ $\sigma = 4.66 \pm 5\%$ mho/m

Valid for f=4940-5460 MHz with Head Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	2.3 $\pm 14.6\%$ (k=2)	Boundary effect:	
ConvF Y	2.3 $\pm 14.6\%$ (k=2)	Alpha	1.05
ConvF Z	2.3 $\pm 14.6\%$ (k=2)	Depth	1.50

Body 5200 MHz $\epsilon_r = 49.0 \pm 5\%$ $\sigma = 5.30 \pm 5\%$ mho/m


Valid for f=4940-5460 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	1.4 $\pm 14.6\%$ (k=2)	Boundary effect:	
ConvF Y	1.4 $\pm 14.6\%$ (k=2)	Alpha	1.01
ConvF Z	1.4 $\pm 14.6\%$ (k=2)	Depth	1.85

ES3DV2 SN: 3019

July 12, 2003

Conversion Factor Assessment

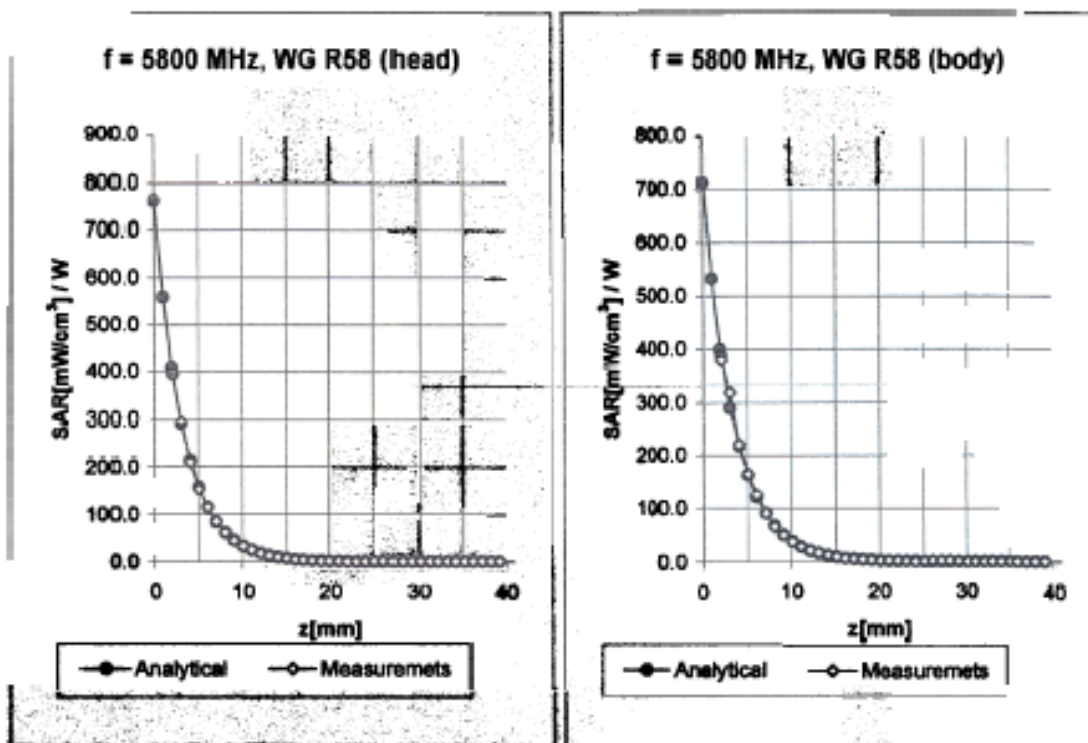

Head 5800 MHz $\epsilon_r = 35.3 \pm 5\%$ $\sigma = 5.27 \pm 5\%$ mho/m

Valid for f=5510-6090 MHz with Head Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	$1.8 \pm 14.6\%$ (k=2)	Boundary effect:	
ConvF Y	$1.8 \pm 14.6\%$ (k=2)	Alpha	0.90
ConvF Z	$1.8 \pm 14.6\%$ (k=2)	Depth	1.90

Body 5800 MHz $\epsilon_r = 48.2 \pm 5\%$ $\sigma = 6.00 \pm 5\%$ mho/m

Valid for f=5510-6090 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C


ConvF X	$1.2 \pm 14.6\%$ (k=2)	Boundary effect:	
ConvF Y	$1.2 \pm 14.6\%$ (k=2)	Alpha	1.18
ConvF Z	$1.2 \pm 14.6\%$ (k=2)	Depth	1.65

ES3DV2 SN: 3019

July 12, 2003

Deviation from Isotropy in HSL

Error ($\theta\phi$), $f = 900$ MHz

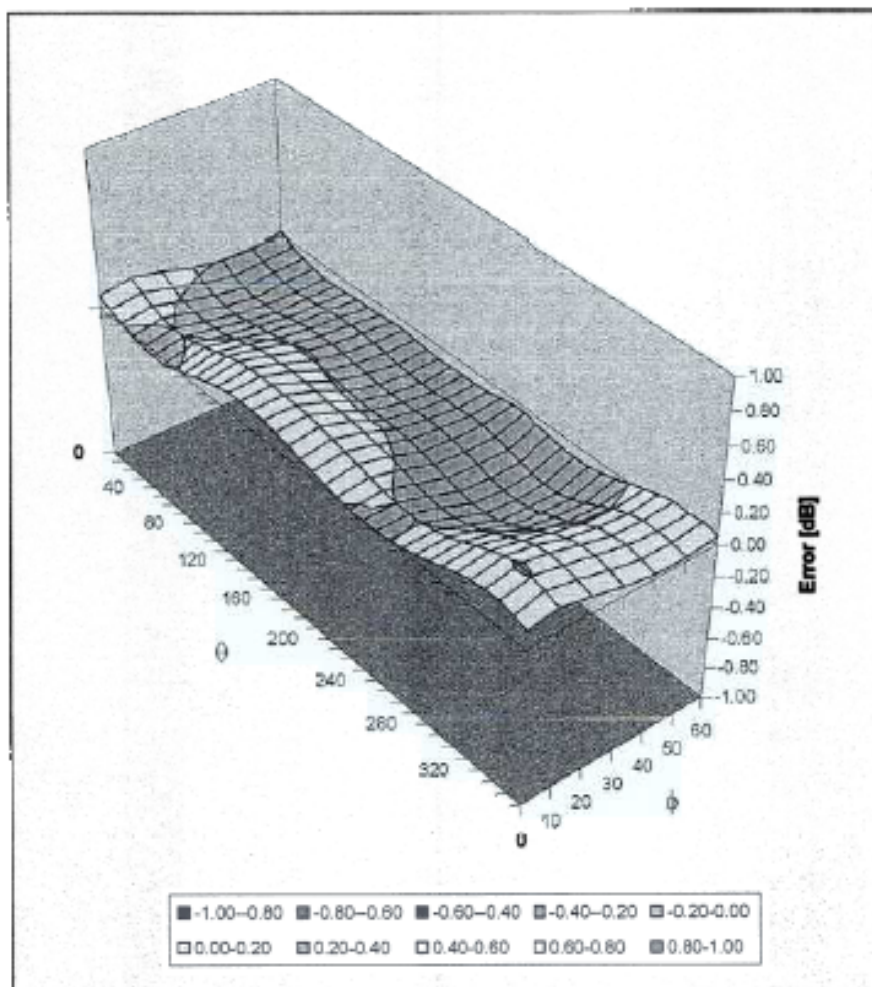

Leugnausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, <http://www.speag.com>

Probe ES3DV2

SN:3019

Additional Conversion Factors

Manufactured:	December 5, 2002
Last calibration:	July 12, 2003
Add. calibration:	October 9, 2003

Calibrated for DASY Systems

(Note: non-compatible with DASY2 system!)

DASY - Parameters of Probe: ES3DV2 SN:3019**Sensitivity in Free Space**

NormX	1.05 $\mu\text{V}/(\text{V}/\text{m})^2$
NormY	1.14 $\mu\text{V}/(\text{V}/\text{m})^2$
NormZ	0.98 $\mu\text{V}/(\text{V}/\text{m})^2$


Diode Compression

DCP X	99
DCP Y	99
DCP Z	99

Sensor Offset

Probe Tip to Sensor Center	2.1	mm
----------------------------	------------	-----------

Conversion Factor Assessment

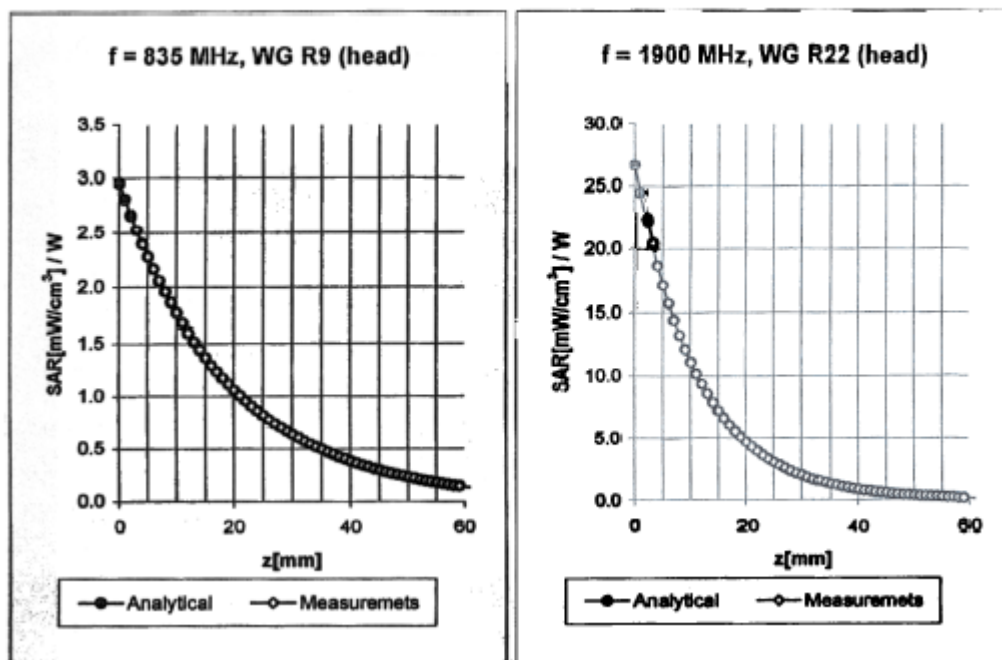

Head 835 MHz $\epsilon_r = 41.5 \pm 5\%$ $\sigma = 0.90 \pm 5\%$ mho/m

Valid for f=793-877 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X


ConvF X	6.5 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	6.5 $\pm 9.5\%$ (k=2)	Alpha	0.35
ConvF Z	6.5 $\pm 9.5\%$ (k=2)	Depth	1.46

Head 1900 MHz $\epsilon_r = 40.0 \pm 5\%$ $\sigma = 1.40 \pm 5\%$ mho/m

Valid for f=1805-1995 MHz with Head Tissue Simulating Liquid according to EN 50361, P1528-200X

ConvF X	4.7 $\pm 9.5\%$ (k=2)	Boundary effect:	
ConvF Y	4.7 $\pm 9.5\%$ (k=2)	Alpha	0.22
ConvF Z	4.7 $\pm 9.5\%$ (k=2)	Depth	3.48

Conversion Factor Assessment

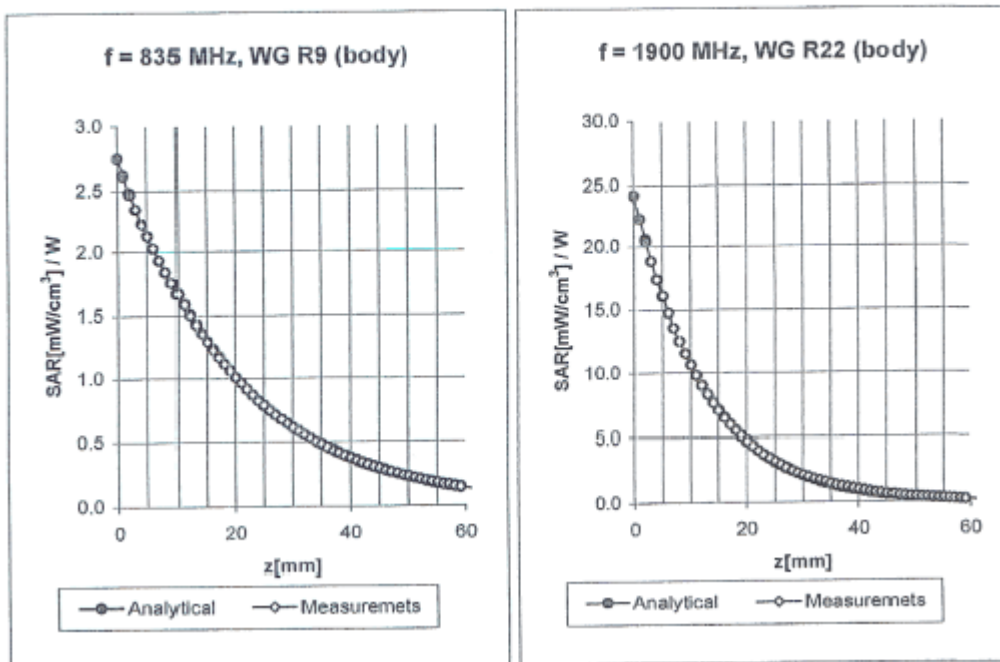

Body **835 MHz** $\epsilon_r = 55.2 \pm 5\%$ $\sigma = 0.97 \pm 5\% \text{ mho/m}$

Valid for $f=793\text{-}877 \text{ MHz}$ with Body Tissue Simulating Liquid according to OET 65 Suppl. C


ConvF X	6.1 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	6.1 $\pm 9.5\%$ (k=2)	Alpha 0.24
ConvF Z	6.1 $\pm 9.5\%$ (k=2)	Depth 2.00

Body **1900 MHz** $\epsilon_r = 53.3 \pm 5\%$ $\sigma = 1.52 \pm 5\% \text{ mho/m}$

Valid for $f=1805\text{-}1995 \text{ MHz}$ with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.6 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	4.6 $\pm 9.5\%$ (k=2)	Alpha 0.24
ConvF Z	4.6 $\pm 9.5\%$ (k=2)	Depth 2.64

Conversion Factor Assessment

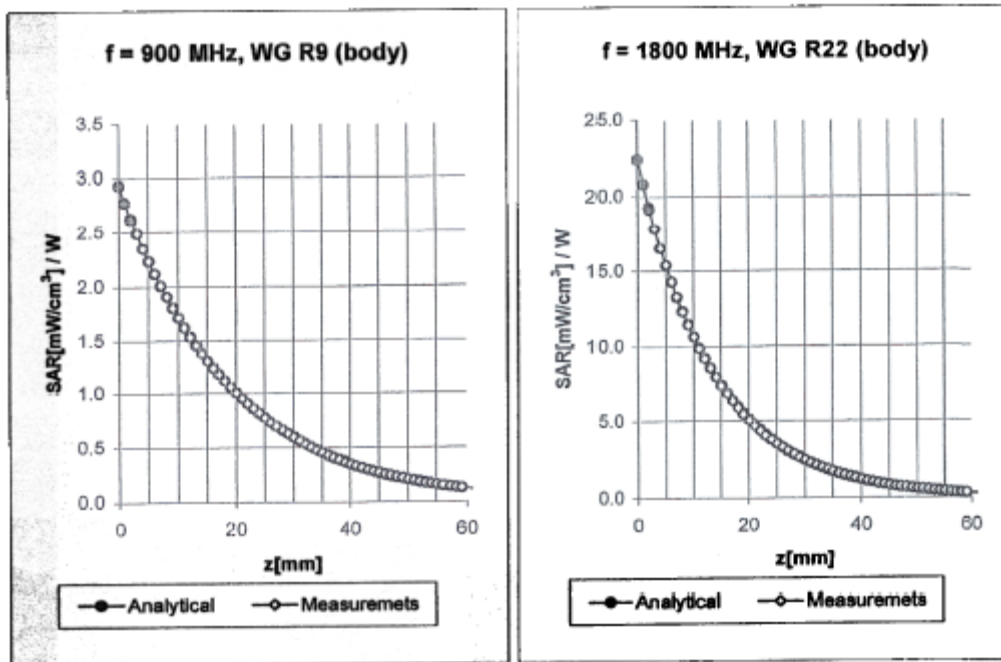

Body 900 MHz $\epsilon_r = 55.0 \pm 5\%$ $\sigma = 1.05 \pm 5\%$ mho/m

Valid for f=855-945 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C


ConvF X	6.1 $\pm$ 9.5% (k=2)	Boundary effect:
ConvF Y	6.1 $\pm$ 9.5% (k=2)	Alpha 0.27
ConvF Z	6.1 $\pm$ 9.5% (k=2)	Depth 1.82

Body 1800 MHz $\epsilon_r = 53.3 \pm 5\%$ $\sigma = 1.52 \pm 5\%$ mho/m

Valid for f=1710-1890 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.7 $\pm$ 9.5% (k=2)	Boundary effect:
ConvF Y	4.7 $\pm$ 9.5% (k=2)	Alpha 0.23
ConvF Z	4.7 $\pm$ 9.5% (k=2)	Depth 2.99

Conversion Factor Assessment

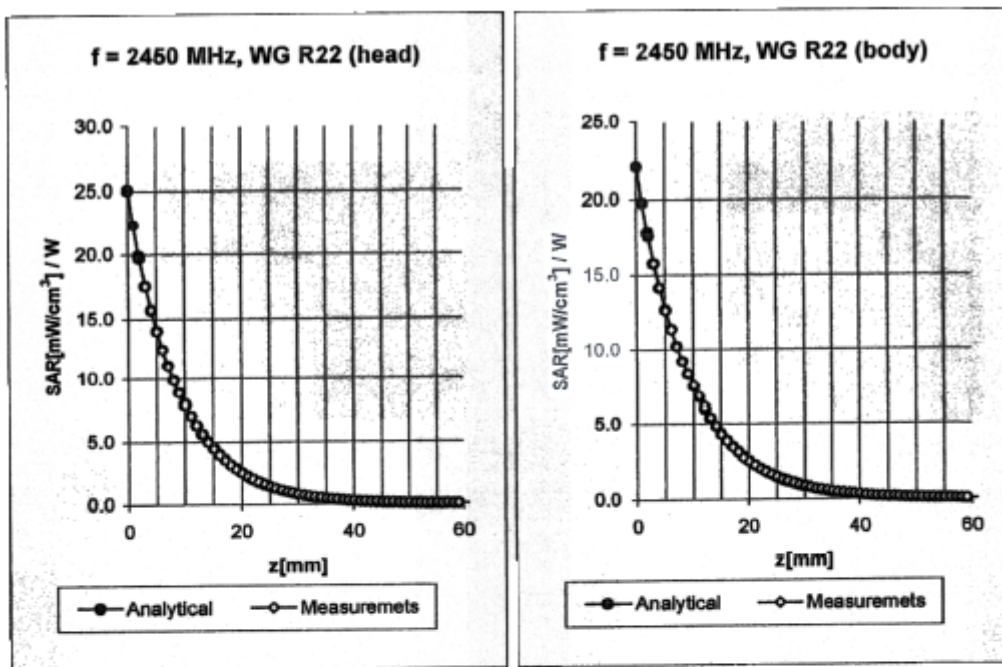

Head **2450 MHz** $\epsilon_r = 39.2 \pm 5\%$ $\sigma = 1.80 \pm 5\%$ mho/m

Valid for f=2400-2500 MHz with Head Tissue Simulating Liquid according to EN 60381, P1528-200X

ConvF X	4.5 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	4.5 $\pm 9.5\%$ (k=2)	Alpha 0.40
ConvF Z	4.5 $\pm 9.5\%$ (k=2)	Depth 1.62

Body **2450 MHz** $\epsilon_r = 52.7 \pm 5\%$ $\sigma = 1.95 \pm 5\%$ mho/m

Valid for f=2400-2500 MHz with Body Tissue Simulating Liquid according to OET 65 Suppl. C

ConvF X	4.2 $\pm 9.5\%$ (k=2)	Boundary effect:
ConvF Y	4.2 $\pm 9.5\%$ (k=2)	Alpha 0.32
ConvF Z	4.2 $\pm 9.5\%$ (k=2)	Depth 1.98

Zeughausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, http://www.speag.com

Additional Conversion Factors for Dosimetric E-Field Probe

Type:

ES3DV2

Serial Number:

3019

Place of Assessment:

Zurich

Date of Assessment:

October 13, 2003

Probe Calibration Date:

October 9, 2003

Schmid & Partner Engineering AG hereby certifies that conversion factor(s) of this probe have been evaluated on the date indicated above. The assessment was performed using the FDTD numerical code SEMCAD of Schmid & Partner Engineering AG. Since the evaluation is coupled with measured conversion factors, it has to be recalculated yearly, i.e., following the re-calibration schedule of the probe. The uncertainty of the numerical assessment is based on the extrapolation from measured value at 900 MHz or at 1800 MHz.

Assessed by:



ES3DV2-SN:3019

October 13, 2003

Zeughausstrasse 43, 8004 Zurich, Switzerland
Phone +41 1 245 9700, Fax +41 1 245 9779
info@speag.com, http://www.speag.com

Dosimetric E-Field Probe ES3DV2 SN:3019

Conversion factor ($\pm$ standard deviation)

150 MHz ConvF **$8.7 \pm 8\%$**

$\epsilon_r = 52.3 \pm 5\%$
 $\sigma = 0.76 \pm 5\%$ mho/m
(head tissue)

150 MHz ConvF **$8.3 \pm 8\%$**

$\epsilon_r = 61.9 \pm 5\%$
 $\sigma = 0.80 \pm 5\%$ mho/m
(body tissue)

450 MHz ConvF **$7.4 \pm 8\%$**

$\epsilon_r = 43.5 \pm 5\%$
 $\sigma = 0.87 \pm 5\%$ mho/m
(head tissue)

450 MHz ConvF **$7.3 \pm 8\%$**

$\epsilon_r = 56.7 \pm 5\%$
 $\sigma = 0.94 \pm 5\%$ mho/m
(body tissue)

ES3DV2-SN:3019

October 13, 2003