

**Advanced Bluetooth
Wireless Product
BLUE EAGLE II**

Repaire Center Information]
Company name: Mr Handsfree Inc.
Address:1738 Rue Des Amarantes,
Carignan, J3L 4Z9Quebec, Canada
E-nail: Support@mrhandsfree.com




Advanced Bluetooth Wireless Product

Contents

Introduction	1
Feature List	3
Safety and General Information	4
Before Using	6
Package contents	6
Turning the unit on	7
Installing the unit in a vehicle	8
Location of Controls	9
Function Operations	11
Pairing	11
Adjusting speaker volume	13
Adjusting ringer volume	15

Troubleshooting

Symptom	Check & Remedy
Nothing appears on LCD display	<ul style="list-style-type: none"> ● Check that the LCD display is connected to base unit properly. ● Check that the base unit is connected to cigarette lighter properly.
No operation	<ul style="list-style-type: none"> ● Check that the base unit is connected to cigarette lighter properly. ● Check that the base unit is turned on. ● Check the pairing is successful.
No LED indicator	<ul style="list-style-type: none"> ● Check that the base unit is connected to cigarette lighter properly. ● Check that the base unit is turned on.
Cannot work	<ul style="list-style-type: none"> ● Restart the unit
Disconnect	<p>When the carkit and the cell phone have been paired with each other:</p> <p>(1) Please take note carkit turns off automatically when the cigarette lighter is off. Some cigarette lighter turns off when the engine is shut down while some are still on. It depends on the car.</p> <p>(2) On the other hand, some cell phones may be able to connect to carkit automatically or by pressing the  button once after the cell phone is being turned off and turned on again, or being far away then go back within range again. But some cell phones don't. (In this case, please connect them with each other manually, for details please refer to your cell phone's manual.) It depends on your cell phone.</p>

Care and Maintenance

Your advanced BLUE EAGLE II is a product of superior design and should be treated with care. The suggestions below will help you to enjoy your product for many years.

- Keep the product dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the product in dusty, dirty areas.
- Do not attempt to open the product. Non-expert handling may damage it.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the product. Use a clean, soft cloth that is slightly damp to clean the product.
- If the product won't be used for a long time, remove it from cigarette lighter and store it with safely protected.

Making a call	16
Answering a call	17
Ending a call	18
Caller ID System Operations	19
Viewing incoming numbers	19
Calling back the last 9 incoming numbers	20
Transferring a call	20
Status Indicators	22
Care and Maintenance	23
Troubleshooting	24

Introduction

Your Bluetooth wireless product BLUE EAGLE II

The Bluetooth wireless product BLUE EAGLE II is developed for installation in motor vehicles to enable handsfree operation of your mobile phone. It is based on Bluetooth wireless technology connects to a compatible phone without wires. It is easily convert your mobile phone communication into this in-car solution, talking through its high quality speaker and microphone.

The product is intended for use with any mobile phones which support handsfree and(or) headset profile. For the mobile phones which support handsfree and headset profiles, the BLUE EAGLE II will try to connect to mobile phone with handsfree profile first, if it fails, then with headset profile. **If your mobile phone and the BLUE EAGLE II connects to each other with headset profile, the following function may be invalid.**
LCD display, Voice dialling, Last number redial and rejecting a call.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

What is Bluetooth wireless technology

Bluetooth wireless technology propels you into a new dimension in connectivity.

Status Indicators

Status	Indicators
Pairing mode	The Red LED and Blue LED flash alternately.
Standby mode	The Blue LED flashes every second.
In talk mode	The Blue LED lights steadily.

Caller ID System Operations

Transferring a call (continued)

2. Press  for about 3 seconds and then a confirmation tone will be heard. Then the call is transferred to mobile phone, and the unit returns to Standby mode.

CAUTION:

1. To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
2. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

Section 15.21 Information to user. □

The users manual or instruction manual for an intentional or unintentional radiator □ shall caution the user that changes or modifications not expressly approved by the party □ responsible for compliance could void the user's authority to operate the equipment. □

Introduction

What is Bluetooth wireless technology (continued)

Bluetooth devices communicate without wires, using built-in radio transceivers that operate on a globally available radio frequency to ensure worldwide compatibility. Your Bluetooth wireless product BLUE EAGLE II can connect to other Bluetooth devices within a range of approximate 10 metres.

The wireless connection between the compatible devices established using Bluetooth technology is free of charge for the user. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.


Feature List

1. Bluetooth compatible
2. Up to 10 metres range
3. LCD displays calling numbers
4. Talk time display
5. Full duplex
6. Easy installation
7. Speaker and ringer volume adjustment
8. Call back function
9. Voice dialing function
10. Transfers a call from the unit to mobile phone

Caller ID System Operations

Calling back the last 5 incoming numbers


1. In Standby mode, press  or  button repeatedly to select the number you want to call back.
2. Press  once to call back.

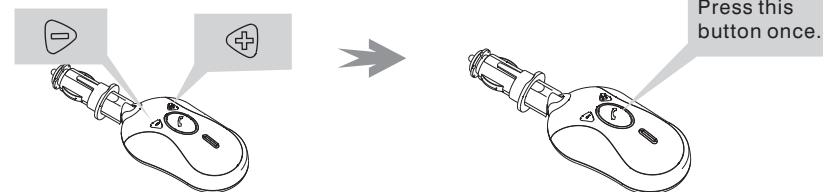

Transferring a call

During a call, the feature allows you to transfer a call from the unit to your mobile phone or vice versa so that you can accept the call in private or in public conveniently.

To transfer a call from the unit to mobile phone



1. When a call is received, press  to answer the call.


Caller ID System Operations

When a call is received, the LCD display shows caller's number, if your local telephone company provides the Caller ID service. The last 5 incoming numbers will be saved in the Caller ID list, and you can use the list to dial the numbers. If the storage is full, the oldest number will be replaced by the new one.



Viewing incoming numbers

In Standby mode, press  or  button repeatedly to view the incoming numbers.

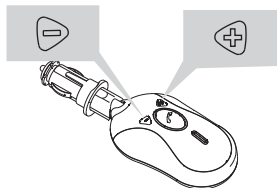

Safety and General Information

Important information on safe and efficient operation.

Read this information before using your device.

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Electromagnetic interference/compatibility

Nearly every electronic device is susceptible to electromagnetic interference if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your device in any facility where posted notices instruct you to do so.

Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your device when on board an aircraft. Any use of a device must be in accordance with appliance regulations per airline crew instructions.

Safety and General Information

Medical devices

Hearing aids

Some devices may interfere with some hearing aids. In the event of such interference, you may want to consult with your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.


Function Operations

Ending a call

Press  once.

OR

End call from your mobile phone's keypad.

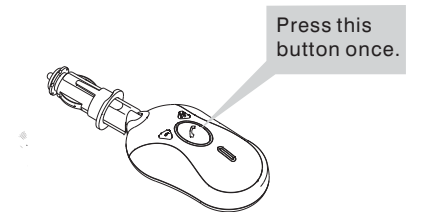


Function Operations

Making a call (continued)

Note:

- After activating voice-dialling function, the unit starts timer and the LCD display shows the talk time.

05:30

Answering a call

When a call is received, the unit rings and the LCD display shows the caller's number.


VOL
05926036442

Press  to answer the call.

OR

Answer the call with your mobile phone's keypad.

Note:


- If the call is answered by pressing , after getting through the line, the unit starts to time and the LCD display shows the talk time.

05:30


Before Using

Package contents

Once you have opened the gift box, check to make sure that you have all the parts shown below. If any piece is missing or broken, please call your dealer.



Base unit



Display unit
with coil cord



User's manual

Before Using



Turning the unit on

When you turn on the ignition of your car, the unit is turned on automatically. Then the Blue LED flashes every second, and the LCD display shows the icon "VOL". Then unit enters Standby mode and is ready for use.



Function Operations

Note:


- When you use  or  button of the unit to adjustment the ringer volume, your mobile phone's ringer volume may be adjusted accordingly (depending on your mobile phone).

Making a call


Using your mobile phone

1. In Standby mode, dial the number by keypad.
2. Press mobile phone's "send" key.

Using the unit's voice-dialling (if supported by your mobile phone)

1. In Standby mode, press .

Note:


- The time of pressing  should be

more than 0.2 seconds and less than 1.6 seconds.

2. You will then hear the voice-activation tone and your mobile will remind you to speak the voice tag. After that, speak a voice tag which matches your desired number that was recorded in your mobile phone. Then the unit will repeat your voice tag and dial out the number.

Function Operations


Adjusting ringer volume

When a call is received, the unit rings. At the moment you can press **Volume Up** or **Volume Down** button or use your mobile phone(depends on your mobile phone) to adjust the ringer volume. There are 5 levels for adjusting. During adjusting, the icon  varies according to the volume levels. The more bars, the higher the volume.

1.Press Volume Up button to increase ringer volume.

OR


Use the volume up switch of your mobile phone to increase ringer volume (depending on your mobile phone).

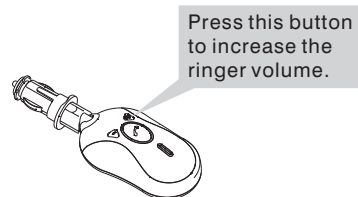

2.Press Volume Down button to decrease ringer volume.

OR

Use the volume down switch of your mobile phone to decrease ringer volume (depending on your mobile phone).

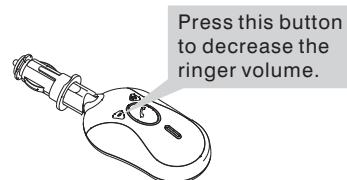

Before Using

Installing the unit in a vehicle

1. Insert the plug of coil cord into the coil cord jack on the base unit. Make sure the plug clicks into place. See figure A.

2. Installing the base unit (See figure B)

a. Insert the base unit into the cigarette lighter of your vehicle. See figure B.

b. Push the adjuster in the arrow direction to fasten the base unit.

3. Paste the LCD display unit at proper place where you can watch the LCD display easily.

The microphone mouth should be pointed toward to your mouth.

See figure C.

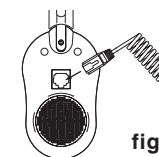


figure A

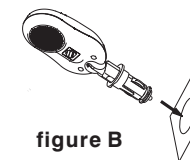


figure B





figure C

Location of Controls

Base unit

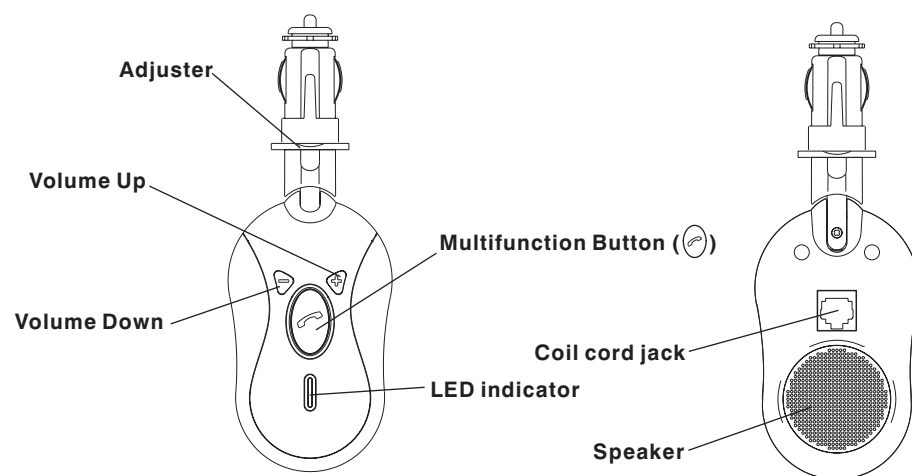

Function Operations

Adjusting speaker volume(continued)

2. Press button to increase speaker OR Use the volume down switch of your mobile phone to decrease speaker volume (depending on your mobile phone). See figure 2.

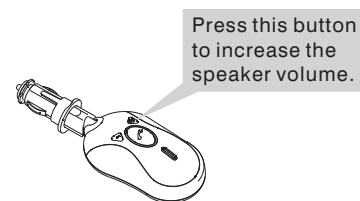


Figure 1

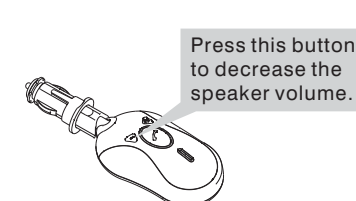


Figure 2

Note:

- When you use or button of the unit to adjustment the speaker volume, your mobile phone's talk volume may be adjusted accordingly (depending on your mobile phone).

Function Operations




Pairing(continued)


Note:

- After the unit enters pairing mode, if there is no device linked within 2 minutes, the unit will return to Standby mode.
- If the pairing is successful, the LCD display shows "VOL" and the unit enters Standby mode. Then the unit and mobile phone are ready for use.

VOL
▬▬▬


Adjusting speaker volume

You can press  or  button or use your mobile phone (depending on your mobile phone) to adjust the speaker volume during conversation. There are 5 levels for adjusting. During adjusting, the icon  varies according to the volume levels. The more bars, the higher the volume.

1. Press  button repeatedly to increase speaker volume. See figure 1. OR Use the volume up switch of your mobile phone to increase speaker volume (depending on your mobile phone).

Location of Controls


Display unit

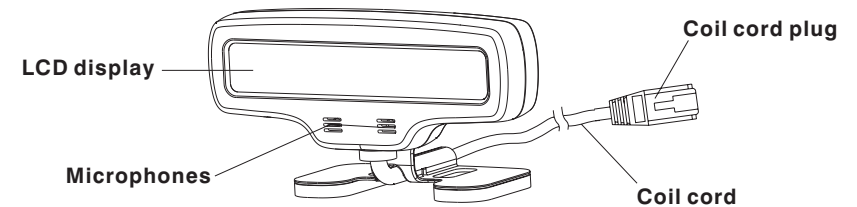

Function Operations

Pairing

Your BLUE EAGLE II can store pairing information for up to five different devices equipped with Bluetooth wireless technology. When an attempt to pair to more than five devices is made, the oldest paired device is removed from the memory.


When any of the paired devices are in the range of 10 metres and power is on, the unit will automatically initiate a paired connection with the **last** device it was connected to. If not, press  to quickly start the connection.

If you want to connect to another device of the paired devices, you could initiate the connection from your mobile phone (please refer to your mobile phone's manual). If you want to connect to other devices which haven't paired with the unit, you must initiate the pairing process as follows.

With the unit and your mobile phone in close proximity, do the following steps to pair them.

Function Operations

Pairing(continued)

1. When the unit is in Standby mode press and hold  until the Red LED and Blue LED flash alternately. Then the unit enters pairing mode, and a continuous line flashes on the LCD.

Note:

- You will hear a prompt tone which indicates the unit is turned on. You should continually hold the button until the Red LED and Blue LED flash alternately. Then the unit enters pairing mode.

2. Initiate the pairing process using the mobile phone that you want to match. Then the phone will remind you to enter passkey. The default passkey is "0000". Please refer to the user's manual of your mobile phone for "pairing process".

Press and hold this button.

