

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

## **Appendix 4. Photographs**

This appendix contains the following photographs:

Photo Reference Number	Title
PHT/76607JD01/001	Test configuration for the measurement of Specific Absorption Rate (SAR)
PHT/76607JD01/002	Touch Left
PHT/76607JD01/003	Tilt Left
PHT/76607JD01/004	Touch Right
PHT/76607JD01/005	Tilt Right
PHT/76607JD01/006	Front of EUT Facing Phantom
PHT/76607JD01/007	Rear of EUT Facing Phantom
PHT/76607JD01/008	General Setup With PHF
PHT/76607JD01/009	Rear of EUT Facing Phantom With PHF
PHT/76607JD01/010	Front of EUT
PHT/76607JD01/011	Rear of EUT
PHT/76607JD01/012	Internal View of EUT
PHT/76607JD01/013	Battery View
PHT/76607JD01/014	PHF
PHT/76607JD01/015	PHF Converter
PHT/76607JD01/016	1900 MHz Head Fluid Level
PHT/76607JD01/017	1900 MHz Body Fluid Level

---

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/001: Test configuration for the measurement of Specific Absorption Rate (SAR)




Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/002: Touch Left

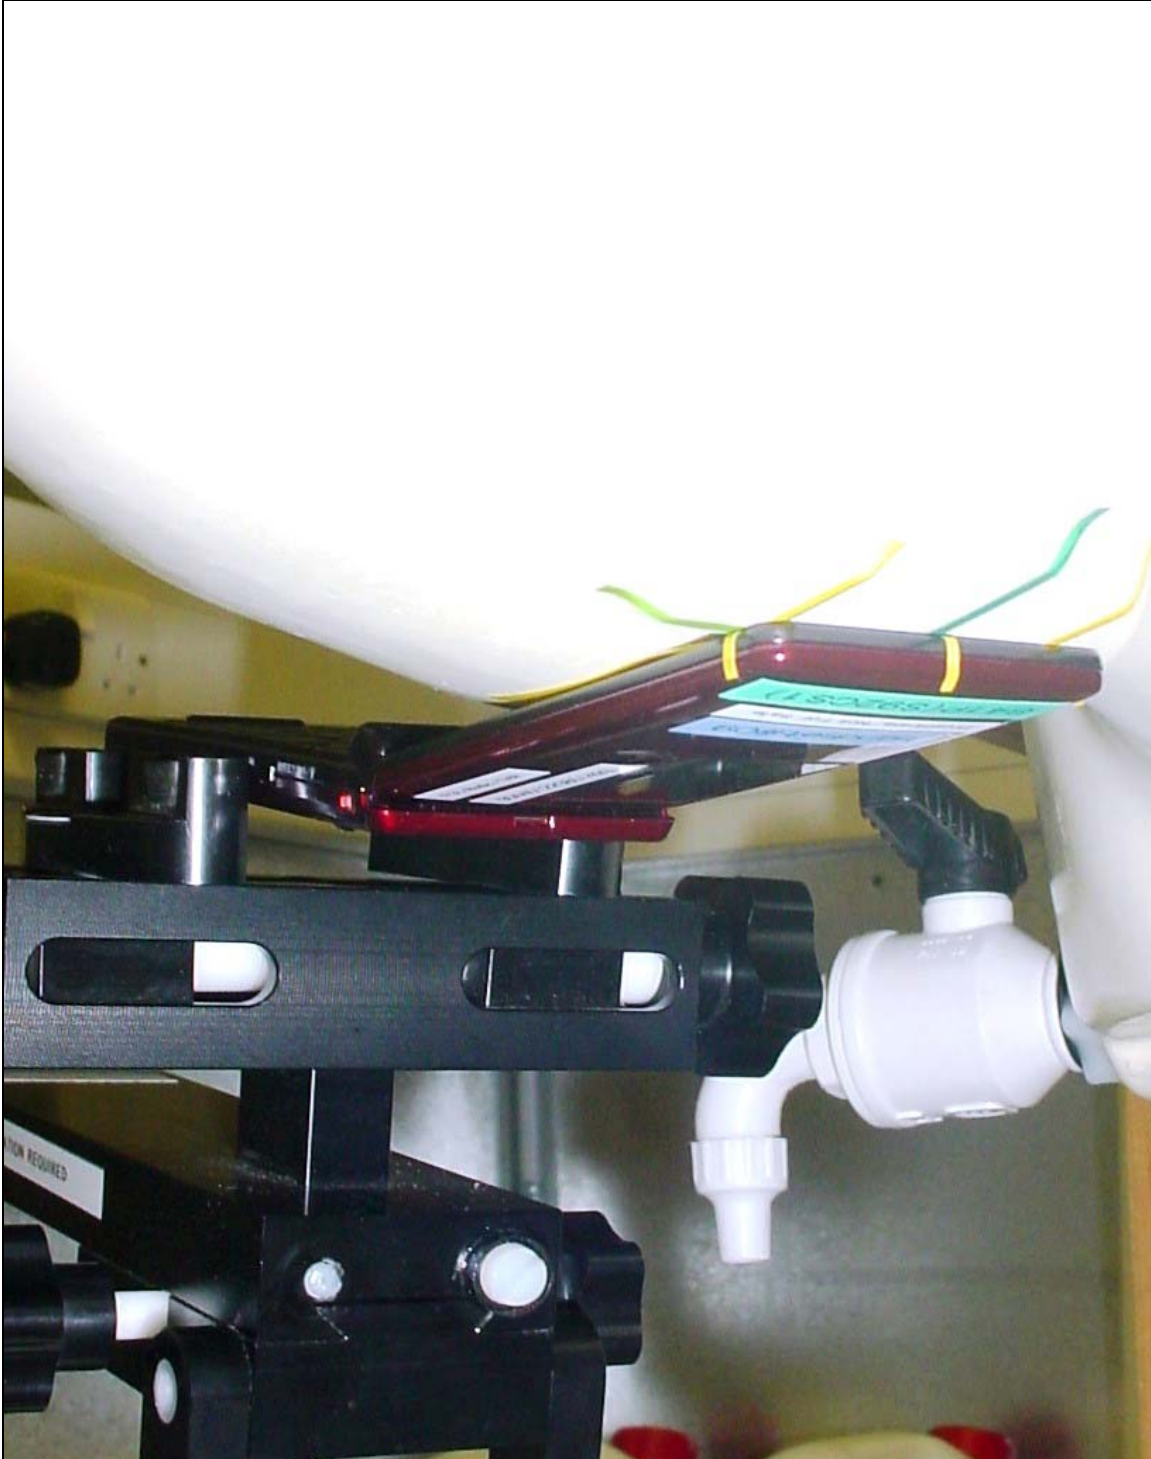


Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/003: Tilt Left

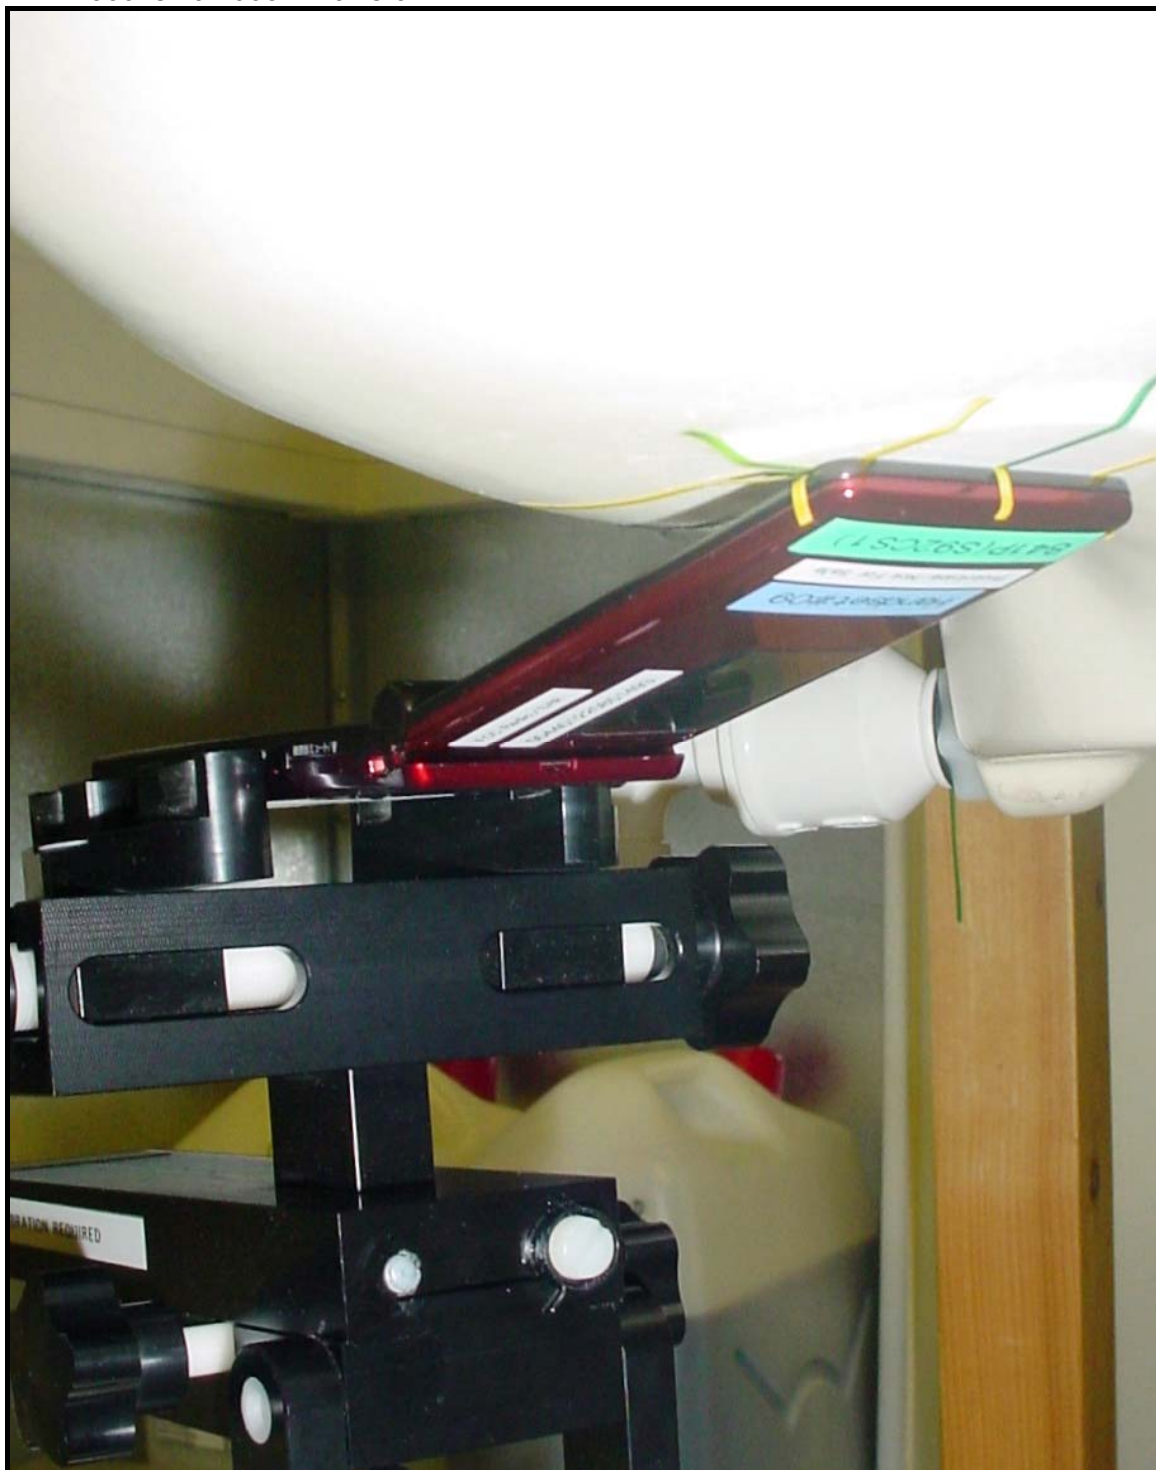



Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/004: Touch Right




Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/005: Tilt Right

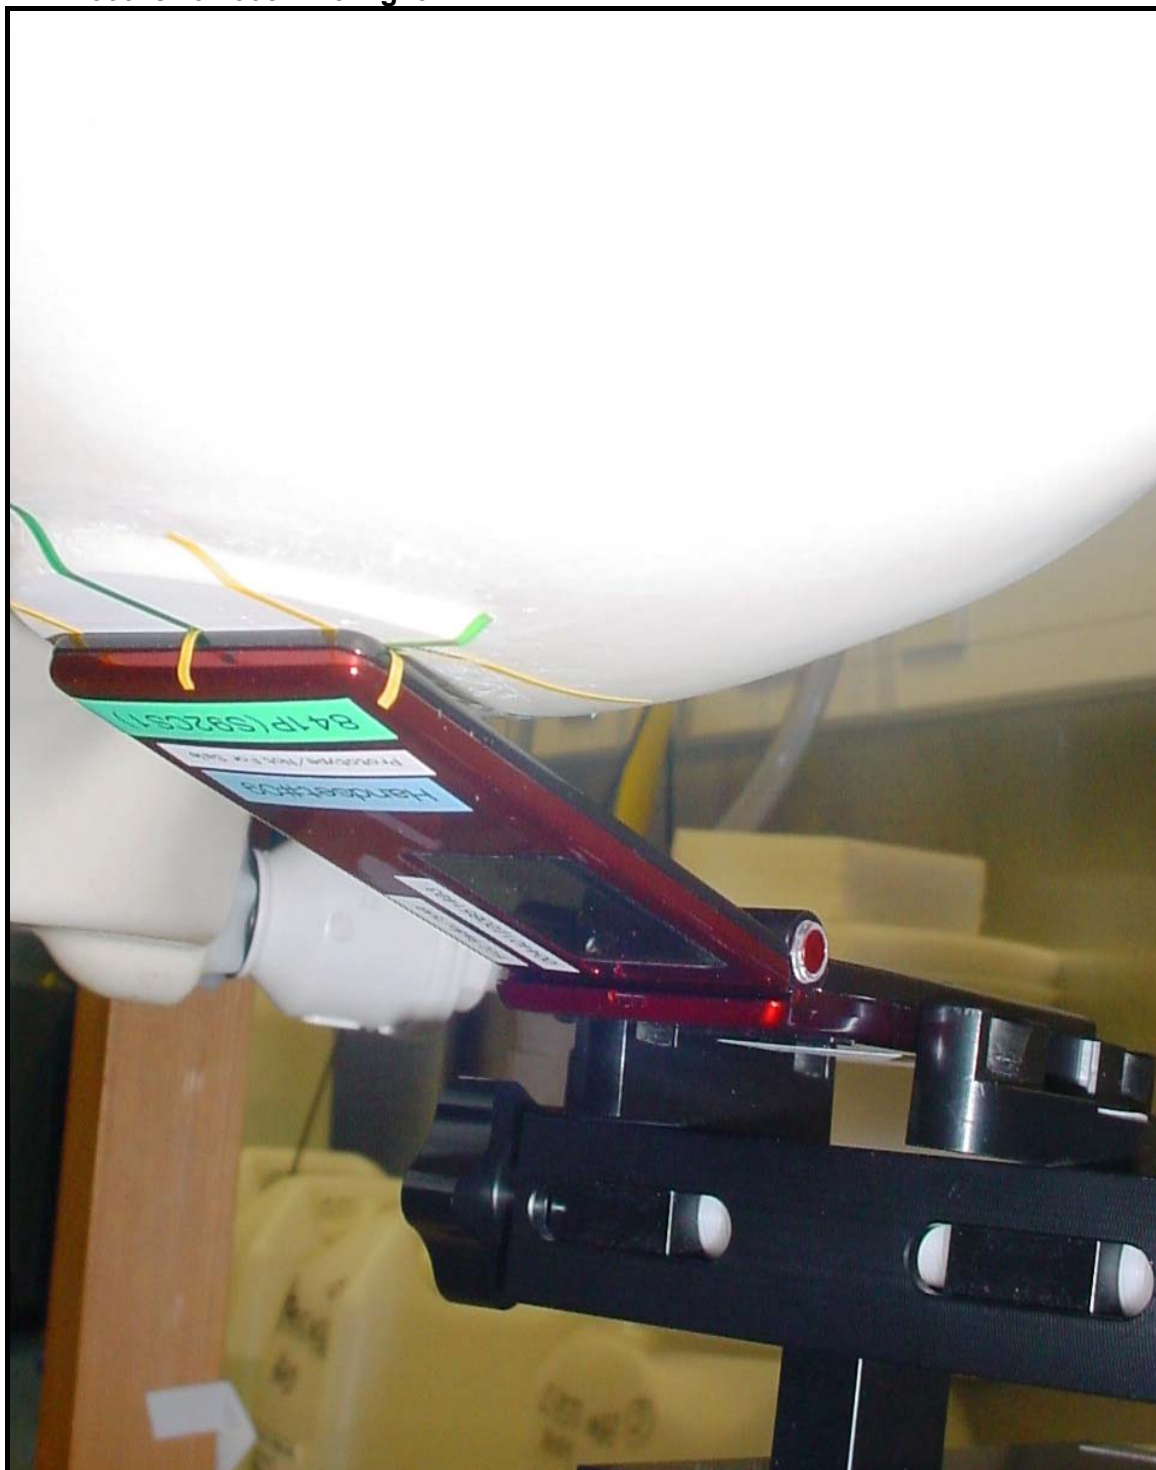


Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/006: Front of EUT Facing Phantom

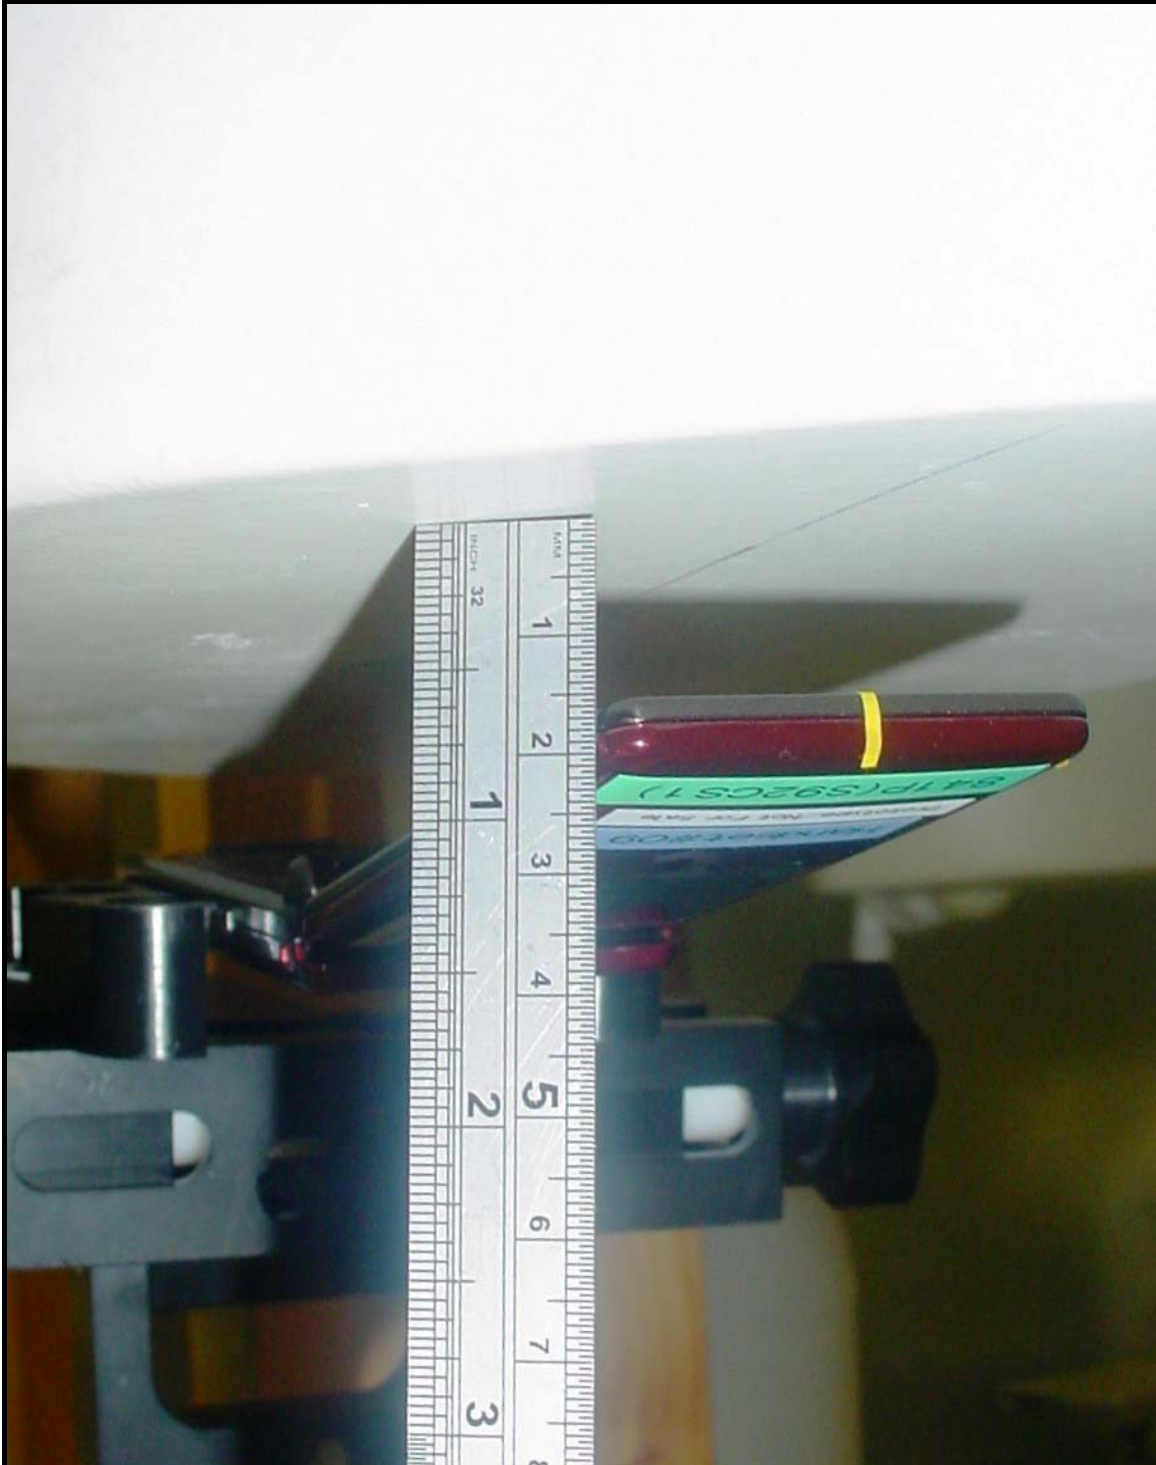



Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/007: Rear of EUT Facing Phantom






Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

PHT/76607JD01/008: General Setup With PHF

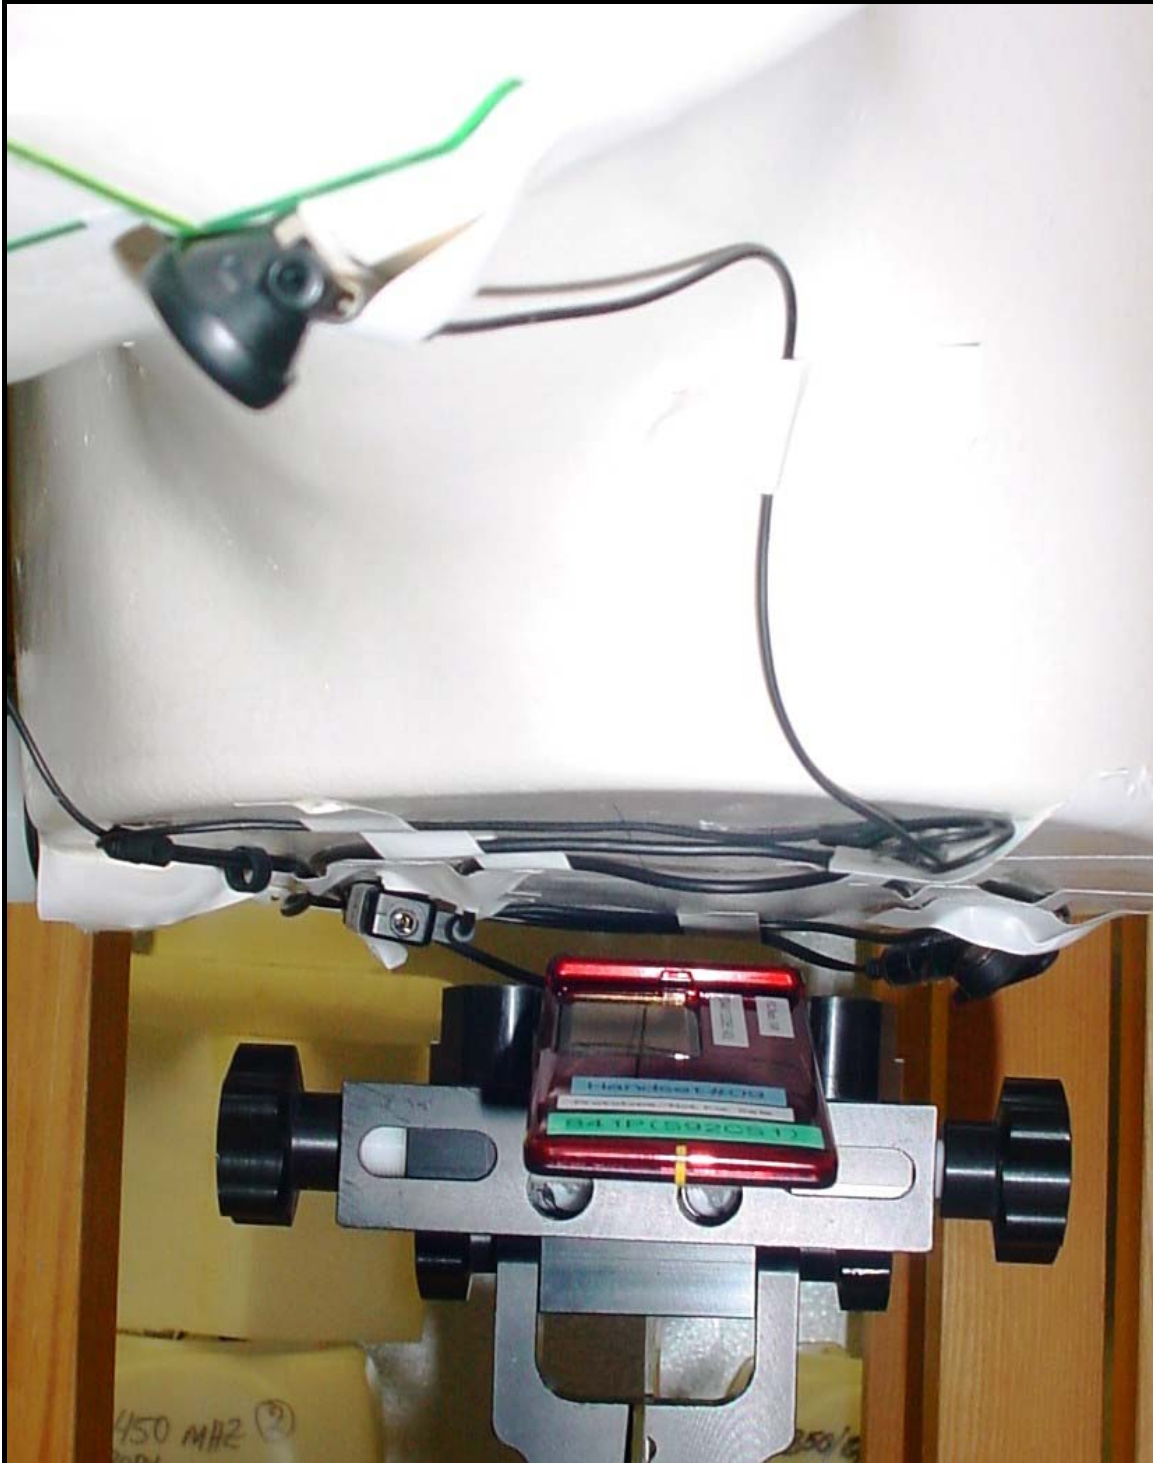

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/009: Rear of EUT Facing Phantom With PHF



Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/010: Front of EUT





Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/011: Rear of EUT





Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

PHT/76607JD01/012: Internal View of EUT



Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

PHT/76607JD01/013: Battery View






Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/014: PHF

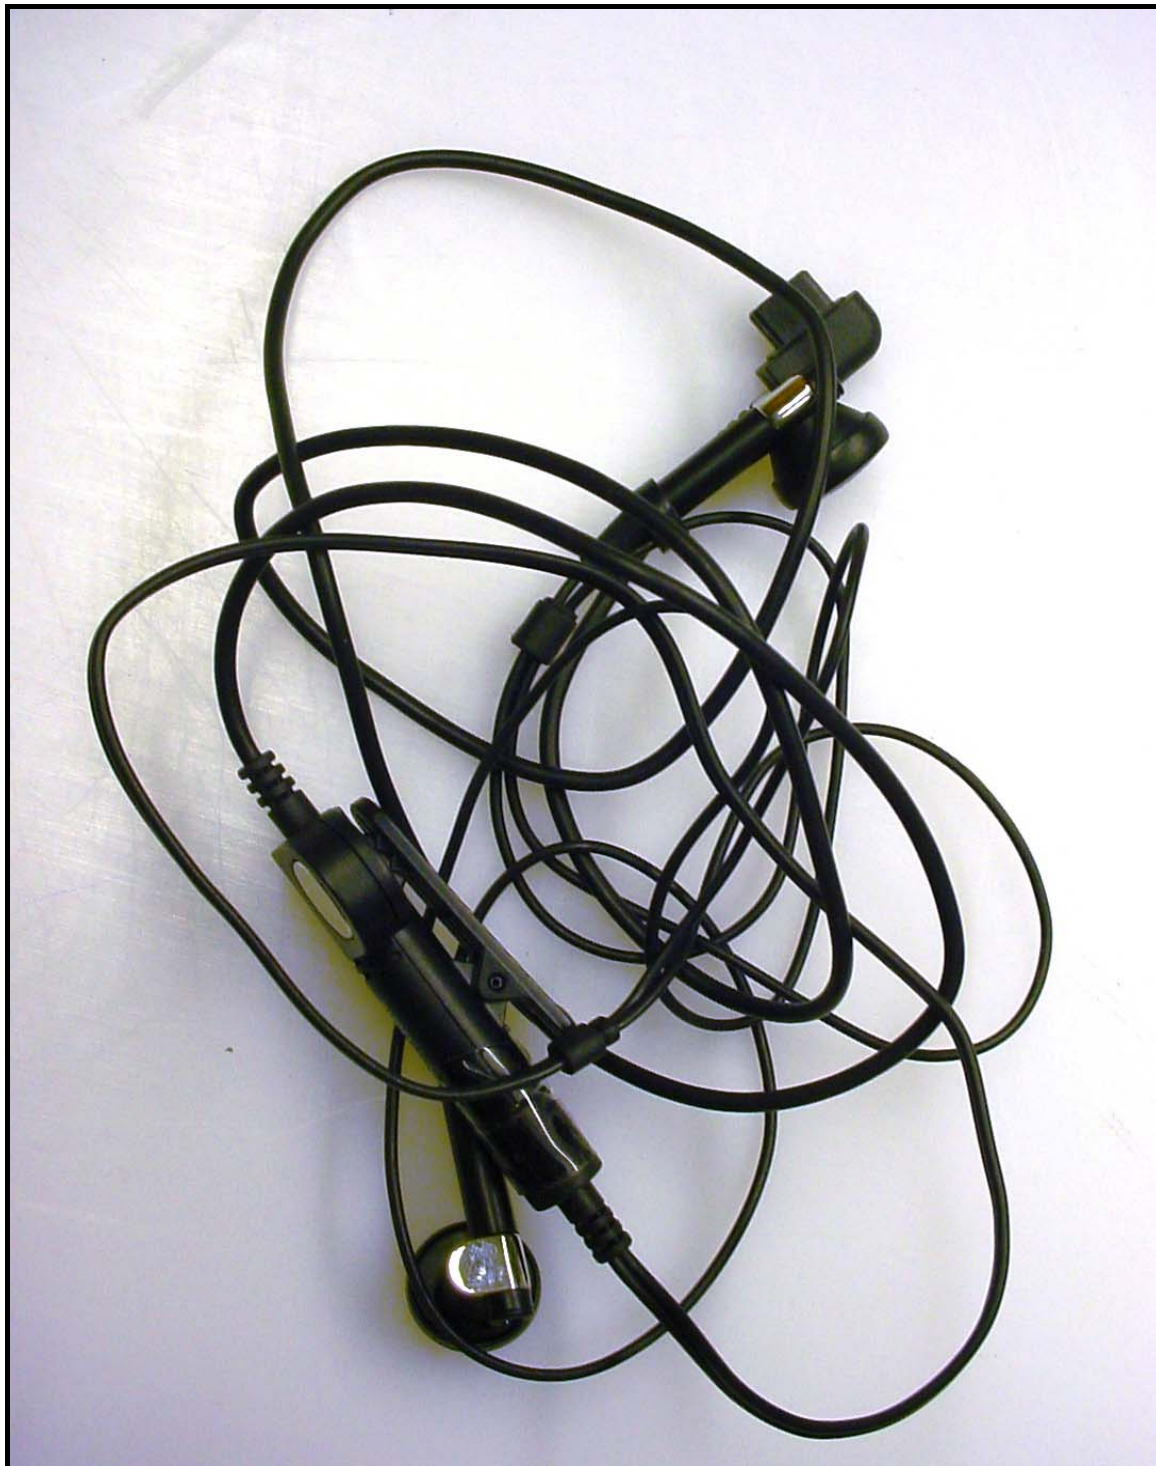


Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

PHT/76607JD01/015: PHF Converter

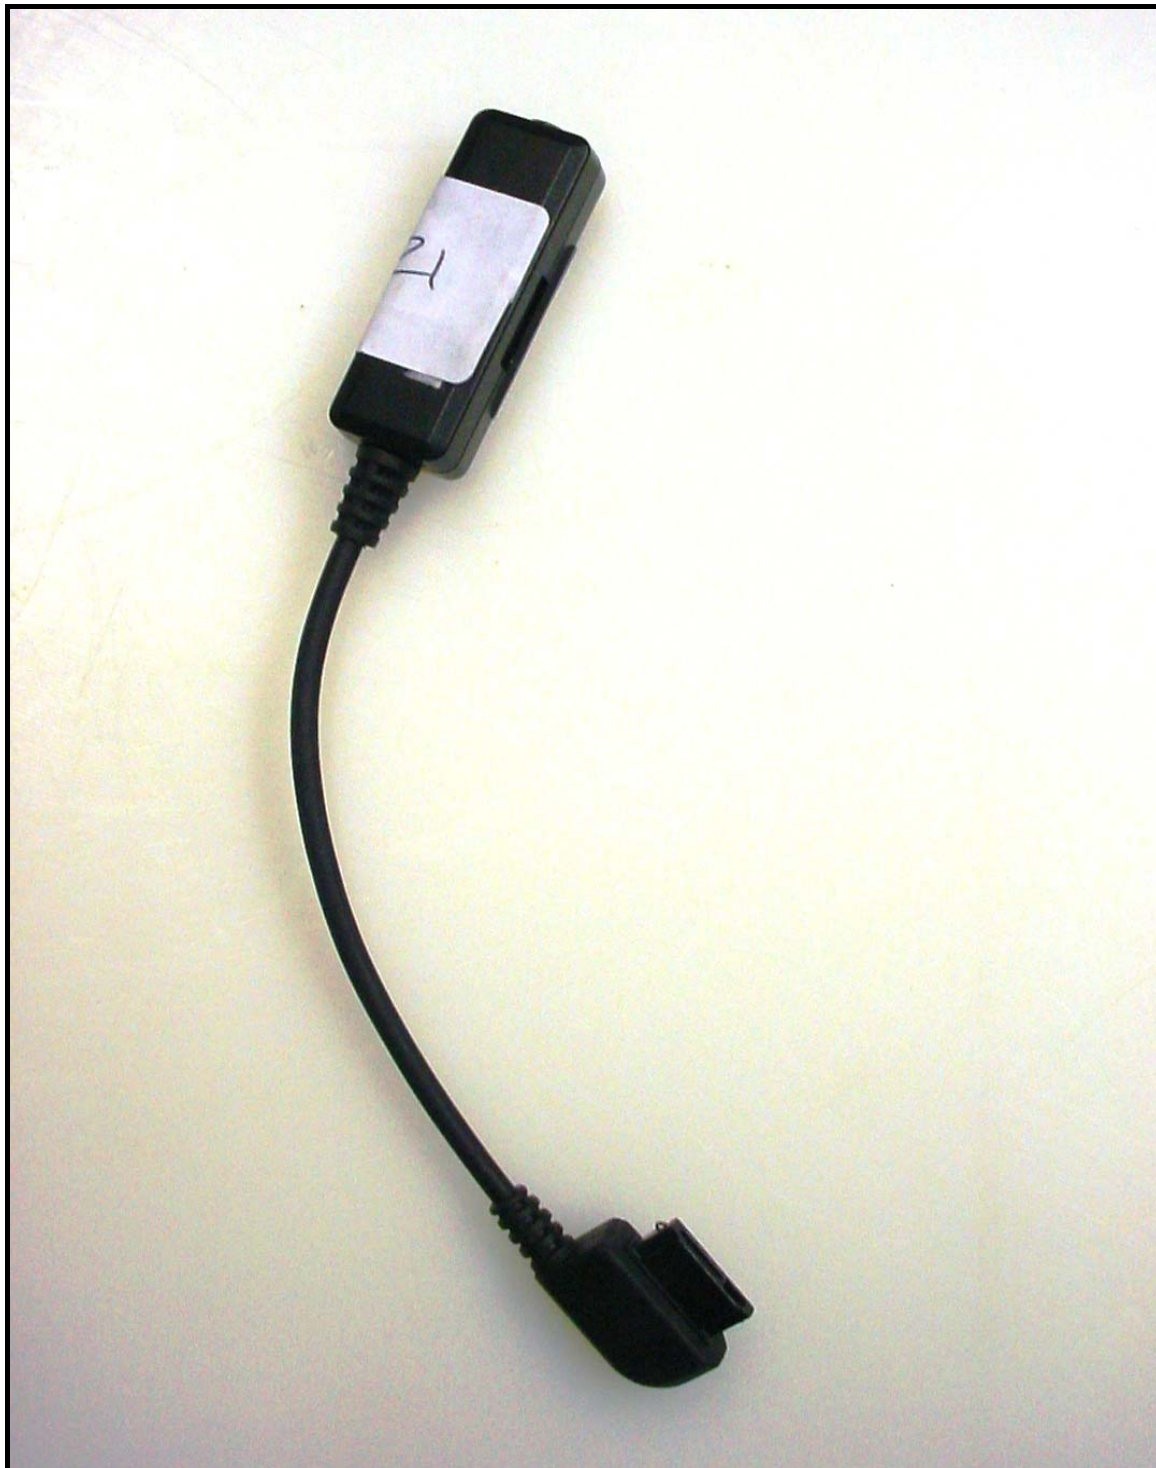




Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

**PHT/76607JD01/016: 1900 MHz Head Fluid Level**

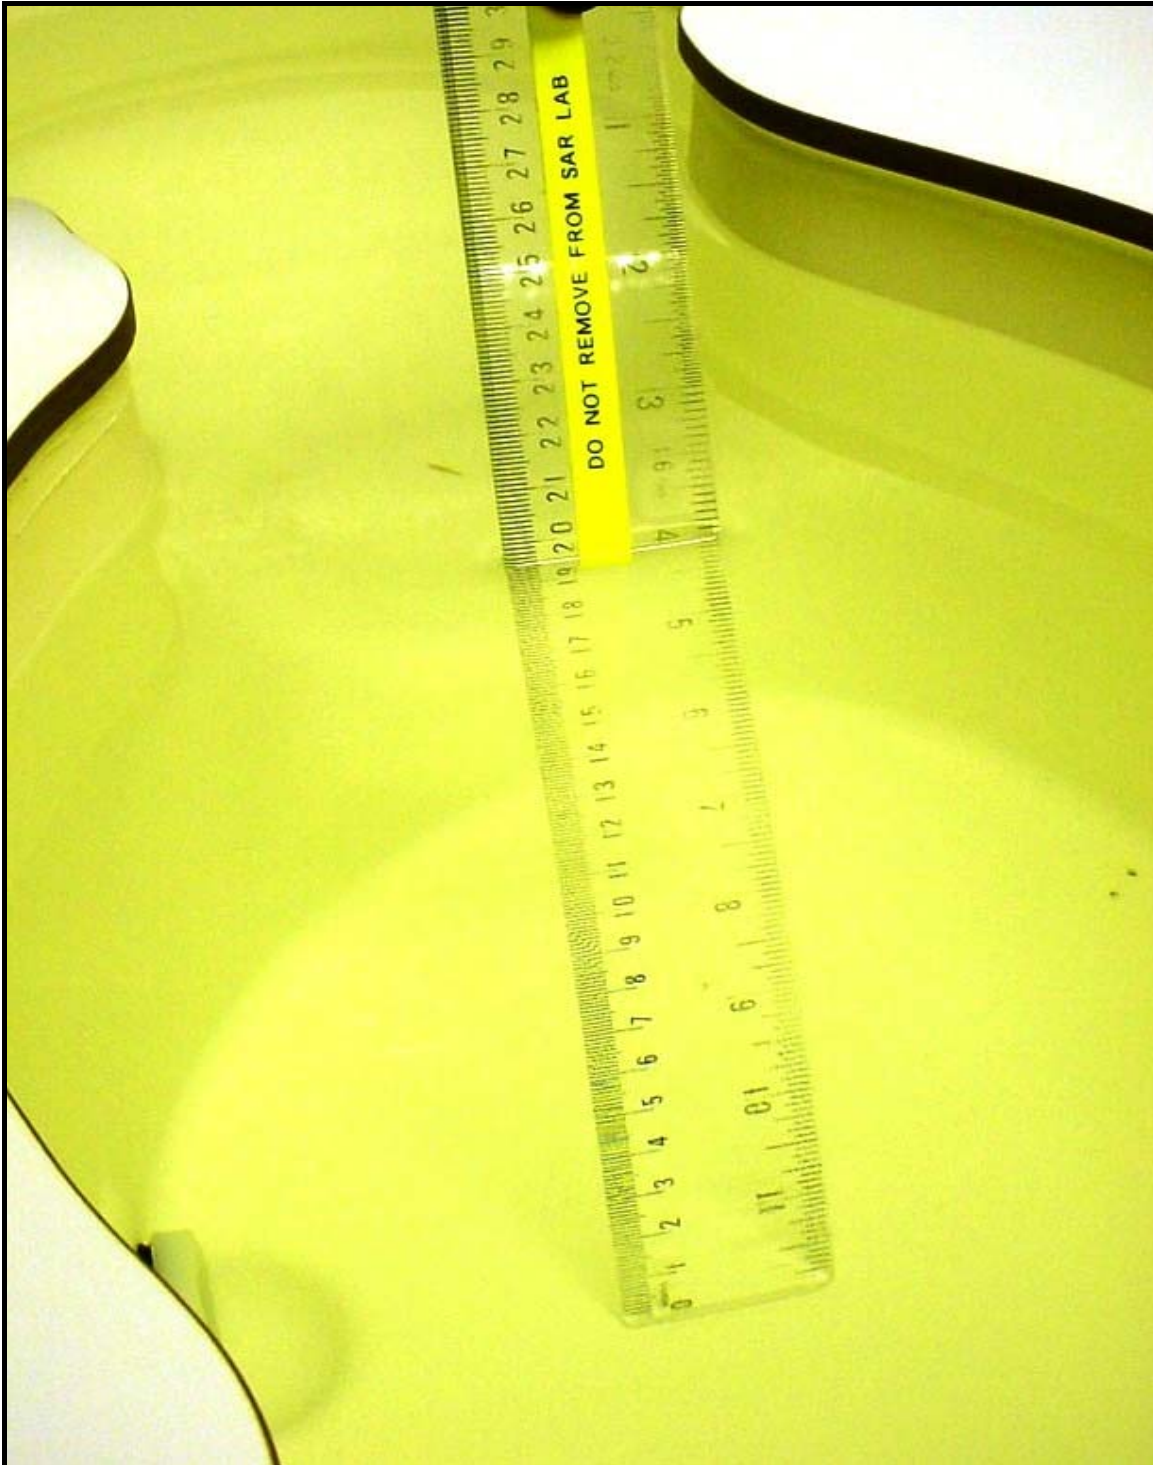

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

**PHT/76607JD01/017: 1900 MHz Body Fluid Level**



Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

**Appendix 5. Validation of System**

Prior to the assessment, the system was verified in the flat region of the phantom.

A 1900 MHz dipole was used. A forward power of 250 mW was applied to the dipole and the system was verified to a tolerance of  $\pm 5\%$  for the 1900 MHz dipole. The applicable verification (normalised to 1 Watt).

**Date: 03/12/2009****Validation Dipole and Serial Number: D1900V2:SN:540**

Simulant	Frequency (MHz)	Room Temperature	Liquid Temperature	Parameters	Target Value	Measured Value	Deviation (%)	Limit (%)
Body	1900	25.0 °C	24.0 °C	$\epsilon_r$	53.30	51.03	-4.26	5.00
				$\sigma$	1.52	1.52	0.23	5.00
				1g SAR	40.90	42.40	3.67	5.00
				10g SAR	21.50	21.80	1.40	5.00

Simulant	Frequency (MHz)	Room Temperature	Liquid Temperature	Parameters	Target Value	Measured Value	Deviation (%)	Limit (%)
Head	1900	25.0 °C	24.3 °C	$\epsilon_r$	40.00	38.99	-2.53	5.00
				$\sigma$	1.40	1.43	2.22	5.00

**Date: 04/12/2009****Validation Dipole and Serial Number: D1900V2:SN:540**

Simulant	Frequency (MHz)	Room Temperature	Liquid Temperature	Parameters	Target Value	Measured Value	Deviation (%)	Limit (%)
Body	1900	25.0 °C	24.1 °C	$\epsilon_r$	53.30	51.19	-3.95	5.00
				$\sigma$	1.52	1.58	4.25	5.00
				1g SAR	40.90	40.80	-0.24	5.00
				10g SAR	21.50	21.08	-1.95	5.00

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

## **Appendix 6. Simulated Tissues**

The body mixture consists of water and glycol. Visual inspection is made to ensure air bubbles are not trapped during the mixing process. The mixture is calibrated to obtain proper dielectric constant (permittivity) and conductivity of the tissue.

Ingredient	Frequency
	1800/1900 MHz Body
De-Ionised Water	69.79%
Diglycol Butyl Ether (DGBE)	30.00%
Salt	0.20%

Ingredient	Frequency
	1800/1900 MHz Head
De-Ionised Water	55.41%
Diglycol Butyl Ether (DGBE)	44.51%
Salt	0.08%

---



Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

## **Appendix 7. DASY4 System Details**

### **A.7.1. DASY4 SAR Measurement System**

RFI Global Services Ltd, SAR measurement facility utilises the Dosimetric Assessment System (DASY™) manufactured by Schmid & Partner Engineering AG (SPEAG™) of Zurich, Switzerland. The DASY4 system is comprised of the robot controller, computer, near-field probe, probe alignment sensor, and the SAM phantom containing brain or muscle equivalent material. The robot is a six-axis industrial robot performing precise movements to position the probe to the location (points) of maximum electromagnetic field (EMF). A cell controller system contains the power supply, robot controller; teach pendant (Joystick), and remote control. This is used to drive the robot motors. The Staubli robot is connected to the cell controller to allow software manipulation of the robot. The data acquisition electronics (DAE) performs signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection etc. The DAE is connected to the Electro-optical coupler (EOC). The EOC performs the conversion from the optical into digital electric signal of the DAE and transfers data to the PC plug-in card. The DAE3 utilises a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16-bit AD-converter and a command decoder and control logic unit. Transmission to the PC-card is accomplished through an optical downlink for data and status information and an optical uplink for commands and clock lines. The mechanical probe-mounting device includes two different sensor systems for frontal and sidewise probe contacts. They are also used for mechanical surface detection and probe collision detection. The robot uses its own controller with a built in VME-bus computer.

---

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

**A.7.2. DASY4 SAR System Specifications****Robot System**

Positioner:	Stäubli Unimation Corp. Robot Model: RX90L
Repeatability:	0.025 mm
No. of Axis:	6
Serial Number:	F00/SD89A1/A/01
Reach:	1185 mm
Payload:	3.5 kg
Control Unit:	CS7
Programming Language:	V+

**Data Acquisition Electronic (DAE) System**

Serial Number:	DAE3 SN:450
----------------	-------------

**PC Controller**

PC:	Dell Precision 340
Operating System:	Windows 2000
Data Card:	DASY4 Measurement Server
Serial Number:	1080

**Data Converter**

Features:	Signal Amplifier, multiplexer, A/D converted and control logic.
Software:	DASY4 Software
Connecting Lines:	Optical downlink for data and status info. Optical uplink for commands and clock.

**PC Interface Card**

Function:	24 bit (64 MHz) DSP for real time processing Link to DAE3 16 nit A/D converter for surface detection system serial link to robot direct emergency stop output for robot.
-----------	--

---

Test of: SoftBank 841P

To: OET Bulletin 65 Supplement C: (2001-01)

---

**DASY4 SAR System Specifications (Continued)****E-Field Probe**

Model:	EX3DV3
Serial No:	3508
Construction:	Triangular core
Frequency:	10 MHz to >6 GHz
Linearity:	$\pm 0.2$ dB (30 MHz to 6 GHz)
Probe Length (mm):	330
Probe Diameter (mm):	12
Tip Length (mm):	20
Tip Diameter (mm):	2.5
Sensor X Offset (mm):	1
Sensor Y Offset (mm):	1
Sensor Z Offset (mm):	1

**Phantom**

Phantom:	SAM Phantom
Shell Material:	Fibreglass
Thickness:	2.0 $\pm$ 0.1 mm

---