



683-3, Yubang-Dong, Yongin-Si, Kyunggi-Do, Korea. 449-080  
 Tel: +82-31-321-2664 Fax: +82-31-321-1664  
<http://www.digitalemc.com>

## SAR TEST REPORT

Dates of Tests: November 01~02, 2007  
 Test Report S/N:DR50110711O\_rev1  
 Test Site : DIGITAL EMC CO., LTD.

FCC ID

**VP3GT30DP**

APPLICANT

**Questlabs Corp.****FCC Classification:****Licensed Non-Broadcast Station Transmitter(TNB)****EUT Type:****Quad Band GSM Fixed Wirelss Phone****Model Name****GT850P****Brand Name****Avvio****Test Device Serial No.:****Identical prototype****TX Frequency Range:****824.20 ~848.80 MHz (GSM850) / 1850.20 ~ 1909.80 MHz (PCS1900)****RX Frequency Range:****869.2 ~893.8 MHz (GSM850) / 1930.2 ~ 1989.8 MHz (PCS1900)****Max. RF Output Power:****2.733 W ERP GSM850****1.458 W EIRP PCS1900****Max. SAR Measurement:****1.43 mW/g GSM850 GPRS Body SAR****0.226 mW/g PCS1900 GPRS Body SAR****Application Type:****Certification****Rule Part(s):****§2.1093; FCC/OET Bulletin Supplement C[July 2001]****Data of issue:****November 27, 2007**

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE Std. 1528-2003.

I attest to the accuracy of data. All measurements reported herein were performed by me or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.



Tested by :

Sun-Kyu Ryu (Engineer)

Reviewed by :

Harvey Sung (Chief Engineering Director)

## TABLE OF CONTENTS

|  |         |
|--|---------|
| 1. INTRODUCTION .....  | 3       |
| SAR DEFINITION .....   | 3       |
| 2. SAR MEASUREMENT SETUP.....                                | 4       |
| Robotic System.....  | 4       |
| System Hardware .....  | 4       |
| System Electronics.....                                      | 4       |
| 3. DASY4 E-FIELD PROBE SYSTEM.....                           | 5       |
| Probe Measurement System.....                                | 5       |
| Probe Specifications .....                                   | 5       |
| 4. Probe Calibration Process.....                            | 6       |
| Dosimetric Assessment Procedure.....                         | 6       |
| Free Space Assessment .....                                  | 6       |
| Temperature Assessment .....                                 | 6       |
| 5. PHANTOM & EQUIVALENT TISSUES.....                         | 7       |
| SAM Phantom .....  | 7       |
| Brain & Muscle Simulating Mixture Characterization .....     | 7       |
| Device Holder for Transmitters.....                          | 7       |
| 6. TEST SYSTEM SPECIFICATIONS.....                           | 8       |
| Automated Test System Specifications.....                    | 8       |
| 7. DOSIMETRIC ASSESSMENT & PHANTOM SPECS .....               | 9       |
| Measurement Procedure.....                                   | 9       |
| Specific Anthropomorphic Mannequin (SAM) Specifications..... | 9       |
| 8. DEFINITION OF REFERENCE POINTS .....                      | 10      |
| EAR Reference Point.....                                     | 10      |
| Handset Reference Points.....                                | 10      |
| 9. TEST CONFIGURATION POSITIONS .....                        | 11      |
| Positioning for Cheek/Touch .....                            | 11      |
| Positioning for Ear /15° Tilt .....                          | 12      |
| Body Holster /Belt Clip Configurations .....                 | 13      |
| 10. ICNIRP GUIDELINES RF EXPOSURE LIMITS.....                | 14      |
| Uncontrolled Environment .....                               | 14      |
| Controlled Environment.....                                  | 14      |
| 11. MEASUREMENT UNCERTAINTIES.....                           | 15      |
| SAR Measurement Uncertainties .....                          | 15      |
| 12. SYSTEM VERIFICATION.....                                 | 16      |
| Tissue Verification.....                                     | 16      |
| Test System Verification.....                                | 16      |
| 13. SAR TEST DATA SUMMARY.....                               | 17      |
| See Measurement Result Data Pages .....                      | 17      |
| Procedures Used To Establish Test Signal .....               | 17      |
| Device Test Conditions.....                                  | 17      |
| Power Table.....   | 17      |
| 14. SAR DATA SUMMARY.....                                    | 18 – 19 |
| 15. SAR TEST EQUIPMENT .....                                 | 20      |
| Equipment Calibration.....                                   | 20      |
| 16. CONCLUSION.....  | 21      |
| Measurement Conclusion.....                                  | 21      |
| 17. REFERENCES .....   | 22      |

## 1. INTRODUCTION/SAR DEFINITION

In 1974, the International Radiation Protection Association (IRPA) formed a working group on non-ionizing radiation (NIR), which examined the problems arising in the field of Protection against the various types of NIR. At the IRPA Congress in Paris in 1977, this working group became the International Non-Ionizing Radiation Committee (INIRC).

In cooperation with the Environmental Health Division of the World Health Organization (WHO), the IRPA/INIRC developed a number of health criteria documents on NIR as part of WHO'S Environmental Health Criteria Programme, sponsored by the United Nations Environment Programme (UNEP). Each document includes an overview of the physical characteristics, measurement and instrumentation, sources, and applications of NIR, a thorough review of the literature on biological effects, and an evaluation of the health risks of exposure to NIR. These health criteria have provided the scientific database for the subsequent development of exposure limits and codes of practice relating to NIR.

At the Eighth International Congress of the IRPA (Montreal, 18-22 May 1992), a new, independent scientific organization-the International Commission on Non-Ionizing Radiation Protection (ICNIRP)-was established as a successor to the IRPA/INIRC. The functions of the Commission are to investigate the hazards that may be associated with the different forms of NIR, develop international guidelines on NIR exposure to static and extremely-low-frequency (ELF) electric and magnetic field have been reviewed by UNEP/WHO/IRPA (1984, 1987). Those publications and a number of others, including UNEP/WHO/IRPA (1993) and Allen et al. (1991), provided the scientific rationale for these guidelines.

A glossary of terms appears in the Appendix.

### SAR Definition

Specific Absorption Rate (SAR) is defined as the time derivative (rate) of the incremental energy ( $dU$ ) absorbed by (dissipated in) an incremental mass ( $dm$ ) contained in a volume element ( $dV$ ) of a given density ( $\rho$ ). It is also defined as the rate of RF energy absorption per unit mass at a point in an absorbing body (see Fig. 1.1)

$$SAR = \frac{d}{dt} \left( \frac{dU}{dm} \right) = \frac{d}{dt} \left( \frac{dU}{\rho dV} \right)$$

Figure 1.1  
SAR Mathematical Equation

SAR is expressed in units of Watts per Kilogram (W/kg).

$$SAR = E^2 / \rho$$

Where:

- $\sigma$  = conductivity of the tissue-simulant material (S/m)
- $\rho$  = mass density of the tissue-simulant material (kg/m<sup>3</sup>)
- $E$  = Total RMS electric field strength (V/m)

NOTE: The primary factors that control rate of energy absorption were found to be the wavelength of the incident field in relation to the dimensions and geometry of the irradiated organism, the orientation of the organism in relation to the polarity of field vectors, the presence of reflecting surfaces, and whether conductive contact is made by the organism with a ground plane.[6]

## 2. SAR MEASUREMENT SETUP

### Robotic System

Measurements are performed using the DASY4 automated dosimetric assessment system. The DASY4 is made by Schmid & Partner Engineering AG (SPEAG) in Zurich, Switzerland and consists of high precision robotics system (Staubli), robot controller, Pentium III computer, near-field probe, probe alignment sensor, and the generic twin phantom containing the brain equivalent material. The robot is a six-axis industrial robot performing precise movements to position the probe to the location (points) of maximum electromagnetic field (EMF) (see Fig. 2.1).

### System Hardware

A cell controller system contains the power supply, robot controller, teach pendant (Joystick), and a remote control used to drive the robot motors. The PC consists of the Micron Pentium IV 500 MHz computer with Windows NT system and SAR Measurement Software DASY4, A/D interface card, monitor, mouse, and keyboard. The Staubli Robot is connected to the cell controller to allow software manipulation of the robot. A data acquisition electronic (DAE) circuit that performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. is connected to the Electro-optical coupler (EOC). The EOC performs the conversion from the optical into digital electric signal of the DAE and transfers data to the PC plug-in card.

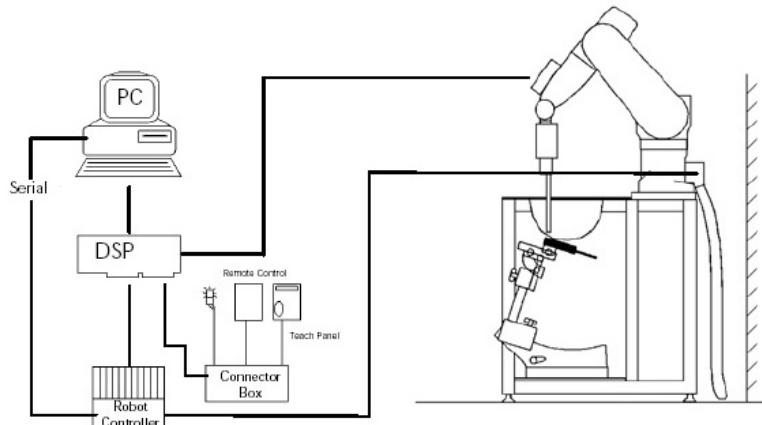


Figure 2.1 SAR Measurement System Setup

### System Electronics

The DAE3 consists of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the PC-card is accomplished through an optical downlink for data and status information and an optical uplink for commands and clock lines. The mechanical probe mounting device includes two different sensor systems for frontal and sidewise probe contacts. They are also used for mechanical surface detection and probe collision detection. The robot uses its own controller with a built in VME-bus computer. The system is described in detail in [7].

### 3. SAR MEASUREMENT SETUP

#### Probe Measurement System



Figure 3.1 DAE System

The SAR measurements were conducted with the dosimetric probe ET3DV6, designed in the classical triangular configuration [7] (see Fig. 3.2) and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multifiber line ending at the front of the probe tip (see Fig. 3.3). It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY4 software reads the reflection during a software approach and looks for the maximum using a 2nd order fitting (see Fig.3.1). The approach is stopped at reaching the maximum.

#### Probe Specifications

|              |   |
|--------------|---|
| Calibration: | In air from 10 MHz to 2.5 GHz                   |
|              | In brain and muscle simulating tissue at        |
|              | Frequencies of 450 MHz, 835 MHz, 900 MHz        |
|              | 1900MHz and 2450MHz                             |
| Frequency:   | 10MHz to 6GHz                                   |
|              | Linearity: $\pm 0.2\text{dB}$ (30 MHz to 3 GHz) |
| Dynamic:     | 5uW/g to $>100\text{mW/g}$                      |
| Range:       | Linearity: $\pm 0.2\text{dB}$                   |
| Dimensions:  | Overall length: 330 mm                          |
|              | Tip length :16mm                                |
|              | Body diameter :12mm                             |
|              | Tip diameter :6.8 mm                            |
|              | Distance from probe tip to dipole centers:2.7mm |
| Application: | General dosimetry up to 3 GHz                   |
|              | Compliance tests of mobile phones               |
|              | Fast automatic scanning in arbitrary phantoms   |

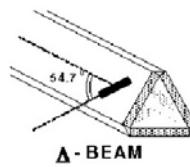


Figure 3.1 Triangular Probe Configuration



Figure 3.2 Probe Thick-Film Technique

## 4. Probe Calibration Process

### Dosimetric Assessment Procedure

Each probe is calibrated according to a dosimetric assessment procedure described in [8] with accuracy better than +/- 10%. The spherical isotropy was evaluated with the procedure described in [9] and found to be better than +/-0.25dB. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe is tested.

### Free Space Assessment

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz (see Fig. 4.1), and in a waveguide above 1GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity at the proper orientation with the field. The probe is then rotated 360 degrees.

### Temperature Assessment \*

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in a dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe (see Fig. 4.2).

$$\text{SAR} = C \frac{\Delta T}{\Delta t}$$

where:

$\Delta t$  = exposure time (30 seconds),

$C$  = heat capacity of tissue (brain or muscle),

$\Delta T$  = temperature increase due to RF exposure.

$$\text{SAR} = \frac{|E|^2 \cdot \sigma}{\rho}$$

where:

$\sigma$  = simulated tissue conductivity,

$\rho$  = Tissue density (1.25 g/cm<sup>3</sup> for brain tissue)

SAR is proportional to  $\Delta T / \Delta t$ , the initial rate of tissue heating, before thermal diffusion takes place. Now it's possible to quantify the electric field in the simulated tissue by equating the thermally derived SAR to the E- field;

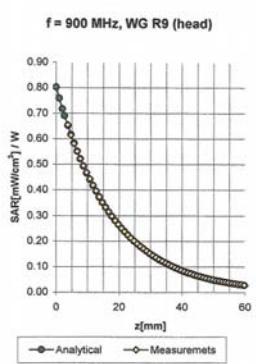


Figure 4.1 E-Field and Temperature Measurements at 900MHz[7]

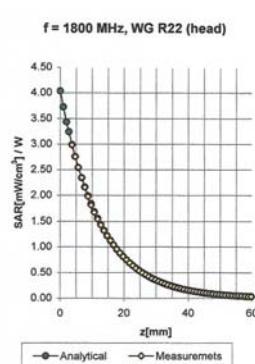


Figure 4.2 E-Field and Temperature Measurements at 1900MHz[7]

## 5. PHANTOM & EQUIVALENT TISSUES


### SAM Phantom



**Figure 5.1 SAM Twin Phantom**

The SAM Twin Phantom V4.0 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is based on data from an anatomical study designed to determine the maximum exposure in at least 90% of all users [11][12]. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot. (see Fig. 5.1)

### Brain & Muscle Simulating Mixture Characterization

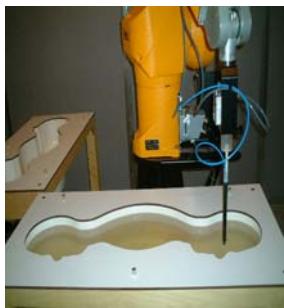

**Figure 5.2 Simulated Tissue**

**Table 5.1 Composition of the Brain & Muscle Tissue Equivalent Matter**

| INGREDIENTS         | SIMULATING TISSUE |               |               |                |
|---------------------|-------------------|---------------|---------------|----------------|
|                     | 835MHz Brain      | 835MHz Muscle | 1900MHz Brain | 1900MHz Muscle |
| Mixture Percentage  |                   |               |               |                |
| WATER               | 41.45             | 52.50         | 54.90         | 40.40          |
| DGBE                | 0.000             | 0.000         | 44.92         | 58.00          |
| SUGAR               | 56.00             | 45.00         | 0.000         | 0.000          |
| SALT                | 1.450             | 1.400         | 0.180         | 0.500          |
| BACTERICIDE         | 0.100             | 0.100         | 0.000         | 0.100          |
| HEC                 | 1.000             | 1.000         | 0.000         | 1.000          |
| Dielectric Constant | Target            | <b>41.50</b>  | <b>55.20</b>  | <b>40.00</b>   |
| Conductivity (S/m)  | Target            | <b>0.900</b>  | <b>0.970</b>  | <b>1.400</b>   |
|                     |                   |               |               | <b>1.520</b>   |

### Device Holder for Transmitters



**Figure 5.2 Mounting Device**

In combination with the SAM Twin Phantom V4.0, the Mounting Device (see Fig. 5.2) enables the rotation of the mounted transmitter in spherical coordinates where the rotation point is the ear opening. The devices can be easily, accurately, and repeatably be positioned according to the FCC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).


- Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produce infinite number of configurations [12]. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.

## 6. TEST SYSTEM SPECIFICATIONS

### Automated Test System Specifications

#### Positioner

**Robot:** Stäubli Unimation Corp. Robot Model: RX60L  
**Repeatability:** 0.02 mm  
**No. of axis:** 6

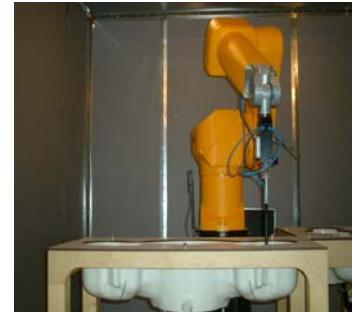

#### Data Acquisition Electronic (DAE) System

##### Cell Controller

**Processor:** Pentium 4 CPU  
**Clock Speed:** 3 GHz  
**Operating System:** Window 2000

Figure 6.1 DASY4 Test System

##### Data Converter

**Features:** Signal, multiplexer,A/D converter. & control logic  
**Software:** DASY4  
**Connecting Lines :** Optical downlink for data and status info  
Optical uplink for commands and clock

##### PC Interface Card

**Function:** 24 bit (64 MHz) DSP for real time processing  
Link to DAE 3  
16 bit A/D converter for surface detection system  
serial link to robot  
direct emergency stop output for robot

##### E-Field Probes

**Model:** ET3DV6 S/N: 1702  
**Construction:** Triangular core fiber optic detection system  
**Frequency:** 10 MHz to 6 GHz  
**Linearity:**  $\pm 0.2\text{dB}$ (30MHz to 3GHz)

##### Phantom

**Phantom:** SAM Twin Phantom (V4.0)  
**Shell Material :** Vivac Composite  
**Thickness:**  $2.0 \pm 0.2 \text{ mm}$

## 7. DOSIMETRIC ASSESSMENT & PHANTOM SPECS

### Measurement Procedure

The evaluation was performed using the following procedure:

1. The SAR measurement was taken at a selected spatial reference point to monitor power variations during testing. This fixed location point was measured and used as a reference value.
2. The SAR distribution at the exposed side of the head was measured at a distance of 3.9mm from the Inner surface of the shell. The area covered the entire dimension of the head and the horizontal grid spacing was 15mm x 15mm.
3. Based on the area scan data, the area of the maximum absorption was determined by spline interpolation. Around this point, a volume of 32mm x 32mm x 34mm (fine resolution volume scan, zoom scan) was assessed by measuring 5 x 5 x 7 points. On this basis of this data set, the spatial peak SAR value was evaluated with the following procedure (see Fig. 7.1):
  - a. The data at the surface was extrapolated, since the center of the dipoles is 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measuring point is 1.2mm. The extrapolation was based on a least square algorithm [15]. A polynomial of the fourth order was calculated through the points in z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.
  - b. The maximum interpolated value was searched with a straight-forward algorithm. Around this maximum the SAR values averaged over the spatial volumes (1g or 10g) were computed using the 3D-Spline interpolation algorithm. The 3D-spline is composed of three one-dimensional splines with the "Not a knot" condition (in x, y, and z directions) [15][16]. The volume was integrated with the trapezoidal algorithm. One thousand points (10 x 10 x 10) were interpolated to calculate the average.
  - c. All neighboring volumes were evaluated until no neighboring volume with a higher average value was found.
4. The SAR reference value, at the same location as procedure #1, was re-measured. If the value changed by more than 5%, the evaluation is repeated.

### Specific Anthropomorphic Mannequin (SAM) Specifications

The phantom for handset SAR assessment testing is a low-loss dielectric shell, with shape and dimensions derived from the anthropometric data of the 90th percentile adult male head dimensions as tabulated by the US Army. The SAM Twin Phantom shell is bisected along the mid-sagittal plane into right and left halves (see Fig. 7.2). The perimeter sidewalls of each phantom halves are extended to allow filling with liquid to a depth that is sufficient to minimize reflections from the upper surface. The liquid depth is maintained at a minimum depth of 15cm to minimize reflections from the upper surface.



**Figure 7.2 SAM Twin Phantom shell**

## 8. DEFINITION OF REFERENCE POINTS

### EAR Reference Point

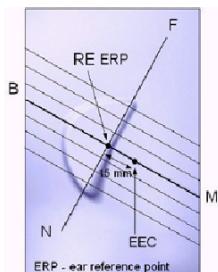


Figure 8.2 Close-up side view of ERPs

Figure 8.1 shows the front, back and side views of the SAM Twin Phantom. The point "M" is the reference point for the center of the mouth, "LE" is the left ear reference point(ERP), and "RE" is the right ERP. The ERPs are 15mm posterior to the entrance to the Ear canal (EEC) along the B-M line (Back-Mouth), as shown in Figure 9.2. The plane Passing through the two ear canals and M is defined as the Reference Plane. The line N-F (Neck-Front) is perpendicular to the reference plane and passing through the RE (or LE) is called the Reference Pivoting Line (see Figure 8.2). Line B-M is perpendicular to the N-F line. Both N-F and B-M lines are marked on the external phantom shell to facilitate handset positioning [5]



Figure 8.1 Front, back and side view of SAM Twin Phantom

### Handset Reference Points

Two imaginary lines on the handset were established: the vertical centerline and the horizontal line. The test device was placed in a normal operating position with the "test device reference point" located along the "vertical centerline" on the front of the device aligned to the "ear reference point" (See Fig. 8.3). The "test device reference point" was then located at the same level as the center of the ear reference point. The test device was positioned so that the "vertical centerline" was bisecting the front surface of the handset at it's top and bottom edges, positioning the "ear reference point" on the outer surface of the both left and right head phantoms on the ear reference point.

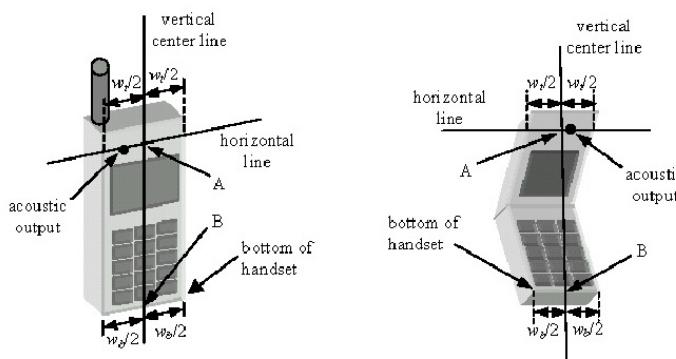


Figure 8.3 Handset Vertical Center & Horizontal Line Reference Points

## 9. TEST CONFIGURATION POSITIONS(Continued)

### Positioning for Cheek/Touch

1. The test device was positioned with the handset close to the surface of the phantom such that point A is on the (virtual) extension of the line passing through points RE and LE on the phantom (see Figure 9.1), such that the plane defined by the vertical center line and the horizontal line of the phone is approximately parallel to the sagittal plane of the phantom.

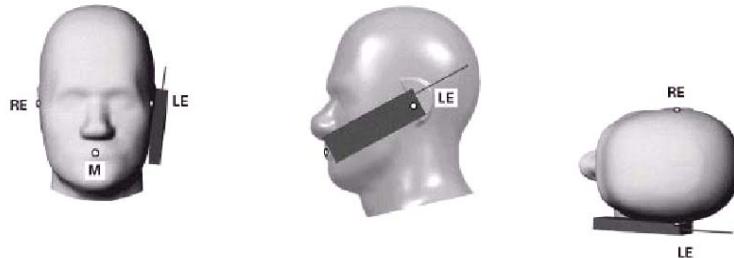


Figure 9.1 Front, Side and Top View of Cheek/Touch Position

2. The handset was translated towards the phantom along the line passing through RE & LE until the handset touches the ear.
3. While maintaining the handset in this plane, the handset was rotated around the LE-RE line until the vertical centerline was in the plane normal to MB-NF including the line MB (reference plane).
4. The phone was then rotated around the vertical centerline until the phone(horizontal line) was symmetrical with respect to the line NF.
5. While maintaining the vertical centerline in the reference plane, keeping point A on the line passing through RE and LE, and maintaining the phone contact with the ear, the handset was rotated about the line NF until any point on the handset made contact with a phantom point below the ear (cheek). See Figure 9.2)

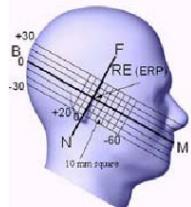


Figure 9.2 Side view w/ relevant markings

## 9. TEST CONFIGURATION POSITIONS(Continued)

### Positioning for Ear / 15 ° Tilt

With the test device aligned in the "Cheek/Touch Position":

1. While maintaining the orientation of the phone, the phone was retracted parallel to the reference plane far enough to enable a rotation of the phone by 15degree.
2. The phone was then rotated around the horizontal line by 15 degree.
3. While maintaining the orientation of the phone, the phone was moved parallel to the reference plane until any part of the phone touches the head. (In this position, point A was located on the line RE-LE). The tilted position is obtained when the contact is on the pinna. If the contact was at any location other than the pinna, the angle of the phone would then be reduced. The tilted position was obtained when any part of the phone was in contact of the ear as well as a second part of the phone was in contact with the head (see Figure 9.3).

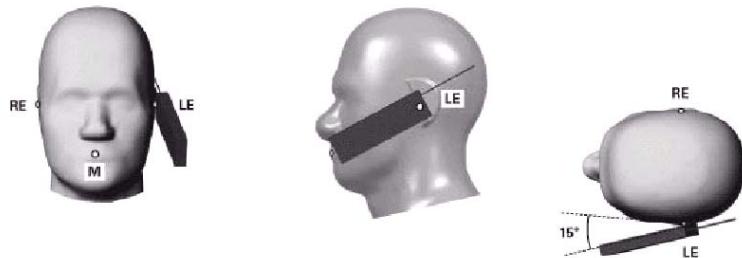


Figure 9.3 Front, Side and Top View of Ear/15° Tilt Position

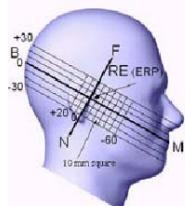


Figure 9.4 Side view w/ relevant markings

## 9. TEST CONFIGURATION POSITIONS

### Body Holster /Belt Clip Configurations

Body-worn operating configurations are tested with the belt-clips and holsters attached to the device and positioned against a flat phantom in a normal use configuration (see Figure 9.5). A device with a headset output is tested with a headset connected to the device. Body dielectric parameters are used.

Accessories for Body- worn operation configurations are divided into two categories: those that do not contain metallic components and those that do contain metallic components. When multiple accessories that do not contain metallic components are supplied with the device, the device is tested with only the accessory that dictates the closest spacing to the body. Then multiple accessories that contain metallic components are supplied with the device, the device is tested with each accessory that contains a unique metallic component. If multiple accessories share an identical metallic component (i.e. the same metallic belt-clip used with different holsters with no other metallic components) only the accessory that dictates the closest spacing to the body is tested.



Figure 9.5 Body Belt Clip & Holster Configurations

Body-worn accessories may not always be supplied or available as options for some Devices intended to be authorized for body-worn use. In this case, a test configuration where a separation distance between the back of the device and the flat phantom is used. All test position spacings are documented.

Transmitters that are designed to operate in front of a person's face, as in push-to-talk configurations, are tested for SAR compliance with the front of the device positioned to face the flat phantom. For devices that are carried next to the body such as a shoulder, waist or chest-worn transmitters, SAR compliance is tested with the accessory(ies), including headsets and microphones, attached to the device and positioned against a flat phantom in a normal use configuration.

In all cases SAR measurements are performed to investigate the worst-case positioning. Worst-case positioning is then documented and used to perform Body SAR testing. In order for users to be aware of the body-worn operating requirements for meeting RF exposure compliance, operating instructions and cautions statements are included in the user's manual.

## 10. ICNIRP GUIDELINES RF EXPOSURE LIMITS

### Uncontrolled Environment

UNCONTROLLED ENVIRONMENTS are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure. The general population/uncontrolled exposure limits are applicable to situations in which the general public may be exposed or in which persons who are exposed as a consequence of their employment may not be made fully aware of the potential for exposure or cannot exercise control over their exposure. Members of the general public would come under this category when exposure is not employment-related; for example, in the case of a wireless transmitter that exposes persons in its vicinity.

### Controlled Environment

CONTROLLED ENVIRONMENTS are defined as locations where there is exposure that may be incurred by persons who are aware of the potential for exposure, (i.e. as a result of employment or occupation). In general, occupational/controlled exposure limits are employment, who have been made fully aware of the potential for exposure and can exercise control over their exposure. This exposure category is also applicable when the exposure is of a transient nature due to incidental passage through a location where the exposure levels may be higher than the general population/uncontrolled limits, but the exposed person is fully aware of the potential for exposure and can exercise control over his or her exposure by leaving the area or by some other appropriate means.

**Table 10.1. Safety Limits for Partial Body Exposure [2]**

| <b>HUMAN EXPOSURE LIMITS</b>             |   |   |
|--|---|---|
|  | General Public Exposure<br>(W/kg) or (mW/g) | Occupational Exposure<br>(W/kg) or (mW/g) |
| Whole-Body average SAR<br>(W/kg)         | 0.08  | 0.40                                      |
| Localized SAR (head and trunk)<br>(W/kg) | 1.60  | 8.00                                      |
| Localized SAR (limbs)<br>(W/kg)          | 4.00  | 20.00                                     |

## 11. IEEE P1528 – MEASUREMENT UNCERTAINTIES

| Error Description                    | Uncertain value ±% | Probability Distribution | Divisor    | (Ci )<br>1g | Standard<br>(1g) | vi 2 or<br>Veff |
|--------------------------------------|--------------------|--------------------------|------------|-------------|------------------|-----------------|
| <b>Measurement System</b>            |                    |                          |            |             |                  |                 |
| Probe calibration                    | ± 4.8              | Normal                   | 1          | 1           | ± 4.8 %          | ∞               |
| Axial isotropy                       | ± 4.7              | Rectangular              | $\sqrt{3}$ | 0.7         | ± 1.9 %          | ∞               |
| Hemispherical isotropy               | ± 9.6              | Rectangular              | $\sqrt{3}$ | 0.7         | ± 3.9 %          | ∞               |
| Boundary Effects                     | ± 1.0              | Rectangular              | $\sqrt{3}$ | 1           | ± 0.6 %          | ∞               |
| Probe Linearity                      | ± 4.7              | Rectangular              | $\sqrt{3}$ | 1           | ± 2.7 %          | ∞               |
| Detection limits                     | ± 1.0              | Rectangular              | $\sqrt{3}$ | 1           | ± 0.6 %          | ∞               |
| Readout Electronics                  | ± 1.0              | Normal                   | 1          | 1           | ± 1.0 %          | ∞               |
| Response time                        | ± 0.8              | Rectangular              | $\sqrt{3}$ | 1           | ± 0.5 %          | ∞               |
| Integration time                     | ± 2.6              | Rectangular              | $\sqrt{3}$ | 1           | ± 1.5 %          | ∞               |
| RF Ambient Conditions                | ± 3.0              | Rectangular              | $\sqrt{3}$ | 1           | ± 1.7 %          | ∞               |
| Probe Positioner                     | ± 0.4              | Rectangular              | $\sqrt{3}$ | 1           | ± 0.2 %          | ∞               |
| Probe Positioning                    | ± 2.9              | Rectangular              | $\sqrt{3}$ | 1           | ± 1.7 %          | ∞               |
| Algorithms for Max. SAR Eval.        | ± 1.0              | Rectangular              | $\sqrt{3}$ | 1           | ± 0.6 %          | ∞               |
| <b>Test Sample Related</b>           |                    |                          |            |             |                  |                 |
| Device Positioning                   | ± 2.9              | Normal                   | 1          | 1           | ± 2.9 %          | 145             |
| Device Holder                        | ± 3.6              | Normal                   | 1          | 1           | ± 3.6 %          | 5               |
| Power Drift                          | ± 5.0              | Rectangular              | $\sqrt{3}$ | 1           | ± 2.9 %          | ∞               |
| <b>Physical Parameters</b>           |                    |                          |            |             |                  |                 |
| Phantom Shell                        | ± 4.0              | Rectangular              | $\sqrt{3}$ | 1           | ± 2.3 %          | ∞               |
| Liquid conductivity (Target)         | ± 5.0              | Rectangular              | $\sqrt{3}$ | 0.64        | ± 1.8 %          | ∞               |
| Liquid conductivity (Meas.)          | ± 2.5              | Normal                   | 1          | 0.64        | ± 1.6 %          | ∞               |
| Liquid permittivity (Target)         | ± 5.0              | Rectangular              | $\sqrt{3}$ | 0.6         | ± 1.7 %          | ∞               |
| Liquid permittivity (Meas.)          | ± 2.5              | Normal                   | 1          | 0.6         | ± 1.5 %          | ∞               |
| <b>Combined Standard Uncertainty</b> |                    |                          |            |             | ± 10.3 %         | 330             |
| <b>Expanded Uncertainty (k=2)</b>    |                    |                          |            |             | ± 20.6 %         |                 |

The above measurement uncertainties are according to IEEE P1528 (2003)

## 12. SYSTEM VERIFICATION

### Tissue Verification

**Table 12.1 Simulated Tissue Verification [5]**


| MEASURED TISSUE PARAMETERS |                  |                                 |          |                        |          |
|----------------------------|------------------|---------------------------------|----------|------------------------|----------|
| Date(s)                    | Target Frequency | Dielectric constant: $\epsilon$ |          | Conductivity: $\sigma$ |          |
|                            |                  | Target                          | Measured | Target                 | Measured |
| Nov. 01, 2007              | 835MHz Brain     | 41.5                            | 40.1     | 0.90                   | 0.893    |
| Nov. 02, 2007              | 1900MHz Brain    | 40.0                            | 38.8     | 1.40                   | 1.44     |

### Test System Validation

Prior to assessment, the system is verified to the  $\pm 10\%$  of the specifications at 835MHz and 1900MHz by using the system validation kit(s). (Graphic Plots Attached)

**Table 12.2 System Validation [5]**

| SYSTEM DIPOLE VALIDATION TARGET & MEASURED                            |                        |                  |                                   |                                   |               |
|---|------------------------|------------------|-----------------------------------|-----------------------------------|---------------|
| (835MHz / 1900 MHz values are normalized to a forward power of 1/4 W) |                        |                  |                                   |                                   |               |
| Date(s)   | System Validation Kit: | Target Frequency | Targeted SAR <sub>1g</sub> (mW/g) | Measured SAR <sub>1g</sub> (mW/g) | Deviation (%) |
| Nov. 01, 2007   | D-835V2, S/N: 464      | 835MHz Brain     | 2.375                             | 2.38                              | 0.21          |
| Nov. 02, 2007   | D-1900V2, S/N: 5d029   | 1900MHz Brain    | 9.925                             | 10.4                              | 4.79          |

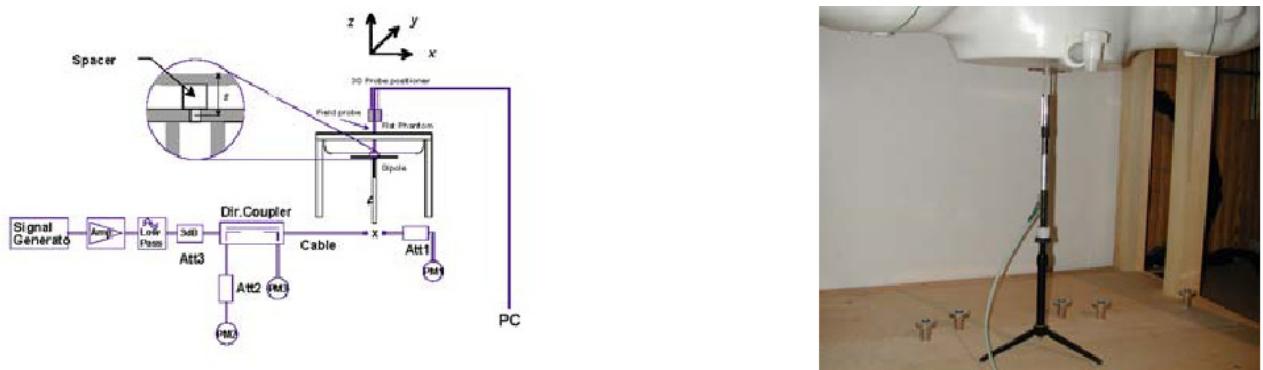

**Figure 12.1 Dipole Validation Test Setup**

## 13. SAR TEST DATA SUMMARY

### See Measurement Result Data Pages

#### Procedures Used To Establish Test Signal

The WLL phone was placed into simulated call mode (GSM850, PCS GSM) using manufacturers test codes. Such test signals offer a consistent means for testing SAR and are recommended for evaluating SAR [4]. When test modes are not available or inappropriate for testing a handset, the actual transmission is activated through a base station simulator or similar equipment. See data pages for actual procedure used in measurement.

#### Device Test Conditions

This WLL Phone is operated by adaptor. The internal battery is for back up purpose only. So each SAR measurement was taken with a adapter. In order to verify that the device was tested at full power, conducted output power measurements were performed before and after each SAR measurement to confirm the output power. If a conducted power deviation of more than 5% occurred, the test was repeated.

#### Average Power Output Table to determine the worst case mode

| Band    | Channel | Mode     |                       |
|---------|---------|----------|-----------------------|
|         |         | GSM(dBm) | GPRS Class10 2TX(dBm) |
| GSM850  | 128     | 22.55    | 25.42                 |
|         | 190     | 22.41    | 25.27                 |
|         | 251     | 22.26    | 25.12                 |
| PCS1900 | 512     | 20.94    | 23.79                 |
|         | 661     | 21.02    | 23.86                 |
|         | 810     | 20.91    | 23.72                 |

- The AVG output power in GPRS Class10 2TX mode is around 3dB greater than GSM mode.
- So the body SAR tests were performed in GPRS Class10 2TX mode in the worse case.

## 14. SAR TEST DATA SUMMARY(Continue)

Mixture Type : 850MHz body

| 14.1 MEASUREMENT RESULTS (GSM850 Body SAR w/ GPRS Class10)   |            |                   |                 |                 |                        |   |              |
|--|------------|-------------------|-----------------|-----------------|------------------------|---|--------------|
| FREQUENCY  |            | Begin Power (dBm) | End Power (dBm) | Battery Type    | Device Test Position   | Antenna Position  | SAR (W/kg)   |
| MHz  | Ch         |                   |                 |                 |                        |   |              |
| 824.2  | 128        | 31.84             | 31.84           | Adaptor         | 2.5cm From Body        | Fixed   | 1.320        |
| 836.6  | 190        | 31.64             | 31.63           | Adaptor         | 2.5cm From Body        | Fixed   | 1.400        |
| 848.8  | 251        | 31.55             | 31.55           | Adaptor         | 2.5cm From Body        | Fixed   | 0.958        |
| <b>836.6</b>   | <b>190</b> | <b>31.64</b>      | <b>31.58</b>    | <b>Standard</b> | <b>2.5cm From Body</b> | <b>Fixed</b>  | <b>1.430</b> |
| <b>ANSI / IEEE C95.1 1992 - SAFETY LIMIT</b><br><b>Spatial Peak</b><br><b>Uncontrolled Exposure/General Population</b> |            |                   |                 |                 |                        | <b>Body</b><br><b>1.6 W/kg (mW/g)</b><br>averaged over 1 gram |              |

NOTE:

1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].
2. All modes of operation were investigated, and worst-case results are reported.
3. Prior to testing the conducted output power was measured.
4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak.
5. Battery is fully charged for all readings.
6. Test Signal Call Mode       Continuous Tx On       Manu.Test Codes       BaseStation Simulator
7. Tissue parameters and temperatures are listed on the SAR plots.
8. Liquid tissue depth is 15.0 cm.±0.1

## 14. SAR TEST DATA SUMMARY

Mixture Type : 1900MHz body

| 14.6 MEASUREMENT RESULTS (PCS1900 Body SAR w/ GPRS Class10)  |     |                   |                 |          |                      |   |            |
|--|-----|-------------------|-----------------|----------|----------------------|---|------------|
| FREQUENCY  |     | Begin Power (dBm) | End Power (dBm) | Battery  | Device Test Position | Antenna Position  | SAR (W/kg) |
| MHz  | Ch  |                   |                 |          |                      |   |            |
| 1850.2   | 512 | 30.25             | 30.25           | Adaptor  | 2.5cm From Body      | Fixed   | 0.221      |
| 1880.0   | 661 | 30.15             | 30.05           | Adaptor  | 2.5cm From Body      | Fixed   | 0.205      |
| 1909.8   | 810 | 30.35             | 30.35           | Adaptor  | 2.5cm From Body      | Fixed   | 0.176      |
| 1850.2   | 512 | 30.25             | 30.25           | Standard | 2.5cm From Body      | Fixed   | 0.226      |
| <b>ANSI / IEEE C95.1 1992 - SAFETY LIMIT</b><br><b>Spatial Peak</b><br><b>Uncontrolled Exposure/General Population</b> |     |                   |                 |          |                      | <b>Body</b><br><b>1.6 W/kg (mW/g)</b><br>averaged over 1 gram |            |

NOTE:

1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].
2. All modes of operation were investigated, and worst-case results are reported.
3. Prior to testing the conducted output power was measured.
4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak.
5. Battery is fully charged for all readings.
6. Test Signal Call Mode       Continuous Tx On       Manu.Test Codes       BaseStation Simulator
7. Tissue parameters and temperatures are listed on the SAR plots.
8. Liquid tissue depth is 15.0 cm.±0.1

## 15. SAR TEST EQUIPMENT

**Table 15.1 Test Equipment Calibration**

| EQUIPMENT SPECIFICATIONS                            |                  |                       |                 |
|---|------------------|-----------------------|-----------------|
| Type  | Calibration Date | Next Calibration Date | Serial Number   |
| Robot   | N/A              | N/A                   | F02/5Q85A1/A/01 |
| Robot Controller                                    | N/A              | N/A                   | F02/5Q85A1/C/01 |
| Joystick  | N/A              | N/A                   | D221340031      |
| Hicron Computer 1.1GHz Pentium Celeron ,Window 2000 | N/A              | N/A                   | N/A             |
| Data Acquisition Electronics                        | November 2006    | November 2007         | 519             |
| Dosimetric E-Field Probe                            | March 2007       | March 2008            | 1702            |
| Dummy Probe   | N/A              | N/A                   | N/A             |
| Sam Phantom   | N/A              | N/A                   | N/A             |
| Probe Alignment Unit LB                             | N/A              | N/A                   | 321             |
| SPEAG Validation Dipole D835MHz                     | January 2006     | January 2008          | 464             |
| SPEAG Validation Dipole D1900MHz                    | March 2007       | March 2009            | 5d029           |
| Head/Body Equivalent Matter(835MHz)                 | January 2007     | January 2008          | N/A             |
| Head/Body Equivalent Matter(1900MHz)                | January 2007     | January 2008          | N/A             |
| HP EPM-442A Power Meter                             | March 2007       | March 2008            | GB37170267      |
| HP E4421A Signal Generator                          | July 2007        | July 2008             | US37230529      |
| Attenuator (10dB)                                   | January 2007     | January 2008          | BP4387          |
| Attenuator (3dB)                                    | July 2007        | July 2008             | MY39260700      |
| Low pass filter (1.5GHz)                            | January 2007     | January 2008          | N/A             |
| Low pass filter (3.0GHz)                            | December 2006    | December 2007         | N/A             |
| Dual Directional Coupler                            | January 2007     | January 2008          | 50228           |
| Amplifier   | January 2007     | January 2008          | 1020 D/C 0221   |
| Network Analyzer                                    | March 2007       | March 2008            | 8753D           |
| HP85070D Dielectric Probe Kit                       | N/A              | N/A                   | LISO1440118     |
| SEMITEC Engineering                                 | N/A              | N/A                   | Shield Room     |

**NOTE:**

The E-field probe was calibrated by SPEAG, by temperature measurement procedure. Dipole Validation measurement is performed by Digital EMC. before each test. The brain simulating material is calibrated by Digital EMC using the dielectric probe system and network analyzer to determine the conductivity and permittivity (dielectric constant) of the brain-equivalent material.

## 16. CONCLUSION

### Measurement Conclusion

The SAR measurement indicates that the EUT complies with the RF radiation exposure limits of the FCC. These measurements are taken to simulate the RF effects exposure under worst-case conditions. Precise laboratory measures were taken to assure repeatability of the tests. The tested device complies with the requirements in respect to all parameters subject to the test. The test results and statements relate only to the item(s) tested.

Please note that the absorption and distribution of electromagnetic energy in the body are very complex phenomena that depend on the mass, shape, and size of the body, the orientation of the body with respect to the field vectors, and the electrical properties of both the body and the environment. Other variables that may play a substantial role in possible biological effects are those that characterize the environment (e.g. ambient temperature, air velocity, relative humidity, and body insulation) and those that characterize the individual (e.g. age, gender, activity level, debilitation, or disease).

Because innumerable factors may interact to determine the specific biological outcome of an exposure to electromagnetic fields, any protection guide shall consider maximal amplification of biological effects as a result of field-body interactions, environmental conditions, and physiological variables.

## 17. REFERENCES

- [1] Federal Communications Commission, ET Docket 93-62, Guidelines for Evaluating the Environmental Effects of Radiofrequency Radiation, Aug. 1996.
- [2] ANSI/IEEE C95.1 - 1991, American National Standard safety levels with respect to human exposure to radio frequency electromagnetic fields, 300kHz to 100GHz, New York: IEEE, Aug. 1992.
- [3] ANSI/IEEE C95.3 - 1991, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields - RF and Microwave, New York: IEEE, 1992.
- [4] Federal Communications Commission, OET Bulletin 65 (Edition 97-01), Supplement C (Edition 01-01), Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields, July 2001.
- [5] IEEE Standards Coordinating Committee 34 — IEEE Std. 1528-2003, Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques.
- [6] NCRP, National Council on Radiation Protection and Measurements, Biological Effects and Exposure Criteria for Radio Frequency Electromagnetic Fields, NCRP Report No. 86, 1986. Reprinted Feb. 1995.
- [7] T. Schmid, O. Egger, N. Kuster, Automated E-field scanning system for dosimetric assessments, IEEE transaction on Microwave Theory and Techniques, vol. 44, Jan. 1996, pp. 105-113.
- [8] K. Pokovic, T. Schmid, N. Kuster, Robust setup for precise calibration of E-field probes in tissue simulating liquids at mobile communications frequencies, ICECOM97, Oct. 1997, pp. 120-124.
- [9] K. Polovć, T. Schmid, and N. Kuster, E-field Probe with improved isotropy in brain simulating liquids. Proceedings of the ELMAR, Zadar, Croatia, June 23-25, 1996, pp. 172-175.
- [10] Schmid & Partner Engineering AG, Application Note: Data Storage and Evaluation, June 1998, p2.
- [11] V. Hombach, K. Meier, M. Burkhardt, E. Kuhn, N. Kuster, The Dependence of EM Energy Absorption upon Human Head Modeling at 900 MHz, IEEE Transaction on Microwave Theory and Techniques, vol. 44 no. 10, Oct. 1996, pp. 1865-1873.
- [12] N. Kuster and Q. Balzano, Energy absorption mechanism by biological bodies in the near field of dipole antennas above 300MHz, IEEE Transaction on Vehicular Technology, vol. 41, no. 1, Feb. 1992, pp. 17-23.
- [13] G. Hartsogrove, A. Kraszewski, A. Surowiec, Simulated Biological Materials for Electromagnetic Radiation Absorption Studies, University of Ottawa, Bioelectromagnetics, Canada: 1987, pp. 29-36.
- [14] Q. Balzano, O. Garay, T. Manning Jr., Electromagnetic Energy Exposure of Simulated Users of Portable Cellular Telephones, IEEE Transactions on Vehicular Technology, vol. 44, no.3, Aug. 1995.
- [15] W. Gander, Computermathematick, Birkhaeuser, Basel, 1992.
- [16] W.H. Press, S.A. Teukolsky, W.T. Vetterling, and B.P. Flannery, Numerical Receipes in C, The Art of Scientific Computing, Second edition, Cambridge University Press, 1992.
- [17] Federal Communications Commission, OET Bulletin 65, Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields. Supplement C, Dec. 1997.
- [18] N. Kuster, R. Kastle, T. Schmid, Dosimetric evaluation of mobile communications equipment with known precision, IEEE Transaction on Communications, vol. E80-B, no. 5, May 1997, pp. 645-652.
- [19] CENELEC CLC/SC111B, European Prestandard (prENV 50166-2), Human Exposure to Electromagnetic Fields High-frequency: 10kHz-300GHz, Jan. 1995.
- [20] Prof. Dr. Niels Kuster, ETH, Eidgenössische Technische Hochschule Zürich, Dosimetric Evaluation of the Cellular Phone.