# **ANSI/IEEE Std. C95.1-1992**

In accordance with the requirements of FCC Report and Order: ET Docket 93-62, and OET Bulletin 65 Supple



Date of Issue: December 9, 2010

## **FCC SAR TEST REPORT**

For

**Connected PND** 

Model: PF10-5002

Series Model Number: PF10-5001; PF10-5003; PF10-5004; PF10-5005; PF10-5006; PF10-5007; PF10-5008; PF10-5009; PF10-5001HD; PF10-5002HD; PF10-5003HD; PF10-5004HD; PF10-5009HD; PF10-5009HD

Trade Name: N/A

Issued to

Dongguan Yuanfeng Technology Co., Ltd NO.62, South Fumin Road, Fumin Industrial Park, Dalang Town, Dongguan City, Guangdong, P.R. China

Issued by
Compliance Certification Services Inc.
Kunshan Laboratory

No.10 Weiye Rd., Innovation park, Eco&Tec, Development Zone, Kunshan City, Jiangsu, China

TEL: 86-512-57355888 FAX: 86-512-57370818 http://www.ccsrf.com service@ccsrf.com







**Note:** This report shall not be reproduced except in full, without the written approval of Compliance Certification Services Inc. This document may be altered or revised by Compliance Certification Services Inc. personnel only, and shall be noted in the revision section of the document.

Page 1 Total Page: 31



Report No.: KS101208B03-SF FCC ID: YNG-PF100001

Date of Issue: December 9, 2010

# **TABLE OF CONTENTS**

1.	CERTIFICATE OF COMPLIANCE (SAR EVALUATION)	
2.	EUT DESCRIPTION	4
3. 4.	REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC	
4. 5.	TEST METHODOLOGY  DOSIMETRIC ASSESSMENT SETUP	5
	5.1 MEASUREMENT SYSTEM DIAGRAM	6
	5.2 SYSTEM COMPONENTS	7
<b>6.</b>	EVALUATION PROCEDURES	
7. 8.	MEASUREMENT UNCERTAINTY EXPOSURE LIMIT	
o. 9.	EUT ARRANGEMENT	
	9.1 ANTHROPOMORPHIC HEAD PHANTOM	16
	9.2 DEFINITION OF THE "CHEEK/TOUCH" POSITION	17
10	9.3 DEFINITION OF THE "TILTED" POSITION	
10.	MEASUREMENT RESULTS	
	10.1TEST LIQUIDS CONFIRMATION	19
	10.2SYSTEM PERFORMANCE CHECK	21
	10.3EUT TUNE-UP PROCEDURES	23
	10.4SAR MEASUREMENT RESULTS	
11.	EUT PHOTO	
12.	EQUIPMENT LIST & CALIBRATION STATUS	
13.	FACILITIES	
14. 15.	REFERENCESATTACHMENTS	
13.	ATTAUNIENTS	



## 1. CERTIFICATE OF COMPLIANCE (SAR EVALUATION)

Applicant: Dongguan Yuanfeng Technology Co., Ltd

NO.62, South Fumin Road, Fumin Industrial Park, Dalang Town,

Dongguan City, Guangdong, P.R. China

Manufacturer: Dongguan Yuanfeng Technology Co., Ltd

NO.62, South Fumin Road, Fumin Industrial Park, Dalang Town,

Dongguan City, Guangdong, P.R. China

**Equipment Under Test:** Connected PND

Trade Name: N/A

Model Number: PF10-5002

Series Model Number: PF10-5001; PF10-5003; PF10-5004; PF10-5005; PF10-5006;

PF10-5007; PF10-5008; PF10-5009; PF10-5001HD; PF10-5002HD; PF10-5003HD; PF10-5004HD; PF10-5005HD; PF10-5009HD

**Devices supporting GPRS: Class B** 

Model Discrepancy: N/A

Date of Test: December 9, 2010

Device Category: PORTABLE DEVICES

Exposure Category: GENERAL POPULATION/UNCONTROLLED EXPOSURE

Application Type: Certification

APPLICABLE STANDARDS								
STANDARD TEST RESULT								
FCC OET 65 Supplement C	No non-compliance noted							
Deviation from Appli	cable Standard							
None								

The device was tested by Compliance Certification Services Inc. in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C (Edition 01-01). The test results in this report apply only to the tested sample of the stated device/equipment. Other similar device/equipment will not necessarily produce the same results due to production tolerance and measurement uncertainties.

Approved by:

Tested by:

Spring Zhou RF Manager

Compliance Certification Services Inc.

Sean Yu Test Engineer

Compliance Certification Services Inc

Sean yu

Page 3 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

# 2. EUT DESCRIPTION

Product	Connected PND					
Model Number	PF10-5002					
Series Model Number	PF10-5001; PF10-5003; PF10-5004; PF10-5005; PF10-5006; PF10-5007; PF10-5008; PF10-5009; PF10-5001HD; PF10-5002HD; PF10-5003HD; PF10-5005HD; PF10-5007HD; PF105008HD; PF10-5009HD					
Trade Name	N/A					
Model Discrepancy	The same product for different ma	rket,only the model name is different				
Frequency Range	GSM / GPRS: 850: 824.2 ~ 848.8 MHz GSM / GPRS: 1900: 1850.2 ~ 1909.8 MHz					
Operating Mode	Maximum continuous output					
Transmit Power(Average)	850 Band: GSM 850: 32.88 dBm GPRS 850: 32.52 dBm	1900 Band: GSM 1900: 30.71 dBm GPRS 1900: 29.27 dBm				
Max. SAR (1g):	GSM 850: Body: 0.34 W/kg (Body position) GPRS: 0.27 W/kg (Body position) PCS1900: Body: 0.30 W/kg (Body position) GPRS: 0.24 W/kg (Body position)					
Modulation Technique	GSM / PCS: GMSK					
Antenna Specification	Antenna. Type: GSM: PIFA antenna					
Accessories	Battery: NOMINAL VOLTAGE: 3.7V CHARGE VOLTAGE: 4.2V CAPACTIY:1500mAh Model:524558					

Page 4 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

#### 3. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC

The US Federal Communications Commission has released the report and order "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996. The order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g for an uncontrolled environment and 8.0 mW/g for an occupational/controlled environment as recommended by the ANSI/IEEE standard C95.1-1992. According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guide-lines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.

#### 4. TEST METHODOLOGY

The Specific Absorption Rate (SAR) testing specification, method and procedure for this Mobile Phone is in accordance with the following standards:

47 CFR Part 2 (2.1093)

OET Bulletin 65 Supplement C (Edition 01-01)

IEEE C95.1-1999

IEEE 1528 – 2003 IEEE Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Technique KDB 248227 D01 SAR measurement procedures for 802.11 a/b/g transmitters

KDB 648474 D01 SAR evaluation considerations for handsets with multiple transmitters and antennas

#### 5. DOSIMETRIC ASSESSMENT SETUP

These measurements were performed with the automated near-field scanning system OPENSAR from ATTENNESSA. The system is based on a high precision robot (working range greater than 0.9 m), which positions the probes with a positional repeatability of better than ± 0.02 mm. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The SAR measurements were conducted with the dosimetric probe EP100 1109 (manufactured by SATIMO), designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure described in [7] with accuracy of better than ±10%. The spherical isotropy was evaluated with the procedure described in [8] and found to be better than ±0.25 dB. The phantom used was the SAM Twin Phantom as described in FCC supplement C, IEEE1528 and CENELEC EN50361.


The Tissue simulation liquid used for each test is in according with the FCC OET65 supplement C as listed below

Ingredients	Frequency (MHz)									
(% by weight)	4	50	83	35	9	15	19	000	24	50
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78

Page 5 Rev. 00

Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## **5.1 MEASUREMENT SYSTEM DIAGRAM**

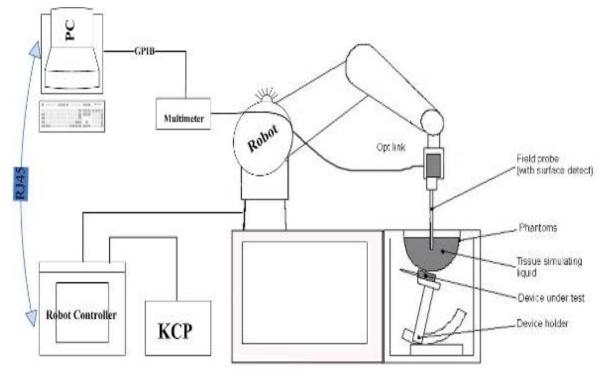

## The OPENSAR system for performing compliance tests consists of the following items:

- A standard high precision 6-axis robot (KUKA) with controller and software.
- KUKA Control Panel (KCP).
- A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
- The functions of the PC plug-in card are to perform the time critical task such as signal filtering, surveillance of the robot operation fast movement interrupts.
- A computer operating Windows 95.
- OPENSAR software.
- Remote control with teaches pendant and additional circuitry for robot safety such as warning lamps, etc.
- The SAM phantom enabling testing left-hand right-hand and body usage.
- The Position device for handheld EUT.
- Tissue simulating liquid mixed according to the given recipes (see Application Note).
- System validation dipoles to validate the proper functioning of the system.

Page 6 Rev. 00

## ·

## **5.2 SYSTEM COMPONENTS**

Comosar is a system that is able to determine the SAR distribution inside a phantom of human being according to different standards. The Comosar system consists of the following items:

- Main computer to control all the system
- 6 axis robot
- Data acquisition system
- Miniature E-field probe
- Phone holder
- Head simulating tissue

The following figure shows the system.

#### **COMOSAR** bench

The mobile phone under test operating at the maximum power level is placed in the phone holder, under the phantom, which is filled with head simulating liquid. The E-Field probe measures the electric field inside the phantom. The OpenSAR software computes the results to give a SAR value in a 1g or 10 g mass.



Date of Issue: December 9, 2010


COMOSAR bench

## Sam Phantom

The SAM Phantom SAM29 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is in compliance with the specification set in IEEE P1528 and CENELEC EN62209-1. The phantom enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot.

**Shell thickness:** 2 mm +/-0.2 mm **Filling Volume:** Approx. 25 liters

**Dimensions (H x L x W):** 810 x 1000 x 500 mm

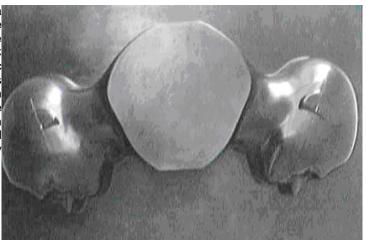

#### **Probe**

For the measurements the Specific Dosimetric E-Field Probe SN11/09 EP100 with following specifications is used.

Dynamic range: 0.01-100 W/kg

Tip Diameter: 5 mm

Distance between probe tip and sensor center:

2.5 mm

Distance between sensor center and inner phantom surface: 4 mm(repeatability better than

+/- 1 mm)


Probe linearity : <0.25 dB Axial Isotropy: <0.25 dB Spherical Isotropy: <0.50 dB

Calibration range: 835 to 2500 MHz for head &

body simulating liquid

Angle between probe axis (evaluation axis ) and

surface normal line : less than 30°

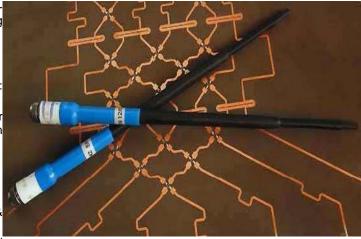

Page 7 Rev. 00

Report No.: KS101208B03-SF FCC ID: YNG-PF100001

Date of Issue: December 9, 2010

## Keithley multimeter

In the measurement chain, the Keithley multimeter is located just after the probe. It measures voltages returned by each dipole, results are then sent to the

PC on the GPIB interface.




#### Scan card

The scan card is an option of the multimeter to make measurements on several channels (10 channels in this case).

Antennessa dosimetric probes are made of 3 orthogonal sensors. For each field measurement, three voltage values must be read. The scan Scan card card, controlled by the PC, will switch between alimentation the 3 channels.

The scan card is installed in the multimeter by Antennessa and should not be removed without Antennessa's approval.

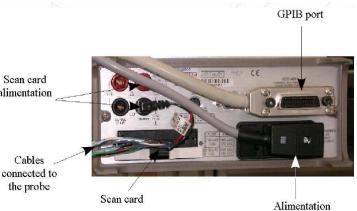

## **Device holder**

The SAR value is approximatively inversely proportional to the square of the distance between the

source and the internal phantom surface. For a source


at 5 mm distance, a positioning uncertainty of ±0.5 mm would produce a SAR uncertainty of ±20 %. An

accurate device positioning is therefore essential for

accurate and repeatable measurements.

This Positioning system allows the translation of the mobile phone along the x, y and z axis, as well as the required rotation around the phantom ear, for the 2

positions defined by standards (0° "cheek" position and 15° "tilt" position).

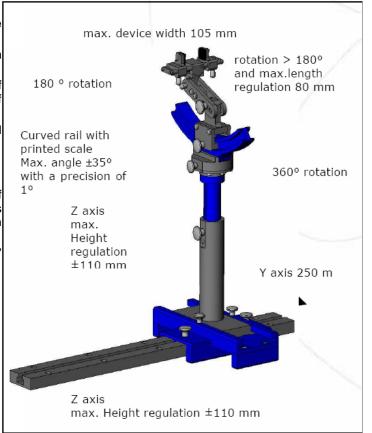

Page 8 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## Validation dipoles

### Frequencies:

Antennessa has a full range of dipoles corresponding to the frequencies defines by the standards :835, 900, 1800, 1900, 2000, 2450MHz


**Adaptation:** S11 < -20dB in specified validation position.


Maximum input Power: 100W


Connectors: SMA

Dimensions: (depends on the dipole frequency)

**Height:** between 200 mm and 300 mm **Length:** between 25 mm and 83 mm

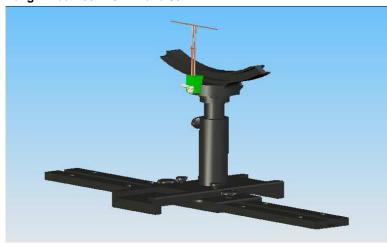



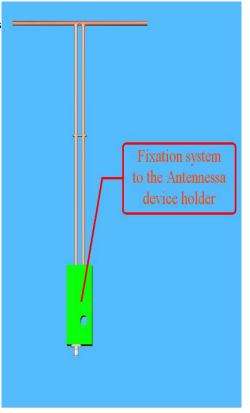

Page 9 Rev. 00



## 6. EVALUATION PROCEDURES

## **DATA EVALUATION**

The COMOSAR post processing software (OPENSAR) automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

> Probe parameters: - Sensitivity Norm<sub>i</sub>, a<sub>i0</sub>, a<sub>i1</sub>, a<sub>i2</sub>

> > - Conversion factor ConvF<sub>i</sub> - Diode compression point dcpi

Device parameters: - Frequency

- Crest factor cf

Media parameters: - Conductivity σ

> - Density  $\rho$

These parameters must be set correctly in the software. They can be found in the component documents or be imported into the software from the configuration files issued for the COMOSAR components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + U_i^2 \cdot \frac{cf}{dcp_i}$$

with = Compensated signal of channel i (i = x, y, z) $V_i$ 

= Input signal of channel i (i = x, y, z)

= Crest factor of exciting field (COMOSAR parameter)  $dcp_i$  = Diode compression point (COMOSAR parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

E-field probes:

 $E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$ 

 $H_i = \sqrt{Vi} \cdot \frac{a_{i10} + a_{i11}f + a_{i12}f^2}{f}$ H-field probes:

= Compensated signal of channel i (i = x, y, z)with

> $Norm_i$  = Sensor sensitivity of channel i (i = x, y, z)

μV/(V/m)<sup>2</sup> for E0field Probes

ConvF= Sensitivity enhancement in solution

= Sensor sensitivity factors for H-field probes aij

= Carrier frequency (GHz) f

Εi = Electric field strength of channel i in V/m

Hi = Magnetic field strength of channel i in A/m

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

Rev. 00 Page 10



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with SAR = local specific absorption rate in mW/g

 $E_{tot}$  = total field strength in V/m

 $\sigma$  = conductivity in [mho/m] or [Siemens/m]

 $\rho$  = equivalent tissue density in g/cm<sup>3</sup>

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{pwe} = \frac{E_{tot}^2}{3770}$$
 or  $P_{pwe} = H_{tot}^2 \cdot 37.7$ 

with  $P_{pwe}$  = Equivalent power density of a plane wave in mW/cm<sup>2</sup>

 $E_{tot}$  = total electric field strength in V/m

 $H_{tot}$  = total magnetic field strength in A/m

Page 11 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## **SAR EVALUATION PROCEDURES**

The procedure for assessing the peak spatial-average SAR value consists of the following steps:

#### Power Reference Measurement

The reference and drift jobs are useful jobs for monitoring the power drift of the device under test in the batch process. Both jobs measure the field at a specified reference position, at a selectable distance from the phantom surface. The reference position can be either the selected section's grid reference point or a user point in this section. The reference job projects the selected point onto the phantom surface, orients the probe perpendicularly to the surface, and approaches the surface using the selected detection method.

#### Area Scan

The area scan is used as a fast scan in two dimensions to find the area of high field values, before doing a finer measurement around the hot spot. The sophisticated interpolation routines implemented in COMOSAR software can find the maximum locations even in relatively coarse grids. The scan area is defined by an editable grid. This grid is anchored at the grid reference point of the selected section in the phantom. When the area scan's property sheet is brought-up, grid was at to 15 mm by 15 mm and can be edited by a user.

#### Zoom Scan

Zoom scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The default zoom scan measures 7 x 7 x 9 points within a cube whose base faces are centered around the maximum found in a preceding area scan job within the same procedure. If the preceding Area Scan job indicates more then one maximum, the number of Zoom Scans has to be enlarged accordingly (The default number inserted is 1).

#### Power Drift measurement

The drift job measures the field at the same location as the most recent reference job within the same procedure, and with the same settings. The drift measurement gives the field difference in dB from the reading conducted within the last reference measurement. Several drift measurements are possible for one reference measurement. This allows a user to monitor the power drift of the device under test within a batch process. In the properties of the Drift job, the user can specify a limit for the drift and have COMOSAR software stop the measurements if this limit is exceeded.

Page 12 Rev. 00

#### SPATIAL PEAK SAR EVALUATION

The procedure for spatial peak SAR evaluation has been implemented according to the IEEE1529 standard. It can be conducted for 1 g and 10 g.

The COMOSAR system allows evaluations that combine measured data and robot positions, such as:

- maximum search
- extrapolation
- · boundary correction
- · peak search for averaged SAR

During a maximum search, global and local maximum searches are automatically performed in 2-D after each Area Scan measurement with at least 6 measurement points. It is based on the evaluation of the local SAR gradient calculated by the Quadratic Shepard's method. The algorithm will find the global maximum and all local maxima within -2 dB of the global maxima for all SAR distributions.

#### **Extrapolation**

Extrapolation routines are used to obtain SAR values between the lowest measurement points and the inner phantom surface. The extrapolation distance is determined by the surface detection distance and the probe sensor offset. Several measurements at different distances are necessary for the extrapolation.

Extrapolation routines require at least 10 measurement points in 3-D space. They are used in the Cube Scan to obtain SAR values between the lowest measurement points and the inner phantom surface. The routine uses the modified Quadratic Shepard's method for extrapolation. For a grid using 7x7x9 measurement points with 5mm resolution amounting to 441 measurement points, the uncertainty of the extrapolation routines is less than 1% for 1 g and 10 g cubes.

#### **Boundary effect**

For measurements in the immediate vicinity of a phantom surface, the field coupling effects between the probe and the boundary influence the probe characteristics. Boundary effect errors of different dosimetric probe types have been analyzed by measurements and using a numerical probe model. As expected, both methods showed an enhanced sensitivity in the immediate vicinity of the boundary. The effect strongly depends on the probe dimensions and disappears with increasing distance from the boundary. The sensitivity can be approximately given as:

$$S\approx S_o + S_b exp(-\frac{z}{a})cos(\pi\frac{z}{\lambda})$$

Since the decay of the boundary effect dominates for small probes (a<< $\lambda$ ), the cos-term can be omitted. Factors Sb (parameter Alpha in the COMOSAR software) and a (parameter Delta in the COMOSAR software) are assessed during probe calibration and used for numerical compensation of the boundary effect. Several simulations and measurements have confirmed that the compensation is valid for different field and boundary configurations.

This simple compensation procedure can largely reduce the probe uncertainty near boundaries. It works well as long as:

- the boundary curvature is small
- the probe axis is angled less than 30\_ to the boundary normal
- the distance between probe and boundary is larger than 25% of the probe diameter
- the probe is symmetric (all sensors have the same offset from the probe tip)

Since all of these requirements are fulfilled in a COMOSAR system, the correction of the probe boundary effect in the vicinity of the phantom surface is performed in a fully automated manner via the measurement data extraction during post processing.

Page 13 Rev. 00

# 7. MEASUREMENT UNCERTAINTY

Uncertainty Component	Sec.	Tol (+- %)	Prob. Dist.	Div.	Ci (1g)	Ci (10g)	1g Ui (+-%)	10g Ui (+-%)	Vi
Measurement System									
Probe calibration	E.2.1	4.7	N	1.0	1.0	1.0	4.7	4.7	000
Axial Isotropy	E.2.2	2.5	R	√3	(1-Cp) <sup>1/2</sup>	(1-Cp) <sup>1/2</sup>	1.0	1.0	∞
Hemispherical Isotropy	E.2.2	4.0	R	√3	√Cp	$\sqrt{c_p}$	1.6	1.6	8
Boundary effect	E.2.3	1.0	R	√3	1.0	1.0	0.6	0.6	8
Linearity	E.2.4	5.0	R	√3	1.0	1.0	2.9	2.9	80
System detection limits	E.2.5	1.0	R	√3	1.0	1.0	0.6	0.6	80
Readout Electronics	E.2.6	1.0	N	1	1.0	1.0	1.0	1.0	8
Reponse Time	E.2.7	0.8	R	√3	1.0	1.0	0.5	0.5	00
Integration Time	E.2.8	2.0	R	√3	1.0	1.0	1.2	1.2	80
RF ambient Conditions-Noise	E.6.1	3.0	R	√3	1.0	1.0	1.7	1.7	8
RF ambient Conditions-Reflections	E.6.1	3.0	R	√3	1.0	1.0	1.7	1.7	80
Probe positioner Mechanical Tolerance	E.6.2	2.0	R	√3	1.0	1.0	1.2	1.2	00
Probe positioning with respect to Phantom Shell	E.6.3	0.4	R	√3	1.0	1.0	0.2	0.2	00
Extrapolation, interpolation and integration Algoritms for Max. SAR Evaluation	E.5	1.0	R	√3	1.0	1.0	0.6	0.6	8
Test sample Related									,
Test Sample Positioning	E.4.2	1.1	N	1.0	1.0	1.0	1.1	1.1	N-1
Device Holder Uncertainty	E.4.1	5.0	N	1.0	1.0	V	5.0	5.0	N-1
Output Power Variation - SAR drift measurement	6.6.2	1.0	R	√3	1.0	1.0	1.7	1.7	00
Phantom and Tissue Parameters	l	l			l			l	
Phantom Uncertainty (Shape and thickness tolerances)	E.3.1	4.0	R	√3	1.0	1.0	2.3	2.3	∞
Liquid conductivity - deviation from target value	E.3.2	5.0	R	√3	0.6	0.4	1.8	1.2	00
Liquid conductivity - measurement uncertainty	E.3.3	5.0	N	1.0	0.6	0.4	3.2	2.2	М
Liquid permitivity - deviation from target value	E.3.2	3.0	R	$\sqrt{3}$	0.6	0.5	1.0	0.9	∞
Liquid permitivity - measurement uncertainty	E.3.3	2.5	N	1.0	0.6	0.5	1.5	1.2	М
Combined Standard Uncertainty			RSS				9.8	9.5	
Expanded Uncertainty (95% Confidence interval)			К				19.6	19.0	

Page 14 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## 8. EXPOSURE LIMIT

(A).Limits for Occupational/Controlled Exposure (W/kg)

Whole-Body Partial-Body		Hands, Wrists, Feet and Ankles
0.4	8.0	20.0

(B). Limits for General Population/Uncontrolled Exposure (W/kg)

Whole-Body Partial-Body		Hands, Wrists, Feet and Ankles
0.08	1.6	4.0

NOTE: Whole-Body SAR is averaged over the entire body, partial-body SAR is averaged over any 1 gram of tissue defined as a tissue volume in the shape of a cube. SAR for hands, wrists, feet and ankles is averaged over any 10 grams of tissue defined as a tissue volume in the shape of a cube.

## **Population/Uncontrolled Environments:**

are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure.

## **Occupational/Controlled Environments:**

are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure, (i.e. as a result of employment or occupation).

# NOTE GENERAL POPULATION/UNCONTROLLED EXPOSURE PARTIAL BODY LIMIT 1.6W/kg

Page 15 Rev. 00



## 9. EUT ARRANGEMENT

Please refer to IEEE P1528

#### 9.1 ANTHROPOMORPHIC HEAD PHANTOM

Figure 7-1a shows the front, back and side views of SAM. The point "M" is the reference point for the center of mouth, "LE" is the left ear reference point (ERP), and "RE" is the right ERP. The ERPs are 15 mm posterior to the entrance to ear canal (EEC) along the B-M line (Back-Mouth), as shown in Figure 7-1b. The plane passing through the two ear reference points and M is defined as the Reference Plane. The line N-F (Neck-Front) perpendicular to the reference plane and passing through the RE (or LE) is called the Reference Pivoting Line (see Figure 7-1c). Line B-M is perpendicular to the N-F line. Both N-F and B-M lines should be marked on the external phantom shell to facilitate handset positioning. Posterior to the N-F line, the thickness of the phantom shell with the shape of an ear is a flat surface 6 mm thick at the ERPs. Anterior to the N-F line, the ear is truncated as illustrated in Figure 7-1b. The ear truncation is introduced to avoid the handset from touching the ear lobe, which can cause unstable handset positioning at the cheek.

Figure 7-1a
Front, back and side view of SAM (model for the phantom shell)



Figure 7-1b
Close up side view of phantom showing the ear region

M EEC N

ERP - ear reference point EEC - entrance to ear canal

Figure 7-1b
Close up side view of phantom showing the ear region

Figure 7-1c
Side view of the phantom showing relevant markings and the 7
cross sectional plane locations

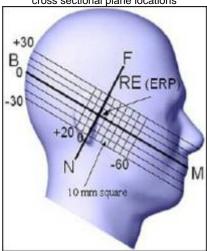


Figure 7-1c
Side view of the phantom showing relevant markings and the 7
cross sectional plane locations

Page 16 Rev. 00



## 9.2 DEFINITION OF THE "CHEEK/TOUCH" POSITION

The "cheek" or "touch" position is defined as follows:

- a. Ready the handset for talk operation, if necessary. For example, for handsets with a cover piece, open the cover. (If the handset can also be used with the cover closed both configurations must be tested.)
- b. Define two imaginary lines on the handset: the vertical centerline and the horizontal line. The vertical centerline passes through two points on the front side of the handset: the midpoint of the width wt of the handset at the level of the acoustic output (point A on Figures 7-2a and 7-2b), and the midpoint of the width wb of the bottom of the handset (point B). The horizontal line is perpendicular to the vertical centerline and passes through the center of the acoustic output (see Figure 7-2a). The two lines intersect at point A. Note that for many handsets, point A coincides with the center of the acoustic output. However, the acoustic output may be located elsewhere on the horizontal line. Also note that the vertical centerline is not necessarily parallel to the front face of the handset (see Figure 7-2b), especially for clamshell handsets, handsets with flip pieces, and other irregularly-shaped handsets.
- c. Position the handset close to the surface of the phantom such that point A is on the (virtual) extension of the line passing through points RE and LE on the phantom (see Figure 7-2c), such that the plane defined by the vertical center line and the horizontal line of the handset is approximately parallel to the sagittal plane of the phantom.
- d. Translate the handset towards the phantom along the line passing through RE and LE until the handset touches the pinna.
- e. e) While maintaining the handset in this plane, rotate it around the LE-RE line until the vertical centerline is in the plane normal to MB-NF including the line MB (called the reference plane).
- f. Rotate the handset around the vertical centerline until the handset (horizontal line) is symmetrical with respect to the line NF.
- g. While maintaining the vertical centerline in the reference plane, keeping point A on the line passing through RE and LE and maintaining the handset contact with the pinna, rotate the handset about the line NF until any point on the handset is in contact with a phantom point below the pinna (cheek). See Figure 7-2c. The physical angles of rotation should be noted.

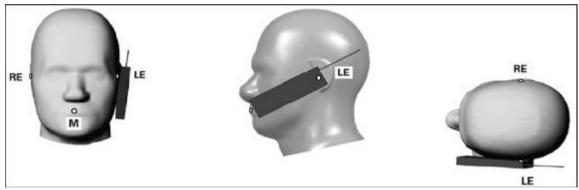


Figure 7.2c

Phone "cheek" or "touch" position. The reference points for the right ear (RE), left ear (LE) and mouth (M), which define the reference plane for handset positioning, are indicated.

Page 17 Rev. 00



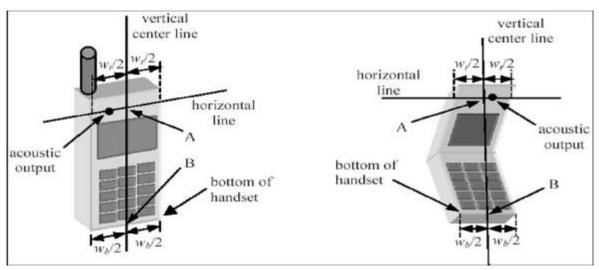


Figure 7.2a Figure 7.2b

## 9.3 DEFINITION OF THE "TILTED" POSITION

The "tilted" position is defined as follows:

- a. Repeat steps (a) (g) of 7.2 to place the device in the "cheek position."
- b. While maintaining the orientation of the handset move the handset away from the pinna along the line passing through RE and LE in order to enable a rotation of the handset by 15 degrees.
- c. Rotate the handset around the horizontal line by 15 degrees.
- d. While maintaining the orientation of the handset, move the handset towards the phantom on a line passing through RE and LE until any part of the handset touches the ear. The tilted position is obtained when the contact is on the pinna. If the contact is at any location other than the pinna (e.g., the antenna with the back of the phantom head), the angle of the handset should be reduced. In this case, the tilted position is obtained if any part of the handset is in contact with the pinna as well as a second part of the handset is contact with the phantom (e.g., the antenna with the back of the head).

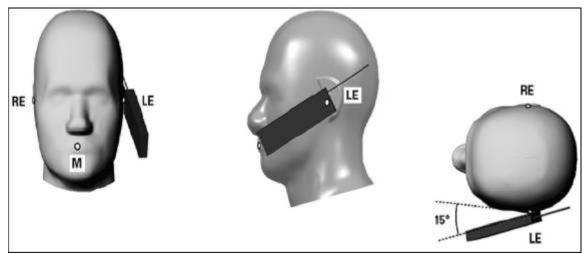


Figure 7-3
Phone "tilted" position. The reference points for the right ear (RE), left ear (LE) and mouth (M), which define the reference plane for handset positioning, are indicated.

Page 18 Rev. 00

## 10. MEASUREMENT RESULTS

## 10.1 TEST LIQUIDS CONFIRMATION

#### SIMULATING LIQUIDS PARAMETER CHECK

The simulating liquids should be checked at the beginning of a series of SAR measurements to determine of the dielectric parameters are within the tolerances of the specified target values

The relative permittivity and conductivity of the tissue material should be within  $\pm$  5% of the values given in the table below. 5% may not be easily achieved at certain frequencies. Under such circumstances, 10% tolerance may be used until more precise tissue recipes are available

#### IEEE SCC-34/SC-2 P1528 RECOMMENDED TISSUE DIELECTRIC PARAMETERS

The head tissue dielectric parameters recommended by the IEEE SCC-34/SC-2 in P1528 have been incorporated in the following table. These head parameters are derived from planar layer models simulating the highest expected SAR for the dielectric properties and tissue thickness variations in a human head. Other head and body tissue parameters that have not been specified in P1528 are derived from the tissue dielectric parameters computed from the 4-Cole-Cole equations and extrapolated according to the head parameters specified in P1528

Target Frequency	He	ad	Body		
(MHz)	$\epsilon_{\rm r}$	σ (S/m)	$\epsilon_{\rm r}$	σ (S/m)	
150	52.3	0.76	61.9	0.80	
300	45.3	0.87	58.2	0.92	
450	43.5	0.87	56.7	0.94	
835	41.5	0.90	55.2	0.97	
900	41.5	0.97	55.0	1.05	
915	41.5	0.98	55.0	1.06	
1450	40.5	1.20	54.0	1.30	
1610	40.3	1.29	53.8	1.40	
1800-2000	40.0	1.40	53.3	1.52	
2450	39.2	1.80	52.7	1.95	
3000	38.5	2.40	52.0	2.73	
5800	45.3	5.27	48.2	6.00	

 $(\varepsilon_r = \text{relative permittivity}, \sigma = \text{conductivity and } \rho = 1000 \text{ kg/m}^3)$ 

Page 19 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## **LIQUID MEASUREMENT RESULTS**

**Date:** December 9, 2010 **Ambient condition:** Temperature 21.2°C; Relative humidity: 53%

Body Sim ulatinf Liquid		Donom et ene	Target	M e a s u red	Deviation[%]	I im i to d [0/ ]		
Frequenc y	Frequency Temp. [°C] Depth [cm		Param eters	Target	Measured	Deviation[%]	Limited[%]	
835 M Hz	835 MHz 20.30 15.00		Perm it iv it y:	55.20	54.71	-0.89	±5	
033 W HZ	20.30	13.00	Conductivity:	0.97	0.97	0.00	± 5	

**Date:** December 9, 2010 **Ambient condition:** Temperature 21°C; Relative humidity: 54%

Body Simulating Liquid			Dono motoro	Tomast	Magazzad	Daviation[0/]	Limitad[0/]
Frequency	Temp. [°C]	Depth (cm)	Parameters	Target	Measured	Deviation[%]	Limited[%]
1900 MHz	20.30	15.00	Permitivity:	53.30	51.50	-3.38	± 5
		15.00	C on ductivity:	1.52	1.51	-0.66	± 5

Page 20 Rev. 00



#### 10.2 SYSTEM PERFORMANCE CHECK

The system performance check is performed prior to any usage of the system in order to guarantee reproducible results. The system performance check verifies that the system operates within its specifications of  $\pm 10\%$ . The system performance check results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.


IEEE P1528 Recommended Reference Value

Frequency (MHz)	1 g SAR	10 g SAR	Local SAR at surface (Above feed point)	Local SAR at surface (y=2cm offset from feed point)
300	3.0	2.0	4.4	2.1
450	4.9	3.3	7.2	3.2
835	9.5	6.2	14.1	4.9
900	10.8	6.9	16.4	5.4
1450	29.0	16.0	50.2	6.5
1800	38.1	19.8	69.5	6.8
1900	38.8	20.4	67.6	6.6
2000	41.1	21.1	74.6	6.5
2450	52.4	24.0	104.2	7.7
3000	63.8	25.7	140.2	9.5

#### SYSTEM PERFORMANCE CHECK MEASUREMENT CONDITIONS

- The measurements were performed in the flat section of the SAM twin phantom filled with head and body simulating liquid of the following parameters.
- The OPENSAR system with an E-field probe EP\_100 SN:1109 was used for the measurements.
- The dipole was mounted on the small tripod so that the dipole feed point was positioned below the center marking of the flat phantom section and the dipole was oriented parallel to the body axis (the long side of the phantom). The standard measuring distance was 15 mm (below 1 GHz) and 10 mm (above 1 GHz) from dipole center to the simulating liquid surface.
- The coarse grid with a grid spacing of 10mm was aligned with the dipole.
- Special 7x7x7 fine cube was chosen for cube integration (dx= 5 mm, dy= 5 mm, dz= 5 mm).
- Distance between probe sensors and phantom surface was set to 2.5 mm.
- The dipole input power was 1W±3%.
- The results are normalized to 1 W input power.

The depth of Liquid must above 15cm

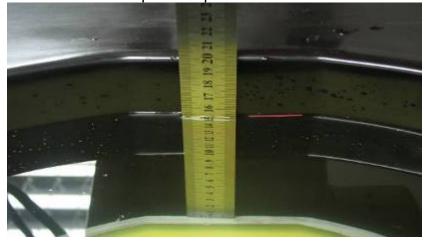

Page 21 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## SYSTEM PERFORMANCE CHECK RESULTS

Dipole: DIPOLE850 SN:SN 48/05 DIPC32

**Date:** December 9, 2010 **Ambient condition:** Temperature 21.2°C; Relative humidity: 53%

Body Simulatinf Liquid			Parameters	Tonast	get Measured	Deviation[%]	Lim ited[%]
Frequency	Temp.[°C]	Depth [cm]	Parameters	Target	Measured	Deviation[%]	Lim itea[%]
8 35 .0 0	20.30	20.30 15.00	Permitivity:	55.20	5 4.7 1	-0.89	±5
			Conductivity:	0.97	0.97	0.10	± 5
			1g SAR:	9.62	9.72	1.04	± 5

Dipole: DIPOLE1900 SN:SN 48/05 DIPG35

**Date:** December 9, 2010 **Ambient condition:** Temperature 21°C; Relative humidity: 54%

Body Simulatinf Liquid		Parameters	Target	Measured	Deviation[%]	Lim ited[%]	
Frequency	Temp.[°C]	Depth [cm]	Parameters	1 arget	Wieasuieu	Deviation[ % ]	Lilli iteu[%]
		15.00	Permitivity:	53.30	51.50	-3.38	±5
1900.00	20.30		Conductivity:	1.52	1.51	-0.66	± 5
			1g SAR:	41.60	40.80	-1.92	± 5

Page 22 Rev. 00

Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

## **10.3 EUT TUNE-UP PROCEDURES**

The following procedures had been used to prepare the EUT for the SAR test.

 To setup the desire channel frequency and the maximum output power. A Radio Communication Tester "CMU200" was used to program the EUT.

#### **GSM 850 / GPRS850**

Network Support: GSM only / GPRS

Main Service: Circuit Switched / Packet data

Power Setting: 33dBm / 33dBm

Class: B

Class: 12 (4 Up / 1 Down)

## **GSM 1900 / GPRS 1900**

Network Support: GSM only / GPRS

Main Service: Circuit Switched / Packet data

Power Setting: 30dBm / 30dBm

Class: B

Class: 12 (4 Up / 1 Down)

 Maximum conducted power was measured by replacing the antenna with an adapter for conductive measurement.

#### Bluetooth

- a. The client supplied a special driver to program the EUT, allowing it to continually transmit the specified maximum power and change the channel frequency.
- b. The conducted power was measured at the high, middle and low channel frequency before and after the SAR measurement.
- c. During SAR test, the highest output channel per band measured first, and then if necessary, the other channels were measured according to the normal procedures.

Conducted output power (Average)(dBm)

GSM		GSM	mode	GPRS mode		
		before	after	before	after	
	Ch 128	32.88	32.80	32.52	32.47	
GSM850	Ch 190	32.54	32.53	32.42	32.41	
	Ch 251	32.41	32.40	32.40	32.37	
0014		GSM	mode	GPRS	mode	
G	2M	0011		0.110		
GS	SM	before	after	before	after	
GS	Ch 512		I			
GSM1900		before	after	before	after	


Page 23 Rev. 00

Face Up

Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010


## **10.4 SAR MEASUREMENT RESULTS**

## **Body position(5mm)**

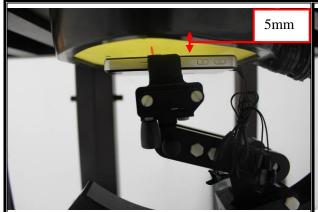

Body position face up

Fixed

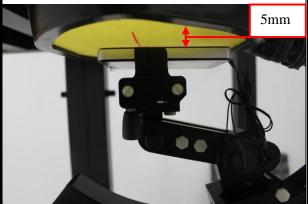

**Body position face down** 

0.29

Test mode. <b>Gall 630</b> , Duty Cycle. 12.3%, Crest Factor. 6						15.0 611
EUT	EUT Antenna		Frequency		SAR (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Face Down	Fixed	128	824.2	20.3	0.34	1.6
						1 1.0

20.3

Test mode: **GPRS 850**, Duty Cycle: 50%, Crest Factor: 2 Depth of liquid: 15.0 cm

824.2

EUT Antonno		Frequency		Liquid	SAR (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Face Down	Fixed	128	824.2	20.3	0.27	1.6
Face Up	Fixed	128	824.2	20.3	0.27	1.6


Notes: 1) Front panel / Bottom face in parallel with flat phantom

128


Page 24 Rev. 00

<sup>2)</sup> Please refer to attachment for the result presentation in plot format.

## **Body position(5mm)**

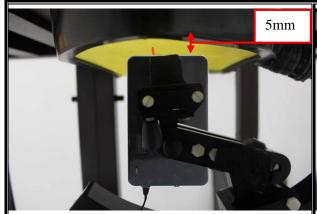



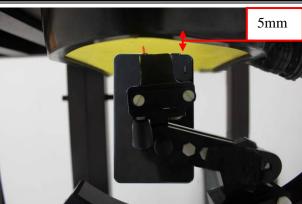

**Body position Right edge** 

Test mode: <b>GSM 850</b> , Duty Cycle: 12.5%, Crest Factor: 8	Depth of liquid: 15.0 cm
--	--------------------------

EUT	EUT		Frequency		SAR (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Left edge	Fixed	128	824.2	20.3	0.30	1.6
Right edge	Fixed	128	824.2	20.3	0.26	1.0

Test mode: **GPRS 850**, Duty Cycle: 50%, Crest Factor: 2 Depth of liquid: 15.0 cm


			_		_	
EUT	Antonno	Frequency		Liquid	<b>SAR</b> (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Left edge	Fixed	128	824.2	20.3	0.26	1.6
Right edge	Fixed	128	824.2	20.3	0.24	1.0

Notes: 1) Front panel / Bottom face in parallel with flat phantom


Page 25 Rev. 00

<sup>2)</sup> Please refer to attachment for the result presentation in plot format.

## **Body position(5mm)**

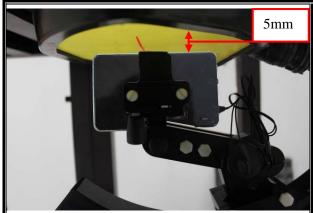

**Body position Rear edge** 

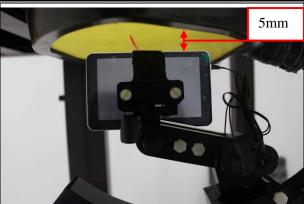

**Body position Tip edge** 

EUT	EUT Antonno		Frequency		SAR (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Rear edge	Fixed	128	824.2	20.3	0.23	1.6
Tip edge	Fixed	128	824.2	20.3	0.23	1.0

Test mode: **GPRS 850**, Duty Cycle: 50%, Crest Factor: 2 Depth of liquid: 15.0 cm


EUT	Antonno	Frequency		Liquid	<b>SAR</b> (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Rear edge	Fixed	128	824.2	20.3	0.22	1.6
Tip edge	Fixed	128	824.2	20.3	0.24	1.6

Notes: 1) Front panel / Bottom face in parallel with flat phantom


Page 26 Rev. 00

<sup>2)</sup> Please refer to attachment for the result presentation in plot format.

## **Body position(5mm)**

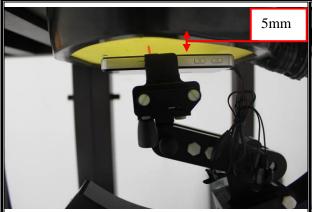



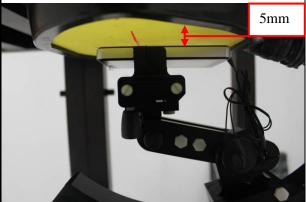

**Body position face down** 

Test mode: <b>GSM 1900</b> , Duty Cycle: 12.5%, Crest Factor: 8					Depth of liquid:	15.0 cm
EUT	Antenna	Frequency		Liquid	<b>SAR</b> (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Face Down	Fixed	810	1910.0	20.3	0.30	1.6
Face Up	Fixed	810	1910.0	20.3	0.26	1.0

Test mode: **GPRS 1900**, Duty Cycle: 50%, Crest Factor: 2 Depth of liquid: 15.0 cm


EUT Antonno		Frequency		Liquid	<b>SAR</b> (1g)	Limit
Position	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Face Down	Fixed	810	1910.0	20.3	0.22	1.6
Face Up	Fixed	810	1910.0	20.3	0.23	1.0

Notes: 1) Front panel / Bottom face in parallel with flat phantom


Page 27 Rev. 00

<sup>2)</sup> Please refer to attachment for the result presentation in plot format.

**Body position(5mm)** 

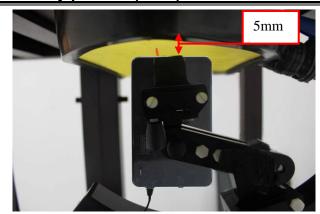

**Body position Left edge** 

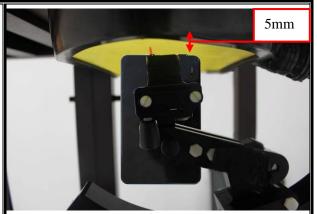

**Body position Right edge** 

Test mode: **GSM 1900**, Duty Cycle: 12.5%, Crest Factor: 8 Depth of liquid: 15.0 cm

CLIT Desition	Antenna	Frequency		Liquid	<b>SAR</b> (1g)	Limit
EUT Position		Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Left edge	Fixed	810	1910.0	20.3	0.28	1.6
Right edge	Fixed	810	1910.0	20.3	0.29	1.0

Test mode: **GPRS 1900**, Duty Cycle: 50%, Crest Factor: 2 Depth of liquid: 15.0 cm

EUT Position	Antenna	Frequency		Liquid	<b>SAR</b> (1g)	Limit
EUT POSITION	Antenna	Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Left edge	Fixed	810	1910.0	20.3	0.24	1.6
Right edge	Fixed	810	1910.0	20.3	0.24	1.0


Notes: 1) Front panel / Bottom face in parallel with flat phantom

Page 28 Rev. 00


<sup>2)</sup> Please refer to attachment for the result presentation in plot format.

Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

**Body position(5mm)** 

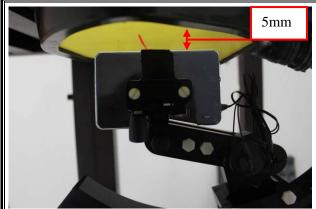

**Body position Rear edge** 

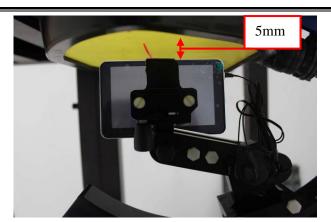

**Body position Tip edge** 

Test mode: **GSM 1900**, Duty Cycle: 12.5%, Crest Factor: 8 Depth of liquid: 15.0 cm

EUT Position	Antenna	Frequency		Liquid	<b>SAR</b> (1g)	Limit
EUT POSITION		Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Rear edge	Fixed	810	1910.0	20.3	0.23	1.6
Tip edge	Fixed	810	1910.0	20.3	0.22	1.0

Test mode: **GPRS 1900**, Duty Cycle: 50%, Crest Factor: 2 Depth of liquid: 15.0 cm

EUT Position	Antenna	Frequency		Liquid	<b>SAR</b> (1g)	Limit
EUT POSITION		Channel	MHz	Temp_°C	(W/kg)	(W/kg)
Rear edge	Fixed	810	1910.0	20.3	0.21	1.6
Tip edge	Fixed	810	1910.0	20.3	0.22	1.0

Notes: 1) Front panel / Bottom face in parallel with flat phantom

Page 29 Rev. 00

<sup>2)</sup> Please refer to attachment for the result presentation in plot format.



Report No.: KS101208B03-SF FCC ID: YNG-PF100001

Date of Issue: December 9, 2010

# 11. EUT PHOTO






Page 30 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

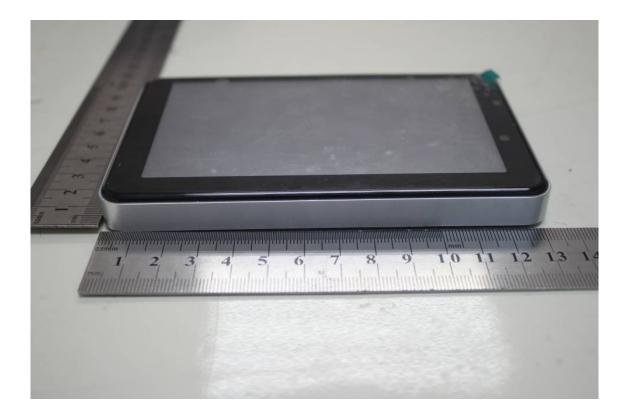



Page 31 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001

Date of Issue: December 9, 2010






Page 32 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

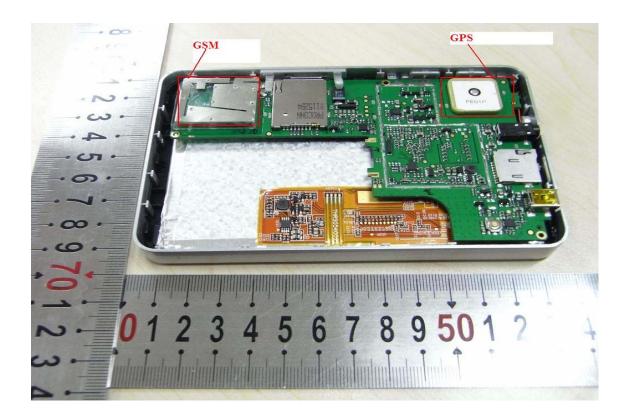



Page 33 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010



Page 34 Rev. 00

# 12. EQUIPMENT LIST & CALIBRATION STATUS

Name of Equipment	Manufacturer	Type/Model	Serial Number	Calibration Due
P C	HP	PV 3.06GHz	375052-AA1	N/A
Signal Generator	Agilent	E8257C	MY43321570	03/24/2011
MultiMeter	Keithley	2000	1015843	05/25/2011
S-Parameter Network Analyzer	Agilent	E5071B	MY42301382	03/24/2011
Wireless Communication Test Set	R&S	CMU200	SN:B23-03291	05/25/2011
Power Meter	Agilent	E4416A	QB41292714	03/24/2011
E-field PROBE	ANTENNESSA	EP_100	SN1109	05/04/2011
DIPOLE 835	ANTENNESSA	DIPC32	SN 48/05	02/09/2011
DIPOLE 1900	ANTENNESSA	DIPG35	SN 48/05	02/09/2011
POSITIONING DEVICE	ANTENNESSA	MSH_14	SN 41_05	N/A
DUMMY PROBE	ANTENNESSA	DP_12	SN 39_05	N/A
SAM PHANTOM	ANTENNESSA	SAM29	SN 41_05	N/A
PHANTON WOOD TABLE	ANTENNESSA	N/A	N/A	N/A
6 AXIS ROBOT	KUKA	KR3	846428	N/A
ROBOT KRC	KUKA	KCP2	01436	N/A
CHANELS SCAN CARD	KEITHLEY	2000	2000-172-01B	N/A
PROBE/ROBOT POSITIONING DEVICE	ANTENNESSA	MSH14	SN 41_05	N/A
LIQUID CALIBRATION KIT	ANTENNESSA	41/05 OCP9	00425167	N/A

Page 35 Rev. 00

Date of Issue: December 9, 2010



## 13. FACILITIES

All measurement facilities used to collect the measurement data are located at

No.10, Weiye Rd., Innovation Park, Eco & Tec. Development Part, Kunshan City, Jiangsu Province, China.

## **14. REFERENCES**

- [1] Federal Communications Commission, \Report and order: Guidelines for evaluating the environmental effects of radiofrequency radiation", Tech. Rep. FCC 96-326, FCC, Washington, D.C. 20554, 1996.
- [2] FCC 47 CFR Part 2 "Frequency Allocations and Radio Treaty Matters; General Rules and Regulations"
- [3] IEEE Std. C95.1-1999, "IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz", 1999
- [4] IEEE Std. 1528-2003, "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", December 2003
- [5] FCC OET Bulletin 65 (Edition 97-01) Supplement C (Edition 01-01), "Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields", June 2001
- [6] SATIMO ANTENNESSA System Handbook
- [7] FCC KDB 248227 D01 v01r02, "SAR Measurement Procedures for 802.11 a/b/g Transmitters", May 2007
- [8] FCC KDB 447498 D01 v04, "Mobile and Portable Device RF Exposure Procedures and Equipment Authorization Policies", November 2009
- [9] FCC KDB 447498 D02 v02, "SAR Measurement Procedures for USB Dongle Transmitters", November 2009
- [10] FCC KDB 616217 D01 v01r01, "SAR Evaluation Considerations for Laptop Computers with Antennas Built-in on Display Screens", November 2009
- [11] FCC KDB 616217 D03 v01, "SAR Evaluation Considerations for Laptop/Notebook/Notebook and Tablet Computers", November 2009
- [12] FCC KDB 648474 D01 v01r05, "SAR Evaluation Considerations for Handsets with Multiple Transmitters and Antennas", September 2008
- [13] FCC KDB 941225 D01 v02, "SAR Measurement Procedures for 3G Devices CDMA 2000 / Ev-Do / WCDMA / HSDPA / HSPA", October 2007
- [14] FCC KDB 941225 D03 v01, "Recommended SAR Test Reduction Procedures for GSM / GPRS / EDGE", December 2008
- [15] FCC KDB 941225 D04 v01, "Evaluating SAR for GSM/(E)GPRS Dual Transfer Mode", January 27 2010

Page 36 Rev. 00



Report No.: KS101208B03-SF FCC ID: YNG-PF100001 Date of Issue: December 9, 2010

# 15. ATTACHMENTS

Exhibit	Content
1	System Performance Check Plots
2	SAR Test Plots
3	Probe calibration report EP100 sn11/09
4	Dipole calibration report DIPOLE850 SN:SN 48/05 DIPC32
5	Dipole calibration report DIPOLE1900 SN: SN 48/05 DIPG35

## **END OF REPORT**

Page 37 Rev. 00