

INSTRUCTION MANUAL

Wireless Speaker Box
MS-1684BT





ACCESSORIES

Wireless Speaker Box: 1PC
Charging Cable: 1PC
User Manual: 1PC

SPECIFICATIONS

Loudspeaker: 3 inch
Input voltage: DC 5V
Output power: 10W
Support: Blue-Connect, Micro SD/TF, USB, FM, EQ Mode, TWS Mode, RGB Light Mode
Battery: built-in rechargeable 1800mAh Lithium-ion
Operation range: 10M
Frequency response: 100Hz-20KHz
Distortion: ≤10%
S/N ratio: ≥80dB
Multimedia input: Micro SD/TF, USB
FM frequency range: 87.5-108.0Mhz

DESCRIPTION OF PARTS

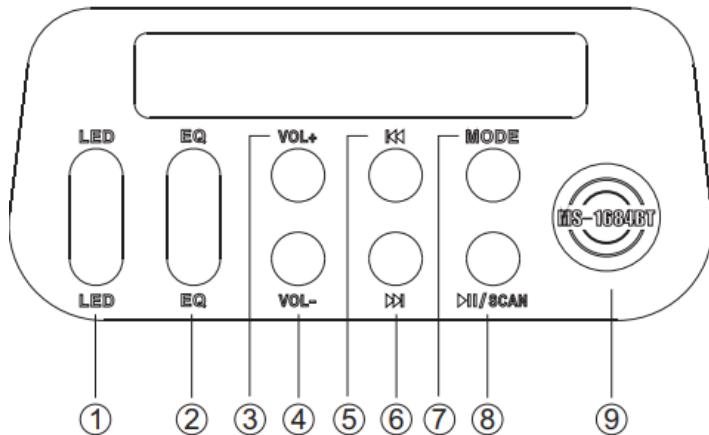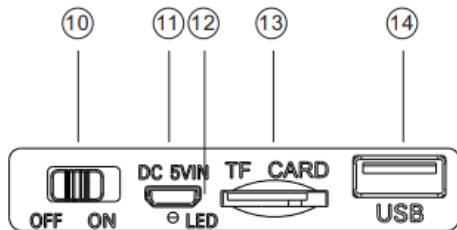

1. RGB light mode / Long-press can close or open the light
2. EQUALIZER mode: Normal / Pop / Rock / Jazz / Country
3. Volume+
4. Volume-

5. Previous song
6. Next song
7. Speaker modes button (Mode1:Blue-Connect; Mode2:FM Mode; Mode3:USB/TF) / Long-press to connected the TWS
8. Play/Pause/SCAN (Auto search in FM mode) / Long-press the button can connected or disconnected the Blue-Conne
9. Item number
10. OFF/ON
11. Mirco USB Charging port (DC 5V)
12. Charging LED
13. Micro SD(TF) card slot
14. USB slot

HOW TO CONNECT THE WIRELESS SPEAKER

Turn on the speaker unit and the Mobile or other devices, and search for the unit's model name "MS-1684BT" to pair the two devices.

Once paired before, it will automatically connect after the unit is turned on.

WIRELESS

Turn on the speaker and it will come into the Wireless mode directly. After pairing the device, it can play the music. Press "▶ II" button to Play/Pause. Press "◀◀" or "▶▶" button to be previous track or next track, press "VOL+" or "VOL-" button to increase or decrease the Volume.

USB/TF CARD

Insert the U flash memory or TF card into the USB/TF slot, the speaker box will read the MP3 format music automatically. Press "▶ II" button to Play/Pause. Press "◀◀" or "▶▶" button to be previous track or next track, press "VOL+" or "VOL-" button to increase or decrease the Volume.

PS: The memory size of USB / Micro SD devices which can be supported up to 32GB.

FM RADIO

Press ▶ II/SCAN to search FM channels automatically. This operation will scan all FM stations and Pre-record them to memory. The scan procedure will take several minutes and cannot be interrupted. Once completed, press "◀◀" or "▶▶" button to be previous track or next track, press "VOL+" or "VOL-" button to increase or decrease the Volume.

RGB LIGHT MODE

There are three different RGB light modes. Short press "LED" button to switch between different RGB

modes. The last used RGB light mode will be stored in the speaker memory before switching it off, and it will be restored once the speaker unit is powered on the following time. Long-press the LED button can open/close the light.

EQ MODE

There are five different EQ modes. Press "EQ" button to switch between different EQ modes, such as Normal / Pop / Rock / Jazz / Country

TWS

Two the same model speakers can be connected to one wireless device at the same time. First, turn the speakers on, then choose one unit and long press its "MODE" button for several seconds; then you will hear the sound of "Ding~" to indicate that the two units have paired successfully. Please ensure before pairing that the two units are not connected with other devices.

CHARGING

Plug the USB cable into the speaker's charging port and connect to the power source. The RED LED indicator on panel will be lit when the unit is charging. When it full the RED LED light will close.

LED LIGHT STATUE

Statue	Blue light	Red light
Quick flashing	Searching blue-connect / FM SCAN	/
Slow flashing	Playing	/
Long bright	Pause / No music playing	Charging

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.