


THANK YOU FOR CHOOSING OUR PRODUCT. IN ORDER TO SAFELY ENJOY THIS PRODUCT, PLEASE READ THIS MANUAL CAREFULLY BEFORE USING. PLEASE KEEP IT FOR FUTURE REFERENCE.

For ages 3+


GRAVITY DRIFT CHAMPION CAR

1. Install batteries in the Controller

- 1) Open the battery cover on the controller.
- 2) Install the battery with correct polarity.
- 3) Replace the battery cover.

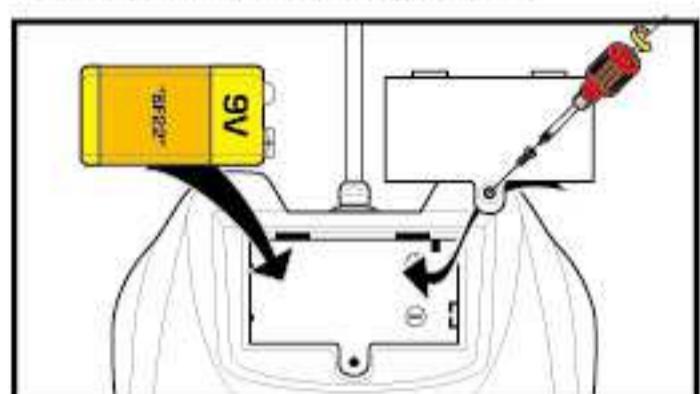


(fig.1) 1x9V battery (not included)

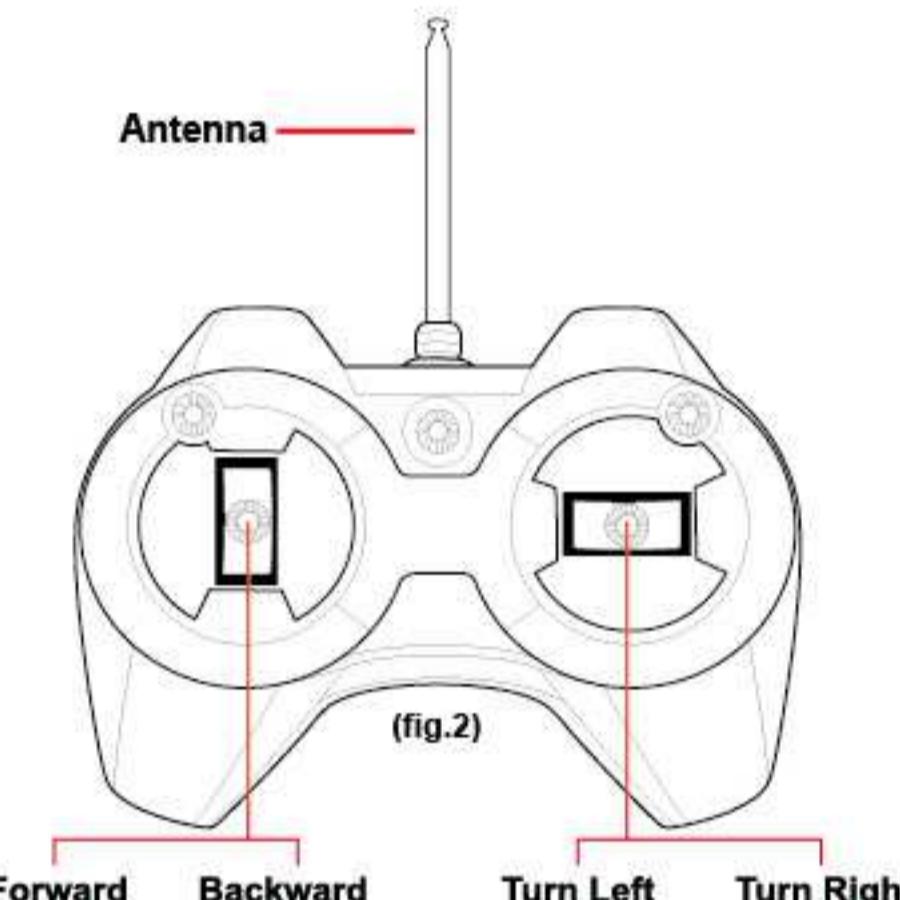

Forward Backward Turn Left Turn Right

Operations


1. Turn on the controller and car. Push the left control stick to "up" or "down", the car will drive forward or backward. Push the right control stick to "left" or "right", the car will turn left or right.
2. Leave the control stick in the middle, the car awaits orders.
3. When the car will not drive straight, adjust directional control switch on the car. (Fig. 3) When the car is veering to the right, turn the button to left. When the car is veering to the left, turn the button to the right.
4. You can change from drifting tires to 4 non-skid High Speed Tires. As in (fig. 4).
5. When not in use, turn off the car and the controller to save energy.

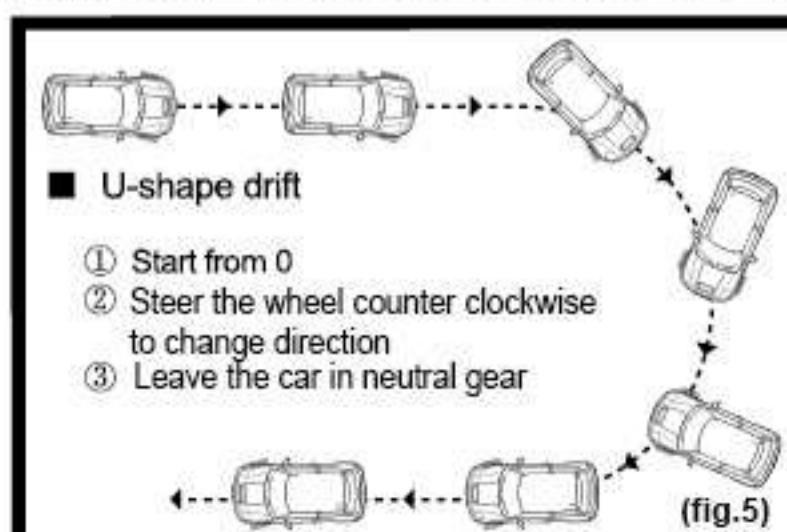

■ U-shape drift

- ① Start from 0
- ② Steer the wheel counter clockwise to change direction
- ③ Leave the car in neutral gear

(fig.5)

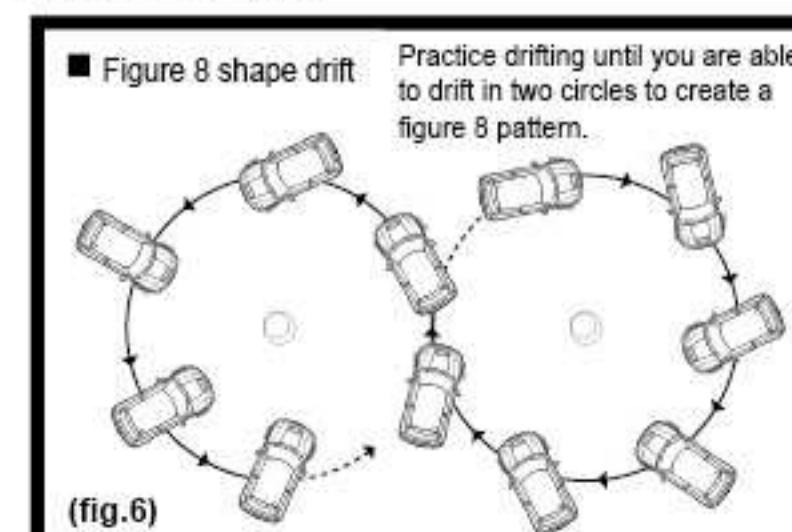


■ Figure 8 shape drift

Practice drifting until you are able to drift in two circles to create a figure 8 pattern.


(fig.6)

2. Install 6 "AA" batteries into the car

- 1) Open the battery cover on the bottom of the car.
- 2) Ensure that the positive (+) and negative (-) battery ends are aligned with the "+" and "-" marked inside the battery compartment.
- 3) Replace the battery cover.

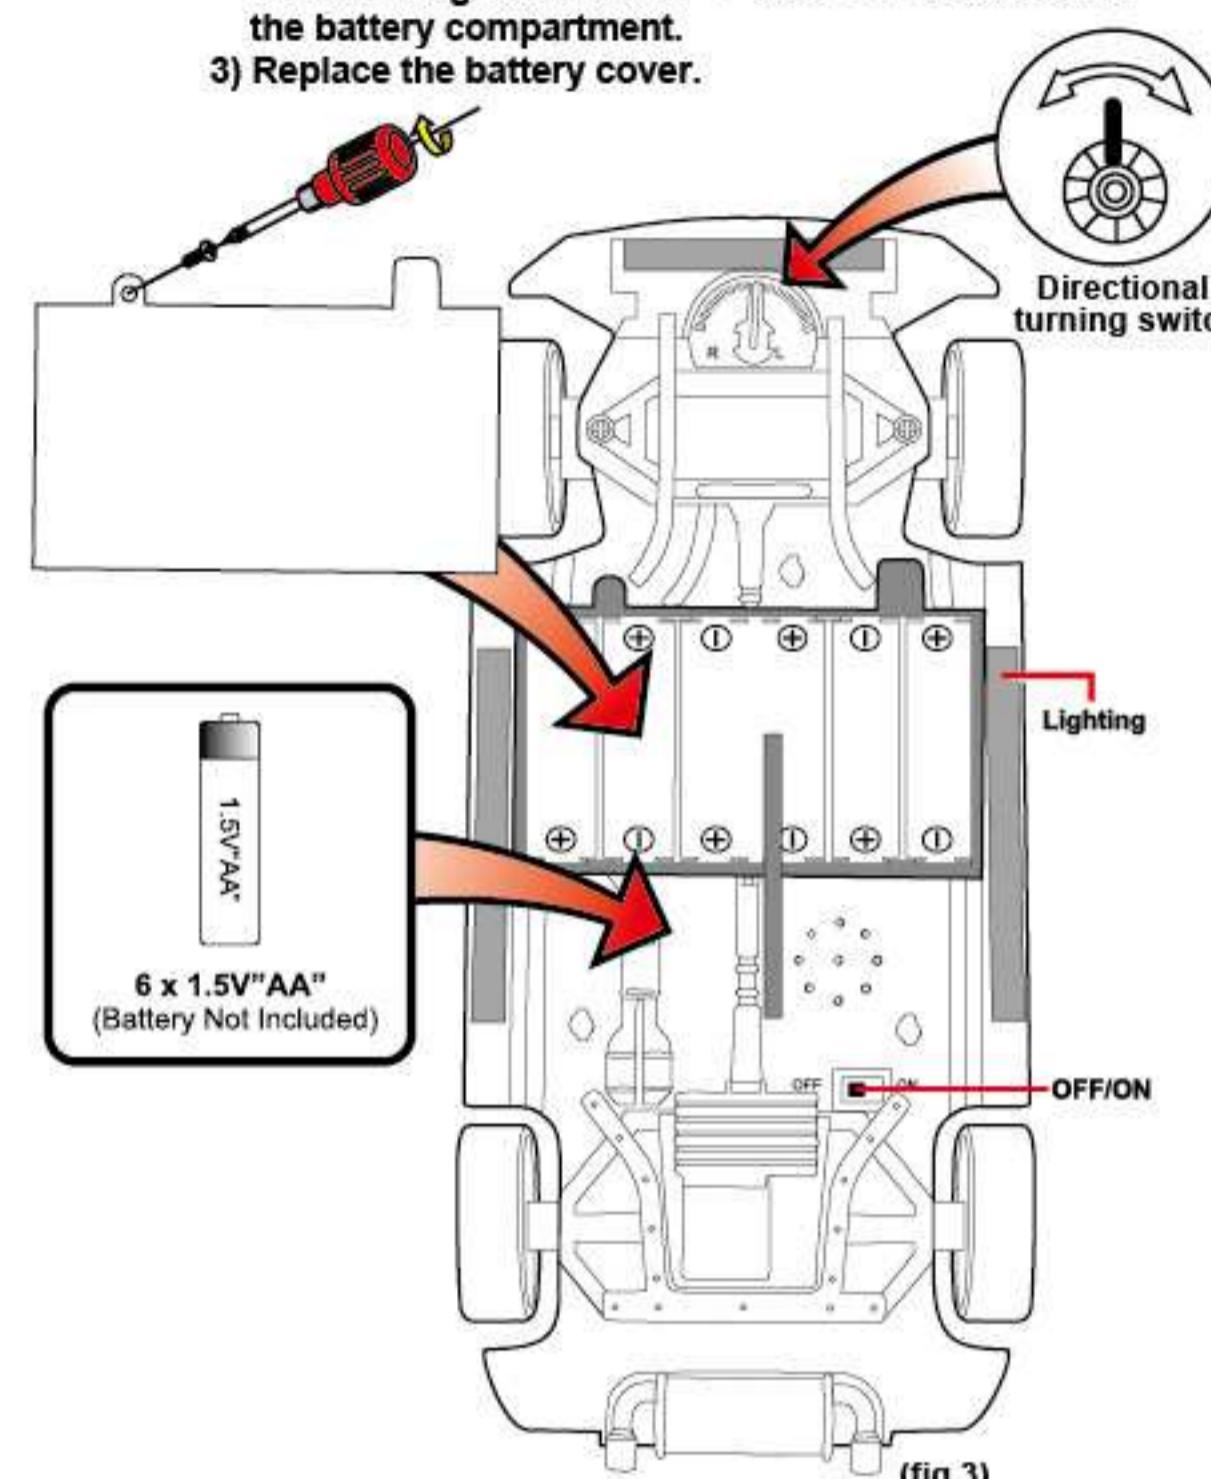

(fig.3)

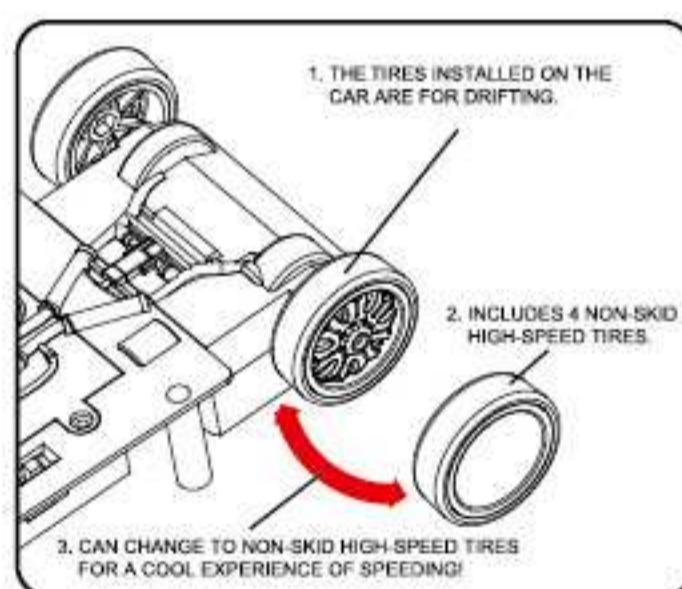

(fig.4)

It is recommended for children ages 3+, and should always be used with adult supervision.

CAUTIONS:

WARNING:

- Not for children under 3 years of age due to small parts.
- Do not try to stop toy while it is in motion.
- Keep hands, face and hair away from all moving parts.
- Exercise caution during use at all times.
- Do not allow children to disassemble the transmitter or controller by themselves.
- Do not operate toy in the vicinity of other people, animals or other obstructions.
- If toy is broken during use, it should be checked or repaired by an adult.
- Remove the batteries from the transmitter and controller when not in use for a longer battery life.
- All battery types must be recycled or disposed of properly.
- Please always read the instruction manual carefully before operating toy.
- Specifications and colors of content may vary from illustrations.

BATTERY CAUTIONS:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged by an adult.
- Different types of batteries or a mix of new and used batteries are not to be used.
- Batteries to be inserted with correct polarity.
- The supply terminals are not to be short-circuited.
- Exhausted batteries are to be removed and properly discarded as they will hinder performance.
- Always use fresh and/or fully charged batteries.
- Please check the wire, plug, shell and other parts of charger periodically and if any damage, stop using until fully repaired.

FCC Label Compliance Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's Authority to operate the equipment.

Frequency: 27.145Mhz / 49.860Mhz Field strength: 52.0dBuV/m at 3 m
Control distance: about 15-20 meters

Average Value: 1000uV=80dBuV/m @3m

Peak Value: 100dBuV/m @3m

CONFORMS TO THE SAFETY REQUIREMENTS
OF CPSIA AND ASTM F963 STANDARDS.

!
WARNING:
CHOKING HAZARD - small parts,
Not for children under 3 years.



IMPORTED BY:
GOLDEN VIKING SPORTS
21929 - 67th AVENUE SOUTH
KENT, WA, USA 98032

031JF

Made in China