FCC STATEMENT

1. This device complies with Part 15 of the ECC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radia frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

NOTE: This equipment has been fested and found to comply with the limits for a Class. 8 signal pursuant in Part 15 or the FCC.

Riber. These lambs and designed to provide assembles providen against hermit interference is a needestal installation. This equipment generales, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful indeference to indo communications. However, there is no guarantee that interference will not course a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by unring the equipment off and or, the user is encouraged to try to correct the interference by one or more of the following measures:

- Regrient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help



-the passion of sound-



INSTALL GUIDE

SRAT10-BK

SHAKER SERIES ACTIVE FLOORSTANDING LOUDSPEAKERS



Welcome!

Thank you for your interest in VM Audio products. Our goal is to enhance your listening experience. The Shaker Series was designed as the economical solution for a performance craving, casual consumer. The experts and engineers at VM Audio have meticulously tested and designed this product with a reasonable price tag to fit any budget. Let the Shaker Series maximize the value of your investment.

About This Manual

This user guide describes the controls on the speaker system. You can use the controls on the remote if they have the same or similar names as those on the control panel.

Specifications

Loudspeaker Type	Full Range System
Cabinet Color	Phantom Black
High Frequency	1 1/2" Composite Soft Dome
Midrange Driver	4" Treated Composite Fiber
Bass Driver	8" Dual Pulp Cone
Audio Input	Analog RCA, Bluetooth, USB, SD
Frequency Range	40 Hz - 20 kHz
Power (RMS/Peak)	300W / 1000W
Dimensions (H x W x D)	32.68" x 6.38" x 12.20"
Operating Voltage	120V
Bluetooth Wireless Range	30 ft.
Microphone Input Jack	1/4" / 6.3mm



Limited Warranty Agreement (contd)

Include a copy of the original receipt or invoice with the purchase date, dealer's name, customer's name and invoice number clearly visible. Manufacturing date may be used if no proof of purchase is provided. The customer will pay to ship the defective product; COD will not be accepted.

Please follow the above instructions carefully to prevent voiding your warranty.

Your Warranty Service Does Not Cover the Following:


- Products not purchased from an Authorized VM Audio Dealer
- Damages from poor installation by not following the included instruction manual.
- Damages due to excessive moisture, heat and other elements from improper care.
- Evidence of tampering or repair by non-authorized personnel.
- Products not issued an RMA number.
- Damage during freight from poor packaging or handling.
- Return shipping on non-defective items.

Warranty Turnaround Time

It is VM Audio's goal to turnaround the merchandise in a timely fashion of 1 week. Unexpected delays may occur due to repair parts or replacement shortage.

International Warranty

Please check with your Authorized International VM Audio Dealer or distributor for specific warranty policies and process for your country.

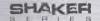

SHAKER

Limited Warranty Agreement

Your product is covered by a limited warranty by VM Audio as established below:

Electronics Limited Warranty

Electronics Limited Warranty
Products purchased from an Authorized VM Audio Dealer are warranted to be free of defects in material and workmanship for one (1) year from the date of original purchase under normal usage. Products that are identified as "refurbished" have a limited warranty of ninety (90) days from the date of original purchase. Dated proof of purchase Conjinal receipt or invoice) will be required for all warranty claims. In the unlikely event that you experienced a manufacturing defect or melfunction during the warranty period, VM Audio will repair the defective product or replace with the same or equivalent product if the same item is not available or discontinued. Replacement product may have superficial blemishes or scratches that do not affect the performance of the product. This warranty is only intended and valid for the original purchaser and cannot be extended to subsequent owners. Any applicable implied warranty starting from the original purchase date. No warranties, expressed or implied, will be accepted after the previously listed periods. Exclusions may apply; please check your local state laws.

Instructions for Claiming Warranty Service

If you should require warranty service, please return the product to the Authorized VM Audio Dealer you originally purchased the item for an experienced and speedy claim of your warranty service. Contact VM Audio directly to find the Authorized Dealers nearest

In the case the defective merchandise needs to be returned to VM Audio, please contact us and a Return Merchandise Authorization (RIMA) number will be assigned. It is important to pack all defective items in the original packaging to prevent damages from shipping, and be sure to write the RIMA number clearly on the outside of the box for feater processing. Do not include non-defective items as it is not necessary and will increase your shipping costs.

Table of Contents

Welcome

Specifications	2
Table of Contents	3
Warning	4
Precautions	5
System Features	6
Included	7
Overview	8
Connections	18
Settings & Adjustments	22
Operation	37
Speaker Placement	40
Troubleshooting	41
Warranty	42

42

3

SHAKER



Warning!



WARNING RISK OF ELECTRIC SHOCK



To prevent fire or electric shock:

- Do not expose the unit to rain or moisture.
- Do not open the cabinet.
- Do not use these speakers near water.
- Do not expose these speakers to dripping or splashing liquids
- Do not set objects containing liquids on units.
- Do not spill liquids into any part of the speaker
- Do not overload wall outlets and extension cords.
- Do not run power cables and speaker wires through sharp edges. • Do not pinch power cables and speaker wires.
- Do not expose the bare wires from the power cable and speaker wires.
- Do not remove the back amplifier plate. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.

CAUTION:

Any change or modifications not expressly approved in this manual could void your warranty for this equipment.

No Power

Troubleshooting

- Press the Power/Standby button to turn power on.
- · Make sure unit is connected to AC power.

No Sound

- Raise volume to check output.
- Volume ON from the audio source might be muted or low.
 Make sure correct input is selected.
- · Ensure speaker wires are connected
- · Check RCA cable connectivity.

No sound from the microphone

- Make sure it is firmly connected to the MIC input jack
- Make sure it is turned on (see microphone user manual).
- Make sure the MIC volume controls are not on the lowest
- Main VOLUME is set to minimum; raise volume.

File(s) on USB/SD not playing

- The file may be corrupted; replace file.The file is not in a compatible format.
- The connected USB device is not supported by the system.

The Bluetooth device cannot connect or be paired.

- · You have not activated the Bluetooth function on your device: refer to the Bluetooth device user manual.
- The unit is not in pairing mode; (see page 37 to pair).
- The unit is already connected with another Bluetooth device; refer to the Bluetooth device user manual to prepare your device pairing and see page 37 for pairing).





Speaker Placement

Placement

The speakers should be placed within a 1.5 meter and 3 meters apart. You should position your speakers so that each one is at least 0.5 meter away from any bare wall.

Improving Sound Quality

The speaker system allows for an extensive amount of settings that are user-friendly. While the quality of the speaker system is superb it may fall prey to some of the quality reducing issues all speakers encounter. It's important to know that the dimensions and construction of your home as well as your home furnishings will all play a role in the quality of the speaker system. The extra steps taken to correct the positioning of the speaker system will ultimately result in a better sound and clarity coming from the speaker system.

Anywhere from mid to high frequencies are affected by amount's of plush materials in a room. Some of the most common types of material's include carpets, sofas, beds, and soft curtains. Too much of these materials can result in a sound that is low and dull to the user. Just as there can be too much of this material, there can also be too little of the material which can result in an uncomfortably bright sound quality for the user. So with both in mind, a stable amount of soft furnishings must be achieved to receive the best quality sound coming from the speaker system.

Equalities between a room's height, width, and length can also prove to be an issue in the quality of the speaker system for it will produce low frequency standing wave problems, which means the clarity of the system will not be up to par. If no other rooms provide a better solution to this problem then experiment with different placement of the speakers to reduce these negative effects.

Precautions

On Safety

- Contact between bare speaker wires may result in a short-circuit.
- Should any liquid or solid object fall into the speaker system, unplug the system's power cord and have the system checked before operating it any further.

On Power Sources

- Before operating this speaker system, check that the operating voltage of the speaker system is identical to the wall outlet voltage where the speaker is being connected.
- If you are not going to use the speaker system for a long period of time, be sure to disconnect the speaker system from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself and never pull the cord.
- AC power cord must be changed by qualified electrical personnel.

On Placement

- Use good lifting practice when moving speakers to avoid injury
- Do not install the speakers in an inclined position.

On Operation

- Before making any connections, turn off your receiver or audio source and unplug if from the AC (mains) power outlet. Not doing this may result in damage to your system.
- The volume level should not be turned up to the point of distortion.

On Adjusting Volume

 Do not turn up the volume while listening to a portion with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level portion is played.

On Cleaning

 Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

40

5

SHAKER

System Features

- High Performance With Smooth & Detailed Reproduction
- Phantom Black Wood Veneer Body
- Easy 1-2-3 Direct Play Setup
- All-In-One Home Audio Solution
- Wide Range 3-Way Soundstage Performance
- Fully Powered, Bi-amplified System
- Advanced Wireless Bluetooth Connectivity
- Internal, Magnetic Motor Shielding Protection
- Optimum Bass Reflex Wood Enclosure Design
- CAD Energized Bass Port Design
- Soft Dome 1.5" High Frequency Driver
- High Performance 4" Midrange DriverDeep Note 8" Solid Bass Subwoofer
- Karaoke Function with Dual Mic Input & Echo Control
- USB Drive / SD Card Music Playback
- WMA / MP3 Music File Compatibility
- Bass, Treble, Mic, Echo & Volume Adjustments
- Built-In Digital Control POD
- High Clarity Class A/B Amplifier Technology
- Low Distortion CMOS Signal Processing Technology
- Infrared Full Function Wireless Remote Control

SHAKER

Operation

Using Microphone

Step 1: Connect the microphone to the input plug on the Level Control Panel.



Step 2: Adjust the microphone level (see page 28).

Step 3: Adjust the ECHO level (see page 29).

Caution

- Do not drop or tap microphone as damage to the mic or speakers may occur.
- Avoid feedback by placing the microphone behind the speakers.
- Do not point microphone directly to the front of the speakers



Step 2: Music playback will begin automatically.

Step 3: Search select VMAUDIO-SRAT10-BK

Step 4: Adjust VOLUME level (see page 24).

Step 5: Adjust TONE to the desired levels (see page 26).

Note

- INPUT will recognize drive and will automatically select USB input.
- . When inserting an SD card, "SD" will briefly display on the LED screen, followed by the number of tracks on the card, the track number it will currently play and end with the track time running.
- When inserting a USB drive, USB will briefly display on the LED screen, followed by the number of tracks on the drive and end with the track time running.

SHAKER

Included

Review the contents of the package and make sure the following items are included:

Speaker Cabinets



Remote



RCA-to-RCA Cables

20ft Speaker Wire



RCA-to-3.5mm Cable

User Guide





38

7

SHAKER

SHAKER

Overview

Front View



Left Speaker



Right Speaker

Operation

Using AUX Audio Source

Step 1: Select AUX as the audio INPUT source if it is not already selected (see page 23).

Step 2: Start audio source and play track (refer to the audio source's user guide for instructions).

Step 3: Adjust the VOLUME level (see pages 24-25).

Step 4: Adjust TONE levels as desired (see pages 26-27).

Using Bluetooth Audio Source

Bluetooth Pairing

Step 1: Select BLU as the audio INPUT source if it is not already selected BLU LED will blink rapidly to indicate pairing mode is ready.

Step 2: Set your device to Bluetooth pairing mode (refer to the audio source's user guide for instructions).

Step 3: Search select VMAUDIO-SRAT10-BK

Step 4: When pairing is a success and complete the BLU

LED will stop blinking and will remain on. Step 5: Start music playback.

Step 6: Adjust VOLUME level (see page 24).

Step 7: Adjust TONE levels as desired (see pages 26).

Average Bluetooth wireless range is 30 ft.







