



Draft

Nokia ONT

G-1425G-E Product Guide

3TN- 00673 -AAAA-TCZZA

Issue 01

December 2023

Draft

© 2023 Nokia. Nokia Confidential Information

Use subject to agreed restrictions on disclosure and use.

Legal notice

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

© 2023 Nokia.

Contents

About this document	15
1 What's new	21
1.1 Overview	21
1.2 What's new in BBD Release 24.01	21
2 ETSI ONT safety guidelines	23
2.1 Safety instructions.....	23
2.2 Safety standards compliance	25
2.3 Electrical safety guidelines	26
2.4 ESD safety guidelines	26
2.5 Laser safety guidelines	26
2.6 Environmental requirements	30
3 ETSI environmental and CRoHS guidelines	31
3.1 Environmental labels	31
3.2 Hazardous Substances Table (HST)	33
3.3 Other environmental requirements.....	33
4 ANSI ONT safety guidelines	35
4.1 Safety instructions.....	35
4.2 Safety standards compliance	37
4.3 Laser safety guidelines	39
4.4 Electrical safety guidelines	42
4.5 ESD safety guidelines	43
4.6 Environmental requirements	43
5 G-1425G-E unit data sheet	45
5.1 Overview	45
5.2 G-1425G-E part numbers and identification.....	45
5.3 G-1425G-E general description	47
5.4 G-1425G-E software and installation feature support	54
5.5 G-1425G-E interfaces and interface capacity	54
5.6 G-1425G-E LEDs	57
5.7 G-1425G-E detailed specifications.....	59
5.8 G-1425G-E GEM ports and T-CONTs	61
5.9 G-1425G-E performance monitoring statistics	61

5.10	G-1425G-E functional blocks	63
5.11	G-1425G-E standards compliance	64
5.12	G-1425G-E special considerations	66
6	Install or replace a G-1425G-E indoor ONT	69
6.1	Overview	69
6.2	Prerequisites	69
6.3	Recommended tools	69
6.4	Safety information	70
6.5	Install a G-1425G-E indoor ONT	70
6.6	Wall mount an G-1425G-E indoor ONT	74
6.7	Replace a G-1425G-E indoor ONT	80
7	Configure a G-1425G-E indoor ONT	85
7.1	Overview	85
GUI configuration		88
7.2	General configuration	88
7.3	HGU mode GUI configuration	88
7.4	Log in to the web-based GUI	88
Viewing device information and connection status		90
7.5	Overview	90
7.6	Overview	90
7.7	Viewing device information	92
7.8	Viewing LAN status	93
7.9	Viewing WAN status	95
7.10	Viewing WAN IPv6 status	97
7.11	Viewing STA information	99
7.12	Viewing Neighboring Access Points	101
7.13	Viewing home networking information	102
7.14	Viewing Optics module status	104
7.15	Viewing statistics	105
7.16	Viewing voice information	108
Network configuration		111
7.17	Overview	111
7.18	Configuring LAN	111
7.19	Configuring LAN IPv6	113
7.20	Configuring WAN	115
7.21	Configuring WAN DHCP	117

7.22	Configuring Wireless 2.4GHz	119
7.23	Configuring Wireless 5GHz	122
7.24	Configuring wireless scheduling	125
7.25	Configuring IP routing	126
7.26	Configuring DNS	128
7.27	Configuring TR-069	129
7.28	Configuring TR-369	130
7.29	Configuring GRE tunnel	132
7.30	Configuring Upstream (US) Classifier	134
7.31	Configuring QoS	139
7.32	Configuring Mesh	144
Security configuration	146
7.33	Overview	146
7.34	Configuring the firewall	146
7.35	Configuring the MAC filter	148
7.36	Configuring the IP filter	150
7.37	Configuring the URL filter	152
7.38	Configuring parental control	153
7.39	Configuring DMZ and ALG	161
7.40	Configuring access control	163
Configuring the Application	165
7.41	Overview	165
7.42	Configuring port forwarding	165
7.43	Configuring port triggering	167
7.44	Configuring DDNS	168
7.45	Configuring NTP	170
7.46	Configuring UPnP and DLNA	171
7.47	Configuring voice	172
Maintenance	174
7.48	Overview	174
7.49	Configuring the password	174
7.50	Configuring LOID	176
7.51	Configuring SLID	177
7.52	Managing the device	178
7.53	Backing up the configuration	179
7.54	Restoring the configuration	180
7.55	Upgrading firmware	181

7.56	Rebooting the device	181
7.57	Resetting to factory defaults.....	182
7.58	Diagnosing WAN connections.....	183
7.59	Viewing log files	185
7.60	Generating a delta Configuration file.....	186
RG Troubleshooting Counters	189	
7.61	Overview	189
7.62	Viewing Residential Gateway (RG) troubleshooting counters.....	189
8	ONT configuration file over OMCI	193
8.1	Overview	193
8.2	Purpose.....	193
8.3	Supported configuration file types	193
8.4	ONT configuration file over OMCI	196

List of tables

Table 2-1	Safety labels.....	24
Table 4-1	Safety labels.....	36
Table 5-1	Identification of G-1425G-E indoor ONTs.....	45
Table 5-2	G-1425G-E power supply ordering information.....	46
Table 5-3	Plug types	46
Table 5-4	Hardware parts required for G-1425G-E installations	47
Table 5-5	Support for TR-181 parameter categories	53
Table 5-6	G-1425G-E indoor ONT interface connection capacity.....	54
Table 5-7	G-1425G-E indoor ONT physical connections	56
Table 5-8	G-1425G-E indoor ONT LED descriptions	58
Table 5-9	G-1425G-E indoor ONT physical specifications.....	59
Table 5-10	G-1425G-E indoor ONT power consumption specifications	60
Table 5-11	G-1425G-E indoor ONT environmental specifications	61
Table 5-12	G-1425G-E indoor ONT Dimension data specifications.....	61
Table 5-13	G-1425G-E indoor ONT capacity for GEM ports and T-CONTs	61
Table 5-14	Package S ONTs ONTENET performance monitoring statistics.....	62
Table 5-15	Package S ONTs ONTL2UNI performance monitoring statistics	62
Table 5-16	Package S ONTs PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTCCES, PONONTTCFLOW, PONONTTCVOIP performance monitoring statistics	63
Table 5-17	Package S ONTs PONONTTC aggregate performance monitoring statistics.....	63
Table 5-18	G-1425G-E ONT considerations and limitations	67
Table 7-1	Overview parameters	91
Table 7-2	Device Information parameters	92
Table 7-3	LAN Status parameters.....	94
Table 7-4	WAN Status parameters	96
Table 7-5	WAN Status IPv6 parameters	98
Table 7-6	STA information parameters.....	100
Table 7-7	Neighboring AP parameters	101
Table 7-8	Home Networking parameters	103
Table 7-9	Optics Module Status parameters.....	105
Table 7-10	Voice Information parameters	109
Table 7-11	LAN parameters	112

Table 7-12	Static DHCP parameters	113
Table 7-13	LAN IPv6 parameters	114
Table 7-14	WAN parameters	116
Table 7-15	WAN DHCP parameters	118
Table 7-16	Wireless (2.4GHz) parameters	119
Table 7-17	Wireless (5GHz) parameters	123
Table 7-18	IP Routing network parameters	127
Table 7-19	DNS parameters	128
Table 7-20	TR-069 parameters	129
Table 7-21	TR-369 parameters	131
Table 7-22	GRE Tunnel parameters	133
Table 7-23	US Classifier Policy parameters	135
Table 7-24	US Classifier parameters	136
Table 7-25	US Classifier Rules parameters	139
Table 7-26	QoS Config parameters	141
Table 7-27	Mesh parameters	145
Table 7-28	Firewall parameters	147
Table 7-29	MAC Filter parameters	149
Table 7-30	IP Filter parameters	151
Table 7-31	URL Filter parameters	152
Table 7-32	Parental control parameters	160
Table 7-33	ALG parameters	162
Table 7-34	DMZ parameters	162
Table 7-35	Access Control parameters	164
Table 7-36	Trusted Network parameters	164
Table 7-37	Port Forwarding parameters	166
Table 7-38	Port Triggering parameters	167
Table 7-39	DDNS parameters	169
Table 7-40	NTP parameters	170
Table 7-41	Voice Setting parameters	173
Table 7-42	Password parameters	175
Table 7-43	LOID Configuration parameters	176
Table 7-44	SLID Configuration parameters	177

Table 7-45	Device Management parameters	179
Table 7-46	RG Troubleshooting Counters parameters	190
Table 8-1	Supported configuration files.....	194
Table 8-2	Download configuration files	195

List of figures

Figure 2-1	VCCI warning	24
Figure 2-2	Laser product label	27
Figure 2-3	Laser classification label.....	28
Figure 2-4	Laser warning labels.....	29
Figure 3-1	Products below MCV value label	32
Figure 3-2	Products above MCV value label	32
Figure 3-3	Recycling/take back/disposal of product symbol	34
Figure 4-1	Sample safety label on the ONT equipment.....	37
Figure 4-2	Sample laser product label showing CDRH 21 CFR compliance	39
Figure 4-3	Laser product label	40
Figure 4-4	Laser classification label.....	40
Figure 4-5	Laser warning labels.....	41
Figure 4-6	Sample laser product safety label on the ONT equipment	42
Figure 5-1	G-1425G-E ONT (external antenna).....	48
Figure 5-2	G-1425G-E indoor ONT physical connections (back).....	55
Figure 5-3	G-1425G-E indoor ONT with fiber optic connector	56
Figure 5-4	Bottom of the G-1425G-E ONT	57
Figure 5-5	G-1425G-E indoor ONT LEDs	57
Figure 5-6	ONT physical specifications.....	60
Figure 5-7	G-1425G-E ONT functional block	64
Figure 6-1	Wall mounting key holes	71
Figure 6-2	G-1425G-E ONT connections.....	72
Figure 6-3	G-1425G-E ONT in wall mounting bracket	74
Figure 6-4	G-1425G-E wall mount bracket	75
Figure 6-5	Wall mount bracket power cord placement.....	76
Figure 6-6	Power cord to ONT connection.....	77
Figure 6-7	ONT to wall mount connection.....	78
Figure 6-8	ONT in wall mount bracket—facing the room	79
Figure 6-9	G-1425G-E indoor ONT connections.....	81
Figure 7-1	Web login page	89
Figure 7-2	Overview page.....	91

Figure 7-3 Device Information page.....	92
Figure 7-4 LAN Status page	94
Figure 7-5 WAN Status page	96
Figure 7-6 WAN Status IPv6 page	98
Figure 7-7 STA Information page	100
Figure 7-8 Neighboring AP page.....	101
Figure 7-9 Home Networking page	103
Figure 7-10 Optics Module Status page	104
Figure 7-11 LAN Statistics page.....	106
Figure 7-12 WAN Statistics page	107
Figure 7-13 WLAN Statistics page.....	108
Figure 7-14 Voice Information page.....	109
Figure 7-15 LAN page.....	112
Figure 7-16 LAN IPv6 page.....	114
Figure 7-17 WAN page.....	116
Figure 7-18 WAN DHCP page	118
Figure 7-19 Wireless (2.4GHz) page	119
Figure 7-20 Wireless (5GHz) page	122
Figure 7-21 Wireless Schedule page.....	125
Figure 7-22 IP Routing page.....	127
Figure 7-23 DNS page	128
Figure 7-24 TR-069 page.....	129
Figure 7-25 TR-369 page.....	131
Figure 7-26 GRE Tunnel page	133
Figure 7-27 US Classifier Policy page	135
Figure 7-28 US Classifier page	136
Figure 7-29 US Classifier Rules page.....	138
Figure 7-30 QoS Config page (L2 packet sizes).....	140
Figure 7-31 QoS Config page (L3 packet sizes).....	141
Figure 7-32 QoS rules edit window	143
Figure 7-33 Mesh page.....	144
Figure 7-34 Firewall page	147
Figure 7-35 MAC Filter page.....	148

Figure 7-36 MAC rules edit page	150
Figure 7-37 IP Filter page	151
Figure 7-38 URL Filter page.....	152
Figure 7-39 Default Parental Control page	153
Figure 7-40 Advanced Parental control page	154
Figure 7-41 Create new group page	155
Figure 7-42 Parental control access internet page	156
Figure 7-43 Parental control device page.....	157
Figure 7-44 Parental control URL page	158
Figure 7-45 Parental control schedule page	159
Figure 7-46 Parental control bed time page.....	160
Figure 7-47 DMZ and ALG page.....	162
Figure 7-48 Access Control page	163
Figure 7-49 Port Forwarding page	166
Figure 7-50 Port Triggering page	167
Figure 7-51 DDNS page	169
Figure 7-52 NTP page.....	170
Figure 7-53 UPnP and DLNA page	171
Figure 7-54 Voice Setting page.....	172
Figure 7-55 Password page	175
Figure 7-56 LOID Configuration page	176
Figure 7-57 SLID Configuration page	177
Figure 7-58 Device Management page.....	178
Figure 7-59 Backup and Restore page	179
Figure 7-60 Backup and Restore page	180
Figure 7-61 Firmware Upgrade page.....	181
Figure 7-62 Reboot Device page	182
Figure 7-63 Factory Default page	183
Figure 7-64 Diagnostics page	184
Figure 7-65 Log page.....	185
Figure 7-66 Delta CFG Tool page	187
Figure 7-67 RG Troubleshoot Counters page	190

About this document

Purpose

This documentation set provides information about safety, features and functionality, ordering, hardware installation and maintenance, and software installation procedures of this ONT for the current release.

Intended audience

This documentation set is intended for planners, administrators, operators, and maintenance personnel involved in installing, upgrading, or maintaining the ONTs.

The reader must be familiar with general telecommunications principles.

Safety information

For your safety, this document contains safety statements. Safety statements are given at points where risks of damage to personnel, equipment, and operation may exist. Failure to follow the directions in a safety statement may result in serious consequences.

Safety Information Examples



DANGER

Hazard

Danger indicates that the described activity or situation may result in serious personal injury or death; for example, high voltage or electric shock hazards.



WARNING

Equipment Damage

Warning indicates that the described activity or situation may, or will, cause equipment damage or serious performance problems.



CAUTION

Service Disruption

Caution indicates that the described activity or situation may, or will, cause service interruption.

Note: A note provides information that is, or may be, of special interest.

Acronyms and initialisms

The expansions and optional descriptions of most acronyms and initialisms appear in the glossary

Nokia quality processes

Nokia's ONT manufacturing, testing, and inspecting practices are in compliance with TL 9000 requirements. These requirements are documented in the Fixed Networks Quality Manual 3FQ-30146-6000-QRZZA.

The quality practices adequately ensure that technical requirements and customer end-point requirements are met. The customer or its representatives may be allowed to perform on-site quality surveillance audits, as agreed upon during contract negotiations.

Documents

Documents are available using ALED or OLCS.

To download a ZIP file package of the customer documentation

- 1 _____
Navigate to <http://customer.nokia.com/s/> and enter your user name and password. If you are a new user and require access to this service, please contact your Nokia sales representative.
- 2 _____
Select **Products**.
- 3 _____
Type your product name in the **Find and select a product** field and click the search icon.
Select a product.
- 4 _____
Click **Downloads: ALED** to go to the Electronic Delivery: Downloads page.
- 5 _____
Select **Documentation** from the list.
- 6 _____
Select a release from the list.
- 7 _____
Follow the on-screen directions to download the file.

END OF STEPS _____

To access individual documents

Individual PDFs of customer documents are also accessible through the Nokia Support Portal website.

1 _____

 Navigate to <http://customer.nokia.com/s/> and enter your user name and password. If you are a new user and require access to this service, please contact your Nokia sales representative.

2 _____

 Select **Products**.

3 _____

 Type your product name in the **Find and select a product** field and click the search icon.
 Select a product.

4 _____

 Click **Documentation: Doc Center** to go to the product page in the Doc Center.

5 _____

 Select a release from the **Release** list and click **SEARCH**.

6 _____

 Click on the PDF icon to open or save the file.

END OF STEPS _____

Procedures with options or substeps

When there are options in a procedure, they are identified by letters. When there are required substeps in a procedure, they are identified by roman numerals.

Example of options in a procedure

At **Step 1**, you can choose option a or b. At **Step 2**, you must do what the step indicates.

1 _____

 This step offers two options. You must choose one of the following:

 a. This is one option.

 b. This is another option.

2 _____

 You must perform this step.

END OF STEPS _____

Example of required substeps in a procedure

At **Step 1**, you must perform a series of substeps within a step. At **Step 2**, you must do what the step indicates.

1 _____

This step has a series of substeps that you must perform to complete the step. You must perform the following substeps:

- a. This is the first substep.
- b. This is the second substep.
- c. This is the third substep.

2 _____

You must perform this step.

END OF STEPS _____

Multiple PDF document search

You can use Adobe Reader Release 6.0 and later to search multiple PDF files for a common term. Adobe Reader displays the results in a single display panel. The results are grouped by PDF file, and you can expand the entry for each file.

Note: The PDF files in which you search must be in the same folder.

To search multiple PDF files for a common term

1 _____

Open Adobe Acrobat Reader.

2 _____

Select **Edit→Search** from the Acrobat Reader main menu. The Search PDF panel displays.

3 _____

Enter the search criteria.

4 _____

Select **All PDF Documents In...**

5 _____

Select the folder in which to search using the list.

6 _____

Click **Search**.

Acrobat Reader displays the search results. You can expand the entries for each document by clicking on the + symbol.

END OF STEPS _____

Technical support

For details, refer to the [Nokia Support portal](https://customer.nokia.com/support/s/) (<https://customer.nokia.com/support/s/>).

For ordering information, contact your Nokia sales representative.

How to comment

Note to reviewers: The following "How to comment" text will appear in the final document when it is published. However, the feedback method described below is for use only on final documents. Please send your review comments to the author using the process you were given when you received this draft document.

To comment on this document, go to the [Online Comment Form](https://documentation.nokia.com/comments/) (<https://documentation.nokia.com/comments/>) or e-mail your comments to the [Comments Hotline](mailto:Comments@nokia.com) (<mailto:Comments@nokia.com>).

1 What's new

1.1 Overview

1.1.1 Purpose

This chapter provides the details of features and other documentation changes updated in the product guide in each release.

1.1.2 Contents

1.1 Overview	21
1.2 What's new in BBD Release 24.01	21

1.2 What's new in BBD Release 24.01

The product guide is a new guide in BBD Release 24.01, issue 1. In future releases, this chapter will provide information on the feature and document changes applicable to this guide.

2 ETSI ONT safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of the optical network terminals (ONTs).

2.1 Safety instructions

This section describes the safety instructions that are provided in the ONT customer documentation and on the equipment.

2.1.1 Safety instruction boxes

The safety instruction boxes are provided in the ONT customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



Possibility of equipment damage.

Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.

**CAUTION****Service Disruption**

Possibility of service interruption.

Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.

Note: Information of special interest.

The Note box provides information that assists the personnel working with ONTs. It does not provide safety-related instructions.

2.1.2 Safety-related labels

The ONT equipment is labeled with the specific safety instructions and compliance information that is related to a variant of the ONT. Observe the instructions on the safety labels.

The following table provides sample safety labels on the ONT equipment.

Table 2-1 Safety labels

Description	Label text
ESD warning	Caution: This assembly contains an electrostatic sensitive device.
Laser classification	Class 1 laser product
PSE marking	These power supplies are Japan PSE certified.
VCCI marking	Compliant with Japan VCCI emissions standards.

[Figure 2-1, "VCCI warning" \(p. 24\)](#) shows the VCCI warning.

Figure 2-1 VCCI warning

	This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.
	VCCI準拠クラスB機器（日本） この機器は、Information Technology EquipmentのVoluntary Control Council for Interference (VCCI)の規格に準拠したクラスB製品です。この機器をラジオやテレビ受信機の近くで使用した場合、混信を発生する恐れがあります。本機器の設置および使用に際しては、取扱い説明書に従ってください。

19841

2.2 Safety standards compliance

This section describes the ONT compliance with the European safety standards.

2.2.1 EMC, EMI, and ESD compliance

The ONT equipment complies with the following EMC, EMI, and ESD requirements:

- EN 300-328 v1.9.1 wide band data transmission standards for 2.4GHz bands
- EN 300-386 V1.5.1: Electromagnetic Compatibility and Radio Spectrum Matters (ERM): Telecommunications Network Equipment; Electromagnetic Compatibility (EMC) requirements; Electrostatic Discharge (ESD) requirements
- EN 55022 (2006): Class B, Information Technology Equipment, Radio Disturbance Characteristics, limits and methods of measurement
- EN 55024 (2010): Information Technology Equipment, Immunity Characteristics, limits and methods of measurement
- European Council Directive 2004/108/EC
- EN 300-386 V1.4.1: 2008
- EN 55022:2006 Class B (ONTs)
- EN 301489-1 and EN 301489-17
- EN 55032: Information Technology Equipment, Immunity Characteristics, limits and methods of measurement
- EN 61000-3-2

2.2.2 Equipment safety standard compliance

The ONT equipment complies with the requirements of EN 60950-1, Safety of Information Technology Equipment for use in a restricted location (per R-269).

2.2.3 Environmental standard compliance

The ONT equipment complies with the EN 300 019 European environmental standards.

2.2.4 Laser product standard compliance

For most ONTs, the ONT equipment complies with EN 60825-1 and IEC 60825-2 for laser products. If there is an exception to this compliance regulation, you can find this information in the standards compliance section of the unit data sheet in this Product Guide.

2.2.5 Resistibility requirements compliance

The ONT equipment complies with the requirements of ITU Recommendation K.21 for resistibility of telecommunication equipment installed in customer premises to over voltage and over currents.

2.2.6 Acoustic noise emission standard compliance

The ONT equipment complies with EN 300 753 acoustic noise emission limit and test methods.

2.3 Electrical safety guidelines

This section provides the electrical safety guidelines for the ONT equipment.



Note: The ONTs comply with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

The ONTs comply with BS EN 61140.

2.3.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

2.3.2 Cabling

The following are the guidelines regarding cables used for the ONT equipment:

- All cables must be approved by the relevant national electrical code.
- The cables for outdoor installation of ONTs must be suitable for outdoor use.
- POTS wiring run outside the subscriber premises must comply with the requirements of local electrical codes. In some markets, the maximum allowed length of the outside run is 140 feet (43 m). If the outside run is longer, NEC requires primary protection at both the exit and entry points for the wire.

2.3.3 Protective earth

Earthing and bonding of the ONTs must comply with the requirements of local electrical codes.

2.4 ESD safety guidelines

The ONT equipment is sensitive to ESD. Operations personnel must observe the following ESD instructions when they handle the ONT equipment.



CAUTION

Service Disruption

This equipment is ESD sensitive. Proper ESD protections should be used when you enter the TELCO Access portion of the ONT.

During installation and maintenance, service personnel must wear wrist straps to prevent damage caused by ESD.

2.5 Laser safety guidelines

Observe the following instructions when you perform installation, operations, and maintenance tasks on the ONT equipment.

Only qualified service personnel who are extremely familiar with laser radiation hazards should install or remove the fiber optic cables and units in this system.



There may be invisible laser radiation at the fiber optic cable when the cable is removed from the connector. Avoid direct exposure to the laser beam.

Observe the following danger for laser hazard. Eyes can be damaged when they are exposed to a laser beam. Take necessary precautions before you plug in the optical modules.



Possibility of equipment damage. Risk of eye damage by laser radiation.

2.5.1 Laser classification


The ONT is classified as a Class 1 laser product based on its transmit optical output.

Laser warning labels

The following figures show the labels related to laser product, classification and warning.

The following figure shows a laser product label.

Figure 2-2 Laser product label

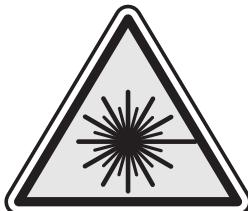

18455

Figure 2-3, “Laser classification label” (p. 28) shows a laser classification label. Laser classification labels may be provided in other languages.

Figure 2-3 Laser classification label

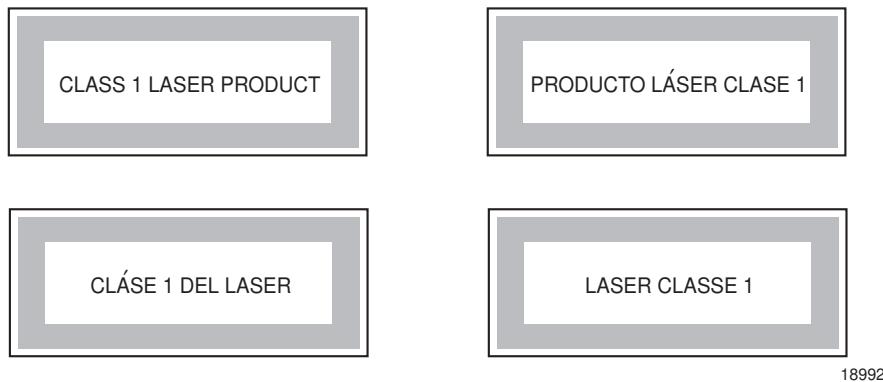



Figure 2-4, "Laser warning labels" (p. 29) shows a laser warning label and an explanatory label for laser products. Labels and warning may be provided in other languages. The explanatory label provides the following information:

- A warning that calls attention to the invisible laser radiation
- An instruction against staring into the beam or viewing directly with optical instruments
- Wavelength
- Normal output power
- Maximum output power


Figure 2-4 Laser warning labels



Laser Warning Label

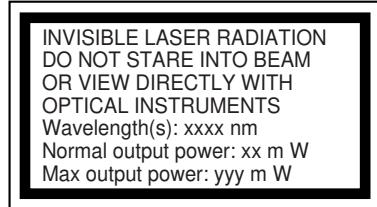

Laser Warning Label

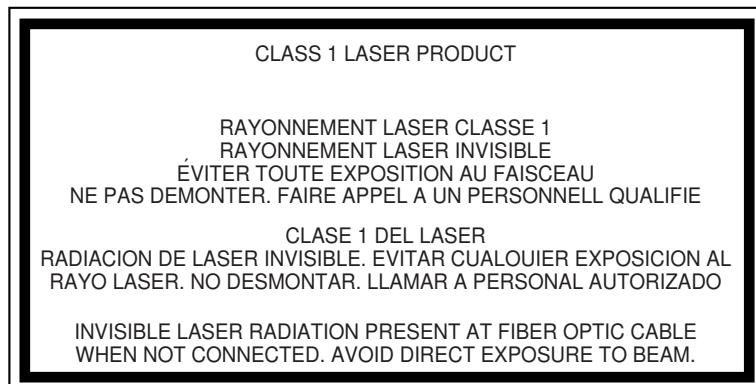

Laser Warning Label

18993

2.5.2 Transmit optical output

The maximum transmit optical output of an ONT is +5 dBm.

2.5.3 Normal laser operation

In normal operation, fiber cable laser radiation is always off until it receives signal from the line terminal card.

Eyes can be damaged when they exposed to a laser beam. Operating personnel must observe the instructions on the laser explanatory label before plugging in the optical module.



Risk of eye damage by laser radiation.

2.5.4 Location class

Use cable supports and guides to protect the receptacles from strain.

2.6 Environmental requirements

See the ONT technical specification documentation for more information about temperature ranges.

During operation in the supported temperature range, condensation inside the ONT caused by humidity is not an issue. To avoid condensation caused by rapid changes in temperature and humidity, Nokia recommends:

- The door of the ONT not be opened until temperature inside and outside the enclosure has stabilized.
- If the door of the ONT must be opened after a rapid change in temperature or humidity, use a dry cloth to wipe down the metal interior to prevent the risk of condensation.
- When high humidity is present, installation of a cover or tent over the ONT helps prevent condensation when the door is opened.

3 ETSI environmental and CRoHS guidelines

This chapter provides information about the ETSI environmental China Restriction of Hazardous Substances (CRoHS) regulations that govern the installation and operation of the optical line termination (OLT) and optical network termination (ONT) systems. This chapter also includes environmental operation parameters of general interest.

3.1 Environmental labels

This section describes the environmental instructions that are provided with the customer documentation, equipment, and location where the equipment resides.

3.1.1 Overview

CRoHS is applicable to Electronic Information Products (EIP) manufactured or sold and imported in the territory of the mainland of the People's Republic of China. EIP refers to products and their accessories manufactured by using electronic information technology, including electronic communications products and such subcomponents as batteries and cables.

3.1.2 Environmental related labels

Environmental labels are located on appropriate equipment. The following are sample labels.

Products below Maximum Concentration Value (MCV) label

[Figure 3-1, “Products below MCV value label” \(p. 32\)](#) shows the label that indicates a product is below the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). Products with this label are recyclable. The label may be found in this documentation or on the product.

Figure 3-1 Products below MCV value label



18986

Products containing hazardous substances above Maximum Concentration Value (MCV) label

Figure 3-2, “Products above MCV value label” (p. 32) shows the label that indicates a product is above the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). The number contained inside the label indicates the Environment-Friendly User Period (EFUP) value. The label may be found in this documentation or on the product.

Figure 3-2 Products above MCV value label



18987

Together with major international telecommunications equipment companies, Nokia has determined it is appropriate to use an EFUP of 50 years for network infrastructure equipment and an EFUP of 20 years for handsets and accessories. These values are based on manufacturers' extensive practical experience of the design, manufacturing, maintenance, usage conditions, operating

environments, and physical condition of infrastructure and handsets after years of service. The values reflect minimum values and refer to products operated according to the intended use conditions. See [3.2 "Hazardous Substances Table \(HST\)" \(p. 32\)](#) for more information.

3.2 Hazardous Substances Table (HST)

This section describes the compliance of the OLT and ONT equipment to the CRoHS standard when the product and sub assemblies contain hazardous substances beyond the MCV value. This information is found in this user documentation where part numbers for the product and sub assemblies are listed. It may be referenced in other OLT and ONT documentation.

In accordance with the People's Republic of China Electronic Industry Standard Marking for the Control of Pollution Caused by Electronic Information Products (SJ/T11364-2006), customers may access the Nokia Hazardous Substance Table, in Chinese, from the following location:

- [\(http://www.nokia-sbell.com.cn/wwwroot/images/upload/private/1/media/ChinaRoHS.pdf\)](http://www.nokia-sbell.com.cn/wwwroot/images/upload/private/1/media/ChinaRoHS.pdf)

3.3 Other environmental requirements

Observe the following environmental requirements when handling the P-OLT or ONT equipment.

3.3.1 ONT environmental requirements

See the ONT technical specification documentation for more information about temperature ranges.

3.3.2 Storage

According to ETS 300-019-1-1 - Class 1.1, storage of ONT equipment must be in Class 1.1, weather-protected, temperature-controlled locations.

3.3.3 Transportation

According to EN 300-019-1-2 - Class 2.3, transportation of the ONT equipment must be in packed, public transportation with no rain on packing allowed.

3.3.4 Stationary use

According to EN 300-019-1-3 - Class 3.1/3.2/3.E, stationary use of ONT equipment must be in a temperature-controlled location, with no rain allowed, and with no condensation allowed.

3.3.5 Material content compliance

European Union (EU) Directive 2002/95/EC, "Restriction of the use of certain Hazardous Substances" (RoHS), restricts the use of lead, mercury, cadmium, hexavalent chromium, and certain flame retardants in electrical and electronic equipment. This Directive applies to electrical and electronic products placed on the EU market after 1 July 2006, with various exemptions, including an exemption for lead solder in network infrastructure equipment. Nokia products shipped to the EU after 1 July 2006 comply with the EU RoHS Directive.

Nokia has implemented a material/substance content management process. The process is described in: Nokia process for ensuring RoHS Compliance (1AA002660031ASZZA). This ensures

compliance with the European Union Directive 2011/65/EU on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS2). With the process equipment is assessed in accordance with the Harmonised Standard EN50581:2012 (CENELEC) on Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

3.3.6 End-of-life collection and treatment

Electronic products bearing or referencing the symbol shown in the following figure, when put on the market within the European Union (EU), shall be collected and treated at the end of their useful life, in compliance with applicable EU and local legislation. They shall not be disposed of as part of unsorted municipal waste. Due to materials that may be contained in the product, such as heavy metals or batteries, the environment and human health may be negatively impacted as a result of inappropriate disposal.



Note: In the European Union, a solid bar under the symbol for a crossed-out wheeled bin indicates that the product was put on the market after 13 August 2005.

Figure 3-3 Recycling/take back/disposal of product symbol



At the end of their life, the OLT and ONT products are subject to the applicable local legislations that implement the European Directive 2012/19EU on waste electrical and electronic equipment (WEEE).

There can be different requirements for collection and treatment in different member states of the European Union.

In compliance with legal requirements and contractual agreements, where applicable, Nokia will offer to provide for the collection and treatment of Nokia products bearing the logo shown in [Figure 3-3, "Recycling/take back/disposal of product symbol" \(p. 34\)](#) at the end of their useful life, or products displaced by Nokia equipment offers. For information regarding take-back of equipment by Nokia, or for more information regarding the requirements for recycling/disposal of product, contact your Nokia account manager or Nokia take back support at sustainability.global@nokia.com.

4 ANSI ONT safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of the optical network terminals or units (ONTs or ONUs) in the North American or ANSI market.

4.1 Safety instructions

This section describes the safety instructions that are provided in the ONT customer documentation and on the equipment.

4.1.1 Safety instruction boxes in customer documentation

The safety instruction boxes are provided in the ONT customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



Possibility of equipment damage.

Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.

**CAUTION****Service Disruption**

Possibility of service interruption.

Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.

Note: Information of special interest.

The Note box provides information that assists the personnel working with ONTs. It does not provide safety-related instructions.

4.1.2 Safety-related labels

The ONT equipment is labeled with specific safety compliance information and instructions that are related to a variant of the ONT. Observe the instructions on the safety labels.


The following table provides examples of the text in the various ONT safety labels.

Table 4-1 Safety labels

Description	Label text
UL compliance	Communication service equipment US listed. Type 3R enclosure - Rainproof.
TUV compliance	Type 3R enclosure - Rainproof.
ESD warning	Caution: This assembly contains electrostatic sensitive device.
Laser classification	Class 1 laser product
Laser product compliance	This laser product conforms to all applicable standards of 21 CFR 1040.10 at date of manufacture.
FCC standards compliance	Tested to comply with FCC standards for home or office use.
CDRH compliance	Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007
Operation conditions	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Canadian standard compliance (modular ONT)	This Class A digital apparatus complies with Canadian ICES-003.
Canadian standard compliance (outdoor ONT)	This Class B digital apparatus complies with Canadian ICES-003.
CE marking	There are various CE symbols for CE compliance.

The following figure shows a sample safety label on the ONT equipment.

Figure 4-1 Sample safety label on the ONT equipment

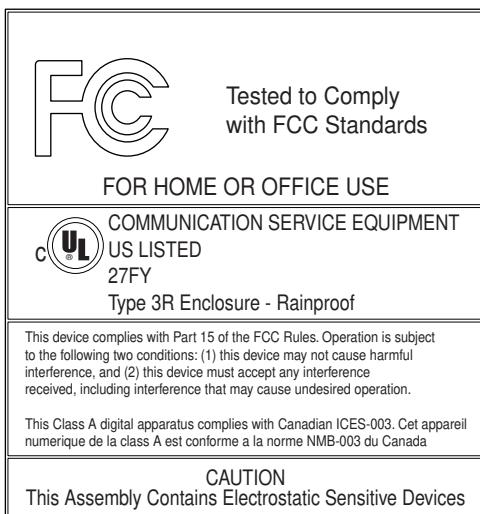

18533

4.2 Safety standards compliance

This section describes the ONT compliance with North American safety standards.



WARNING

Equipment Damage

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4.2.1 EMC, EMI, and ESD standards compliance

The ONT equipment complies with the following requirements:

- Federal Communications Commission (FCC) CFR 47, Part 15, Subpart B, Class A requirements for OLT equipment
- GR-1089-CORE requirements, including:
 - Section 3 Electromagnetic Interference, Emissions Radiated and Conducted
 - Section 3 Immunity, Radiated and Conducted
 - Section 2 ESD Discharge Immunity: System Level Electrostatic Discharge and EFT Immunity: Electrically Fast Transients

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can

radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

4.2.2 Equipment safety standard compliance

The ONT equipment complies with the requirements of UL60950-1, Outdoor ONTs to “Communication Service Equipment” (CSE) and Indoor ONTs to Information Technology Equipment (ITE).

4.2.3 Environmental standards compliance

The ONT equipment complies with the following standards:

- GR-63-CORE (NEBS): requirements related to operating, storage, humidity, altitude, earthquake, office vibration, transportation and handling, fire resistance and spread, airborne contaminants, illumination, and acoustic noise
- GR-487-CORE: requirements related to rain, chemical, sand, and dust
- GR-487 R3-82: requirements related to condensation
- GR-3108: Requirements for Network Equipment in the Outside Plant (OSP)
- TP76200: Common Systems Equipment Interconnections Standards

4.2.4 Laser product standards compliance


The ONT equipment complies with 21 CFR 1040.10 and CFR 1040.11, except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007” or to 21 CFR 1040.10 U.S. Center for Devices and Radiological Health (CDRH) of the Food and Drug Administration (FDA) Laser Notice 42 for ONTs containing Class 1 Laser modules certified by original manufacturers.

Per CDRH 21 CFR 10.40.10 (h) (1) (iv) distributors of Class 1 laser products, such as Nokia ONTs shall leave the following Laser Safety cautions with the end user.

- a) “Class 1 Laser Product”
- b) “Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.”

[Figure 4-2, “Sample laser product label showing CDRH 21 CFR compliance” \(p. 39\)](#) shows a laser product label.

Figure 4-2 Sample laser product label showing CDRH 21 CFR compliance

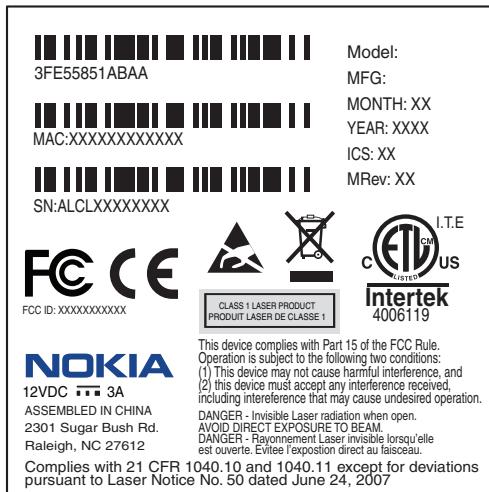

18532

4.2.5 Resistibility requirements compliance

The ONT equipment complies with the requirements of ITU Recommendation K.21 for resistibility of telecommunication equipment installed in customer premises to over voltage and over currents.

4.3 Laser safety guidelines

Only qualified service personnel who are extremely familiar with laser radiation hazards should install or remove the fiber optic cables and units in this system.

Observe the following warnings when you perform installation, operations, and maintenance tasks on the ONT equipment.



DANGER

Hazard

There may be invisible laser radiation at the fiber optic cable when the cable is removed from the connector. Avoid direct exposure to beam.

Observe the following danger for a laser hazard. Eyes can be damaged when they are exposed to a laser beam. Take necessary precautions before you plug in the optical modules.



DANGER

Hazard

Possibility of equipment damage. Risk of eye damage by laser radiation.

Per CDRH 21 CFR 10.40.10 (h) (1) (iv) distributors of Class 1 laser products, such as Nokia ONTs shall leave the following Laser Safety cautions with the end user.


- a) "Class 1 Laser Product"
- b) "Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure."

4.3.1 Laser warning labels

The following figures show sample labels related to laser product, classification and warning.

[Figure 4-3, "Laser product label" \(p. 39\)](#) shows a laser product label.





Figure 4-3 Laser product label

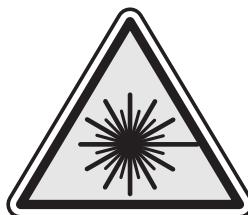

18455

[Figure 4-4, "Laser classification label" \(p. 40\)](#) shows a laser classification label. Laser classification labels may be provided in other languages.

Figure 4-4 Laser classification label

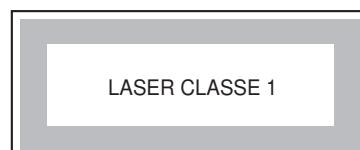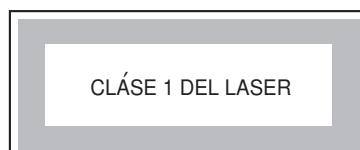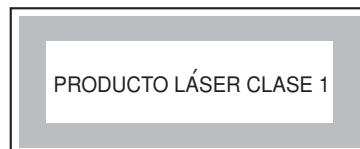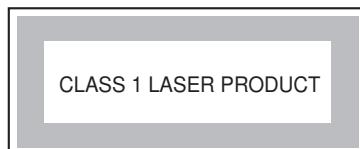


18992

[Figure 4-5, "Laser warning labels" \(p. 41\)](#) shows a laser warning label and an explanatory label for laser products. Explanatory labels may be provided in other languages. The explanatory label provides the following information:

- A warning that calls attention to the invisible laser radiation
- An instruction against staring into the beam or viewing directly with optical instruments

- Wavelength
- Normal output power
- Maximum output power


Figure 4-5 Laser warning labels

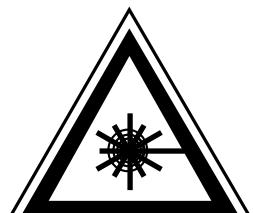

Laser Warning Label



Laser Warning Label

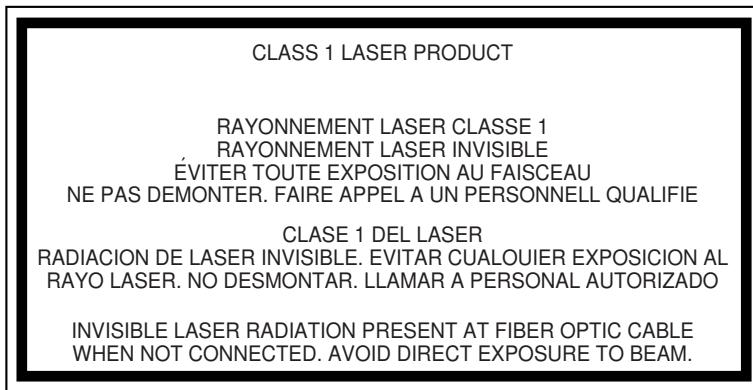

Laser Warning Label

18993

4.3.2 Laser classification

The ONT is classified as a Class 1 laser product based on its transmit optical output.

For Class 1 laser products, lasers are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

[Figure 4-6, “Sample laser product safety label on the ONT equipment” \(p. 42\)](#) shows a sample laser product safety label on the ONT equipment.

Figure 4-6 Sample laser product safety label on the ONT equipment



4.3.3 Transmit optical output

The maximum transmit optical output of an ONT is +5 dBm.

4.3.4 Normal laser operation

In normal operation, fiber cable laser radiation is always off until it receives signal from the line terminal card.

Operating personnel must observe the instructions on the laser explanatory label before plugging in the optical module.



Risk of eye damage by laser radiation.

4.3.5 Location class

Use cable supports and guides to protect the receptacles from strain.

4.4 Electrical safety guidelines

This section provides the electrical safety guidelines for the ONT equipment.



Note: The ONTs comply with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

4.4.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

4.4.2 Cabling

The following are the guidelines regarding cables used for the ONT equipment:

- Use only cables approved by the relevant national electrical code.
- Use cables suitable for outdoor use for outdoor installation of ONTs.
- The ONTs have been evaluated for use with external POTS wiring without primary protection that may not exceed 140 ft (43 m) in reach. However, the power cable must not exceed 100 ft (31 m).

4.4.3 Protective earth

Earthing and bonding of the ONTs must comply with the requirements of NEC article 250 or local electrical codes.

4.5 ESD safety guidelines

The ONT equipment is sensitive to ESD. Operations personnel must observe the following ESD instructions when they handle the ONT equipment.



CAUTION

Service Disruption

This equipment is ESD sensitive. Proper ESD protections should be used when entering the TELCO Access portion of the ONT.

During installation and maintenance, service personnel must wear wrist straps to prevent damage caused by ESD.

Nokia recommends that you prepare the site before you install the ONT equipment. In addition, you must control relative humidity, use static dissipating material for furniture or flooring, and restrict the use of air conditioning.

4.6 Environmental requirements

See the ONT technical specification documentation for temperature ranges for ONTs.

During operation in the supported temperature range, condensation inside the ONT caused by humidity is not an issue. To avoid condensation caused by rapid changes in temperature and humidity, Nokia recommends:

- The door of the ONT not be opened until temperature inside and outside the enclosure has stabilized.
- If the door of the ONT must be opened after a rapid change in temperature or humidity, use a dry cloth to wipe down the metal interior to prevent the risk of condensation.

- When high humidity is present, installation of a cover or tent over the ONT helps prevent condensation when the door is opened.

5 G-1425G-E unit data sheet

5.1 Overview

5.1.1 Purpose

5.1.2 Contents

5.1 Overview	45
5.2 G-1425G-E part numbers and identification	45
5.3 G-1425G-E general description	47
5.4 G-1425G-E software and installation feature support	54
5.5 G-1425G-E interfaces and interface capacity	54
5.6 G-1425G-E LEDs	57
5.7 G-1425G-E detailed specifications	59
5.8 G-1425G-E GEM ports and T-CONTs	61
5.9 G-1425G-E performance monitoring statistics	61
5.10 G-1425G-E functional blocks	63
5.11 G-1425G-E standards compliance	64
5.12 G-1425G-E special considerations	66

5.2 G-1425G-E part numbers and identification

Table 5-1, “Identification of G-1425G-E indoor ONTs” (p. 45) provides part numbers and identification information for the G-1425G-E indoor ONT.

Table 5-1 Identification of G-1425G-E indoor ONTs

Ordering kit part number	Provisioning number	Description	CLEI Code	CPR	ECI/ Bar code
3TN00683AA	3TN00673AA	G-1425G-E, GPON 2+2 RGW ONT. Supports 1 POTS ports, 4xGE UNI, Wi-Fi 2x2 802.11b/g/n and 2x2 802.11ac. No USB port. 12V 1.5A wall-mounted AC/DC power adapter with 2-pin US input plug. External antenna with 5 dBi gain for each.	—	—	—

Table 5-1 Identification of G-1425G-E indoor ONTs (continued)

Ordering kit part number	Provisioning number	Description	CLEI Code	CPR	ECI/Bar code
3TN00683BA	3TN00673BA	G-1425G-E, GPON 2+2 RGW ONT. Supports 1 POTS ports, 4xGE UNI, Wi-Fi 2x2 802.11b/g/n and 2x2 802.11ac. No USB port. 12V 1.5A wall-mounted AC/DC power adapter with 2-pin US input plug. External antenna with 5 dBi gain for each.	—	—	—

[Table 5-2, “G-1425G-E power supply ordering information” \(p. 46\)](#) provides the power supply information for the G-1425G-E ONT. For more information on power supplies, see the **Nokia ONT Power Supply and UPS Guide**. The power consumption is less than 18 W.

Table 5-2 G-1425G-E power supply ordering information

ONT part numbers	Power model (Model No./Manufacture Part Number)	Power information	Customer category or country compliance tested for	Notes
Kit: 3TN00683AA EMA: 3TN00673AA	RUIDE: RD1201500-C55-198MG/BW120150-UC6C-HH01 KELI: KL-WA120150-H1/SW-WB425	12 V, 1.5A wall mounted AC/DC power adapter, US plug-in	ANSI, US IEC/UL certified	2-pin US input plug
Kit: 3TN00683BA EMA: 3TN00673BA	RUIDE: RD1201500-C55-198OG/BW120150-EC6C-LL07 KELI: KL-AD3060VA/SW-WB426	12 V, 1.5A wall mounted AC/DC power adapter, EU plug-in	Europe, CE certified	2-pin EU input plug

The following table describes the various plug types used in the ONTs.

Table 5-3 Plug types

Plug type	Icon
2-pin EU plug	
2-pin US plug	

[Table 5-4, “Hardware parts required for G-1425G-E installations” \(p. 47\)](#) lists the hardware parts required for mounting an G-1425G-E ONT.

Table 5-4 Hardware parts required for G-1425G-E installations

Part	Description
ONT unit	The G-1425G-E ONT
Wall mount bracket (3FE49555AA)	The wall mount bracket is fastened to a wall. The G-1425G-E ONT is seated in the wall mount bracket, with white color, 72 pcs per box.
Mounting screws	Two screws are required to mount the wall mount bracket. The recommended screw is a M4 or #6 screw with a pan head style of screw head.

5.3 G-1425G-E general description

G-1425G-E indoor ONTs provide the subscriber interface for the network by terminating the PON interface and converting it to user interfaces that directly connect to subscriber devices.


The G-1425G-E has built-in Wi-Fi 802.11 b/g/n/ac networking with triple play capability and can provide triple play services with voice, video and data.

The ONT is compatible with all existing subscriber equipment, including analog phones with both tone and rotary dial capabilities, cordless phones, modems, fax machines, and caller ID boxes (Type I, Type II, and Type III).

The ONT can be placed on a flat surface, such as a desk or shelf.

The following figure shows the G-1425G-E ONT.

Figure 5-1 G-1425G-E ONT (external antenna)

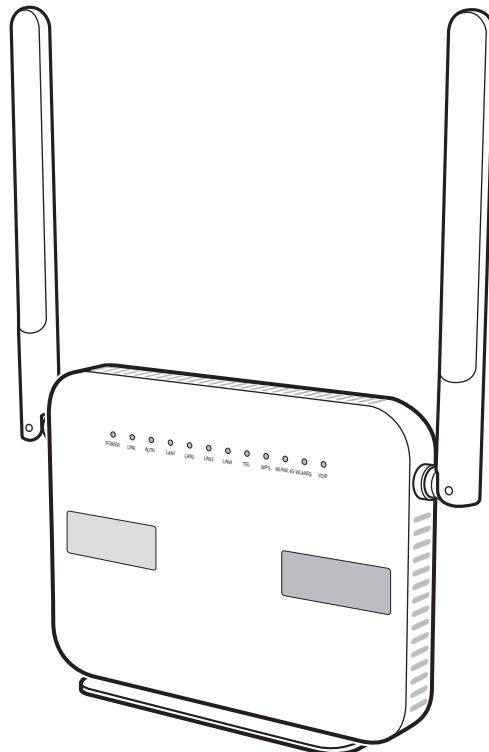

36684

G-1425G-E indoor ONTs provide the following functions:

- Dual-band concurrent 2x2 IEEE 802.11b/g/n 2.4 GHz and 802.11ac MIMO 5 GHz
- Supports 802.11 b/g/n 2x2 Wireless 2.4 GHz MIMO; Channel bandwidth 20, 40, 20/40 MHz
- Supports 802.11ac 2x2 Wireless 5 GHz Mu-MIMO; Channel bandwidth 20, 40, 80 MHz
- Four Gigabit standard RJ-45 1000/100/10 Mbps, auto negotiating Ethernet ports and MDI/MDIX auto sensing
- One POTS ports with R-J11 connectors
- GPON uplink: G.984 and G.988 series standard compliant
- 256MB NAND Flash with bad block management, 512MB DDR3 RAM, pin2pin compatible design for possible upgrade of RAM/Flash
- WLAN on/off push button
- WPS on/off push button
- Reset button
- Triple-Play services, including voice, video and high speed Internet access
- Support for fax services
- Built-in layer 2 switch; line rate L2 traffic

- IP video distribution
- Wavelength: 1490 nm downstream; 1310 nm upstream
- Supports WBF filter. The GPON ONTs can co-exist with XGS-PON ONTs in the same PON
- PHY rate: 300 Mbps for 2.4 G and 867 Mbps for 5 G
- External antennas with 5 dBi gain for each
- Optics that support received signal strength indication (RSSI)
- WPA, WPA-PSK/TWIP
- WPA2, WPA2-PSK/AES
- VLAN tagging/detagging and marking/remarketing of IEEE 802.1p per Ethernet port.
- Dying gasp support
- Voice services via Session Initiation Protocol (SIP)
- Multiple voice Code
- DTMF dialing
- Echo cancellation (G.168)
- Fax mode configuration (T.30/T.38)
- Caller ID, call waiting, call hold, 3-way calling, call transfer, message waiting
- Forward Error Correction (FEC)
- Support for multiple SSIDs (private and public instances); contact your Nokia representative for further details.
- Conductive power: 200 mW/23 dBm (2.4 GHz); 200 mW/23 dBm (5 GHz)
- Maximum effective isotropic radiated power (EIRP):
 - 5 dBi external antenna: 630 mW/28 dBm (2.4 GHz); 630 mW/28 dBm (5 GHz)
- Bridged mode or routed mode per LAN port
- TR-069 support
- Ethernet-based Point-to-Point (PPPoE)
- DHCP client/server
- DNS server/client
- DDNS
- Port forwarding
- Network Address Translation (NAT)
- Network Address Port Translation (NAPT)
- UPnP IGD2.0 support
- ALG
- IGMP snooping and proxy (v2/v3)
- Traffic classification and QoS capability
- OMCI/TR-069 Web GUI configuration
- Performance monitoring and alarm reporting

- Remote software image downloading and activation
- IP/MAC/URL filter
- Multi-level firewall and ACL
- Econet ONT in mainstream
- SoftGRE supports IPv4 and IPV6 tunnel.
- Speed Test support
- TR-181 support

5.3.1 TR-069 parameter support

The G-1425G-E ONT supports the following TR-069 features:

- Host object
- Port forwarding
- Optical parameters
- Object support for optical parameters
- Statistics and troubleshooting
- Diagnostic parameter
- Component parameter

Host object support

The ONT provides host object support for: InternetGatewayDeviceLANDevice.Hosts.Host.

Port forwarding support

The ONT supports the port forwarding of objects via TR-069:

- Application name
- WAN port
- LAN port
- Internal client
- Protocol
- Enable mapping
- WAN connection list

These port forwarding parameters are also supported in the GUI. For more information, see [Table 7-37, “Port Forwarding parameters” \(p. 166\)](#) in [Chapter 7, “Configure a G-1425G-E indoor ONT”](#).

Optical parameters support

The ONT supports the reading of optical parameters via TR-069:

- Laser bias current
- Voltage
- Temperature

- Received signal levels
- Lower thresholds

These optical parameters are also supported in the GUI. For more information, see [Table 7-9, “Optics Module Status parameters” \(p. 105\)](#) in [Chapter 7, “Configure a G-1425G-E indoor ONT”](#).

Object support for WiFi parameters

The ONT supports the status retrieval and configuration of the following Wi-Fi parameters via TR-069:

- Channel
- SSID
- Tx power (transmission rate in percentage of maximum transmit power)
- WPS

These TR-069 object parameters are also supported in the GUI. For more information, see [Table 7-16, “Wireless \(2.4GHz\) parameters” \(p. 119\)](#) and [Table 7-17, “Wireless \(5GHz\) parameters” \(p. 123\)](#) in [Chapter 7, “Configure a G-1425G-E indoor ONT”](#).

Statistics and troubleshooting support

The ONT supports TR-069 statistics and troubleshooting for LAN, WAN, and WiFi.

Diagnostic parameter support

The ONT supports the following TR-069 diagnostic parameters:

- TR-143
- IP ping
- Traceroute

These diagnostic parameters are also supported in the GUI. For more information, see [7.58 “Diagnosing WAN connections” \(p. 183\)](#) in [Chapter 7, “Configure a G-1425G-E indoor ONT”](#).

5.3.2 TR-069 authentication using TLS and CA certificates

G-1425G-E ONTs support TLS, as well as ACS authentication using SHA-256 pre-installed certificates.

If the URL is set to the HTTPS format, by default, the connection will use TLS without authentication mode. The ONT can also authenticate the ACS using a pre-installed CA certificate.

The G-1425G-E ONTs support TLSv1.3 for TR-069. The ONT supports download certification from ACS.

5.3.3 TR-104 parameter extension support for voice service

A vendor specific attribute has been added to the TR-104 Voice Service object structure to enable the ACS to configure the name of the embedded GSIP XML file to be selected.

The TR-104 Voice Service Object is:
InternetGatewayDevice.Services.VoiceService.{i}.Capabilities.SIP.

The vendor specific attribute is: X_ALU-COM_XML_File_Name_Path.

5.3.4 TR-104 voice-related alarms

The G-1425G-E ONT supports the following four TR-104 voice-related alarms on a per FXS port basis.

These alarms all represent SIP registration failures with an alarm level of MAJOR.

- SIPREGDNS: domain name could not be resolved
- SIPREGAUTH: authentication failed
- SIPREGTO: re-transmissions timed out
- SIPREGERR: error response from the registration server

5.3.5 TR-104 parameters for FX line testing

New attributes have been added to the TR-104 Voice Service object structure to enable the ACS to perform line tests. The ONT supports the following electrical line tests:

- Hazardous potential
- Foreign electrical motive force
- Resistive faults
- Receiver off-hook test
- Ringers test

5.3.6 TR-111 support

The G-1425G-E ONT supports TR-111, which extends the WAN Management Protocol defined in TR-069 to enhance the ability to remotely manage LAN devices.

The device-gateway association enables an ACS to identify the associated gateway through which a device is connected.

A connect request via the NAT gateway enables an ACS to initiate a TR-069 session with a device that is operating behind a NAT gateway.

5.3.7 TR-181 parameter support

TR-181 parameter support has been introduced or enhanced for the parameter categories and functions listed in the following table.

TR-181 can be enabled (instead of TR-098) by defining the associated TR-181 parameter in a customer-specific pre-configuration file downloadable into the ONT.

For details about which parameters are supported, see your Nokia representative.

Table 5-5 Support for TR-181 parameter categories

Parameter category	Functionality
Device info and statistics	Device information
	Optical statistics
	Ethernet statistics
	Wi-Fi statistics
	Bridge statistics
	PPP statistics
	IP statistics
	Periodic statistics
Diagnostics	Voice statistics
	Wi-Fi diagnostic
	Ping
	Trace route
	TR-143 Speed test
	Self test
	Voice diagnostics
Optical configuration	NSLookup diagnostics
	Ethernet
	Bridge
	PPP
	IP
	Routing
	QoS
	DSlite
Hosts configuration	NAT
	Neighbor discovery
Wi-Fi configuration	

Table 5-5 Support for TR-181 parameter categories (continued)

Parameter category	Functionality
Service configuration	Voice service
	DDNS
	DNS
	DHCP
	GRE
	IGMP
	NTP timing
Firewall	
WebGUI configuration	
Nokia WiFi configuration	Nokia WiFi cloud service

5.4 G-1425G-E software and installation feature support

For information on installing or replacing the G-1425G-E, see:

- [Chapter 6, “Install or replace a G-1425G-E indoor ONT”](#)

For information on the following topics, see the **Nokia ONT Product Overview Guide**:

- ONT and MDU general descriptions of features and functions
- Ethernet interface specifications
- POTS interface specifications
- RSSI specifications
- WiFi specifications
- ONT optical budget
- SLID entry via Ethernet port
- ONT management using an ONT interface

5.5 G-1425G-E interfaces and interface capacity

[Table 5-6, “G-1425G-E indoor ONT interface connection capacity” \(p. 54\)](#) describes the supported interfaces and interface capacity for G-1425G-E indoor ONTs.

Table 5-6 G-1425G-E indoor ONT interface connection capacity

ONT type and model	Maximum capacity								
	POTS	100/10 BASE-T	1000/100/10 BASE-T	RF video (CATV)	MoCA	VDSL2	E1/T1	Local craft	GPON SC/APC
G-1425G-E ¹	1	—	4	—	—	—	—	—	1


Notes:

1. The G-1425G-E ONTs provide Wi-Fi service that is enabled and disabled using a WiFi on/off switch.

5.5.1 G-1425G-E connections and components


The following figure shows the physical connections for G-1425G-E indoor ONTs.

Figure 5-2 G-1425G-E indoor ONT physical connections (back)

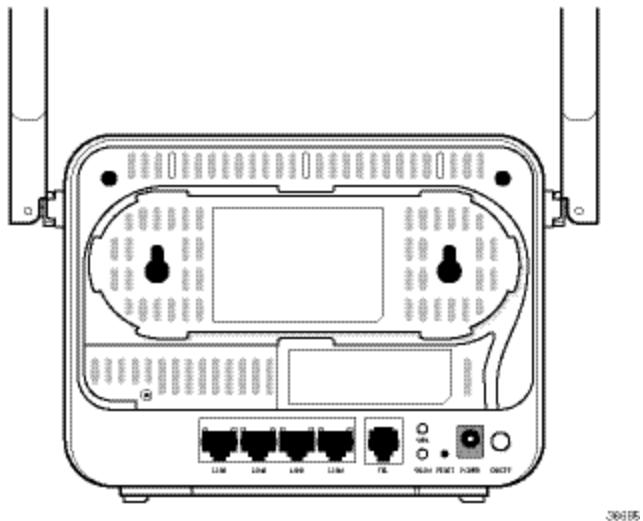

[Figure 5-3, “G-1425G-E indoor ONT with fiber optic connector” \(p. 56\)](#) shows the G-1425G-E indoor ONT with a fiber optic connector.

Figure 5-3 G-1425G-E indoor ONT with fiber optic connector

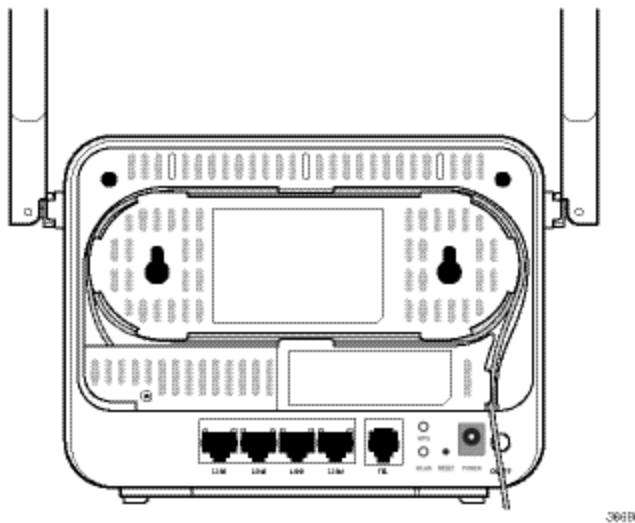

[Table 5-7, “G-1425G-E indoor ONT physical connections” \(p. 56\)](#) describes the physical connections for G-1425G-E indoor ONTs.

Table 5-7 G-1425G-E indoor ONT physical connections


Connection ¹	Print Letters	Description
POTS port	TEL	This connection is provided through an RJ-11 port. One POTS connection is supported. The POTS port supports voice services.
Ethernet ports	LAN1 to LAN4	This connection is provided through Ethernet RJ-45 connectors. Up to four 1000/100/10 Base-T Ethernet interfaces are supported. The Ethernet ports can support both data and in-band video services on all four interfaces.
Power input	POWER	This connection is provided through the power connector. A power cable fitted with a barrel connector is used to make the connection.
Reset button	RESET	Pressing the Reset button for less than 10 seconds reboots the ONT; pressing the Reset button for 10 seconds resets the ONT to the factory defaults, except for the LOID and SLID. Accessible through a 2mm pin hole.
WLAN button	WLAN	WiFi service is compliant with IEEE 802.11 standards and is enabled and disabled using the WLAN button.
On/Off button	ON/OFF	This button turns the ONT on or off.

Notes:

1. The primary path for the earth ground for these ONTs is provided by the 12V Return signal in the power connector.

[Figure 5-4, “Bottom of the G-1425G-E ONT” \(p. 57\)](#) shows the bottom of the ONT.

Figure 5-4 Bottom of the G-1425G-E ONT

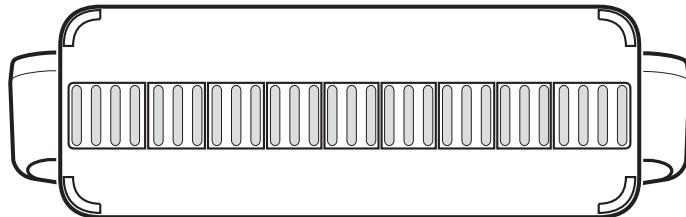


38782

5.6 G-1425G-E LEDs

Figure 5-5, “G-1425G-E indoor ONT LEDs” (p. 57) shows the G-1425G-E indoor ONT LEDs.

Figure 5-5 G-1425G-E indoor ONT LEDs

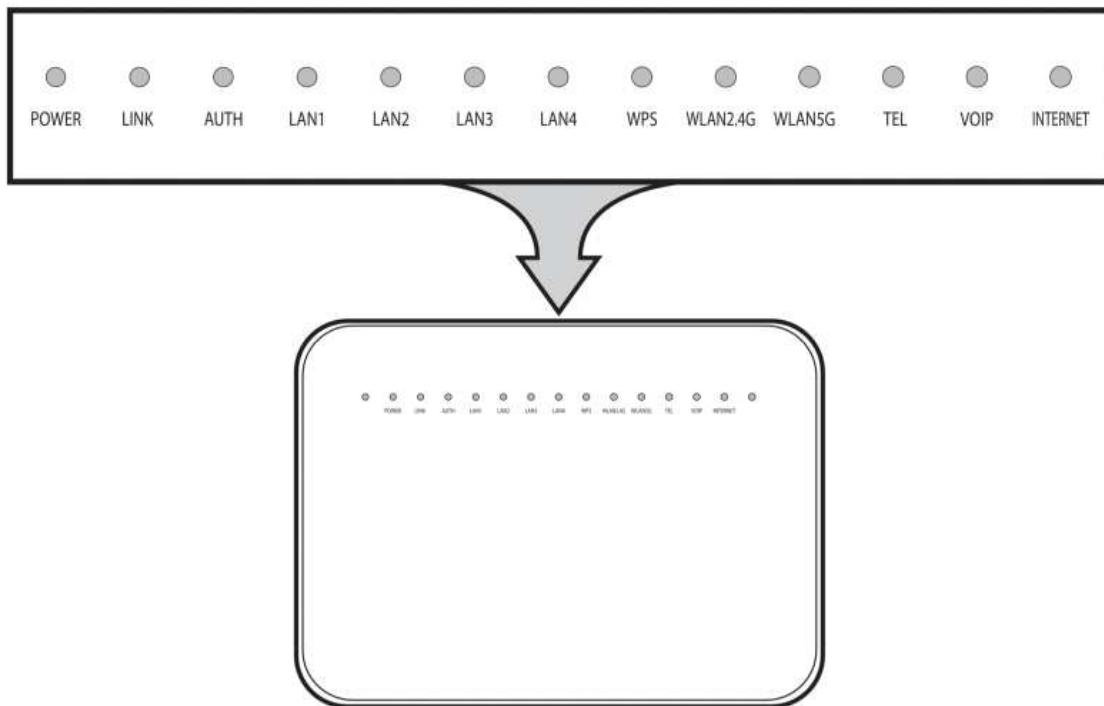

39064

The following table provides LED descriptions for G-1425G-E indoor ONTs.

Table 5-8 G-1425G-E indoor ONT LED descriptions

Indicator	LED color and behavior	LED behavior description
POWER	Green solid	Power on
	Green blink	Light failed on startup (for example corrupt flash), or software update.
	Amber Blink	Loopback is detected.
	Off	Power off
LINK	Green solid	GPON link between ONT and OLT is operating normally
	Off	GPON link is down or no link is connected
AUTH	Green solid	ONT is configured on the OLT and is in service (UP)
	Green flashing	ONT is in the process of ranging or synchronizing over the OLT
	Off	Fiber is not connected or no power is received to the ONT
LAN 1 to 4	Green solid	ONT is connected to the associated LAN port (includes devices with wake-on-LAN capability where a slight voltage is supplied to an Ethernet connection)
	Green flashing	LAN activity is present (traffic in either direction)
	Off	ONT power is off or Ethernet is not connected
TEL	Green solid	Phone is off hook
	Green flashing	Phone is in 'call in' or 'talking' condition
	Off	All phones are on hook.
VOIP	Green solid	VoIP service is built up and can provide service.
	Off	VoIP service is not built up or out of service.
WPS	Green solid	WiFi protected setup link is up (negotiation and auto-configuration successful).
	Green flashing	WiFi protected setup link activity (negotiation and auto-configuration ongoing).
	Green fast flashing	WPS session overlap detected.
	Off	WiFi protected setup link down or no link connected (negotiation has not started or has failed). WiFi protected setup processing exception or multiple peers using WPS simultaneously.
WLAN 2.4 GHz	Green solid	WLAN link is enabled in 2.4 GHz.
	Green flashing	Traffic is passing through the WLAN link.
	Off	WLAN link is disabled or no link is connected.
WLAN 5 GHz	Green solid	WLAN link is enabled in 5 GHz
	Green flashing	Traffic is passing through the WLAN link
	Off	WLAN link is disabled or no link is connected
USB	Green solid	Device connected to USB port.
	Green flashing	Traffic is passing through the USB connection.
	Off	Device not connected to USB port.

Table 5-8 G-1425G-E indoor ONT LED descriptions (continued)

Indicator	LED color and behavior	LED behavior description
INTERNET	Green solid	IP is connected (the device has a WAN IP address from IPCP/DHCP/Static and Broadband link is up) and no traffic detected. If the IP or PPPoE session is dropped due to an idle time-out, the light will remain green if PON link is still present. If the session is dropped for any other reason, the light is turned off.
	Green flickering	PPPoE or DHCP connection is in progress.
	Off	Broadband physical connection power off, device in bridged mode with no IP address assigned to the device, or Broadband physical interface connection not present

5.7 G-1425G-E detailed specifications


The following table lists the physical specifications for G-1425G-E indoor ONTs.

Table 5-9 G-1425G-E indoor ONT physical specifications

Description	Specification
Depth (with external antenna)	1.45 in. (36.9 mm)
Length and depth of the bottom plate (with external antenna)	1.96 in. (50 mm)
Width (with external antenna)	7.79 in. (198 mm)
Height (including antenna) (without antenna)	11.17 in. (283.8 mm) 5.37 in. (138.4 mm)
Weight [within ± 0.5 lb (0.23 kg)] (net weight of ONT) (with external antenna)	0.73 lbs (332 g)

The following figure shows an example ONT physical specifications. The physical dimension may differ for each ONT model.

Figure 5-6 ONT physical specifications

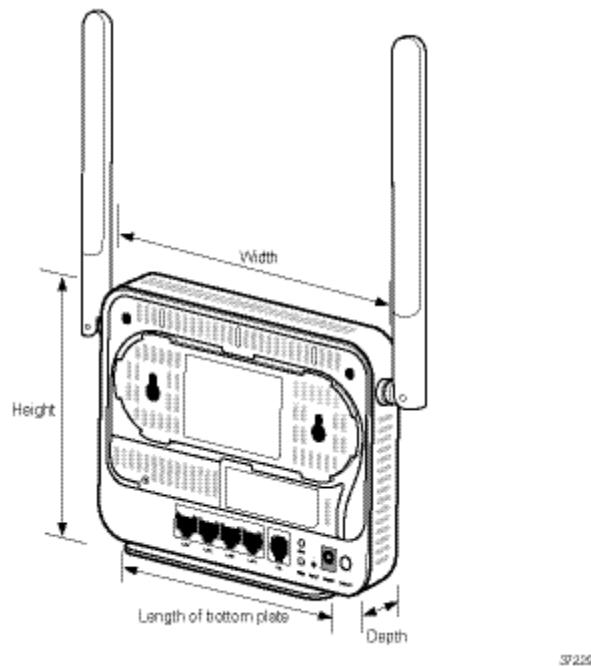

3P229

[Table 5-10, “G-1425G-E indoor ONT power consumption specifications” \(p. 60\)](#) lists the power consumption specifications for G-1425G-E indoor ONT.

Table 5-10 G-1425G-E indoor ONT power consumption specifications

Mnemonic	Maximum power (Not to exceed)	Condition	Minimum power	Condition
G-1425G-E ¹	18.144 W	1 POTS off-hook, 4 1000/100/10 Base-T Ethernet, Wi-Fi operational	3.18 W	1 POTS on-hook, other interfaces/services not provisioned

Notes:

1. The units without USB have lower power consumption.

[Table 5-11, “G-1425G-E indoor ONT environmental specifications” \(p. 61\)](#) lists the environmental specifications for G-1425G-E indoor ONT.

Table 5-11 G-1425G-E indoor ONT environmental specifications

Mounting method	Temperature range and humidity	Altitude
On desk or shelf	Operating: 23°F to 113°F (-5°C to 45°C) ambient temperature 5% to 95% relative humidity, non-condensing	Contact your Nokia technical support representative for more information
	Storage: -4°F to 158°F (-20°C to 70°C)	

[Table 5-12, “G-1425G-E indoor ONT Dimension data specifications” \(p. 61\)](#) lists the dimension data specifications for G-1425G-E indoor ONT.

Table 5-12 G-1425G-E indoor ONT Dimension data specifications

Dimensions	Specifications
Packet size supported	2000 frames
Number of IP addresses supported (or ranges)	IPv4: 253 hosts
Number of supported Wi-Fi clients (per radio, per device, per mesh)	64 per radio, 128 per device and 256 per mesh
Number of supported beacons /APs in a mesh	3 beacons in a mesh network
Number of supported WAN interfaces	Supports 8 WAN connections
Number of supported VLANs	Supports 4094 VLANs
Number of priority queues, and overall buffer size	128 priority queues. Max 16MB for WAN and 4MB for LAN
Number of multicast groups (DACL entries)	1024

5.8 G-1425G-E GEM ports and T-CONTs

[Table 5-13, “G-1425G-E indoor ONT capacity for GEM ports and T-CONTs” \(p. 61\)](#) lists the maximum number of supported T-CONTs and GEM ports. See the appropriate release Customer Release Notes for the most accurate list of supported devices.

Table 5-13 G-1425G-E indoor ONT capacity for GEM ports and T-CONTs

ONT or MDU	Maximum	Notes
Package P ONTs		
GEM ports per indoor or outdoor ONT	256	256 are present; 254 are available, and 2 are reserved for multicast and debugging
T-CONTs per indoor or outdoor ONT	32	32 are present; 31 are available, and 1 is reserved for OMCI

5.9 G-1425G-E performance monitoring statistics

The following section identifies the supported performance monitoring statistics for G-1425G-E ONTs. A check mark indicates the statistic is supported on that ONT. An empty cell indicates the statistic is not supported.

i **Note:** If you have trouble accessing G-1425G-E ONTs performance monitoring statistics using TL1, please contact your Nokia support representative for more information about how to access and retrieve performance monitoring type counters.

The following table provides statistics for ONTENET type counters.

Table 5-14 Package S ONTs ONTENET performance monitoring statistics

ONT	ONTENET statistics													
	FCSE	EC	LC	RBO	SCF	MCF	DT	IMTE	CSE	AE	IMRE	FTL	TBO	SQE
G-1425G-E ¹	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ ²	✓	✓

Notes:

1. A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds.
2. Only packets larger than 9 kB will be counted.

The following table provides statistics for ONTL2UNI type counters.

Table 5-15 Package S ONTs ONTL2UNI performance monitoring statistics

ONT	ONTL2UNI statistics									
	FRAMES	BYTES	MCFRAMES	DSDRPFMRMS	USDRPFMRMS	USFRAMES	DSFRAMES	DSBYTES	USMCFRAMES	DSMCFRAMES
G-1425G-E ¹	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Notes:

1. A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds.

The following table provides statistics for PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTCCES, PONONTTCFLOW, and PONONTTCVOIP type counters.

Table 5-16 Package S ONTs PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTCCES, PONONTTCFLOW, PONONTCVOIP performance monitoring statistics

ONT	PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTCCES, PONONTTCFLOW, PONONTCVOIP statistics					
	TXBLOCKS	TXFRAGS	RXBLOCKS	RXFRAGS	LOSTFRAGS	BADGEMHDRS
G-1425G-E ¹	✓	✓	✓	✓	✓	—

Notes:

1. A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds.

The following table provides statistics for PONONTTC aggregate type counters

Table 5-17 Package S ONTs PONONTTC aggregate performance monitoring statistics

ONT	PONONTTC (aggregate) statistics					
	TXBLOCKS	TXFRAGS	RXBLOCKS	RXFRAGS	LOSTFRAGS	BADGEMHDRS
G-1425G-E ¹	✓	✓	✓	✓	✓	—

Notes:


1. A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds.

5.10 G-1425G-E functional blocks

G-1425G-E indoor ONTs are single-residence ONTs that support Wireless (Wi-Fi) service. Wi-Fi service on these ONTs is compliant with the IEEE 802.11 standard and enabled or disabled using a WLAN button. In addition to the Wi-Fi service, these ONTs transmit Ethernet packets to four RJ-45 Ethernet ports and voice traffic to two RJ-11 POTS port. These ONTs also feature fiber optic, and power connectors.

The following figure shows the functional blocks for G-1425G-E indoor ONT.

Figure 5-7 G-1425G-E ONT functional block

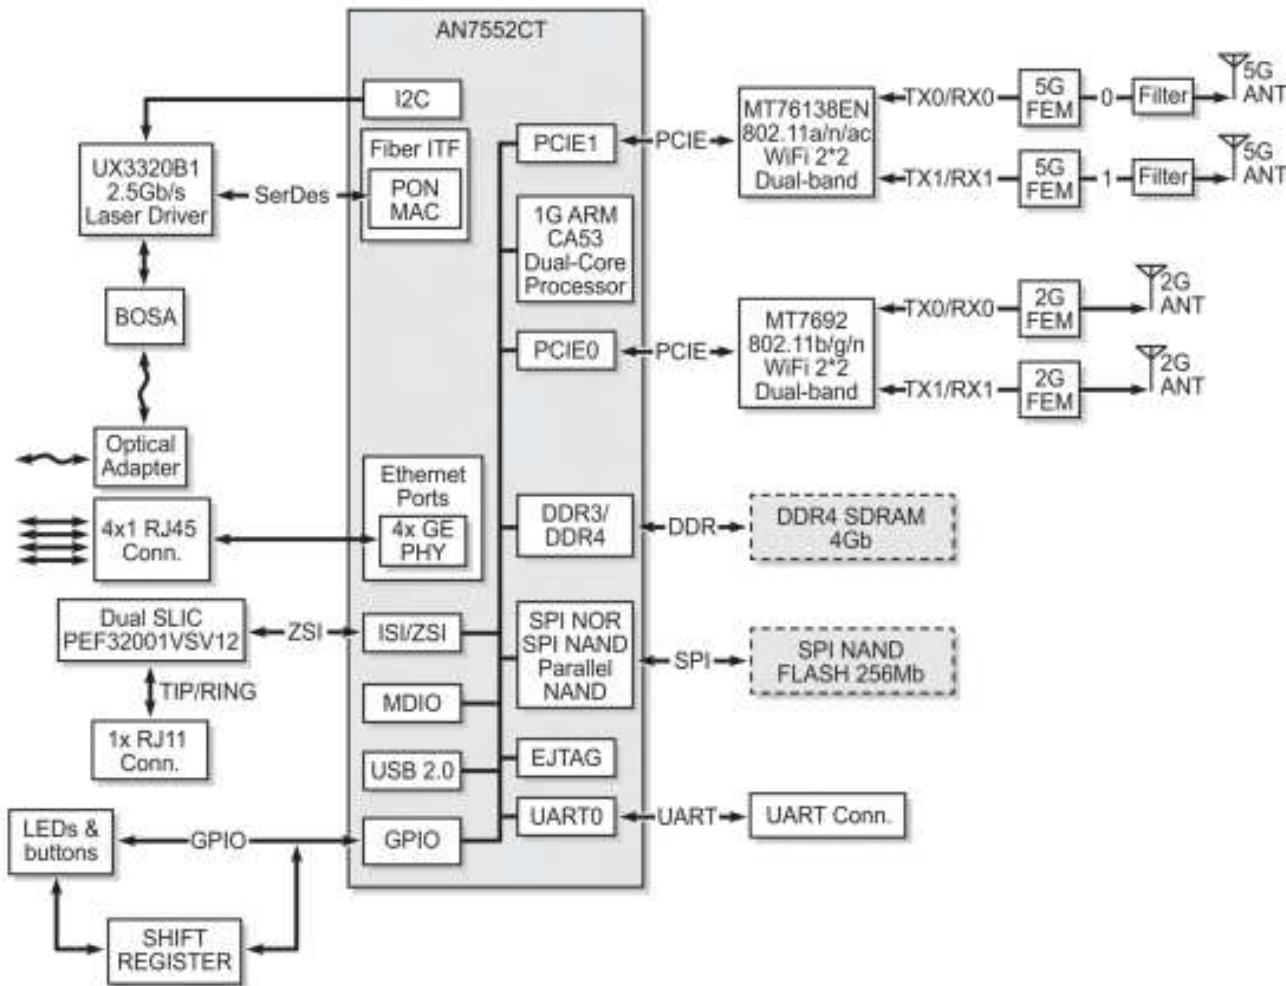

39065

5.11 G-1425G-E standards compliance

G-1425G-E indoor ONTs are compliant with the following standards:

- CE marking for European standards for health, safety, and environmental protection
- EN 300-328 v1.9.1 wide band data transmission standards for 2.4 GHz bands
- G.984 support GPON interface (framing)
- G.984.2 (Amd1, class B+) for GPON
- G.984.3 support for activation and password functions
- G.984.3 support for AES with operator enable/disable on per port-ID level

- G.984.3 support for dynamic bandwidth reporting
- G.984.3 support for FEC in both upstream and downstream directions
- G.984.3 support for multicast using a single GEM Port-ID for all video traffic
- G.984.4 and G.983.2 support for ONT management and provisioning
- IEEE 802.1p for traffic prioritization
- IEEE 802.1q for VLANs
- IEEE 802.3 (2012)
- IEEE 802.11 ac/b/g/n for Wi-Fi
- ITU-T G.711 A-law, G.711 μ-law, and G.729A and G.729B, G.723.1
- SIP RFC 3261

5.11.1 Energy-related products standby and off modes compliance

Hereby, Nokia declares that the G-1425G-E ONTs are in compliance with the essential requirements and other relevant provisions of Directive 2009/125/EC together with Commission Regulation (EC) No 1275/2008 and Commission Regulation (EC) No 801/2013.

The G-1425G-E ONTs qualify as equipment with high network availability (HiNA) functionality. Since the main purpose of G-1425G-E ONTs is to provide network functionality with HiNA 7 days /24 hours, the modes Off/Standby, Power Management, and Networked Standby are inappropriate.

For information about the type and number of network ports, see [5.5 “G-1425G-E interfaces and interface capacity” \(p. 54\)](#) in this chapter.

For information about power consumption, see [5.7 “G-1425G-E detailed specifications” \(p. 59\)](#) in this chapter.

5.11.2 FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

5.11.3 FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



CAUTION

Service Disruption

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

5.12 G-1425G-E special considerations

G-1425G-E is a package P ONT.

5.12.1 Wi-Fi service

G-1425G-E indoor ONTs provide Wi-Fi service as well as voice and data services. Wi-Fi is a wireless networking technology that uses radio waves to provide wireless HSI and network connections. This ONT complies with the IEEE 802.11 standards, which the Wi-Fi Alliance defines as the basis for Wi-Fi technology.

Wi-Fi physical features

G-1425G-E indoor ONTs have the following physical features that assist in providing Wi-Fi service:

- 1 WLAN button for enabling and disabling Wi-Fi service
- 1 Wi-Fi Protected Setup (WPS) push button for adding WPS-enabled wireless devices
- 4 internal antennas: 2 for 2.4G and 2 for 5G

Wi-Fi standards and certifications

The Wi-Fi service on G-1425G-E indoor ONTs supports the following IEEE standards and Wi-Fi Alliance certifications:

- Certified for IEEE 802.11ac/b/g/n/standards
- WPA support including WPA-PSK
- Certified for WPA2-Personal

- Certified for WPA2-enterprise

Wi-Fi GUI features

G-1425G-E indoor ONTs have HTML-based Wi-Fi configuration GUIs.

5.12.2 G-1425G-E ONT considerations and limitations

[Table 5-18, “G-1425G-E ONT considerations and limitations” \(p. 66\)](#) lists the considerations and limitations for Package P G-1425G-E ONTs.

Table 5-18 G-1425G-E ONT considerations and limitations

Considerations and limitations
Call History Data collection (ONTCALLHST) is supported, except for the following parameters: RTP packets (discarded), far-end RTCP and RTCP-XR participation, RTCP average and peak round trip delay, MOS, average jitter, number of jitter-buffer over-runs and under-runs.
Some voice features are configurable on a per ONT basis, including Call Waiting, Call Hold, 3-Way Calling, and Call Transfer.
The maximum value of the ringing AC voltage is 60Vrms, and the ring DC offset voltage is suggested to be 0V.
The following voice features / GSIP parameters are configurable on a per-Client/ per-ONT basis (not per-Subscriber): <ul style="list-style-type: none">• Enable Caller ID and Enable Caller Name ID• Digitmap and the associated Interdigit and Critical timers and Enter key parameters• Warmline timer is enabled per subscriber, but the warmline timer value is configured per ONT and must have a lower value than the Permanent time• Miscellaneous timers: Permanent, Timed-release, Reanswer, Error-tone, and CW-alert timers• Features / functions: Message waiting mode, WMWI refresh interval, DTMF volume level• Service Codes for the following features: CW, Call Hold and Warmline

6 Install or replace a G-1425G-E indoor ONT

6.1 Overview

6.1.1 Purpose

This chapter provides the steps to:

- Install a G-1425G-E indoor ONT
- Replace a G-1425G-E indoor ONT

6.1.2 Contents

6.1 Overview	69
6.2 Prerequisites	69
6.3 Recommended tools	69
6.4 Safety information	70
6.5 Install a G-1425G-E indoor ONT	70
6.6 Wall mount an G-1425G-E indoor ONT	74
6.7 Replace a G-1425G-E indoor ONT	80

6.2 Prerequisites

Ensure that you have all required cables.

6.3 Recommended tools

You need the following tools :

- #2 Phillips screwdriver
- 1/4 in. (6 mm) flat blade screwdriver
- Wire strippers
- Fiber optic splicing tools
- RJ-45 cable plug crimp tool
- Voltmeter or multimeter
- Optical power meter
- Drill and drill bits
- Paper clip

6.4 Safety information

Read the following safety information before installing or replacing the unit.



DANGER

Hazard

Hazardous electrical voltages and currents can cause serious physical harm or death. Always use insulated tools and follow proper safety precautions when connecting or disconnecting power circuits.

Make sure all sources of power are turned off and have no live voltages present on feed lines or terminals. Use a voltmeter to measure for voltage before proceeding.

Always contact the local utility company before connecting the enclosure to the utilities.



WARNING

Equipment Damage

This equipment is ESD sensitive. Proper ESD protections should be used when removing the fiber access cover of the indoor ONT.



CAUTION

Service Disruption

Keep indoor ONTs away from direct sunlight. Prolonged exposure to direct sunlight can damage the unit.



Note: Observe the local and national laws and regulations that may be applicable to this installation.

Observe the following:

- The indoor ONT should be installed in accordance with the applicable requirements of the NEC or CEC. Local authorities and practices take precedence when there is conflict between the local standard and the NEC or CEC.
- The indoor ONT must be installed by qualified service personnel.
- Indoor ONTs must be installed with cables that are suitably rated and listed for indoor use.
- See the detailed specifications in the [Chapter 5, “G-1425G-E unit data sheet”](#) for the temperature ranges of these ONTs.

6.5 Install a G-1425G-E indoor ONT

1

Place the indoor ONT unit on a flat surface, such as a desk or shelf.



Note: The G-1425G-E cannot be stacked with another ONT or with other equipment. The ONT mounting requirements are:


- Allow a minimum 100 mm clearance above the top cover.
- Allow a minimum 50 mm clearance from the side vents.
- Do not place any heat source directly above the top cover or below the bottom cover.

2

Wall-mount the G-1425G-E ONT directly with the screws.

The distance between the mounting hole centres is 100 mm.

Figure 6-1 Wall mounting key holes

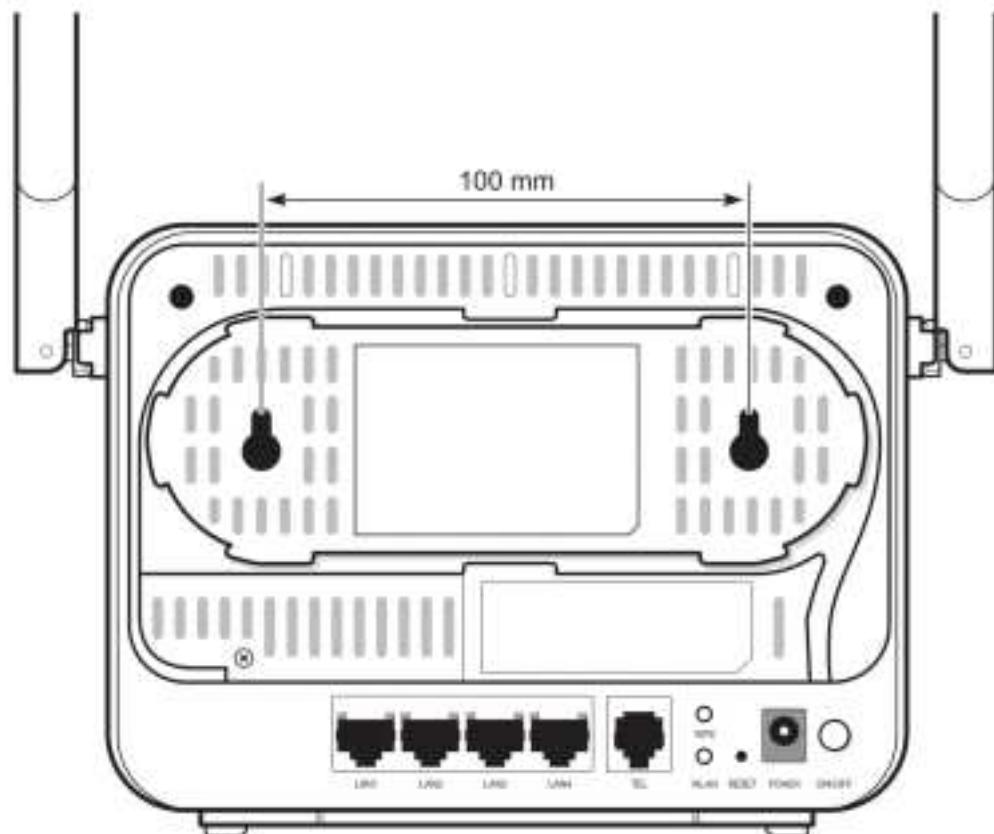


39070

The G-1425G-E indoor ONT must be mounted in a horizontal position.

Review the connection locations, as shown in the following figure.

Figure 6-2 G-1425G-E ONT connections

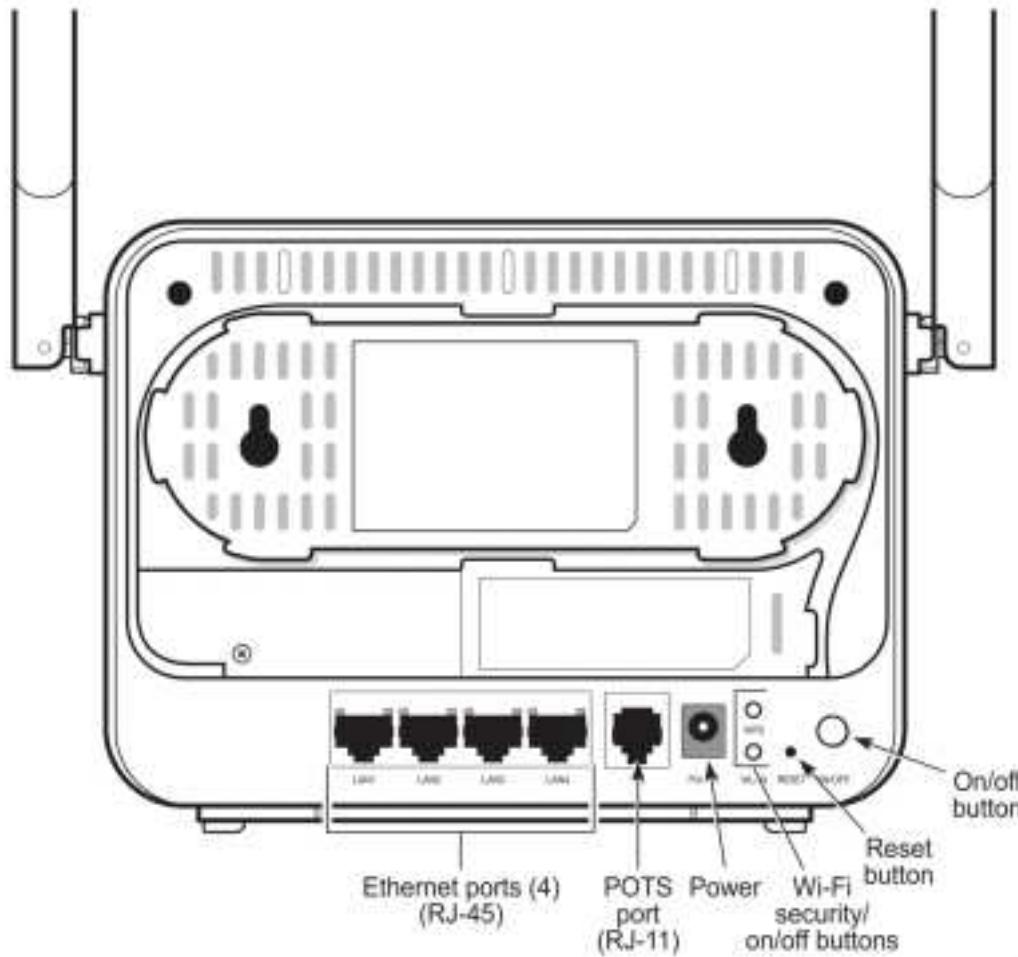

39071

3

Connect the Ethernet cables to the RJ-45 ports.

4

Route the POTS cable directly to the RJ-11 port as per local practices.

5

DANGER



Hazard

Fiber cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.

WARNING



Equipment Damage

Be careful to maintain a bend radius of no less than 1.5 in. (3.8 cm) when connecting the fiber optic cable. A very small bend radius in the cable can result in damage to the optic fiber.

Connect the fiber optic cable with SC/APC adapter to the SC/APC connector on the bottom of the ONT.



Note: Fiber cable preparation varies depending on the type and size of the inside or outside plant fiber cable being spliced to the SC/APC fiber optic pigtail cable.

6

Connect the power cable to the power connector.

7

Power up the ONT unit by using the power switch.

8

If used, enable the Wi-Fi service.

- a. Locate the WLAN button on the ONT; see [Figure 6-2, “G-1425G-E ONT connections” \(p. 72\)](#) for location of the WLAN button.
- b. Press the WLAN button to change the status of the Wi-Fi service.

9

Verify the ONT LEDs, voltage status, and optical signal levels; see the **Nokia ONT Hardware and Cabling Installation Guide**.

10

Activate and test the services; see the **Nokia ONT Hardware and Cabling Installation Guide**.

11

If used, configure the SLID; see the **Nokia ONT Configuration, Management, and Troubleshooting Guide**.

12

If necessary, reset the ONT.


- a. Locate the Reset button on a G-1425G-E indoor ONT as shown in [Figure 6-2, “G-1425G-E ONT connections” \(p. 72\)](#).
- b. Insert the end of a straightened paper clip or other narrow object into the hole in the Reset button to reset the ONT.

END OF STEPS

6.6 Wall mount an G-1425G-E indoor ONT

This chapter provides the steps to mount an G-1425G-E indoor ONT on a wall using a wall mount bracket (3FE49555AA). The G-1425G-E indoor ONT is shipped without the wall mount bracket. The wall mount bracket (3FE 49555 AA) must be ordered separately.

Figure 6-3 G-1425G-E ONT in wall mounting bracket

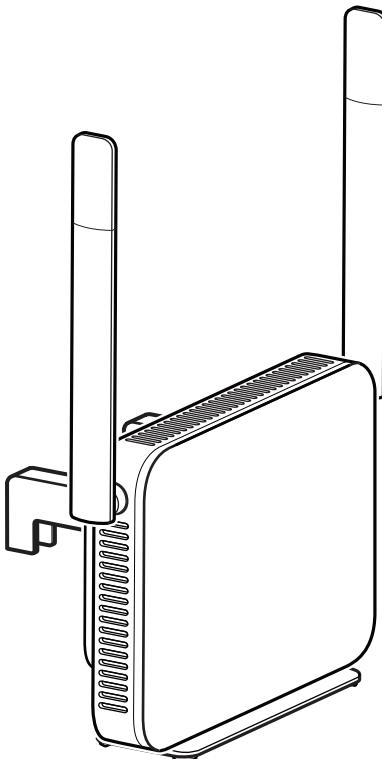

36712

6.6.1 Recommended tools

See section 6.3 “Recommended tools” (p. 69) for the recommended tools.

6.6.2 Procedure

Use this procedure to mount an G-1425G-E ONT on a wall. Two installation options are available:

- Option 1—facing the room for the LEDs to be visible
- Option 2—facing the wall for the connectors and buttons to be visible

1


Place the indoor ONT unit:

- a. Facing the room, go to [Step 2](#). See [Figure 6-8, “ONT in wall mount bracket—facing the room” \(p. 79\)](#).
- b. Facing the wall, go to [Step 3](#). See [Figure 6-7, “ONT to wall mount connection” \(p. 78\)](#).

2

Mount the ONT on a wall facing the room using the wall mount bracket (3FE 49555 AA), as shown in [Figure 6-4, “G-1425G-E wall mount bracket” \(p. 74\)](#).

Figure 6-4 G-1425G-E wall mount bracket

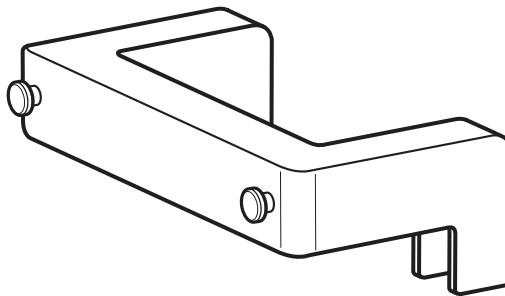

36713

- a. Determine the location of the two anchor holes for the wall mount bracket. The bracket can be used as a template for marking and drilling the holes.

It is recommended to use a level to ensure that the ONT unit is installed properly.

- b. Drill two holes 35 mm (1.37 in.) depth into the wall and with the centers spaced 157 mm (6.2 in.).


- c. Insert the two mounting screws and optional anchors into the holes, leaving a 2 mm (0.078 in.) gap between the screw head and the wall.

- d. At this point, perform a test to ensure that the wall mount bracket fits securely over the screw heads. Mount the bracket flush to the wall so that it does not warp or twist.

- e. Remove the wall mount bracket from the wall.

- f. Route the power cord through the slot in the wall mount bracket. The ferrite bead on the power cord should remain on the underside of the wall mount bracket. See [Figure 6-5, “Wall mount bracket power cord placement” \(p. 76\)](#).


Figure 6-5 Wall mount bracket power cord placement

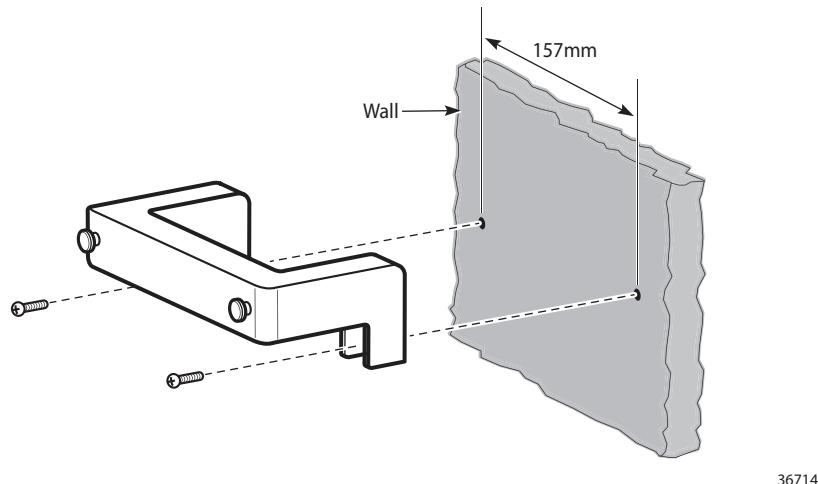

36714

Connect the power cord to the G-1425G-E ONT. See [Figure 6-6, “Power cord to ONT connection” \(p. 77\)](#).


Figure 6-6 Power cord to ONT connection

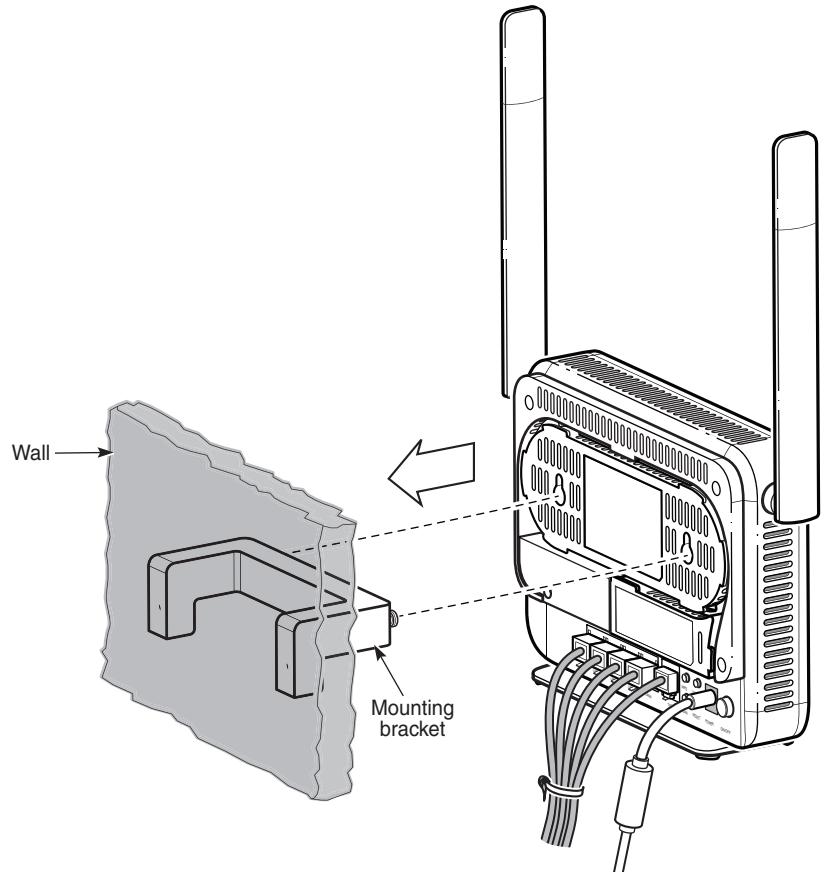

36715

- g. Install the ONT into the wall mount bracket by lifting the unit above the bracket and sliding it downward onto the bottom ledge of the bracket. See [Figure 6-7, “ONT to wall mount connection” \(p. 78\)](#).


Figure 6-7 ONT to wall mount connection

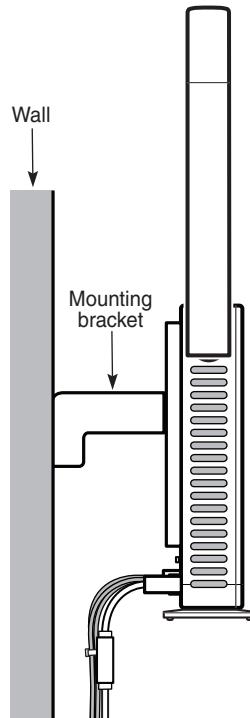

36716

- h. Seat the ONT into the wall mount bracket by engaging the hooks on the base of the unit with those on the bracket; see [Figure 6-8, “ONT in wall mount bracket—facing the room” \(p. 79\)](#). Engaging the hooks ensures that the ONT stays in place while the unit is mounted onto the wall.
- i. Connect the cables.
- j. Hang the unit onto the wall. [Figure 6-8, “ONT in wall mount bracket—facing the room” \(p. 79\)](#) shows the cables routed through the wall mount bracket and the ONT facing the room.

Figure 6-8 ONT in wall mount bracket—facing the room

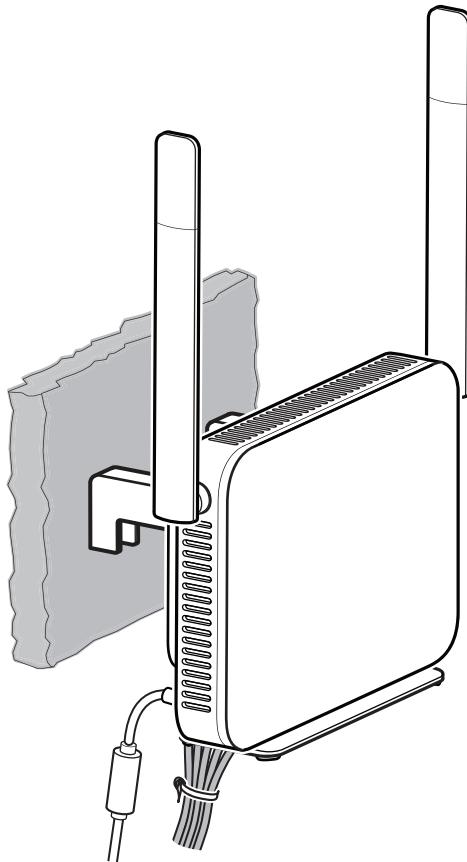

36717

3

Mount the ONT facing the wall using the wall mount bracket (3FE49555AA).

a. Determine the location of the two anchor holes for the wall mount bracket. The bracket can be used as a template for marking and drilling the holes.

It is recommended to use a level to ensure that the ONT unit is installed properly.

b. Drill two holes 35 mm (1.37 in.) depth into the wall and with the centers spaced 157 mm (6.2 in.).

c. Insert the two mounting screws and optional anchors into the holes, leaving a 2 mm (0.078 in.) gap between the screw head and the wall.

d. At this point, perform a test to ensure that the wall mount bracket fits securely over the screw heads. Mount the bracket flush to the wall so that it does not warp or twist.

e. Remove the wall mount bracket from the wall.

- f. On a flat surface such as a desk, install the ONT into the wall mount bracket by lifting the unit above the bracket and sliding it downward onto the bottom ledge of the bracket.
- g. Seat the ONT into the wall mount bracket by engaging the hooks on the base of the unit with those on the bracket. Engaging the hooks ensures that the ONT stays in place while the unit is mounted onto the wall.
- h. Mount the unit onto the wall.
- i. Connect the cables. See [Chapter 6, “Install or replace a G-1425G-E indoor ONT”](#).

[Figure 6-6, “Power cord to ONT connection” \(p. 77\)](#) shows the mounted unit facing the wall with the cables (including the fiber) installed.

END OF STEPS

6.7 Replace a G-1425G-E indoor ONT

1

Deactivate the ONT services at the P-OLT.

If you are using the SLID feature, this step is not required. The ONT and the services can remain in service (IS).

- a. Use the RTRV-ONT command to verify the ONT status and the associated services. Record the serial number or the SLID of the ONT displayed in the command output.

Example:

```
RTRV-ONT::ONT-1-1-1-1-1;
```

- b. If the ONT is in service, place the ONT in OOS state.


Example:

```
ED-ONT::ONT-1-1-1-1-1;
```

2

If used, disable the Wi-Fi service by pressing the WLAN button. The following figure shows the location of the WLAN button.

Figure 6-9 G-1425G-E indoor ONT connections

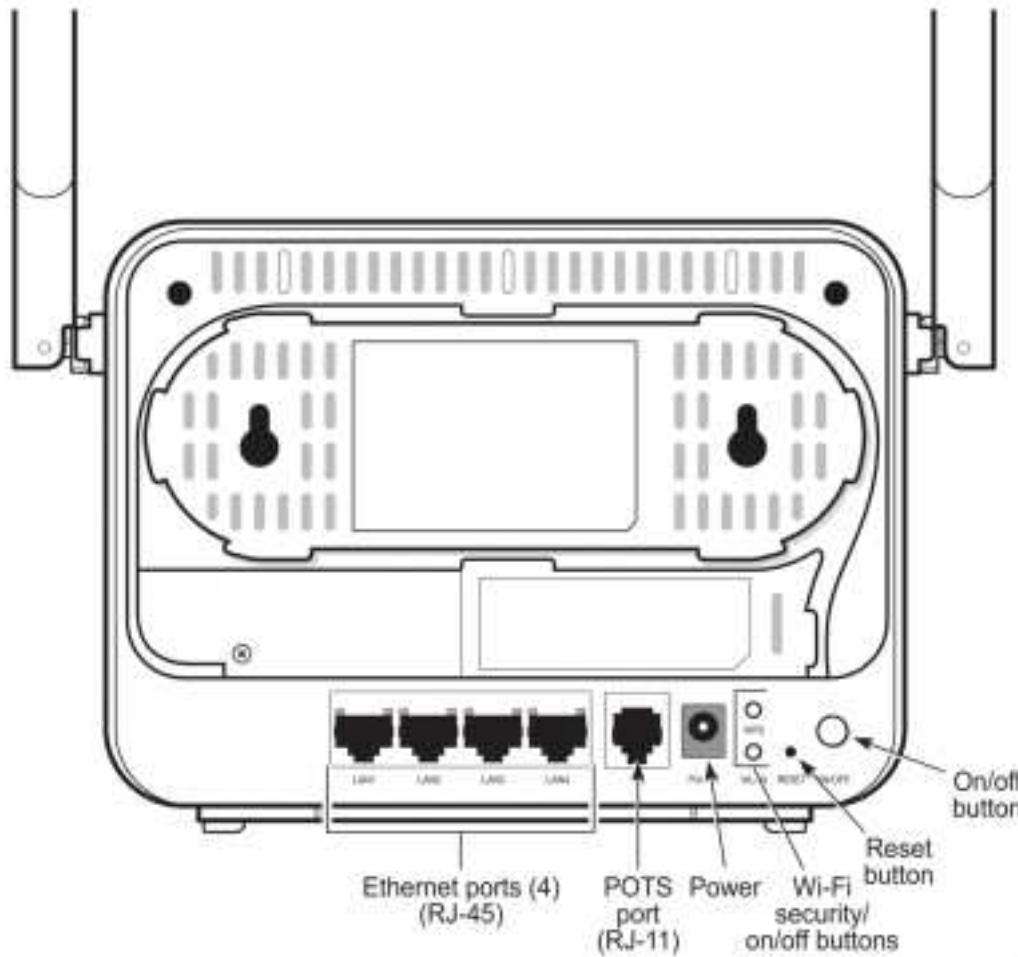

39071

3

Power down the unit by using the on/off power switch.

4

Disconnect the POTS, Ethernet, and power cables from the ONT; see [Figure 6-9, “G-1425G-E indoor ONT connections” \(p. 81\)](#) for the connector locations on the G-1425G-E indoor ONT.

5**DANGER****Hazard**

Fiber cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.

Disconnect the fiber optic cables.

- a. Unplug the fiber optic cable with SC/APC connector from the bottom of the ONT.
- b. Attach a fiber dust cover to the end of the SC/APC connector.

6

Replace the old ONT with a new ONT on a flat surface, such as a desk or shelf.

7

Connect the Ethernet cables directly to the RJ-45 ports; see [Figure 6-9, “G-1425G-E indoor ONT connections” \(p. 81\)](#) for the location of the RJ-45 ports.

8

Connect the POTS cable directly to the RJ-11 port as per local practices; see [Figure 6-9, “G-1425G-E indoor ONT connections” \(p. 81\)](#) for the location of the RJ-11 ports.

9**DANGER****Hazard**

Fiber optic cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.

If required, have approved service personnel who are trained to work with optic fiber clean the fiber optic connection. See the **Nokia ONT Configuration, Management, and Troubleshooting Guide** for more information about fiber optic handling, inspection, and cleaning.

10**DANGER****Hazard**

Fiber cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.

WARNING



Equipment Damage

Be careful to maintain a bend radius of no less than 1.5 in. (3.8 cm) when connecting the fiber optic cable. A very small bend radius in the cable can result in damage to the optic fiber.

Connect the fiber optic cable with SC/APC adapter into the SC/APC connector on the bottom of the ONT.

i **Note:** Fiber cable preparation varies depending on the type and size of the inside or outside plant fiber cable being spliced to the SC/APC fiber optic pigtail cable.

11

Connect the power cable to the power connector.

12

Power up the unit by using the power switch.

13

If used, enable the Wi-Fi service by pressing the WLAN button; see [Figure 6-9, “G-1425G-E indoor ONT connections” \(p. 81\)](#) for the location of the WLAN button.

14

If used, configure the SLID; see the **Nokia ONT Configuration, Management, and Troubleshooting Guide** for more information.

i

Note: A new SLID or the old SLID may be used with the replacement ONT.

If a new SLID is used, the new SLID must also be programmed at the P-OLT using TL1 or a network manager.

If the old SLID is used, no changes need to be made at the P-OLT; see the operations and maintenance documentation for the OLT for more details.

15

Verify the ONT LEDs, voltage status, and optical signal levels; see the **Nokia ONT Hardware and Cabling Installation Guide**.

16

Activate and test the services; see the **Nokia ONT Hardware and Cabling Installation Guide**.

17

If necessary, reset the ONT.

a. Locate the Reset button on a G-1425G-E indoor ONT as shown in [Figure 6-9, “G-1425G-E indoor ONT connections” \(p. 81\)](#).

- b. Insert the end of a straightened paper clip or other narrow object into the hole in the Reset button to reset the ONT.

END OF STEPS

7 Configure a G-1425G-E indoor ONT

7.1 Overview

7.1.1 Purpose

7.1.2 Contents

7.1 Overview	85
GUI configuration	88
7.2 General configuration	88
7.3 HGU mode GUI configuration	88
7.4 Log in to the web-based GUI	88
Viewing device information and connection status	90
7.5 Overview	90
7.6 Overview	90
7.7 Viewing device information	92
7.8 Viewing LAN status	93
7.9 Viewing WAN status	95
7.10 Viewing WAN IPv6 status	97
7.11 Viewing STA information	99
7.12 Viewing Neighboring Access Points	101
7.13 Viewing home networking information	102
7.14 Viewing Optics module status	104
7.15 Viewing statistics	105
7.16 Viewing voice information	108
Network configuration	111
7.17 Overview	111
7.18 Configuring LAN	111
7.19 Configuring LAN IPv6	113
7.20 Configuring WAN	115
7.21 Configuring WAN DHCP	117

7.22 Configuring Wireless 2.4GHz	119
7.23 Configuring Wireless 5GHz	122
7.24 Configuring wireless scheduling	125
7.25 Configuring IP routing	126
7.26 Configuring DNS	128
7.27 Configuring TR-069	129
7.28 Configuring TR-369	130
7.29 Configuring GRE tunnel	132
7.30 Configuring Upstream (US) Classifier	134
7.31 Configuring QoS	139
7.32 Configuring Mesh	144
Security configuration	146
7.33 Overview	146
7.34 Configuring the firewall	146
7.35 Configuring the MAC filter	148
7.36 Configuring the IP filter	150
7.37 Configuring the URL filter	152
7.38 Configuring parental control	153
7.39 Configuring DMZ and ALG	161
7.40 Configuring access control	163
Configuring the Application	165
7.41 Overview	165
7.42 Configuring port forwarding	165
7.43 Configuring port triggering	167
7.44 Configuring DDNS	168
7.45 Configuring NTP	170
7.46 Configuring UPnP and DLNA	171
7.47 Configuring voice	172
Maintenance	174
7.48 Overview	174
7.49 Configuring the password	174

7.50 Configuring LOID	176
7.51 Configuring SLID	177
7.52 Managing the device	178
7.53 Backing up the configuration	179
7.54 Restoring the configuration	180
7.55 Upgrading firmware	181
7.56 Rebooting the device	181
7.57 Resetting to factory defaults	182
7.58 Diagnosing WAN connections	183
7.59 Viewing log files	185
7.60 Generating a delta Configuration file	186
RG Troubleshooting Counters	189
7.61 Overview	189
7.62 Viewing Residential Gateway (RG) troubleshooting counters	189

GUI configuration

7.2 General configuration

Refer to the configuration information provided with your OLT for the software configuration procedure for a G-1425G-E ONT.

For HTTP configuration procedures, please refer to the **Nokia ONT Configuration, Management, and Troubleshooting Guide**.

7.3 HGU mode GUI configuration

Use the procedures below to use the web-based GUI for the G-1425G-E in HGU mode. This mode is preset at delivery.

A home gateway unit (HGU) is a home networking device, used as a gateway to connect devices in the home through fiber to the Internet. An HGU provides a variety of features for the home network including routing and firewall capability. By using the HGU, users can connect all smart equipment in their home, including personal computers, set-top boxes, mobile phones, and other consumer electronics devices, to the Internet.

The G-1425G-E ONTs support TLSv1.2 for WEBGUI (HTTPS).

7.4 Log in to the web-based GUI

Use the procedure below to login to the web-based GUI for the G-1425G-E.

1

Open a web browser and enter the IP address of the ONT in the address bar.

The Login page displays.

The default gateway IP address must be same as the one printed on the device label. You can connect to this IP address using your web browser after connecting your PC to one of Ethernet ports of the ONT. The static IP address of your PC must be in the same default gateway subnet as the ONT.

2



CAUTION

Service Disruption

*Pressing the **Reset** button for less than 10 seconds reboots the ONT; pressing the **Reset** button for 10 seconds resets the ONT to the factory defaults, except for the LOID and SLID.*

Enter your username and password in the Login page.

The default end-user account name and the default password for this account are printed on the device label. The superadmin account is meant for the Operator and is unique per device. Contact your Nokia representative to obtain the superadmin password based on the serial number on the device.

Figure 7-1 Web login page



Note: If you forget the current username and password, press the reset button for 10 seconds and the default values for the username and password will be recovered at startup.

3

Click **Login**. The Device Information page displays.



Note: To help protect the security of your Internet connection, it is recommended to modify both the Wi-Fi password and the ONT WEBGUI login password as soon as possible if you have read and edit permissions.

END OF STEPS

Viewing device information and connection status

7.5 Overview

7.5.1 Purpose

This chapter describes procedures to view device information and connection status on the G-1425G-E.

7.5.2 Contents


7.5 Overview	90
7.6 Overview	90
7.7 Viewing device information	92
7.8 Viewing LAN status	93
7.9 Viewing WAN status	95
7.10 Viewing WAN IPv6 status	97
7.11 Viewing STA information	99
7.12 Viewing Neighboring Access Points	101
7.13 Viewing home networking information	102
7.14 Viewing Optics module status	104
7.15 Viewing statistics	105
7.16 Viewing voice information	108

7.6 Overview

1

Click **Status→Overview** from the left pane in the GPON Home Gateway page. The Overview page displays the following information:

Figure 7-2 Overview page

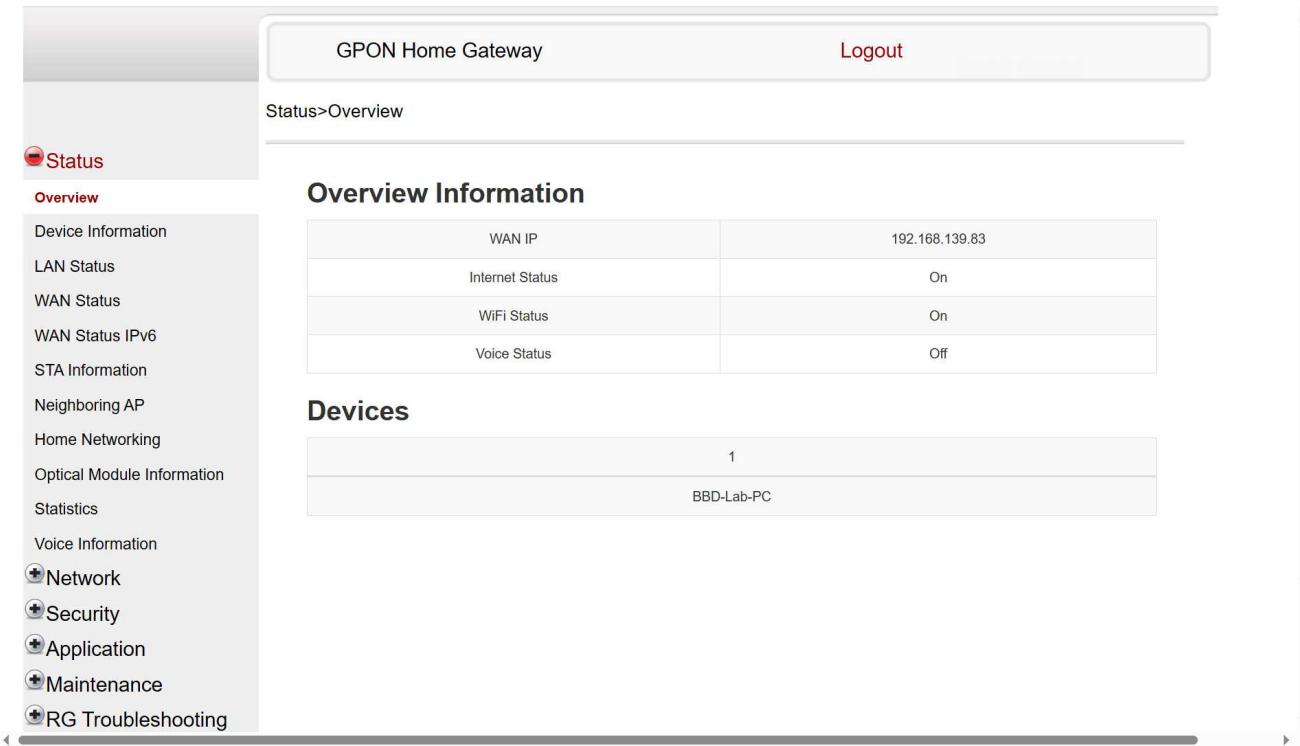

GPON Home Gateway

Status>Overview

Status

Overview

Device Information

LAN Status

WAN Status

WAN Status IPv6

STA Information

Neighboring AP

Home Networking

Optical Module Information

Statistics

Voice Information

Network

Security

Application

Maintenance

RG Troubleshooting

Logout

Overview Information

WAN IP	192.168.139.83
Internet Status	On
WiFi Status	On
Voice Status	Off

Devices

1
BBD-Lab-PC

Table 7-1 Overview parameters

Field	Description
Overview Information	
WAN IP	IP WAN address of the G-1425G-E
Internet Status	Indicates whether or not the G-1425G-E associated with the IP WAN address is on the Internet
WiFi Status	Indicates whether or not the G-1425G-E associated with the IP WAN address is on WiFi
Voice Status	Indicates whether or not the G-1425G-E associated with the IP WAN address is on Voice
Network Topology	
Displays the port number, type, and serial number of the network topology	
Devices	
Displays the port and serial number of the devices	

2

Ensure that you are connected to the Internet.

END OF STEPS

7.7 Viewing device information

1

Click **Status→Device Information** from the left pane in the GPON Home Gateway page. The Device Information page displays the following information:

Figure 7-3 Device Information page

The screenshot shows the 'GPON Home Gateway' interface with the 'Device Information' page selected. The left sidebar lists various monitoring categories. The main content area displays the following device information:

Device name	G-1425G-E
Vendor	Nokia
Serial Number:	ALCLEB414B29
Hardware Version:	3TN00673AAAA
Boot Version	U-Boot 2014.04-rc1(Dec112023-13:44:55)
Software Version:	3TN00702FJL148(0.2401.848)
Chipset	MTK7552
Device Running Time	0 hours 22 minutes 26 seconds

A 'Refresh log' button is located at the bottom of the main content area. The left sidebar includes sections for Status, Overview, Device Information, LAN/WAN/STA/Neighboring AP/Home Networking/Optical Module/Statistics/Voice Information, and Network/Security/Application/Maintenance/RG Troubleshooting.



Note: Upon login, the GPON Home Gateway window displays the WAN status block on the bottom left part of each window. This block shows the WAN connection ID, the WAN status, and any WAN errors.

This block is accurate upon login, but it is static.

Table 7-2 Device Information parameters

Field	Description
Device Name	Name on the ONT
Vendor	Name of the vendor
Serial Number	Serial number of the ONT
Hardware version	Hardware version of the ONT

Table 7-2 Device Information parameters (continued)

Field	Description
Boot version	Boot version of the ONT
Software version	Software version of the ONT
Chipset	Chipset of the ONT
Device Running Time	Amount of time the device has run since last reset in hours, minutes, and seconds

Click **Refresh** to display up-to-date information.

END OF STEPS

7.8 Viewing LAN status

1

Click **Status**→**LAN Status** from the left pane in the GPON Home Gateway page. The LAN Status page displays the following information:

Figure 7-4 LAN Status page

The screenshot shows the 'Status>LAN Status' page of the GPON Home Gateway. The left sidebar includes 'Status', 'Overview', 'Device Information', 'LAN Status' (selected), 'WAN Status', 'WAN Status IPv6', 'STA Information', 'Neighboring AP', 'Home Networking', 'Optics Module Status', 'Statistics', 'Voice Information', 'Network', 'Security', 'Application', 'Maintenance', and 'RG Troubleshooting'. The main content area has two tables: 'Wireless Information' and 'Ethernet Information'. Below these is a table for 'Information' across 'LAN1', 'LAN2', 'LAN3', and 'LAN4'. A 'Refresh' button is at the bottom.

Information	LAN1	LAN2	LAN3	LAN4
Status	Up	Up	Down	Up
Duplex Mode	Full-duplex	Full-duplex	Half-duplex	Full-duplex
Max Bit Rate	1000	1000	Auto	1000
Errors Received	0	0	0	0
Errors Sent	0	0	0	0
Packets Received	508	508	0	4633
Packets Sent	1578	1575	0	5043
Bytes Received	32512	32512	0	383126
Bytes Sent	113870	113110	0	700928

Table 7-3 LAN Status parameters

Field	Description
Wireless Information	
Wireless Status	Indicates whether the wireless is on or off
Wireless Channel	Wireless channel number
SSID Name	Name of each SSID
Wireless Encryption Status	Encryption type used on the wireless connection

Table 7-3 LAN Status parameters (continued)

Field	Description
Wireless Rx Packets	Number of packets received on the wireless connection
Wireless Tx Packets	Number of packets transmitted on the wireless connection
Wireless Rx Bytes	Number of bytes received on the wireless connection
Wireless Tx Bytes	Number of bytes transmitted on the wireless connection
Power Transmission (mW)	Power of the wireless transmission, in mW
Ethernet Information	
Ethernet Status	Indicates whether the Ethernet connection is on or off
Ethernet IP Address	IP address of the Ethernet connection
Ethernet Subnet Mask	Subnet Mask of the Ethernet connection
Ethernet MAC Address	MAC address of the Ethernet connection
Ethernet Rx Packets	Number of packets received on the Ethernet connection
Ethernet Tx Packets	Number of packets transmitted on the Ethernet connection
Ethernet Rx Bytes	Number of bytes received on the Ethernet connection
Ethernet Tx Bytes	Number of bytes transmitted on the Ethernet connection

Click **Refresh** to display up-to-date information.

END OF STEPS

7.9 Viewing WAN status

1

Click **Status→WAN Status** from the left pane in the GPON Home Gateway page. The WAN Status page displays the following information:

Figure 7-5 WAN Status page

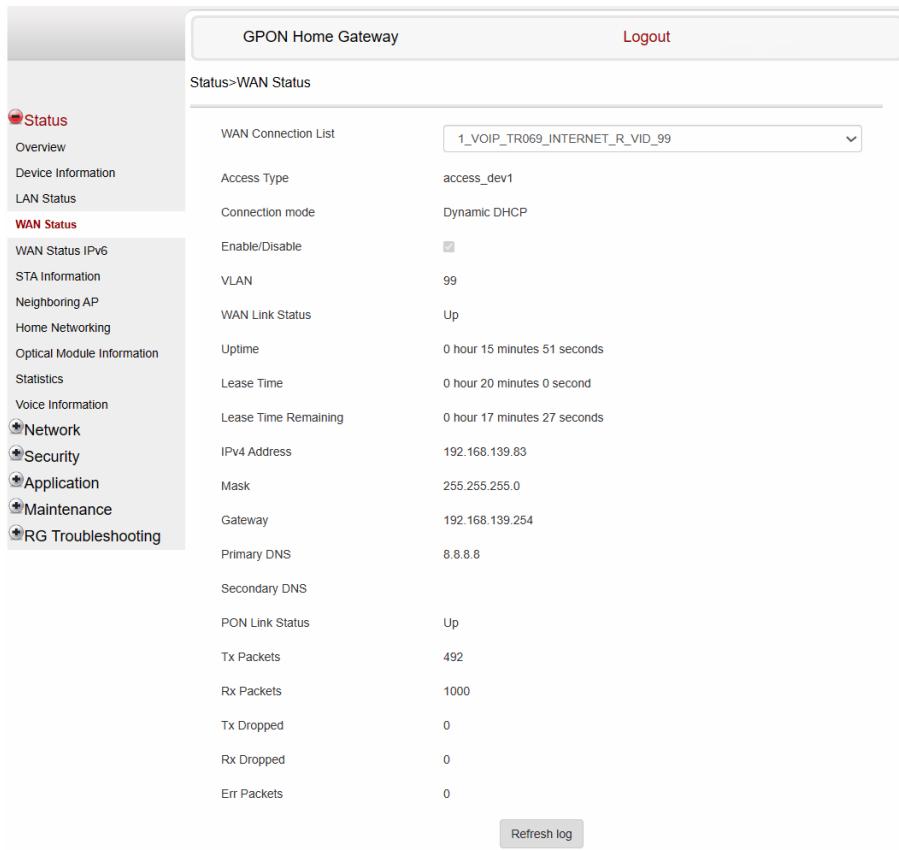


Table 7-4 WAN Status parameters

Field	Description
WAN Connection List	Drop-down menu listing all WAN connections. The connection shown is the connection for which WAN status will be shown.
Connection Mode	Connection mode of the WAN connection
Enable/Disable	Select this checkbox to enable or disable the WAN connection
VLAN	VLAN ID
WAN Link Status	Indicates whether the WAN link is up or down
Uptime	Indicates the uptime duration of WAN link status.
Lease Time	Indicates the lease time duration of WAN link status.
Lease Time Remaining	Indicates the lease time remaining of WAN link status.
IPv4 Address	IP Address of the ONT

Table 7-4 WAN Status parameters (continued)

Field	Description
Mask	Network mask
Gateway	Gateway address
Primary DNS	Primary Domain Name Server
Second DNS	Secondary Domain Name Server
PON Link Status	Indicates whether the PON link is up or down
Tx Packets	Number of packets transmitted on the WAN connection
Rx Packets	Number of packets received on the WAN connection
Tx Dropped	Number of packets dropped on the transmit WAN connection
Rx Dropped	Number of packets dropped on the receive WAN connection
Err Packets	Number of errored packets on the WAN connection

Click **Refresh log** to display up-to-date information.

END OF STEPS

7.10 Viewing WAN IPv6 status

1

Click **Status→WAN Status IPv6** from the left pane in the GPON Home Gateway page. The WAN Status IPv6 page displays the following information:

Figure 7-6 WAN Status IPv6 page

GPON Home Gateway

Status>WAN Status IPv6

Logout English | Español

WAN Connection List

Enable/Disable

VLAN

WAN Link Status

Uptime

IPv6 Address

IPv6 Prefix

IPv6 Gateway

Primary DNS

Secondary DNS

PON Link Status Up

Tx Packets 0

Rx Packets 0

Tx Dropped 0

Rx Dropped 0

Err Packets 0

Refresh log

Table 7-5 WAN Status IPv6 parameters

Field	Description
WAN Connection List	Drop-down menu listing all WAN connections. The connection shown is the connection for which WAN status will be shown.
Enable/Disable	Select this checkbox to enable the WAN connection
VLAN	VLAN ID
WAN Link Status	Indicates whether the WAN link is up or down
Uptime	Indicates the uptime duration of WAN IPv6 status.
IPv6 Address	IPv6 address that identifies the device and its location
IPv6 Prefix	IPv6 prefix
IPv6 Gateway	IPv6 gateway address

Table 7-5 WAN Status IPv6 parameters (continued)

Field	Description
Primary DNS	Primary Domain Name Server
Second DNS	Secondary Domain Name Server
PON Link Status	Whether the PON link is up or down
Tx Packets	Number of packets transmitted on the WAN connection
Rx Packets	Number of packets received on the WAN connection
Tx Dropped	Number of packets dropped on the transmit WAN connection
Rx Dropped	Number of packets dropped on the receive WAN connection
Err Packets	Number of errored packets on the WAN connection

Click **Refresh log** to display up-to-date information.

END OF STEPS

7.11 Viewing STA information

1

Click **Status→STA Information** from the left pane in the GPON Home Gateway page. The STA Information page displays the following information.

Figure 7-7 STA Information page

Table 7-6 STA information parameters

Field	Description
MAC Address	MAC address of the Ethernet connection
SSID Name	Name of each SSID
Channel	Indicates the channel number
Connection Duration	Indicates the connection duration
Wi-Fi Mode	Indicates the Wi-Fi mode
RSSI (dBm)	Indicates the received signal strength

Click **Refresh** to display up-to-date information.

END OF STEPS

7.12 Viewing Neighboring Access Points

1

Click **Status→Neighboring AP** from the left pane in the GPON Home Gateway page. The Neighboring Access Points page displays the following information.

Figure 7-8 Neighboring AP page

The screenshot shows the GPON Home Gateway interface. The top navigation bar includes 'GPON Home Gateway' and 'Logout'. Below it, a breadcrumb navigation 'Status>Neighboring AP' is displayed. The main content area is titled 'Neighboring Access Points' and features a table with columns: Index, SSID name, MAC address, Channel, RSSI (dBm), Authentication Mode, Wi-Fi Mode, and Network Type. A 'Scan' button is located to the right of the table. On the left side, a sidebar menu is visible with the following sections and sub-options: **Status** (Overview, Device Information, LAN Status, WAN Status, WAN Status IPv6, STA Information); **Neighboring AP** (Home Networking, Optics Module Status, Statistics, Voice Information); **Network** (Security, Application, Maintenance, RG Troubleshooting).

Table 7-7 Neighboring AP parameters

Field	Description
Index	Name of the index
SSID name	Name of each SSID
MAC address	MAC address of the Ethernet connection
Channel	Indicates the channel number
RSSI (dBm)	Indicates the received signal strength

Table 7-7 Neighboring AP parameters (continued)

Field	Description
Authentication Mode	Indicates the authentication mode
Wi-Fi Mode	Indicates the Wi-Fi mode
Network Type	Indicates the network type

2

Click **Scan**.

END OF STEPS

7.13 Viewing home networking information

1

Click **Status**→**Home Networking** from the left pane in the GPON Home Gateway page. The Home Networking page displays the following information:

Figure 7-9 Home Networking page

The screenshot shows the 'GPON Home Gateway' interface with the 'Logout' button in the top right. The main content area is titled 'Status>Home Networking'. On the left, a sidebar menu includes 'Status' (selected), 'Overview', 'Device Information', 'LAN Status', 'WAN Status', 'WAN Status IPv6', 'STA Information', 'Neighboring AP', 'Home Networking' (selected), 'Optics Module Status', 'Statistics', 'Voice Information', 'Network', 'Security', 'Application', 'Maintenance', and 'RG Troubleshooting'.

Local Interface

Connection Type	Connected Devices	Setting
Ethernet	1	
Wireless (2.4GHz)	0	Setting
Wireless (5GHz)	0	Setting

Wireless Settings (2.4GHz)

Network Name	ALHN-E088	ALHN-E088-2	ALHN-E088-3	ALHN-E088-4
Access Point	e0:1fed:ae:79:19	e2:1fed:9e:79:19	e2:1fed:ae:79:19	e2:1fed:be:79:19

Wireless Settings (5GHz)

Network Name	ALHN-E088-5	ALHN-E088-6	ALHN-E088-7	ALHN-E088-8
Access Point	e0:1fed:ae:79:1d	e2:1fed:9e:79:1d	e2:1fed:ae:79:1d	e2:1fed:be:79:1d

Local Devices

Status	Connection Type	Device Name	IPv4 Address	Hardware Address	IP Address Allocation	Lease Remaining	Last Active Time
Active	Ethernet	MS-20190227XHYM	192.168.1.64	00:23:56:6c:59:64	DHCP	21 hours 52 min 9 sec	01/02/2023 11:36:41 AM

Routing Domain Details

Domain Name	WAN Name	No of IP	IP Range	LAN List	Delete
-------------	----------	----------	----------	----------	--------

Refresh

Table 7-8 Home Networking parameters

Field	Description
Local Interface	
Ethernet	Table displays the number of Ethernet connections and their settings
Wireless	Table displays the number of wireless connections and their settings (2.4 GHz and 5 GHz)
Wireless Settings (2.4 GHz and 5 GHz)	
Network Name	Name of the wireless network
Access Point	Hexadecimal address of the wireless access point
Local Devices	

Table 7-8 Home Networking parameters (continued)

Field	Description
Table entry	Each entry indicates the status (active or inactive), connection type, device name, IP address, hardware address, IP address allocation, lease remaining, and last active time of each connected local device.
Routing Domain Details	
Table entry	Shows the domain name, WAN name, number of IPs, IP range, and LAN list.

You can:

- Click **Delete** to delete a particular local device connection.
- Click **Refresh** to display up-to-date information.

END OF STEPS

7.14 Viewing Optics module status

1

Click **Status**→**Optics Module Status** from the left pane in the GPON Home Gateway page. The Optics Module Status page displays the following information:

Figure 7-10 Optics Module Status page

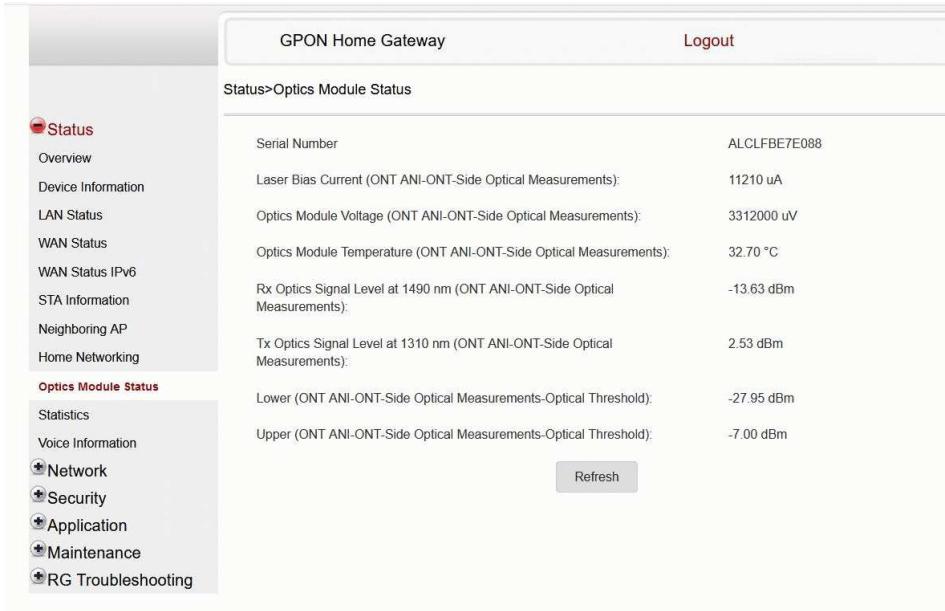


Table 7-9 Optics Module Status parameters

Field	Description
Laser Bias Current (ONT ANI-ONT-Side Optical Measurements)	Laser bias current, measured in uA
Optics Module Voltage (ONT ANI-ONT-Side Optical Measurements)	Optics module voltage, measured in V
Optics Module Temperature (ONT ANI-ONT-Side Optical Measurements)	Optics module temperature, measured in C
Rx Optics Signal Level at 1490 nm (ONT ANI-ONT-Side Optical Measurements)	Received optics signal level at 1490 nm, measured in dBm
Tx Optics Signal Level at 1310 nm (ONT ANI-ONT-Side Optical Measurements)	Transmitted optics signal level at 1310 nm, measured in dBm
Lower (ONT ANI-ONT-Side Optical Measurements-Optical Threshold)	Lower optical threshold, measured in dBm
Upper (ONT ANI-ONT-Side Optical Measurements-Optical Threshold)	Upper optical threshold, measured in dBm

Click **Refresh** to display up-to-date information.

END OF STEPS

7.15 Viewing statistics

1

Click **Status→Statistics** from the left pane in the GPON Home Gateway page. The Statistics page displays.

Select the **LAN** tab, **WAN** tab or **WLAN** tab to view the respective ports.

Figure 7-11 LAN Statistics page

GPON Home Gateway

Status>Statistics

Logout

LAN

WAN

WLAN

Refresh

COUNTERS	LAN1	LAN2	LAN3	LAN4
Bytes Sent	593645	0	0	0
Bytes Received	63132	0	0	0
Packets Sent	554	0	0	0
Packets Received	472	0	0	0
Errors Sent	0	0	0	0
Unicast Packets Sent	546	0	0	0
Unicast Packets Received	243	0	0	0
Discard Packets Sent	0	0	0	0
Discard Packets Received	0	0	0	0
Multicast Packets Sent	7	0	0	0
Multicast Packets Received	147	0	0	0
Broadcast Packets Sent	1	0	0	0
Broadcast Packets Received	82	0	0	0
Unknown Proto Packets Received	0	0	0	0
CRC Error Received	0	0	0	0

Figure 7-12 WAN Statistics page

The screenshot shows the 'WAN' tab selected in the navigation bar. The main content area displays a table titled 'COUNTERS' with 16 rows of data. The columns are labeled with VLAN identifiers: 1_VOIP_TR069_INTERNET_R_VID_881, 2_INTERNET_R_VID_1081, and 3_OTHER_R_VID_981. All counter values are currently 0.

COUNTERS	1_VOIP_TR069_INTERNET_R_VID_881	2_INTERNET_R_VID_1081	3_OTHER_R_VID_981
Bytes Sent	0	0	0
Bytes Received	0	0	0
Packets Sent	0	0	0
packets Received	0	0	0
Errors Sent	0	0	0
Errors Received	0	0	0
Unicast Packets Sent	0	0	0
Unicast Packets Received	0	0	0
Discard Packets Sent	0	0	0
Discard Packets Received	0	0	0
Broadcast Packets Sent	0	0	0
Broadcast Packets Received	0	0	0
Unknown Proto Packets Received	0	0	0
Rx Drops	0	0	0
Tx Drops	0	0	0
Rx Errors	0	0	0
Tx Errors	0	0	0

Figure 7-13 WLAN Statistics page

COUNTERS	2.4GHZ ALHN-E094	5GHZ ALHN-E094-5
Bytes Sent	0	0
Bytes Received	0	0
Packets Sent	0	0
Packets Received	0	0

Click **Refresh** to display up-to-date information.

END OF STEPS

7.16 Viewing voice information

1

Click **Status**→**Voice Information** from the left pane in the GPON Home Gateway page. The Voice Information page displays the following information:

Figure 7-14 Voice Information page

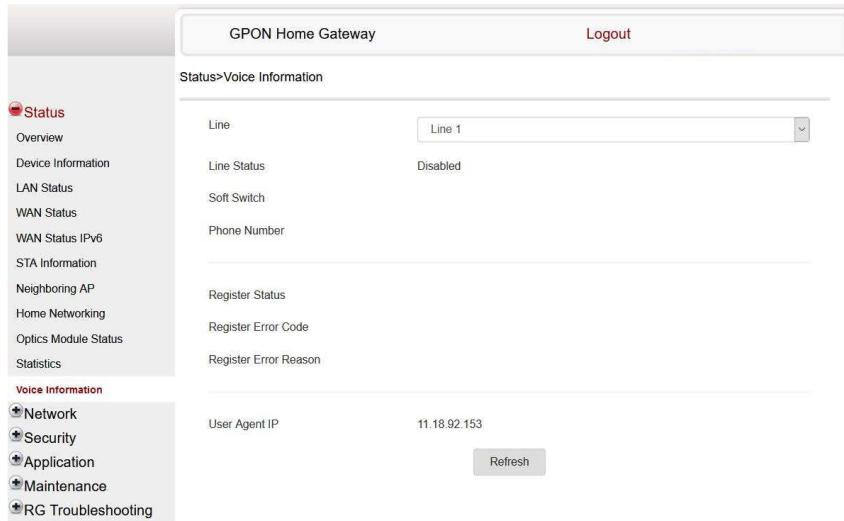


Table 7-10 Voice Information parameters

Field	Description
Line	Select a line from the list. The default is Line 1.
Line Status	Depending on the line chosen, the line options are: <ul style="list-style-type: none"> Up Initializing Registering Unregistering Error Testing Quiescent Disabled The default is Disabled
Soft Switch	Proxy IP address; blank if the line is not registered
Phone number	Phone number configured for a telephone line 1; For example, +13290611266
Register Status	The default is Registered Blank if no voice service is provisioned
Register Error Code	SIP standard error code for the register status; for example, 401, 403, 503 This field is blank if the register is set to OK
Register Error Reason	SIP standard error reason for the register status This field is blank if the register is set to OK

Table 7-10 Voice Information parameters (continued)

Field	Description
User Agent IP	IP address of the user agent ExternalIPAddress in WANIPConnection or WANPPConnection

Click **Refresh** to display up-to-date information.

END OF STEPS

Network configuration

7.17 Overview

7.17.1 Purpose

This chapter describes the network configuration tasks supported by G-1425G-E ONTs.

7.17.2 Contents

7.17 Overview	111
7.18 Configuring LAN	111
7.19 Configuring LAN IPv6	113
7.20 Configuring WAN	115
7.21 Configuring WAN DHCP	117
7.22 Configuring Wireless 2.4GHz	119
7.23 Configuring Wireless 5GHz	122
7.24 Configuring wireless scheduling	125
7.25 Configuring IP routing	126
7.26 Configuring DNS	128
7.27 Configuring TR-069	129
7.28 Configuring TR-369	130
7.29 Configuring GRE tunnel	132
7.30 Configuring Upstream (US) Classifier	134
7.31 Configuring QoS	139
7.32 Configuring Mesh	144

7.18 Configuring LAN

1

Click **Network→LAN** from the left pane in the GPON Home Gateway page. The LAN page displays.

Figure 7-15 LAN page

GPON Home Gateway

Logout

Network>LAN

Port Mode

All Ports to Bridge Mode

Port1	Route Mode
Port2	Route Mode
Port3	Route Mode
Port4	Route Mode

Save

IPv4 Address 192.168.1.254

Subnet Mask 255.255.255.0

DHCP Enable

DHCP Start IP Address 192.168.1.64

DHCP End IP Address 192.168.1.253

DHCP Lease Time 1440
(2~129600 mins, or 0 means 1 day)mins.

Primary DNS

Secondary DNS

Save **Refresh**

Static DHCP Entry

MAC Address

IPv4 Address

Add

MAC Address	IPv4 Address	Delete
-------------	--------------	--------

2

Configure the following LAN parameters:

Table 7-11 LAN parameters

Field	Description
Port Mode	
All Ports to Bridge Mode	Select this checkbox to set all ports to bridge mode.
Port 1 - 4	Select the port mode for each port and click Save : <ul style="list-style-type: none"> • Route Mode • Bridge Mode

Table 7-11 LAN parameters (continued)

Field	Description
IPv4 Address	Enter the IP address of the ONT.
Subnet Mask	Enter the subnet mask of the ONT.
DHCP enable	Select this checkbox to enable DHCP.
DHCP Start IP Address	Enter the starting DHCP IP address.
DHCP End IP Address	Enter the ending DHCP IP address.
DHCP Lease Time	Enter the DHCP lease time (in min).
Primary DNS	Enter the primary DNS identifier.
Secondary DNS	Enter the secondary DNS identifier.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

4

Configure the Static DHCP parameters:

Table 7-12 Static DHCP parameters

Field	Description
Static DHCP Entry	
MAC Address	Enter the MAC address for the static DHCP.
IPv4 Address	Enter the IPv4 address for the static DHCP.

5

Click **Add**.

You can also use this panel to delete a Static DHCP MAC address or IPv4 address.

END OF STEPS

7.19 Configuring LAN IPv6

1

Click **Network→LAN_IPv6** from the left pane in the GPON Home Gateway page. The LAN_IPv6 page displays.

Figure 7-16 LAN IPv6 page

The screenshot shows the 'Network>LAN_IPv6' configuration page. The left sidebar lists various network modules: Status, Network (selected), LAN, LAN_IPv6 (selected), WAN, WAN DHCP, Wireless (2.4GHz), Wireless (5GHz), Wireless Schedule, IP Routing, DNS, TR-069, TR-369, GRE Tunnel, US Classifier, QoS Config, MESH, Security, Application, Maintenance, and RG Troubleshooting.

IPv6 LAN Host Configuration

- DNS Server: WANConnection
- Interface: (dropdown)
- LAN Prefix: (dropdown)
- Enable:
- Prefix Config: Static
- WAN Interface: none
- WAN Prefix: (dropdown)

DHCPv6 Server

- Enable:

DHCPv6 Server Pool

- LAN Prefix: Static_Prefix1

RouterAdvertisement

- Enable:
- LAN Prefix: Static_Prefix1
- Whether the address info through DHCP:
- Whether other info obtained through DHCP:
- Maximum interval for periodic RA messages: (text input) seconds
- Minimum interval for periodic RA messages: (text input) seconds

Save/Apply, Delete, Save/Apply buttons are present in each section.

2

Configure the following parameters:

Table 7-13 LAN IPv6 parameters

Field	Description
IPv6 LAN Host Configuration	

Table 7-13 LAN IPv6 parameters (continued)

Field	Description
DNS Server	Select a DNS server from the list.
Prefix Config	Select a prefix config option from the list, either WANConnection (prefix will be obtained from the WAN) or Static (enables you to enter the prefix).
Interface	This field appears if you selected the Wan Connection option for the "prefix config" field. Select a WAN connection interface from the list.
DHCPv6 Server Pool	
DHCP Start IP Address	Enter the starting DHCP IP address.
DHCP End IP Address	Enter the ending DHCP IP address.
Whether the address info through DHCP	Select this checkbox to enable address information retrieval through DHCP.
Whether other info obtained through DHCP	Select this checkbox to enable retrieval of other information through DHCP.
Maximum interval for periodic RA messages	Enter the maximum interval (in seconds) for periodic Router Advertisement messages. The interval range is from 4 to 1800.
Minimum interval for periodic RA messages	Enter the minimum interval (in seconds) for periodic Router Advertisement messages. The interval range is from 4 to 1800.

3

Click **Save/Apply**.

END OF STEPS

7.20 Configuring WAN

1

Click **Network→WAN** from the left pane in the GPON Home Gateway page. The WAN page displays.

Figure 7-17 WAN page

GPON Home Gateway

Logout

Network>WAN

WAN Connection List	1_VOIP_TR069_INTERNET_R_VID_881
Connection Type	IPoE
IP mode	IPv4
Enable/Disable	<input checked="" type="checkbox"/>
NAT	<input checked="" type="checkbox"/>
Service	<input checked="" type="checkbox"/> VOIP <input checked="" type="checkbox"/> TR-069 <input checked="" type="checkbox"/> INTERNET <input type="checkbox"/> IPTV
Enable VLAN	<input checked="" type="checkbox"/>
VLAN ID	881
VLAN PRI	0
WAN IP Mode	DHCP
Pri DNS	
Sec DNS	

Save Delete

Status

Network

LAN

LAN_IPv6

WAN

- WAN DHCP
- Wireless (2.4GHz)
- Wireless (5GHz)
- Wireless Schedule
- IP Routing
- DNS
- TR-069
- TR-369
- GRE Tunnel
- US Classifier
- QoS Config
- MESH
- Security
- Application
- Maintenance
- RG Troubleshooting

2

Configure the following parameters:

Table 7-14 WAN parameters

Field	Description
WAN Connection List	Select a WAN connection from the list to set the connection parameters.
Connection Type: IPoE	
IP mode	Select an IP mode from the list: IPv4 or IPv6.
Enable/Disable	Select this checkbox to enable the WAN connection.
NAT	Select this checkbox to enable NAT.
Service	Select the checkboxes to enable service types for this connection.
Enable VLAN	Select this checkbox to enable VLAN.
VLAN ID	Enter the VLAN ID.
VLAN PRI	Enter the VLAN PRI.
WAN IP Mode	Select an IP mode from the list.
Manual DNS	Enter the manual Domain Name Server.

Table 7-14 WAN parameters (continued)

Field	Description
Connection Type: PPPoE	
Connection trigger	Select the connection trigger type from the list. The default option is Always On .
Username	Enter the username to log in to the configuration server.
Password ¹	Enter the password to log in to the configuration server.
Keep Alive Time	The PPPoE connection type triggers one heartbeat each, at the configured time interval to keep the session online. Allowed values: 5 to 60 seconds.
Keep Alive Retry	Configure the number of retries to check the Keep Alive status of the PPPoE session after time-out. Allowed values: 1 to 10.
Echo Value	Indicates the number of times, the device sends messages to the server to check if the IP address is available or not.

Notes:

1. Allowed values are limited to numbers, letters and special characters ! # + , - . / : = @ _

3

Click **Save**.

Click **Delete** to delete the entries.


END OF STEPS

7.21 Configuring WAN DHCP

1

Click **Network→WAN DHCP** from the left pane in the GPON Home Gateway page. The WAN DHCP page displays.

Figure 7-18 WAN DHCP page

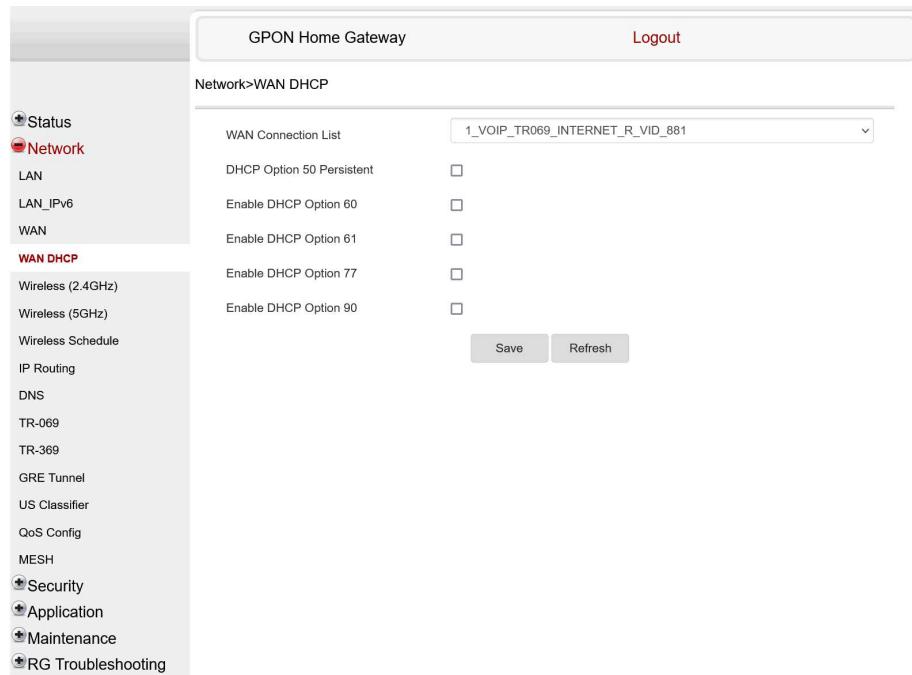

2

Configure the following parameters:

Table 7-15 WAN DHCP parameters

Field	Description
WAN Connection List	Select a WAN connection from the list.
DHCP Option 50 Persistent	Select this checkbox to enable DHCP Option 50 persistent.
Enable DHCP Option 60	Select this checkbox to enable DHCP Option 60 (vendor class identifier).
Enable DHCP Option 61	Select this checkbox to enable DHCP Option 61 (client identifier).
Enable DHCP Option 77	Select this checkbox to enable DHCP Option 77.
Enable DHCP Option 90	Select this checkbox to enable DHCP Option 90.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.22 Configuring Wireless 2.4GHz

1

Click **Network→Wireless (2.4GHz)** from the left pane in the GPON Home Gateway page. The Wireless (2.4GHz) page displays.

Figure 7-19 Wireless (2.4GHz) page

GPON Home Gateway

Logout

Network>Wireless (2.4GHz)

Status

Network *

- LAN
- LAN_IPv6
- WAN
- WAN DHCP
- Wireless (2.4GHz)** *
- Wireless (5GHz)
- Wireless Schedule
- IP Routing
- DNS
- TR-069
- GRE Tunnel
- US Classifier
- QoS Config
- MESH
- Security**
- Application**
- Maintenance**
- RG Troubleshooting**

SSID Configuration

SSID Select	SSID1
SSID Name	ALHN-E050
Enable SSID	Enable
SSID Broadcast	Enable
Port Mode	Route
Isolation	Disable
MAX Users	64
Encryption Mode	WPA/WPA2 Personal
WPA Version	WPA/WPA2
WPA Encryption Mode	TKIP/AES
WPA Key	*****
<input type="checkbox"/> Show password	
Enable WPS	Enable
WPS Mode	PBC

WPS Connect

Domain Grouping Enable

Save **Refresh**

2

Configure the following parameters:

Table 7-16 Wireless (2.4GHz) parameters

Field	Description
Enable	Select this checkbox to enable Wi-Fi.

Table 7-16 Wireless (2.4GHz) parameters (continued)

Field	Description
Mode	Select a Wi-Fi mode from the list: <ul style="list-style-type: none"> • auto (b/g/n) • b • g • n • b/g • g/n
Bandwidth	Select from: <ul style="list-style-type: none"> • 20 MHz • 40 MHz • 20/40 MHz
Channel	Select a channel from the list or select Auto to have the channel automatically assigned.
Transmitting Power	Select a percentage for the transmitting power from the list: <ul style="list-style-type: none"> • Low (25%) • Medium (50%) • High (75%) • Maximum (100%)
Total MAX Users	Enter the number of total MAX users. The maximum number of users is 64.
SSID Configuration	
SSID Select ¹	Select the SSID from the list.
SSID Name	Enter the SSID name.
Enable SSID	Enable or disable SSID from this list.
SSID Broadcast	Enable or disable SSID broadcast from this list.
Port Mode	Select a port mode from the list. Route is the default.
Isolation	Enable or disable isolation from this list.
MAX Users	Enter the number of MAX users.

Table 7-16 Wireless (2.4GHz) parameters (continued)

Field	Description
Encryption Mode	<p>Select an encryption mode from the list:</p> <ul style="list-style-type: none"> • WPA/WPA2 Personal • WPA/WPA2 Enterprise • OPEN • IPv4 • IPv6 <p>NOTES:</p> <ul style="list-style-type: none"> • If you select OPEN, a security warning is displayed that this option poses a security risk. Click OK to continue. • When encryption mode is set to WPA/WPA2 Enterprise, the following options become available: <ul style="list-style-type: none"> - Primary RADIUS support IPv4 address. - Primary RADIUS support IPv6 address.
WPA Version	<p>Select a WPA version from the list:</p> <ul style="list-style-type: none"> • WPA2 • WPA/WPA2
WPA Encryption Mode	<p>Select a WPA encryption mode from the list:</p> <ul style="list-style-type: none"> • AES • TKIP/AES
WPA Key	Enter the WPA key.
Enable WPS	<p>Select Enable or Disable from this list.</p> <p>NOTE: When you select Enable, a security warning is displayed. Click OK to continue.</p>
WPS Mode	<p>Select a WPS mode from the list: PBC (Push Button Connect) or STA PIN (Personal Identification Number) or AP PIN (Access Point Personal Identification Number).</p> <p>If the WPS mode is AP PIN, Click Get PIN Number. A PIN Code Number is generated. Then, the end user must click WPS Connect and enter the generated PIN Code Number into the station, so that the station can connect to the selected SSID.</p> <p>If the WPS mode is STA PIN, the PIN Code Number will be generated by the station. Then, the end user must enter this PIN Code Number into the PIN Code Number field and click WPS Connect, so that the station can connect to the selected SSID.</p>
PIN Code Number	<p>If the WPS Mode is AP PIN, a PIN Code Number is generated in this field when Get PIN Number button is clicked. If the WPS Mode is STA PIN, PIN Code Number generated by the client station needs to be entered into this field.</p>
Get PIN Number	<p>Click this field to generate the pin number.</p> <p>This field is visible only if the WPS mode is AP PIN.</p>
WPS Connect	Click this field to trigger the WPS connection.
Domain Grouping	Select this checkbox to enable domain grouping. When enabled the fields Domain Name, WAN Interface, Number of IP, and LAN List become visible. To know more about configuring the fields, refer to the Domain Grouping section of Table 7-17, “Wireless (5GHz) parameters” (p. 123) .

Notes:

1. When the SSID select, SSID name, password and encryption mode is configured same between 2.4 GHz

and 5 GHz network, the band steering feature is enabled.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.23 Configuring Wireless 5GHz

1

Click **Network→Wireless (5GHz)** from the left pane in the GPON Home Gateway page. The Wireless (5GHz) page displays.

Figure 7-20 Wireless (5GHz) page

GPON Home Gateway

Logout

Network>Wireless (5GHz)

Status

Network

- LAN
- LAN_IPv6
- WAN
- WAN DHCP
- Wireless (2.4GHz)
- Wireless (5GHz)**
- Wireless Schedule
- IP Routing
- DNS
- TR-069
- GRE Tunnel
- US Classifier
- QoS Config
- MESH
- Security**
- Application**
- Maintenance**
- RG Troubleshooting**

SSID Configuration

SSID Select: SSID5

SSID Name: ALHN-E050-5

Enable SSID: Enable

SSID Broadcast: Enable

Port Mode: Route

Isolation: Disable

MAX Users: 64

Encryption Mode: WPA2+WPA

WPA Key: (redacted)

Show password:

Enable WPS: Enable

WPS Mode: PBC

WPS Connect

Domain Grouping: Enable

Save Refresh

2

Configure the following parameters:

Table 7-17 Wireless (5GHz) parameters

Field	Description
Enable	Select this checkbox to enable WiFi.
Bandwidth	Select from: <ul style="list-style-type: none">• 20 MHz• 40 MHz• 80 MHz
Channel	Select a channel from the list or select Auto to have the channel automatically assigned.
Transmitting Power	Select a percentage for the transmitting power from the list: <ul style="list-style-type: none">• Low (25%)• Medium (50%)• High (75%)• Maximum (100%)
Enable MU-MIMO	Select Enable or Disable from the list to enable or disable MU-MIMO.
Total MAX Users	Enter the total number of MAX users. The maximum number of users is 64.
SSID Configuration	
SSID Select ¹	Select the SSID from the list.
SSID Name	Change the name of the selected SSID.
Enable SSID	Select Enable or Disable SSID from this list.
SSID Broadcast	Select Enable or Disable SSID broadcast from this list.
Port Mode	Select a port mode from the list. Route is the default.
Isolation	Enable or disable isolation from this list.
MAX Users	Enter the number of MAX users.

Table 7-17 Wireless (5GHz) parameters (continued)

Field	Description
Encryption Mode	<p>Select an encryption mode from the list:</p> <ul style="list-style-type: none"> • WPA2-AES • WPA2+WPA • WPA/WPA2 Enterprise • IPv4 • IPv6 • NONE-OPEN <p>NOTES:</p> <ul style="list-style-type: none"> • If you select OPEN, a security warning is displayed that this option poses a security risk. Click OK to continue. • When encryption mode is set to WPA/WPA2 Enterprise, the following options become available: <ul style="list-style-type: none"> - Primary RADIUS support IPv4 address. - Primary RADIUS support IPv6 address.
WPA Key	Enter the WPA key.
Enable WPS	<p>Select Enable or Disable from this list.</p> <p>NOTE: When you select Enable, a security warning is displayed. Click OK to continue.</p>
WPS Mode	<p>Select a WPS mode from the list: PBC (Push Button Connect) or STA PIN (Personal Identification Number) or AP PIN (Access Point Personal Identification Number).</p> <p>If the WPS mode is AP PIN, Click Get PIN Number. A PIN Code Number is generated. Then, the end user must click WPS Connect and enter the generated PIN Code Number into the station, so that the station can connect to the selected SSID.</p> <p>If the WPS mode is STA PIN, the PIN Code Number will be generated by the station. Then, the end user must enter this PIN Code Number into the PIN Code Number field and click WPS Connect, so that the station can connect to the selected SSID</p>
PIN Code Number	If the WPS Mode is AP PIN, a PIN Code Number is generated in this field when Get PIN Number button is clicked. If the WPS Mode is STA PIN, PIN Code Number generated by the client station needs to be entered into this field.
Get PIN Number	<p>Click this field to generate the pin number.</p> <p>This field is visible only if the WPS mode is AP PIN.</p>
WPS Connect	Click this field to trigger the WPS connection.
Domain Grouping	
Domain Grouping	Select this checkbox to enable domain grouping. The fields Domain Name, Create One New Domain, WAN Interface, Number of IPs and List LAN are available when the Domain Grouping field is enabled.
Domain Name	Select a domain name from the list.
Create One New Domain	Select this checkbox to create a new domain.
WAN Interface	Select a WAN interface from the list
Number of IP	Select the number of IPs connected to the domain.
LAN List	Select one or more checkboxes.

Notes:

1. When the SSID select, SSID name, password and encryption mode is configured same between 2.4 GHz and 5 GHz network, the band steering feature is enabled.

3

Click **Save**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.24 Configuring wireless scheduling

1

Click **Network**→**Wireless Schedule** from the left pane in the GPON Home Gateway page. The Wireless Schedule page displays.

Figure 7-21 Wireless Schedule page

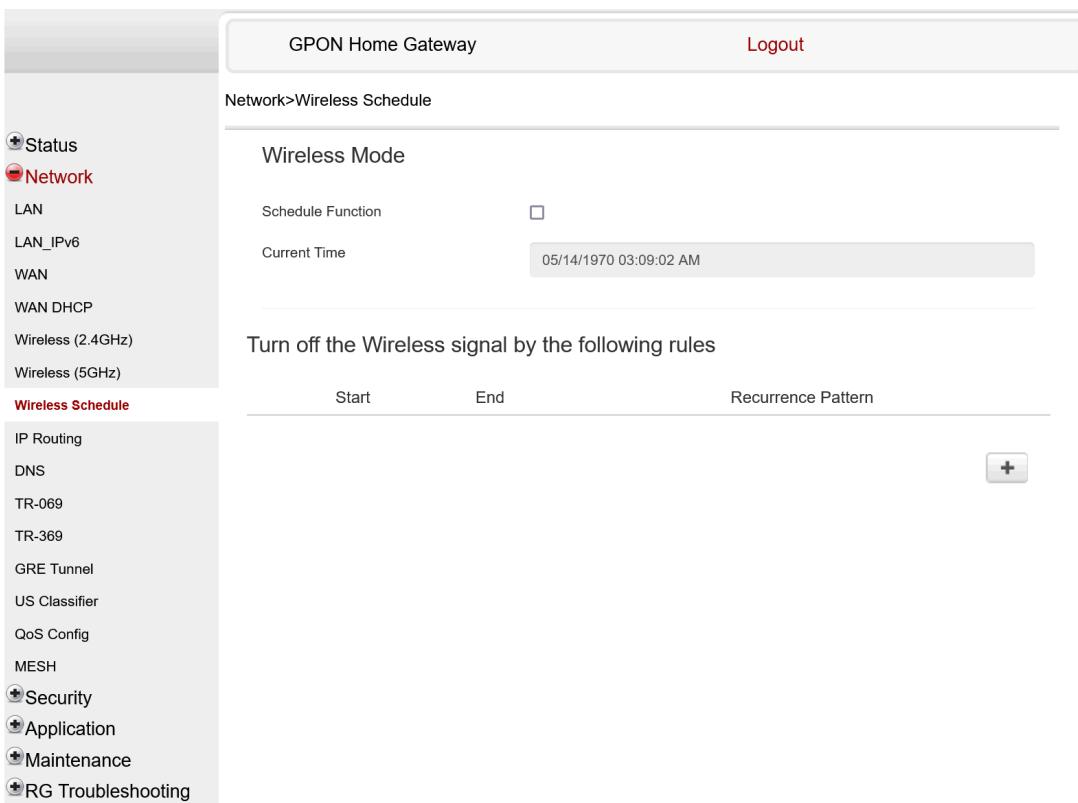

2

Select the **Schedule Function** checkbox to turn the wireless signal off for the configured period.



Note: The ONT stores the settings of the current wireless signal and restores with the same settings when Wi-Fi is enabled or disabled until the programmed wireless signal rule is triggered. The stored value is restored if the active wireless signal schedule rule is deleted.

3

Click the plus sign (+) to add a scheduling rule.

A separate panel displays for configuring wireless schedule rules.

4

Enter a start time and end time for the period in which you want the wireless signal off.

5

Select **Everyday** or **Individual Days** from the list.

6

If you select **Individual Days**, select the checkboxes for the desired days.

The Recurrence Pattern shows the rules created to date.

7

If desired, click the plus sign (+) to add more rules.

8

Click **Save Changes**.

END OF STEPS

7.25 Configuring IP routing

1

Click **Network→IP Routing** from the left pane in the GPON Home Gateway page. The IP Routing page displays.

Figure 7-22 IP Routing page

2

Configure the following parameters:

Table 7-18 IP Routing network parameters

Field	Description
Enable Routing	Select this checkbox to enable routing.
Destination IP Address	Enter the destination IP address.
Destination Netmask	Enter the destination network mask.
Gateway	Enter the gateway address.
IPv4 Interface	Select a WAN connection previously created in the WAN page from the list.
Forwarding Policy	Select a forwarding policy from the list.

3

Click **Add**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.26 Configuring DNS

1

Click **Network→DNS** from the left pane in the GPON Home Gateway page. The DNS page displays.

Figure 7-23 DNS page

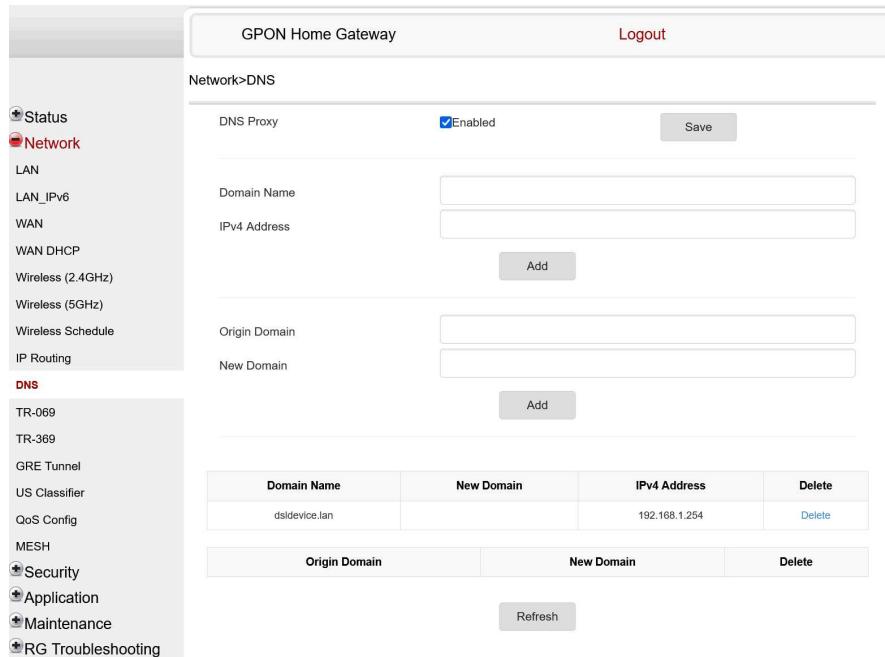

2

Configure the following parameters:

Table 7-19 DNS parameters

Field	Description
DNS Proxy	Select the Enabled checkbox to enable DNS proxy and click Save .
Domain Name	Enter the domain name.
IPv4 Address	Enter the domain IP address and click Add .
Origin Domain	Enter the origin domain name.
New Domain	Associate an origin domain with a new domain and click Add .

Click **Refresh** to display up-to-date information.


END OF STEPS

7.27 Configuring TR-069

1

Click **Network**→**TR-069** from the left pane in the GPON Home Gateway page. The TR-069 page displays.

Figure 7-24 TR-069 page

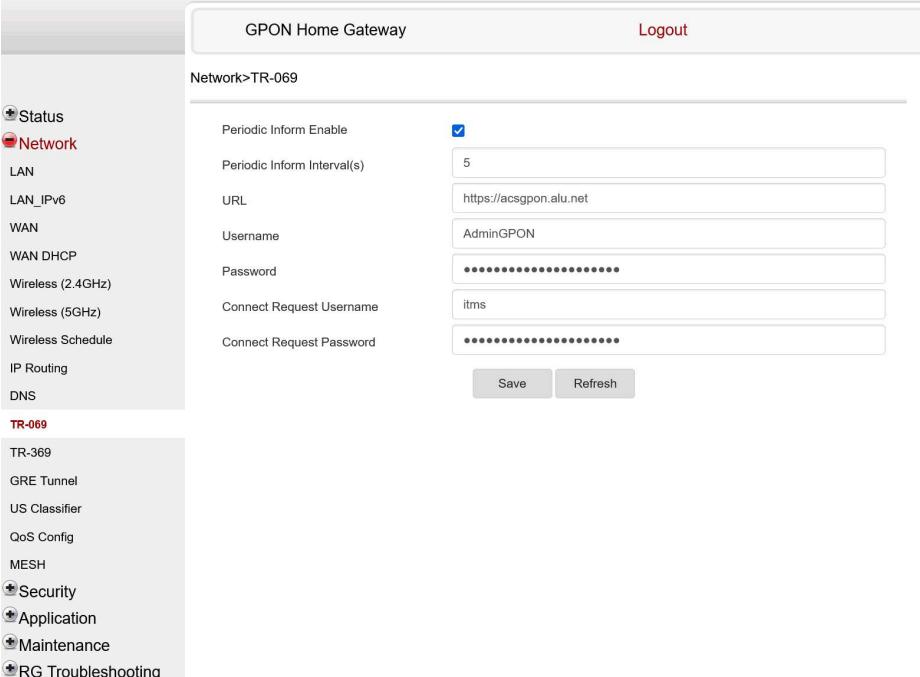

The screenshot shows the GPON Home Gateway interface. The left sidebar has a tree view with 'Status' expanded, showing 'Network' which is selected and highlighted in red. Other options include LAN, LAN_IPv6, WAN, WAN DHCP, Wireless (2.4GHz), Wireless (5GHz), Wireless Schedule, IP Routing, and DNS. The main content area is titled 'Network>TR-069'. It contains the following configuration fields:

- Periodic Inform Enable: A checked checkbox.
- Periodic Inform Interval(s): A text input field containing '5'.
- URL: A text input field containing 'https://acsgpon.alu.net'.
- Username: A text input field containing 'AdminGPON'.
- Password: A text input field containing a series of asterisks (*****).
- Connect Request Username: A text input field containing 'itms'.
- Connect Request Password: A text input field containing a series of asterisks (*****).

At the bottom of the main panel are 'Save' and 'Refresh' buttons.

2

Configure the following parameters:

Table 7-20 TR-069 parameters

Field	Description
Periodic Inform Enable	Select this checkbox to enable periodic inform updates.
Periodic Inform Interval(s)	Enter the time between periodic inform updates, in seconds.

Table 7-20 TR-069 parameters (continued)

Field	Description
URL	Enter the URL of the auto-configuration server. NOTE: When you enter a HTTP URL, a security warning is displayed that a HTTPS URL is recommended. Click OK to continue.
Username	Enter the username to log in to the auto-configuration server.
Password	Enter the password to log in to the auto-configuration server.
Connect Request Username	Enter the username to log in to the ONT.
Connect Request Password	Enter the password to log in to the ONT.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.28 Configuring TR-369


1



Note: The TR-369 configuration option is available only if the TR-181 data model is active.

Click **Network→TR-369** from the left pane in the GPON Home Gateway page. The TR-369 page displays.

Figure 7-25 TR-369 page

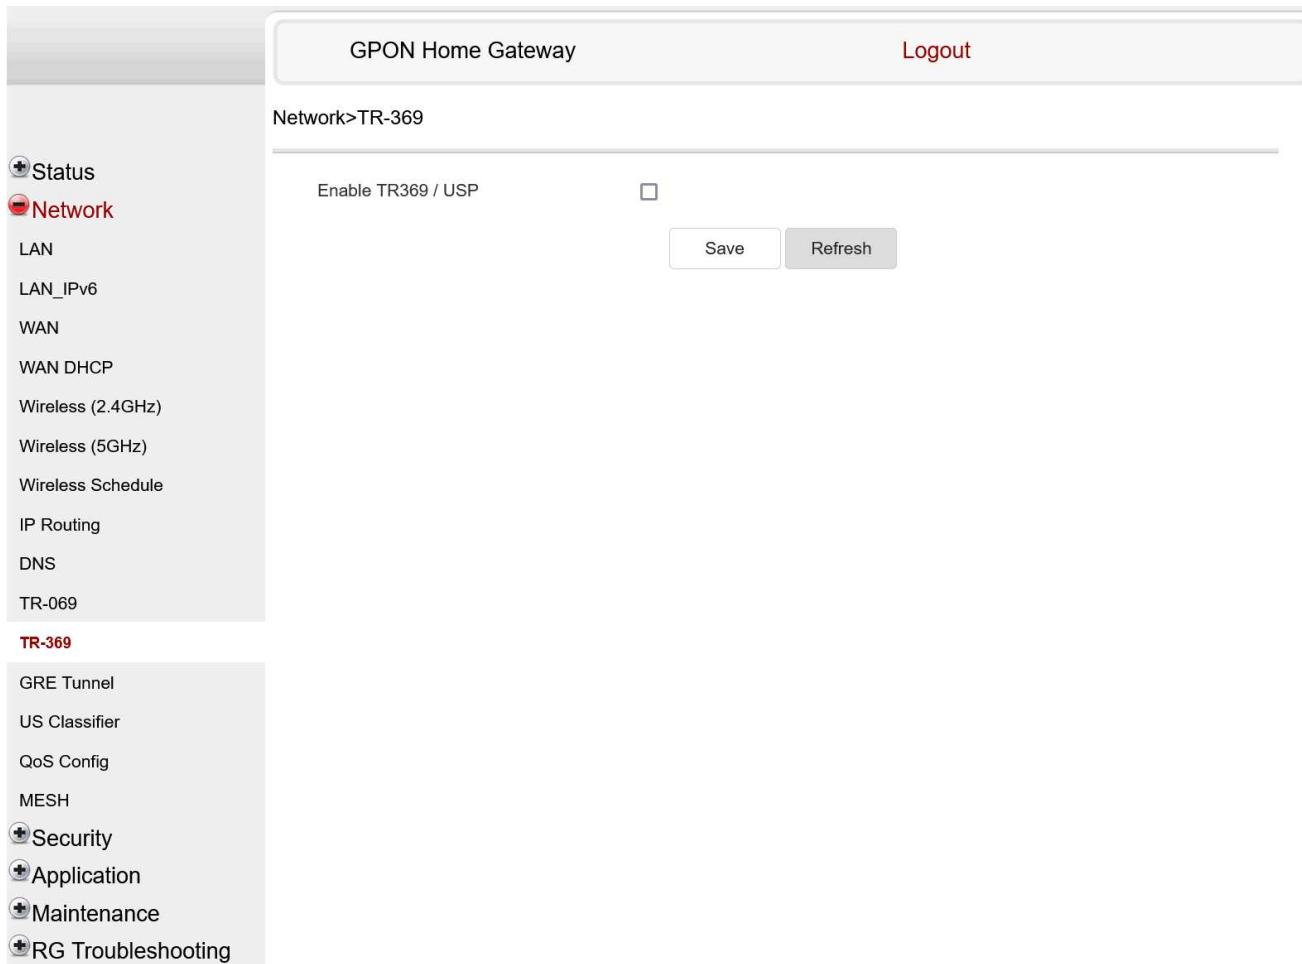

2

Configure the following parameters:

Table 7-21 TR-369 parameters

Field	Description
Enable TR369 / USP	Select the checkbox to enable TR-369/USP.
Controller endpoint ID	Enter the controller endpoint ID.
MTP Protocol	Select the MTP protocol from the list (currently only MQTT is supported).

Table 7-21 TR-369 parameters (continued)

Field	Description
Transport	Select the transport option from the list: <ul style="list-style-type: none"> • TCP/IP • TLS <p>NOTE: If you select TCP/IP, a security warning is displayed. Click OK to continue.</p>
Broker address	Enter the broker IP address.
Broker Port	Enter the broker port number.
Username	Enter the username to authenticate with MQTT broker
Password	Enter the password to authenticate with MQTT broker.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.29 Configuring GRE tunnel

1

Click **Network→GRE Tunnel** from the left pane in the GPON Home Gateway page. The GRE Tunnel page displays.

Figure 7-26 GRE Tunnel page

2

Configure the following parameters:

Table 7-22 GRE Tunnel parameters

Field	Description
Tunnel Name	Select Create new GRE Tunnel or select an existing tunnel from the list. The tunnel name is automatically assigned by the system. Up to 3 GRE tunnels are supported.
WAN Interface	Select a WAN interface from the list. GRE tunnels can only be created on HSI-enabled WAN interfaces.
Primary Remote End Secondary Remote End (optional)	Enter an IP address or FQDN that is unique in the system. If the primary remote endpoint is down or unreachable, the secondary remote endpoint becomes active, if configured. The secondary remote endpoint remains active until it becomes unreachable, in which case the primary remote endpoint becomes active again. Revertive mode is not supported. If both endpoints are unreachable, the GRE tunnel is declared down.
Connected Remote End	This field displays the current data traffic path for the GRE tunnel.
Connectivity check	This feature is automatically selected by the system.
Traffic timeout to start pings	Enter the traffic timeout in seconds (2 to 1024).

Table 7-22 GRE Tunnel parameters (continued)

Field	Description
No. of retries before unreachable	Enter the number of retries before the tunnel is declared down (0 to 100).

3

Click **Save**.

Click **Delete** to delete the entries.

END OF STEPS

7.30 Configuring Upstream (US) Classifier

The US Classifier feature is used to create policies, classifiers, and classifier rules for upstream traffic handling. This feature is available to admin users (super users) only.

A policy defines an action to be performed on a set of LAN or WAN packets. A policy can be created at any time and then subsequently assigned to one or more classifiers.

A classifier is used to select key fields for which the classifier rules will be written. A classifier can be created at any time and then subsequently assigned to one or more classifier rules.

A classifier rule is used to assign actions to a group of packets based on a set of parameters. A classification rule must be created against a pre-defined classifier.


Up to 16 policies can be created, with up to 8 classifiers and 32 classifier rules.

1

Click **Network→US Classifier** from the left pane in the GPON Home Gateway page. The US Classifier page displays.

All classifier policies are displayed in the policy table in the page.

Figure 7-27 US Classifier Policy page

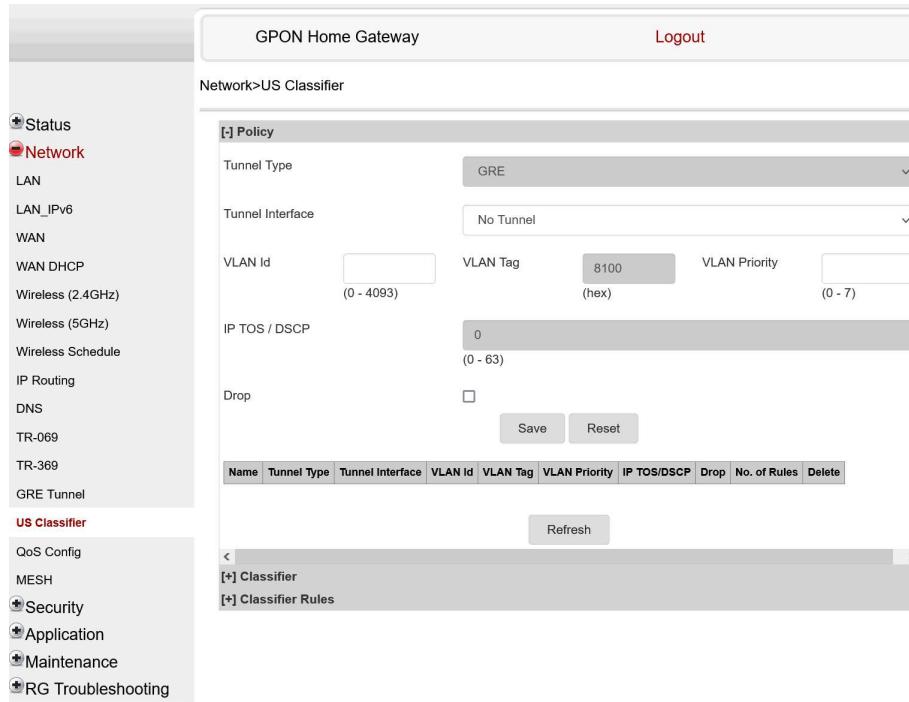

2

Configure the following parameters:

Table 7-23 US Classifier Policy parameters

Field	Description
Tunnel Type	The tunnel type is set to GRE and cannot be modified.
Tunnel Interface	Select a tunnel interface from the list: No Tunnel, GRE Tunnel, or LAN traffic.
VLAN ID	Enter a VLAN ID (0-4094).
VLAN Tag	This field is not configurable. The VLAN tag is set to 8100 (hexadecimal).
VLAN Priority	Enter a VLAN priority level (0 to 7). A lower number indicates a higher priority.
IP TOS/DSCP	This field is not configurable. All tunnel packets are generated with a default DSCP value (usually 0).
Drop	Select this checkbox to drop the packets.

3

Click **Save**.

4

To delete a policy, click **Delete** for the applicable policy in the policy table.


A policy can only be deleted if it is not associated with any classifier rules.

5

Click **Network→US Classifier** from the left pane in the GPON Home Gateway page and select the **Classifier** tab.

All classifiers are displayed in the classifier table in the page.

Figure 7-28 US Classifier page

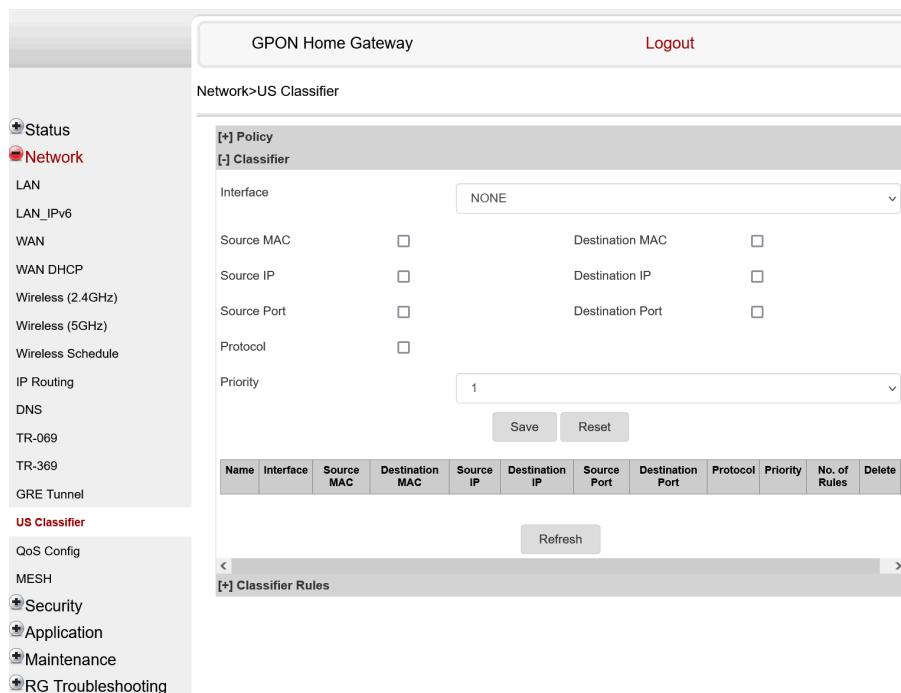**6**

Configure the following parameters:

At least one field must be selected to create a classifier. A maximum of four fields may be selected to create a classifier; this includes the interface field.

Table 7-24 US Classifier parameters

Field	Description
Interface	Select an interface from the list; for example, None, LAN, 2.4G SSID, or 5G SSID.
Source MAC	Click to enter a source MAC address.

Table 7-24 US Classifier parameters (continued)

Field	Description
Destination MAC	Click to enter a destination MAC address.
Source IP	Click to enter a source IP address.
Destination IP	Click to enter a destination IP address.
Source Port	Click to enter a source port.
Destination Port	Click to enter a destination port.
Protocol	Click to enter a protocol.
Priority	Select a priority level from 1 to 8. The lower the number, the higher the priority. No more than 1 classifier can be created with the same priority.

7

Click **Save**.

8

To delete a classifier, click **Delete** for the applicable classifier in the classifier table.

A classifier can only be deleted if it is not associated with any classifier rules.

9

Expand **Classifier Rules**.

All classifier rules are displayed in the classifier rules table in the page.

Figure 7-29 US Classifier Rules page

GPON Home Gateway

Logout

Network>US Classifier

[*] Policy
 [*] Classifier
 [+] Classifier Rules

Policy: Classifier:
 Interface:
 Source MAC: Destination MAC:
 Source IP: Destination IP:
 Source Port: Destination Port:
 IP Protocol Type:
 (0 - 254)

Save Reset

Name	Interface	Source MAC	Destination MAC	Source IP	Destination IP	Source Port	Destination Port	IP Protocol	Policy	Classifier	Delete

Refresh

10

Configure the classifier rule.

Table 7-25 US Classifier Rules parameters

Field	Description
Policy	Select a policy from the list.
Classifier	Select a classifier from the list.
Interface	Select an interface from the list; for example, None, LAN, 2.4G SSID, 5G SSID.
Source MAC	Enter a source MAC address.
Destination MAC	Enter a destination MAC address.
Source IP	Enter a source IP address.
Destination IP	Enter a destination IP address.
Source Port	Enter a source port.
Destination Port	Enter a destination port.
IP Protocol Type	Enter a value between 0 and 254.

11

Click **Save**.

Click **Refresh** to display up-to-date information.

12

To delete a classifier rule, click **Delete** for the applicable classifier rule in the classifier rules table.

END OF STEPS

7.31 Configuring QoS

1

Click **Network→QoS Config** from the left pane in the GPON Home Gateway page. The QoS Config page displays.

Figure 7-30 QoS Config page (L2 packet sizes)

The screenshot shows the 'QoS Setting' table with the following columns: ID, Source MAC, Source MAC Mask, Source MAC Exclude, Protocol, Protocol Exclude, Source Port, Source Max, SExclude, Dest Port, Dest Max, and DE. The 'Type' dropdown is set to 'L2 Criteria'. The 'Classification Criteria' section includes fields for 'Source MAC' and 'Exclude'. The 'Classification Result' section includes fields for 'DSCP Remark' (Range: 0~63) and '802.1p Remark' (Range: 0~7). The 'Forwarding Policy' field is set to 'select an option'. An 'Add' button is located at the bottom right of the table area.

QoS Setting											
ID	Source MAC	Source MAC Mask	Source MAC Exclude	Protocol	Protocol Exclude	Source Port	Source Max	SExclude	Dest Port	Dest Max	DE
Type: L2 Criteria Classification Criteria: Source MAC, Exclude Enable Source MAC Mask: <input checked="" type="checkbox"/> Source MAC Mask Interface: select an option											
Classification Result: DSCP Remark: (Range: 0~63), 802.1p Remark: (Range: 0~7) Forwarding Policy: (Range: 1~7)											
<input type="button" value="Add"/>											

Figure 7-31 QoS Config page (L3 packet sizes)

The screenshot shows the 'QoS Setting' table with the following data:

ID	Source MAC	Source MAC Exclude	Protocol	Protocol Exclude	Source Port	Source Max	SExclude	Dest Port	Dest Max	DExclude

Classification Criteria:

- Protocol: None, Exclude
- Application: Customer setting
- Source IP: Source IP Mask: Exclude
- Dest IP: Dest IP Mask: Exclude
- Source Port: Source Port Max: Exclude
- Dest Port: Dest Port Max: Exclude
- 802.1p: (Range:0~7)
- Interface: select an option

Classification Result:

- DSCP Remark: (Range:0~63)
- 802.1p Remark: (Range:0~7)
- Forwarding Policy: (Range:1~7)

Add

2

Configure the following parameters:

Table 7-26 QoS Config parameters

Field	Description
QoS Setting	
Type	Select a QoS service layer type from the list: L2 or L3.
Classification Criteria	
Source MAC	Enter the source MAC address. Select the Exclude checkbox to exclude the source MAC address.

Table 7-26 QoS Config parameters (continued)

Field	Description
Enable Source MAC Mask	Select the toggle button to enable the source MAC mask. This button is disabled by default.
Source MAC Mask	Enter the source MAC mask address. The syntax is for example: FF:FF:FF:00:00:00. This field is visible only if the Enable source MAC mask button is enabled.
Interface	Select an interface from the list.
Classification Result	
DSCP Remark	Enter the value for the DSCP mark (range: 0-63); valid only for L3 Criteria.
802.1p Remark	Enter the value for the 802.1p (range: 0-7).
Forwarding Policy	Enter the number for the forwarding policy (range: 1-7).
Additional fields for L3	
Protocol	Select a protocol from the list, or select the Exclude checkbox.
Application	Select an application from the list.
Source IP and Source IP Mask	Enter the values for the source IP and IP mask, or select the Exclude checkbox.
Destination IP and Destination IP Mask	Enter the values for the destination IP and IP mask, or select the Exclude checkbox.
Source Port and Source Port Max	Enter the values for the source port and port max (highest port number) or select the Exclude checkbox.
Destination Port and Destination Port Max	Enter the values for the destination port and port max (highest port number), or select the Exclude checkbox.


3

Click **Add** to add a QoS policy.

Click **Edit** to edit the QoS rules or **Delete** to delete the QoS configuration.

[Figure 7-32, “QoS rules edit window” \(p. 143\)](#) shows the window for editing the QoS rules.

Figure 7-32 QoS rules edit window

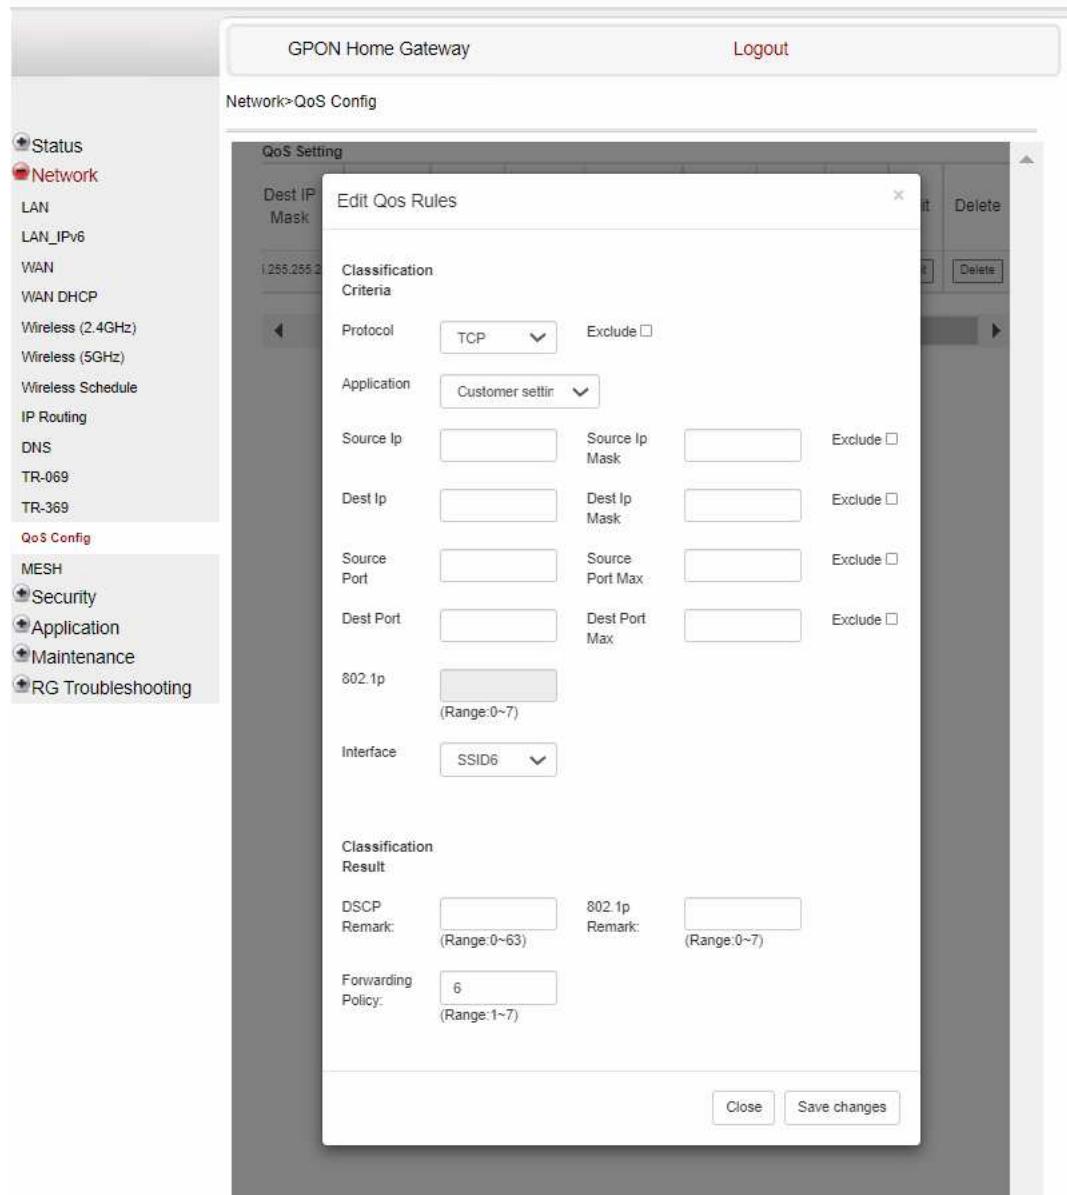

Click **Save Changes** to save the QoS rules.

Click **Close** to close the Edit QoS Rules window.

END OF STEPS

7.32 Configuring Mesh

1

Click **Network→MESH** from the left pane in the GPON Home Gateway page. The Mesh page displays.

Figure 7-33 Mesh page

GPON Home Gateway

Logout

Network>MESH

Warning:WPA/WPA2 enterprise does not work when mesh network is setup

Beacon Serial Number	Onboarding Status	Backhaul Status	Friendly Name

Beacon Serial Number

Add

Refresh

Status

Network

LAN

LAN_IPv6

WAN

WAN DHCP

Wireless (2.4GHz)

Wireless (5GHz)

Wireless Schedule

IP Routing

DNS

TR-069

TR-369

GRE Tunnel

US Classifier

QoS Config

MESH

Security

Application

Maintenance

RG Troubleshooting

2

Enter the beacon serial number and click **Add**.

The following information displays:

Table 7-27 Mesh parameters

Field	Description
Beacon Serial Number	Indicates the serial number of the extender Nokia WiFi beacon device.
Onboarding Status	Indicates whether the extender Nokia WiFi beacon associated with the serial number is configured to the mesh or not. If it is configured then the extender beacon MAC address is added to the Root.
Backhaul Status	Indicates the status of the backhaul connection. It represents the backhaul status of Good, Normal, or Bad values, between the Root Access Point and the extender Access Point.
Friendly Name	Indicates the friendly name that is defined while on-boarding the extender Nokia WiFi beacon using the Nokia WiFi Mobile Application.



Note: The number of the entries in the mesh parameters table depends on number of extenders in the home network. If you have two extenders, then there will be two entries in the mesh parameters table.

Click **Refresh** to display up-to-date information.

END OF STEPS

Security configuration

7.33 Overview

7.33.1 Purpose

This chapter describes the security configuration tasks supported by G-1425G-E ONTs

7.33.2 Contents


7.33 Overview	146
7.34 Configuring the firewall	146
7.35 Configuring the MAC filter	148
7.36 Configuring the IP filter	150
7.37 Configuring the URL filter	152
7.38 Configuring parental control	153
7.39 Configuring DMZ and ALG	161
7.40 Configuring access control	163

7.34 Configuring the firewall

1

Click **Security**→**Firewall** from the left pane in the GPON Home Gateway page. The Firewall page displays.

Figure 7-34 Firewall page

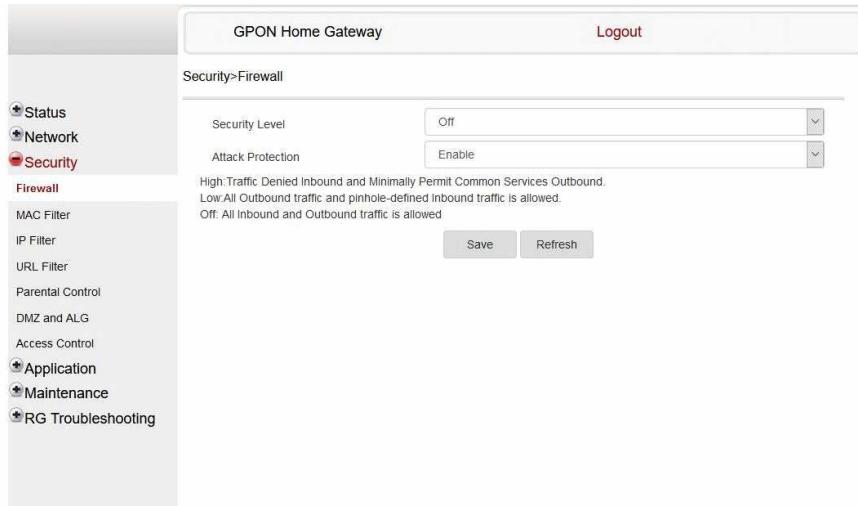

2

Configure the following parameters:

Table 7-28 Firewall parameters

Field	Description
Security level	Select the security level from the list: High : Traffic denied inbound and minimally permit common services outbound Low : All outbound traffic and pinhole-defined inbound traffic is allowed Off : All inbound and outbound traffic is allowed
Attack Protect (Protection against DoS or DDoS attacks)	Select Enable or Disable from the list. The default is Enable . NOTE: If you select Disable, a security warning is displayed that this option poses security risks. Click OK to continue.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.35 Configuring the MAC filter

1

Click **Security**→**MAC Filter** from the left pane in the GPON Home Gateway page. The MAC Filter page displays.

Figure 7-35 MAC Filter page

The screenshot shows the GPON Home Gateway interface with the 'Security > MAC Filter' page selected. The left sidebar has a 'MAC Filter' option highlighted. The main area is divided into two sections: 'Ethernet Interface' and 'Wi-Fi SSID'.

Ethernet Interface: MAC Filter Mode is set to 'Allowed'. LAN Port is LAN1. MAC Address dropdown is 'Custom settings' with a placeholder 'e.g. D0:54:2D:00:00:00'. A 'Save' button is present. Below is a table with columns: MAC Address, Status, Index, Description, MAC Address, Edit, and Delete. A 'Refresh' button is at the bottom.

Wi-Fi SSID: MAC Filter Mode is set to 'Allowed'. SSID Select is 'SSID1'. Enable is checked. MAC Address dropdown is 'Custom settings' with a placeholder 'e.g. D0:54:2D:00:00:00'. A 'Save' button is present. Below is a table with columns: Status, Index, Description, MAC Address, Edit, and Delete. Buttons for 'Select All', 'Delete', and 'Refresh' are at the bottom.

2

Configure the following parameters:

Table 7-29 MAC Filter parameters

Field	Description
Ethernet Interface	
MAC Filter Mode	Select the MAC filter mode from the list: Blocked or Allowed.
LAN Port	Enter the LAN port range.
MAC Address	Select the MAC address from the list or enter the address in the text field.
Wi-Fi SSID	
MAC Filter Mode	Select the MAC filter mode from the list: Blocked or Allowed.
SSID Select	Select the SSID from the list.
Enable	Select this checkbox to enable the MAC filter.
MAC Address	Select a MAC address from the list or enter the address in the text field.
MAC Address Description	Enter the MAC address description in the text field.


3

Click **Save**.

Click **Edit** to edit the MAC rules or **Delete** to delete a MAC address.

[Figure 7-36, “MAC rules edit page” \(p. 150\)](#) shows the window for editing the MAC rules.

Figure 7-36 MAC rules edit page

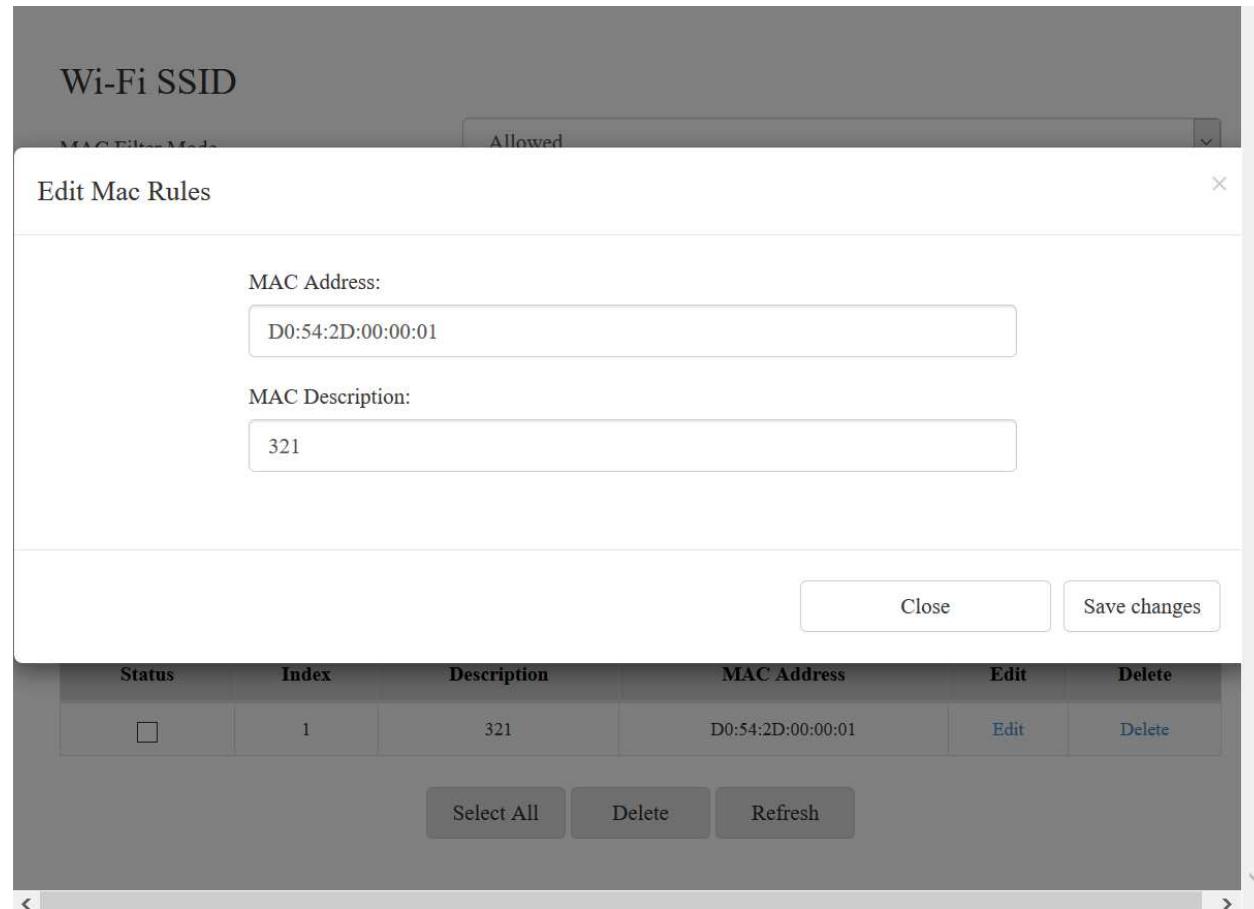

- Click **Save changes** to save the MAC rules.
- Click **Close** to close the Edit Mac Rules window.
- Click **Refresh** to display up-to-date information.

END OF STEPS

7.36 Configuring the IP filter

1

Click **Security**→**IP Filter** from the left pane in the GPON Home Gateway page. The IP Filter page displays.

Figure 7-37 IP Filter page

2

Configure the following parameters:

Table 7-30 IP Filter parameters

Field	Description
Enable IP Filter	Select this checkbox to enable an IP filter.
IP Mode	Select an IP mode from the list: <ul style="list-style-type: none"> • IPv4 • IPv6
Mode	Select an IP filter mode from the list: <ul style="list-style-type: none"> • Drop for upstream • Drop for downstream • Accept for upstream • Accept for downstream
Internal Client	Select an internal client from the list: <ul style="list-style-type: none"> • Custom settings: uses the IP address input • IP: uses the connecting devices' IP to the ONT
Local IP Address	Enter the local IP address.
Local Subnet Mask	Enter the local subnet mask.
Remote IP Address	Enter the remote IP address.
Remote Subnet Mask	Enter the remote subnet mask.
Protocol	Select an application protocol or ALL from the list.

3

Click **Save**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.37 Configuring the URL filter

1

Click **Security→URL Filter** from the left pane in the GPON Home Gateway page. The URL Filter page displays.

Figure 7-38 URL Filter page

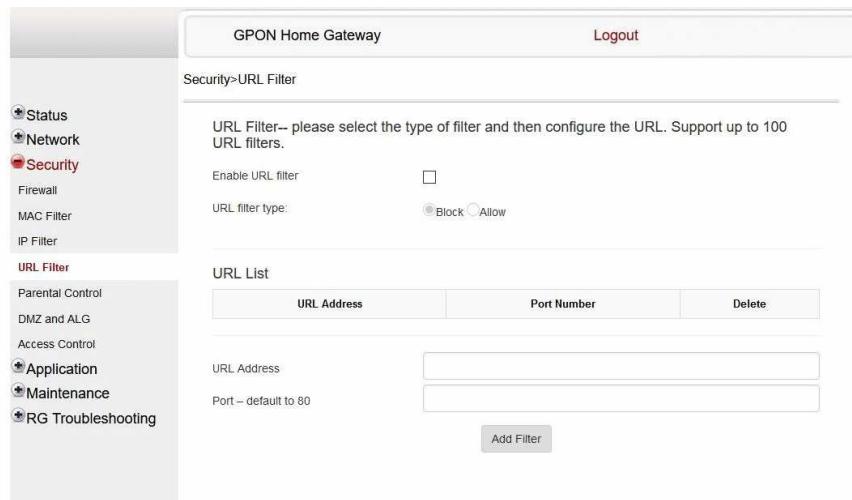

2

Configure the following parameters:

Table 7-31 URL Filter parameters

Field	Description
Enable URL filter	Select the checkbox to enable the URL filter.
URL filter type	Select the option to block the URL or allow the URL.
URL List	
URL Address	Enter the URL address.

Table 7-31 URL Filter parameters (continued)

Field	Description
Port - default to 80	Enter the port number; the default is 80.



Note: You cannot use URL filtering for HTTPS. The URL is encrypted when using HTTPS.

3

Click **Add Filter**.

END OF STEPS

7.38 Configuring parental control

1

Click **Security**→**Parental Control** from the left pane in the GPON Home Gateway page. The Parental Control page displays.

Figure 7-39 Default Parental Control page

GPON Home Gateway

Logout

Security>Parental Control

Block access of LAN devices at given times, according to their MAC, IPv4 or URL addresses

Activate extended parental control

Access Control

Policy Name	Device	IP	URL	Days Of Week	From	To	Delete	Edit	Enable

Status

Network

Security

Firewall

MAC Filter

IP Filter

URL Filter

Parental Control

DMZ and ALG

Access Control

Application

Maintenance

RG Troubleshooting

+

2 Click **Activate extended parental control** to activate the extended version of parental control.

3 Click **OK** in the pop-up window. The advanced parental control page displays.

Figure 7-40 Advanced Parental control page

GPON Home Gateway

Logout

Security>Parental Control

Group List

Group Name	Device	Access Internet	URL	Schedule	Bed Time	Delete
Home	1	Enable	0	0	0	Delete

Refresh Activate base parental control Help

Status

Network

Security

Firewall

MAC Filter

IP Filter

URL Filter

Parental Control

DMZ and ALG

Access Control


Application

Maintenance

RG Troubleshooting

4 Click on the plus sign (+) to create a group. The create new group page displays

Figure 7-41 Create new group page

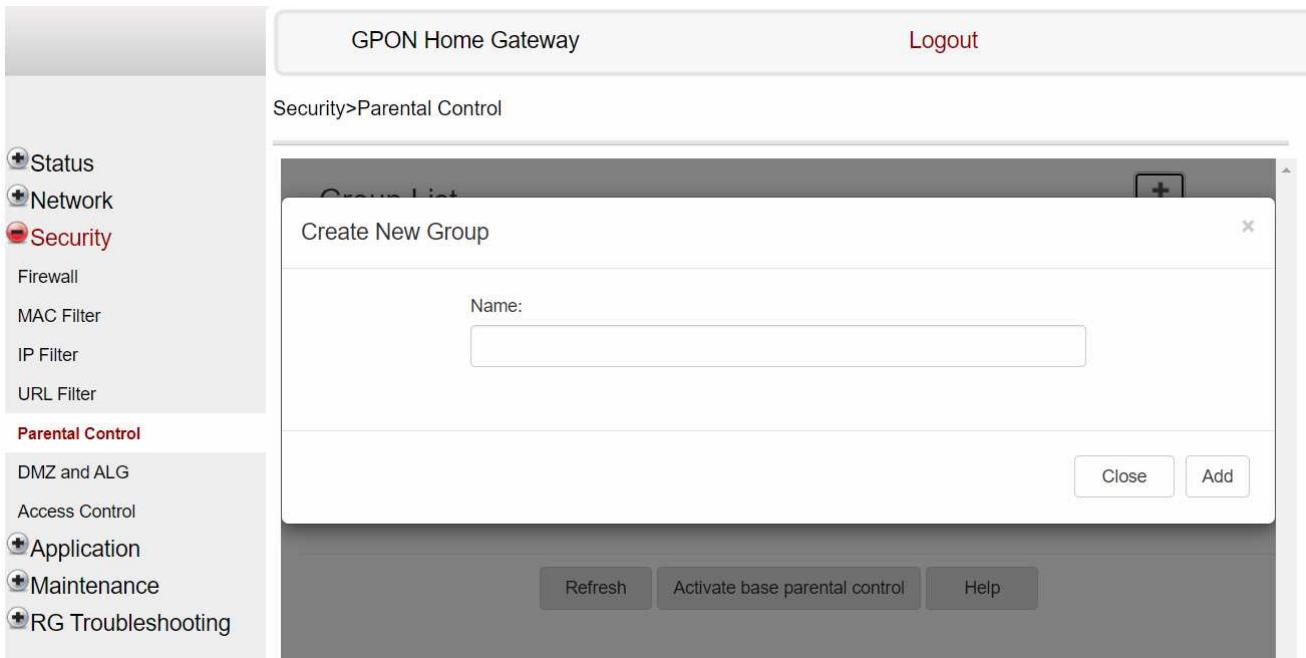

5

Click **Add**.

6

You can click on each field such as **Device**, **Access Internet**, **URL**, **Schedule**, and **Bed Time** to configure the related parameters.

The following page displays the parental control access internet information.

Figure 7-42 Parental control access internet page

GPON Home Gateway

Logout

Security>Parental Control

Group List

Group Name	Device	Access Internet	URL	Schedule	Bed Time	Delete
Home	1	Enable	0	0	0	Delete

Group Name: Home

Access Internet

Refresh Activate base parental control Help

The following page displays the parental control device information.

Figure 7-43 Parental control device page

GPON Home Gateway

Logout

Security>Parental Control

Group List

Group Name	Device	Access Internet	URL	Schedule	Bed Time	Delete
Home	Home	Enable	0	0	0	Delete

Group Name: Home

Name	Mac	Status	Move
GUOSENZ-HP	00:07:e9:b5:d9:e5	Active	Move

Refresh

Activate base parental control

Help

The following page displays the parental control URL information.

Figure 7-44 Parental control URL page

The screenshot shows the 'GPON Home Gateway' interface with the 'Logout' button in the top right. The main title is 'Security>Parental Control'. On the left, a sidebar lists 'Status', 'Network', 'Security' (which is selected and highlighted in red), 'Firewall', 'MAC Filter', 'IP Filter', 'URL Filter', 'Parental Control' (selected and highlighted in red), 'DMZ and ALG', 'Access Control', 'Application', 'Maintenance', and 'RG Troubleshooting'. The 'Parental Control' section is expanded, showing 'Enable URL Filter' with an unchecked checkbox and a 'Blocked URL Address' input field containing 'e.g: www.youtube.com/youtube.com'. Below these are 'Status', 'Address', and 'Delete' buttons. At the bottom are 'Refresh', 'Activate base parental control', and 'Help' buttons.

The following page displays the parental control schedule information.

Figure 7-45 Parental control schedule page

GPON Home Gateway [Logout](#)

Security>Parental Control

Group List

Group Name	Device	Access Internet	URL	Schedule	Bed Time	Delete
Home	1	Enable	0	0	0	Delete

Group Name: Home

Schedule Name

Enable Schedule

When Schedule is enabled, we will automatically pause internet

Sunday Monday Tuesday Wednesday Thursday Friday Saturday

From: e.g. 00:00~23:59 To: e.g. 00:00~23:59

[Add](#)

Name	Status	Start	End	Days	Action	Delete
------	--------	-------	-----	------	--------	--------

[Refresh](#) [Activate base parental control](#) [Help](#)

The following page displays the parental control bed time information.

Figure 7-46 Parental control bed time page

Click **Delete** to delete the group.

7

Configure the following parameters:

Table 7-32 Parental control parameters

Field	Description
Access Internet	
Access Internet	Select this checkbox to enable internet
Group Name	Displays the selected group name
Device	
Device MAC Address	Enter the MAC address and click Add Device .

Table 7-32 Parental control parameters (continued)

Field	Description
URL	
Enable URL Filter	Select this checkbox to enable URL filter
Blocked URL Address	Enter the URL address to be blocked and click Add
Schedule	
Schedule Name	Enter the schedule name
Enable Schedule	Select this checkbox to enable schedule You can choose Every Day, or Individual Days and select the checkboxes for the days of the week for which the schedule applies
From	Enter the time for the schedule to be in effect and click Add
To	
Bed Time	
Bed Time Name	Enter the bed time name
Enable Bed Time	Select this checkbox to enable bed time When bed time is enabled, the internet is paused. You can choose Every Day, or Individual Days and select the checkboxes for the days of the week for which the bed time applies
From	Enter the time for the bed time to be in effect and click Add
To	

8

Click **Activate base parental control**, to go back to default parental control window.

Click **Refresh** to update the displayed information.

Click **Help** for more information.

END OF STEPS

7.39 Configuring DMZ and ALG

1

Click **Security→DMZ and ALG** from the left pane in the GPON Home Gateway page. The DMZ and ALG page displays.

Figure 7-47 DMZ and ALG page

2

Configure the following parameters:

Table 7-33 ALG parameters

Field	Description
ALG Config	Select the checkboxes to enable the protocols to be supported by the ALG: FTP, TFTP, SIP, H323, RTSP, L2TP, IPSEC, PPTP.

3

Click **Save ALG**.

4

Configure the following parameters:

Table 7-34 DMZ parameters

Field	Description
WAN Connection List	Select a WAN connection from the list.
Enable DMZ	Select this checkbox to enable DMZ on the chosen WAN connection.
DMZ IP Address	Select Custom Settings and enter the DMZ IP address or select the IP address of a connected device from the list.

5

Click **Save DMZ**.

END OF STEPS

7.40 Configuring access control

This procedure describes how to configure the access control level (ACL).




Note: ACL takes precedence over the firewall policy.

The trusted network object will be shared for all WAN connections; it is not applied individually to a WAN connection.

1

Click **Security→Access Control** from the left pane in the GPON Home Gateway page. The Access Control page displays.

Figure 7-48 Access Control page

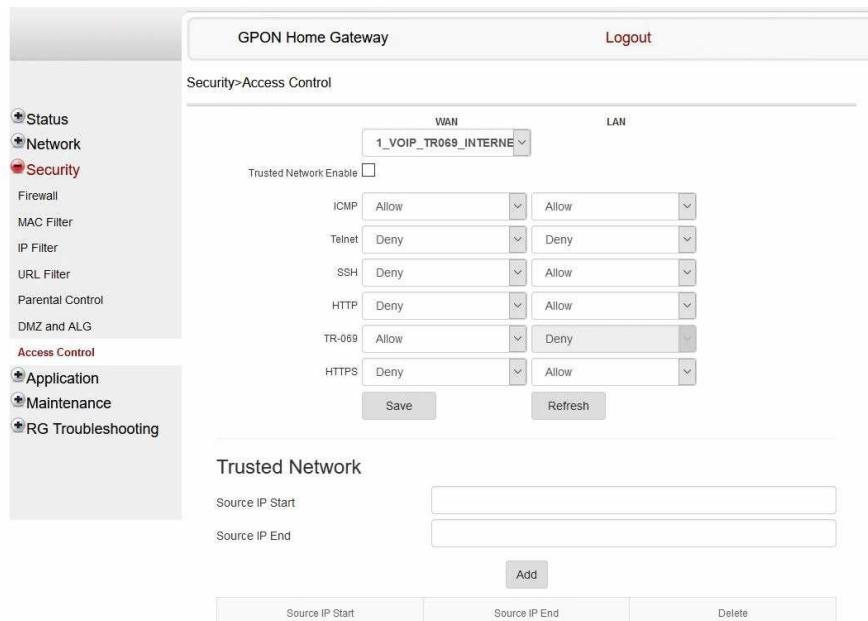

2

Configure the following parameters:

Table 7-35 Access Control parameters

Field	Description
WAN	Select a connection from the list.
Trusted Network Enable	Click to enable or disable trusted network.
ICMP, Telnet, SSH, HTTP, TR-069, HTTPS, SFTP	Select an access control level for each protocol: WAN side: Allow, Deny, or Trusted Network Only LAN side: Allow or Deny NOTE: If you allow SSH/Telnet/HTTP/HTTPS on the WAN or Telnet/HTTP on the LAN, a security warning is displayed. Click OK to continue.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

4

Optionally, add one or more subnet trusted networks.

The maximum number of entries is 32.

You can also use the Source IP fields to delete a previously created entry for a subnet trusted network.

Table 7-36 Trusted Network parameters

Field	Description
Source IP Start	Enter a start IP address for the new subnet trusted network.
Source IP End	Enter an end IP address for the new subnet trusted network.

5

Click **Add**.

END OF STEPS

Configuring the Application

7.41 Overview

7.41.1 Purpose

This chapter describes the application configuration tasks supported by the G-1425G-E ONTs.

7.41.2 Contents

7.41 Overview	165
7.42 Configuring port forwarding	165
7.43 Configuring port triggering	167
7.44 Configuring DDNS	168
7.45 Configuring NTP	170
7.46 Configuring UPnP and DLNA	171
7.47 Configuring voice	172

7.42 Configuring port forwarding

1

Click **Application**→**Port Forwarding** from the left pane in the GPON Home Gateway page. The Port Forwarding page displays.

Figure 7-49 Port Forwarding page

2

Configure the following parameters:

Table 7-37 Port Forwarding parameters

Field	Description
Application Name	Select an application name from the list. The default is Custom settings .
WAN Port	Enter the WAN port range.
LAN Port	Enter the LAN port range.
Internal Client	Select a connected device from the list and enter the associated IP address.
Protocol	Select the port forwarding protocol from the list: <ul style="list-style-type: none"> • TCP • UDP • TCP/UDP
Enable Mapping	Select this checkbox to enable mapping.
WAN Connection List	Select a WAN connection from the list. Note: Only active devices are shown on this list.

3

Click **Add**.

END OF STEPS

7.43 Configuring port triggering

1

Click **Application**→**Port Triggering** from the left pane in the GPON Home Gateway page. The Port Triggering page displays.

Figure 7-50 Port Triggering page

Application Name	WAN Connection	Open Port	Triggering Port	Expire Time	Open Protocol	Trigger Protocol	Status	Configuration Source	Delete
1_VOIP_TR069_INTERNET_R_VID_881									

2

Configure the following parameters:

Table 7-38 Port Triggering parameters

Field	Description
Application Name	Select an application name from the list. The default is Custom settings .
Open Port	Enter the open port range.

Table 7-38 Port Triggering parameters (continued)

Field	Description
Triggering Port	Enter the triggering port range.
Expire Time	Enter the expiration time in seconds.
Open Protocol	Select the open port protocol from the list: <ul style="list-style-type: none"> • TCP • UDP • TCP/UDP
Trigger Protocol	Select the triggering port protocol from the list: <ul style="list-style-type: none"> • TCP • UDP • TCP/UDP
Enable Triggering	Select this checkbox to enable port triggering.
WAN Connection List	Select a WAN connection from the list. <small>Note: Only active devices are shown on this list.</small>

3

Click **Add**.

END OF STEPS

7.44 Configuring DDNS

1

Click **Application**→**DDNS** from the left pane in the GPON Home Gateway page. The DDNS page displays.

Figure 7-51 DDNS page

GPON Home Gateway

Logout

Application>DDNS

WAN Connection List: 1_VOIP_TR069_INTERNET_R_VID_881

Enable DDNS:

ISP:

Domain Name:

Username:

Password: *****

Save Refresh

2

Configure the following parameters:

Table 7-39 DDNS parameters

Field	Description
WAN Connection List	Select a WAN connection from the list.
Enable DDNS	Select this checkbox to enable DDNS on the chosen WAN connection.
ISP	Select an ISP from the list.
Domain Name	Enter the domain name.
Username	Enter the username.
Password	Enter the password.
DDNS Status	Displays the status of the DDNS: Synchronized, Synchronization failed, or blank if no update message has been received from the ISP.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.45 Configuring NTP

1

Click **Application**→**NTP** from the left pane in the GPON Home Gateway page. The NTP page displays.

Figure 7-52 NTP page

2

Configure the following parameters:

Table 7-40 NTP parameters

Field	Description
Enable NTP Service	Select this checkbox to enable the NTP service.
Current Time	Enter the current local date and time.
Primary Time Server	Select a time server from the list or select Custom settings and enter the address of the time server.
Secondary Time Server	Select a time server from the list or select Custom settings and enter the address of the time server.
Tertiary Time Server	Select a time server from the list or select Custom settings and enter the address of the time server.
Interval Time	Enter the interval at which to get the time from the time server, in seconds.
Time Zone	Select the local time zone from the list.

3

Click **Save**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.46 Configuring UPnP and DLNA

1

Click **Application**→**UPnP and DLNA** from the left pane in the GPON Home Gateway page. The UPnP and DLNA page displays.

Figure 7-53 UPnP and DLNA page

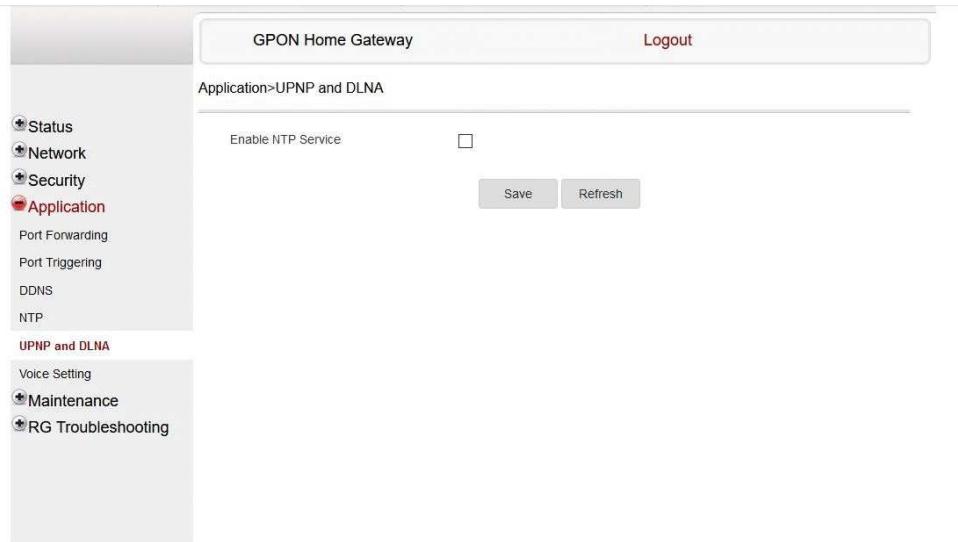

2

Select the **Enable UPnP/DLNA** checkbox to enable UPnP/DLNA.

3

Click **Save**.

Click **Refresh** to display up-to-date information.

END OF STEPS

7.47 Configuring voice

1

Click **Application→Voice Setting** from the left pane in the GPON Home Gateway page. The Voice Setting page displays.

Figure 7-54 Voice Setting page

The screenshot shows the 'Voice Setting' configuration page. The left sidebar lists various application settings, with 'Voice Setting' selected. The main area is divided into sections: 'Voice Setting' (Outbound Proxy, Registrar Server), 'Line Setting' (POTS Line, Enable, Directory Number, AuthUsername, AuthPassword, URI), and a large text area for 'DigitMap' containing a complex regular expression. A 'Save' button is located at the bottom right.

2

Configure the following parameters:

Table 7-41 Voice Setting parameters

Field	Description
Voice Setting	
Outbound Proxy	Enter the SIP outbound proxy.
Outbound Proxy Port	Enter the outbound proxy port.
Proxy Server	Enter the proxy server.
Proxy Server Port	Enter the proxy server port.
Registrar Server	Enter the registrar server.
Registrar Server Port	Enter the registrar server port.
UserAgentDomain	Enter the user agent domain.
UserAgentPort	Enter the user agent port.
DigitMap	A string of characters with a length limit of 1024 bytes. A dial plan can consist of several dial plan tokens. Each token is a component of the overall dial plan.
DTMF Mode	Select InBand , or RFC2833 from the list.
FaxT38	Select False or True from the list.
Line Setting	
POTS line	Select a POTS line from the list.
Enable	Select Enabled or Disabled from the list.
Directory Number	Enter a directory number.
AuthUserName	Enter an authorized username.
AuthPassword	Enter a password for the user.
URI	Enter the Uniform Resource Identifier of the SIP URL.

3

Click **Save**.

END OF STEPS

Maintenance

7.48 Overview

7.48.1 Purpose

This chapter describes the maintenance tasks supported by G-1425G-E ONTs.

7.48.2 Contents

7.48 Overview	174
7.49 Configuring the password	174
7.50 Configuring LOID	176
7.51 Configuring SLID	177
7.52 Managing the device	178
7.53 Backing up the configuration	179
7.54 Restoring the configuration	180
7.55 Upgrading firmware	181
7.56 Rebooting the device	181
7.57 Resetting to factory defaults	182
7.58 Diagnosing WAN connections	183
7.59 Viewing log files	185
7.60 Generating a delta Configuration file	186

7.49 Configuring the password

A password must adhere to the password rules, which are as follows:

- The password may consist of uppercase letters, lowercase letters, digital numbers, and the following special characters ! # + , - / @ _ : =]
- The password length must be from 8 to 24 characters
- The first character must be a digital number or a letter
- The password must contain at least two types of characters: numbers, letters, or special characters
- The same character must not appear more than 8 times in a row
- The password cannot be a dictionary password (for example:12345678).

When the password meets the password rules, the application displays the message “Your password has been changed successfully”.


When the password does not meet the password rules, the application displays a message to indicate which password rule has not been followed, for example:

- The password is too short
- The password is too long
- The first character cannot be a special character
- There are not enough character classes

1

Click **Maintenance**→**Password** from the left pane in the GPON Home Gateway page. The Password page displays.

Figure 7-55 Password page

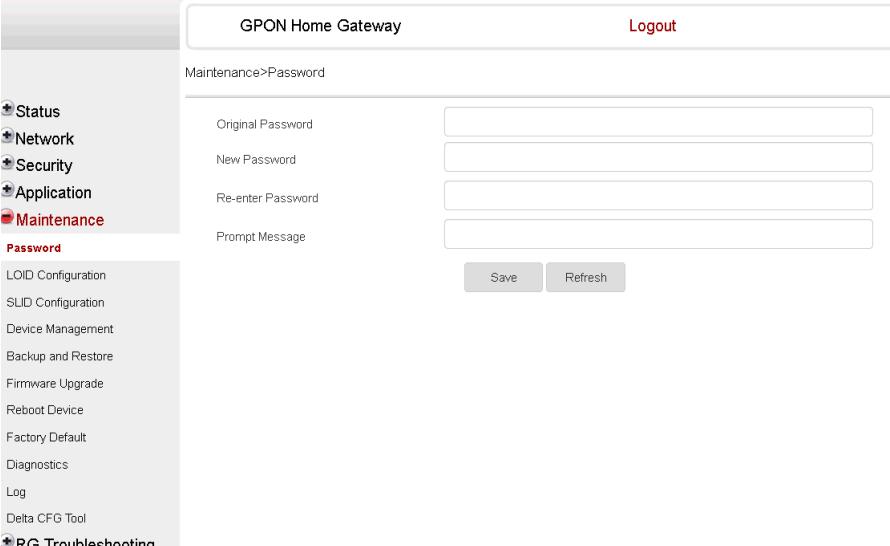

The screenshot shows the GPON Home Gateway interface. The main title is 'GPON Home Gateway' and the sub-page title is 'Maintenance>Password'. On the left, there is a sidebar with the following menu items: Status, Network, Security, Application, Maintenance (which is selected and highlighted in red), and RG Troubleshooting. Under the Maintenance section, there are sub-options: Password, LOID Configuration, SLID Configuration, Device Management, Backup and Restore, Firmware Upgrade, Reboot Device, Factory Default, Diagnostics, Log, and Delta CFG Tool. The main content area contains four input fields: 'Original Password', 'New Password', 'Re-enter Password', and 'Prompt Message'. Below these fields are two buttons: 'Save' and 'Refresh'. The 'Prompt Message' field is currently empty.

2

Configure the following parameters:

Table 7-42 Password parameters

Field	Description
Original Password	Enter the current password.
New Password	Enter the new password (must adhere to the password rules).
Re-enter password	Re-enter the new password (must match the new password entered above exactly).
Prompt message	Enter the password prompt message.

3

Click **Save**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.50 Configuring LOID

1

Click **Maintenance**→**LOID Configuration** from the left pane in the GPON Home Gateway page. The LOID Configuration page displays.

Figure 7-56 LOID Configuration page

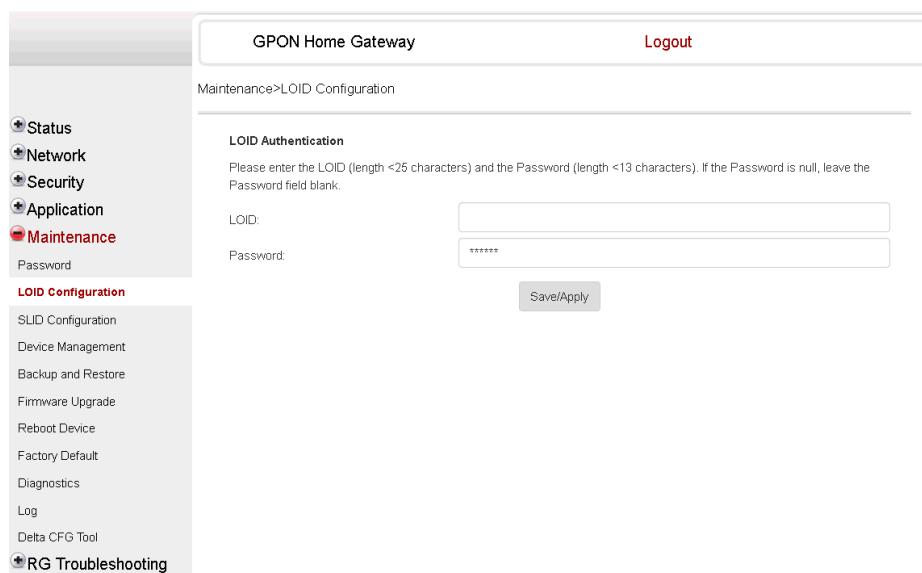

2

Configure the following parameters:

Table 7-43 LOID Configuration parameters

Field	Description
LOID	Enter the LOID; the maximum number of characters is 24. If the password is null, this field may be left blank
Password	Enter the password; the maximum number of characters is 12.

3

Click **Save/Apply**.


END OF STEPS

7.51 Configuring SLID

1

Click **Maintenance→SLID Configuration** from the left pane in the GPON Home Gateway page. The SLID Configuration page displays.

Figure 7-57 SLID Configuration page

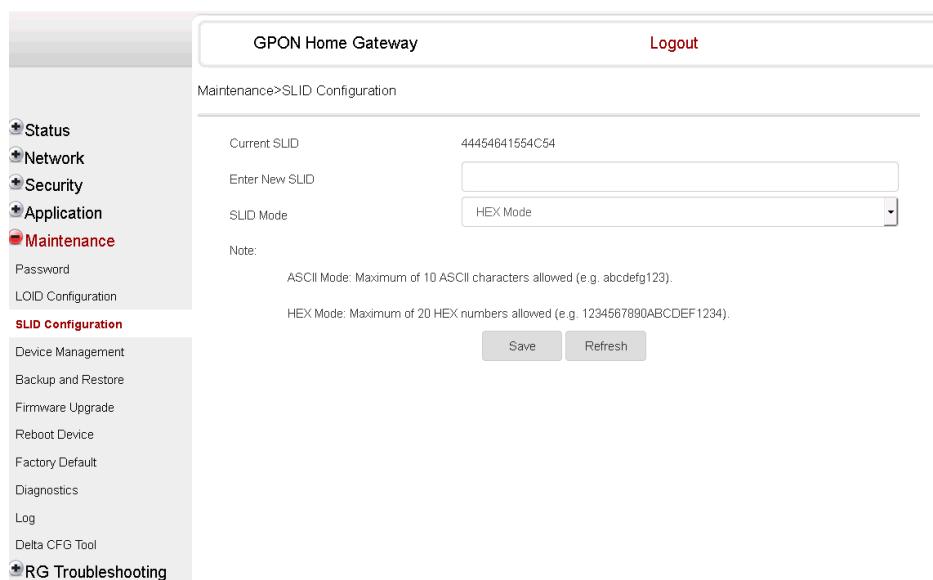

2

Configure the following parameters:

Table 7-44 SLID Configuration parameters

Field	Description
Current SLID	Displays the current SLID.
Enter New SLID	Enter the new SLID.

Table 7-44 SLID Configuration parameters (continued)

Field	Description
SLID Mode	<p>Select a SLID mode from the list. The default is HEX Mode.</p> <ul style="list-style-type: none"> ASCII Mode HEX Mode <p>In ASCII Mode, the allowed characters are 0-9, a-z and the maximum number of characters is 10. Special character is not allowed.</p> <p>In HEX Mode, the allowed characters are 0-9, a-f, A-F and the maximum number of characters is 20. Special character is not allowed.</p>

3

Click **Save**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.52 Managing the device

1

Click **Maintenance**→**Device Management** from the left pane in the GPON Home Gateway page. The Device Management page displays.

Figure 7-58 Device Management page

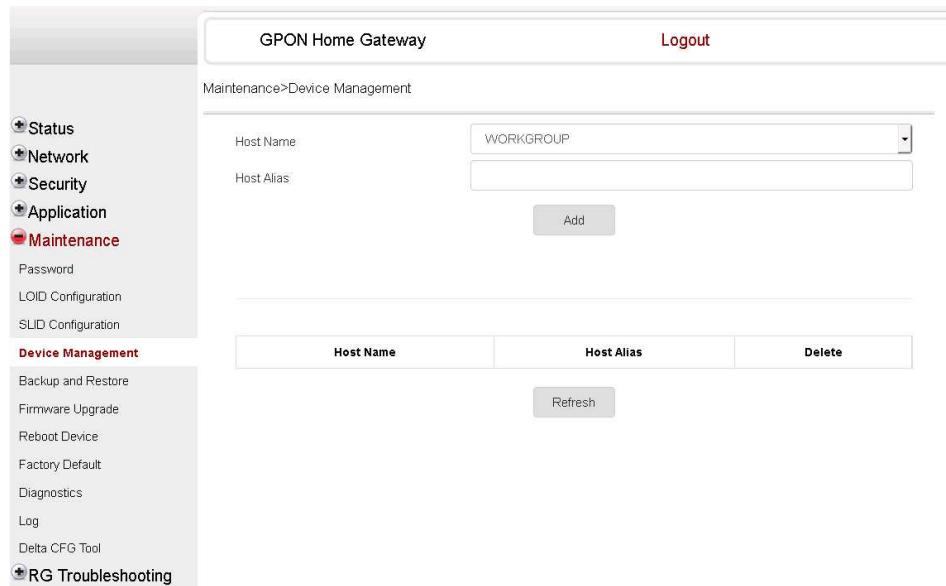

2

Configure the following parameters:

Table 7-45 Device Management parameters

Field	Description
Host Name	Select a hostname from the list.
Host Alias	Enter an alias for the selected host.

3

Click **Add**.

Click **Refresh** to display up-to-date information.


END OF STEPS

7.53 Backing up the configuration

1

Click **Maintenance**→**Backup and Restore** from the left pane in the GPON Home Gateway page. The Backup and Restore page displays.

Figure 7-59 Backup and Restore page

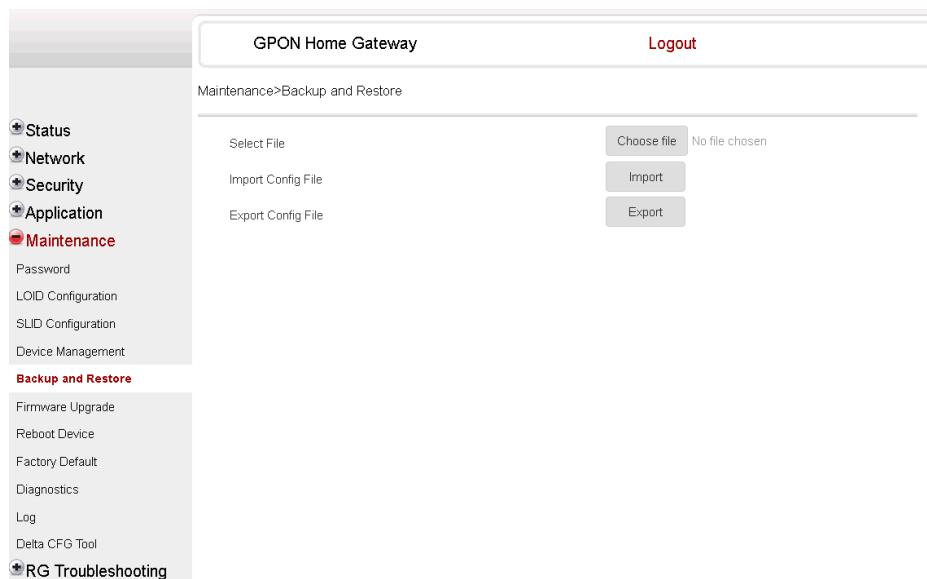

2

Click **Export** to export the current ONT configuration to a backup file.


END OF STEPS

7.54 Restoring the configuration

1

Click **Maintenance**→**Backup and Restore** from the left pane in the GPON Home Gateway page. The Backup and Restore page displays.

Figure 7-60 Backup and Restore page

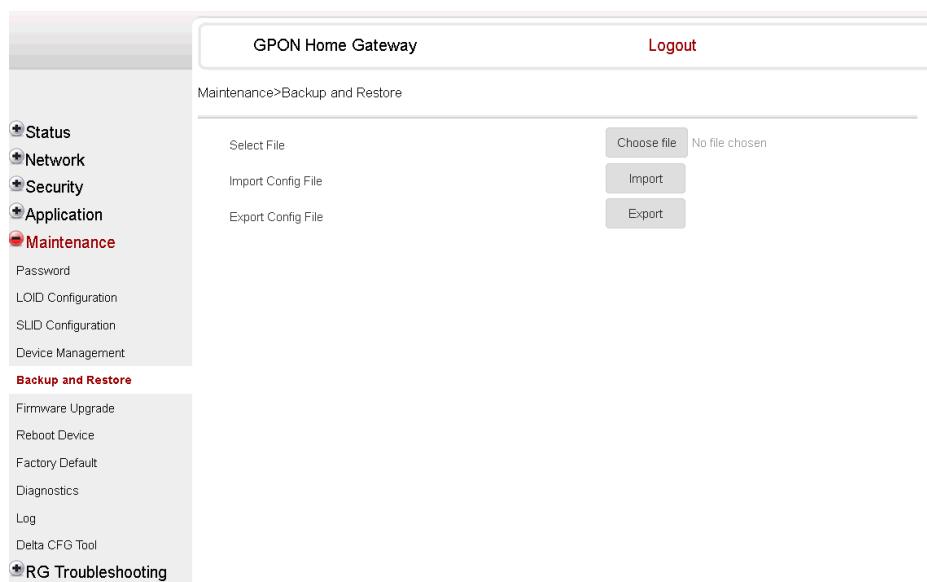

2

Click **Choose file** and select a backup file.

3

Click **Import** to restore the ONT to the saved backup.


END OF STEPS

7.55 Upgrading firmware

1

Click **Maintenance**→**Firmware Upgrade** from the left pane in the GPON Home Gateway page. The Firmware Upgrade page displays.

Figure 7-61 Firmware Upgrade page

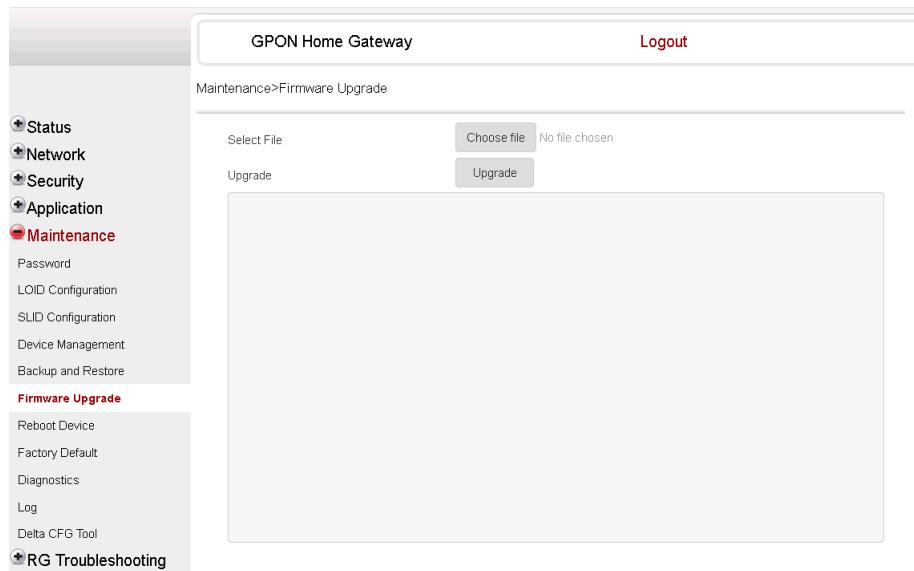

2

Click **Choose file** and select the firmware file.

3

Click **Upgrade** to upgrade the firmware.


END OF STEPS

7.56 Rebooting the device

1

Click **Maintenance**→**Reboot Device** from the left pane in the GPON Home Gateway page. The Reboot Device page displays.

Figure 7-62 Reboot Device page

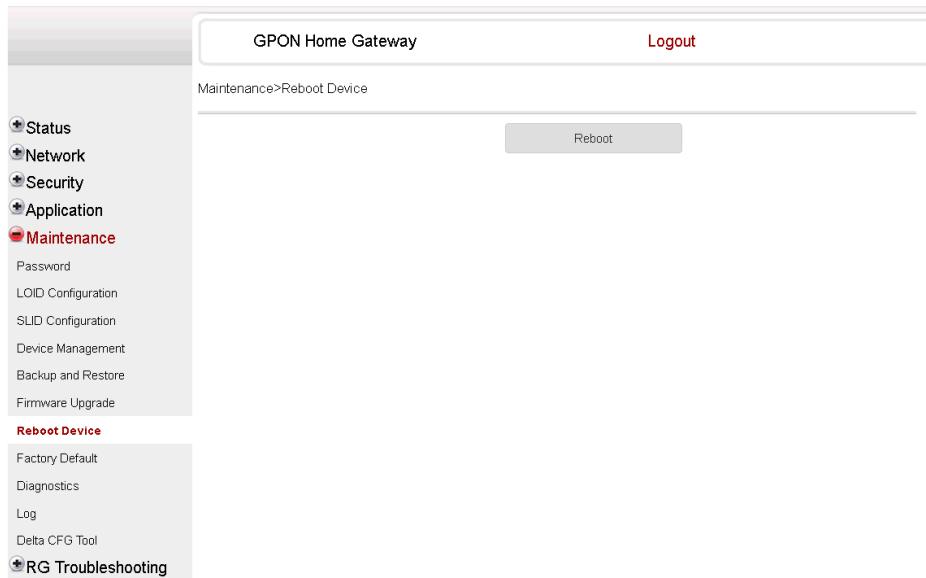

2

Click **Reboot** to reboot the ONT.


END OF STEPS

7.57 Resetting to factory defaults

1

Click **Maintenance**→**Factory Default** from the left pane in the GPON Home Gateway page.
The Factory Default page displays.

Figure 7-63 Factory Default page

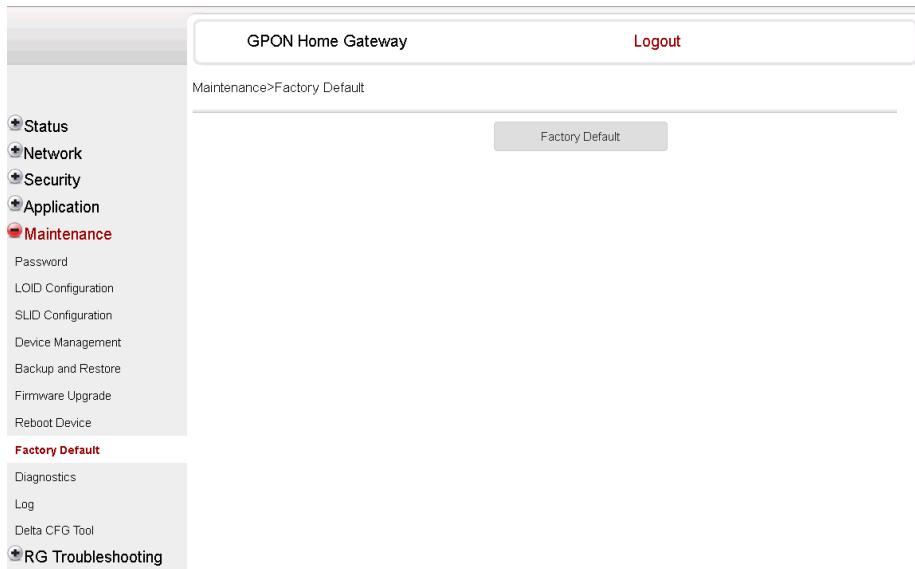

2

Click **Factory Default** to reset the ONT to its factory default settings.

END OF STEPS

7.58 Diagnosing WAN connections

1

Click **Maintenance**→**Diagnostics** from the left pane in the GPON Home Gateway page. The Diagnostics page displays.

Figure 7-64 Diagnostics page

GPON Home Gateway

Maintenance>Diagnostics

Status

Network

Security

Application

Maintenance

Password

LOID Configuration

SLID Configuration

Device Management

Backup and Restore

Firmware Upgrade

Reboot Device

Factory Default

Diagnostics

Log

Delta CFG Tool

RG Troubleshooting

Protocol: IPv4

WAN Connect List: LAN/WAN Interface

IP or Domain Name: Custom settings

e.g. 192.168.0.1

Test

Ping Try Times(1 ~ 1000): 4

Packet Length(64 ~ 1500): 84

Max no. of trace hops(1 ~ 255): 30

Start Test

Cancel

2

Choose IPv4 or IPv6 to select the protocol type from the drop-down menu.

3

Select a WAN connection to diagnose from the list.

4

Enter the IP address or domain name.

5

Select the test type: ping, traceroute, or both.

6

Enter the number of ping attempts to perform (1 - 1000); the default is 4.


- 7 _____
Enter a ping packet length (64-1500); the default is 64.
- 8 _____
Enter the maximum number of trace hops (1-255); the default is 30.
- 9 _____
Click **Start Test**. The results will be displayed at the bottom of the page.
- 10 _____
Click **Cancel** to cancel the test.

END OF STEPS _____

7.59 Viewing log files

- 1 _____
Click **Maintenance**→**Log** from the left pane in the GPON Home Gateway page. The Log page displays.

Figure 7-65 Log page

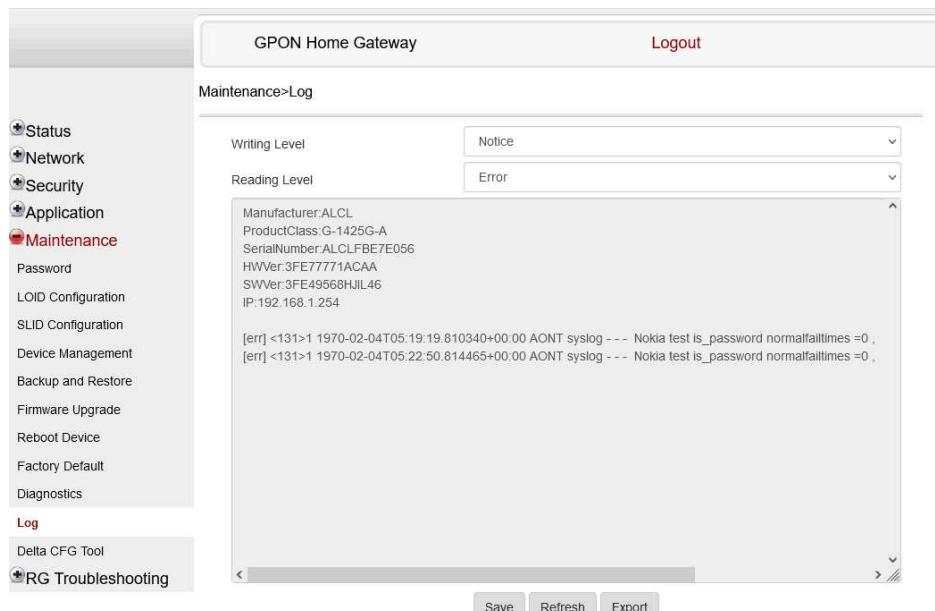

2

Select a write level from the list to determine which types of events are recorded in the log file:

- Emergency
- Alert
- Critical
- Error
- Warning
- Notice
- Informational
- Debug

3

Select a reading level from the list to determine which types of events to display from the log file:

- Emergency
- Alert
- Critical
- Error
- Warning
- Notice
- Informational
- Debug

The log file is displayed at the bottom of the page.

4

Click **Save**.

Click **Refresh** to display up-to-date information.

Click **Export** to export the log file to your local machine.

END OF STEPS

7.60 Generating a delta Configuration file

The delta CFG tool is used to generate a delta CFG file which records the parameter changes on the WebGUI. The tool also allows to merge the generated delta configuration file with a previously existing delta config file.


1

Click **Maintenance→Delta CFG Tool** from the left pane in the GPON Home Gateway page. The Delta CFG Tool page displays.

- To generate a delta CFG file without merging with a previous CFG file, go to [Step 2](#).

- To merge delta CFG file, go to [Step 3](#).

Figure 7-66 Delta CFG Tool page

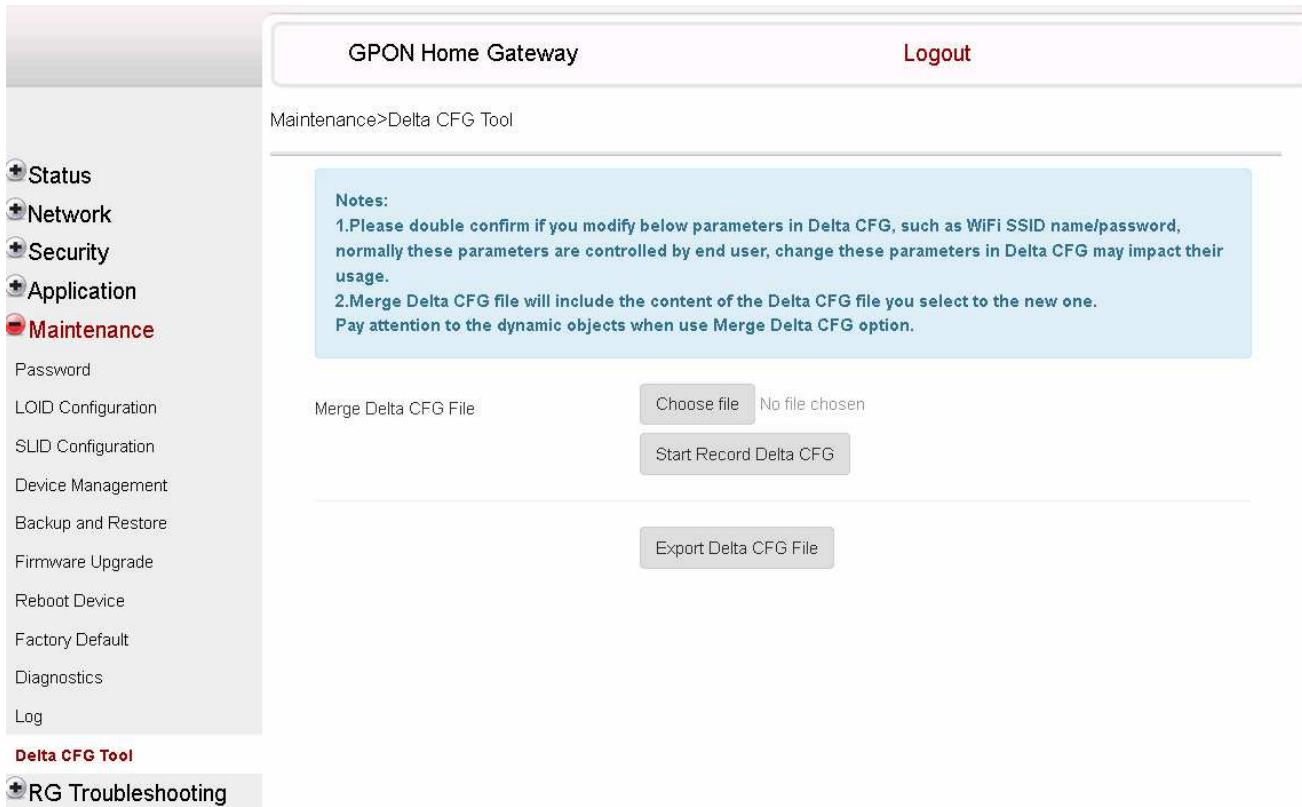

2

Generating a delta CFG file without merging with a previous delta CFG file

- Click **Start Record Delta CFG**.
- Perform the required configuration such as adding/deleting WAN connection, changing WAN connection VLAN ID, changing ACS URL and so on. If reboot is needed after modifying a parameter, for example, changing LAN port mode from route to bridge, wait until the ONT is rebooted and continue with the configuration.
- Click **Stop Record Delta CFG** to stop recording.
- Click **Export Delta CFG File** to download the delta CFG file to the local computer. The delta CFG file is in plain text format with the filename *delta_config_result.txt*. If required, rename the file and convert the file to .tar format before downloading it to the ONT.

3

Generating a delta CFG file and merging the file with a previously generated file

This option allows a user to select a delta CFG file from the local computer which will be merged with the recorded commands. The generated delta CFG file will include the content of the selected delta CFG file and the new modifications.

- a. Click **Choose file** and select an existing delta CFG file from the local computer to merge with the recorded commands.



Note: Choose the delta CFG file before clicking **Start Record Delta CFG**. The delta CFG file chosen needs to be in plain text format and not in the .tar format.

- b. Click **Start Record Delta CFG**.
- c. Perform the required configuration such as adding/deleting WAN connection, changing WAN connection VLAN ID, changing ACS URL and so on. If reboot is needed after modifying a parameter, for example, changing LAN port mode from route to bridge, wait until the ONT is rebooted and continue with the configuration.
- d. Click **Stop Record Delta CFG** to stop recording.
- e. Click **Export Delta CFG File** to download the delta CFG file to the local computer. The delta CFG file is in plain text format with the filename *delta_config_result.txt*. If required, rename the file and convert the file to .tar format before downloading it to the ONT.

END OF STEPS

RG Troubleshooting Counters

7.61 Overview

7.61.1 Purpose

This section describes the RG troubleshooting counters GUI procedures.

7.61.2 Contents

7.61 Overview	189
7.62 Viewing Residential Gateway (RG) troubleshooting counters	189

7.62 Viewing Residential Gateway (RG) troubleshooting counters

The Troubleshooting Counters feature enables the service providers and the end users to monitor the performance of their broadband connection for about 10 seconds from the time the test is triggered.

Tests are run to retrieve upstream and downstream throughput, latency, and DNS response time. The Troubleshooting Counters window also displays upstream and downstream packet loss and Internet status.

1

Click **RG Troubleshooting**→**RG Troubleshoot Counters** from the left pane in the GPON Home Gateway page. The RG Troubleshoot Counters page displays.

Figure 7-67 RG Troubleshoot Counters page

2

Configure the following parameters:

Table 7-46 RG Troubleshooting Counters parameters

Field	Description
WAN Connection List	Select a WAN connection from the list.
US Throughput	This test is used to determine the upstream throughput/speed. Click US Speed Test to specify the time for the upstream test. The default is weekly, performed at idle to a public server.
DS Throughput	This test is used to determine the downstream throughput/speed. Click DS Speed Test to specify the time for the downstream test. The default is weekly, performed at idle to a public server.
US Packet Loss	Indicates the number of upstream packages lost.
DS Packet Loss	Indicates the number of downstream packages lost.

Table 7-46 RG Troubleshooting Counters parameters (continued)

Field	Description
Internet Status	Indicates whether the broadband connections is active (UP) or not (DOWN).
Latency	This test is used to determine the lowest round-trip time in milliseconds by pinging the target server multiple times Click Latency Test to specify the time for the test. The default is weekly, performed at idle to a public server.
DNS Response Time	This test is used to determine the lowest round-trip time in milliseconds by sending a request to the target DNS server. Click DNS Response Test to specify the time for the test. The default is weekly, performed at idle to a public server.

Click **Refresh** to display up-to-date information.

END OF STEPS

8 ONT configuration file over OMCI

8.1 Overview

8.1.1 Purpose

8.1.2 Contents

8.1 Overview	193
8.2 Purpose	193
8.3 Supported configuration file types	193
8.4 ONT configuration file over OMCI	196

8.2 Purpose

This procedure describes how to use configuration files over OMCI to configure ONTs. Some advantages include:

- Flexibility to change the ONT default behavior by downloading configuration file
- Flexibility to update a deployed ONT by downloading updated parameters
- Ability to securely download any configuration file to an ONT
- Ability to avoid using embedded configuration files in ONT software

i **Note:** This feature is supported for use with the 7360 ISAM FX and the 7342 ISAM FTTU.

8.3 Supported configuration file types

[Table 8-1, “Supported configuration files” \(p. 194\)](#) describes the configuration file types that are supported from Nokia ONT R05.02.00 and later.

Table 8-1 Supported configuration files

File Index	Description	Details	Supported ONTs/DPU
PRE	ONT pre-configuration file	<p>The XML-based PRECONFIG file controls the working mechanics of the ONT for various services. The default behavior of different ONTs may vary based on the factory settings.</p> <p>The pre-configuration file includes the factory default value for the residential gateway.</p> <p>Note: the pre-configuration file does not work with SFU ONTs; therefore, this feature applies only to Residential Gateway ONTs.</p> <p>The pre-configuration file can be used as is, but Nokia provides its customers with the flexibility to customize the pre-configuration file.</p> <p>This pre-configuration file enables operators to change the default behavior by downloading a customized pre-configuration based on customer inputs.</p> <p>This PRE XML file includes a custom OPERID.</p> <p>The Nokia defined index for the PRECONFIG file is: "PRE"</p>	All Nokia GPON and 10 GPON ONT.
CFG	ONT configuration delta file	<p>The XML-based CFG file updates the configurable parameters (the PRE settings) in the existing PRE file of a deployed ONT, where required.</p> <p>This configuration file enables operators to change the deployed behavior by downloading customized updates in the CFG file.</p> <p>This file is used only to modify the parameters in the PRE file; it is not used for service provisioning.</p> <p>No OPERID is required, because the update is based on the OPERID used for the PRE file.</p> <p>The Nokia defined index for the PRECONFIG DELTA file is: "CFG"</p>	All Nokia GPON and 10 GPON ONT.
XML	Voice XML file	<p>The Voice XML file provides an alternate method for securely downloading voice parameters from the OLT, rather than using FTP (OMCIV1/OMCIV2) or HTTPS (TR-069). Downloading this file makes the applicable changes in the voice parameters.</p> <p>This file enables operators to change the voice behavior by downloading the updated voice XML file.</p> <p>Nokia recommends using this procedure, rather than embedded voice XML files.</p> <p>The Nokia defined index for the Voice XML file is: "XML"</p>	All Nokia GPON and 10 GPON ONT.

Table 8-1 Supported configuration files (continued)

File Index	Description	Details	Supported ONTs/DPU
GFT	G.fast-related configuration file	<p>This text-based json script file controls the default behavior of the G.Fast ONT.</p> <p>This file includes the provisioning parameters of the G.fast transports layer; it does not include VLAN or QoS provisioning.</p> <p>While the ONT functions well with the default values; they can optionally be customized.</p> <p>While default values can work in VDSL mode, a download file is required for the device to function as a G.fast ONT.</p> <p>The Nokia defined index for the G.fast file is: "GFT"</p>	Nokia G.fast.

8.3.1 Filename conventions

Nokia provides the raw configuration files, which must be saved by the operator in a TAR file to be uploaded. TAR file names must be unique.

The filenames of the raw configuration files may not adhere to the naming conventions outlined below. In this case, the files must be renamed to adhere to the naming conventions before the operator generates the TAR file. Filenames are not case-sensitive.

ABCXXXXVER

where

ABC is the file index type (PRE, CFG, XML, GFT)

XXXX is the operator ID

For PRE and CFG, a valid operator ID is required

For XML and GFT, any characters may be used

VER is the file version (from 001 to 999)

Note: you cannot update the configuration using two files with the same name.

8.3.2 Download configuration file

The following table provides the supported download options for ONT pre-configuration file and configuration file.

Table 8-2 Download configuration files

ONT type	Legacy method download		Zero management download	
	PRE file	CFG file	PRE file	CFG file
Broadlight(eg.I240WA-3FE54869AFGA80)	—	✓	—	✓
Broadcom(eg.G240WB-3FE56773BFGA07)	—	✓	✓	✓

Table 8-2 Download configuration files (continued)

ONT type	Legacy method download		Zero management download	
	PRE file	CFG file	PRE file	CFG file
MTK(eg.G240WF)	—	✓	✓	✓

8.4 ONT configuration file over OMCI



WARNING

Equipment Damage

Executing the following procedure will trigger the ONT to reboot, which will impact ongoing services.

Use this procedures to configure ONTs using configuration files via legacy method and OMCI.

8.4.1 Configuring an ONT using a configuration file via legacy method

1

Upload the ABCXXXXVER TAR file to the /ONT/ directory in the OLT.

A maximum of 250 files can be kept in the OLT file system.

2

Using OLT commands, download the TAR file to the ONT.

For OLT commands, refer to the **7360 ISAM FX CLI Command Guide for 100_320Gbps FD NT and FX NT**, or the **7342 ISAM FTTU Operation and Maintenance Using TL1 and CLI**.

Please note:

- **pri-cfgfile-pland/dnload** or **sec-cfgfile-pland/dnload** can be 1 to 14 characters.
- **pri-cfgfile-pland** and **pri-cfgfile-dnload** should be the same name.

Examples

Note: X can be 1 or 2 unless specified:

- If **pland-cfgfileX= Disabled** and **dnload-cfgfileX= Disabled** ,
no file will be downloaded to the ONT.
- If **pland-cfgfileX=FILENAME1** and **dnload-cfgfileX= Disabled** ,
FILENAME1 will be downloaded and FILENAME1 will be made active. An ONT reboot is required.
- If **pland-cfgfileX=Disabled** and **dnload-cfgfileX= FILENAME2**
FILENAME2 will be downloaded and FILENAME2 will be made passive. An ONT reboot is not required.
- If **pland-cfgfileX=FILENAME3** and **dnload-cfgfileX= FILENAME 4**, the OLT reports an error because the filenames are not the same.

- e. Configure equipment interface **pland-cfgfile1=XMLXXXXXX1** and **dnload-cfgfile1 XMLXXXXXX1**

Configure equipment interface **pland-cfgfile2=XMLXXXXXX2** and **dnload-cfgfile2 XMLXXXXXX2**

Although the OLT permits the above two steps without reporting an error, Nokia does not recommend executing them, because the ONT may exhibit unexpected behavior.

- f. If **pland-cfgfileX=Auto** and **dnload-cfgfileX= Auto**

The OLT will download the XML file from "sw-ctr-list" (**configure equipment ont sw-ctrl**)

END OF STEPS

The ONT will distribute the configuration files to the different services based on the active indication from the OLT and on the Nokia defined index.

The ONT automatically reboots to apply the configuration files. After the ONT reboots and reports the active version, the OLT completes the file download procedure.

Operators must check the committed file from the OLT to verify whether the corresponding file has been applied. If an error occurs, contact Nokia for support.

8.4.2 Configuring an ONT using a configuration file via OMCI

1

Generate the TAR file to be uploaded to the OLT.

Using the raw configuration file(s) provided by Nokia, generate the TAR file as follows:

a. On a Linux platform, rename the raw configuration file to adhere to the naming convention, as described in section [8.3 "Supported configuration file types" \(p. 193\)](#).

b. Tar the **ABCXXXXVER** raw configuration file:

```
tar -cf ABCXXXXVER.tar ABCXXXXVER
```

Where

ABCXXXXVER

Is the name of the file created in step i.

This creates two files: **ABCXXXXVER** and **ABCXXXXVER.tar**.

c. Rename **ABCXXXXVER** to **ABCXXXXVER.org**

d. Remove the ".tar" extension from **ABCXXXXVER.tar** file.

2

Upload the **ABCXXXXVER** TAR file to the **/ONT/** directory in the OLT.

A maximum of 250 files can be kept in the OLT file system.

3

Using OLT commands, download the TAR file to the ONT.

For OLT commands, refer to the *7360 ISAM FX CLI Command Guide for 100_320Gbps FD NT*

and FX NT, or the **7342 ISAM FTTU Operation and Maintenance Using TL1 and CLI**.

Please note:

- **pri-cfgfile-pland/dnload** or **sec-cfgfile-pland/dnload** can be 1 to 14 characters.
- **pri-cfgfile-pland** and **pri-cfgfile-dnload** should be the same name.

Examples

Note: X can be 1 or 2 unless specified:

- If **pland-cfgfileX= Disabled** and **dnload-cfgfileX= Disabled** ,
no file will be downloaded to the ONT.
- If **pland-cfgfileX=FILENAME1** and **dnload-cfgfileX= Disabled** ,
FILENAME1 will be downloaded and FILENAME1 will be made active. An ONT reboot is required.
- If **pland-cfgfileX=Disabled** and **dnload-cfgfileX= FILENAME2**
FILENAME2 will be downloaded and FILENAME2 will be made passive. An ONT reboot is not required.
- If **pland-cfgfileX=FILENAME3** and **dnload-cfgfileX= FILENAME 4**, the OLT reports an error because the filenames are not the same.
- Configure equipment interface **pland-cfgfile1=XMLXXXXXX1** and **dnload-cfgfile1 XMLXXXXXX1**
Configure equipment interface **pland-cfgfile2=XMLXXXXXX2** and **dnload-cfgfile2 XMLXXXXXX2**
Although the OLT permits the above two steps without reporting an error, Nokia does not recommend executing them, because the ONT may exhibit unexpected behavior.
- If **pland-cfgfileX=Auto** and **dnload-cfgfileX= Auto**
The OLT will download the XML file from "sw-ctr-list" (**configure equipment ont sw-ctrl**)

END OF STEPS

The ONT will distribute the configuration files to the different services based on the active indication from the OLT and on the Nokia defined index.

The ONT automatically reboots to apply the configuration files. After the ONT reboots and reports the active version, the OLT completes the file download procedure.

Operators must check the committed file from the OLT to verify whether the corresponding file has been applied. If an error occurs, contact Nokia for support.