Table of Co	ntonta	
1.Foreword		2
2.Getting to know your touch phone		5
3.Starting up the device		6
4.Introduce the basic phone function		
5.Technical Specifications		14
6.SAR	•	16

Foreword

Safety

In order to ensure the phone is used safely and correctly, please read the precautions below carefully before use.

1.1 General precaution

Your phone is only suitable for the battery and charger approved by our company or else it may cause the battery to leak, overheat, explode or even catch fire.

-Do not knock, vibrate or throw the phone heavily to avoid malfunction, fire, overheating, explosion or fire.

If there are abnormal phenomena, like temperature rising, color

change or distortion during the usage, charging or storage of the battery, please stop using it and replace it with a new battery.
It may burn the skin if liquid in the battery leaks onto skin or

clothes. If this happens please flush with plenty of clean water immediately and go to a hospital at once.

Please keep the battery away from fire to avoid fire and

explosion if the battery leaks or emits a strange smell.

-Do not place expose the battery to moisture or it may cause overheating, fumes and corrosion.

Do not use or place the battery under direct sunlight, or in hot places, it may cause leakage and overheating, thus reducing performance and shortening the lifespan.

Do not charge the battery for over 24 hours continuously.
Use careful with the earphone maybe possible excessive sound presure from earphones and headphones can cause hearing

1.2 Precaution for the use of charger

-Do not cause short circuit to the charger, or it may cause

electric shock, fumes and damage to the charger.

-Do not use the charger if the power wire is broken, or it may cause fire and electric shock.

Please remove accumulated dust on the power plug.Do not put water containers next to the power supply to avoid overheating, fire, electric shock and malfunction in case they

come into contact.
-Do not disassemble or tamper with the charger or it may cause personal injury, electric shock, fire and the damage of the -Do not use the charger in places of high humidity, like

bathrooms, or it may cause electric shock, fire and damage of

- -Do not touch the charger, power cord or power plug with wet hands or it can cause electric shock.
- -Do not put heavy objects on the power cord or change the power cord or it may cause electric shock and fire.
- Please unplug the power socket before cleaning and
- Please hold the charger to unplug the socket as pulling the power cord may damage the power wire and cause electric shock and fire.
- 1.3 Cleaning and maintenance
- As the phone, battery and charger are not waterproof, do not use them in places of high humidity and avoid them being wet by rain.
- Please clean the battery and charger with a soft dry cloth.
- Never use alcohol, thinner or solutions, like benzene, to wipe the phone.
- Dirty sockets can cause poor contact and power down, and even make recharging unavailable. So, please clean them periodically.
- 1.4 Common Precaution

Mobile Phone:

- ·Please use the phone in an environment with temperature between -10°C- 55°C and humidity of ≤80%.
- ·Please use the phone far away from regular telephones, TV sets, radio sets and office automation equipment, to avoid affecting the normal use of these equipments and mobile phone. Battery:
- -Store the battery in cool and ventilated place without direct sunlight.
- The battery has a limited lifespan. The usage of battery will be shortened progressively due to frequent charging. Once the battery is out of use, it means that its lifespan has ended, and you will need to replace it with an approved new battery.
- Do not dispose of old batteries as household waste. Give them to specified disposal places and follow any stipulated instructions for disposal.
- CAUTION:RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCYIONS.

- Charger:
 -Do not charge under following conditions:
- -- places with direct sunlight

- wet or dusty places with strong vibrations (it may cause malfunction)
 -- places near electrical appliances (it may affect the image and sound) like TV set, radio, etc
 -- Adapter shall be installed near the equipment and shall be easily accessible. The plug considered as disconnect device of adapter.


Getting to know your touch phone







Starting up the device

To install the SIM card and T card
-Power off the mobile
-According the following picture, open the SIM card cover.

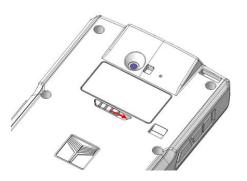


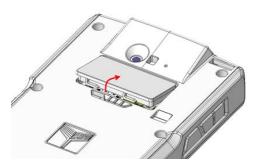


-If you want change T card, you need slide the existing card out of the memoyr card slot.

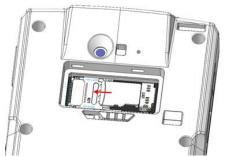

If you want change SIM card, Push the SIM card slot stator to the left, Lift up the stator, and into the SIM card. Close the stator, slide to the right to lock the SIM card.

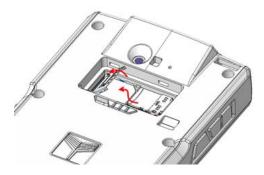

 $\boldsymbol{\cdot} \text{Close}$ the SIM card cover, and lock the cover.

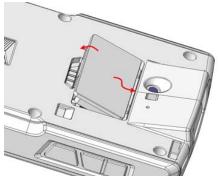

Charging the Battery
New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync

connector on your device, and then plug in the AC adapter to an

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon appears in the title bar of the Home screen.

Warning:

· As a safety precaution, the battery stops charging before it overheat Power on/off

To power off your phone, press & hold POWER. On release, the Phone options menu opens. Select 'Power off' and confirm. To power on again, press & hold power

Introduce the basic phone function

Switch MainMenu style
 (1) In default Home screen, slide your fingertip left and right along the screen to reveal the more home screen.



(2) On Home screen, click icon on the bottom of the screen (Main menu icon) to enter the main menu screen, slide your fingertip left and right along the screen to reveal the more applications.



2. Home screen
(1) Read your notifications
When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.
Ongoing notifications report activities such as call forwarding ON, current call status, song playing.
Notifications report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting 'Clear' notifications at the top of the notifications window.
To open the message, reminder or other notification, you can

To open the message, reminder or other notification, you can touch the items. To close the notifications window, slide your finger up the screen.

(2) Create Home screen shortcuts and widgets:
From the Home screen, touch the main menu, and then click the WIDGETS. Touch&hold to pick up a widget to select a shortcut to some of your saved information (such as a play list), a widget (a clock) for your Home screen.





- (3) Move objects on the Home screen
 To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.

 • Without lifting your finger (or you'll drop out of move mode),
- Without lifting your finger (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.
 3. Camera
 All the pictures you can capture or view on your phone are stored on a memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.



4. GPRS/WLAN network
Your device's networking capabilities allow you to access the
Internet or your corporate network through WLAN, GPRS.
You can also add and set up a VPN or proxy connection.
To use WLAN on your device, you need access to a wireless

access point

Note: The availability and range of your device's WLAN signal depends on the number, infrastructure, and other objects through which the signal passes.

To open the Browser you need to be connected to a network.






This phone supports movable storage, i.e., the U-disk function. When the phone is switched on, you see the icon in the status bar on the top of the screen when its connected to a PC by a data line. Touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window. Select [USB connected] and touch [Turn on USB storage] to confirm, you can use the phone as a U-disk.





6. Music Your music is organized into four categories: Artists, Albums, Songs, and Play lists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play.





7. Bluetooth

The phone supports Bluetooth(BT) functions, you can establish a wireless connection between the phone with other compatible devices, and data transmission, you can establish a wireless connection between devices in the phone with a distance of up to 10 meters. Bluetooth connection may be interference by

- obstacles, such as walls or other electronic device.

 1. Enter the setting menu, Touch the Bluetooth to open the function, idle screen will display BT icon in the status bar.
- 2. Open the BT discoverable, and other devices can search the
- 2. Open the BY discoverable, and other devices can scale the phone.
 3. Before using the phone as a Bluetooth device, you need to pair the phone with the target device as follows:

 -Sure your phone has Bluetooth-enabled.

 -Touch "Scan for devices." Bluetooth devices within the range of

- the phone will start scanning.

 -Touch the device you want to pair, to confirm password to complete the pairing
- You can use Bluetooth to share the pictures, videos or music files with family and friends

Open the MScan app, the device to barcode, touch and hold the scan key make the aiming beams converged on the barcode. decoding result will display the touch screen.



Technical Specifications

Technical Specifications
Weight: 265.5g (Including battery)
Dimensions: 143.5*75.5*18.1mm
Band:GSM900MHz/DCS1800MHz/GSM850MHz/PCS1900MHz

Band:GSM900MHz/DCS1800MHz/GSM850MHz/PCS1900MHz
WCDMA850/1900MHz
Battery Type: Li-polymer
Battery Voltage: 4.35V
Battery Capacity: 4000mAH
Talk Time: 6h
Standby Time: about 400h
Battery Time (No prior or separate notice is required for capacity

changes)

Note: Actual operating conditions depend on the local network environment, SIM, and user behavior.

Warning: Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible

to any degree.

Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.

SAR

This device complies with part 15 of the FCC Rules. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION. Operation is subject to the condition that this device does not cause harmful interference.

Interierence.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/ TV technician for help. Health and safety information

Radio Frequency (RF) Energy

This model device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the poser required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model device as reported to the FCC when tested for use at the ear is 0.385 W/kg and when worn on the body, as described in this user guide, is 1.11 W/kg (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements).

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement

government requirement. The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on

FCC ID: 2AFBBM80

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 10 mm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 10 mm from your body when the device is switched on.

Your mobile phone is rated: «For Hearing Aid», to assist hearing device users in finding mobile phones that may be compatible with their hearing devices. This device is HAC M3/T3 compatible, Reference ANSI C63.19-2011 For more information please visit our website http:// www.mobi-lead.com This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not

been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.